


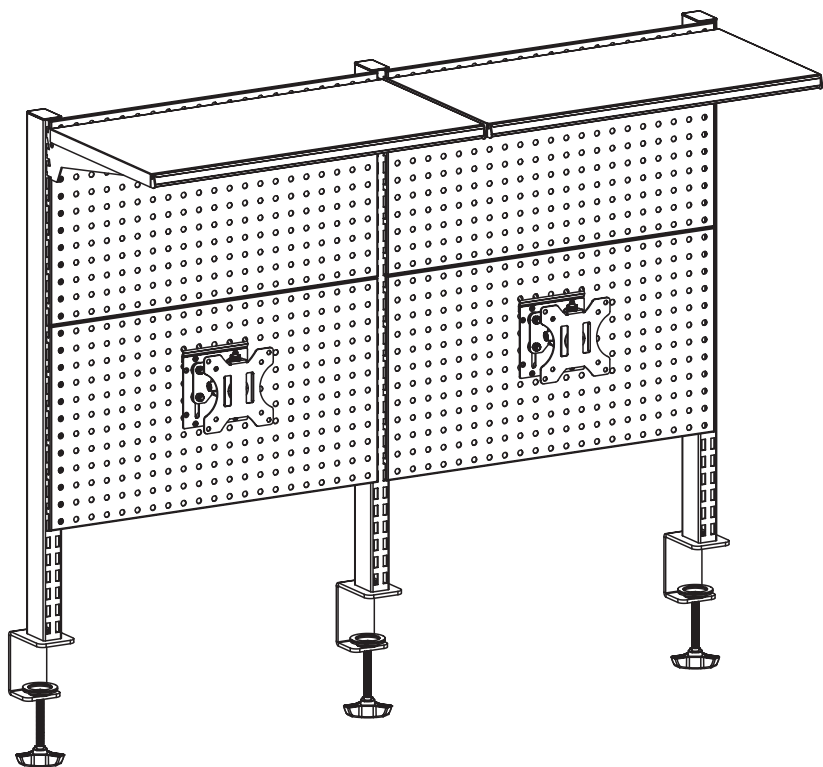

Clamp-on Pegboard with Monitor Mounts & Shelf

PP-DK48SB
Assembly Manual



Better Products for a Better Workspace Experience

We are dedicated to creating high-end ergonomic solutions
for the office with top of the industry support.

Explore Endless Workspace Solutions

www.vivo-us.com



WARNING



If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Failure to report missing parts within 30 days may result in denial of free replacement. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



DO NOT EXCEED WEIGHT CAPACITY

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.

Need Help? We're Here For You

US-Based Customer Support from Trained Professionals

Monday-Friday from 7am-7pm CST

Saturday 8am-4pm CST



Email Us

help@vivo-us.com



Chat with Live Agent

www.vivo-us.com



Give Us a Call


309-278-5303 ext. 1



Assembly Video & Product Info

www.vivo-us.com/products/pp-dk48sb


Package Contents




A (x3)
Clamp



B (x3)
Vertical Support

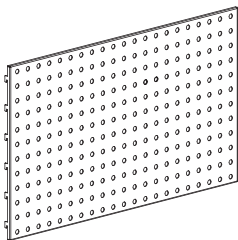


C (x4)
Pegboard

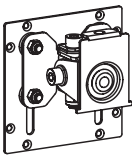


D (x2)
VESA Bracket



E (x2)
VESA Plate

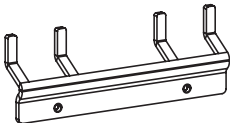


F (x2)
VESA Hook



G (x1)
Spacer Guide



H (x2)
Shelf



I (x4)
Shelf Support



J (x2)
Magnet

Included Hardware & Tools




S-A (x6)
M6x16mm
Screw




S-B (x2)
Thumbscrew




S-C (x8)
M4x6mm
Screw




M-A (x8)
M4x12mm
Screw



M-B (x8)
M4x16mm
Screw



M-C (x8)
M5x12mm
Screw



M-D (x8)
M5x16mm
Screw



M-E (x8)
M5 Washer



M-F (x8)
Spacer



T-A (x1)
4mm Allen
Wrench



T-B (x2)
6mm Allen
Wrench



T-C (x2)
Wrench

Tools Needed:



**Phillips
Screwdriver**


Weight Capacity:



Assembly Steps


STEP 1

Fully loosen the Clamp Bolt (**A1**) on each Clamp (**A**).

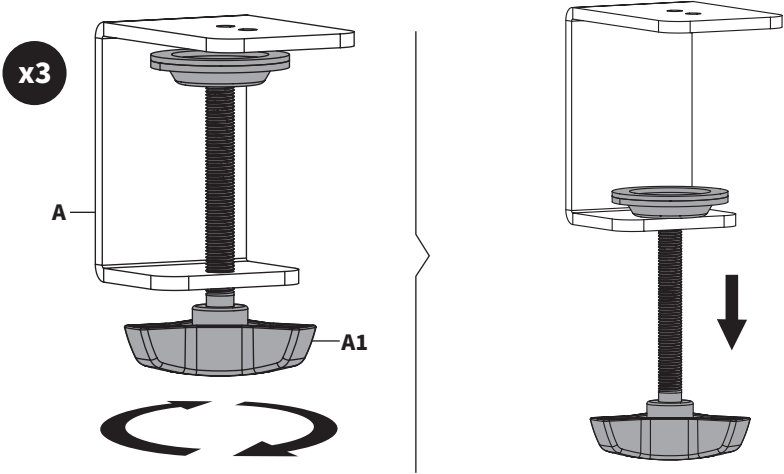

STEP 2

Attach each Clamp (**A**) to Vertical Supports (**B**) using M6x16mm Screws (**S-A**) and 4mm Allen Wrench (**T-A**).

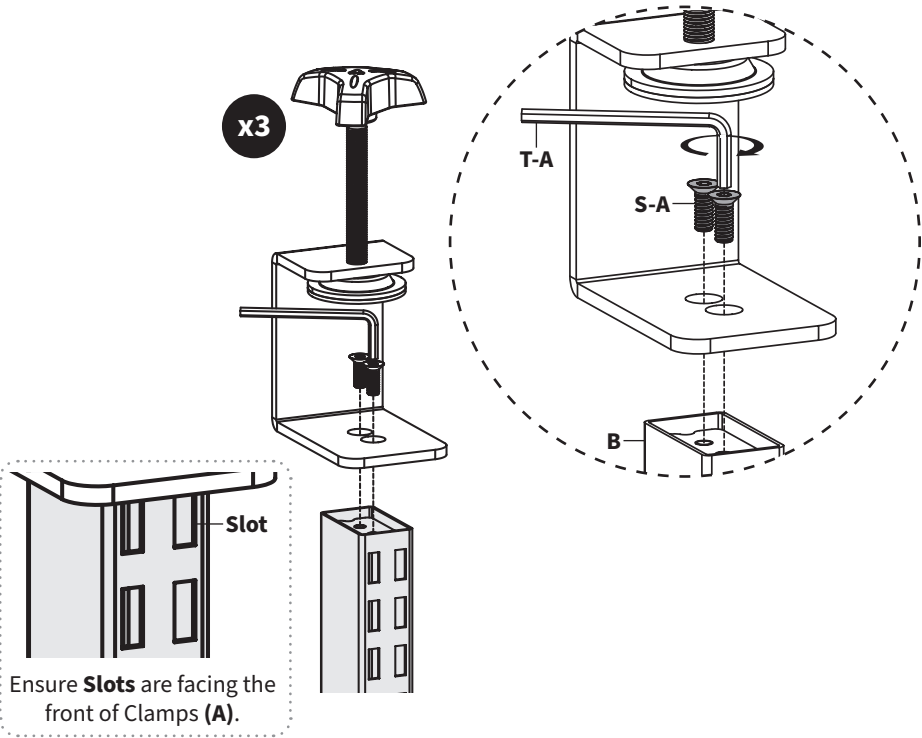


STEP 3


3.1 Clamp one Vertical Support (**B**) on edge of the desktop where you want the end of the pegboards to be.

3.2 Place the Spacing Guide (**G**) against the Clamp (**A**) as shown.

3.3 Place another Vertical Support (**B**) against the Spacing Guide (**G**) and secure by tightening the Clamp Bolt (**A1**).

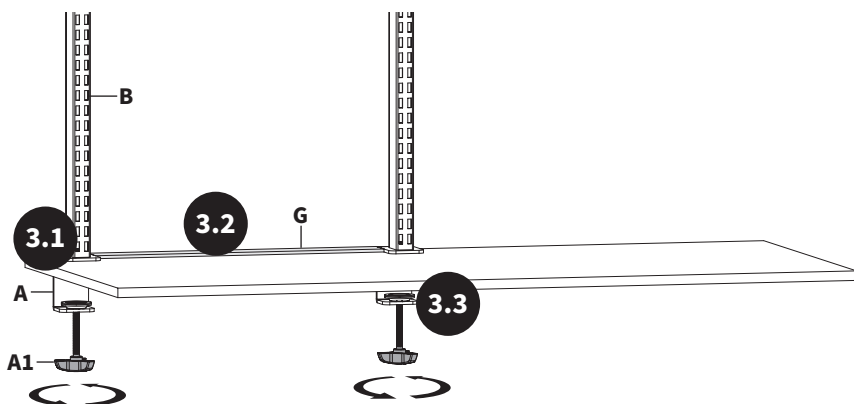

Repeat Steps 3.2 and 3.3 for the final Vertical Support.


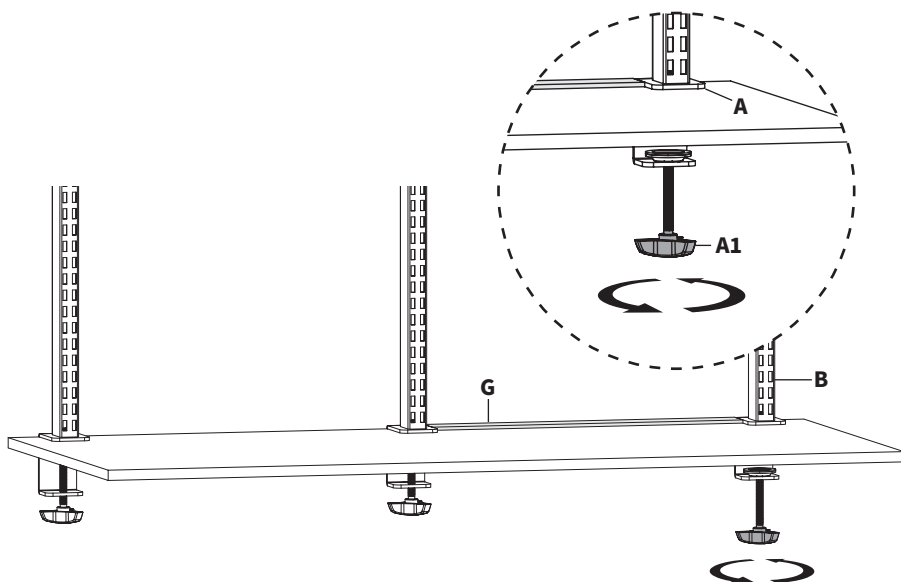


STEP 4

Attach Pegboards (**C**) to the Vertical Supports (**B**) at the desired heights starting with the bottom panels. Secure by inserting the **Hooks** on Pegboards into the **Slots** on Vertical Supports and sliding down.





Ensure the **Hooks** are secured in the **Outer Slots** as shown.

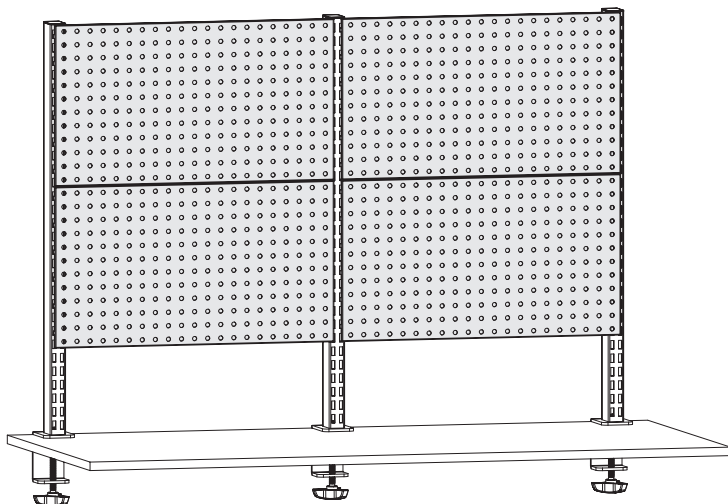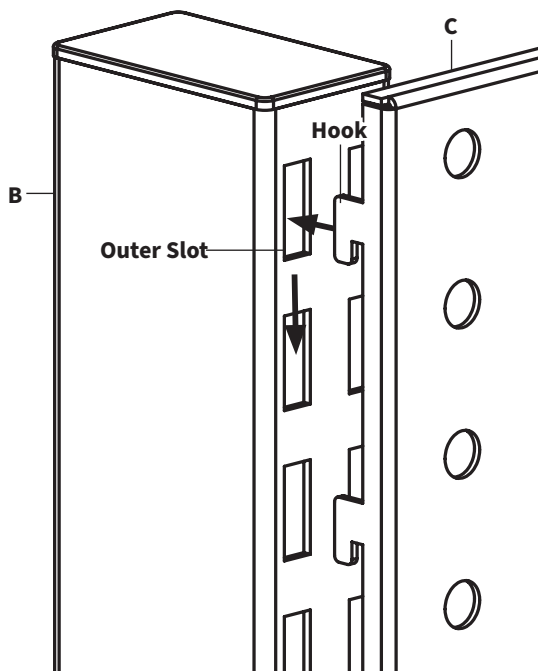


STEP 5

Attach VESA Hook (**F**) to VESA Bracket (**D**) using M4x6mm Screws (**S-C**) and a Phillips screwdriver.

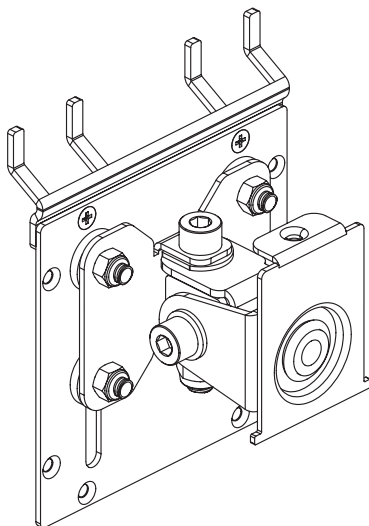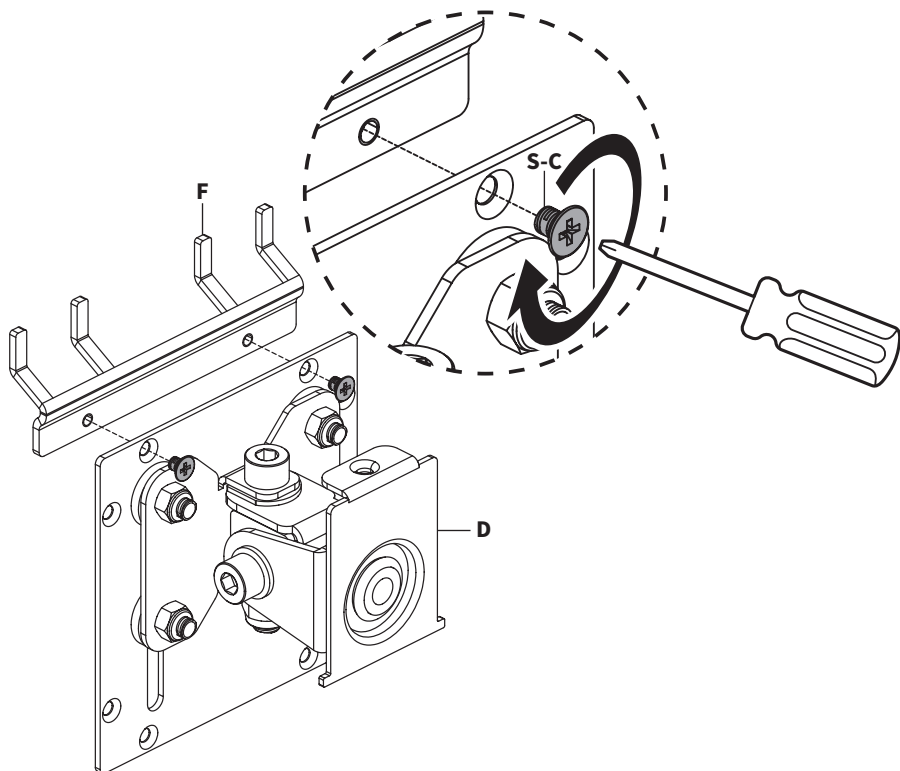





STEP 6

Attach Magnet (**J**) to VESA Bracket (**D**) using M4x6mm Screws (**S-C**) and a Phillips screwdriver.

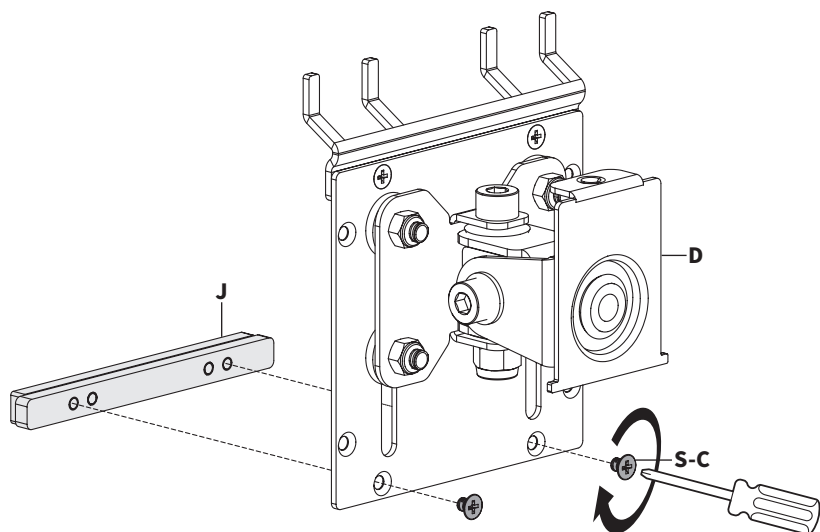


STEP 7

Attach VESA Plates (**E**) to your monitors using appropriate Screws (**M-A~M-D**) and Washers (**M-E**). Spacers (**M-F**) can be used if needed. Tighten using a Phillips screwdriver.

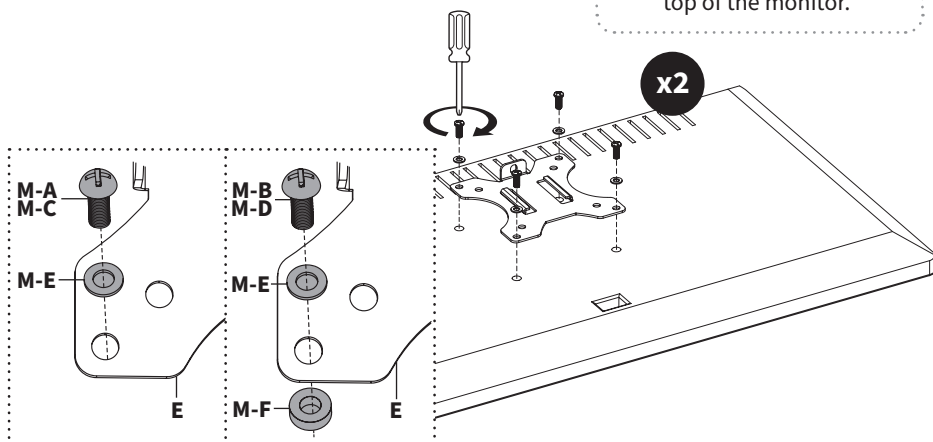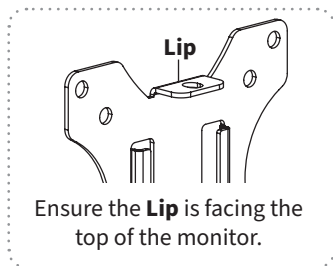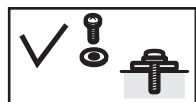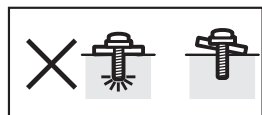

STEP 8



Insert VESA Brackets (**D**) into desired locations on Pegboards (**C**) as shown.

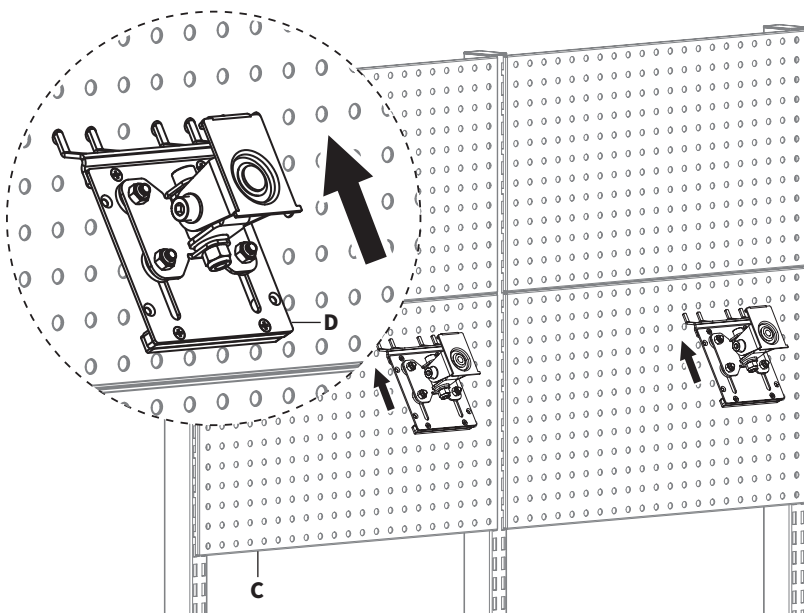

** WARNING **


Ensure VESA Brackets are secured firmly in place before proceeding.

Slide monitors onto the VESA Brackets (**D**) and secure using Thumbscrews (**S-B**).

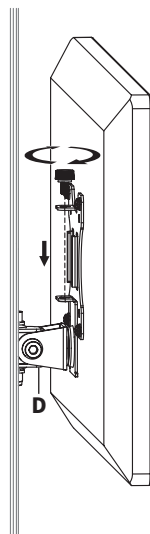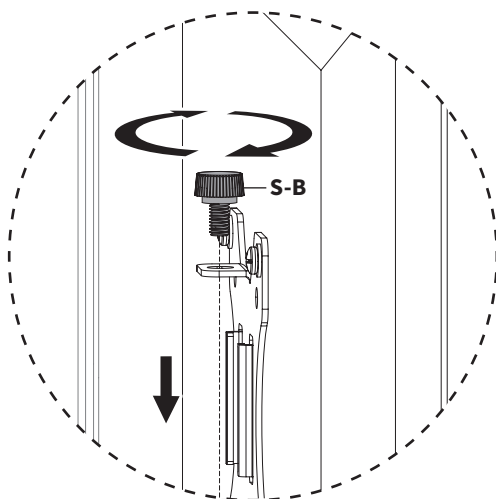


STEP 9

Insert Shelf Supports **(I)** into Vertical Supports **(B)** at the desired heights for shelves.

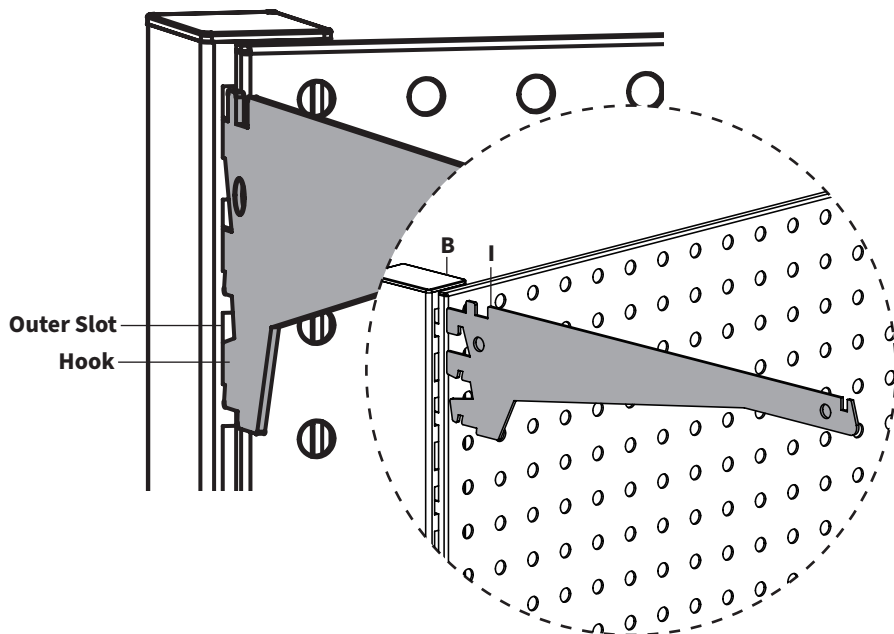

Ensure the same **Slots** are used for each pair of Shelf Brackets.

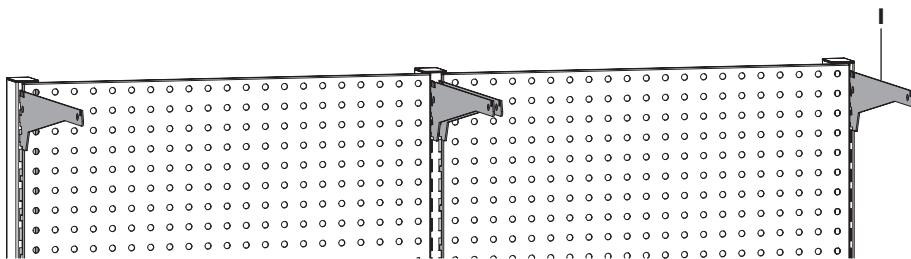


** WARNING **


Ensure all Shelf Supports **(I)** are firmly latched in place before proceeding.

STEP 10

Place the Shelves (**H**) onto the Shelf Supports (**I**) as shown.


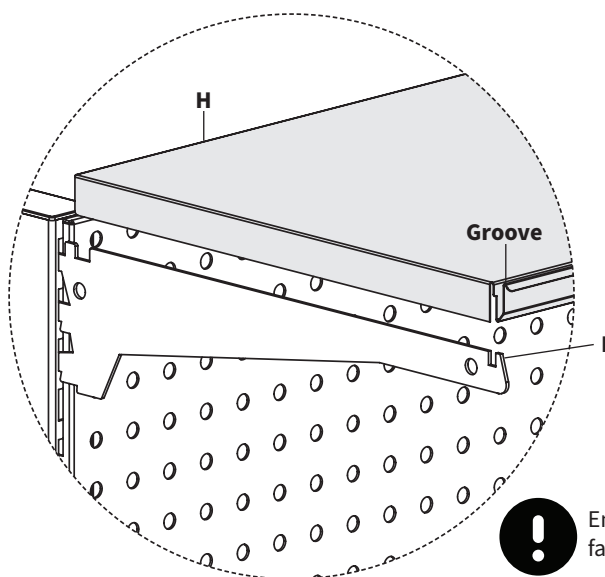


! Ensure the **Grooves** are facing the front as shown.


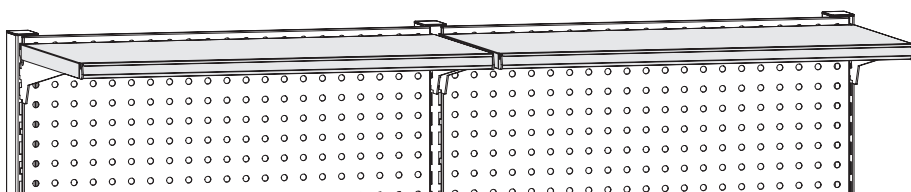


STEP 11


Turn the **Adjustment Screw** on VESA Bracket (**D**) using 6mm Allen Wrench (**T-B**) to adjust the vertical tilt.

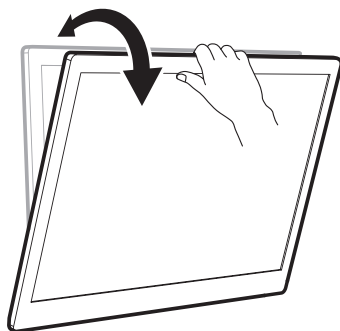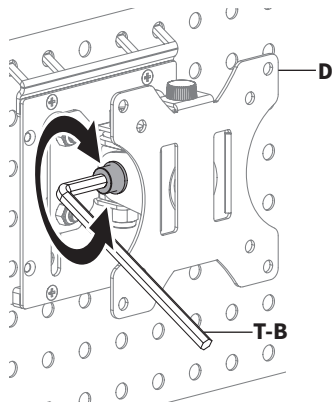

To move the monitor up or down, loosen the nuts on the back of the VESA Bracket (**D**) using Wrench (**T-C**), position the monitor where desired, then retighten the nuts.

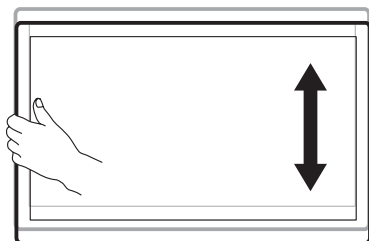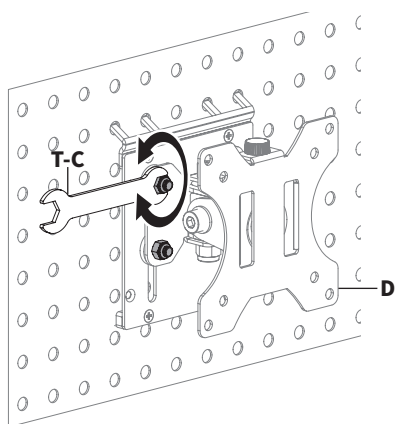

Rotate as desired.

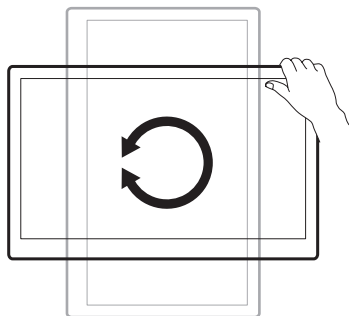

V·I·V·



Love Your New Setup?
Tag Us on Social!



@ VIVO-us



@ vivo_us



@VIVOus



VIVO



Need Help? **We're Here For You**

Monday-Friday from 7am-7pm CST
Saturday 8am-4pm CST



Email Us
help@vivo-us.com



Chat with Live Agent
www.vivo-us.com



Give Us a Call
309-278-5303 ext. 1



VIVO-us



@vivo_us



@VIVOus



VIVO