




TOOLS REQUIRED



Phillips screwdriver
(Not included)

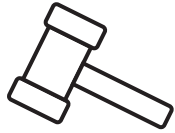

Hammer
(Not included)



Drill
(Not included)



Protective blanket
(Not included)



ATTENTION


Keep children and pets away while assembling.




How to use cam locks

CAM LOCK FASTENING SYSTEM


This Cam Lock Fastening System will be used throughout the assembly process.

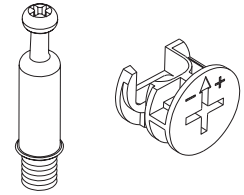


1

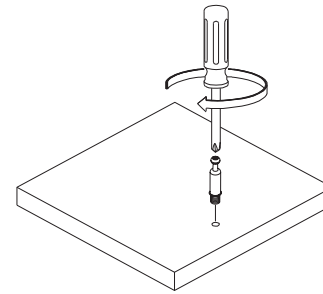



2

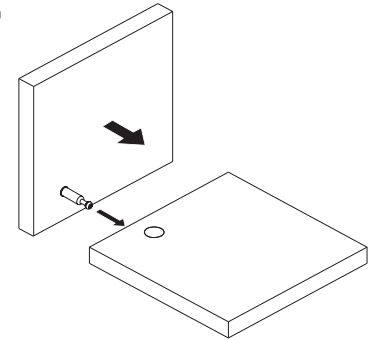


3

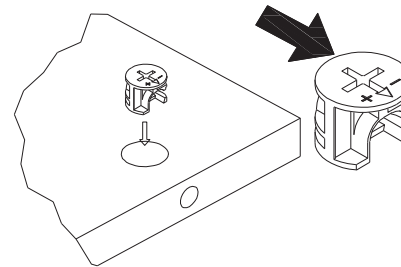

4

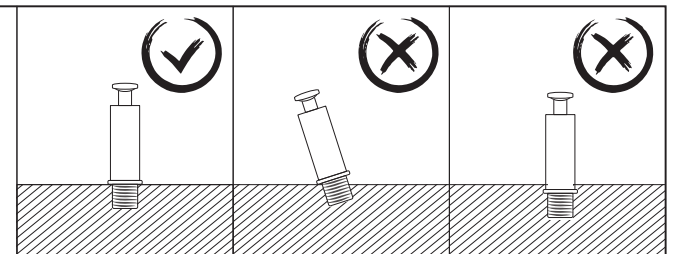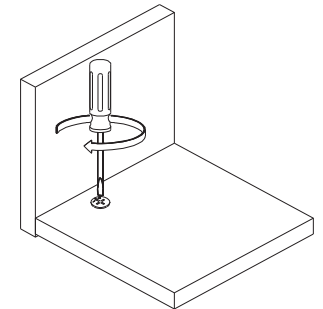

PRODUCT ASSEMBLY

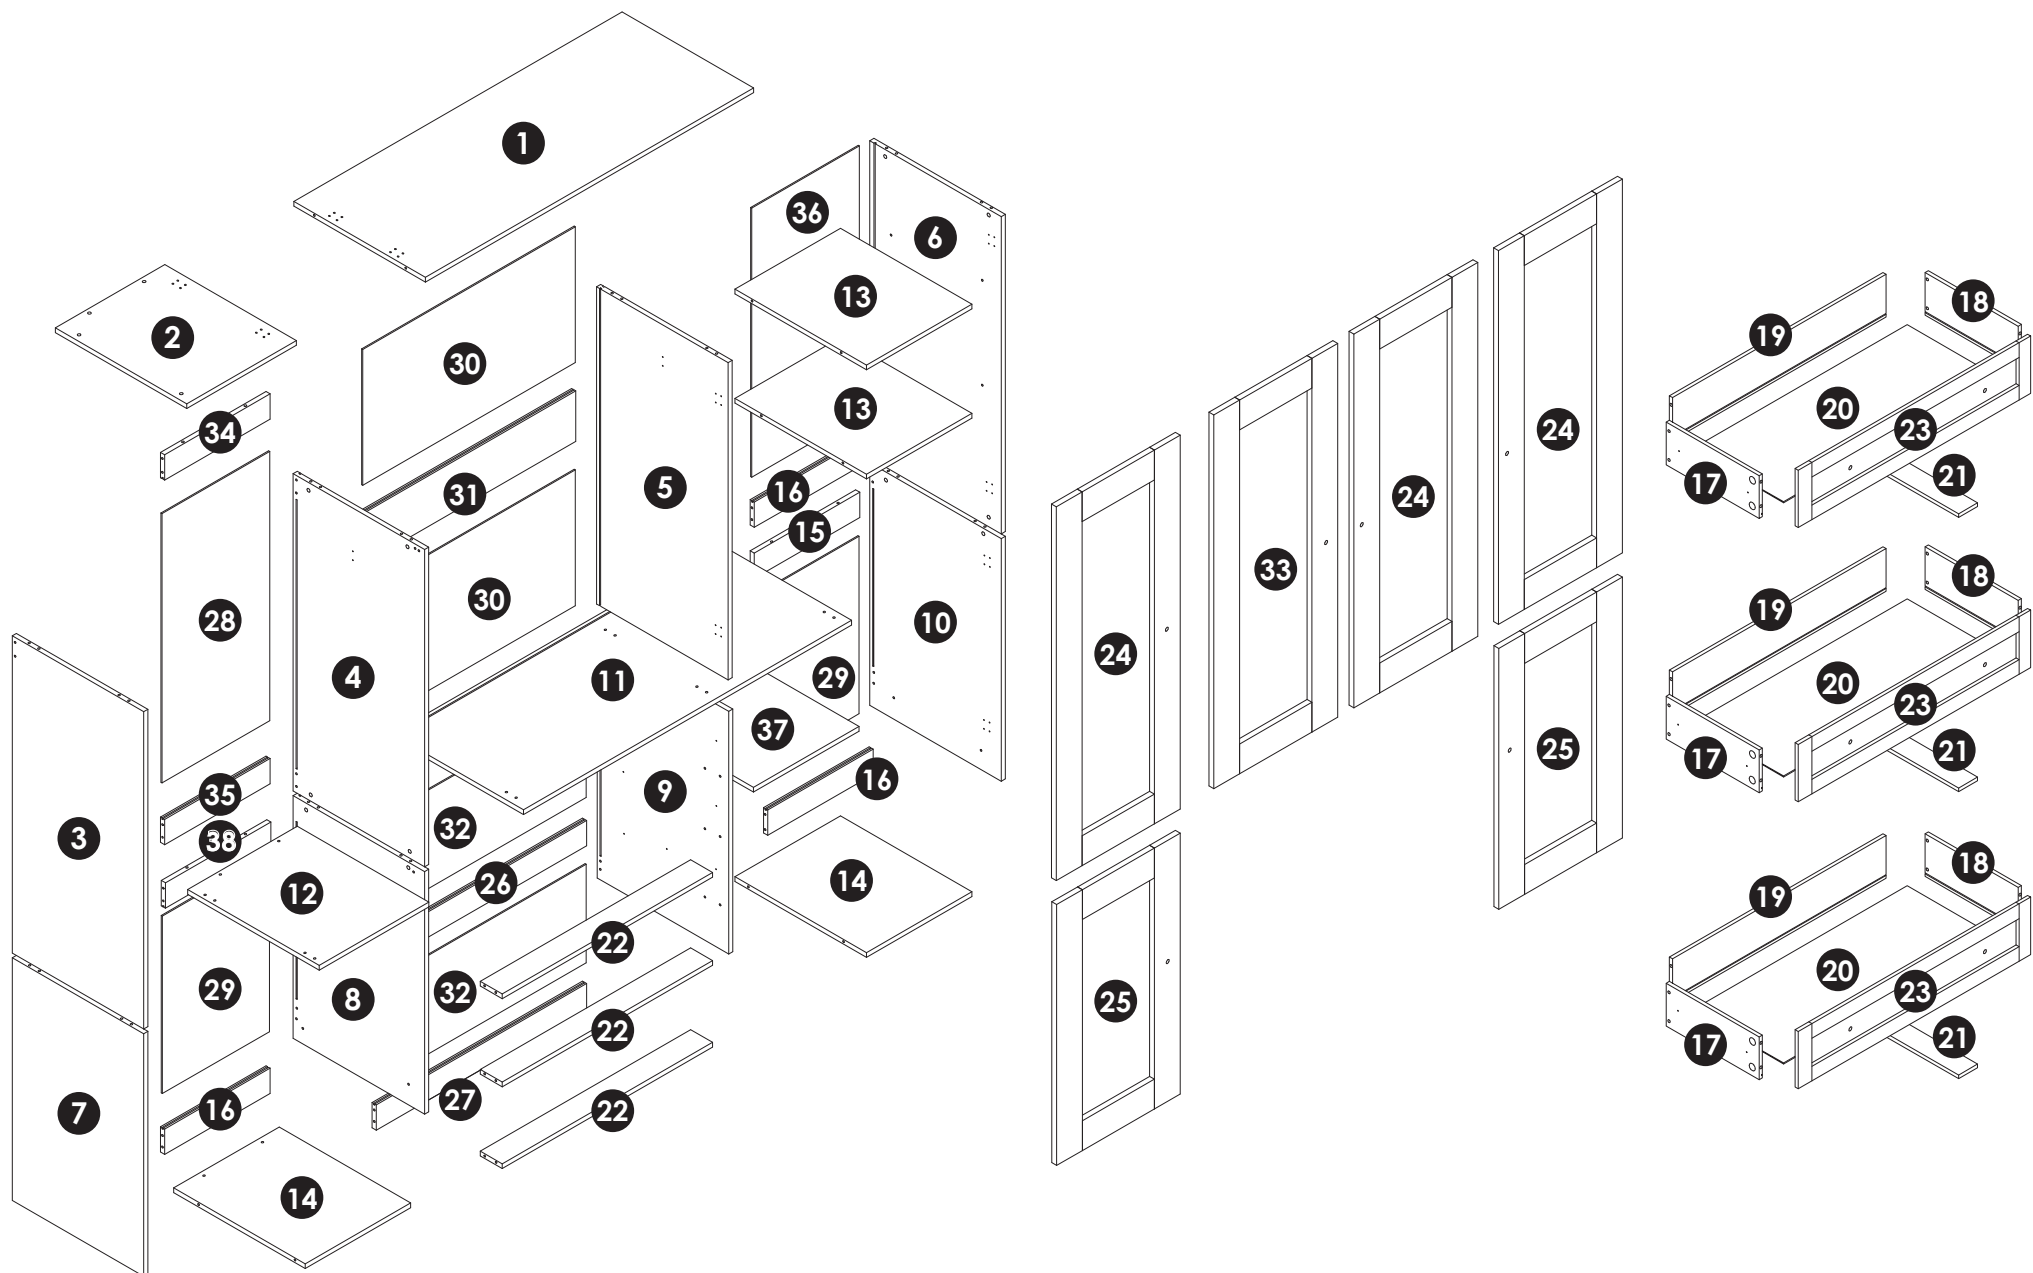

PARTS LIST > A BOX

Unit: (mm)

1 1201*480*15 x1 	2 401*480*15 x1 	7 767*480*15 x1
8 767*480*15 x1 	9 767*480*15 x1 	10 767*480*15 x1
11 1201*480*15 x1 	14 385*480*15 x1 	19 720*120*12 x3
20 728*314*3 x3 	23 764*220*15 x3 	28 385*80*3 x1
29 553*393*3 x2 	30 469*776*3 x2 	32 776*311*3 x2
36 931*393*3 x1 	37 385*438*12 x1 	

PARTS LIST > B BOX

Unit: (mm)

3 1003*480*15 x1 	4 1003*480*15 x1 	5 1003*480*15 x1
6 1003*480*15 x1 	12 401*480*15 x1 	13 385*438*12 x2
15 385*80*15 x1 	16 385*80*15 x3 	17 320*120*12 x3
18 320*120*12 x3 	21 306*60*12 x3 	22 768*80*15 x3
24 999*380*15 x3 	25 700*380*15 x2 	26 768*80*15 x1
27 768*80*15 x1 	31 768*80*15 x1 	33 999*380*15 x1
34 385*80*15 x1 	35 385*80*15 x1 	36 385*80*15 x1




INTRODUCTION

Thank you very much for choosing our wardrobe. Please read the instruction carefully before assembly and keep it for future reference. If you need further assistance on assembly, please contact our customer service through email.

Tips:

1. When installing the product, use a soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.
2. Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.
3. The structure of this product can not meet the requirements of the placement of heavy items and children climbing.

HARDWARES LIST

A x114  M6*40mm	B x114  M15*11mm	C x128  M3.5*14mm	D x2  M8*60mm	E x32  M5*40mm	F x6  12 inches
G x1 	H x1 	J x6  M4*20mm	K x18  M3.5*12mm		
L x24  M8*40mm	M x10 	N x3  	P x2 	Q x66 	R x4 
S x12 	T x6  M4*10mm	V x2     	W x48   M3*16mm		


INSTALLATION INSTRUCTION

01

YOU WILL NEED

A x4

B x4

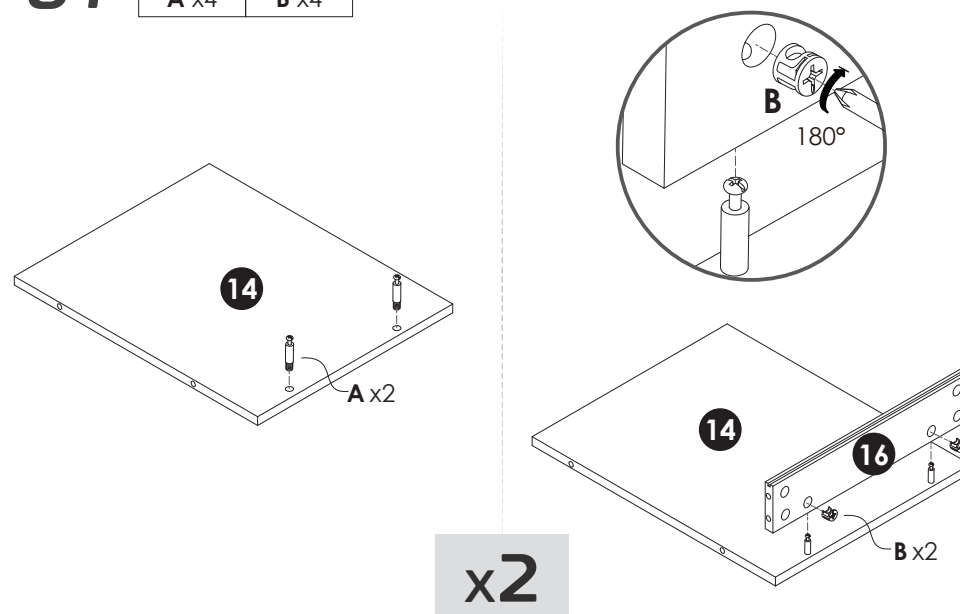


02

YOU WILL NEED

A x8


M x2

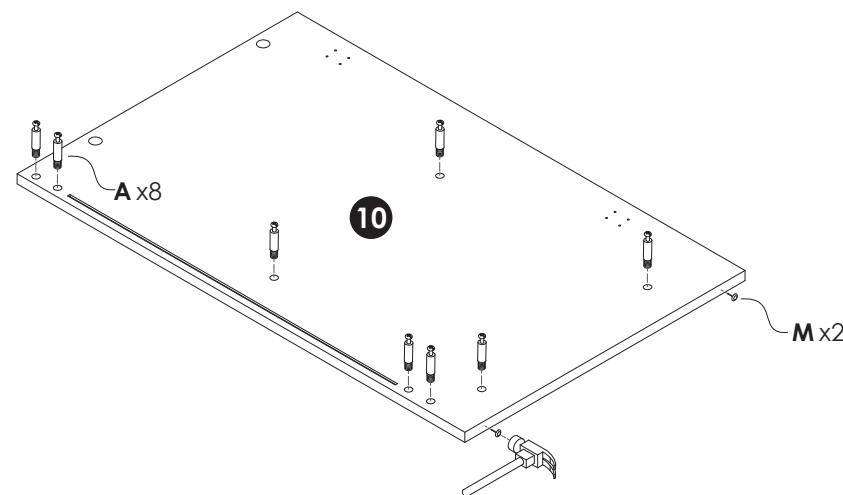


03

YOU WILL NEED


B x8

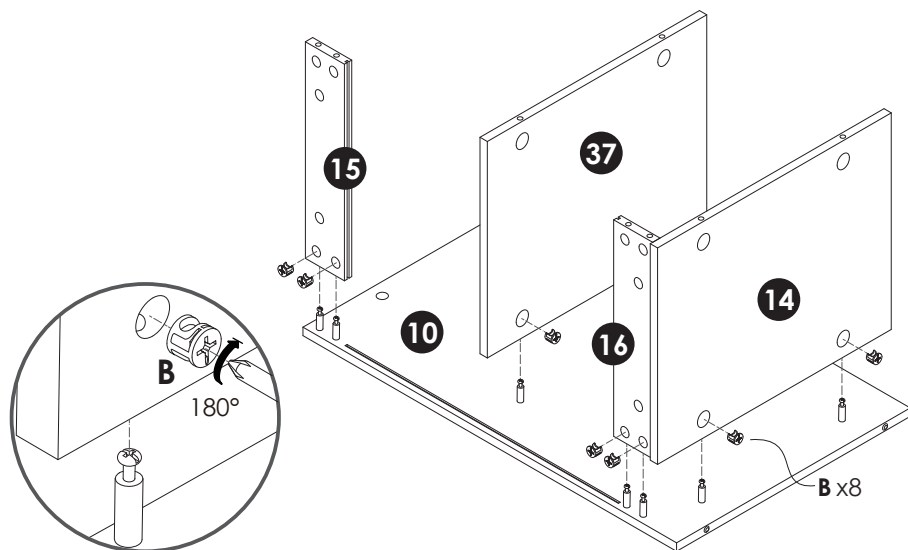

04

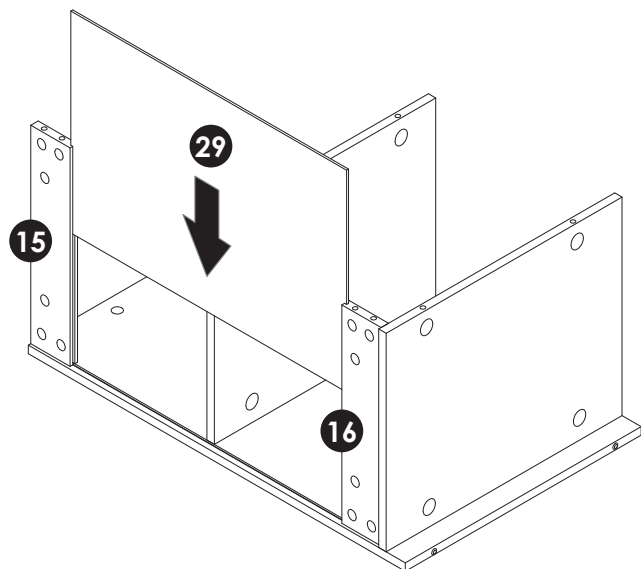

05

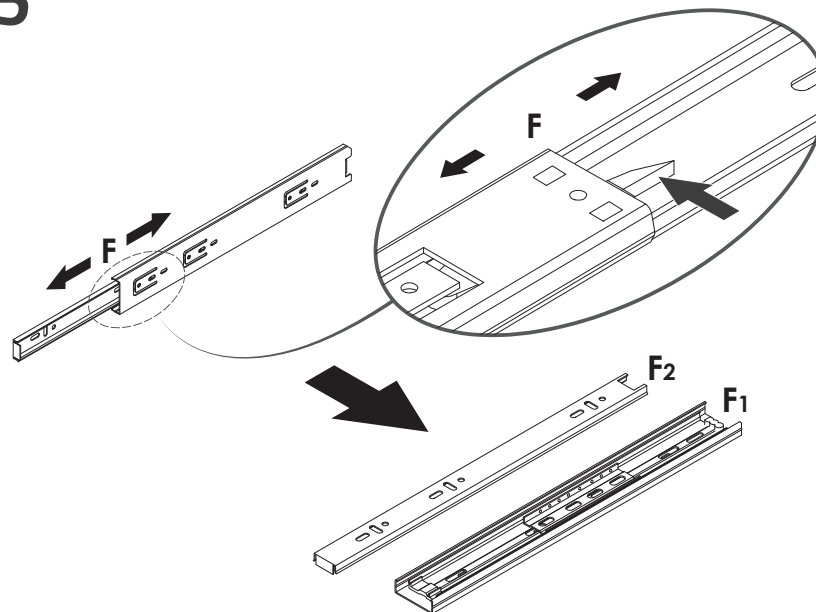

06

YOU WILL NEED


C x9

M x2

F1 x3

F1 Black:


F1 Front:

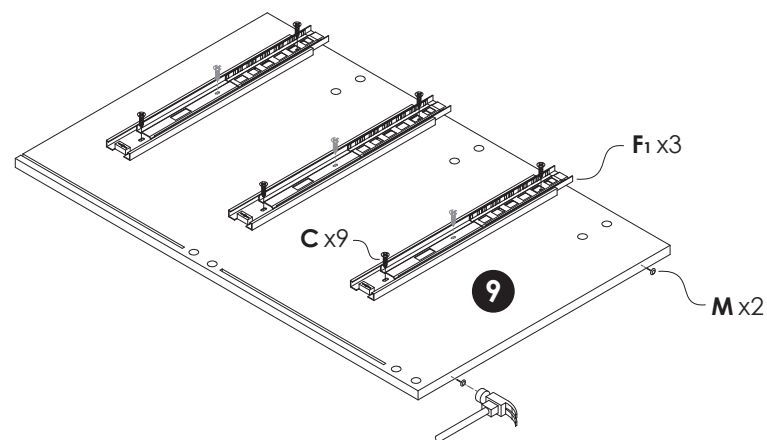

07

YOU WILL NEED



A x18

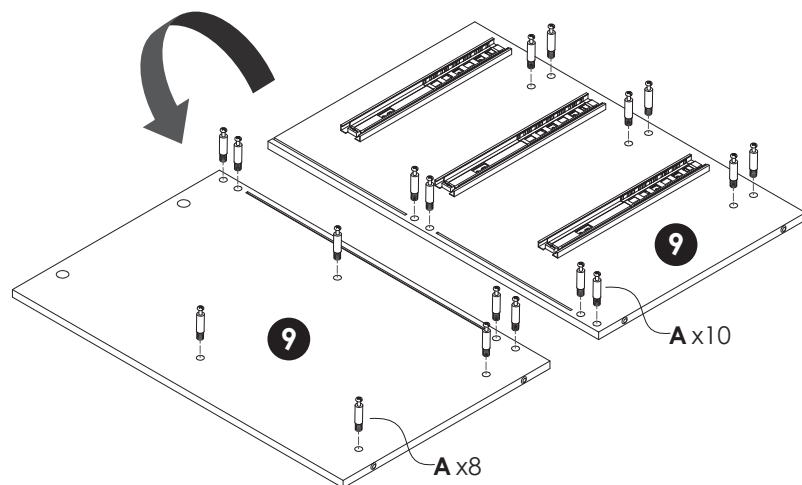

09

YOU WILL NEED



B x10

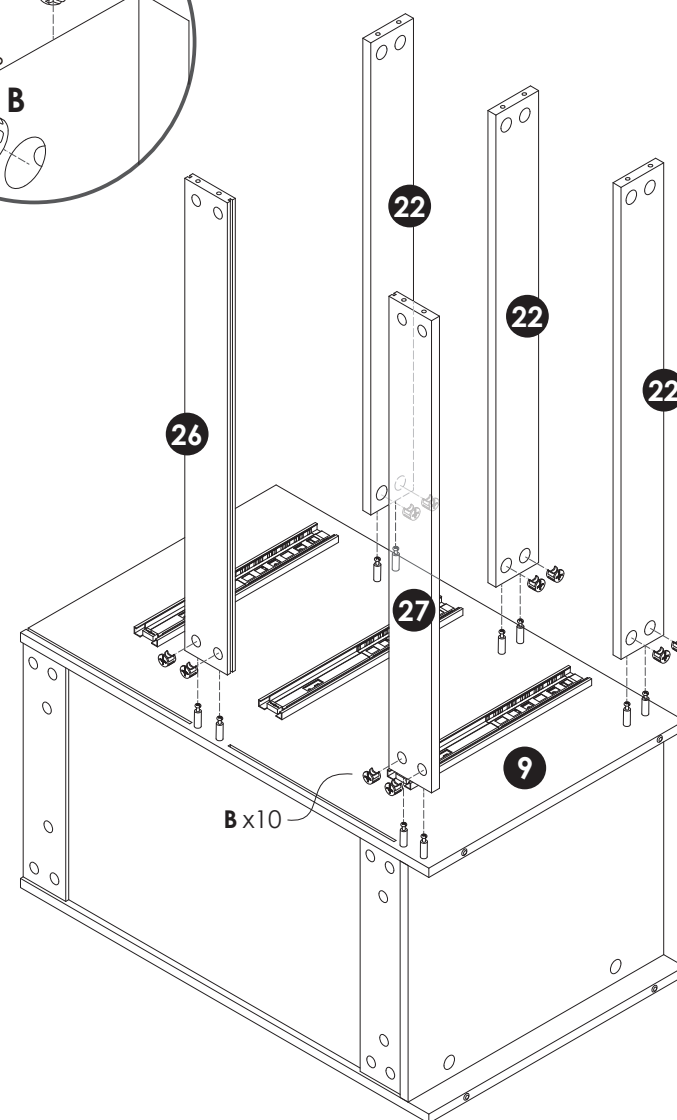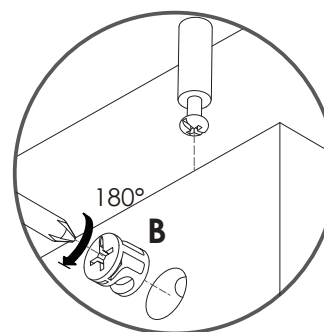


08

YOU WILL NEED

B x8

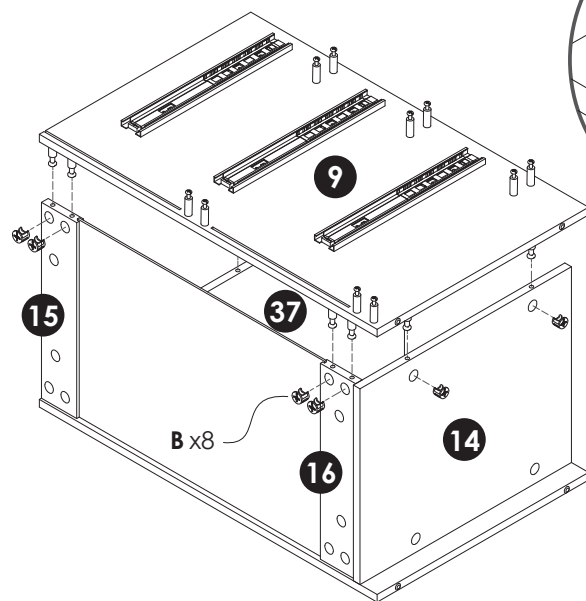
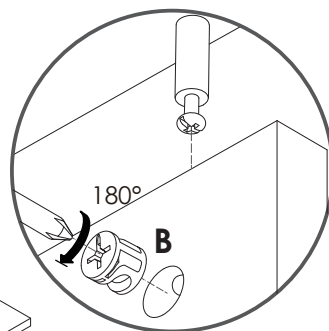


10

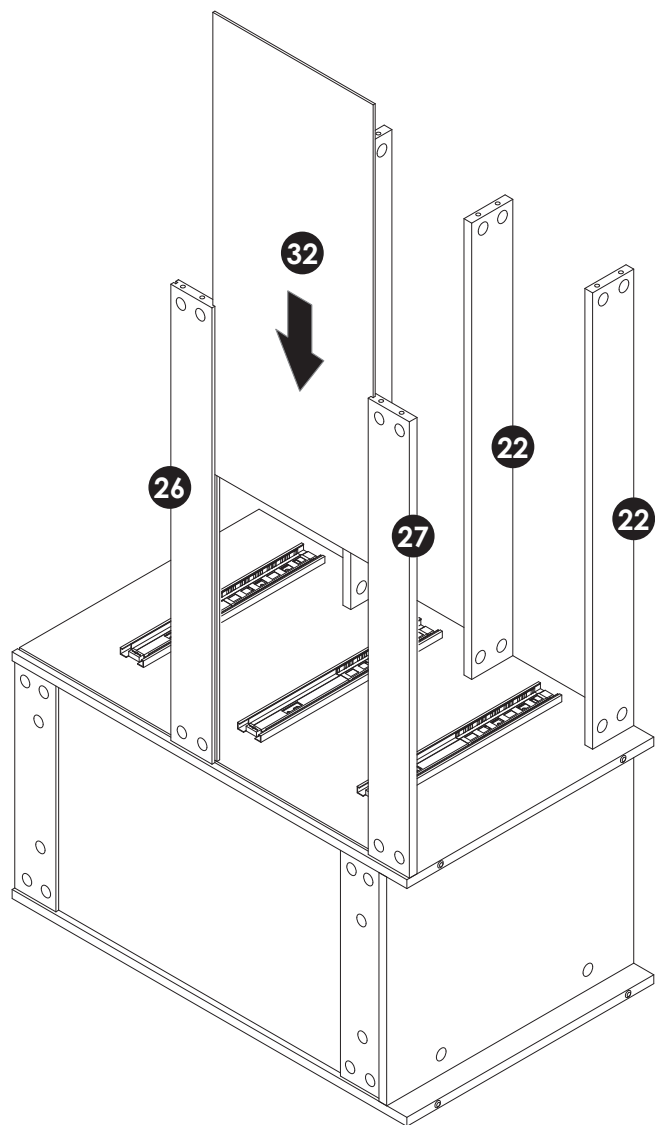


11

YOU WILL NEED		
C x9	M x2	F1 x3

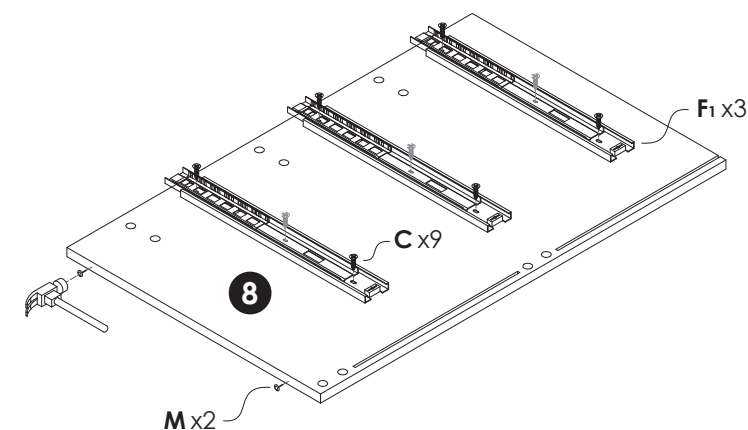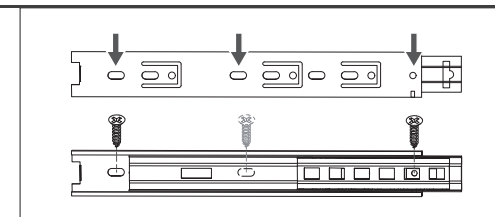

12


YOU WILL NEED	
A x16	

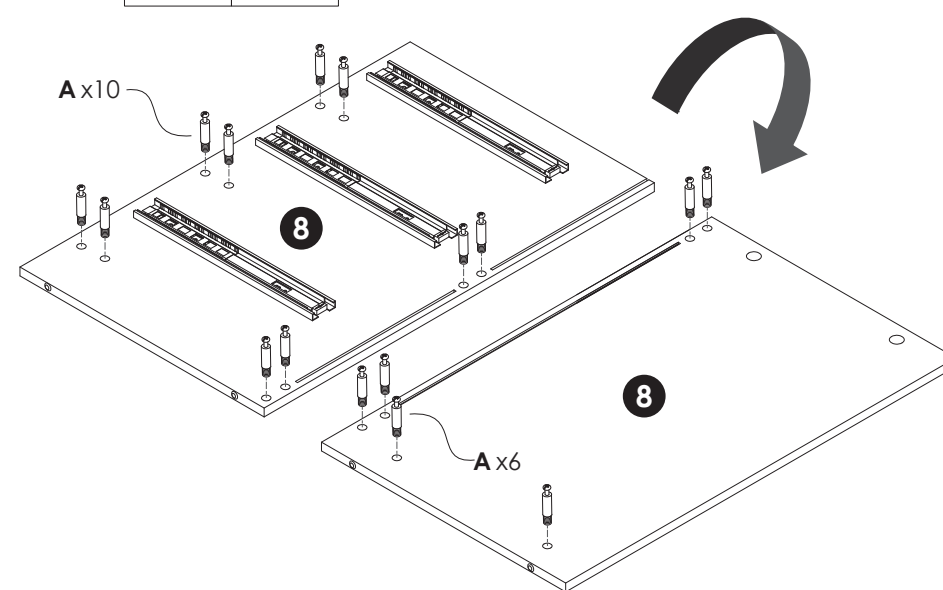

13

YOU WILL NEED


B x10

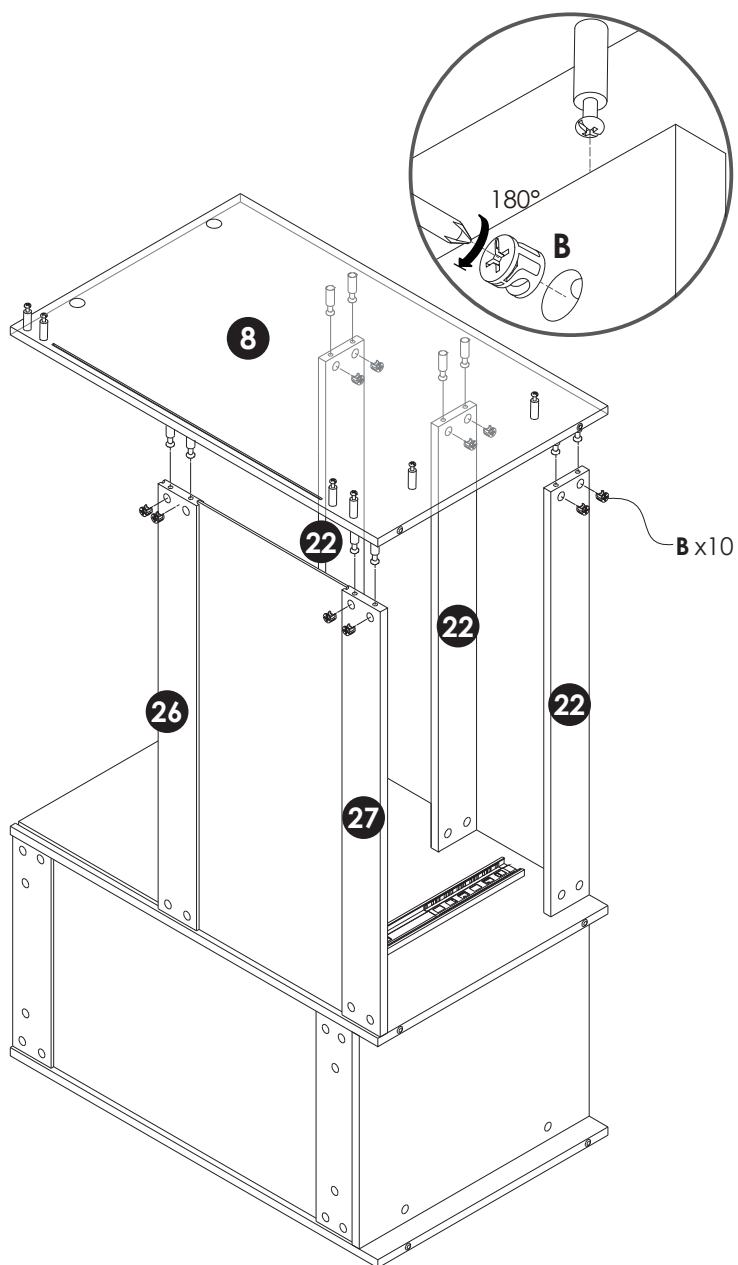

14

YOU WILL NEED

B x6

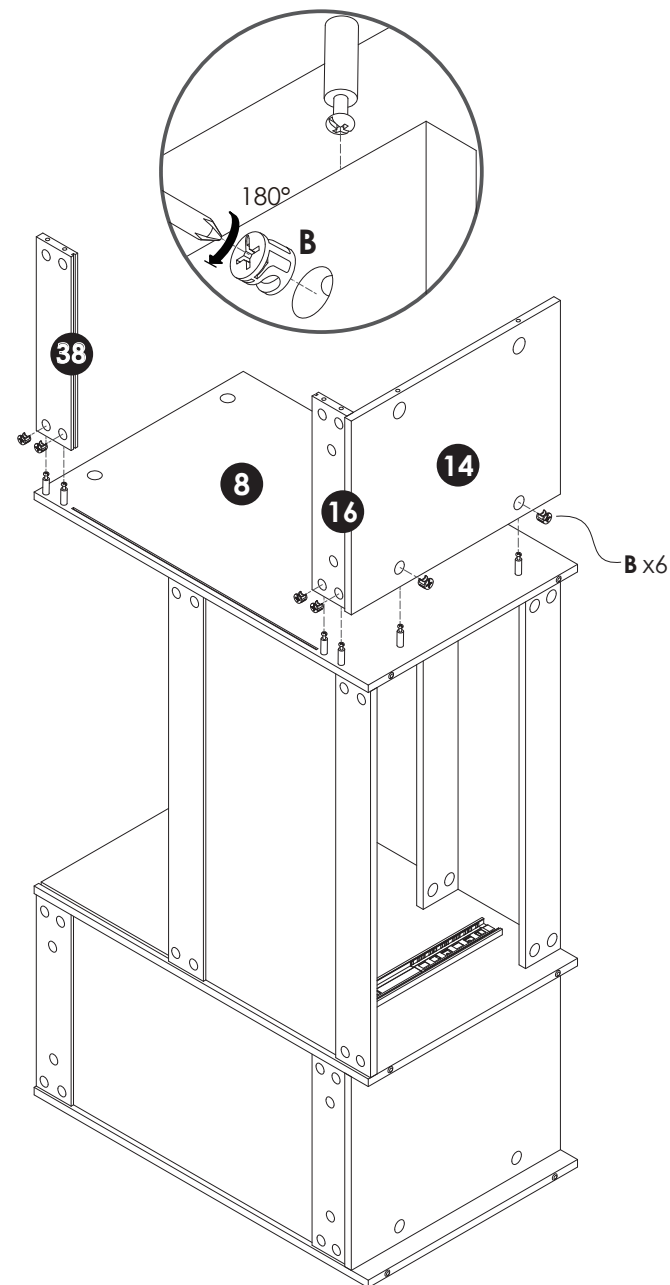


15


YOU WILL NEED

A x6

M x2

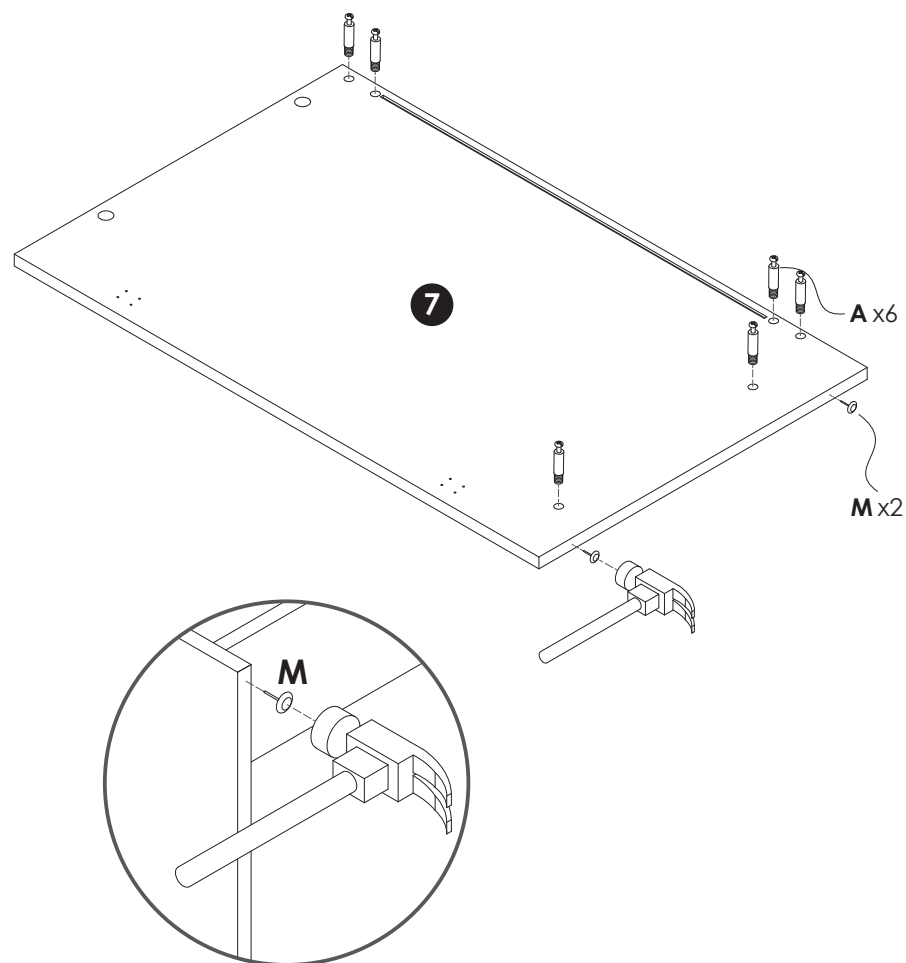


16

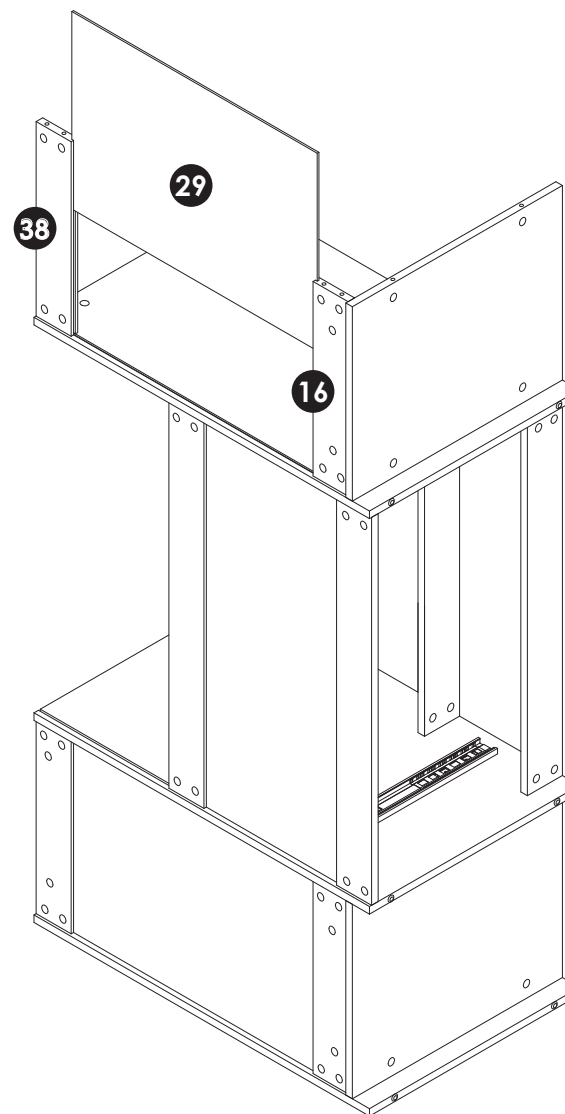

17

YOU WILL NEED


B x6

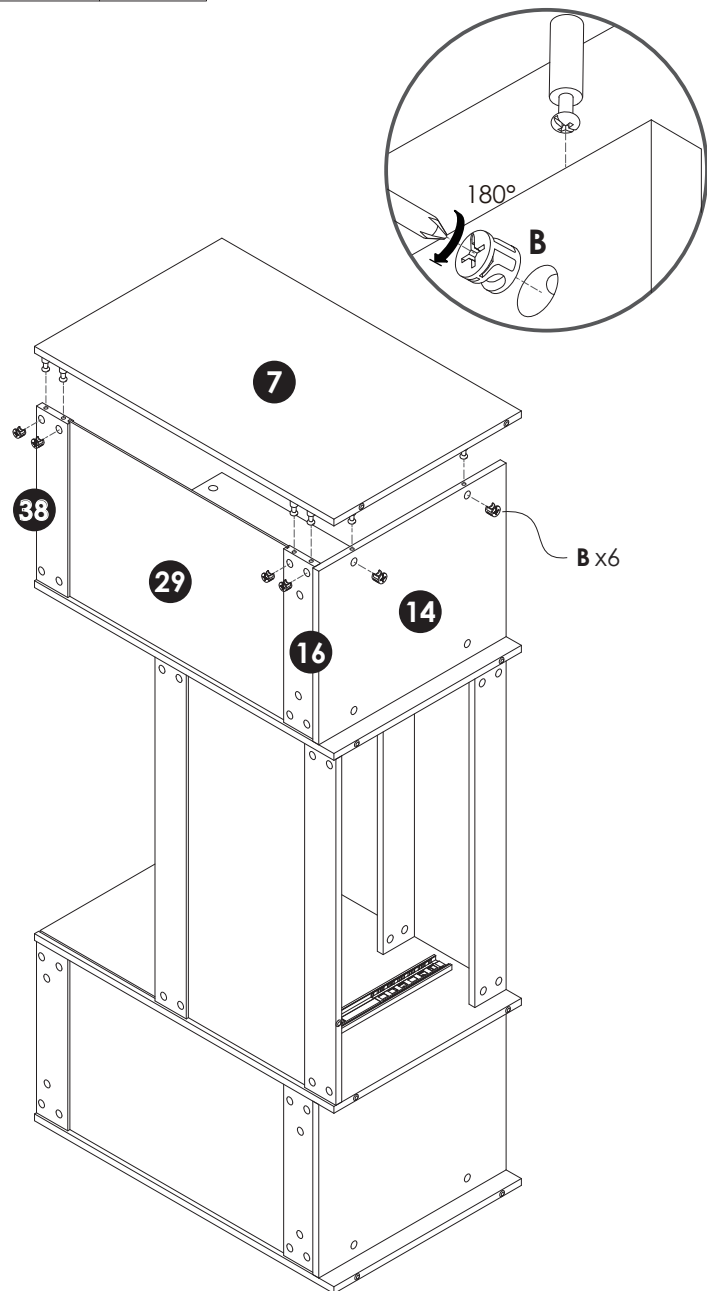

18

YOU WILL NEED

L x6


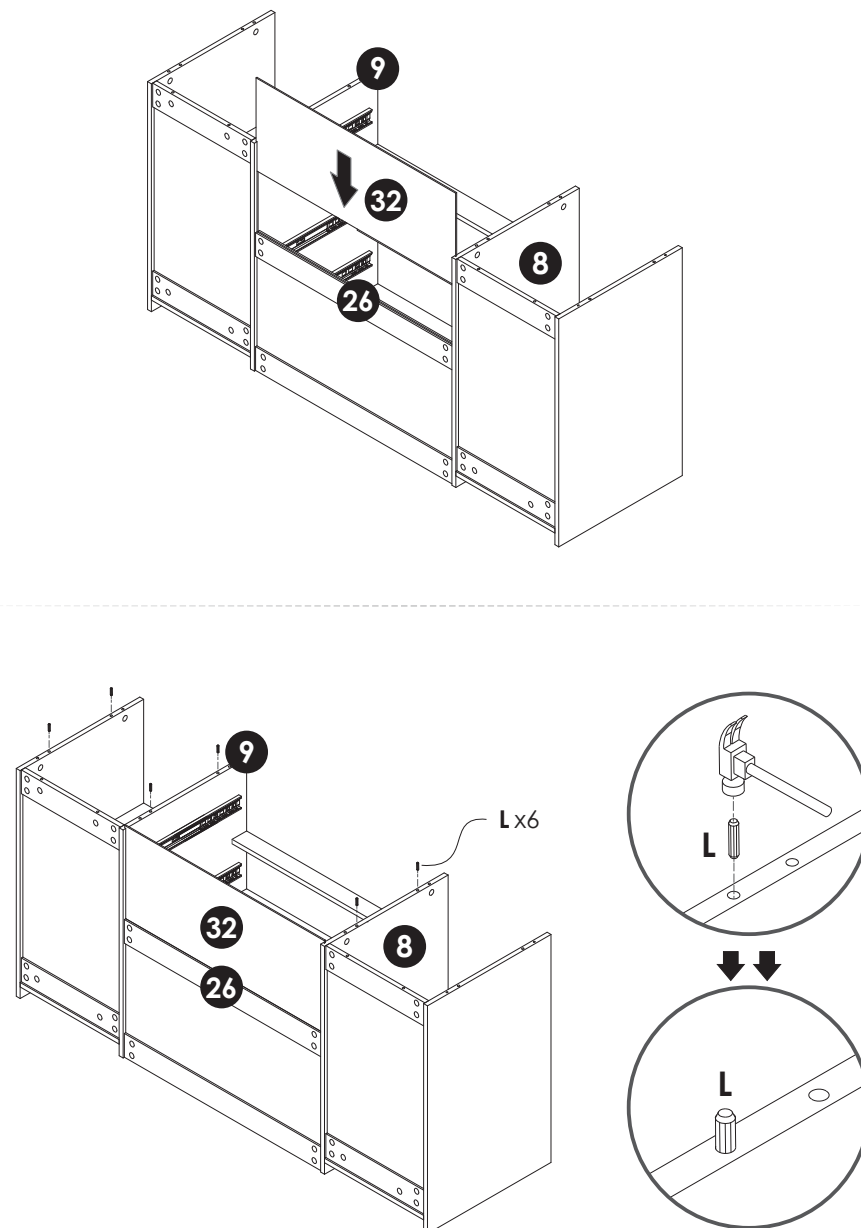


19

YOU WILL NEED

A x10



L x2

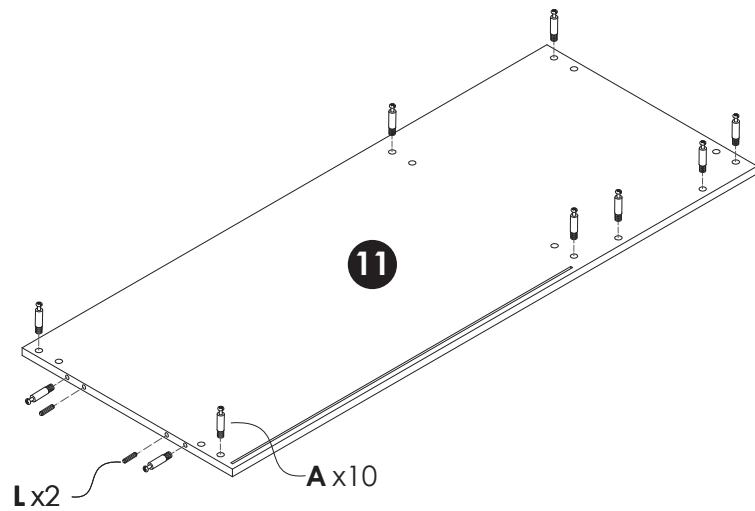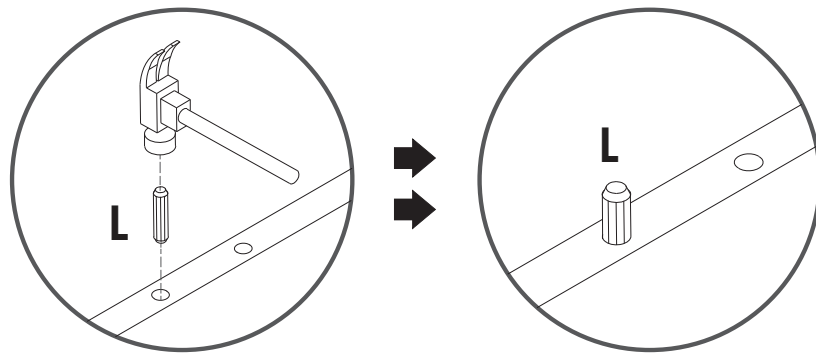

20

YOU WILL NEED



B x8

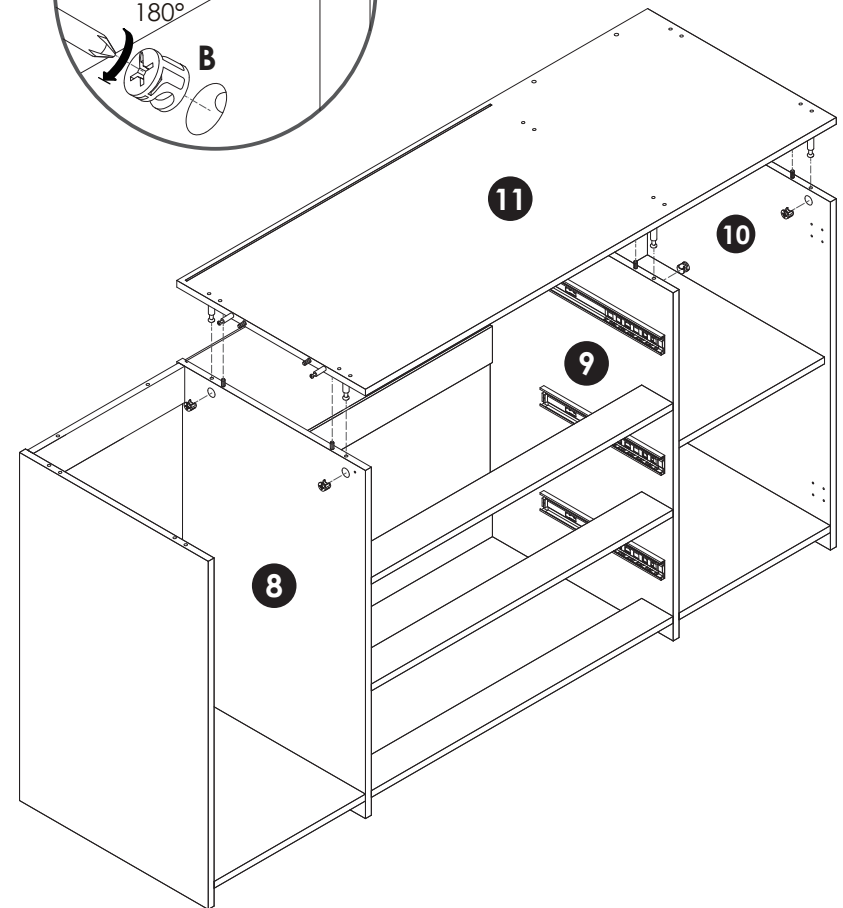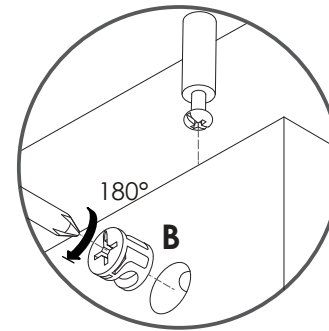

21

YOU WILL NEED


C x2

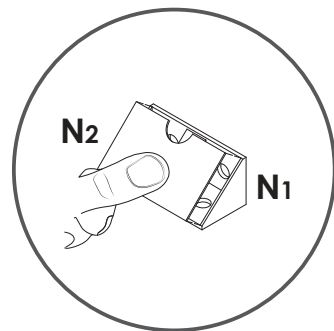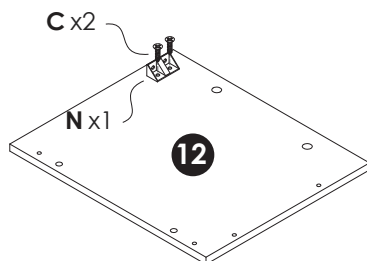N = N₁ + N₂ x1

22

YOU WILL NEED


B x2

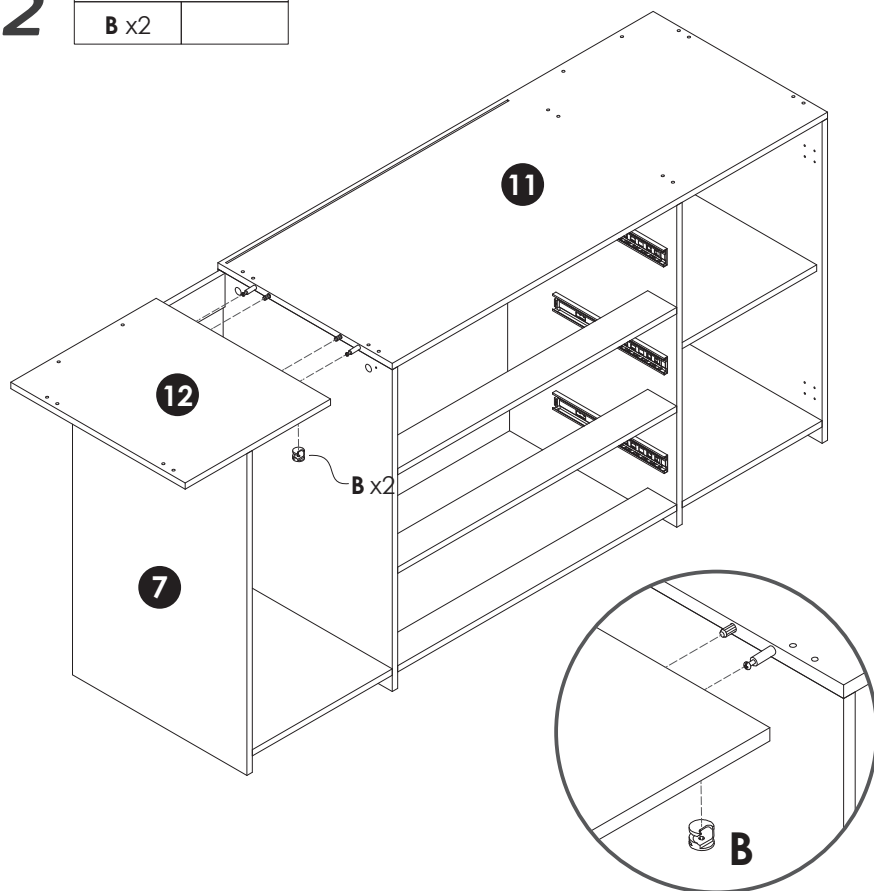

23


YOU WILL NEED

D x2

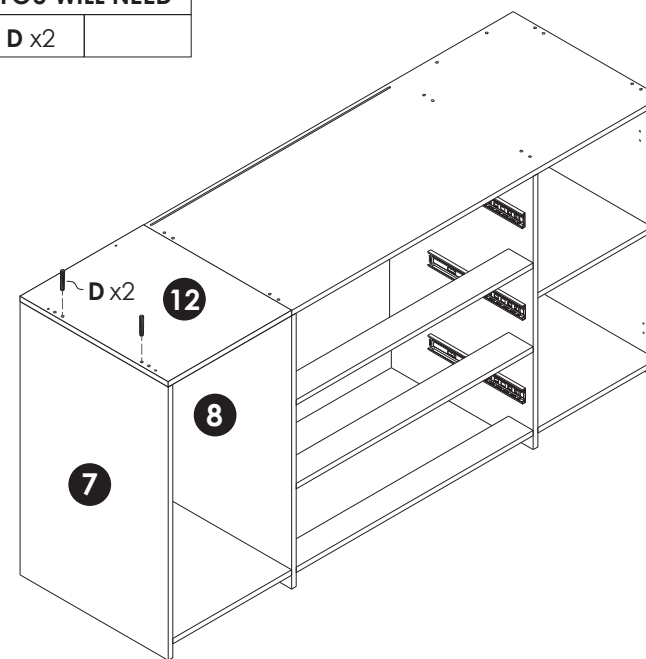

YOU WILL NEED

E x4

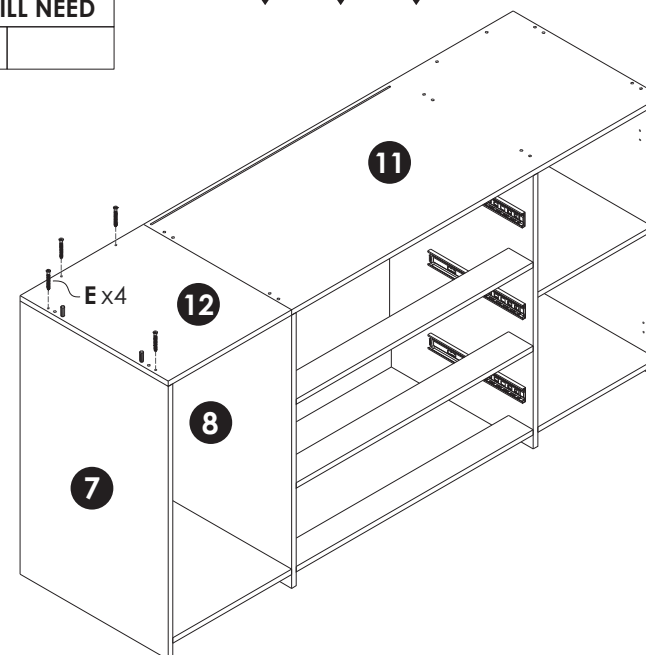


24

YOU WILL NEED

C x2


G x1

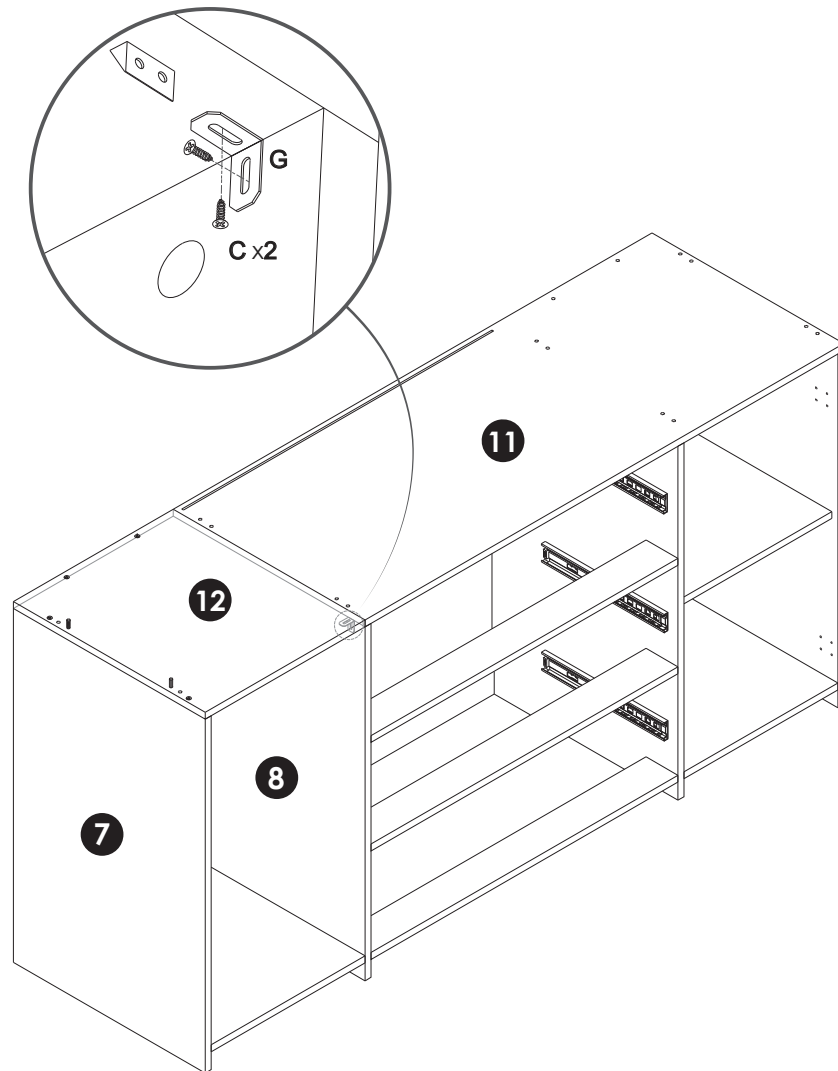

25

YOU WILL NEED


A x12

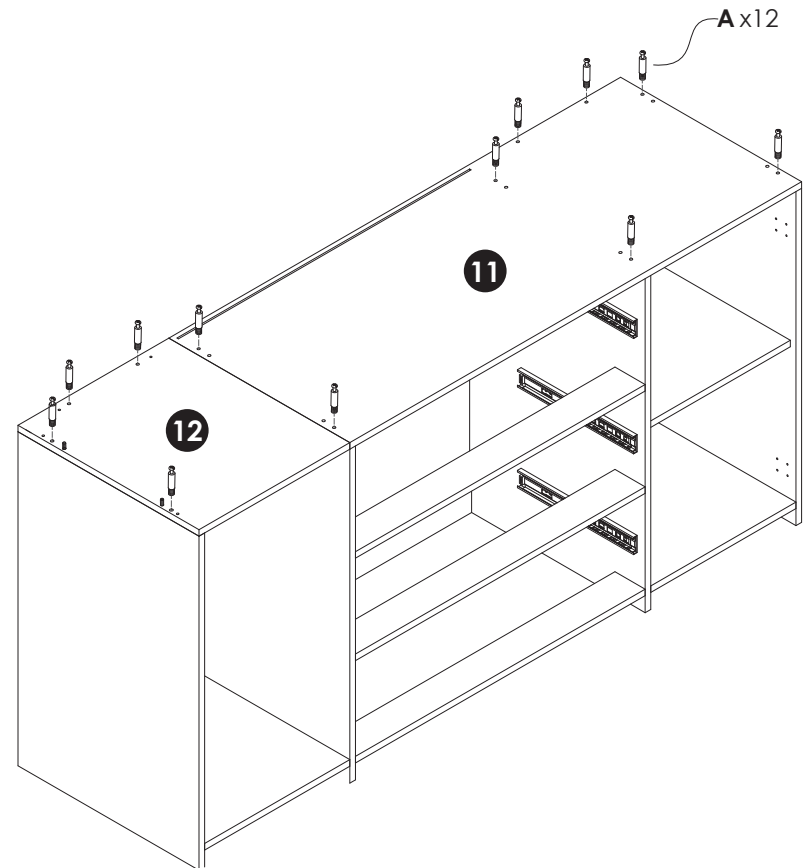

26

YOU WILL NEED


A x6

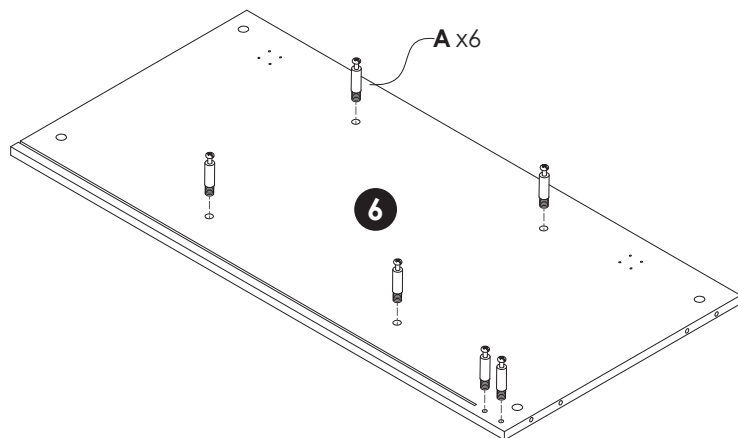

28

YOU WILL NEED


B x4

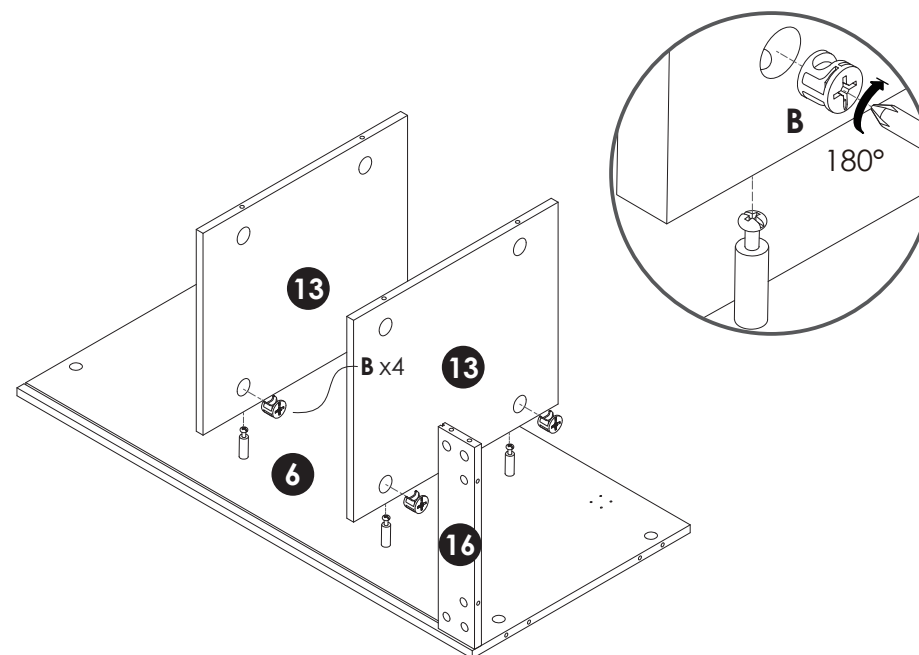

27

YOU WILL NEED


B x2

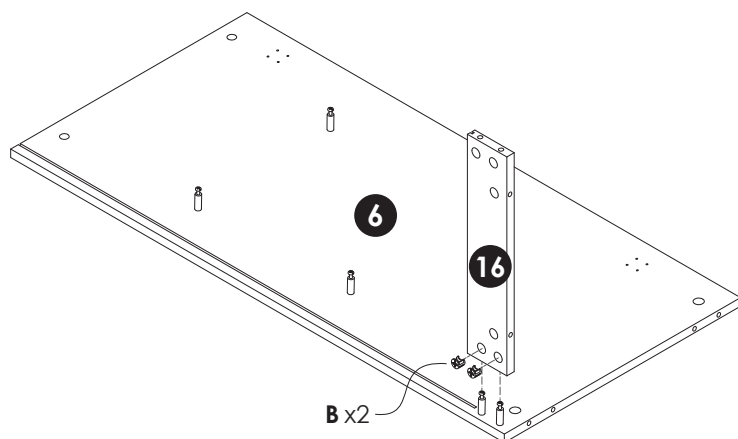

29

YOU WILL NEED

A x6

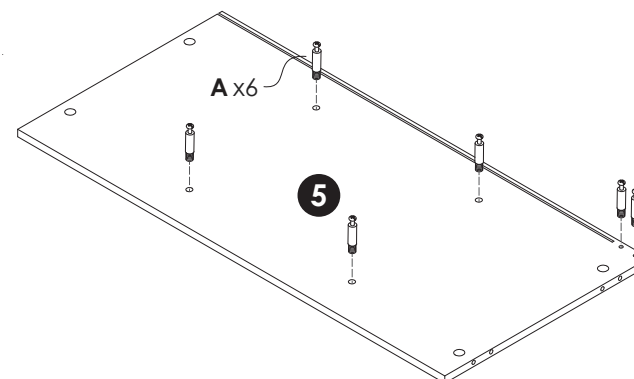

30



YOU WILL NEED

B x6

C x2

R x1


L x4

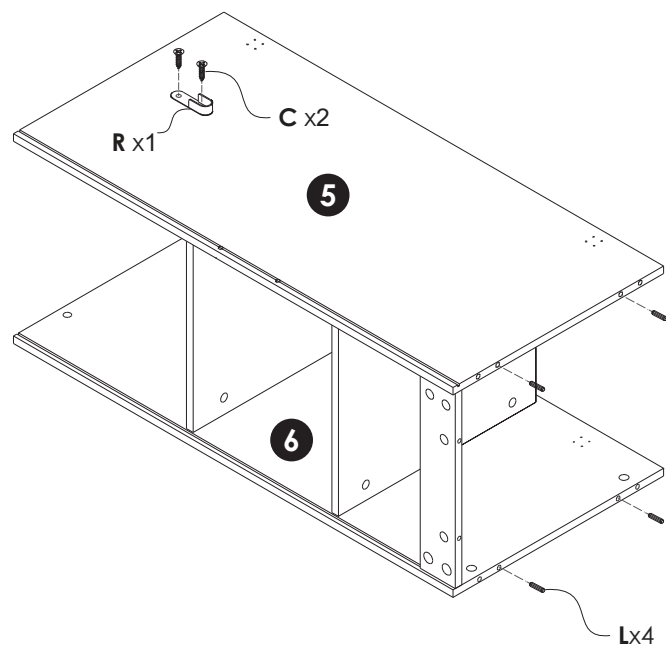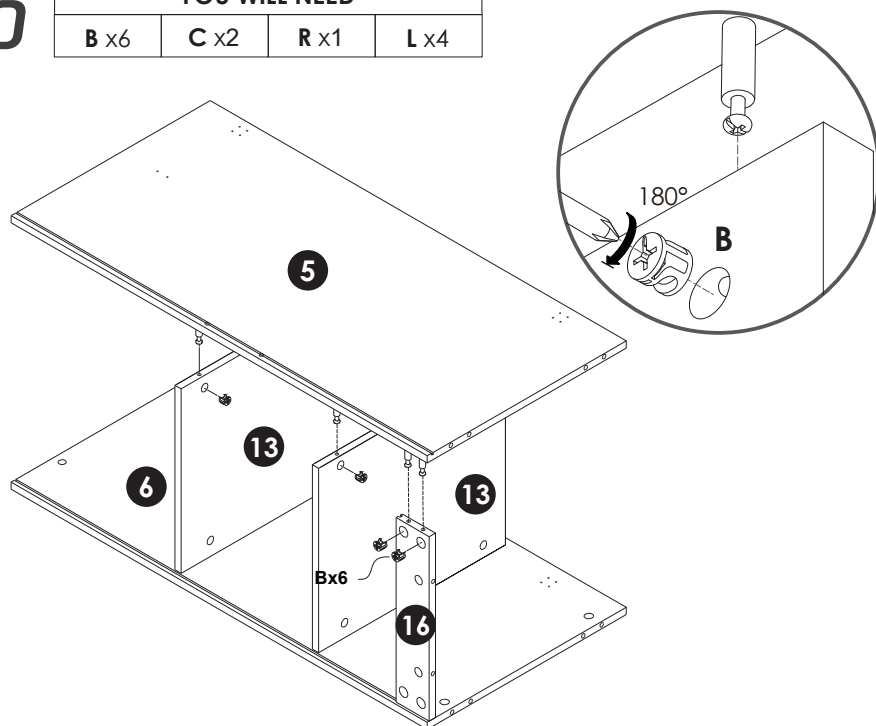

31


YOU WILL NEED

B x6

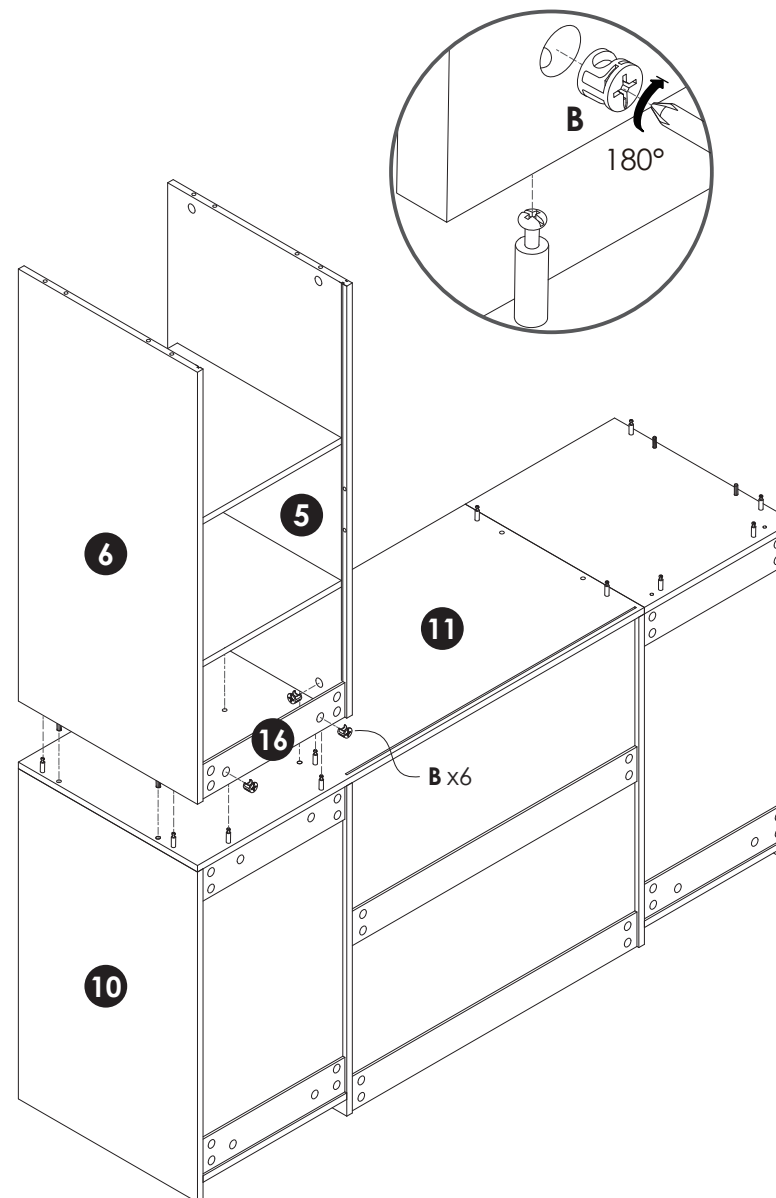


32

YOU WILL NEED	
C x4	R x2

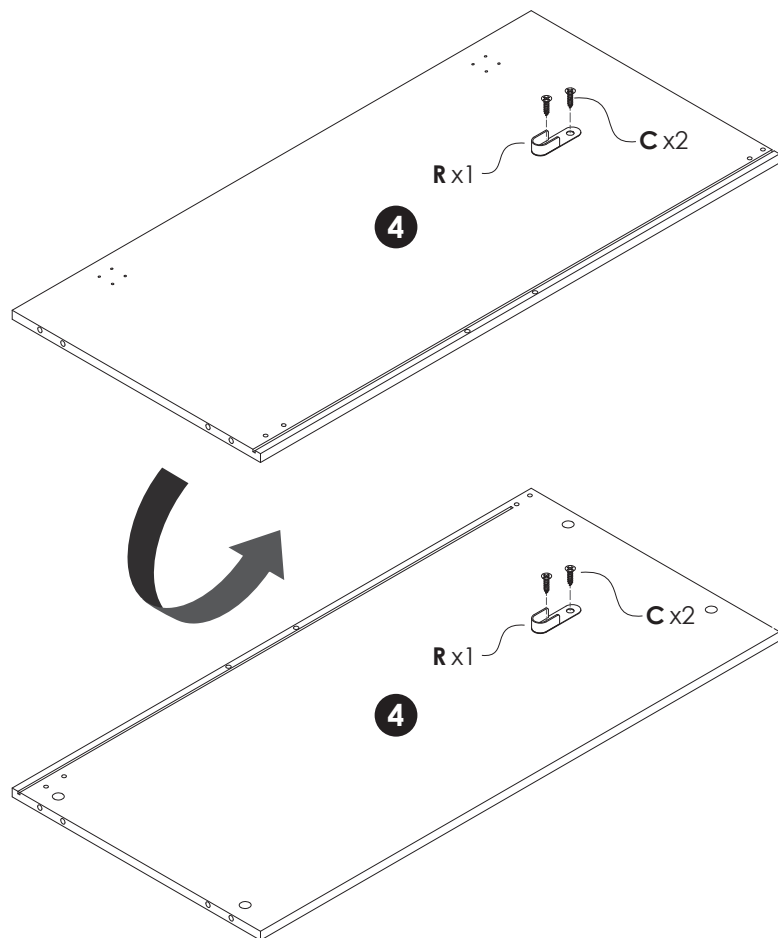


33

YOU WILL NEED		
A x2	C x2	R x1

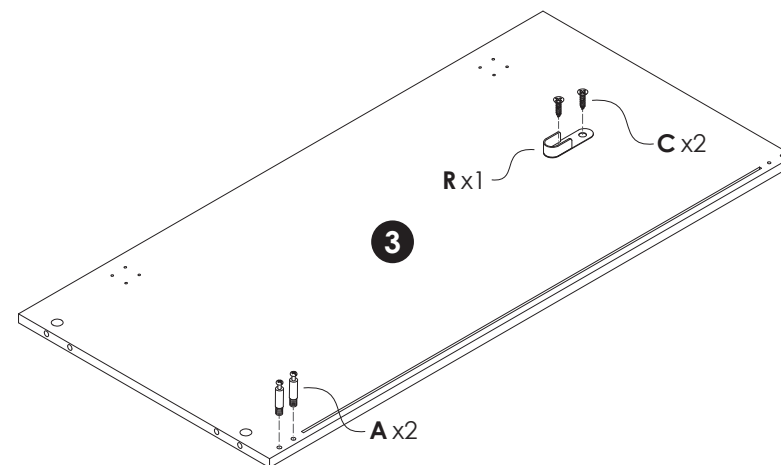

34


YOU WILL NEED	
B x2	

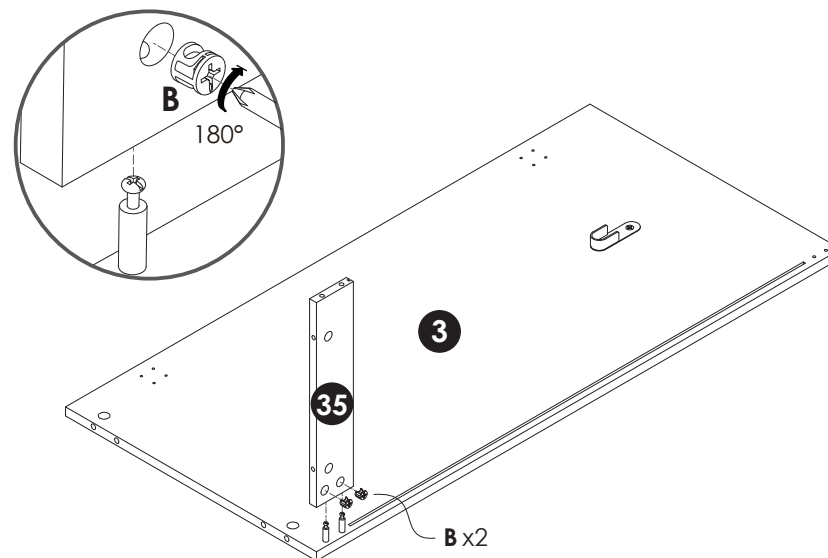

35

YOU WILL NEED

B x4

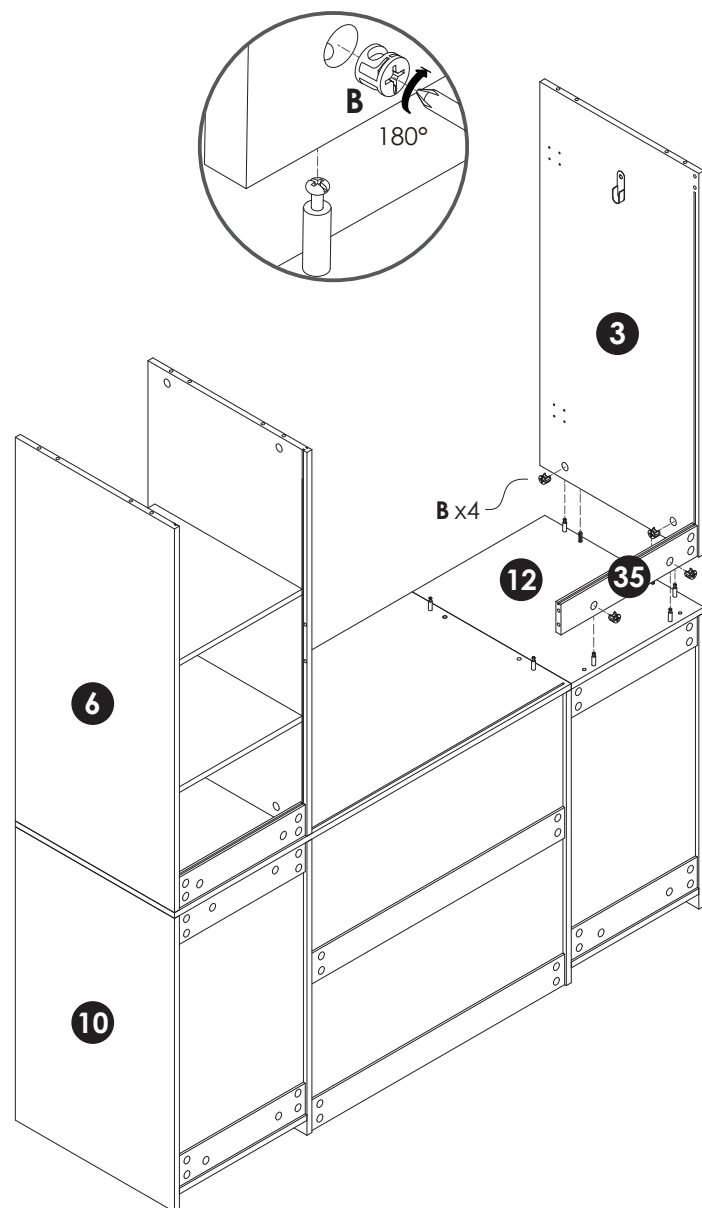


36

YOU WILL NEED

B x2


L x2

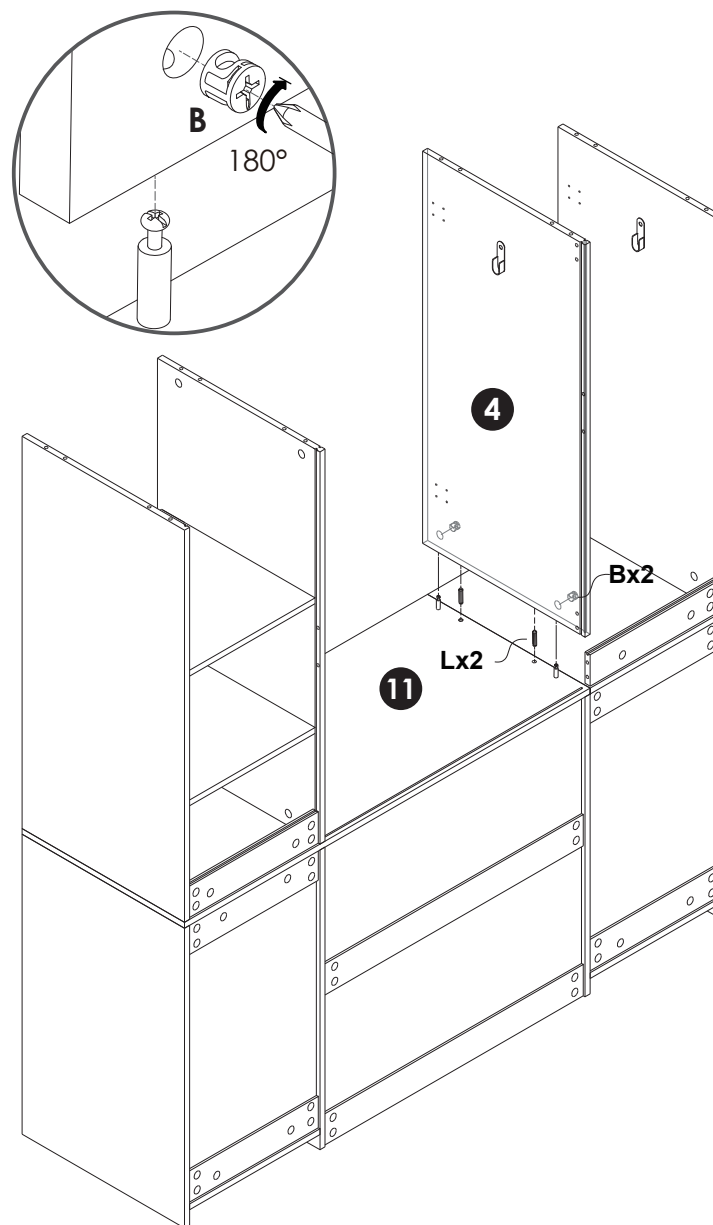


37

YOU WILL NEED

E x2

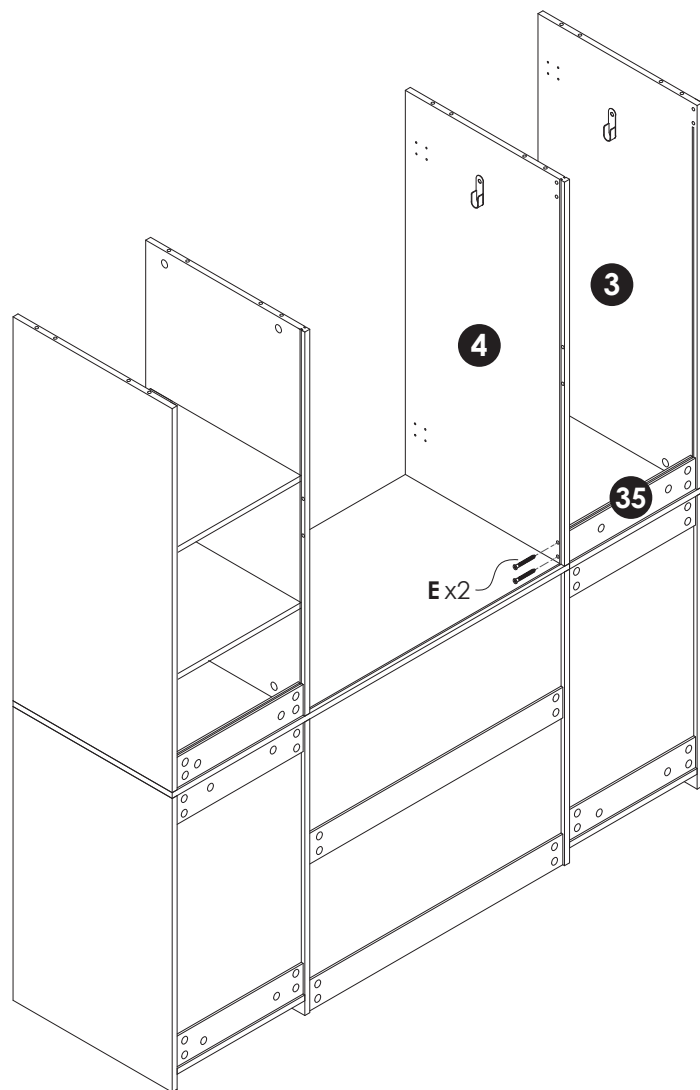


38

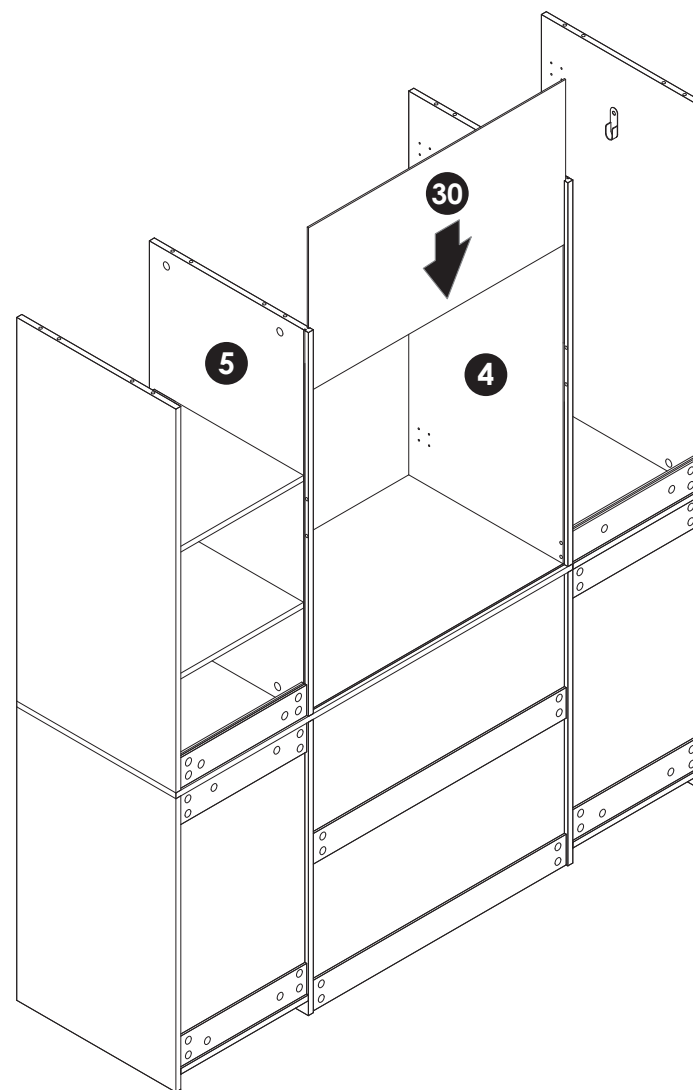


39

YOU WILL NEED

E x4

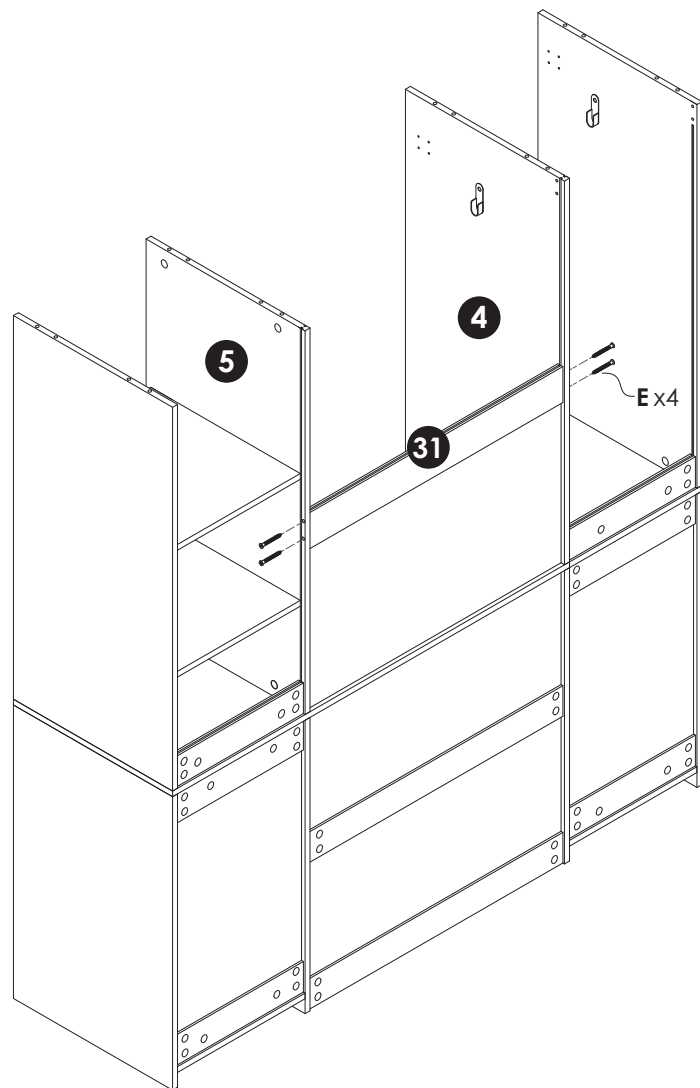


40

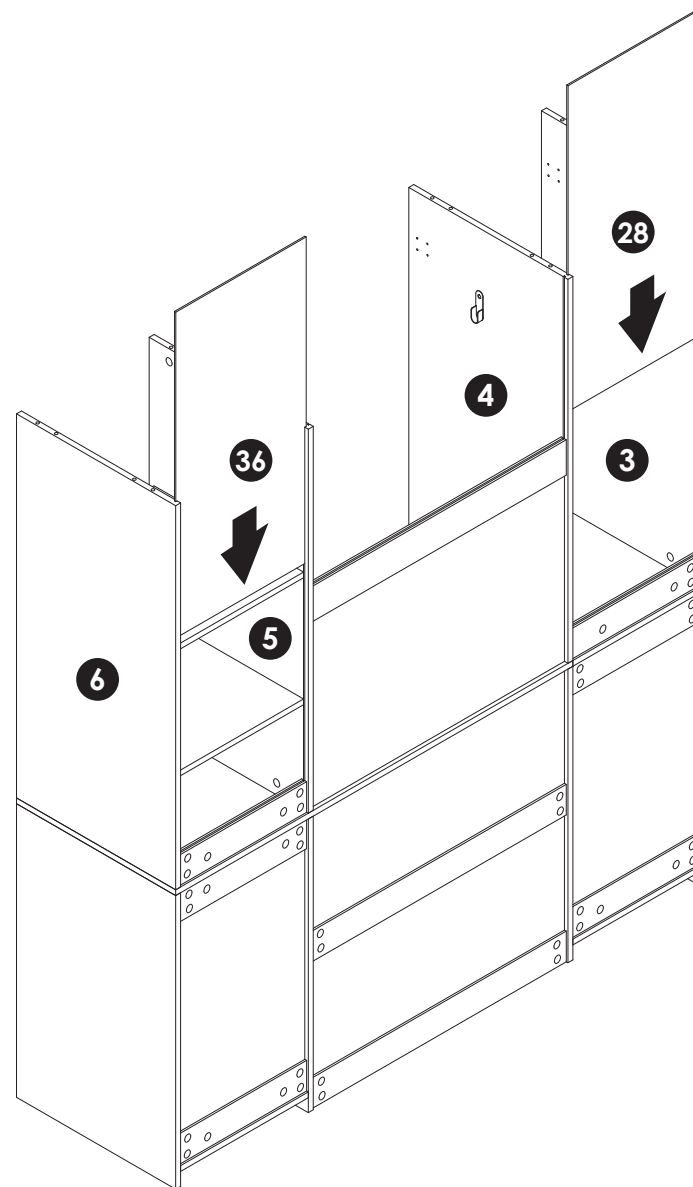

41

YOU WILL NEED



E x4

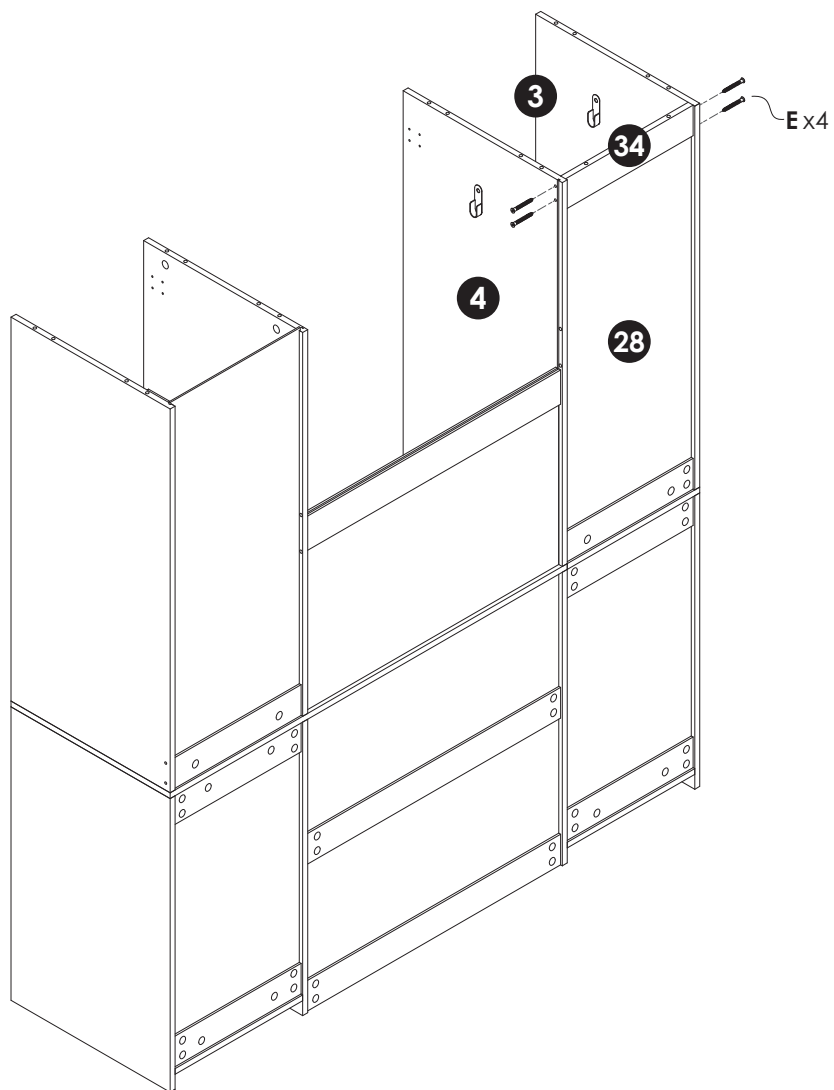

42

YOU WILL NEED

L x8

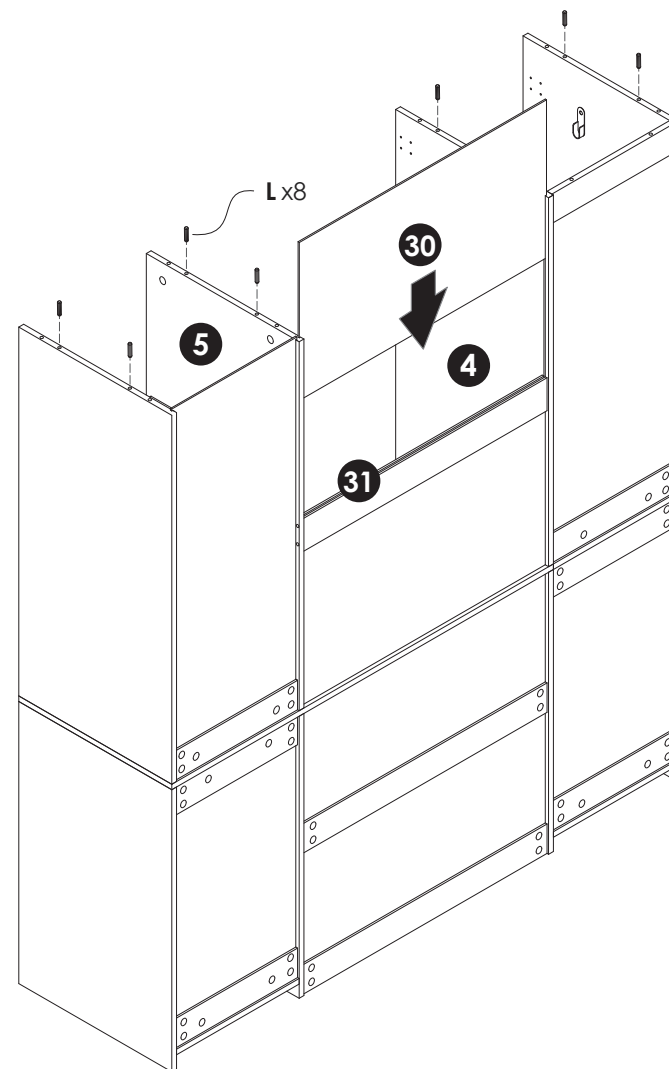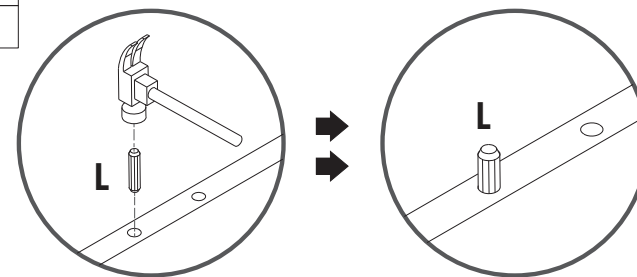


43

YOU WILL NEED

C x4



N = N₁ + N₂ x1

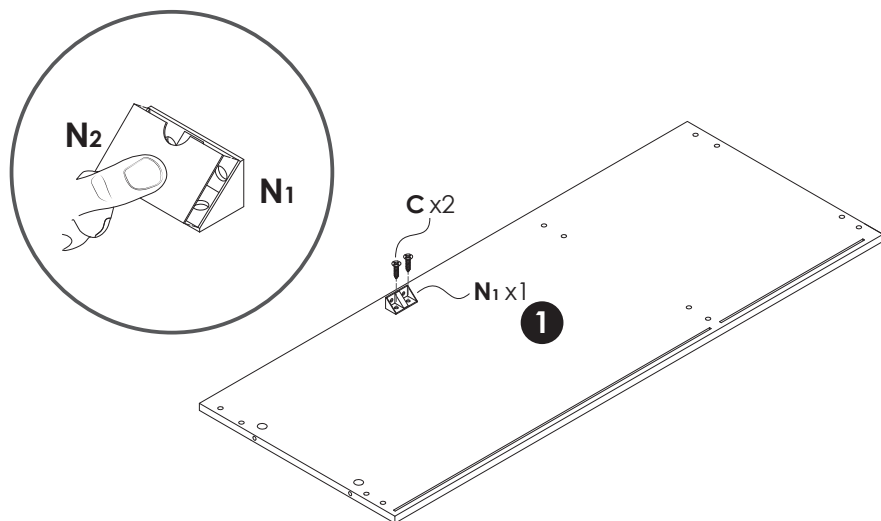

45

YOU WILL NEED

B x6

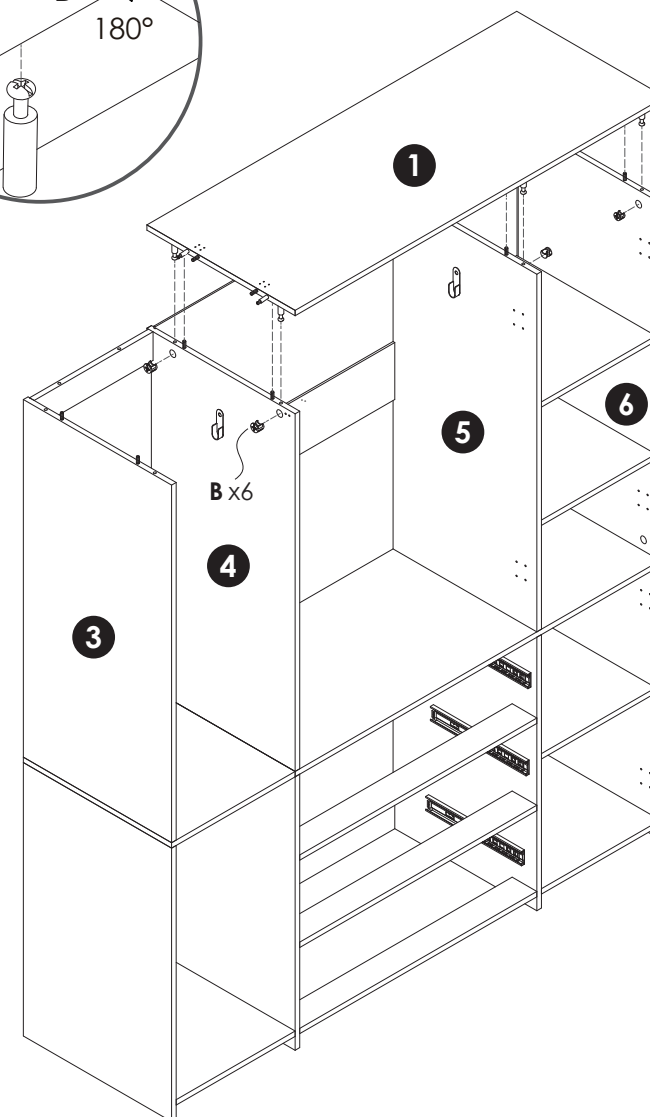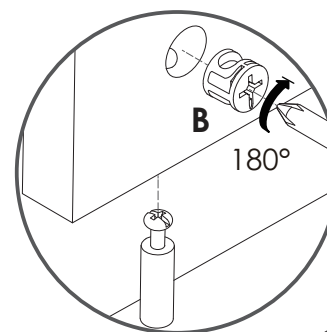


44

YOU WILL NEED

A x8



L x2

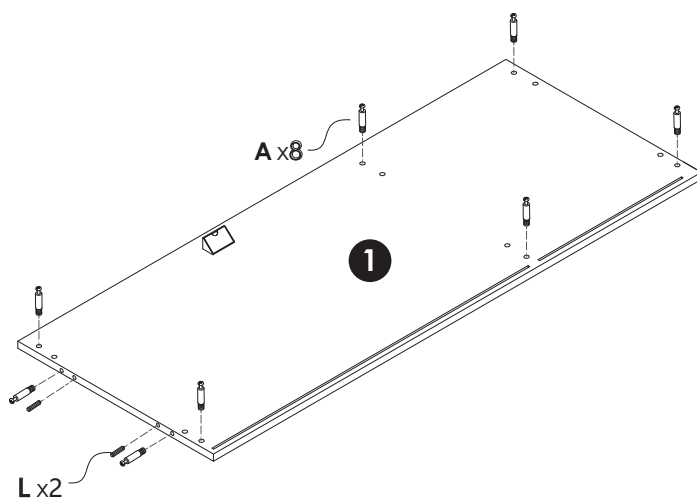

46

YOU WILL NEED


B x2

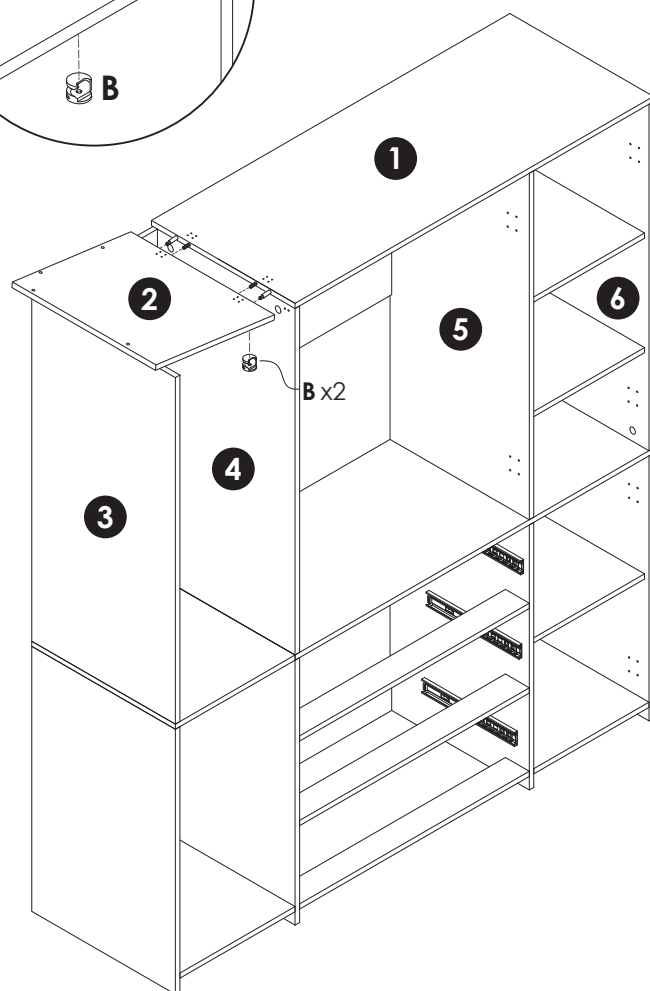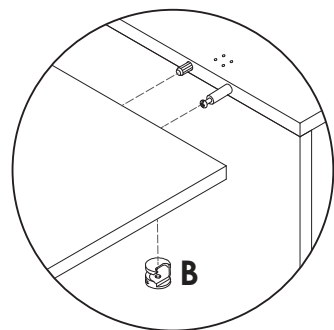

47

YOU WILL NEED

E x4

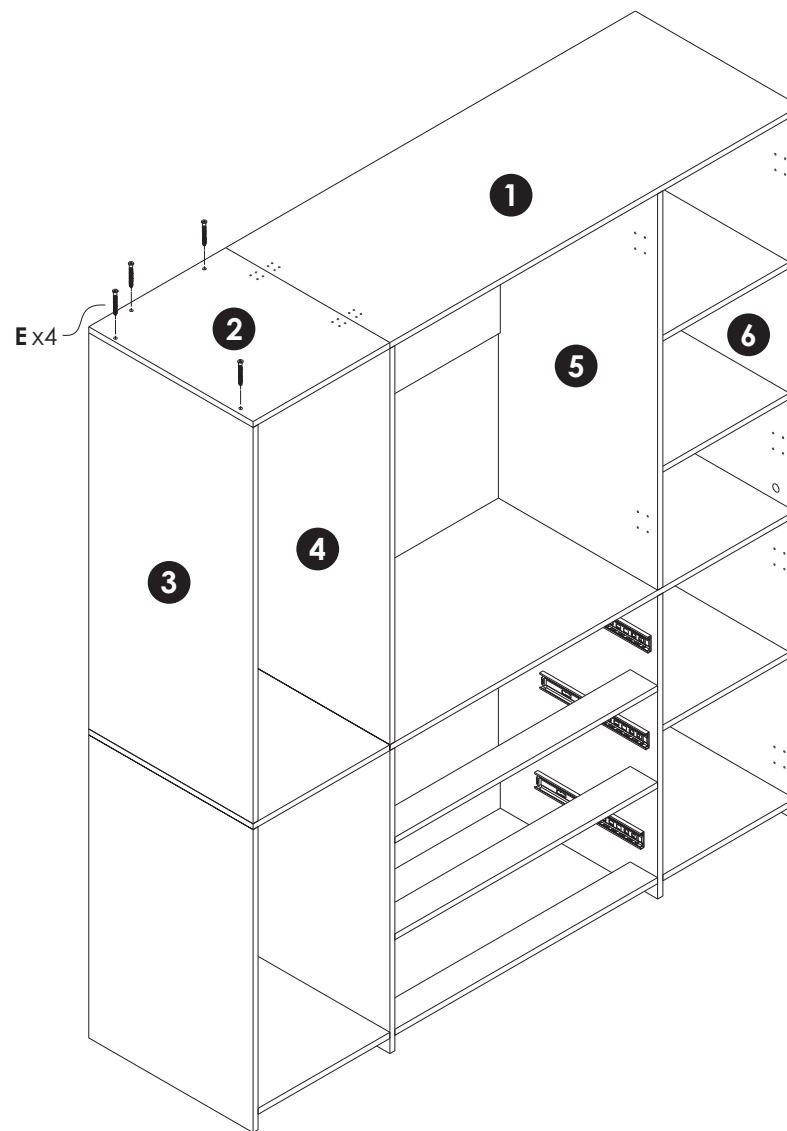


48

YOU WILL NEED

C x16

P x2

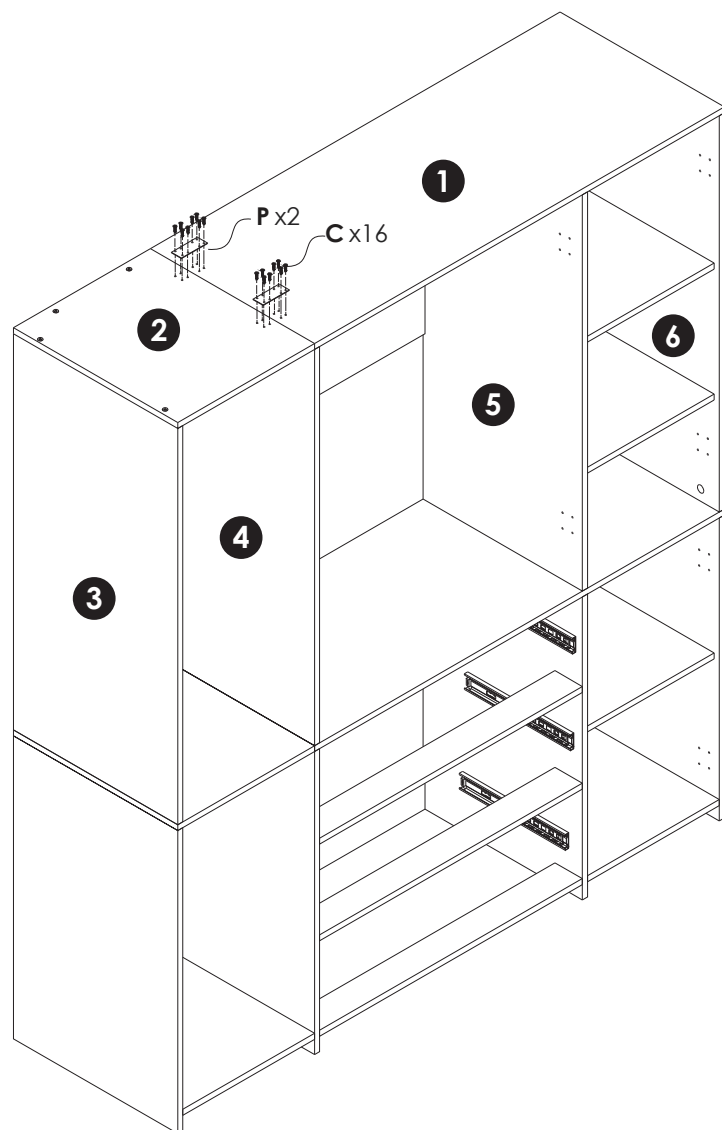


49

YOU WILL NEED

C x4


N = N1 + N2 x1

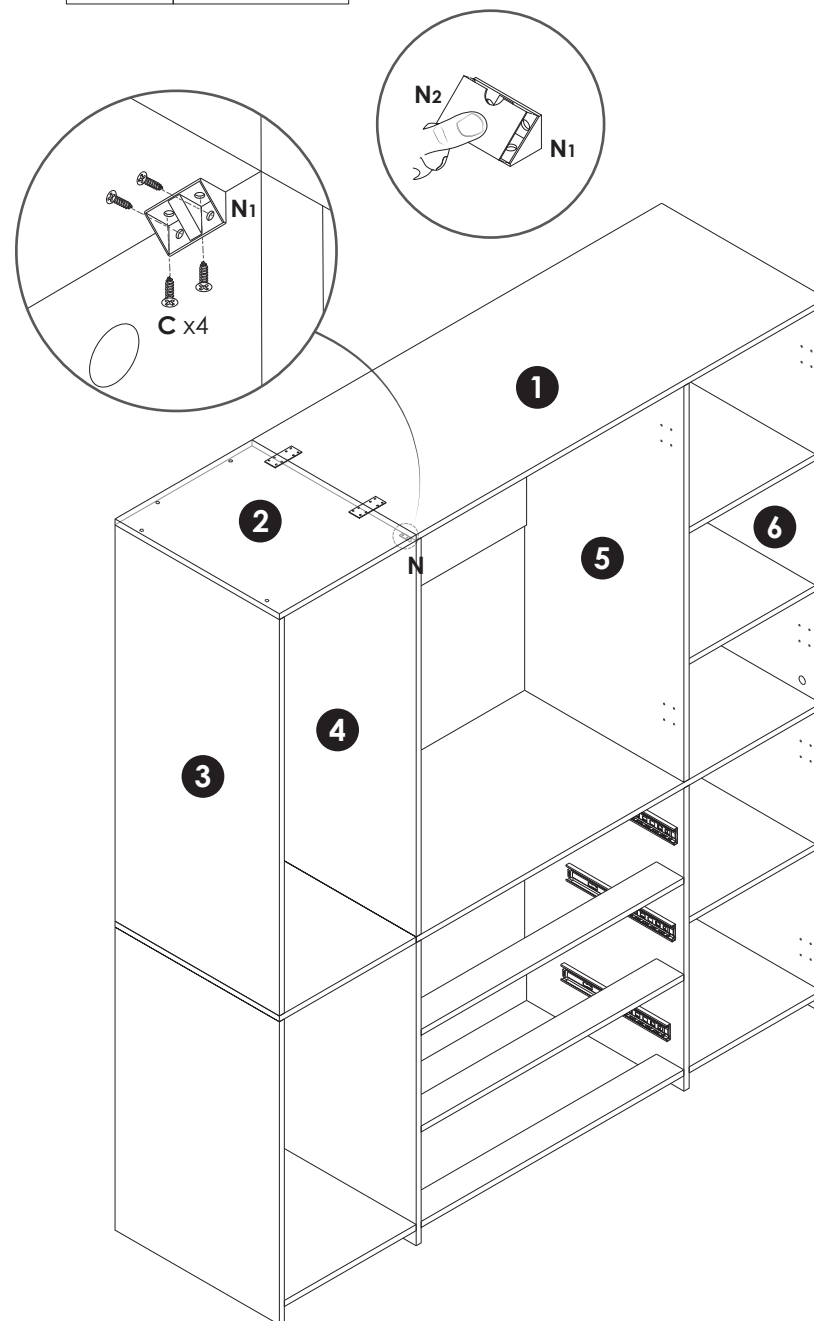

50

YOU WILL NEED

A x18 E x18

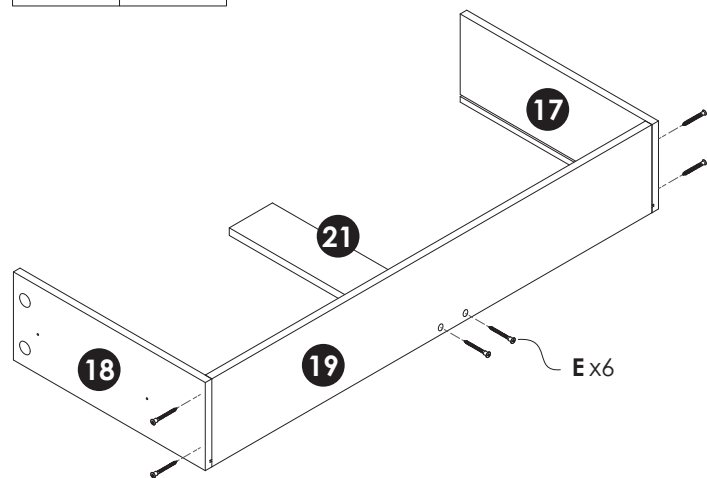


x3






51

YOU WILL NEED

B x18 F₂ x6 K x18 T = T₁ + T₂ x6

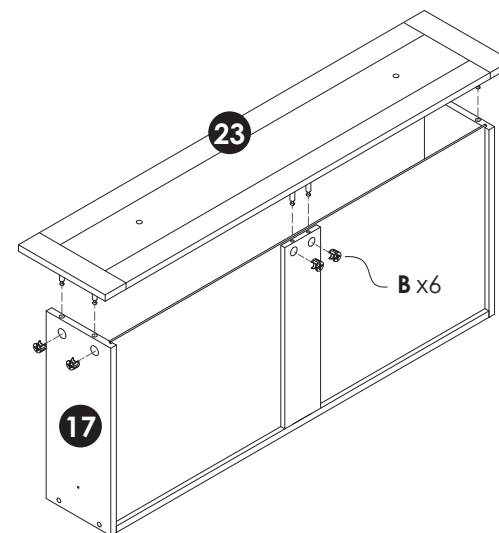

x3

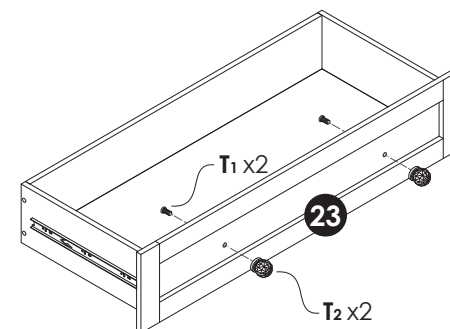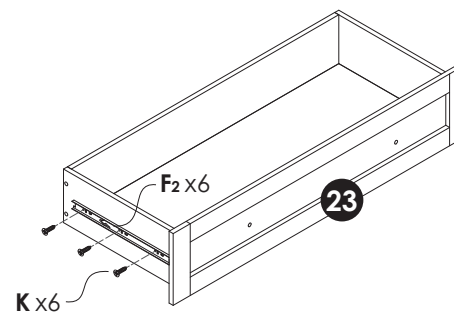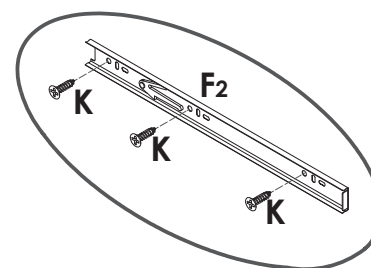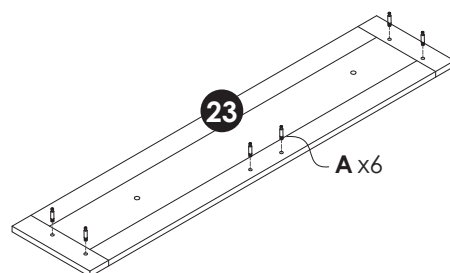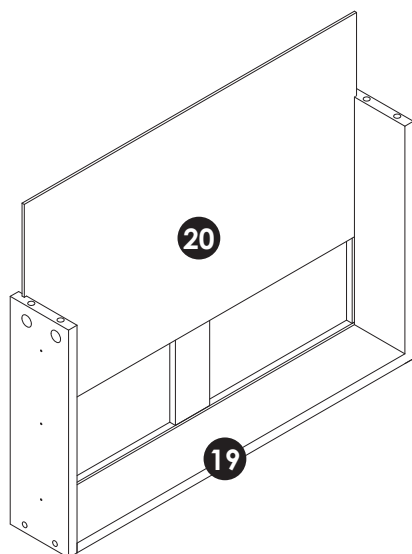


52

YOU WILL NEED

C x16

J = J₁ + J₂ x4

S x8

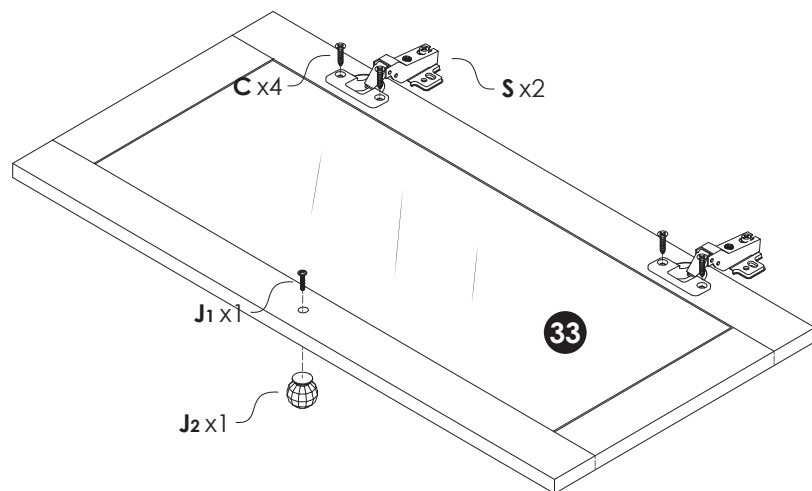



53

YOU WILL NEED


C x8

J x4

S x4

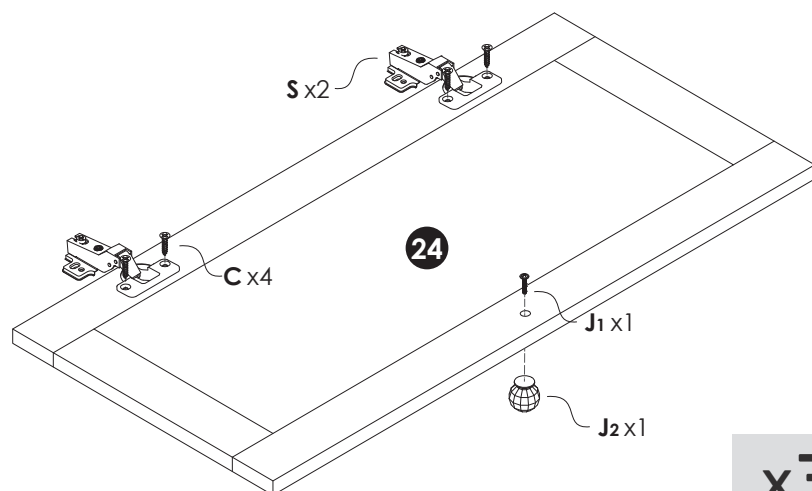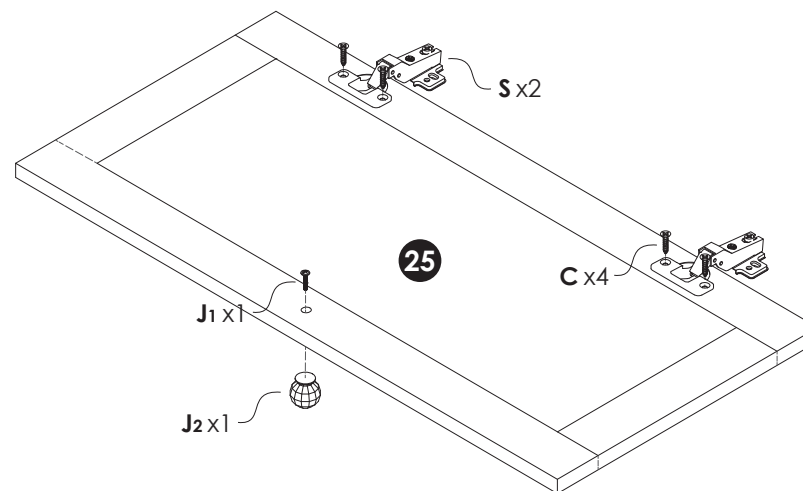


x3

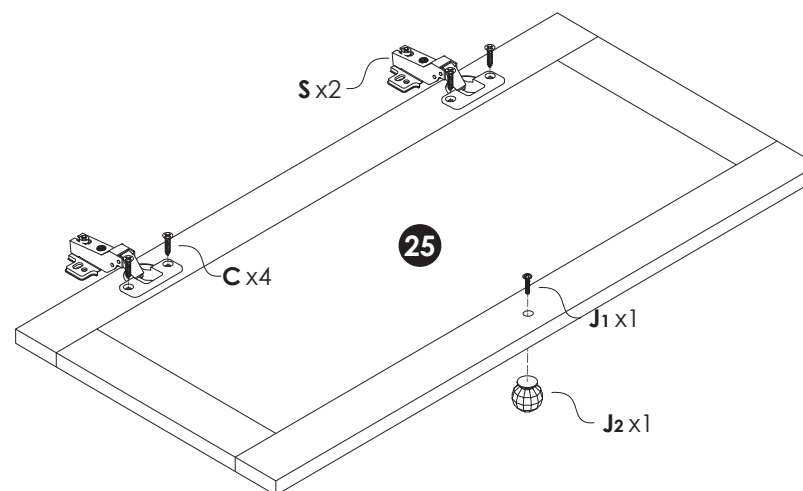

The ways to adjust the door


- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.

Obvious gaps between doors or Doors don't look closed

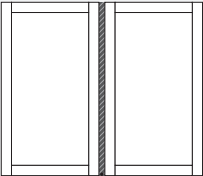

Have gap

1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

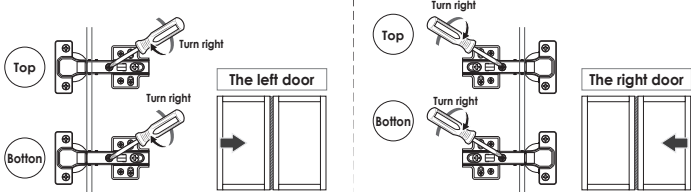


Top Bottom Turn right

The left door The right door


* If the 2 doors are overlap, please turn the "internal & external screw" to the left.

When door is crooked

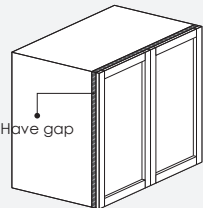


Have gap

1 Rotate the "front and rear screws to the left.

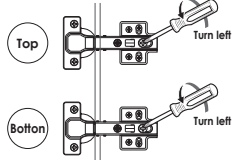


Top Bottom Turn left

2 Push the door to the cabinet.

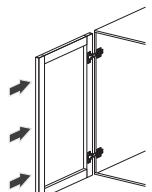


3 Rotate the "front and rear screws to the right.

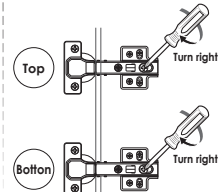

Top Bottom Turn right

*After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.


When door is leaning

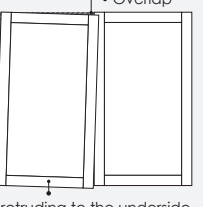

Overlap

Protruding to the underside


Turn "internal & external screw" to the left can make the top of the door tilted outward.

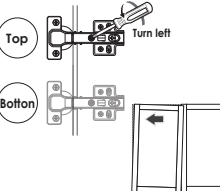

Top Bottom Turn left


Protruding to the upside

Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

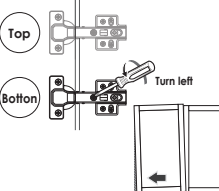


Top Bottom Turn left

When the door is higher on top

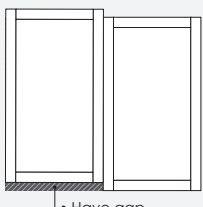


Have gap

1 Turn "up & down screw" to the left.

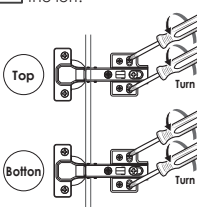


Top Bottom Turn left

2 Lower the door's height so that 2 doors are of the same height.

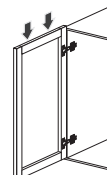

3 Turn "up & down screw" to the right.

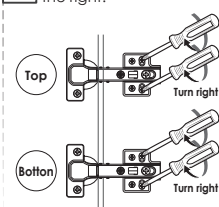

Top Bottom Turn right



*If the door is lower on bottom, please lift up the left door slightly on step 2.

54

YOU WILL NEED

C x48



Note: There is a mirror inside of door **33** panel, which can be interchanged with any **24** panel as your need.

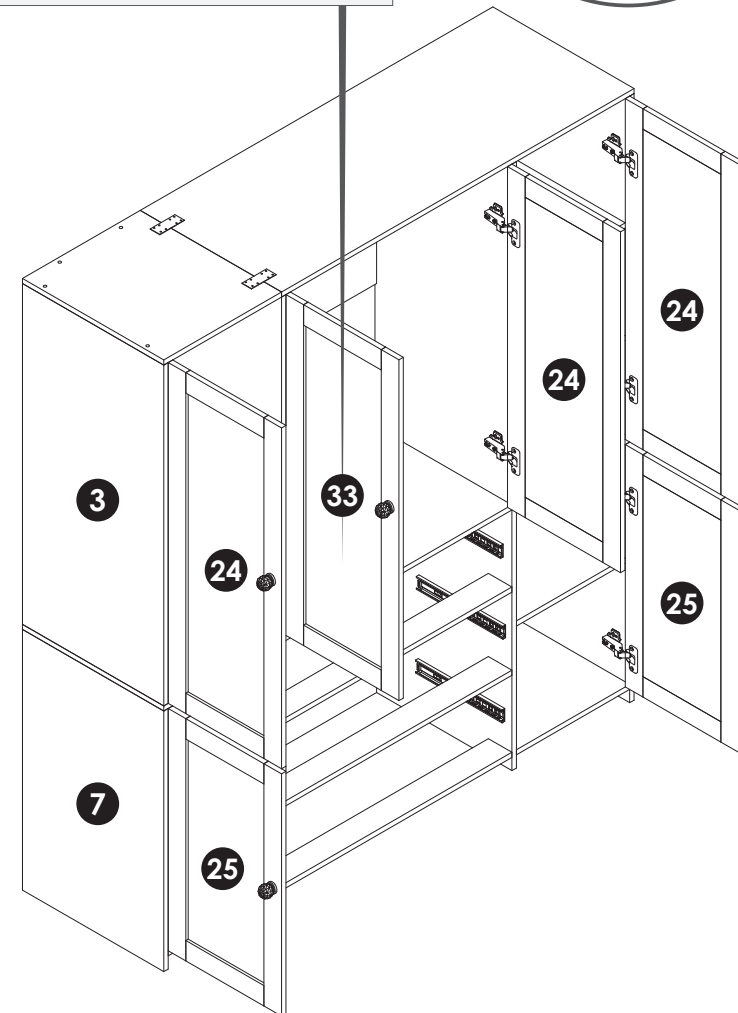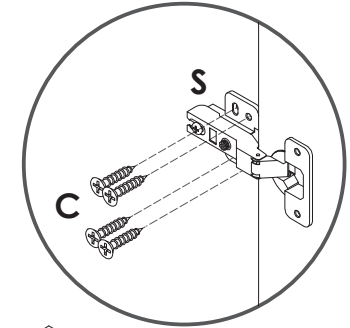




55

YOU WILL NEED

$$H = H_1 + H_2 \times 1$$

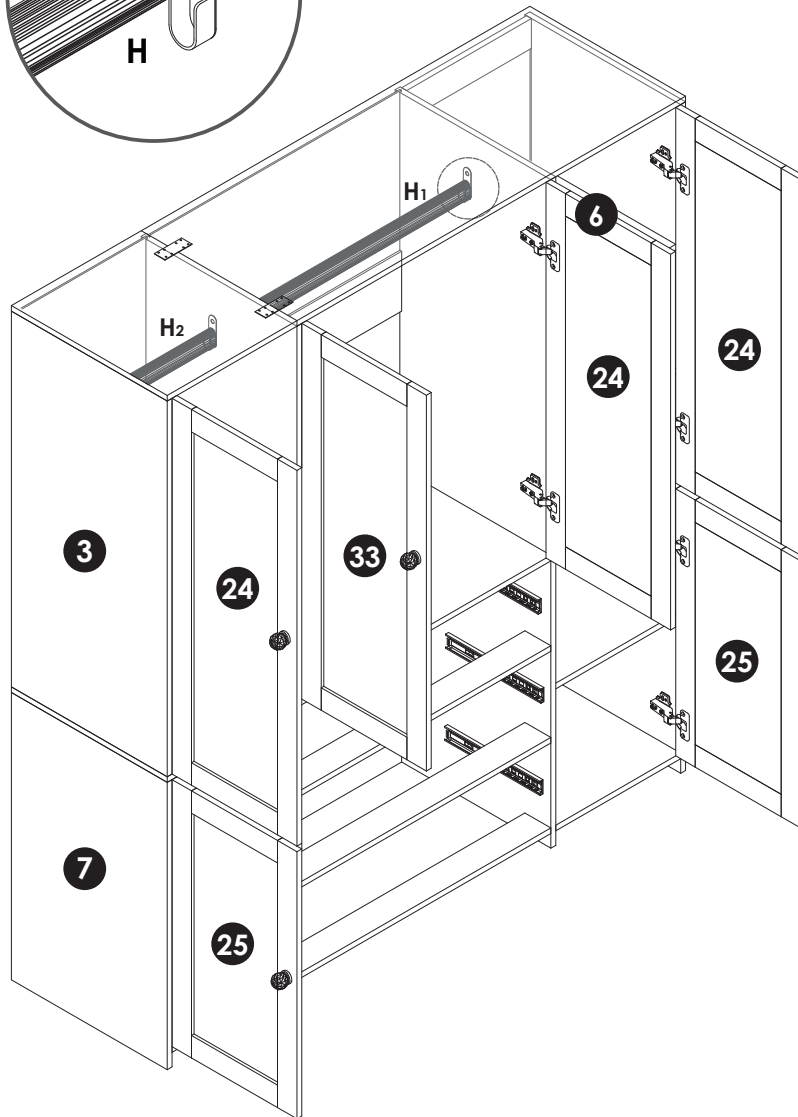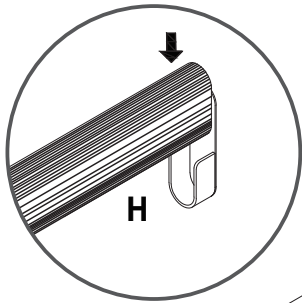


56

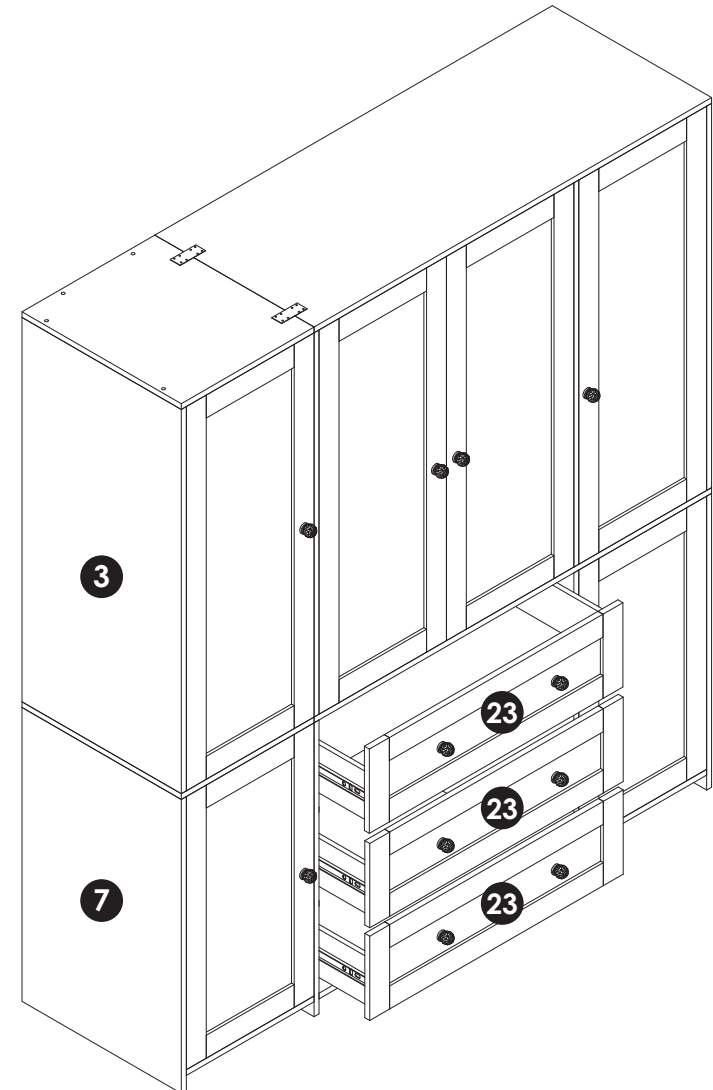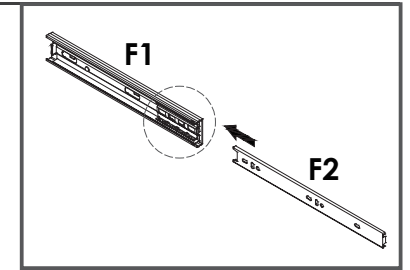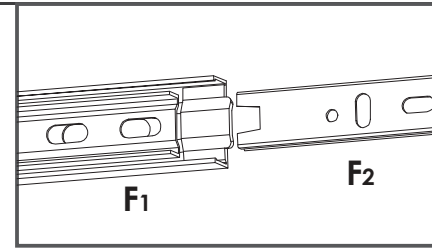

57

YOU WILL NEED


Q x66

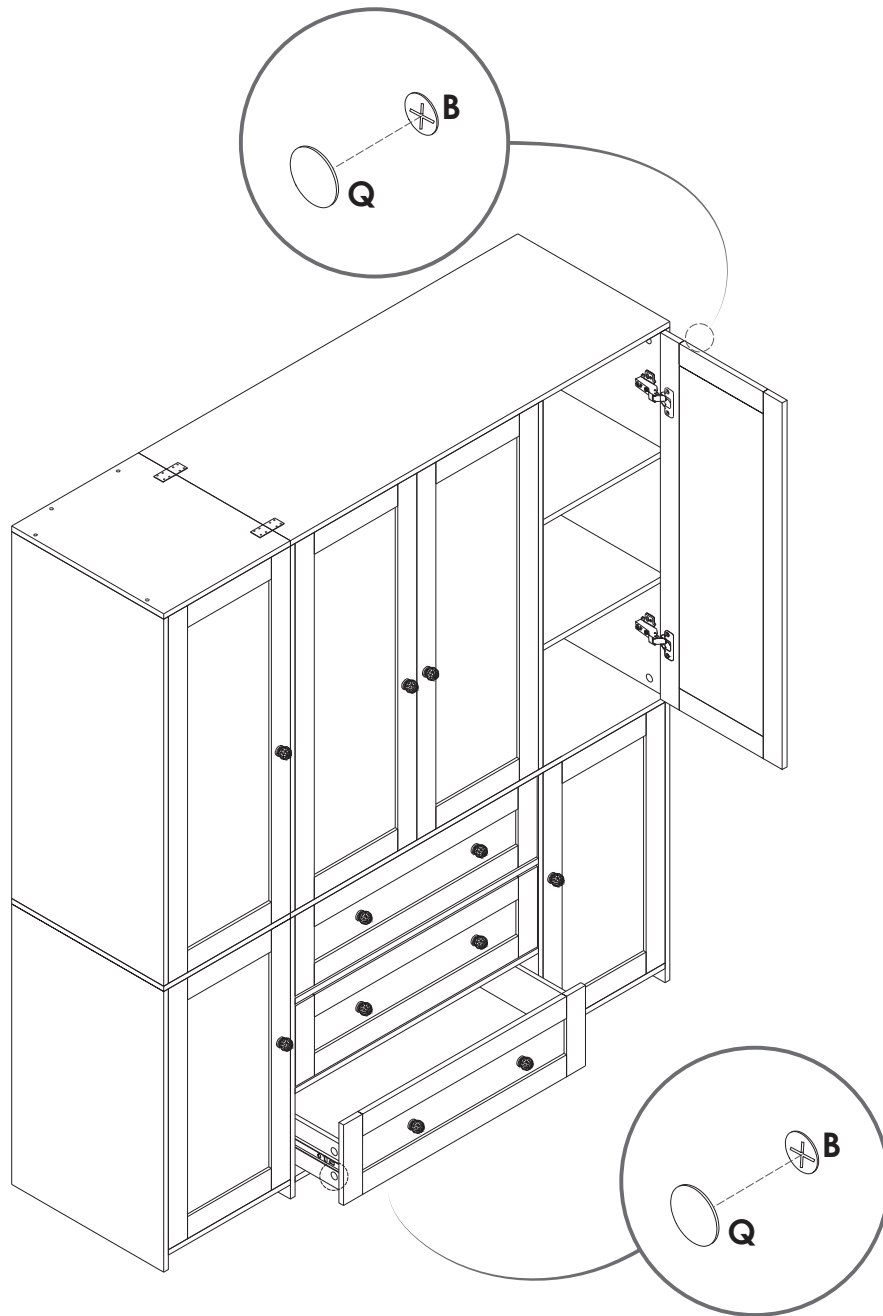

58

YOU WILL NEED

W = $w_1 + w_2$ x48

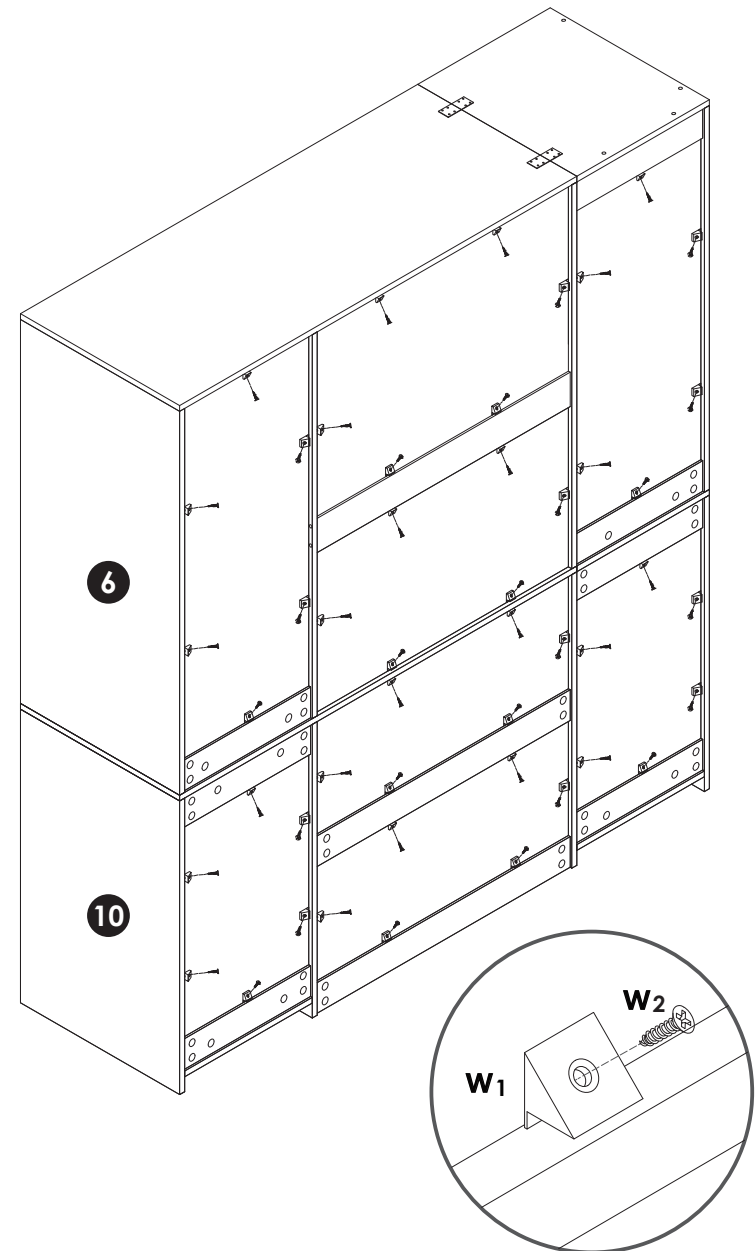


59

YOU WILL NEED

$$V = V_1 + V_2 + V_3 \times 2$$

Mandatory!

For safety reasons, we recommend you follow these instructions to install the anti-tipping hardware, when installed properly, this hardware may prevent the unit from tipping unexpectedly.

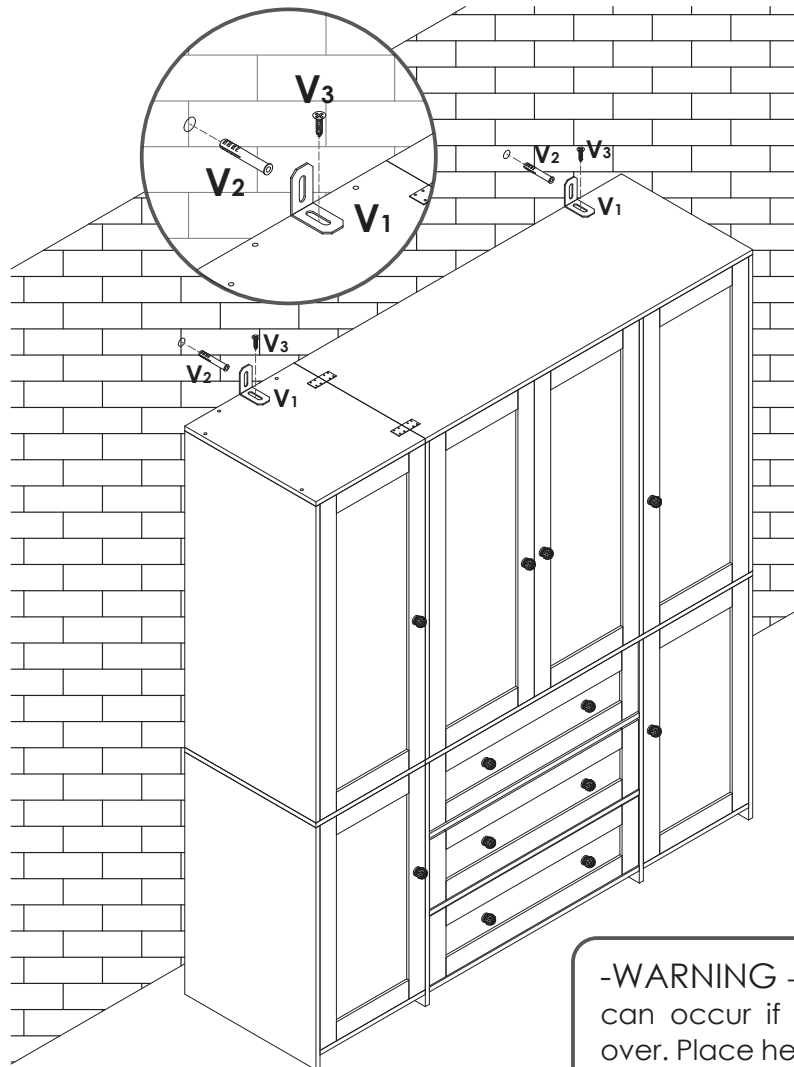


-WARNING -Serious injury can occur if furniture tips over. Place heavy items on lower shelved and as far back as possible.

60

YOU WILL NEED

$$V = V_4 + V_5 \times 2$$

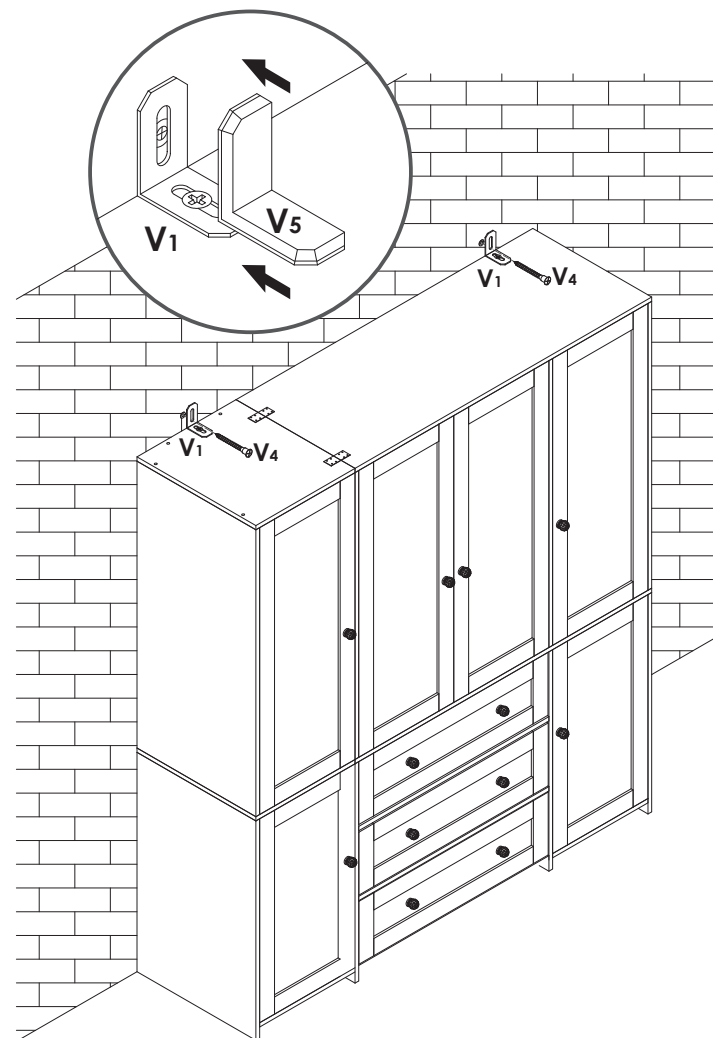

WARRANTY

We provide an **18-month** warranty on the product starting from the date of the original purchase. If the product has any manufacturing defect, please contact us through email with details about the problem. We will send you further information about the return or exchange.

Model: JY-241218

No. 99, Xudan Road North, Houji Administrative
Village Industrial Park, Houji Hui Town, Caoxian
County, Heze City, Shandong Province

Made in China

