

installation instructions:

# SIGNATURE URETHANE ROSETTE

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

### TOOL & MATERIAL CHECKLIST

- ☐ construction adhesive
- ☐ caulk
- ☐ caulking gun
- ☐ nail gun
- ☐ finishing nails
- ☐ extra fine sandpaper
- ☐ paint


### SPECIAL INSTRUCTIONS AND NOTES

- It is highly recommended that you paint/finish the rosette with 100% acrylic latex paint before installation. Once installed, you can apply any necessary touchup paint/finish.
- Clean installation surface and back of rosette of all dirt and dust with a clean dry cloth.
- Measure and mark the location where the rosette is going to be installed.

### STEP BY STEP INSTRUCTIONS

1. Apply adhesive to the back of the rosette and press firmly against the installation surface. Some adhesive may seep out, smooth excess and apply caulk around the edge if needed to fill in any gaps.
2. Wipe off any excess caulk with a damp rag.
3. Complete installation with finishing nails.
4. Fill nail holes with caulk.
5. Apply any necessary touchup paint.

### EXAMPLE INSTALLATION DIAGRAM

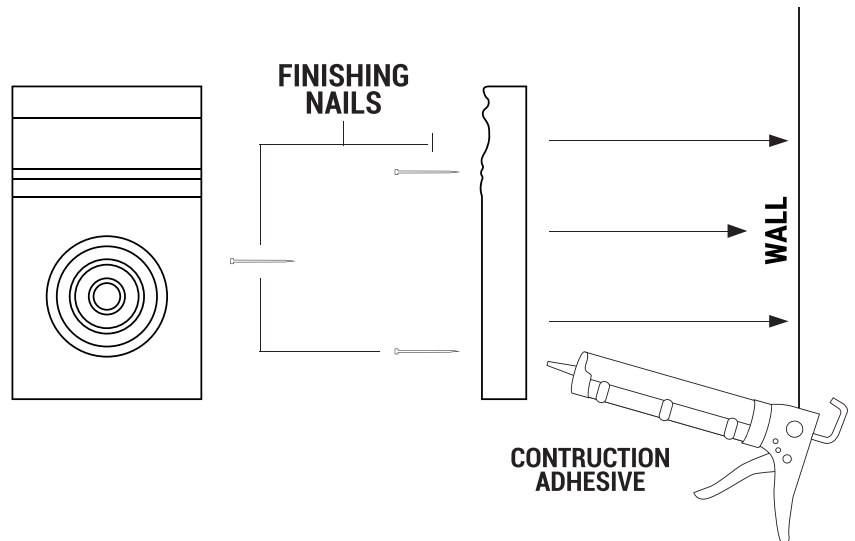

We Can Help. Call (866) 607-0453



**EKENA**  
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

[www.ekenamillwork.com](http://www.ekenamillwork.com)