









30in white Bathroom Vanity Installation Manual

ASSEMBLY INSTRUCTIONS






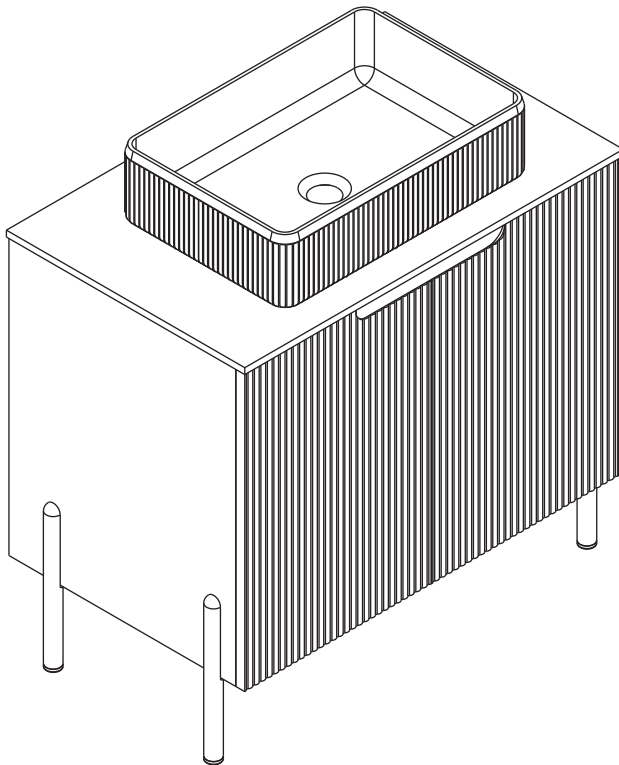


Bathroom Vanity

ASSEMBLY INSTRUCTIONS

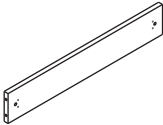1		x1
2		x1
3		x1
4		x1
5		x1
6		x1
7		x1
8		x1


ASSEMBLY INSTRUCTIONS

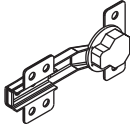A	 Ø6x26mm	x22	I		x2
B	 Ø15x9mm	x22	J		x2
C	 Ø3.5x14mm	x58	K		x8
D		x4	L		x1
E		x2			
F		x2			
G		x2			
H		x4			


Use the Cam Lock and Eccentric Wheel

ECCENTRIC WHEEL


Tighten the bolt until the shoulder is aligned with the panel.
Be sure not to tighten too much or too little.

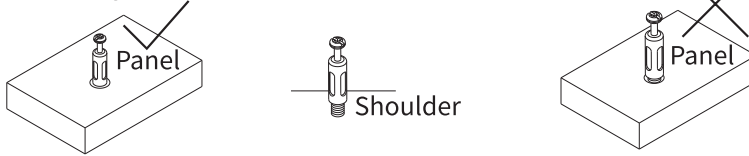


The pre-inserted nut should align with the center of the cam lock when joining two panels. The cam lock should be inserted before the eccentric wheel.

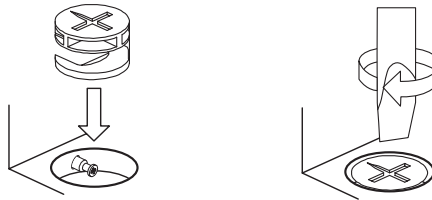




Turn the cam lock clockwise to tighten.

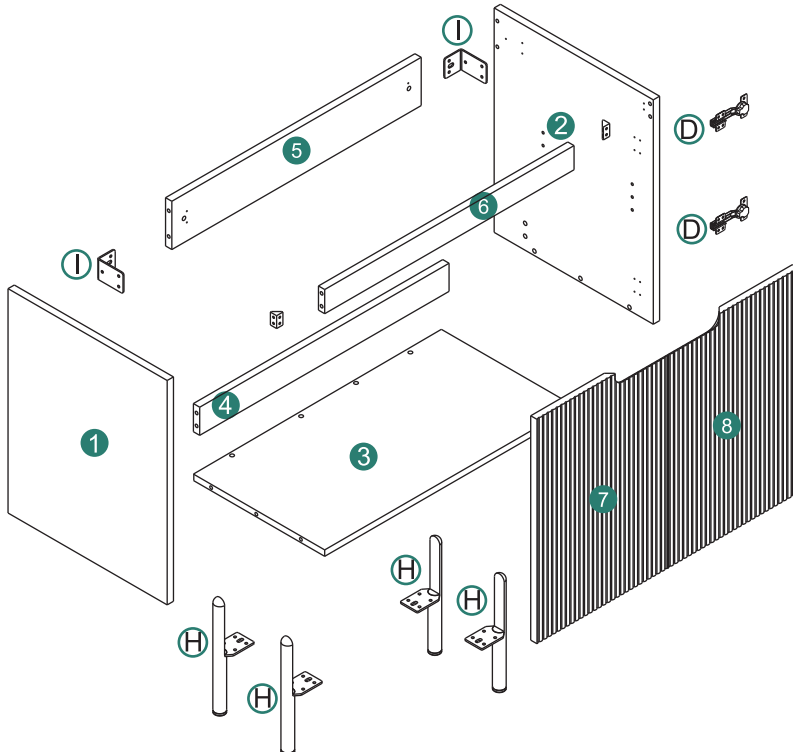

ASSEMBLY INSTRUCTIONS



The floor needs to be covered with paper or carpet protective material before installation!

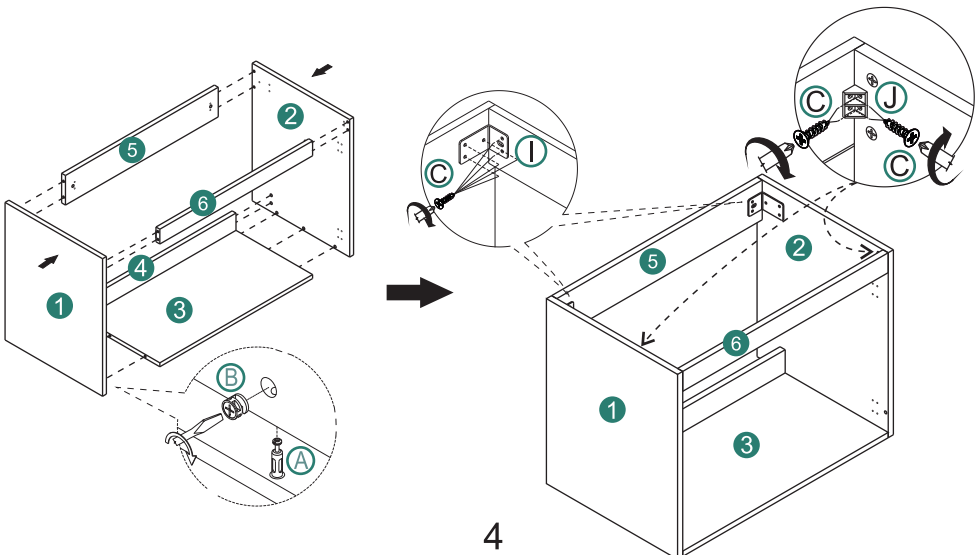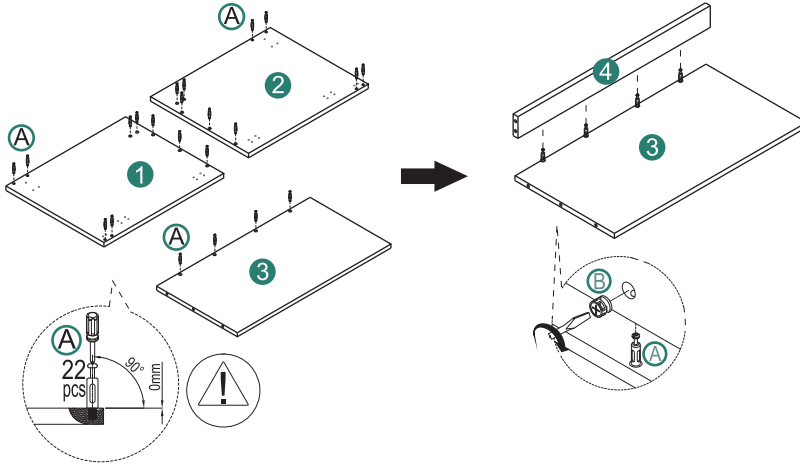

ASSEMBLY INSTRUCTIONS


3



C 16pcs



H 4pcs

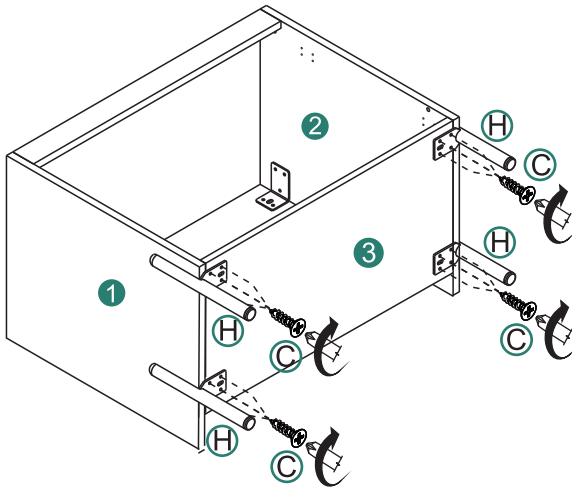

4



7 1pc




8 1pc



C 8pcs



D 4pcs


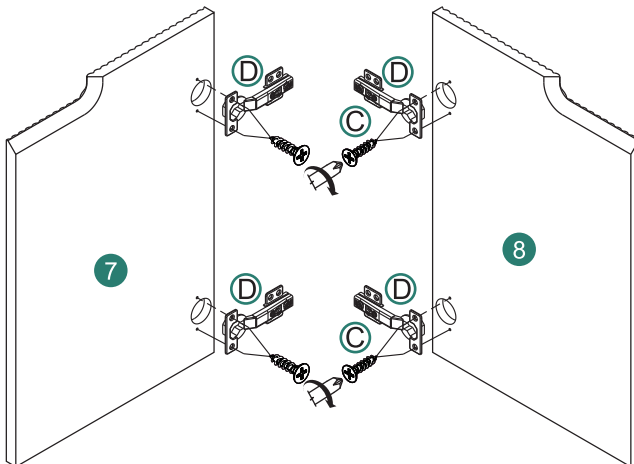


ASSEMBLY INSTRUCTIONS

5




C 16 pcs

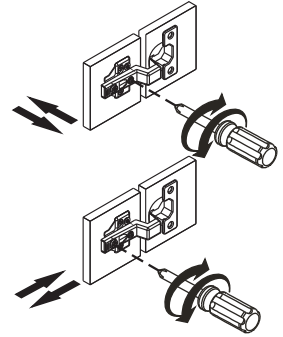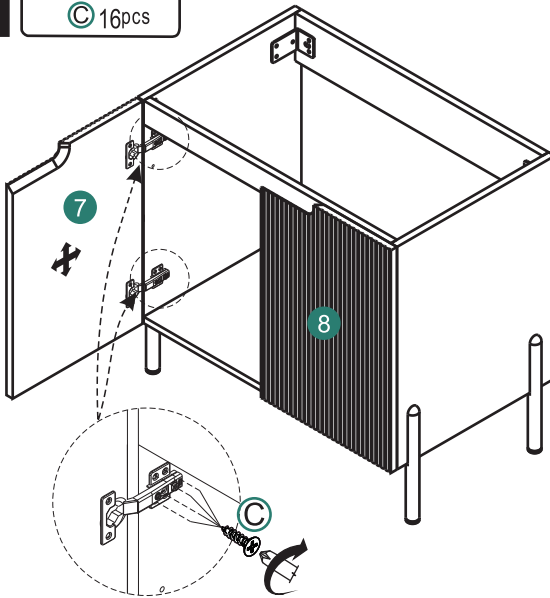


6



E 2 pcs



Bring your own tools

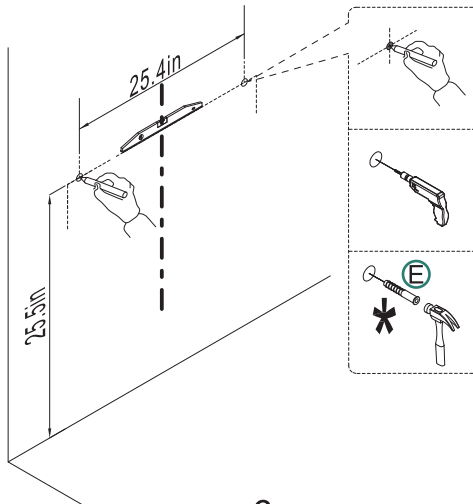

ASSEMBLY INSTRUCTIONS

