


counter

Product ID. Q7PWV

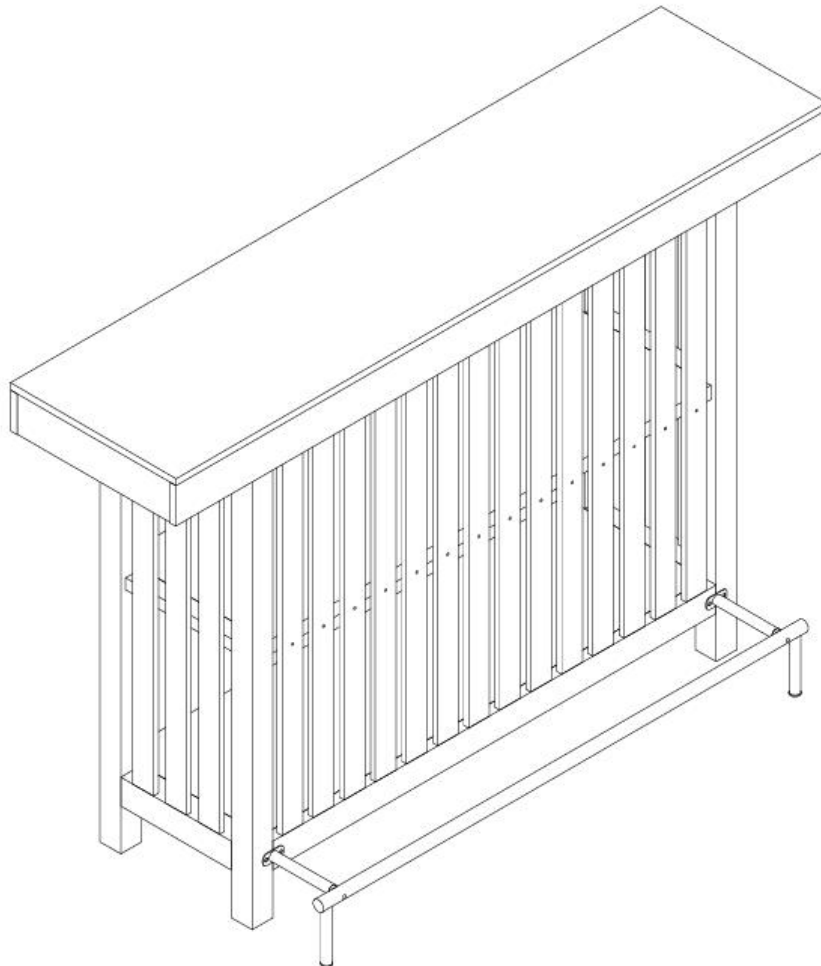



Scan for Support
support@garvee.com


















Distributed by
GARVEE.com


V2606059382

Hardware List

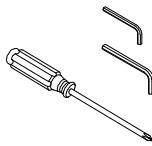
A  46PCS (M6*34)	B  46PCS (ø15*12)	C  20PCS	D  26PCS	E  38PCS (ø6*30)
F  8PCS (ø5*59)	G  28PCS (M4*30)	H  14PCS (M4*30)	I  16PCS (M6*11)	J  2PCS (M6*30)
K  2PCS (M6*35)	L  4PCS (M6*45)	M  2PCS	N  4PCS	O  2PCS
P  4PCS	 1PC			

Panel List

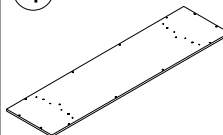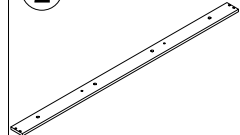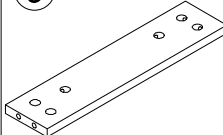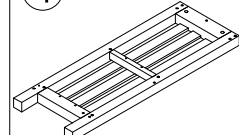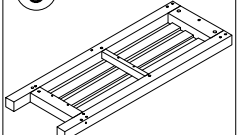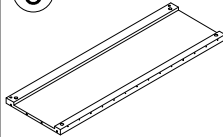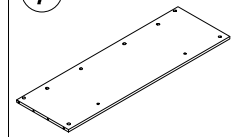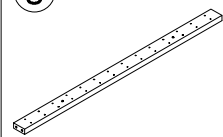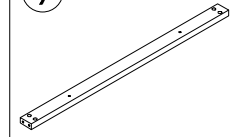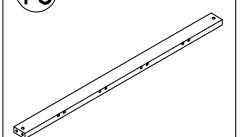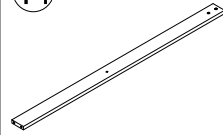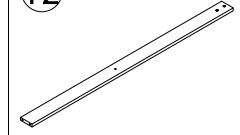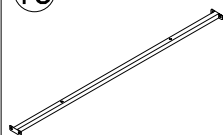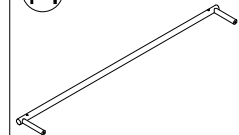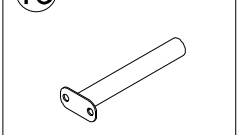1  1PC 1570*400*15mm	2  2PCS 1570*85*15mm	3  2PCS 368*85*15mm	4  1PC 1035*367*50mm	5  1PC 1035*367*50mm
6  1PC 1070*354*30mm	7  1PC 1070*342*15mm	8  1PC 1070*60*25mm	9  1PC 1070*60*25mm	10  1PC 1070*60*25mm
11  10PCS 874*50*12mm	12  4PCS 874*50*12mm	13  1PC 1070*60*20mm	14  1PC 1170*145*25mm	15  2PCS 144*50*25mm

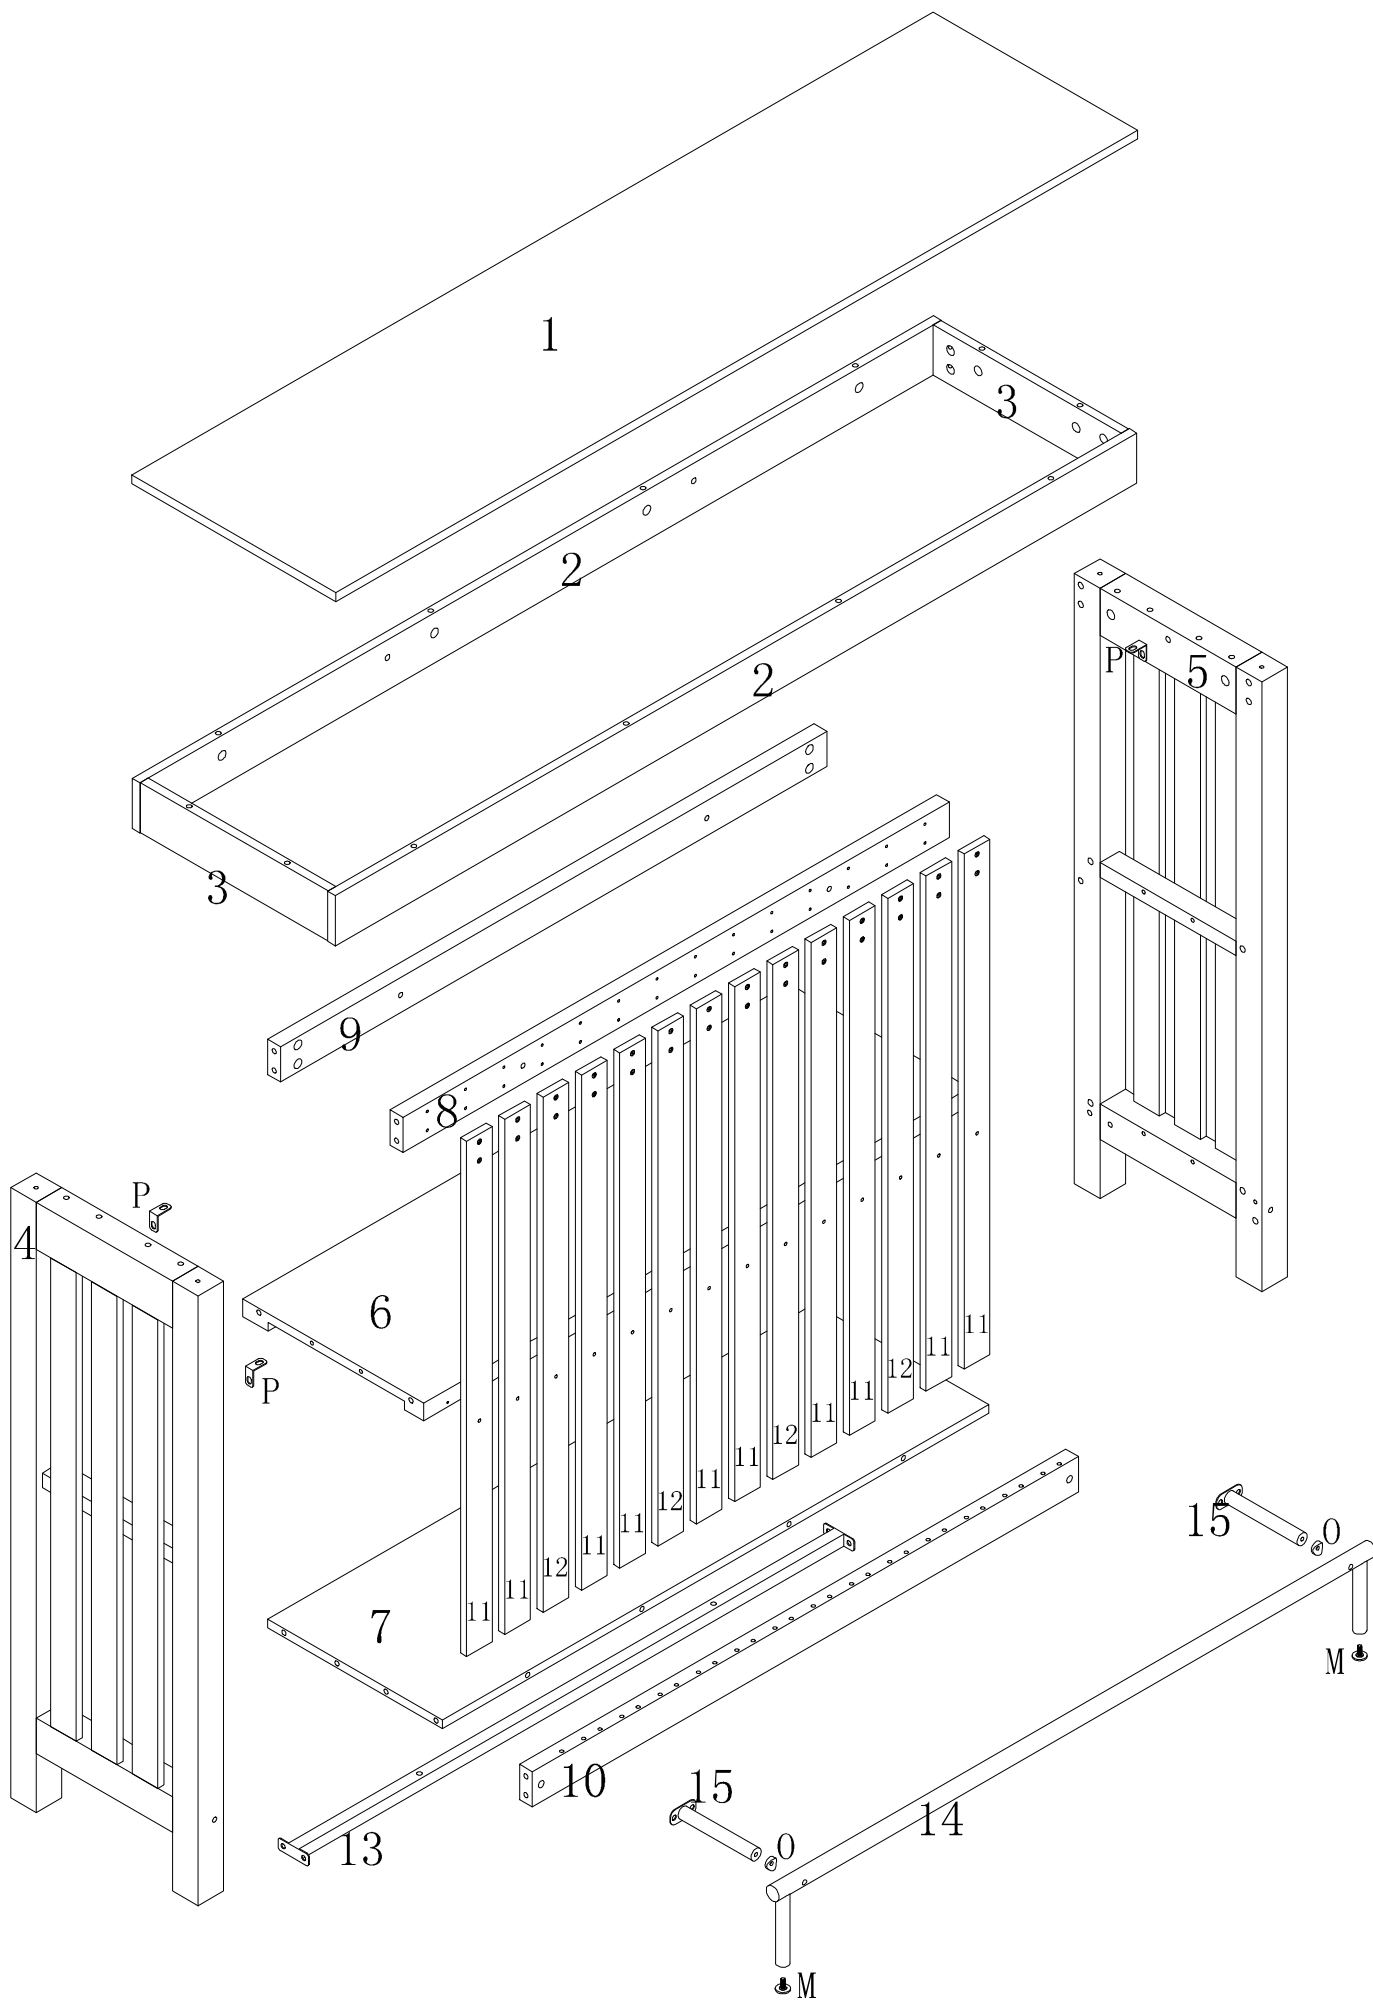


Assembling the unit with camlocks and wood dowels



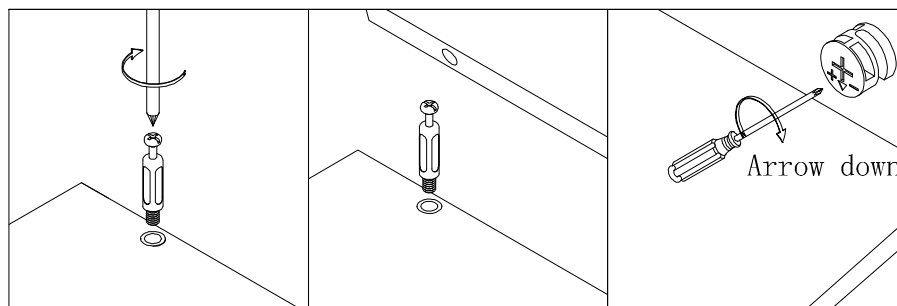


Assembly instructions




step 1

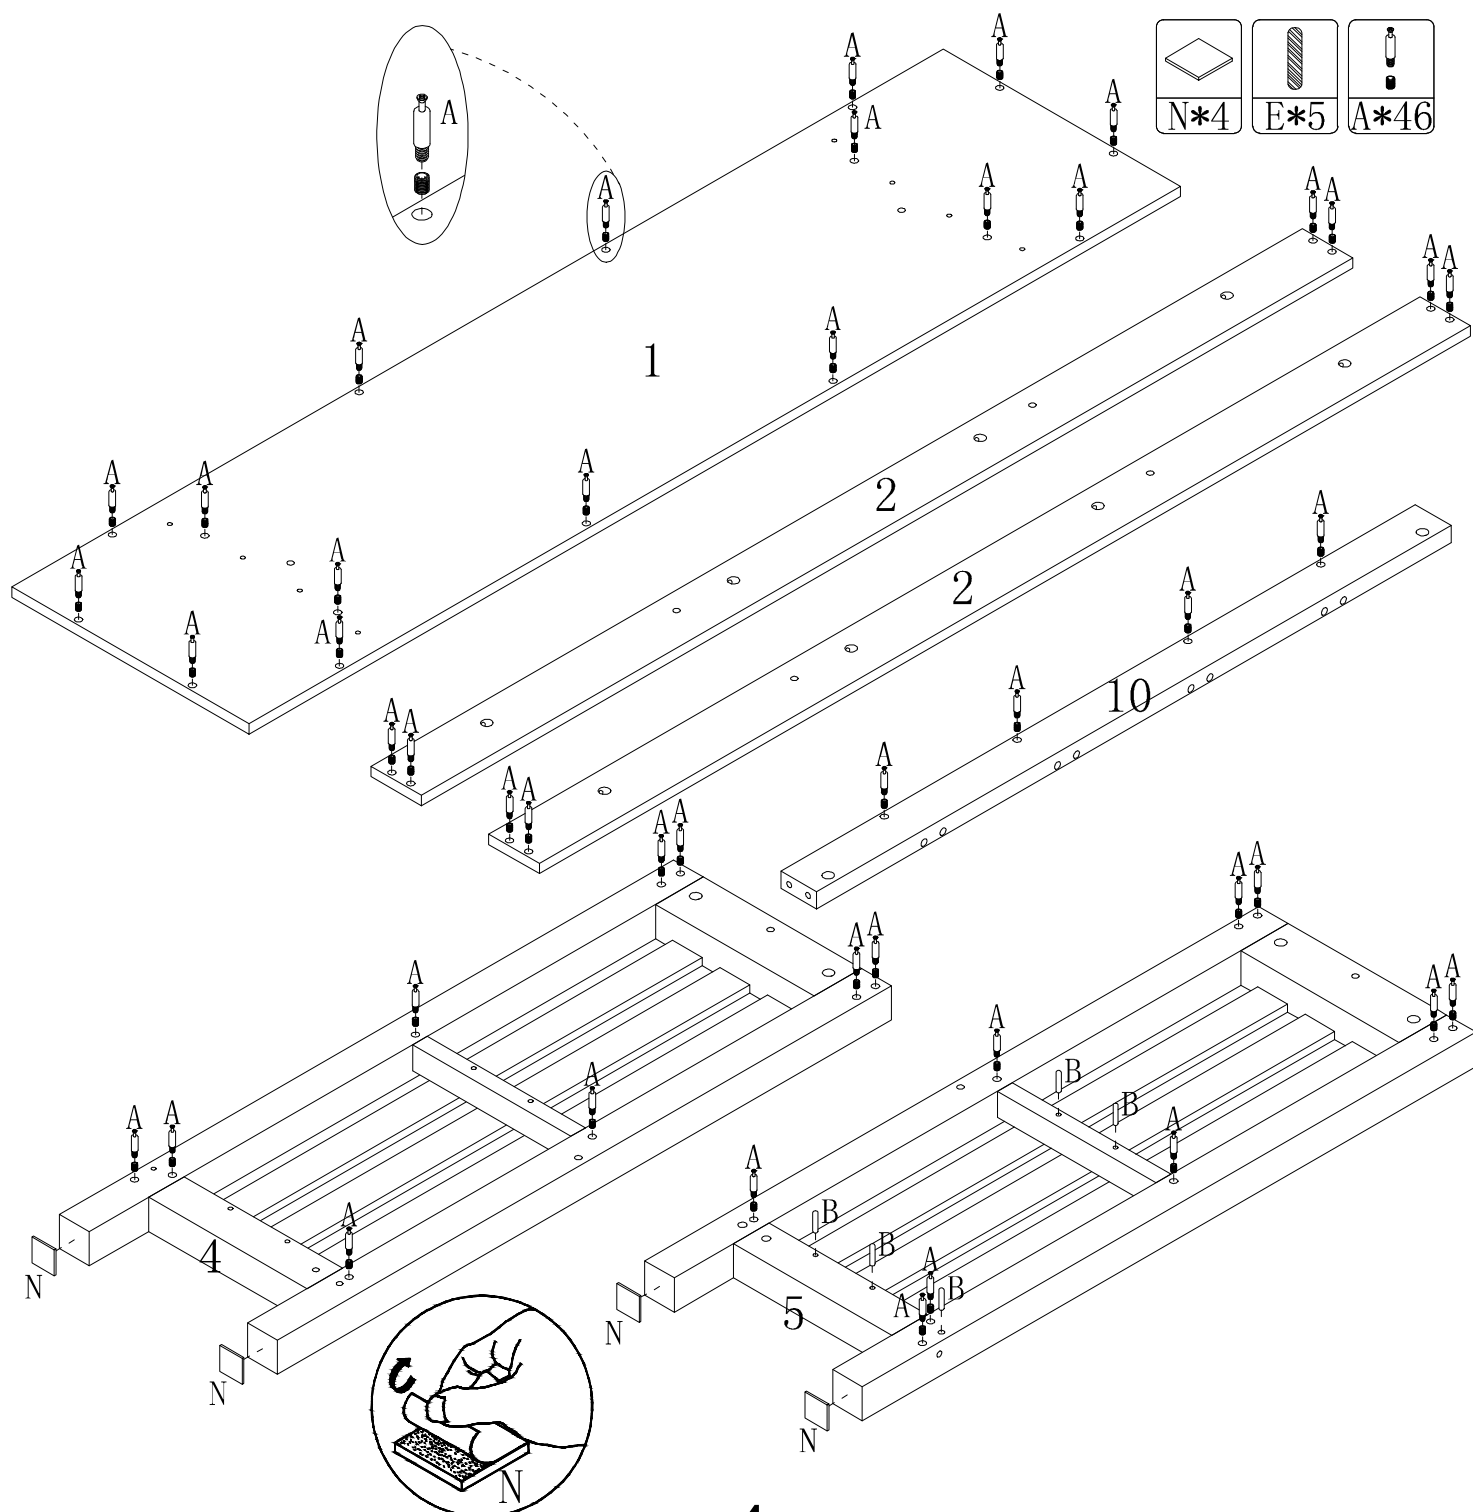


step 2

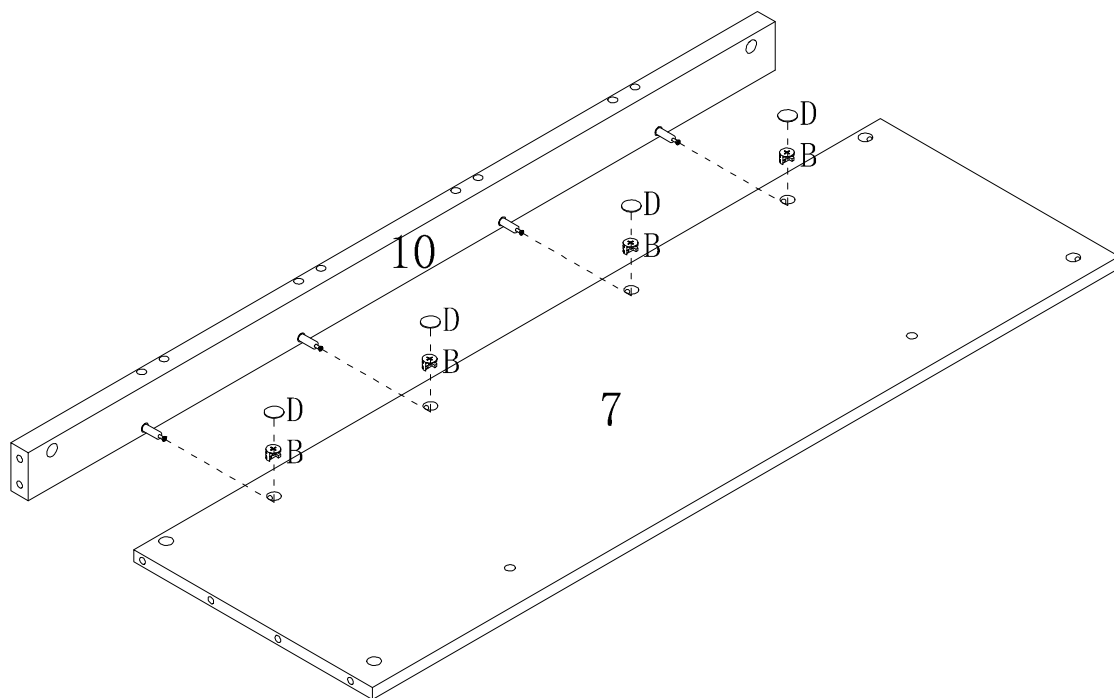


step 3

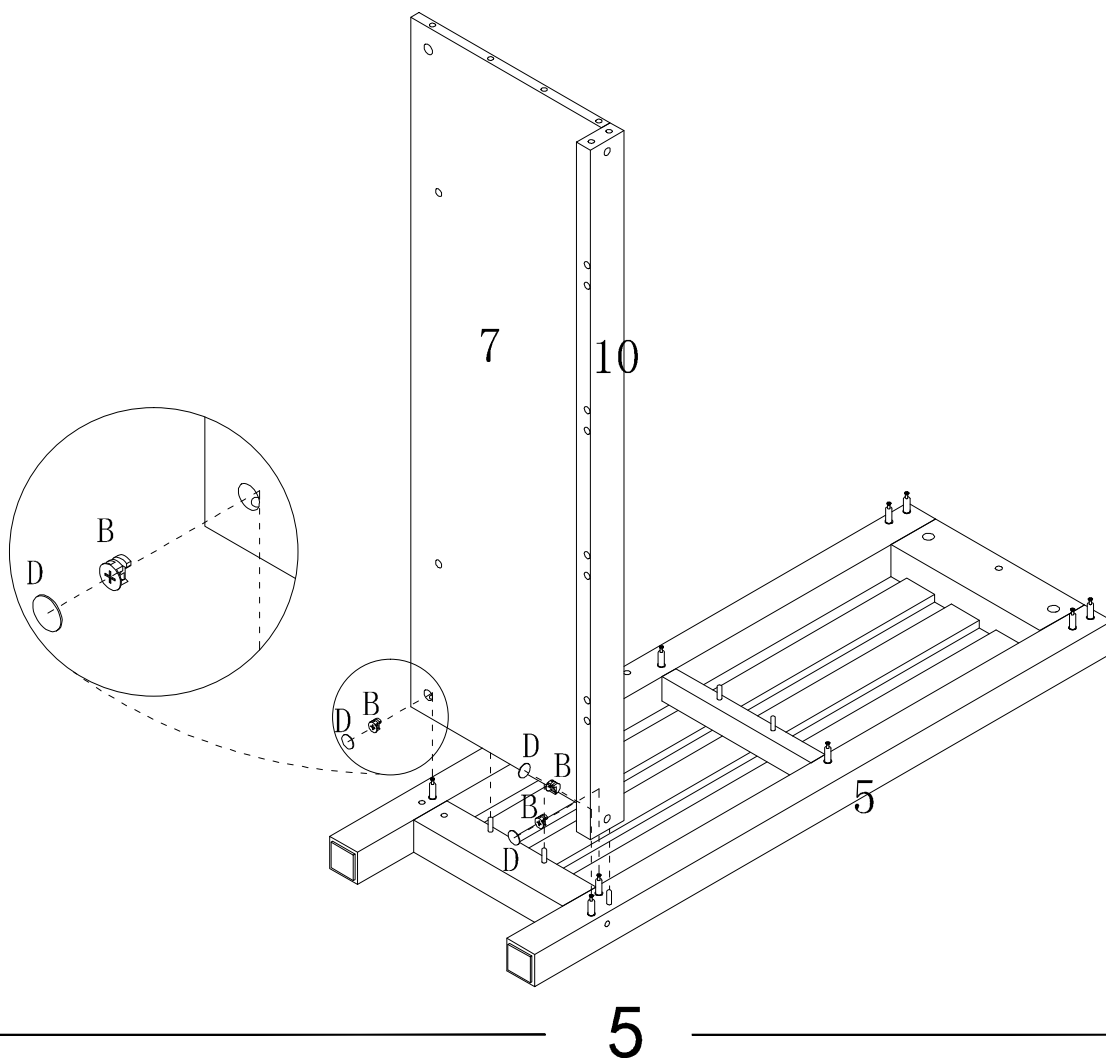






step 4

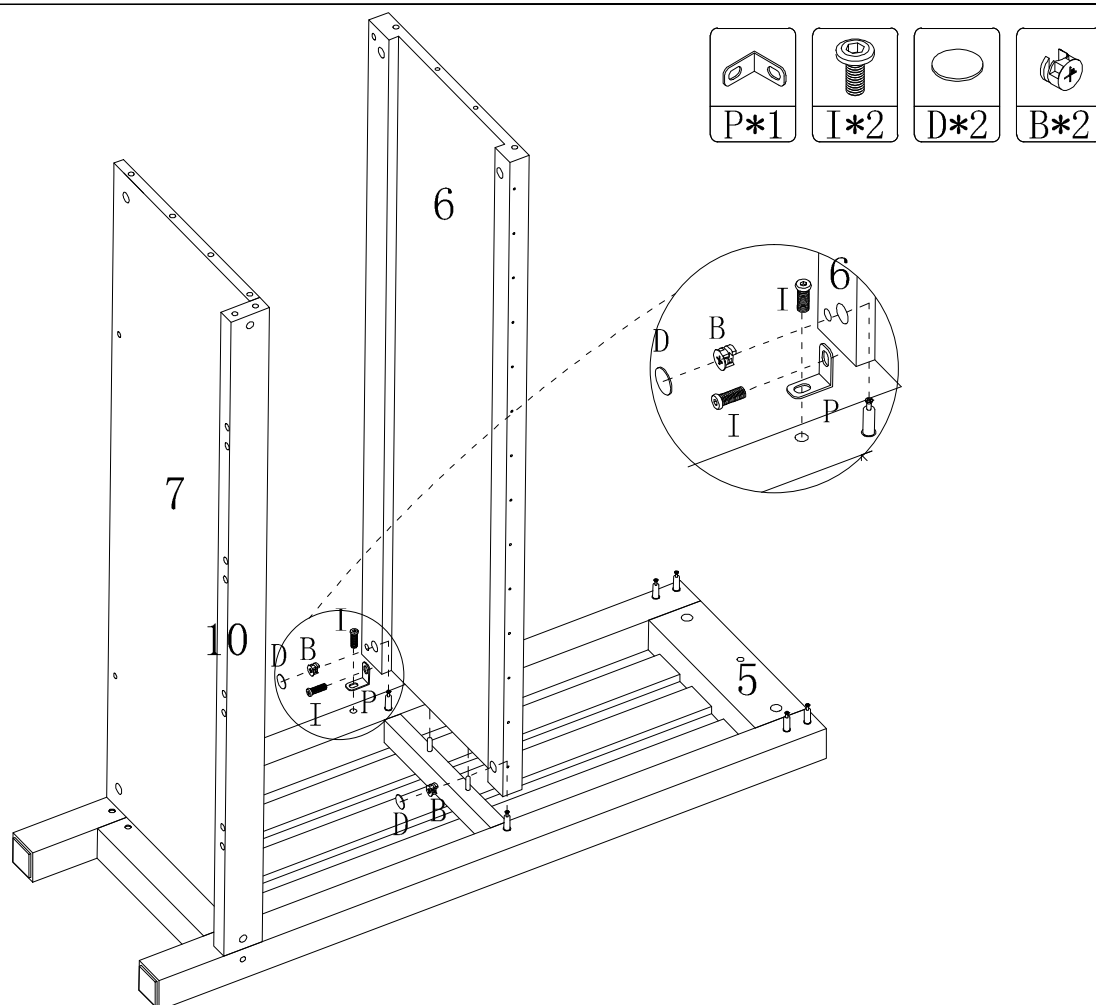



step 5

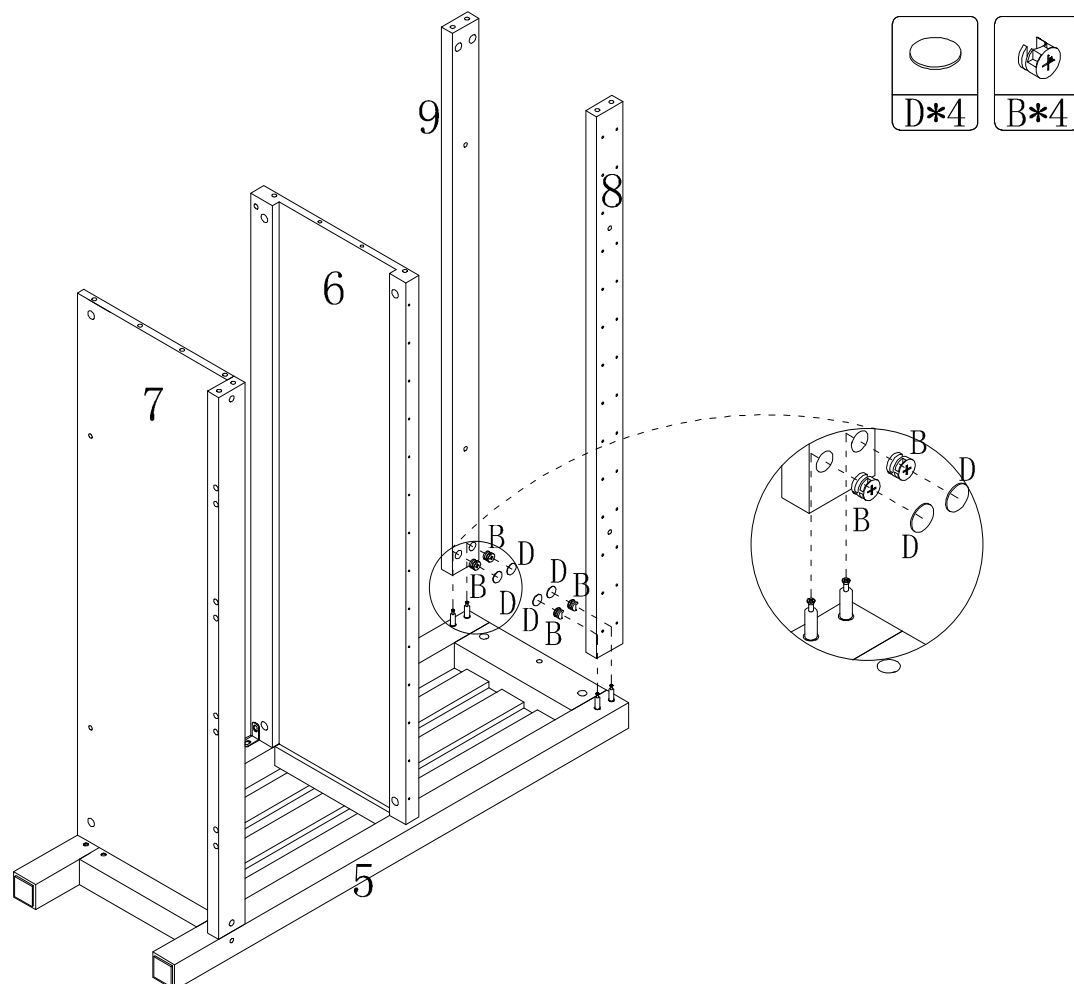


step 6

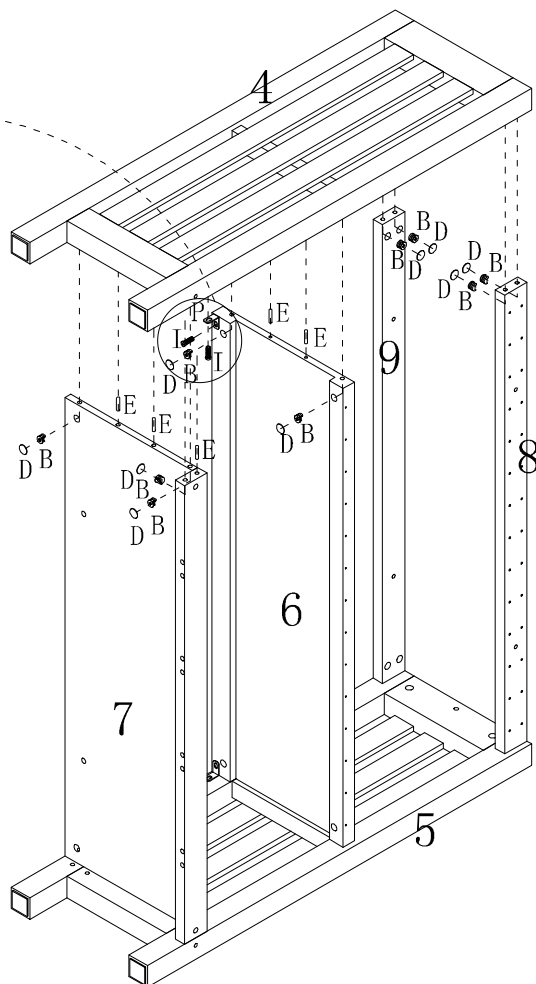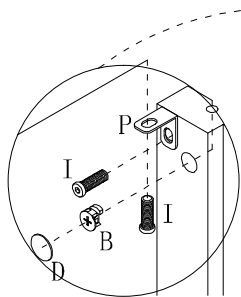


step 7

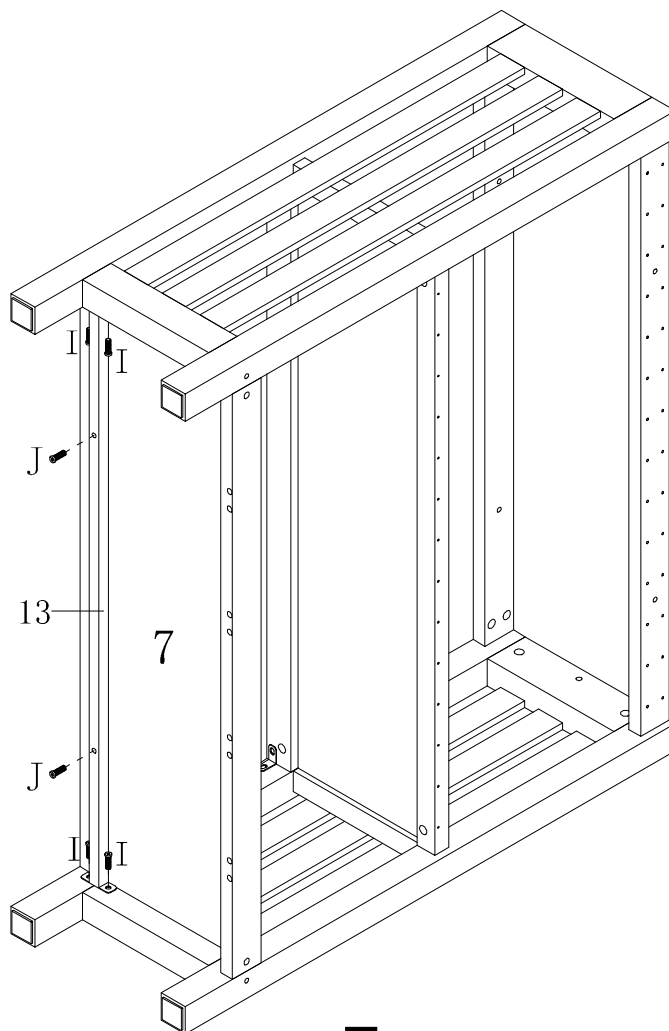


step 8

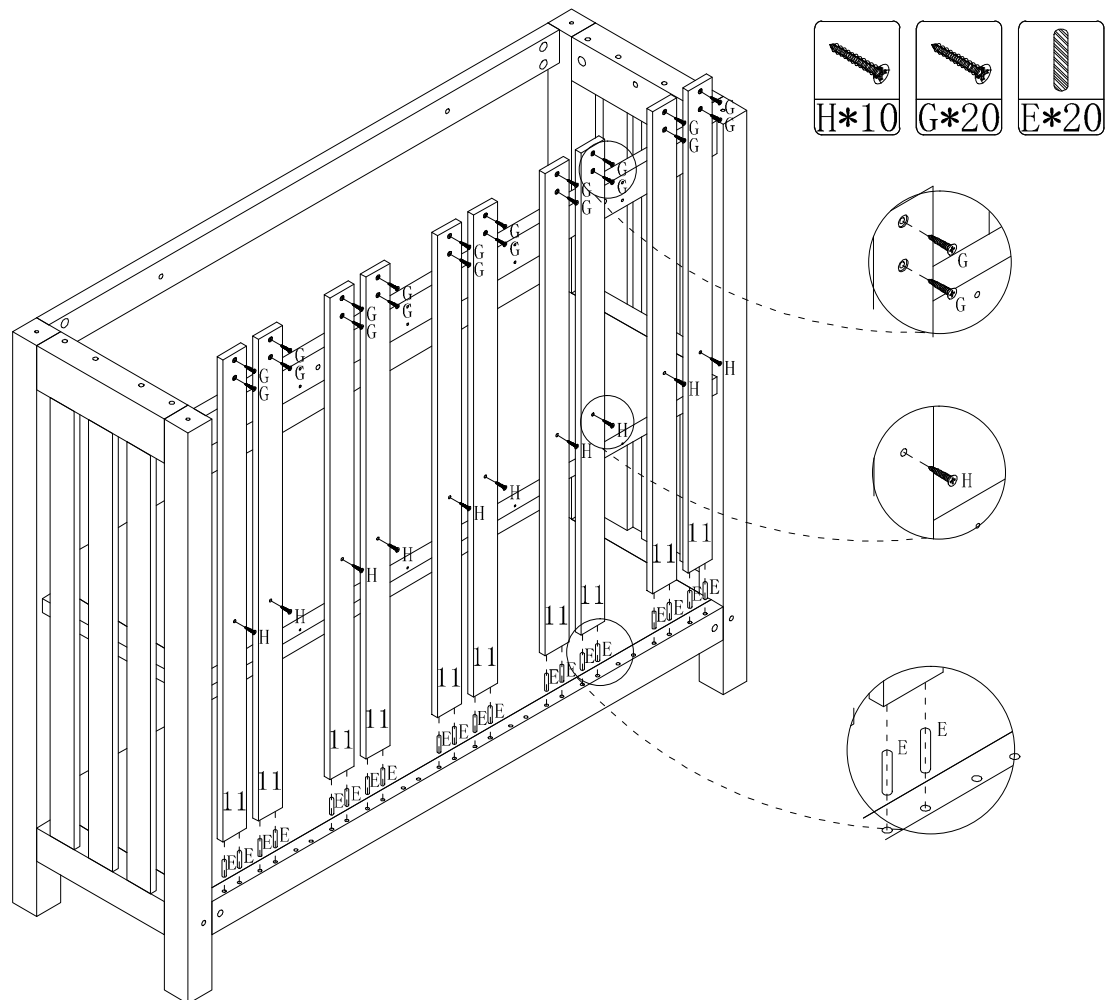


step 9

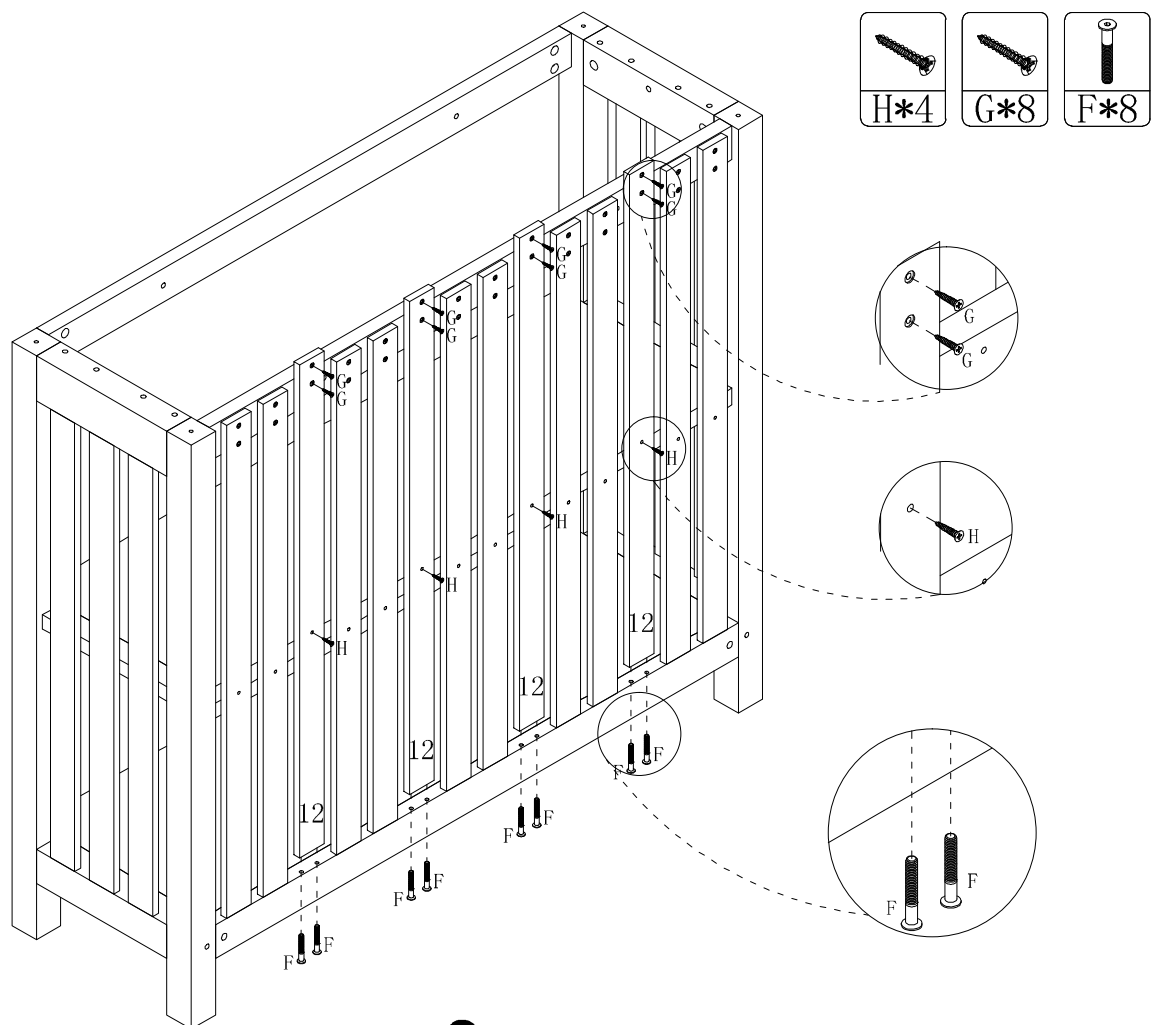



step 10

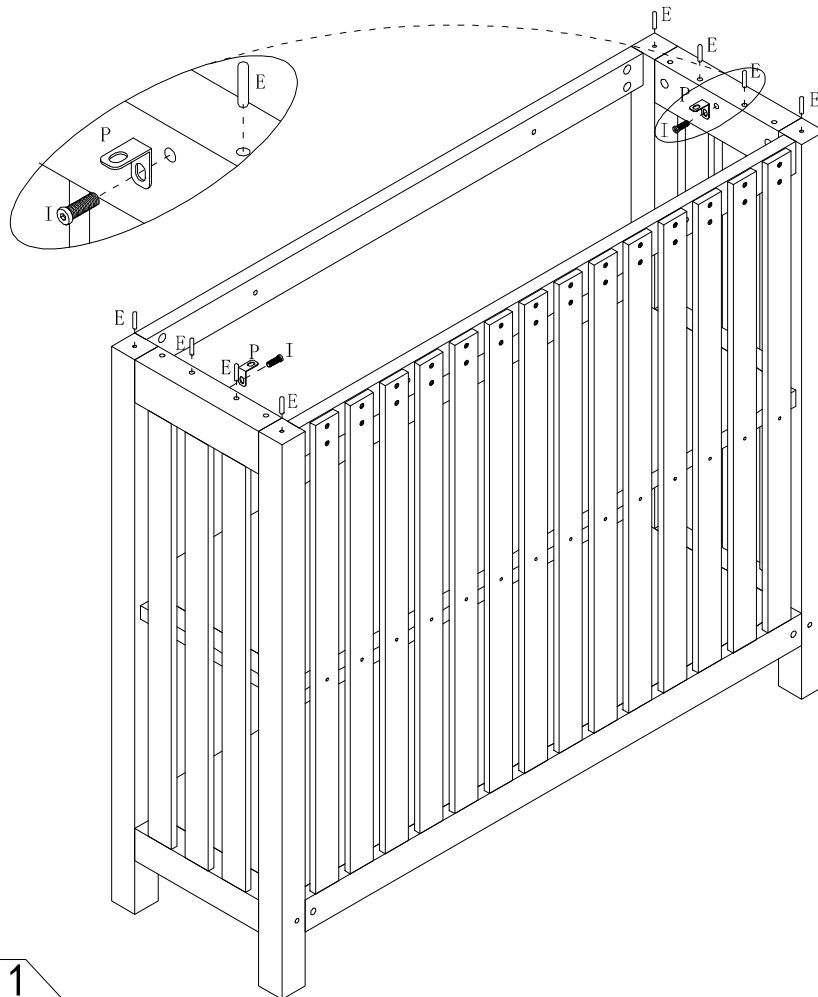







step 11

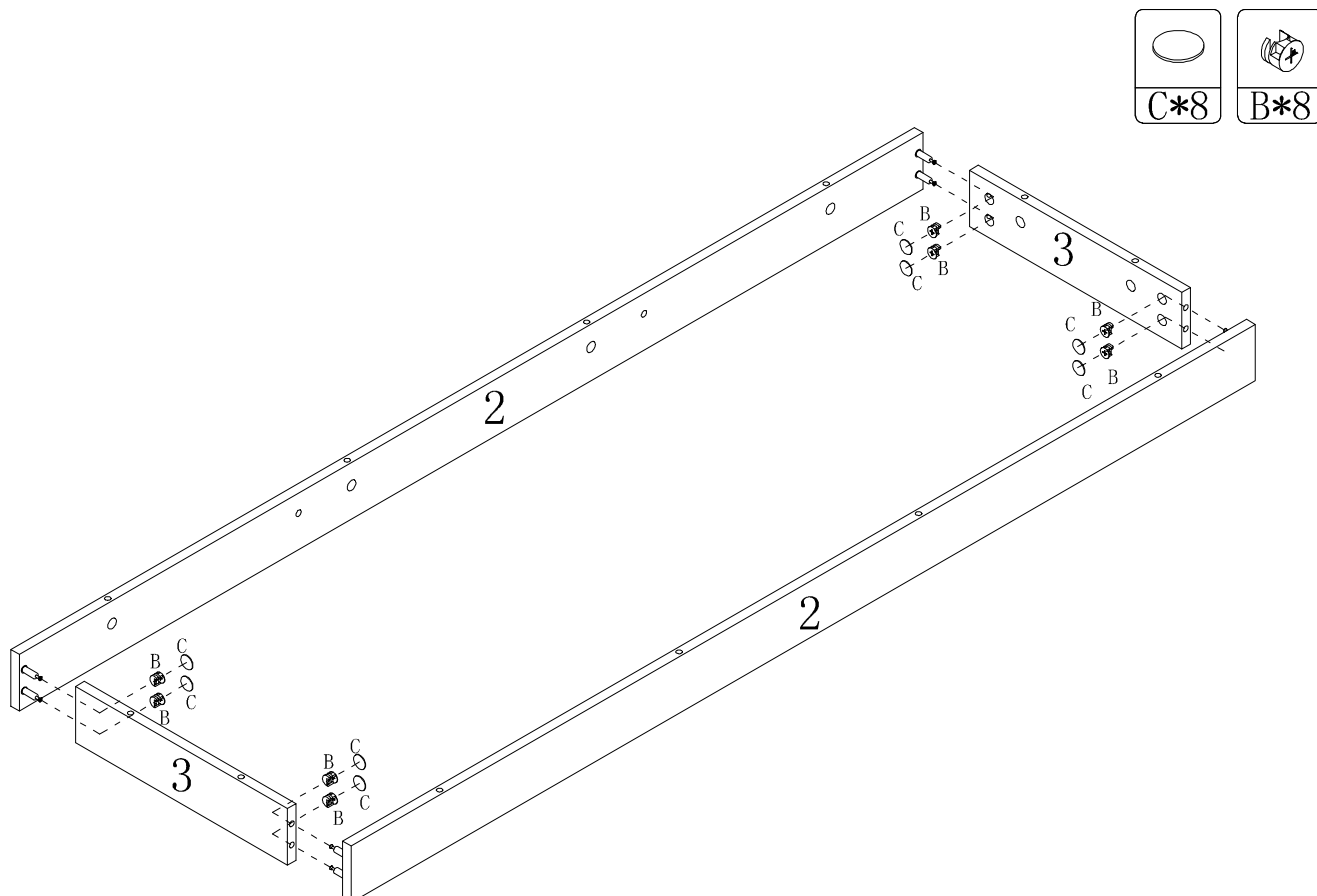

step 12

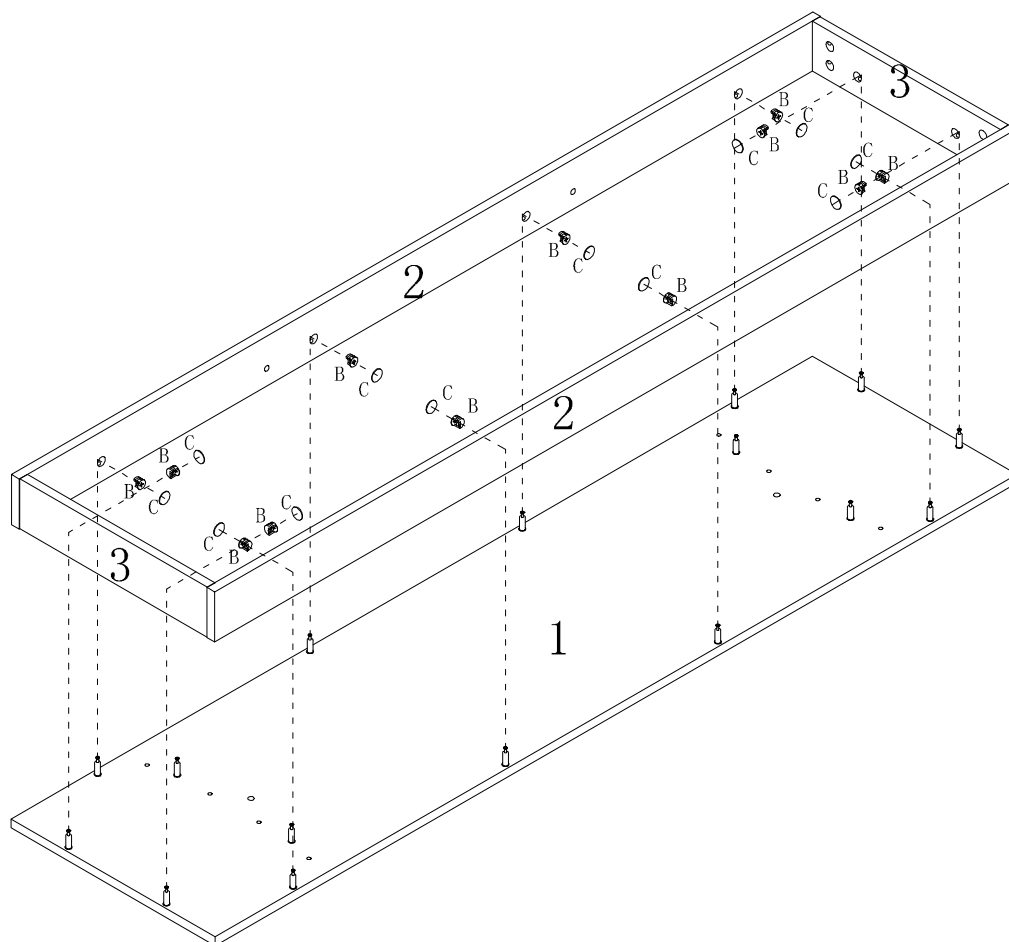

step 13

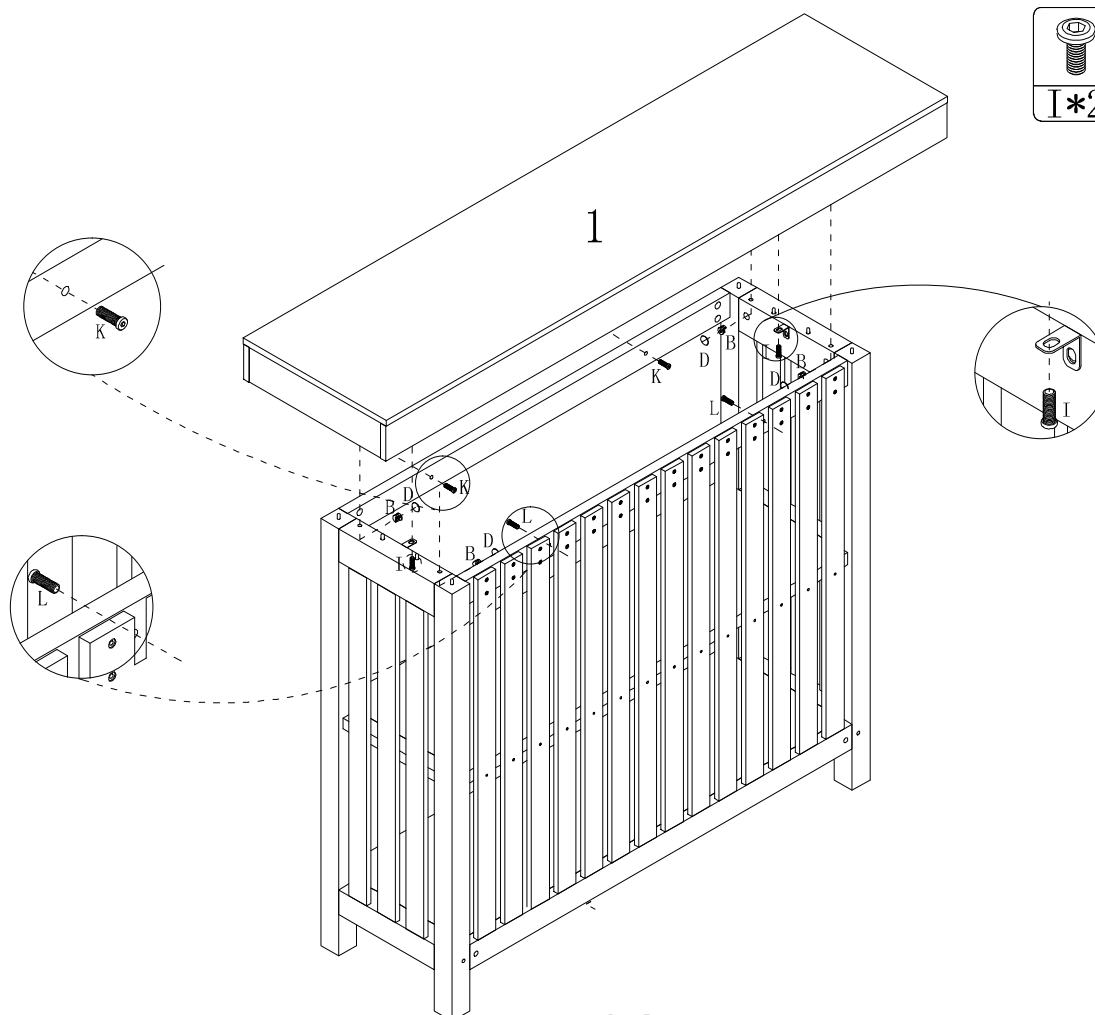

GARVEE
support@garvee.com