
Product Assembly Instructions

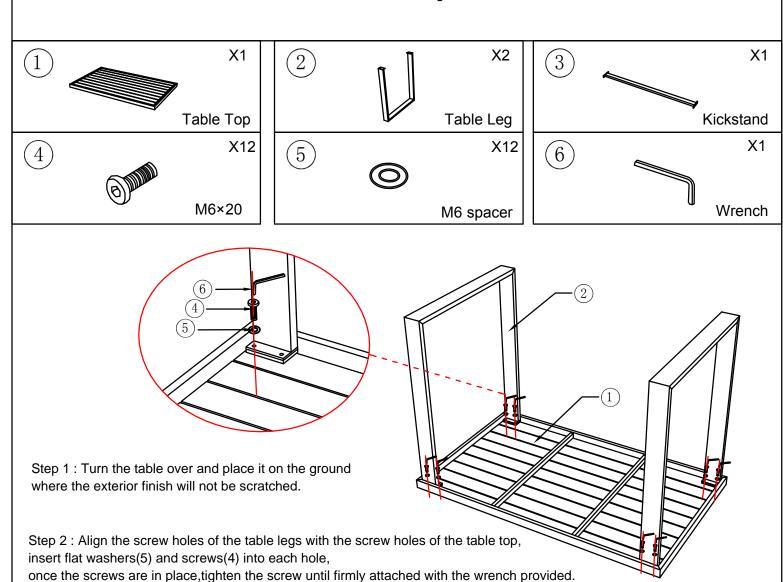

Step 3: Insert the flat washer (5) and screw (4) into each hole, and then install the Kickstand.

