

KINCAID

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com
phone :828-728-3261.

ASSEMBLY INSTRUCTION

161-622 Kirkman Upholstered Back Side Chair

HARDWARE LIST


Item	Image	Description	Size	Quantity
A		Bolt	Ø5/16"*3-1/8"	4 PCS
B		Bolt	Ø5/16"*1-3/4"	1 PCS
C		Nut	Ø5/16"	4 PCS
D		Lock Washer	Ø5/16"	9 PCS
E		Flat Washer	Ø5/16"*19D	9 PCS
F		Allen Key	100*50*4mm	1 PC
G		Spanner Wrench	12MM	1 PC

PART LIST

Item	Description	Quantity
1	Chair Back	1 PC
2	Seat Frame	1 PC
3	Front Leg	2 PCS

IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children

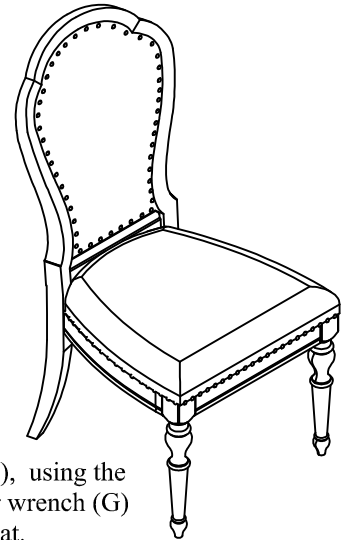

STEP 4. To ensure chair is stable, tighten bolts (A,B), using the allen key (F), tighten nuts (C) using spanner wrench (G) while applying downward pressure to the seat.

STEP 1

Place chair back (1) on a clean & padded surface then attach seat frame (2) to the chair back using bolt (B), lock washer (D), flat washer (E), and tighten with allen key (F). Important: Do not over-tighten.

STEP 2

Attach back assembly to the seat frame (2) using bolt (A), lock washer (D), flat washer (E), and tighten with allen key (F). Important: Do not over-tighten.

STEP 3

Attach the front leg (3) to the seat frame (2) using nut (C), lock washer (D), flat washer (E), and tighten with Spanner Wrench (G). Important: Do not over-tighten.

MADE IN VIETNAM