
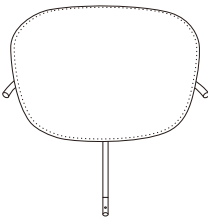
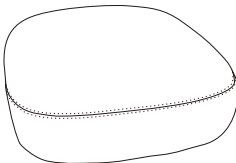
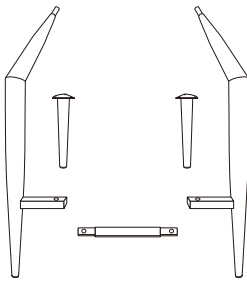



CALI BRONZE ASSEMBLY INSTRUCTIONS

A BACKREST x1	B SEAT x1	C LEGS x1	D SCREW x6 6X20MM	E SCREW x2 6X10MM	H SPANNER x1	
						
			F SCREW x3 6X50MM	G WAHSHER x9		
						


1

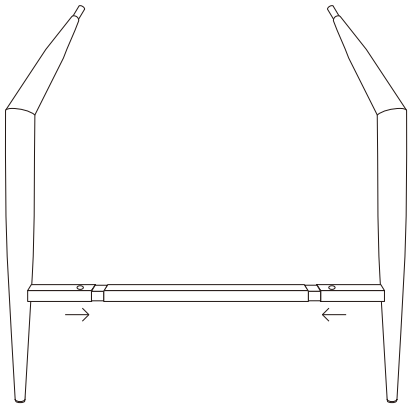


2

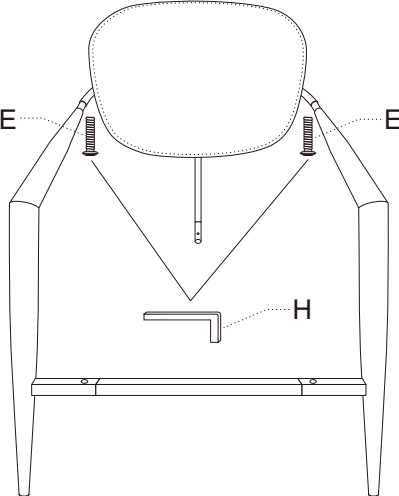


3

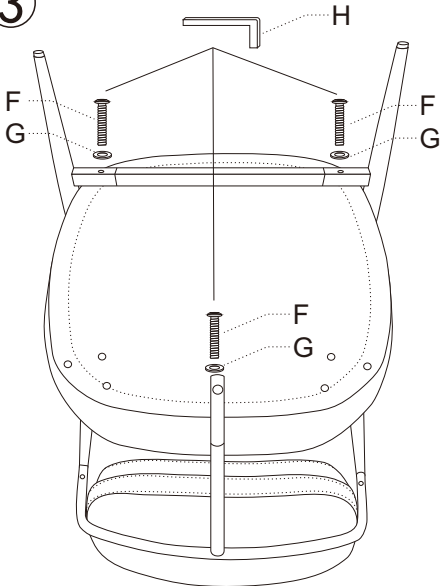

4

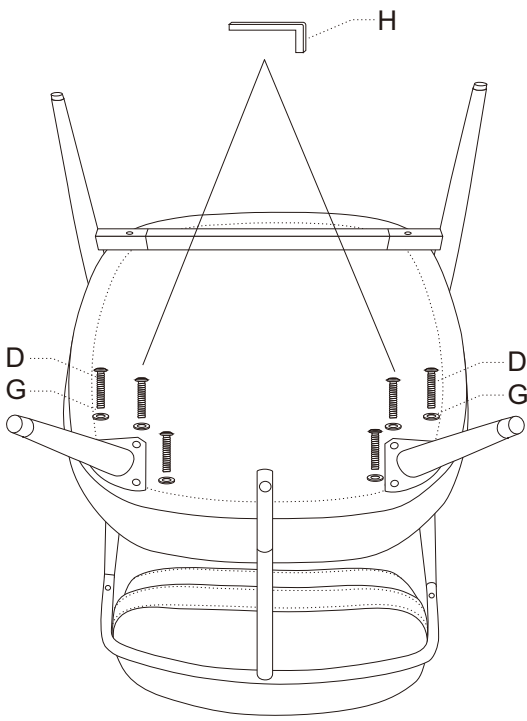

5

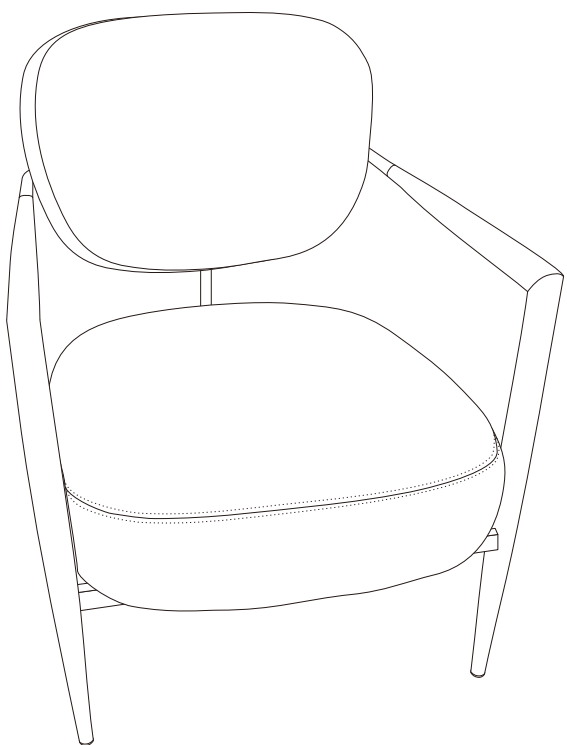

SERVICE TEAM: mffm_service@163.com