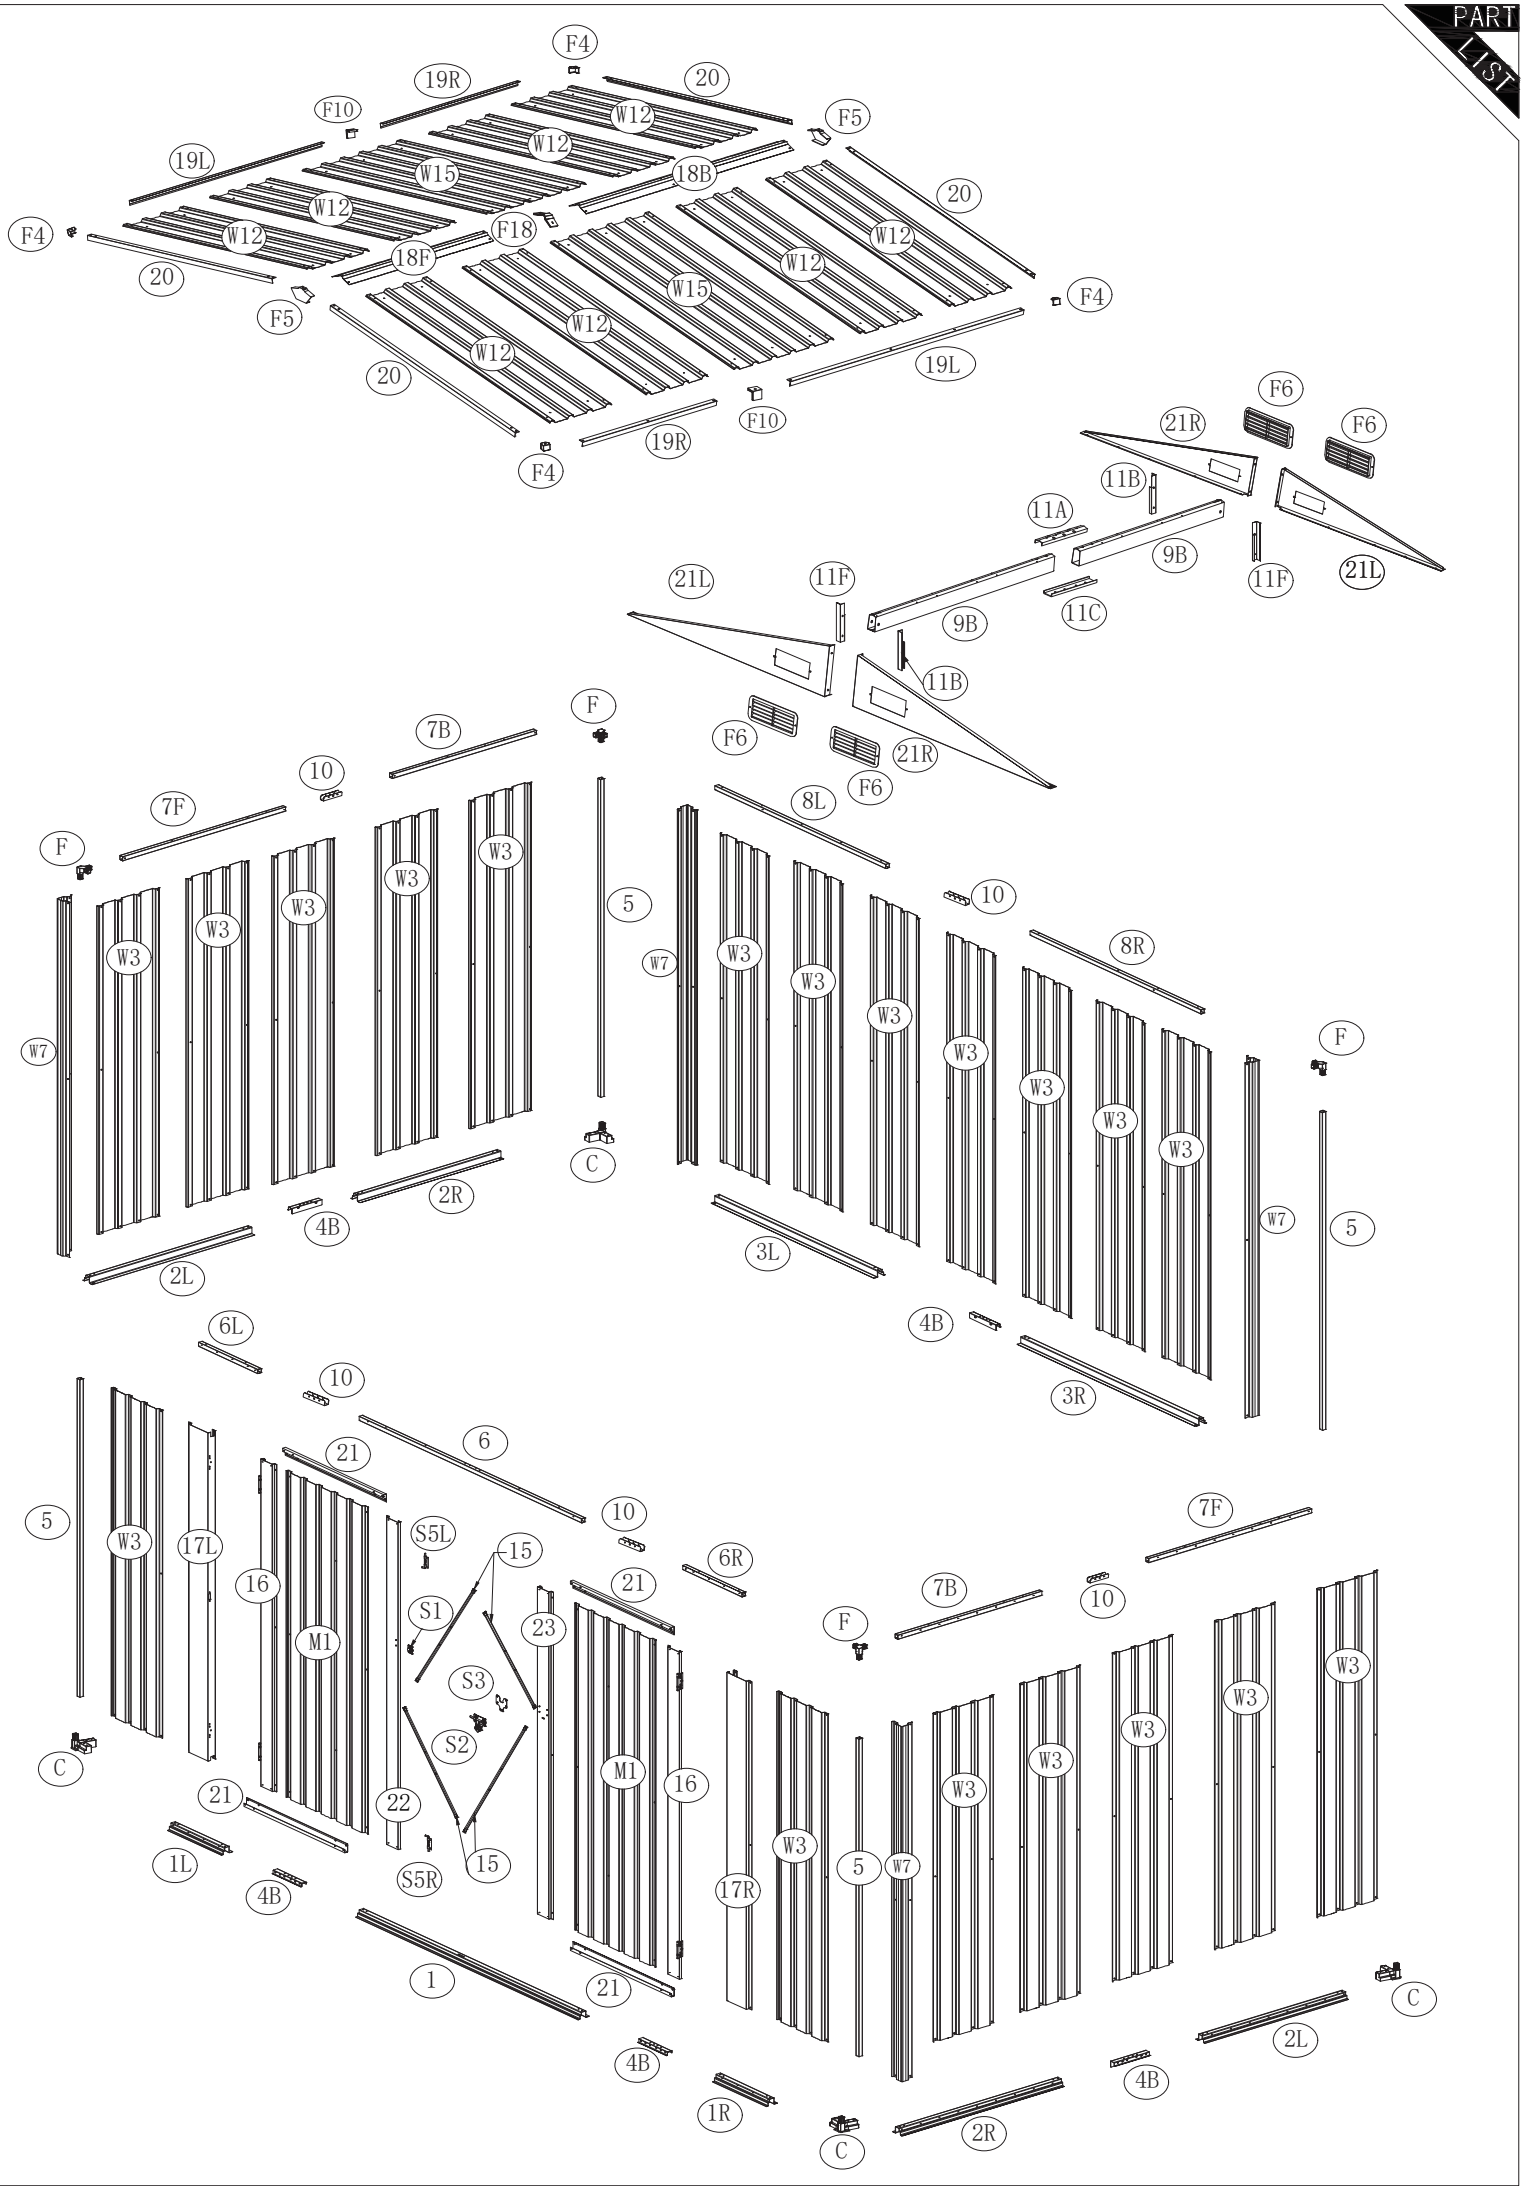
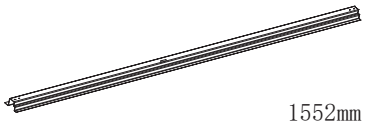


6x8 FT Outdoor
Lean to Storage Shed












Scan for Installation Video


















behoo_aftersales@outlook.com









F4
19R
20
F10
W12
F5
19L
W15
18B
F18
18F
F6
21R
11B
11A
9B
11F
21L
11C
F
7B
10
7F
8L
W3
5
W7
8R
2R
4B
2L
3L
3R
6L
6
21
17L
16
S5L
15
S1
23
S3
S2
M1
22
S5R
1L
1
17R
1R

NO.	PART.	Qty.
1L	 360.1mm	1
1	 1552mm	1
1R	 360.1mm	1
2L	 815.1mm	2
2R	 815.1mm	2
3L	 1136.1mm	1
3R	 1136.1mm	1
4B	 200mm	5
5	 1510mm	4
6L	 340.3mm	1
6	 1605mm	1
6R	 340.3mm	1
7F	 821.7mm	2
7B	 821.7mm	2

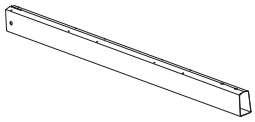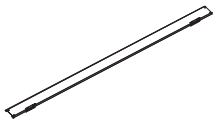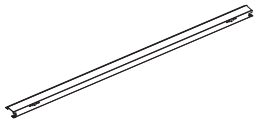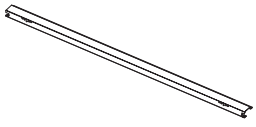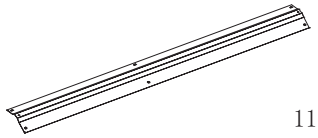NO.	PART.	Qty.
8L	 1142.8mm	1
8R	 1142.8mm	1
9B	 865mm	2
10		5
11A	 240mm	1
11C	 240mm	1
11F	 230mm	2
11B	 230mm	2
15	 940.9mm	4
16	 1555mm	2
17L	 1560mm	1
17R	 1560mm	1
18F	 638mm	1
18B	 1168mm	1

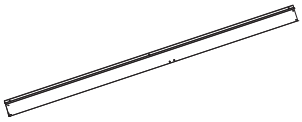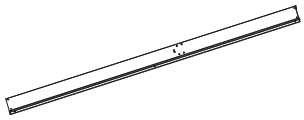NO.	PART.	Qty.
19L	 1168mm	2
19R	 638mm	2
20	 1263.5mm	4
21	 705mm	4
21L		2
21R		2
22	 1555mm	1
23	 1555mm	1
W3	 1560mm	19
W7	 1560mm	4
W12	 1255.5mm	8
W15	 1255.5mm	2
M1	 1553mm	2
C		4

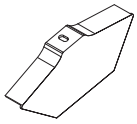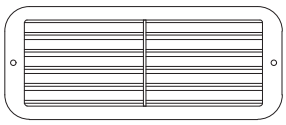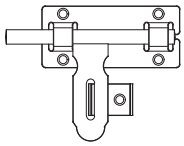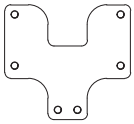NO.	PART.	Qty.
F		4
F4		4
F5		2
F6		4
F7		94
F8		46
F9		2
F10		2
F18		1
S1		1
S2		1
S3		1
S4		328
S5L		1

NO.	PART.	Qty.
S5R		1
S6		64
S6A		10
S7		68
S8		8
S9		4
S12		1
S15		1
S35		1
Q17	 M6	6
Q20		6
Q26		1
Q37	 M6x45mm	2
Q58	 M6x75mm	4

NO.	PART.	Qty.

Before You Start

* Preparation: Assembly requires 2 people and takes about 2 - 3 hours. Please check all parts against the list before starting.

* Site Requirements: Install on a flat, hard surface. Leave at least 60cm (2 ft) of clearance around the shed for easy access.

* Safety First: Wear gloves throughout the process—metal edges are sharp. Ensure ladders are stable when working at heights.

* Pro Tip: During frame assembly, tighten screws to about 80% first. Fully tighten them only after the entire frame is squared up to prevent misaligned holes.


Step 1: Build the Base Frame

NO.	PART.	Qty.
1L	 360.1mm	1
1	 1552mm	1
1R	 360.1mm	1
4B	 200mm	2
S4		8

NO.	PART.	Qty.
2L	 815.1mm	2
2R	 815.1mm	2
4B	 200mm	2
S4		8


Step 1: Build the Base Frame

NO.	PART.	Qty.
3L	1136.1mm	1
3R	1136.1mm	1
4B	200mm	1
C		4
S4		20

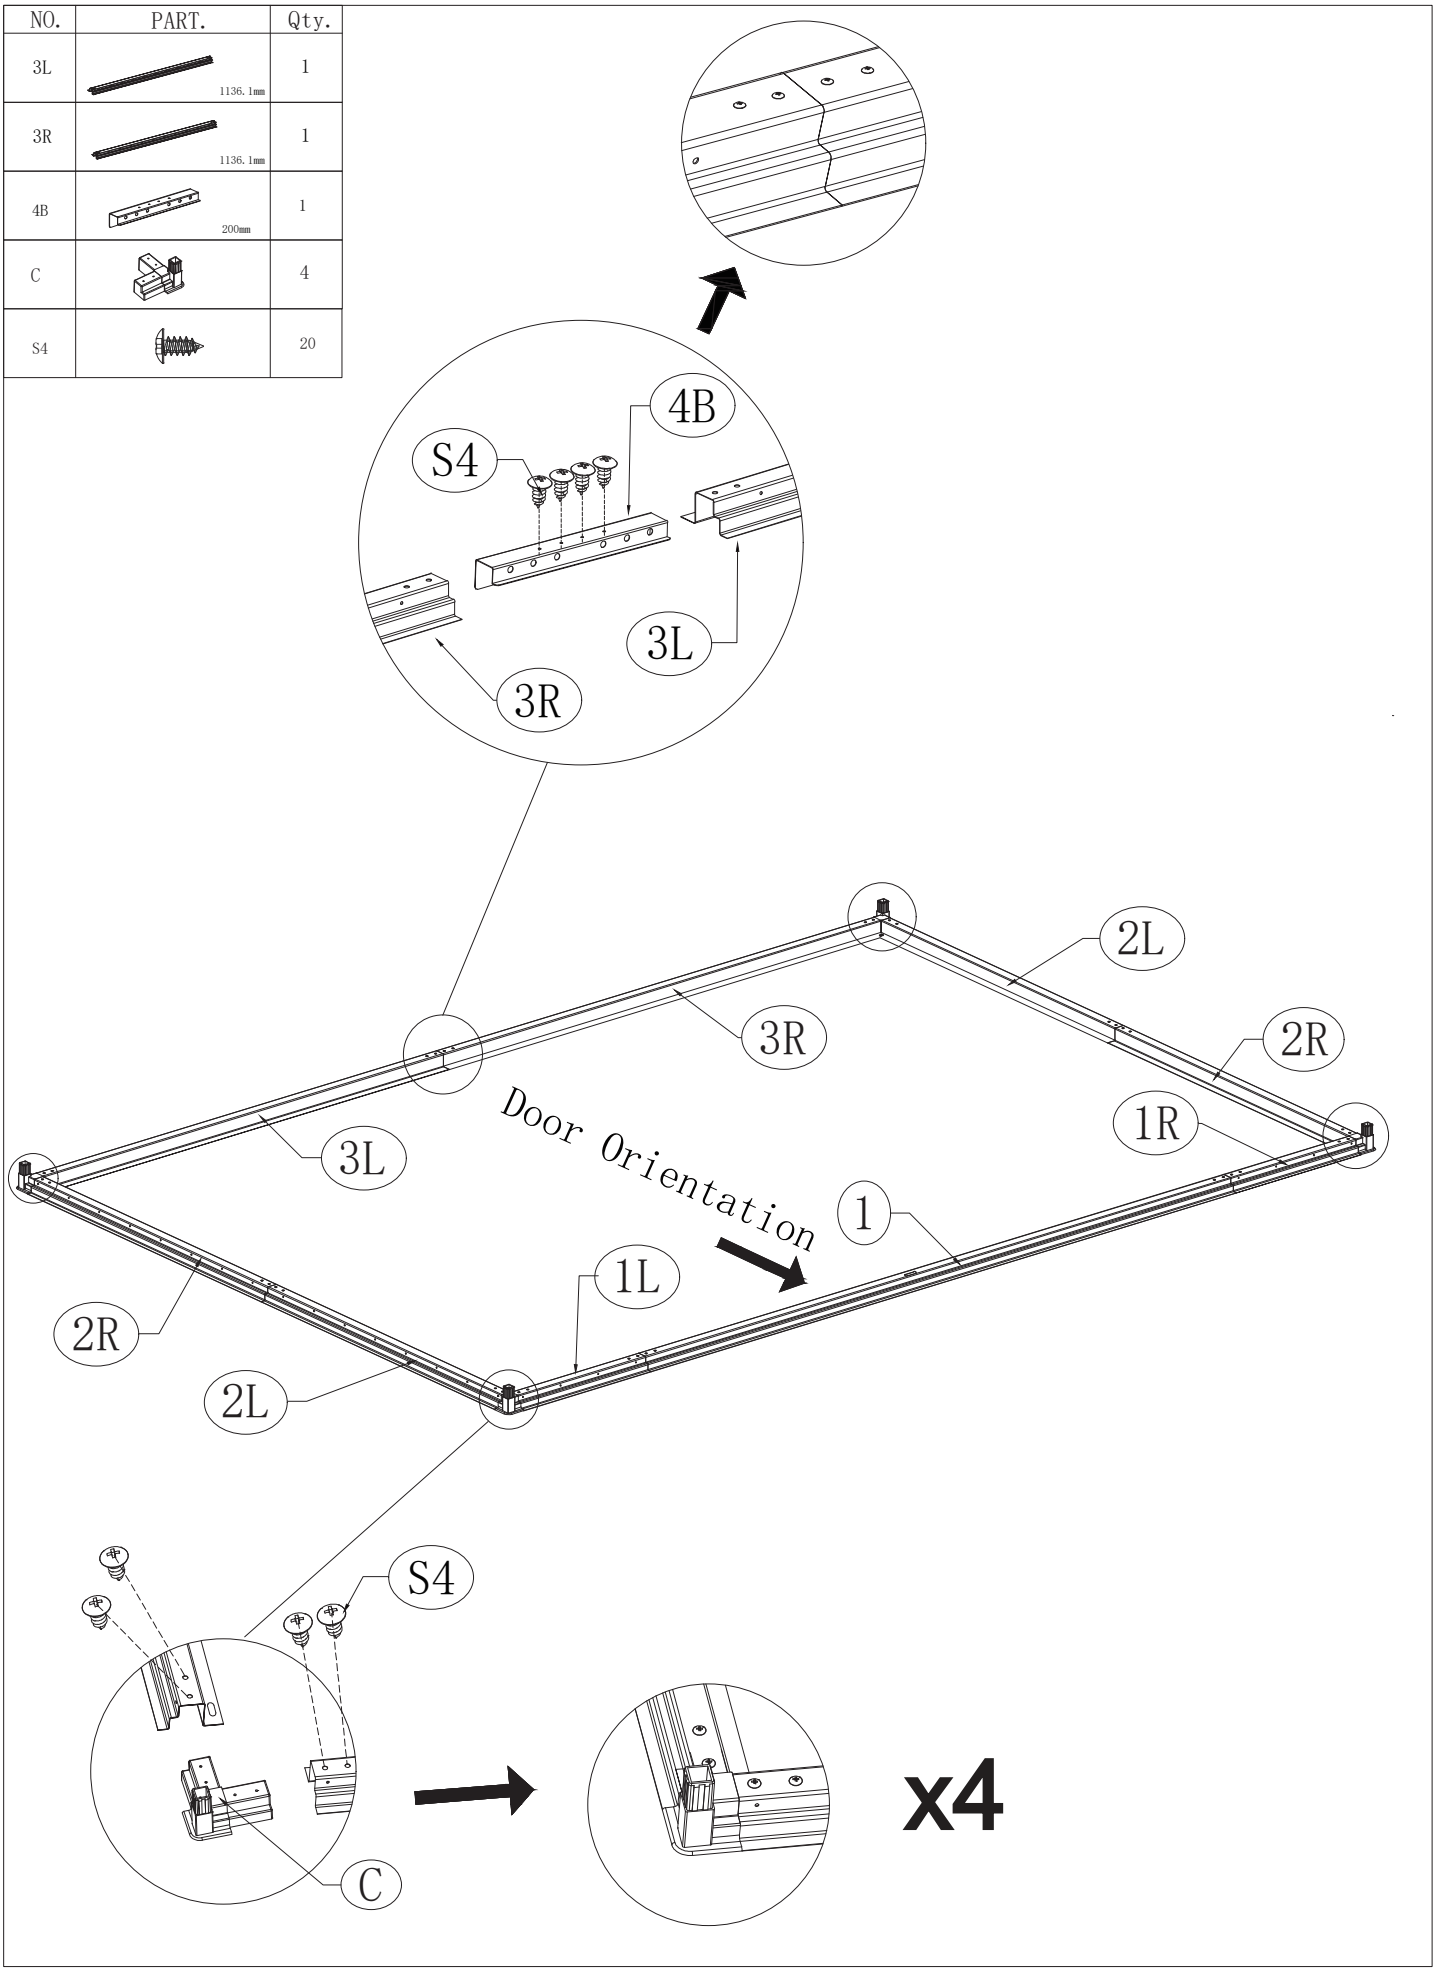

Step 2: Install Posts & Top Frame

NO.	PART.	Qty.
5	 1510mm	4

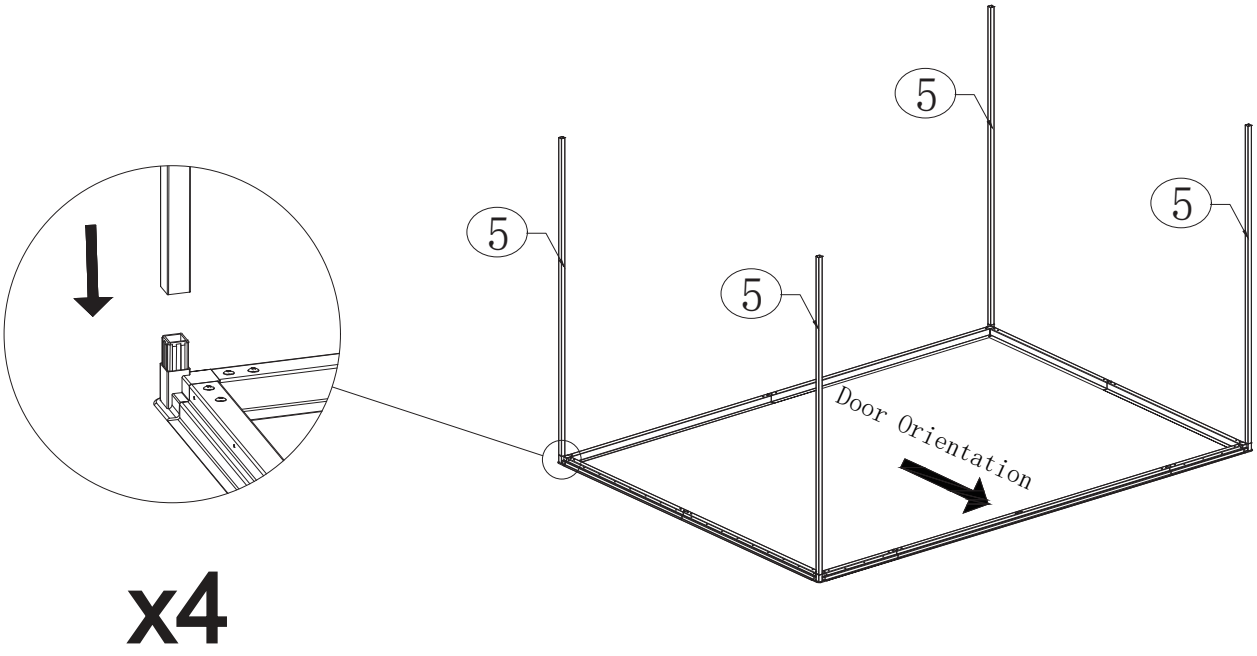


x4


NO.	PART.	Qty.
6L	340.3mm	1
6	 1605mm	1
6R	340.3mm	1
10		2
S4		8

Step 2: Install Posts & Top Frame

NO.	PART.	Qty.
7F	821.7mm	2
7B	821.7mm	2
10		2
S4		8

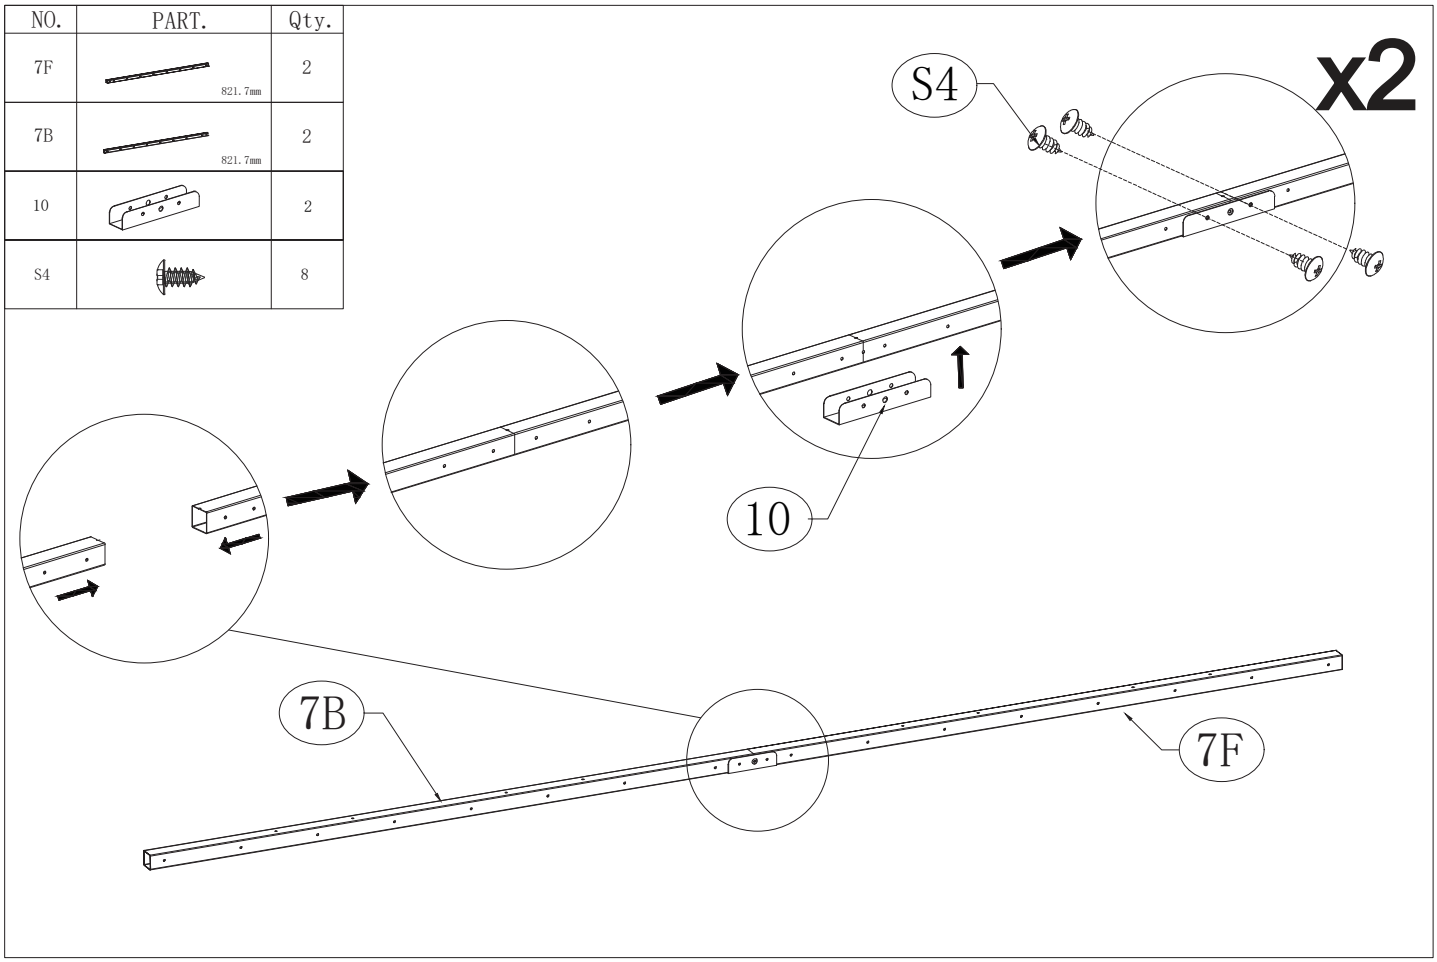


NO.	PART.	Qty.
8L	1142.8mm	1
8R	1142.8mm	1
10		1
S4		4

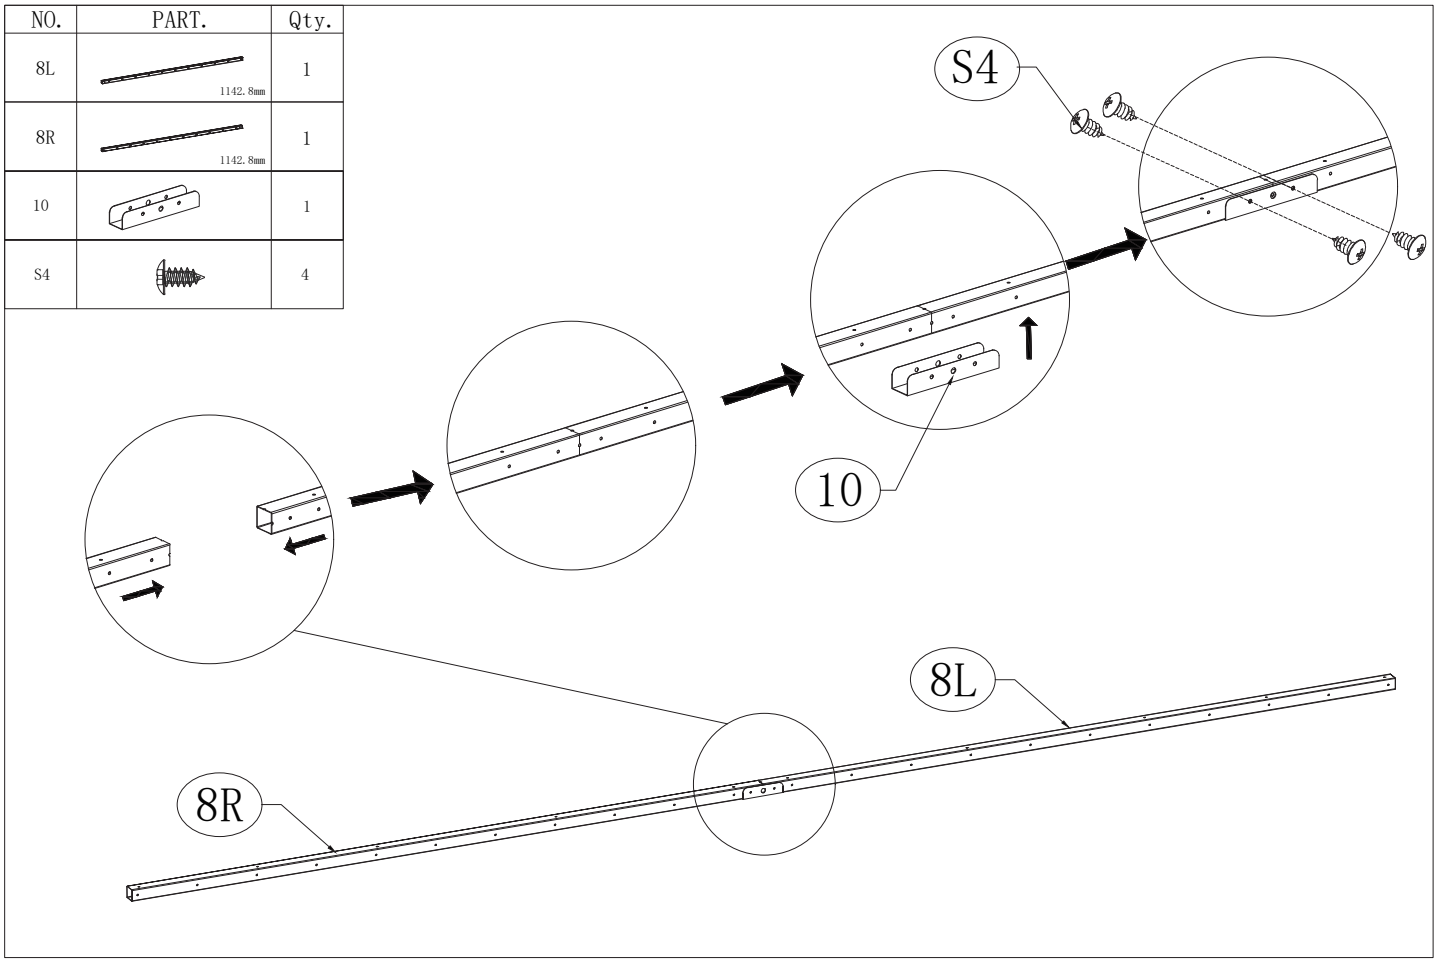


NO.	PART.	Qty.
F		4
S4		8

Step 3: Install the Side & Back Wall Panels


NO.	PART.	Qty.	NO.	PART.	Qty.
W3		5	S6		6
W7		2	S7		6
S4		32			


Tips: Use S6 screws and S7 nuts for the middle, and S4 screws for the top and bottom.


NO.	PART.	Qty.
W3		7
W7		1
S4		44
S6		8
S7		8

Tips: Use S6 screws and S7 nuts for the middle, and S4 screws for the top and bottom.

Step 3: Install the Side & Back Wall Panels


NO.	PART.	Qty.	NO.	PART.	Qty.
W3		5	S6		6
W7		1	S7		6
S4		32			

NO.	PART.	Qty.	NO.	PART.	Qty.	NO.	PART.	Qty.
W3		2	17L		1	S6		4
S4		28	17R		1	S7		4

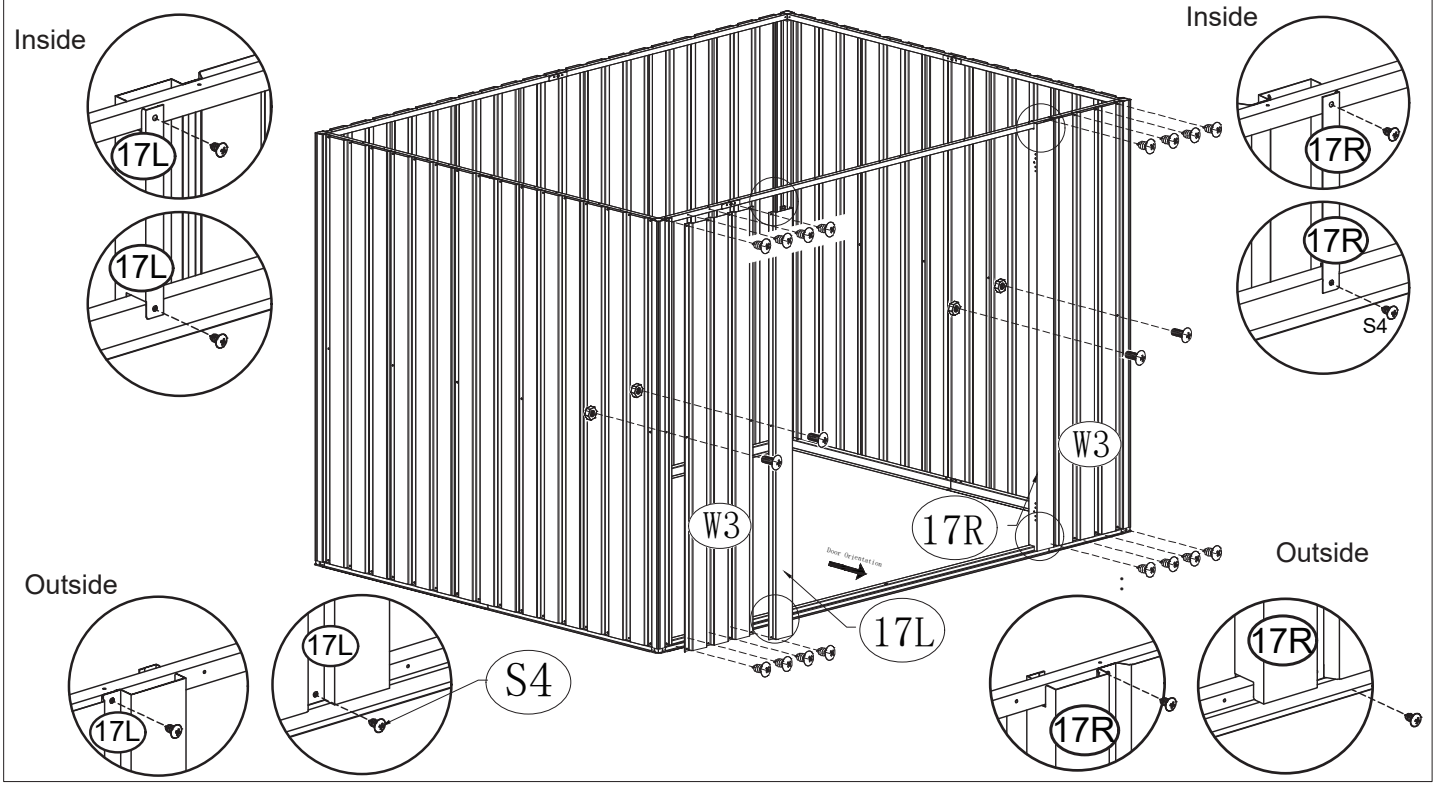


Step 4: Lay the Roof Panels

NO.	PART.	Qty.
11F		2
11B		2
21L		2
21R		2
S6		10
S7		10
F6		4

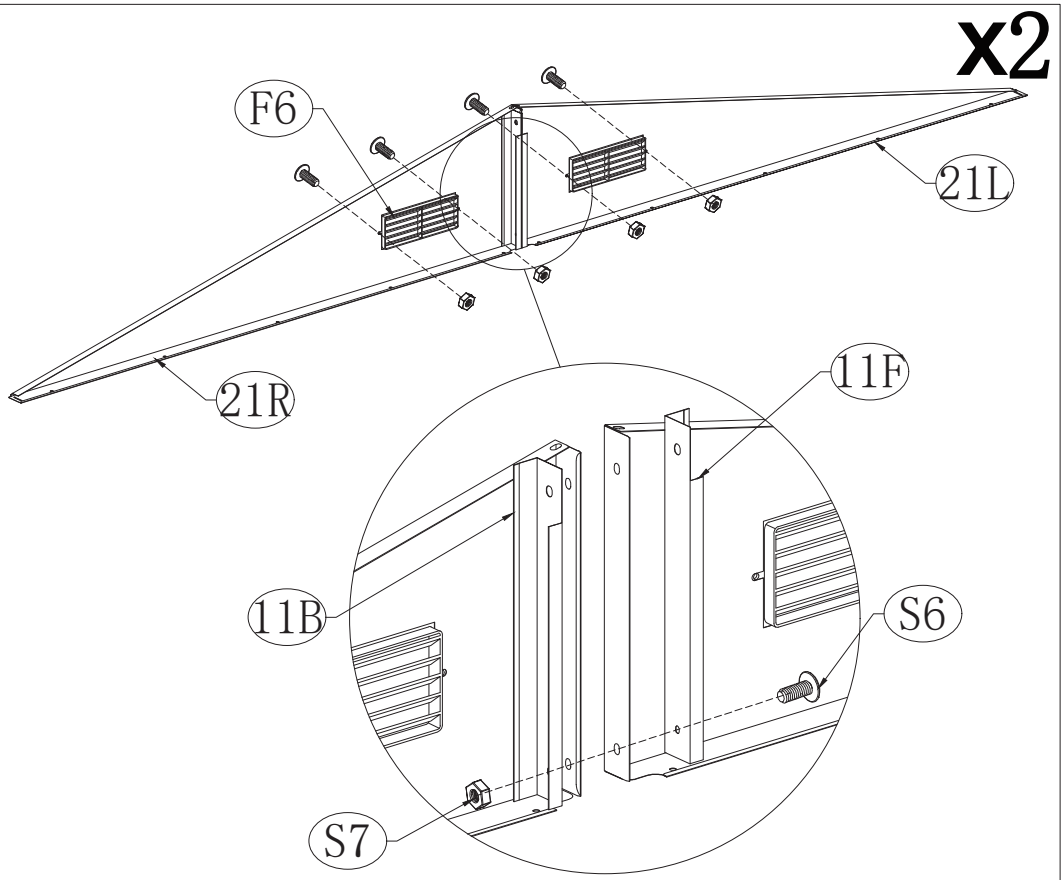


Use S4 for downward installation, and S6 with S7 for horizontal mounting.

NO.	PART.	Qty.
S4		20

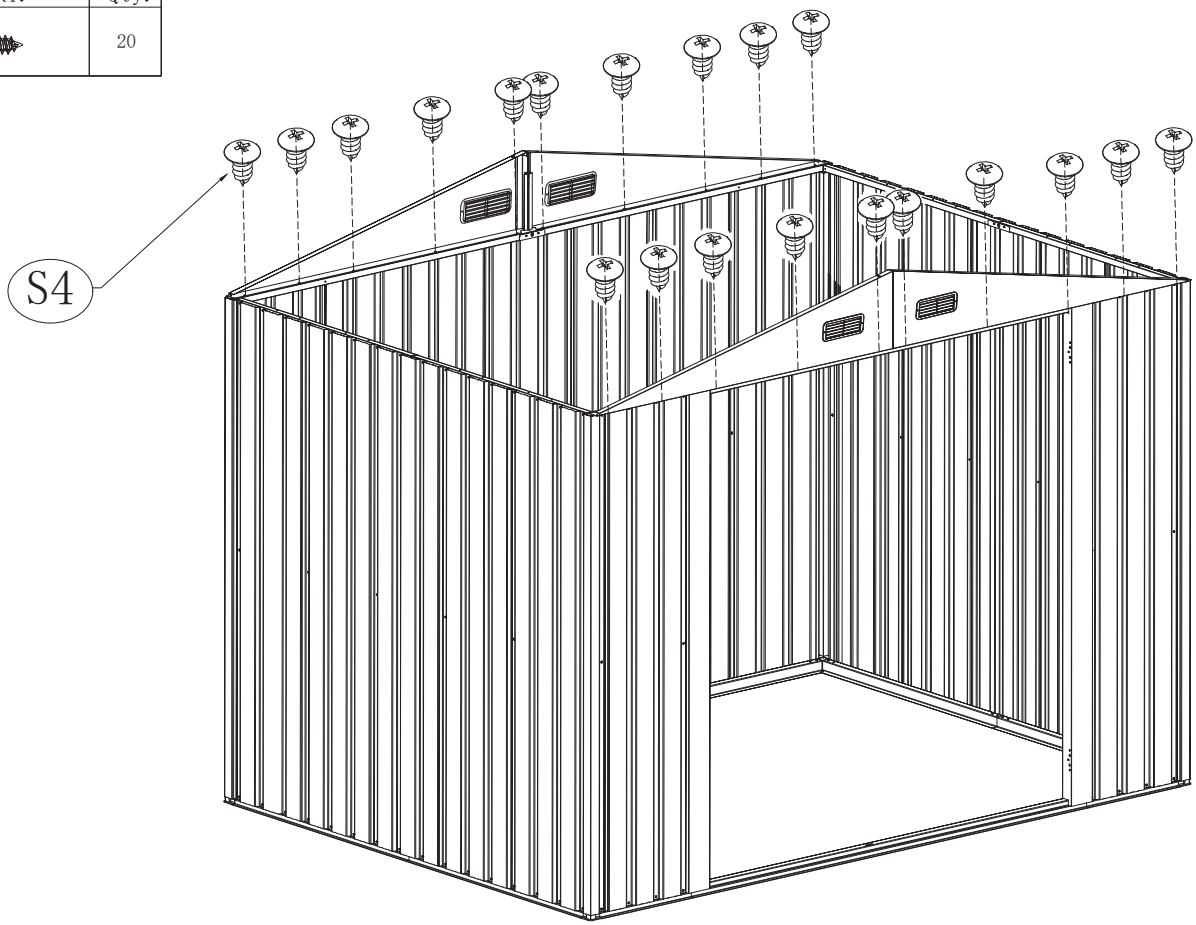


Step 4: Lay the Roof Panels

NO.	PART.	Qty.
9B	865mm	2
11A	240mm	1
11C	240mm	1
Q58	M6x75mm	4
Q17	M6	4
Q20		4

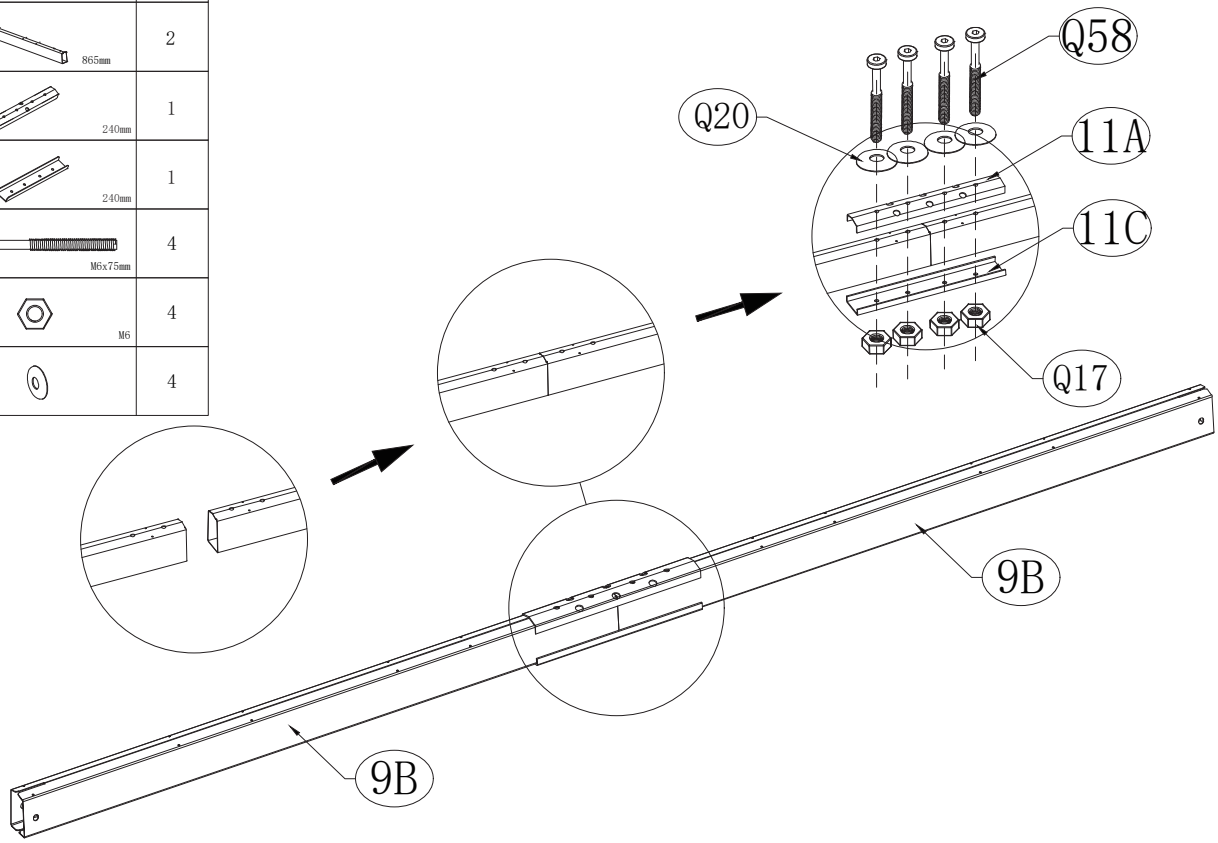


NO.	PART.	Qty.
Q37	M6x45mm	2
Q17	M6	2
Q20		2

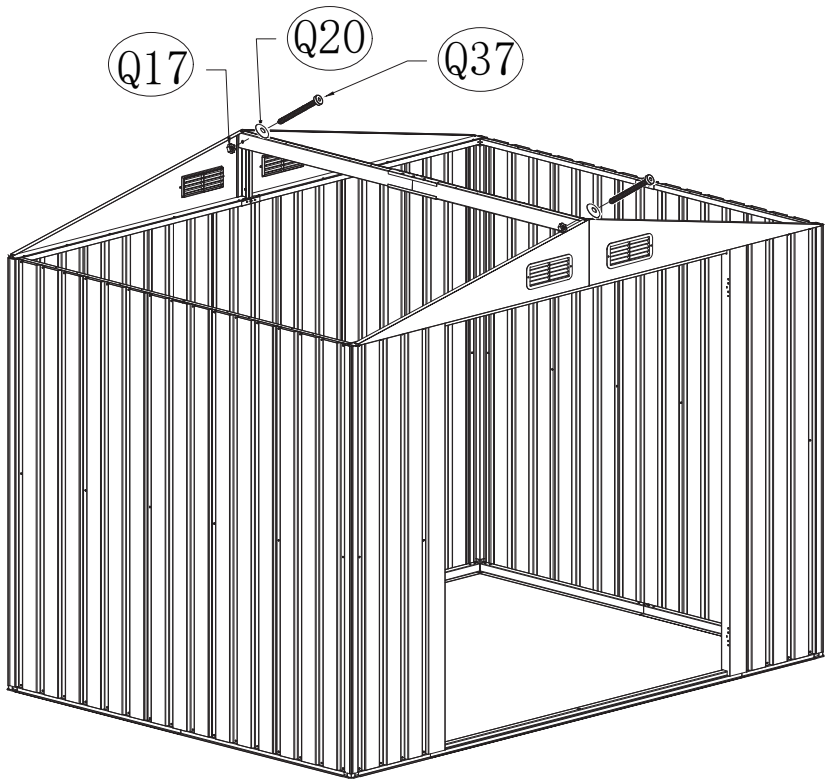

Step 4: Lay the Roof Panels


NO.	PART.	Qty.
W12	 1255.5mm	4
S4		22
F7		22

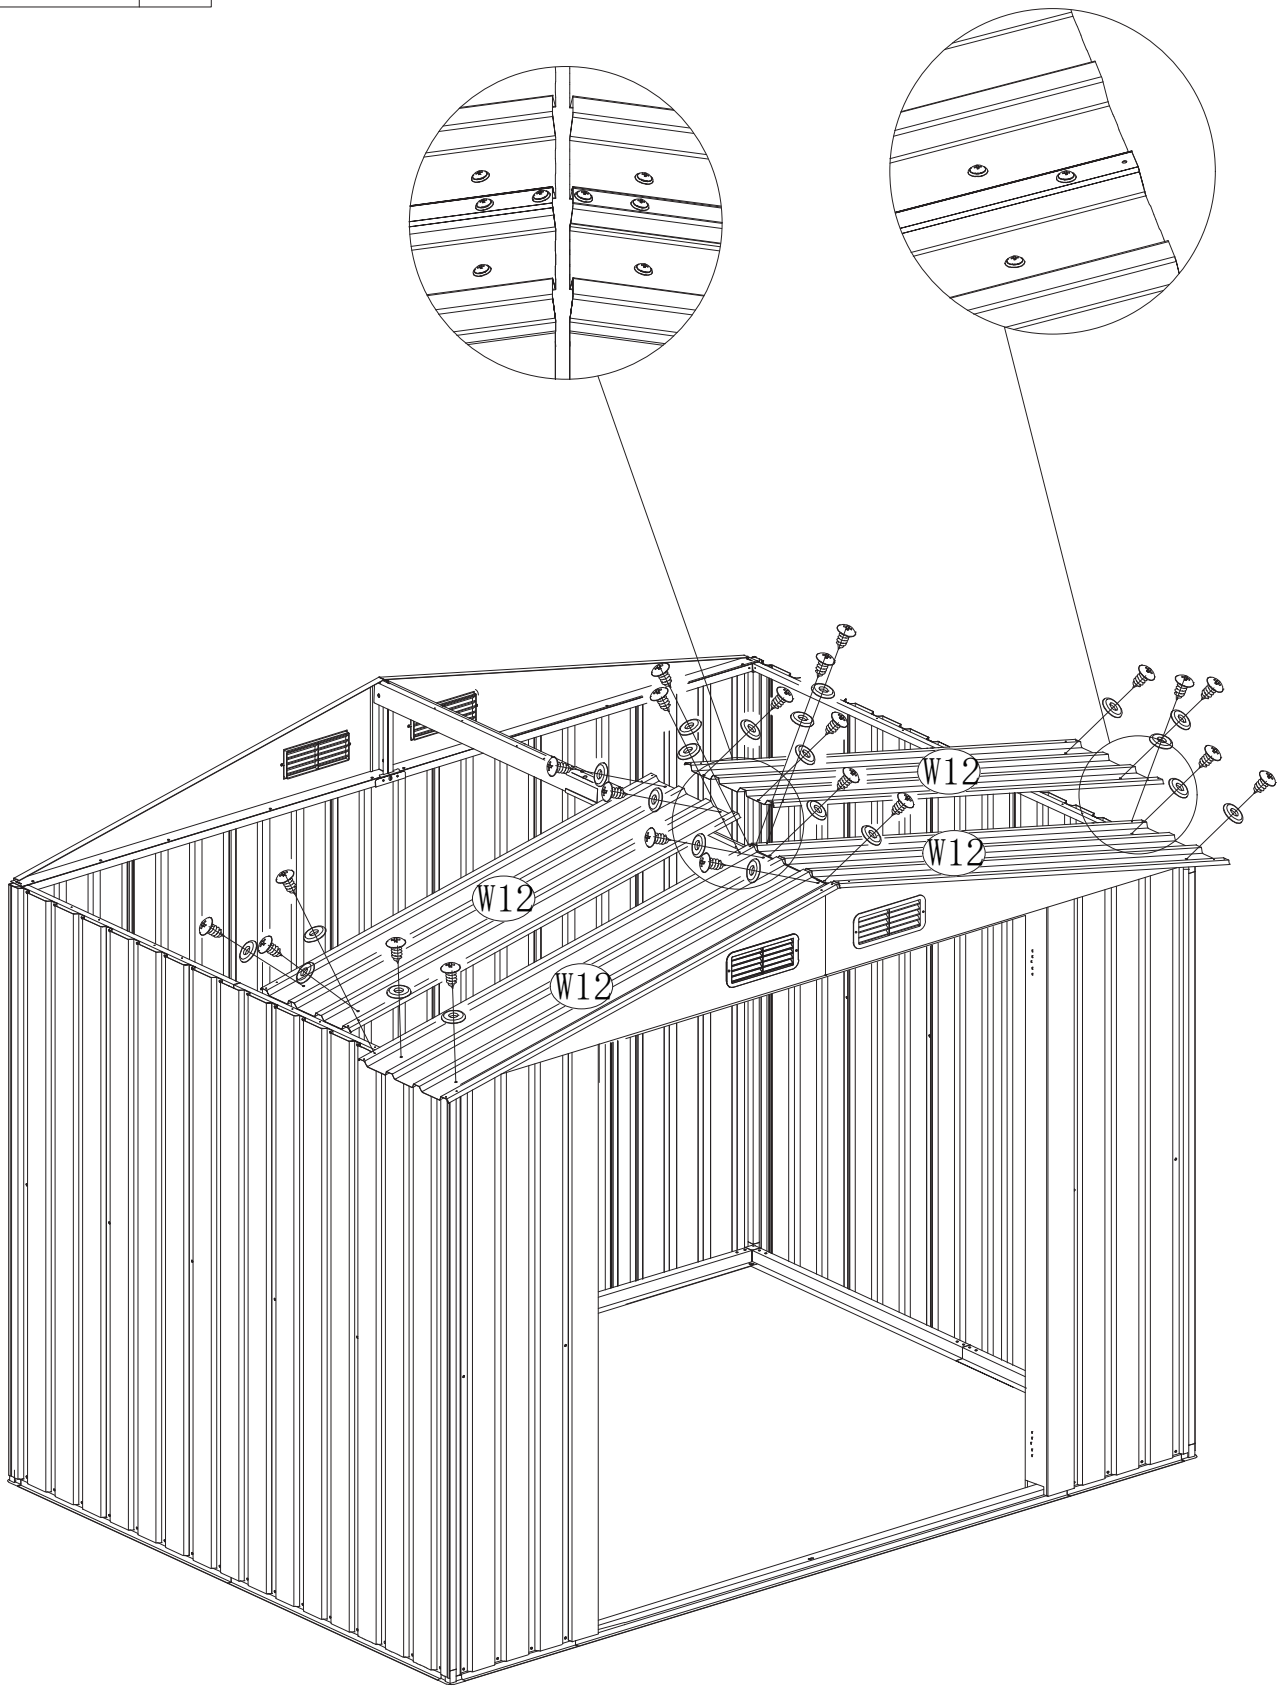Tips:
Place the side with small distance. be tween holes and edges on the top.




Step 4: Lay the Roof Panels

NO.	PART.	Qty.
W15		2
S4		16
S8		2
F7		18
F18		1

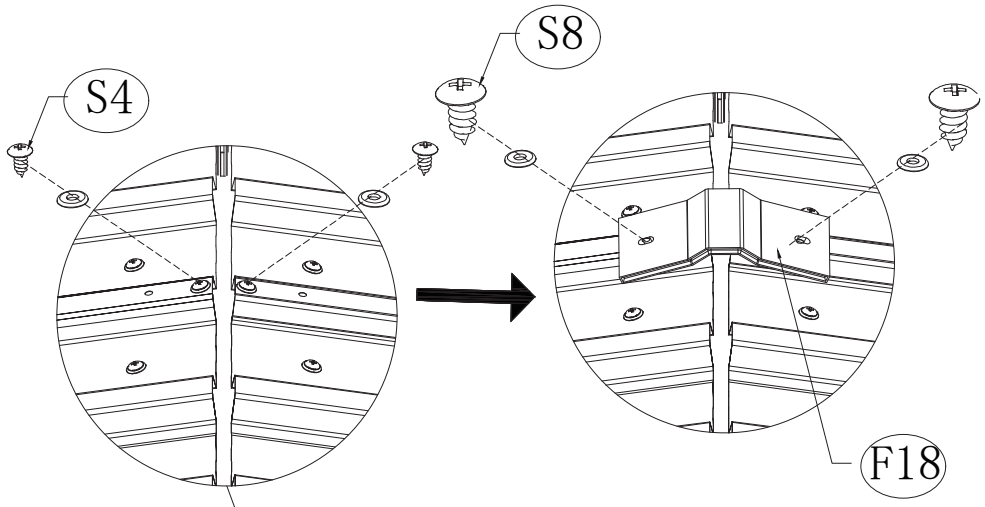

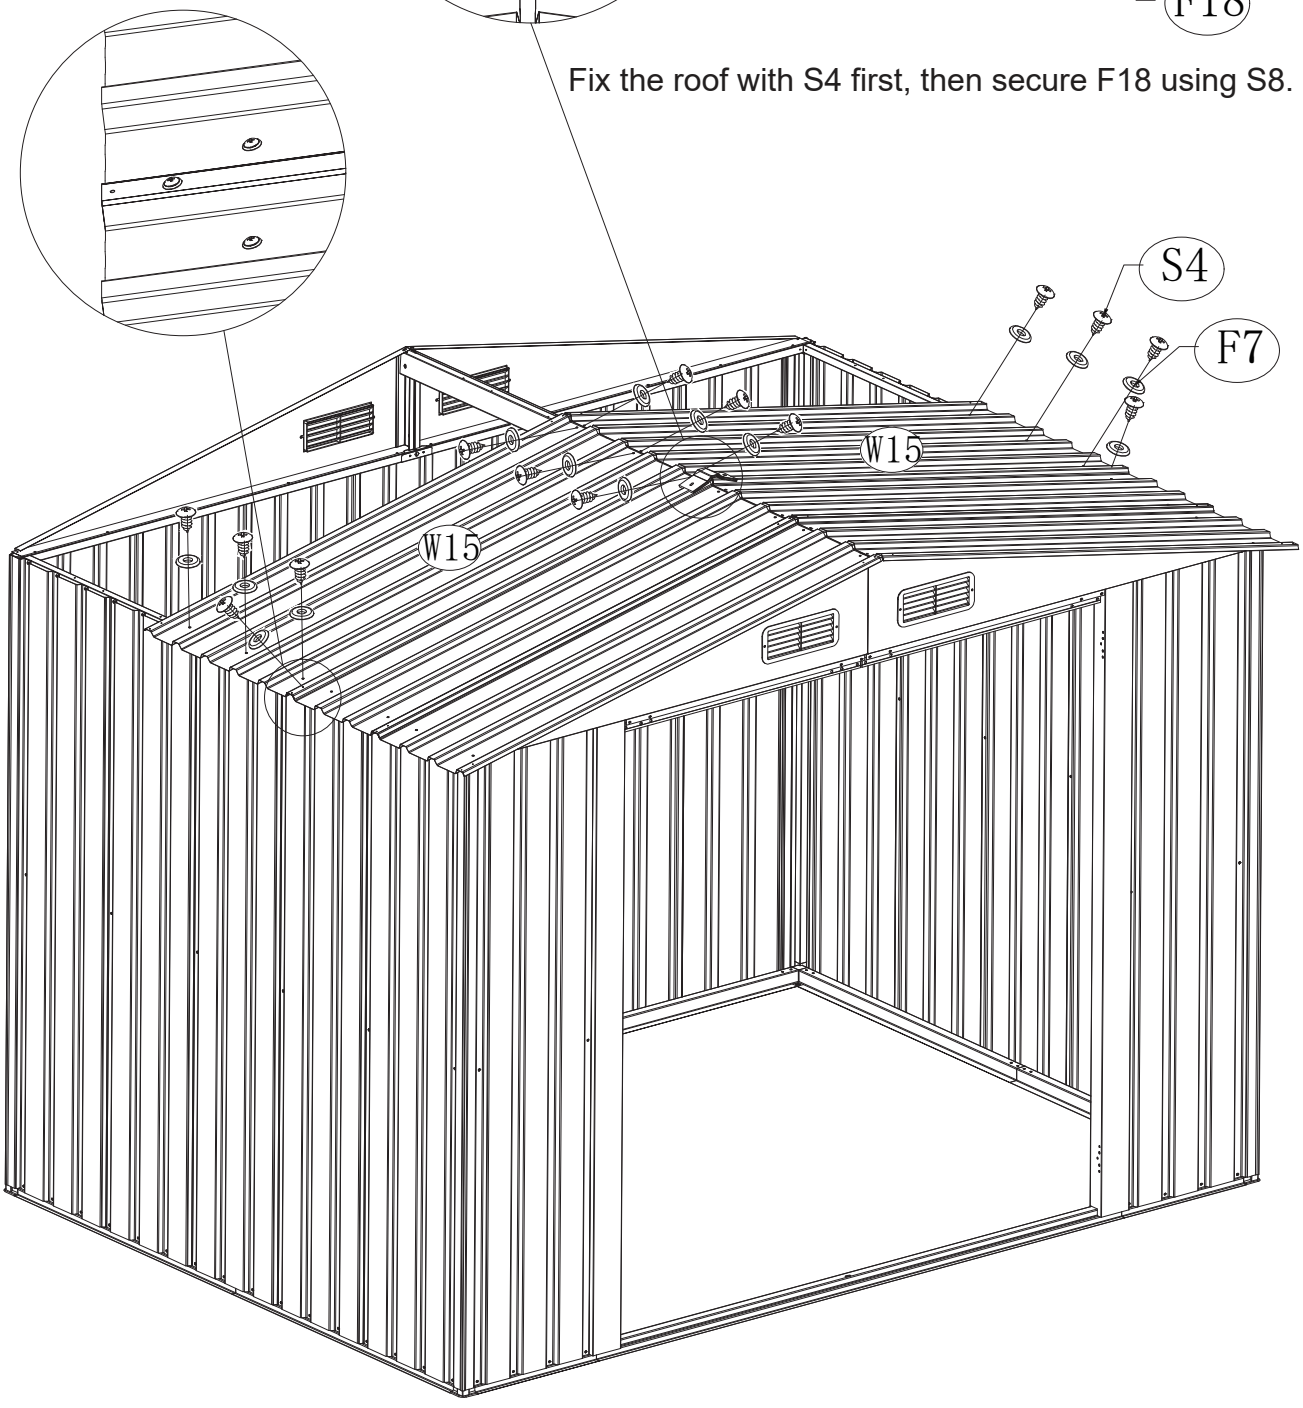Fix the roof with S4 first, then secure F18 using S8.




Step 4: Lay the Roof Panels

NO.	PART.	Qty.
W12	 1255.5mm	4
S4		26
F7		26

Fit one F8, then attach roof with S4 & F7.

Step 4: Lay the Roof Panels


NO.	PART.	Qty.
19L	1168mm	2
19R	638mm	2
20	1263.5mm	4
F4		4
S4		14
S8		6
F7		20
F10		2

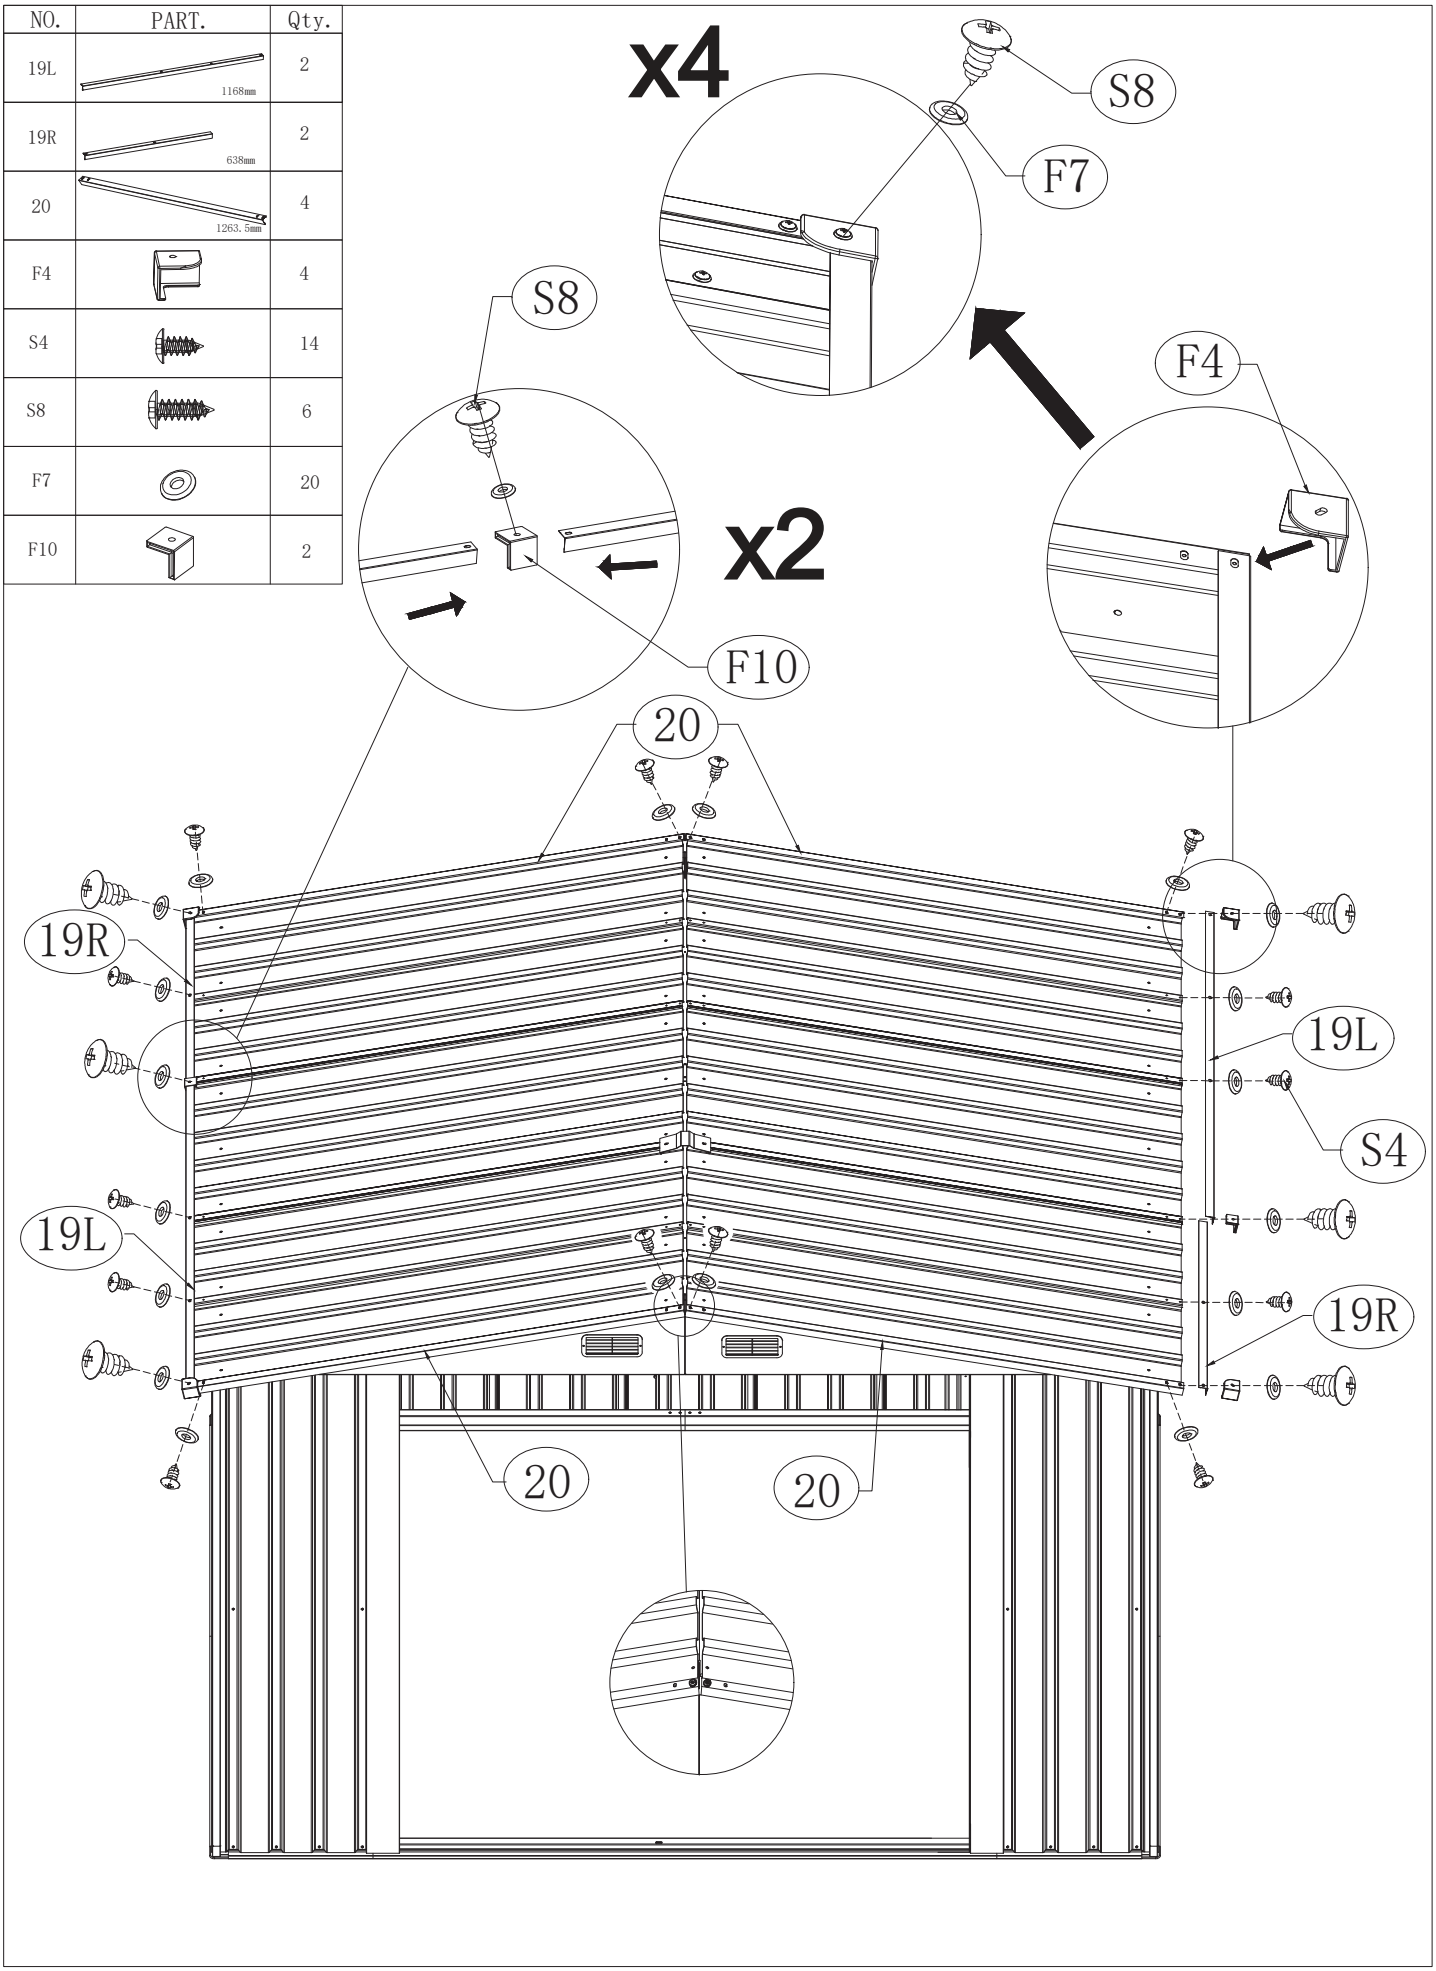


Step 4: Lay the Roof Panels


NO.	PART.	Qty.
F8		46

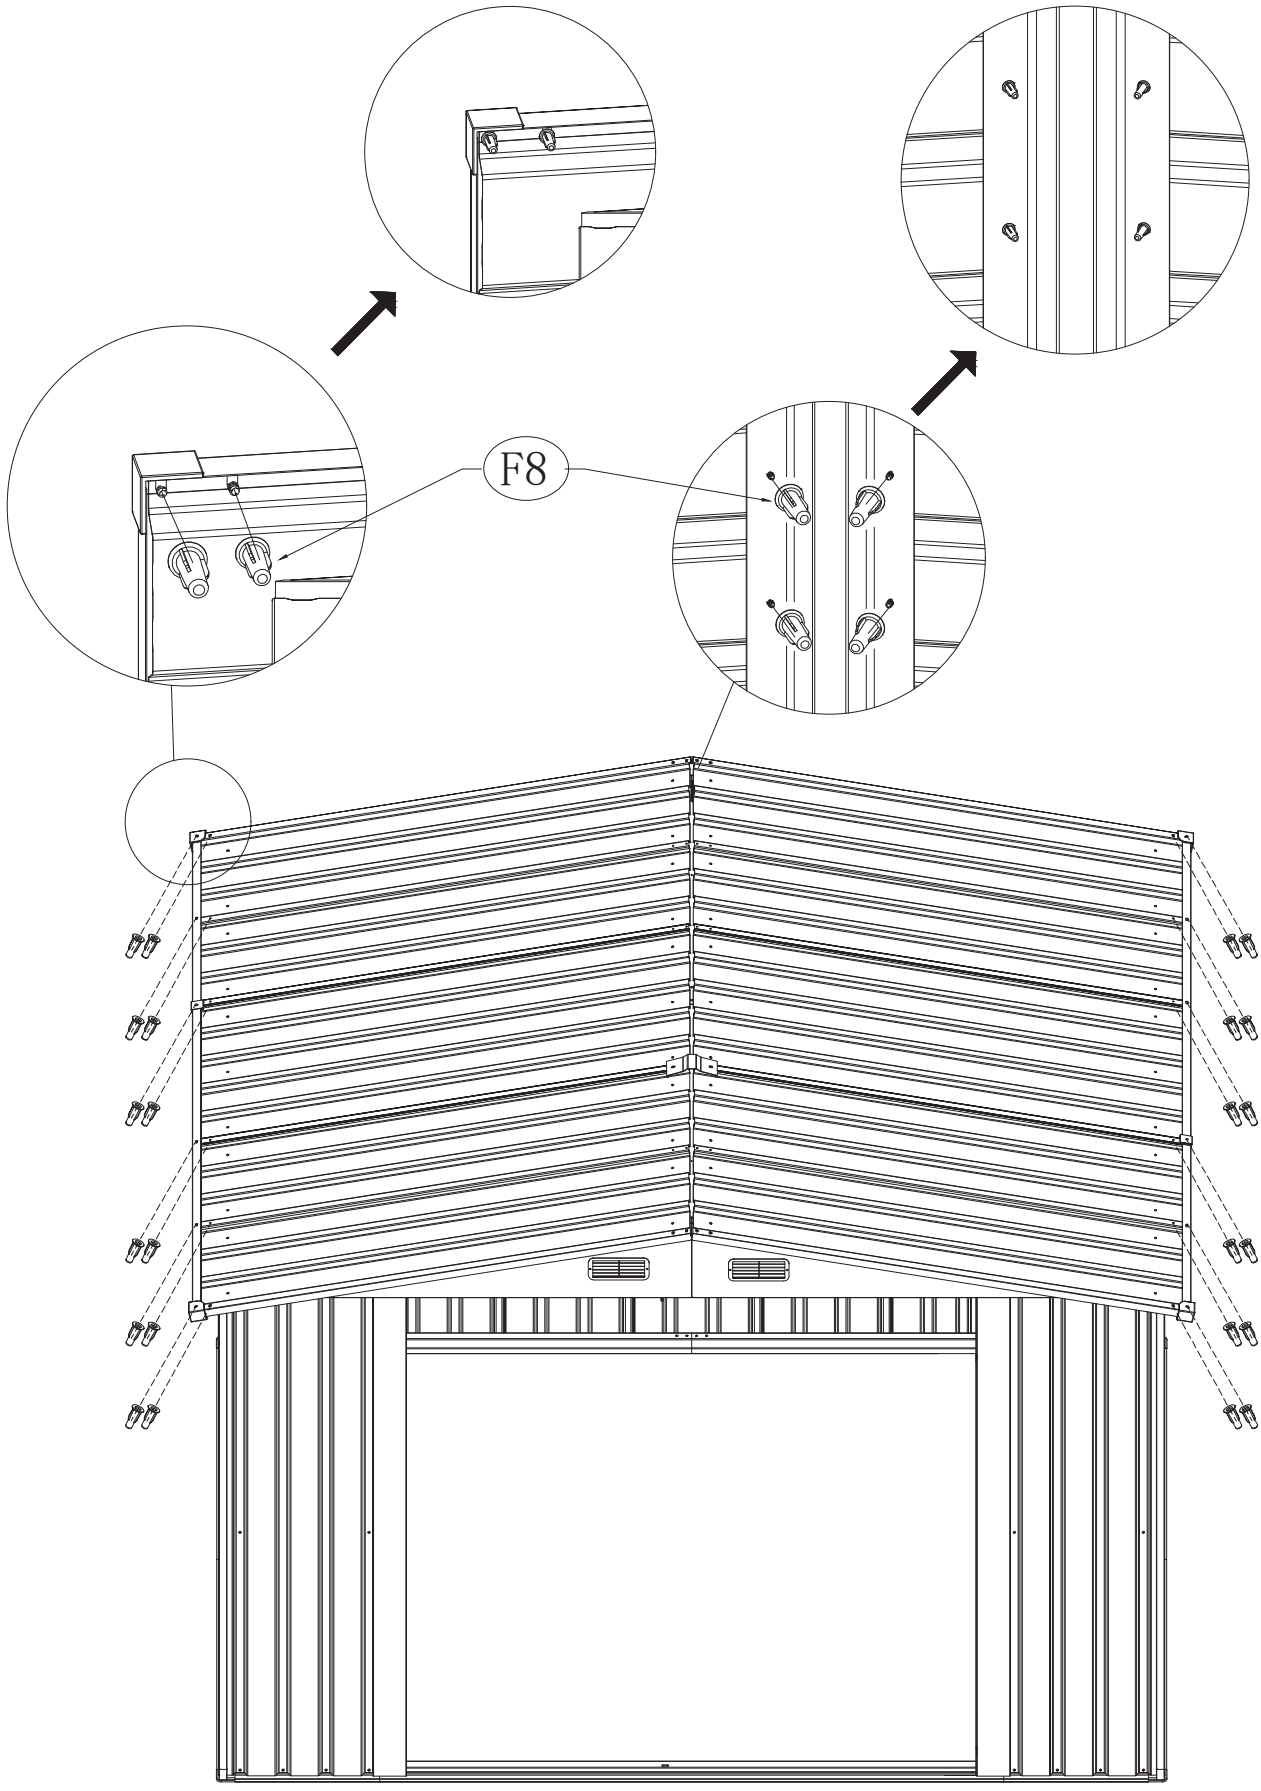Mount F8 at the bottom of all visible screws under the eaves.




Step 4: Lay the Roof Panels

NO.	PART.	Qty.
18F		1
18B		1
F5		2
S4		8
F7		8

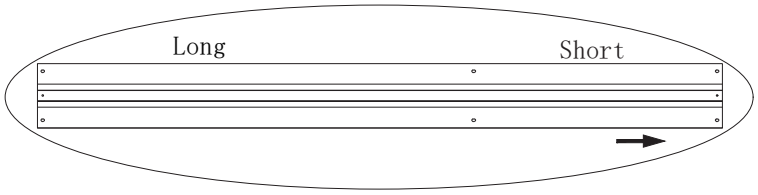


18B Insert the shorter end into F18.



Step 5: Assemble the Door

NO.	PART.	Qty.
16	 1555mm	1
21	 705mm	2
22	 1555mm	1
M1	 1553mm	1

left

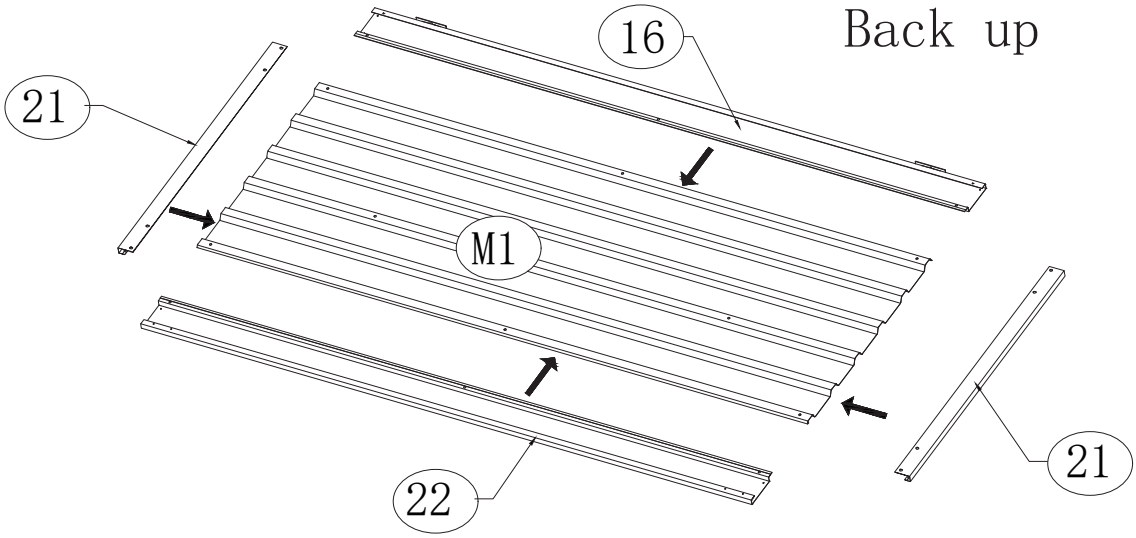Put 16 on the side farther from the hole in the center of the tile and 22 on the side nearer.




NO.	PART.	Qty.
S5L		1
S5R		1
S4		2
S6		4
S7		4


Step 5: Assemble the Door

NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

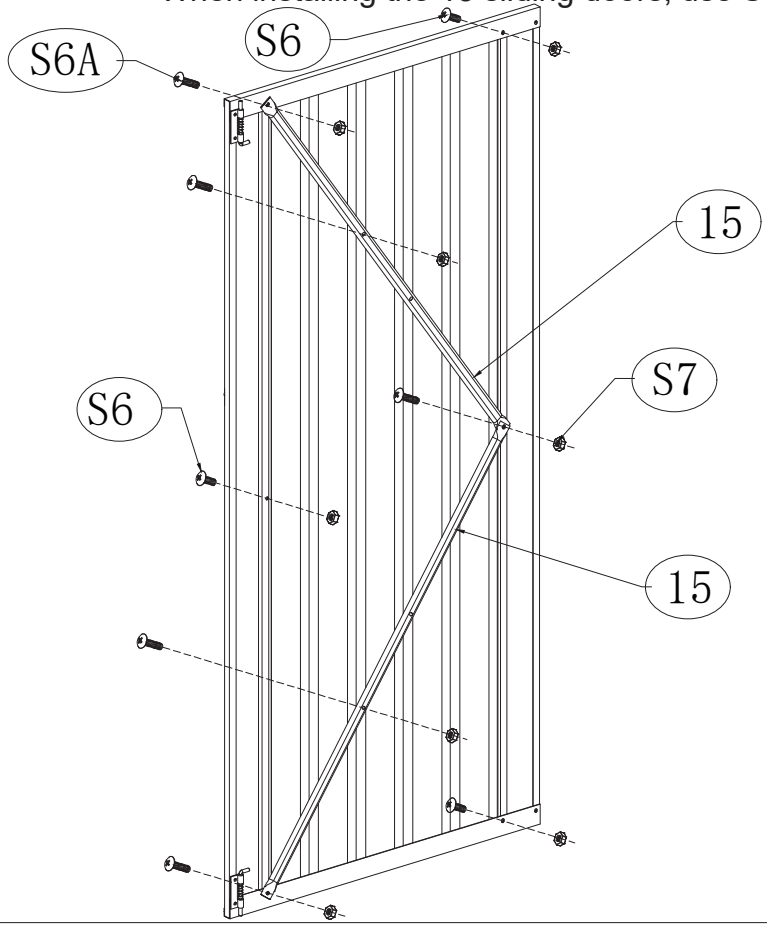
When installing the 15 sliding doors, use S6A and S7.



NO.	PART.	Qty.
S1		1
S4		8
S6		2
S7		2

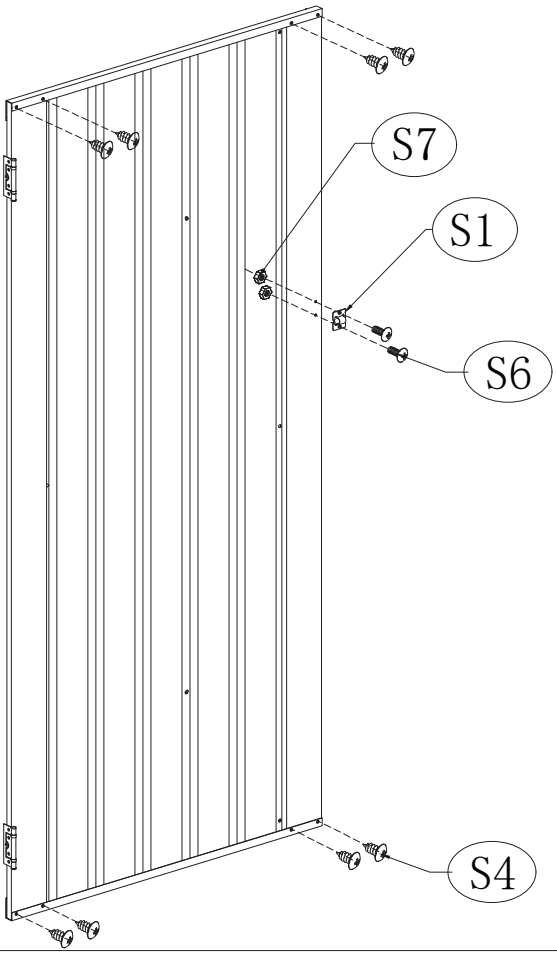


Step 5: Assemble the Door


NO.	PART.	Qty.
16	 1555mm	1
21	 705mm	2
23	 1555mm	1
M1	 1553mm	1

right

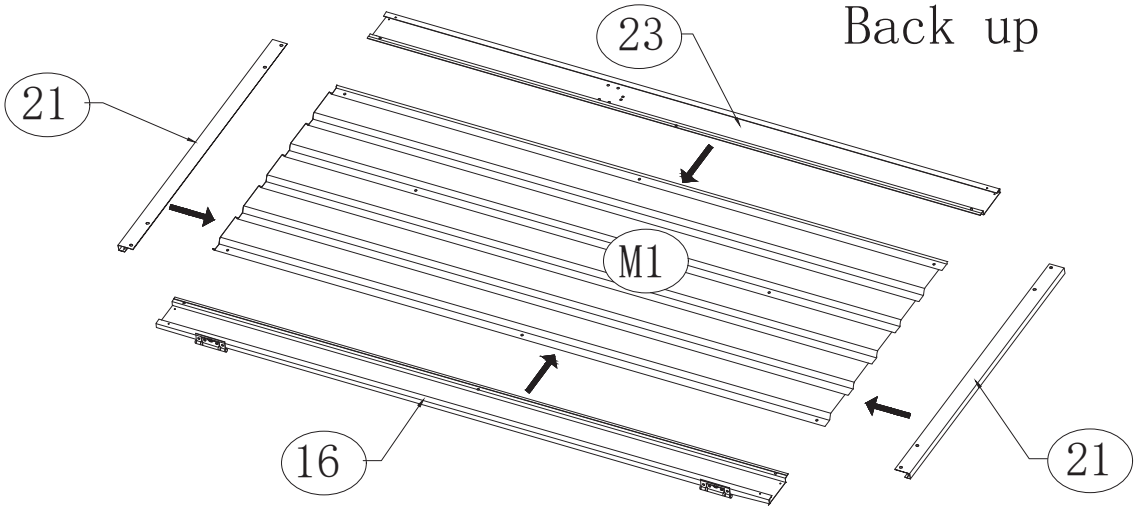Put 16 on the side farther from the hole in the center of the tile and 23on the side nearer.




NO.	PART.	Qty.
S4		4

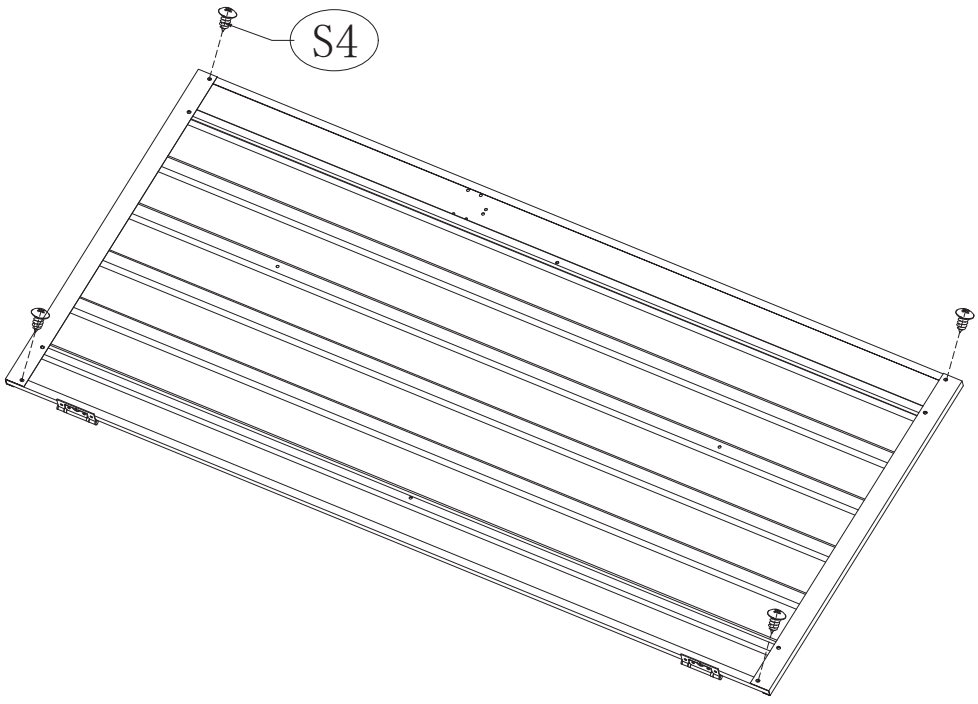


Step 5: Assemble the Door

NO.	PART.	Qty.
15		2
S6		3
S6A		5
S7		8

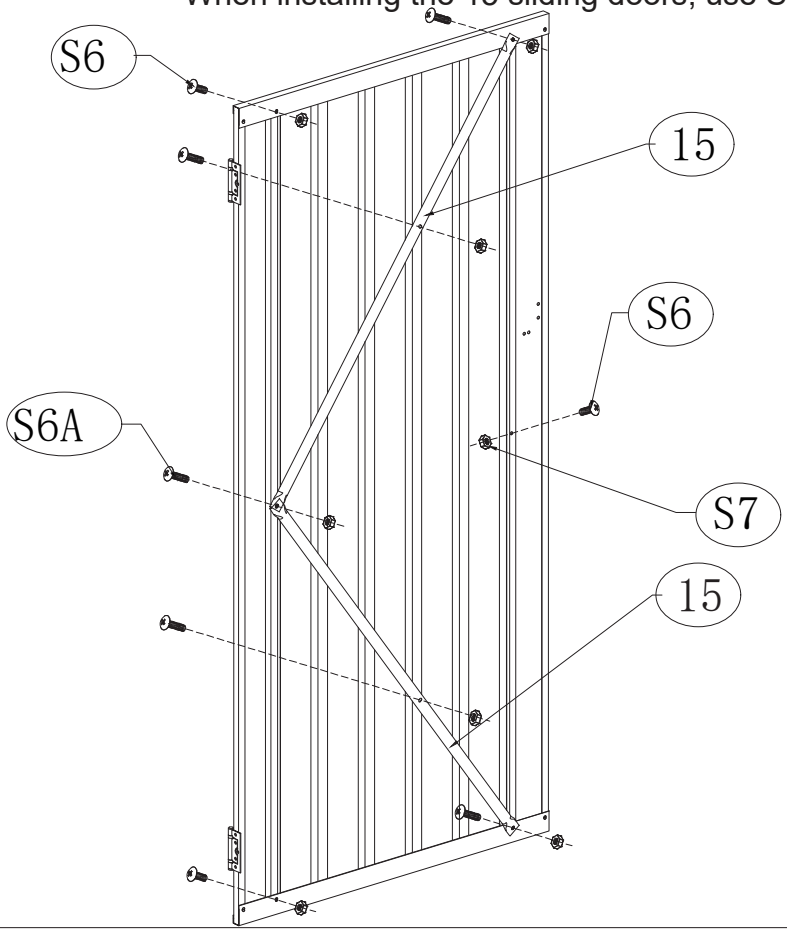When installing the 15 sliding doors, use S6A and S7.





NO.	PART.	Qty.
S2		1
S3		1
S4		8
S6		6

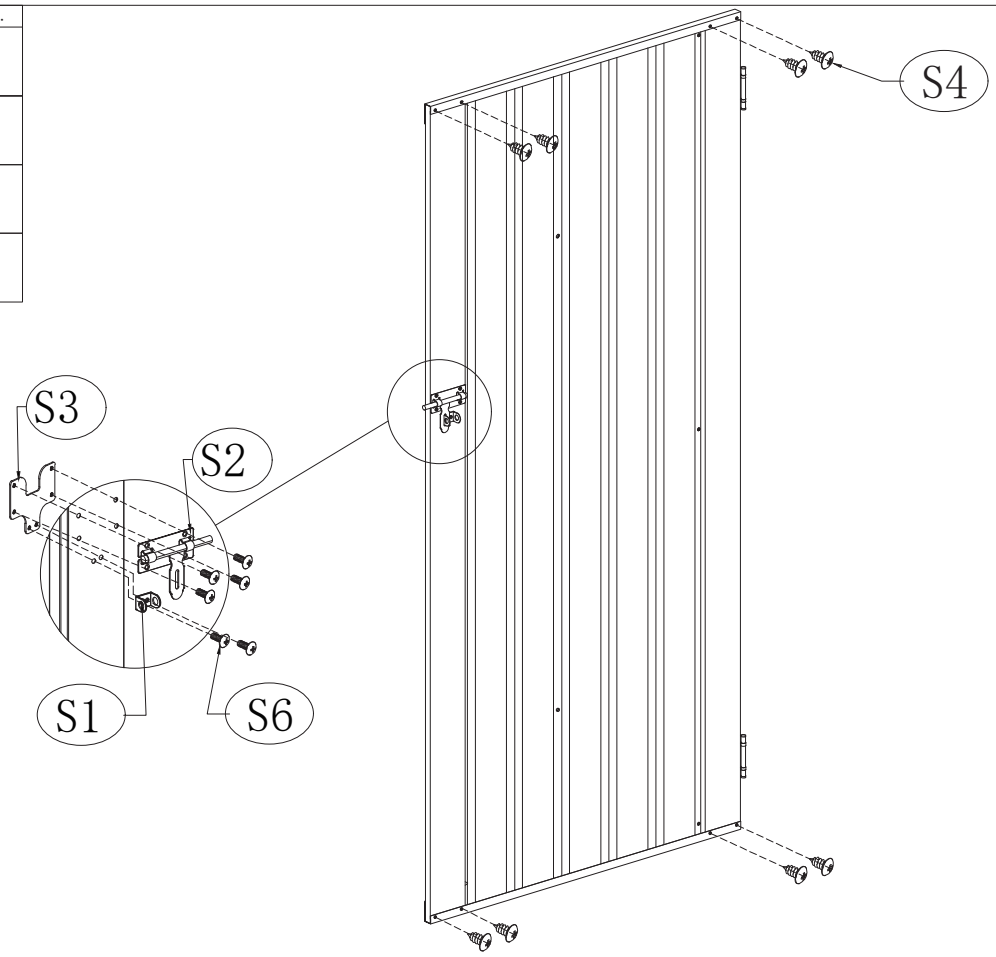

Step 6: Hang the Door & Install Door Stop

NO.	PART.	Qty.
S6		12
S7		12

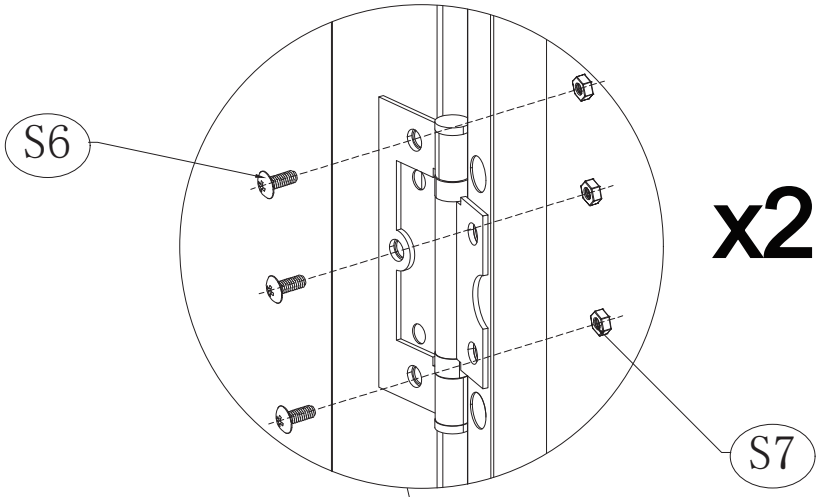

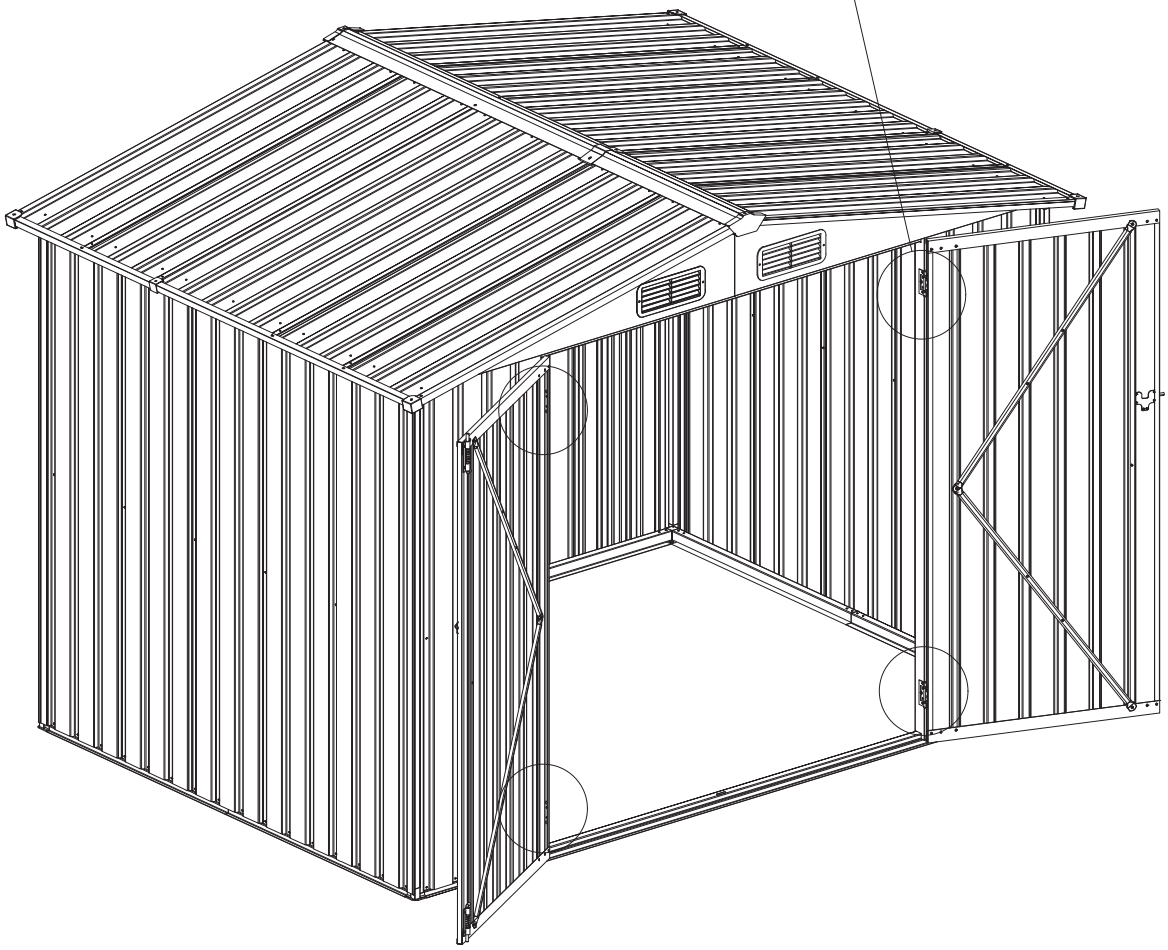



Pro Tip:

Test the door opens and closes smoothly before fully tightening hinge screws — prevents sagging and scraping.

Step 6: Hang the Door & Install Door Stop

NO.	PART.	Qty.
S9		4

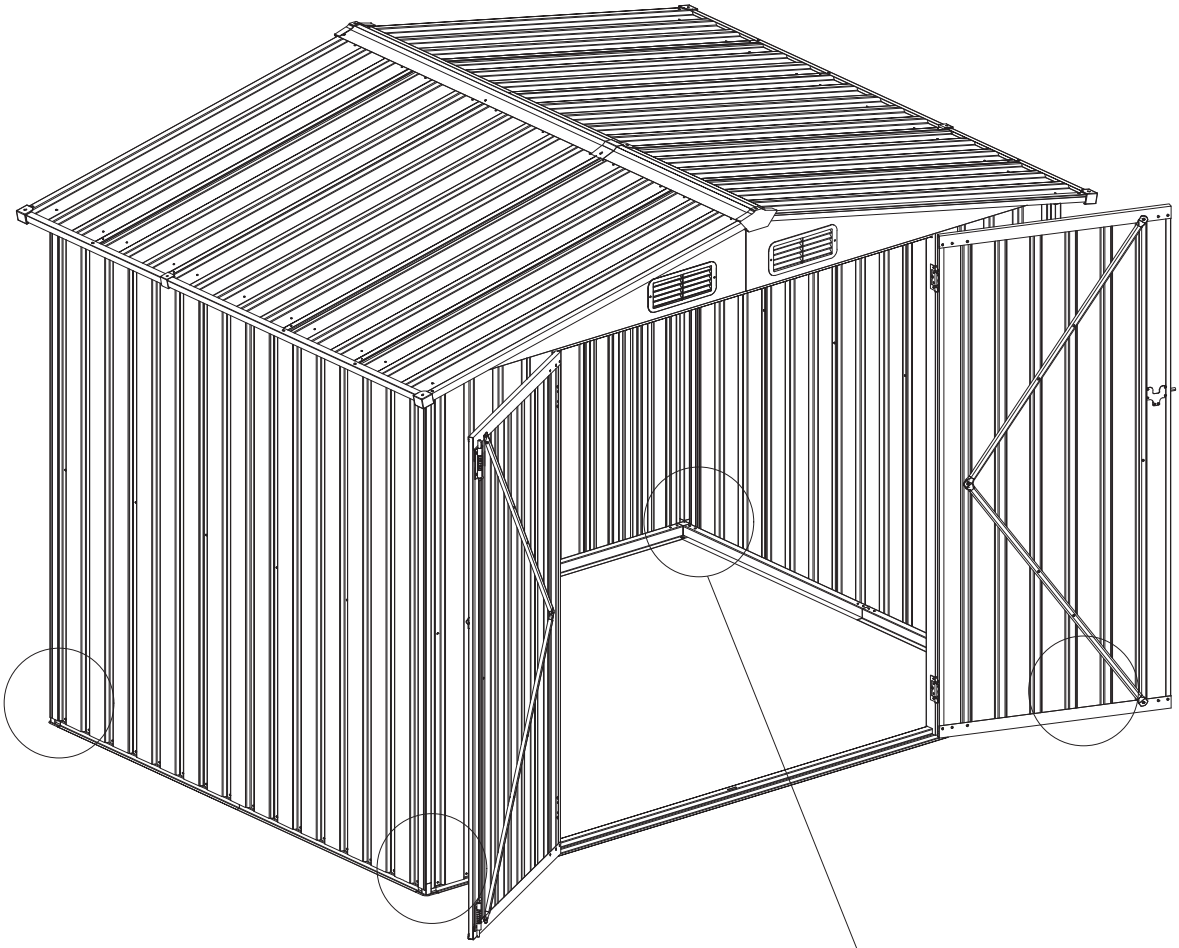

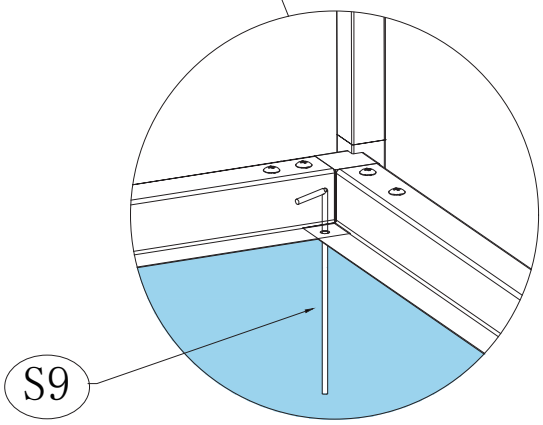

x2