


Assembling Instruction

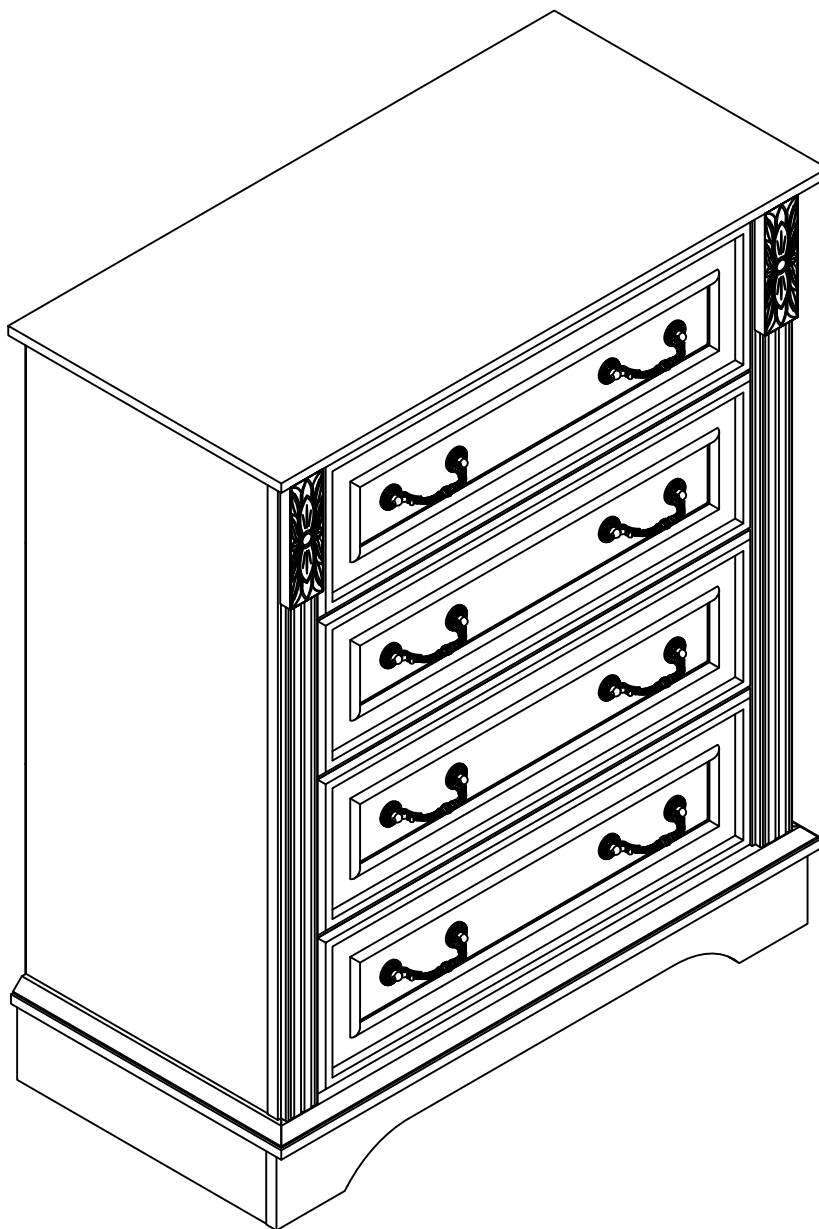




ATTENTION

We are concerned about each customer's experience, so if there is any loss or damage, feel free to contact us and provide the name of the missing or damaged parts regarding to the P.3 page of the instructions at any time please. We will send replacement to you asap.
Please attach your order ID so that we can assist you better.



General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this product.

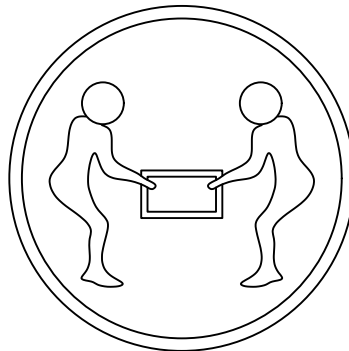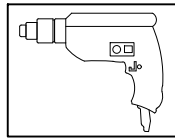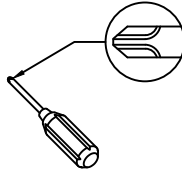


We recommend that two people install this dresser.

Parts List

Chest

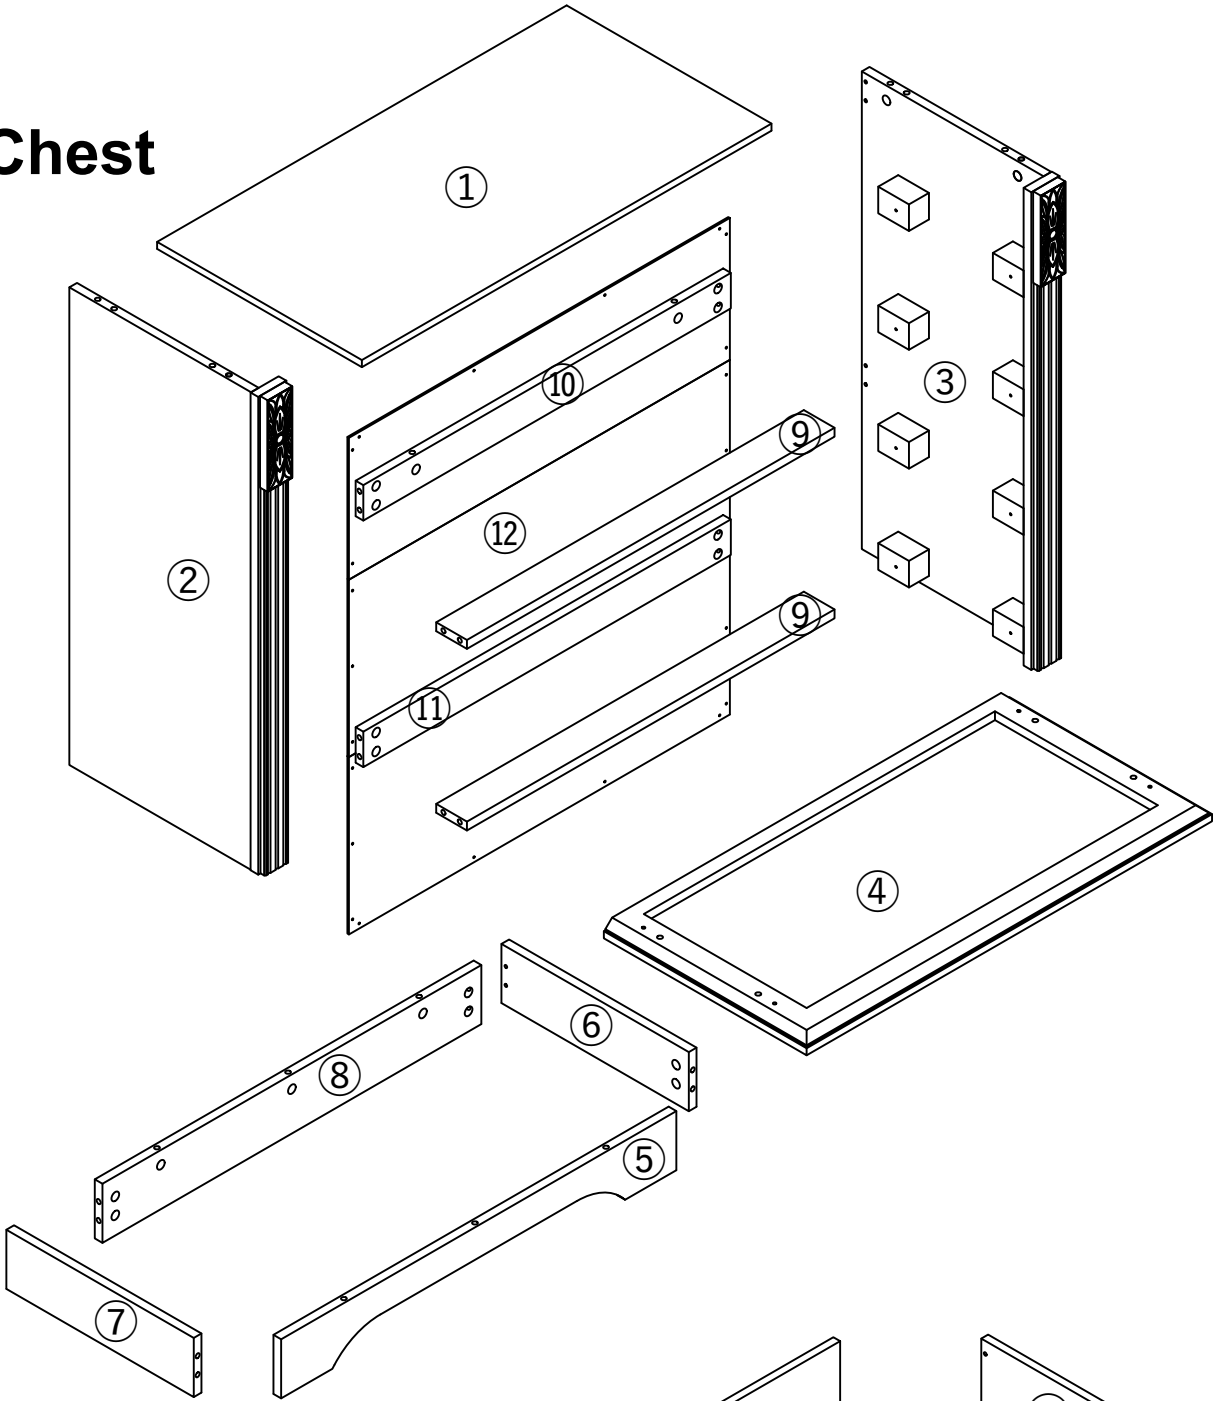


Drawer

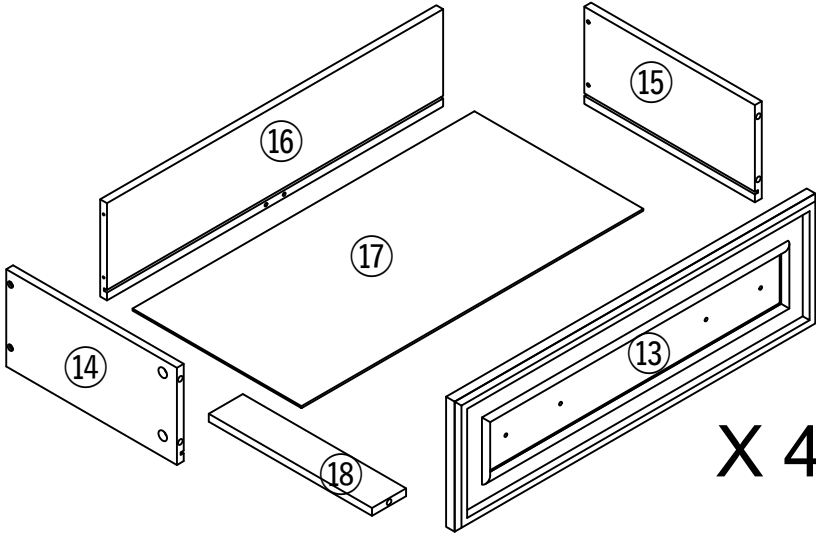


X 4

Components

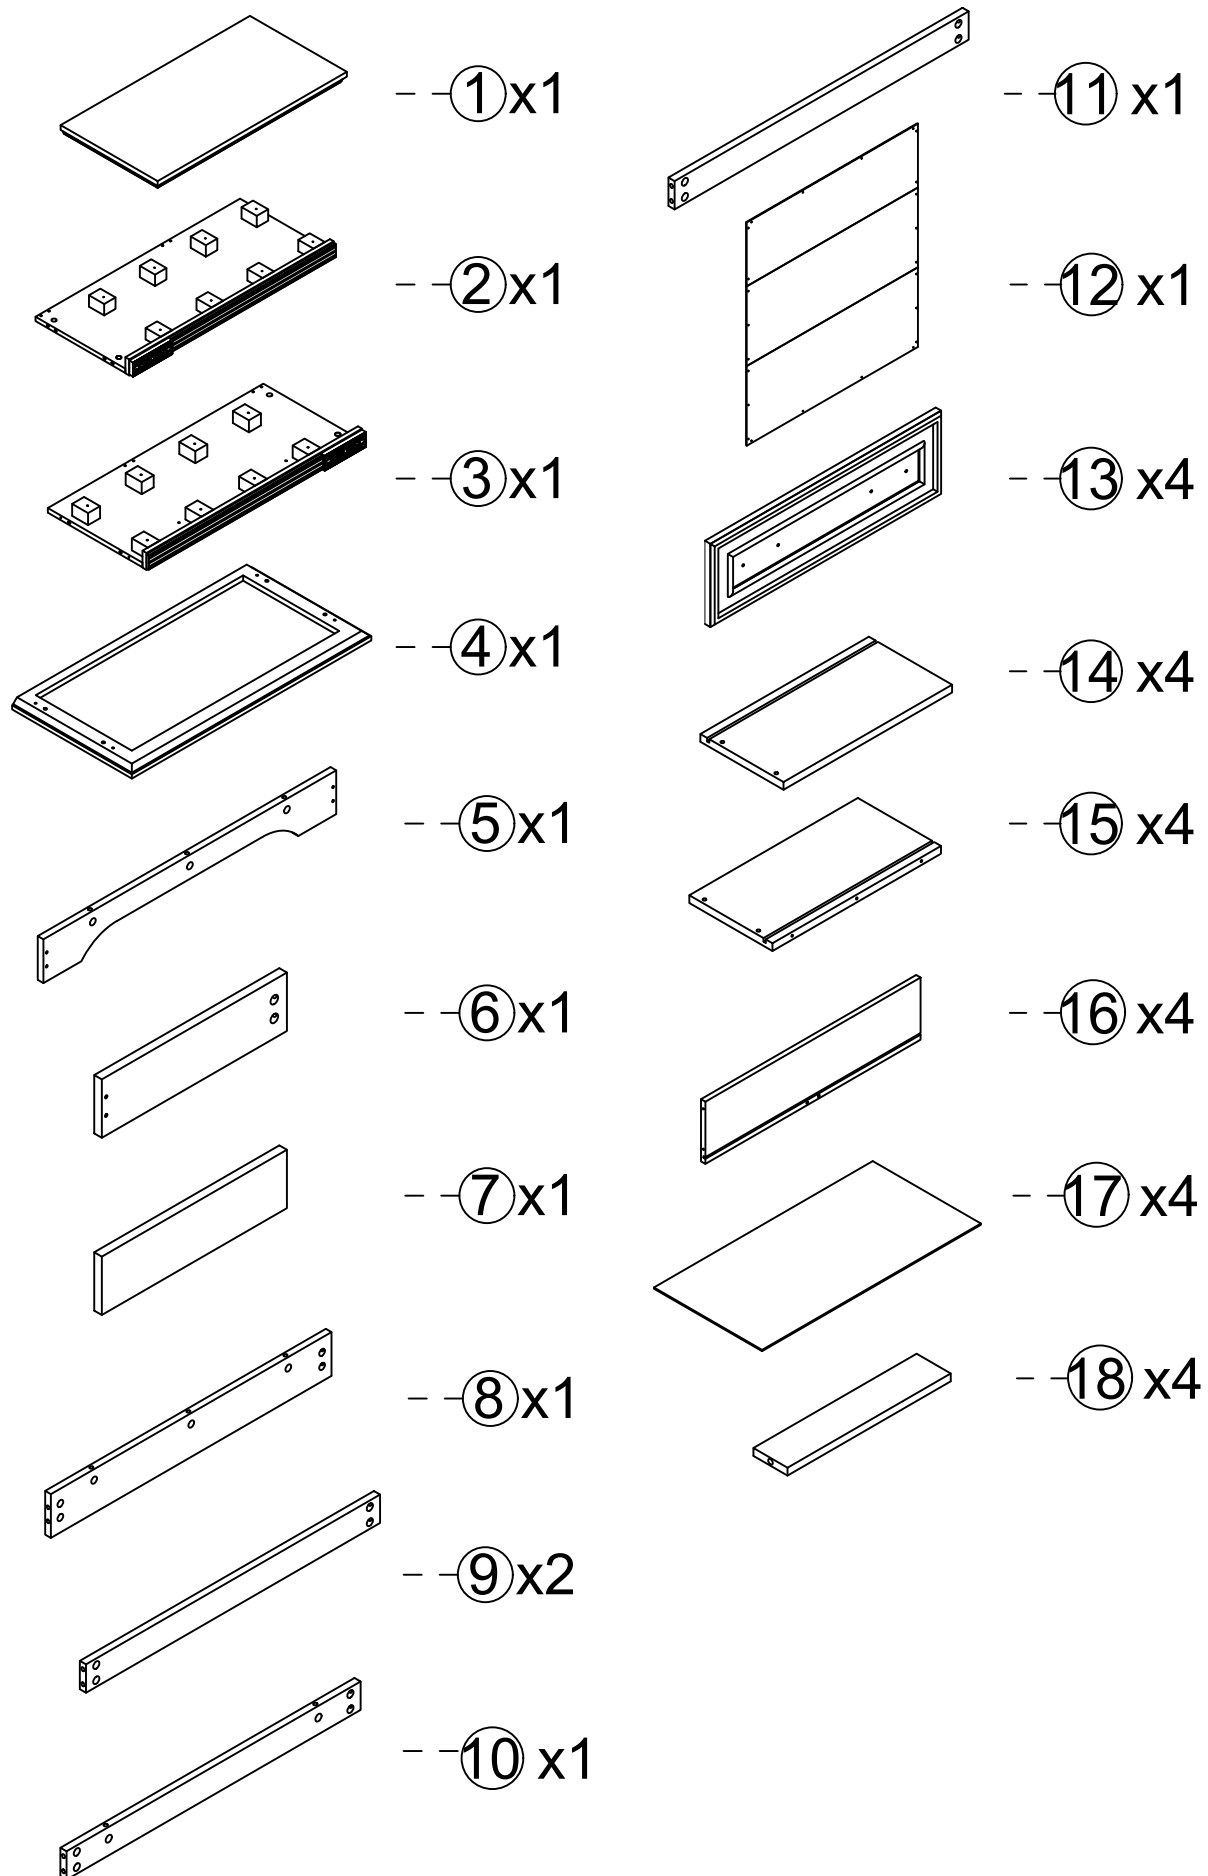

HARDWARE PACK CONTENT

Ⓐ



Ø6x32mm

56+2

Ⓑ



Ø15x10mm

56+2

Ⓒ



Ø8x30mm

8


Ⓓ



Ø3.5*12mm

24+2


Ⓔ



Ø7x48mm

4


Ⓕ



Ø3.5x30mm

24+1

Ⓖ



M4x8mm


16+1

Ⓕ



8

Ⓖ



4


Ⓖ




Ø3.5*12mm

48+2

Ⓖ

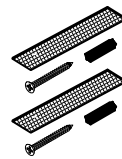

1

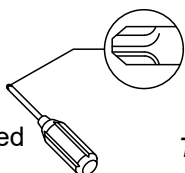





not included

If you have a Phillips
screwdriver at home, it will make the installation easier.

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

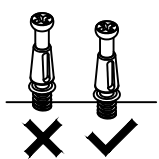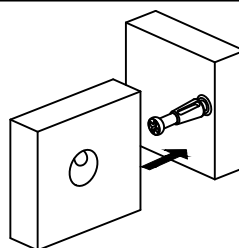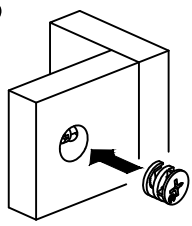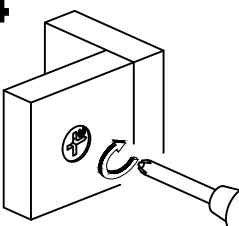1 	2 	3 	4 
1. Screw cam bolt into the threaded anchor gently. (Attention: don't screw cam bolt too deep or too shallow.)	2. Please connect the 2 boards you want connect by inserting cam bolt.	3. Insert the cam lock into the round hole of the board. (Attention: point the arrow on the top of the cam lock to the outer edge.)	4. Turn the cam lock clockwise until it is firmly tightened.


Please use [A] cam bolts and [B] cam locks as shown in the illustrations.

Step 1


I	J
	
L	
X4	X8

The slide (I) includes 4 parts and there is a sign on each part: L, R, DL and DR. We should take notes of this and install the correct part to the panel to make sure the dresser works.

- Install the part (L) of the drawer slide (I) on the left panel ②
- Repeat to install the other 3 parts (L) on the panel ② as below shown

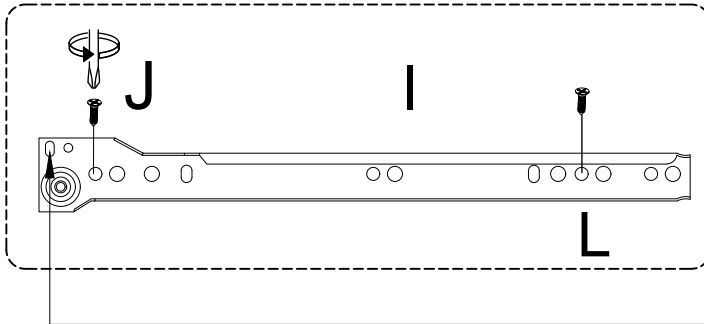

The first hole in the UPPER row holes of the slide is without the corresponding pre-drilled hole, after fix the position of the slide and then screw on.

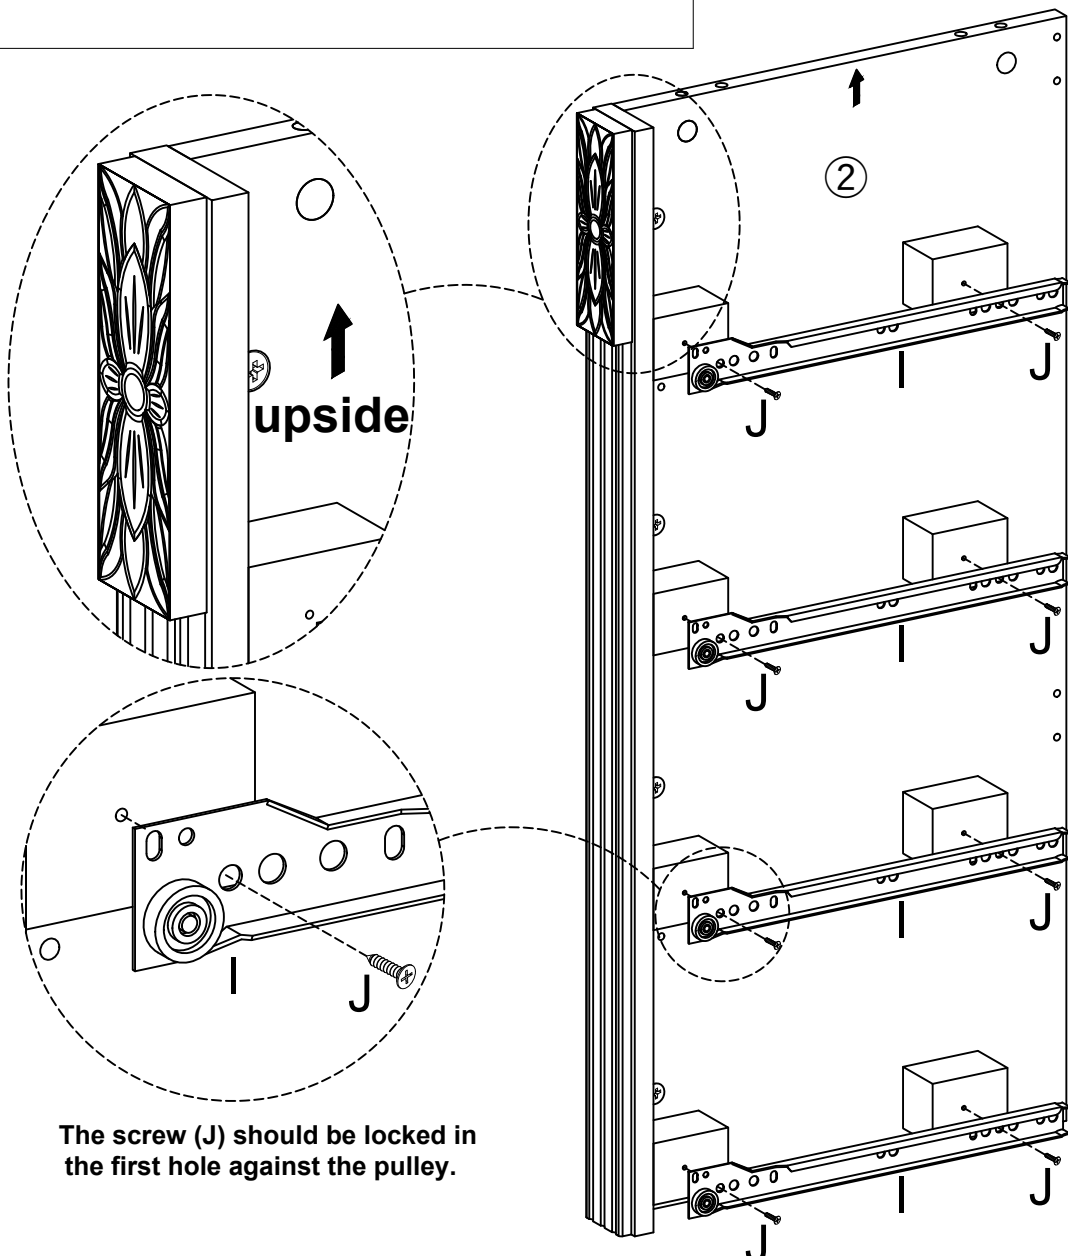

The screw (J) should be locked in the first hole against the pulley.

NOTE: When you screw the screws, please refer to the illustration carefully to make sure that the slide screws correspond to the position.


Step 2

I	J
 R	
X4	X8

The slide (I) includes 4 parts and there is a sign on each part: L, R, DL and DR. We should take notes of this and install the correct part to the panel to make sure the dresser works.

- Install the part (R) of the drawer slide (I) on the left panel ③
- Repeat to install the other 3 parts (R) on the panel ③ as below shown

The first hole in the UPPER row holes of the slide is without the corresponding pre-drilled hole, after fix the position of the slide and then screw on.

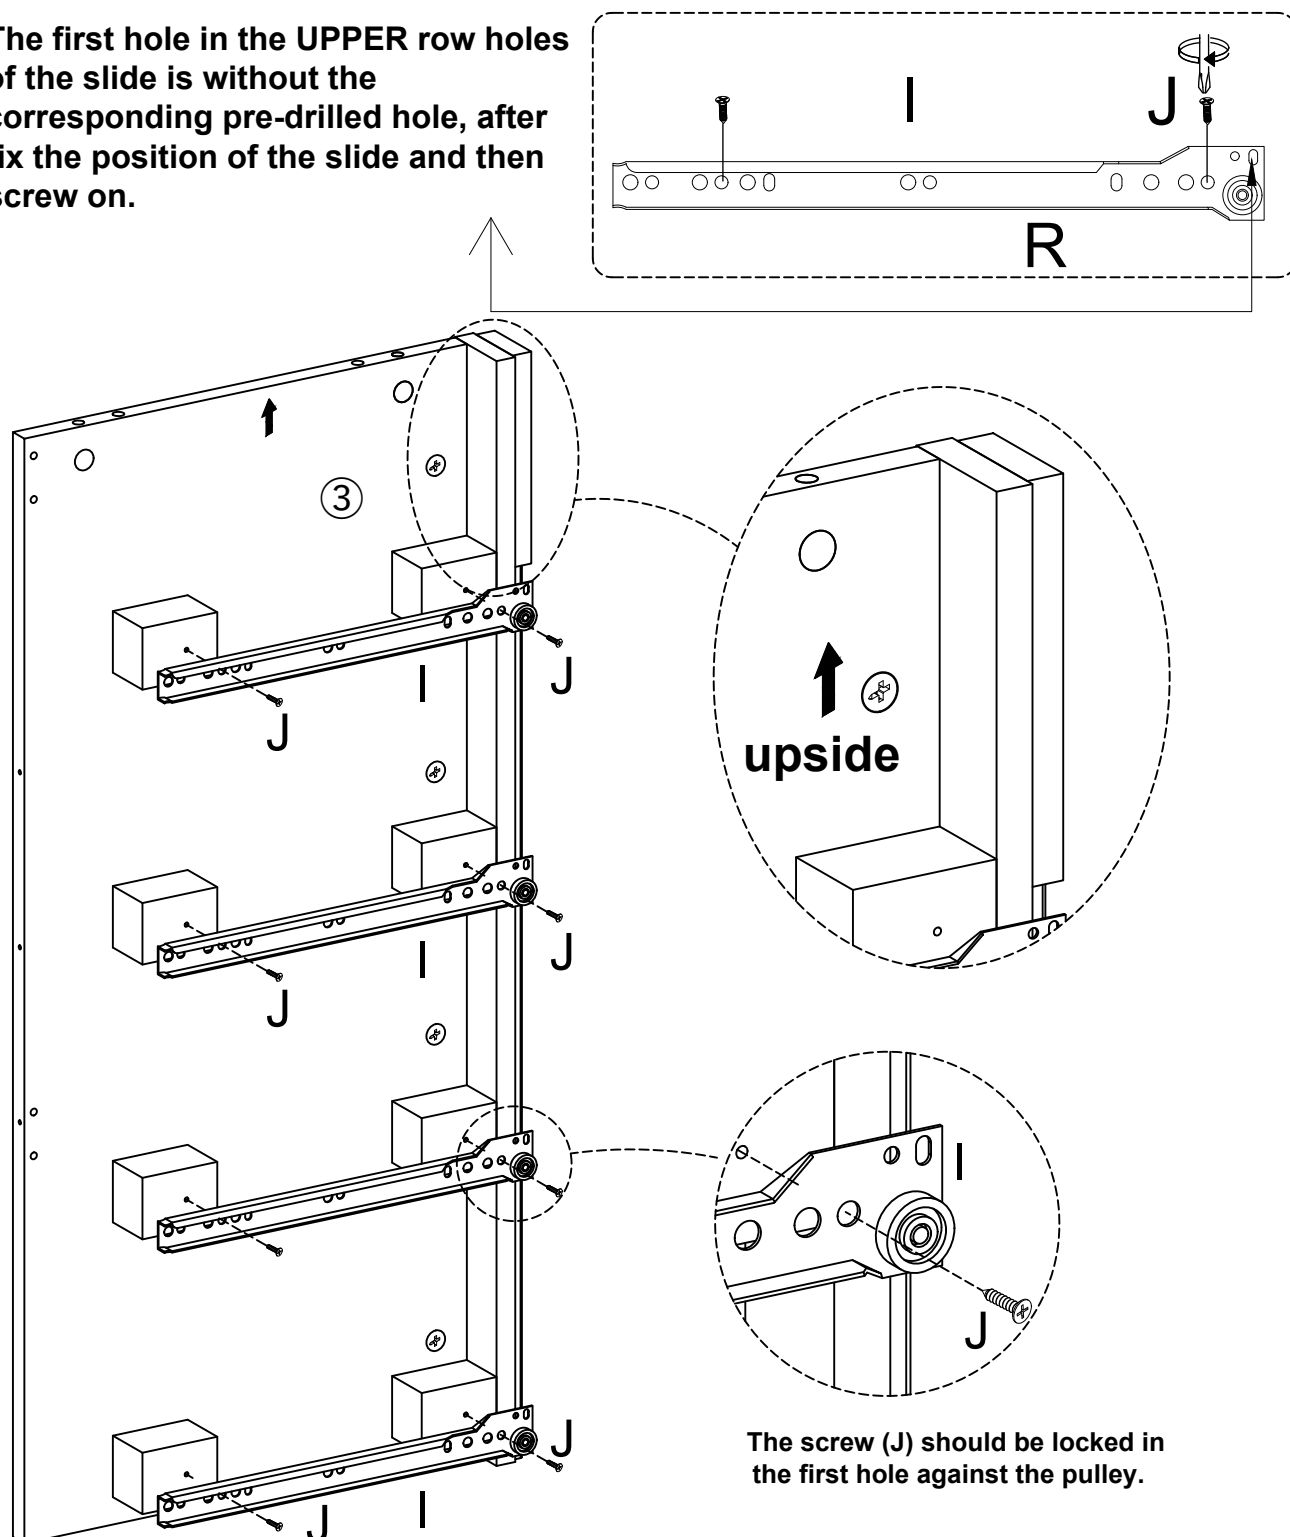

NOTE: When you screw the screws, please refer to the illustration carefully to make sure that the slide screws correspond to the position.


Step 3

J



X8


-Note: The second hole above the pulley is an additional reinforcement hole, and there is no corresponding pre-drilled hole on the side panel. Please drill and tighten the holes after securing the slider, this step will help the drawer close and open more smoothly.

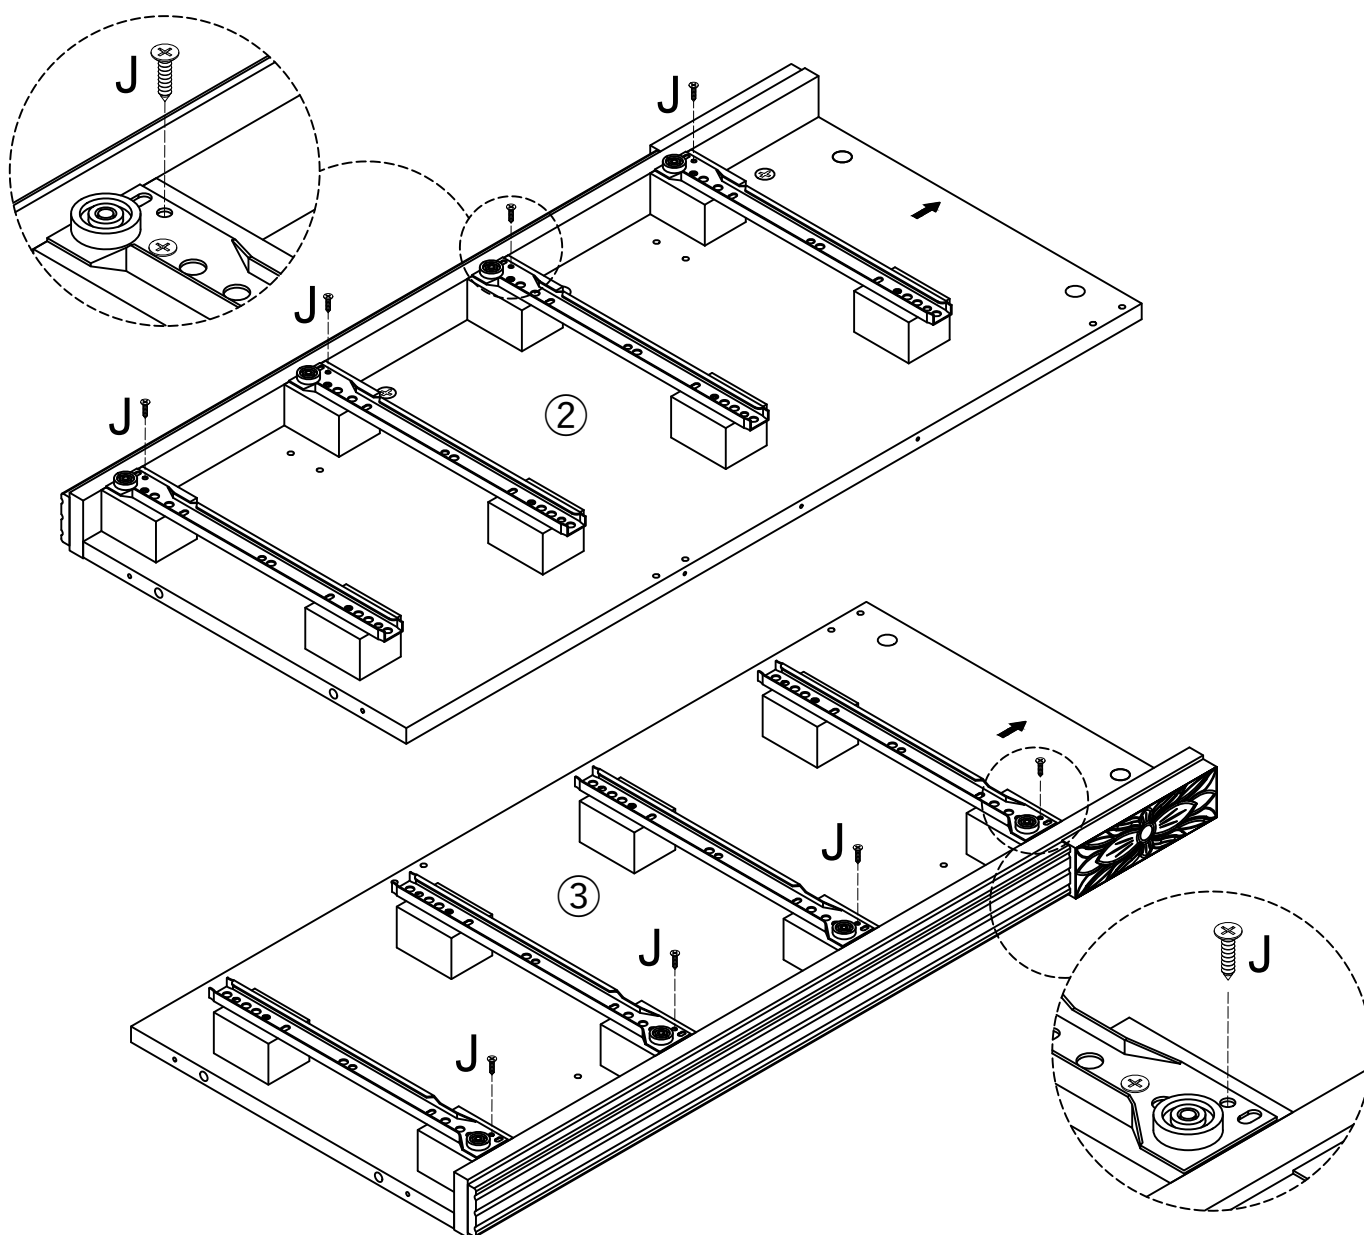


Step 4

-Screw (A) to ②, ③ as below shown

A



X16

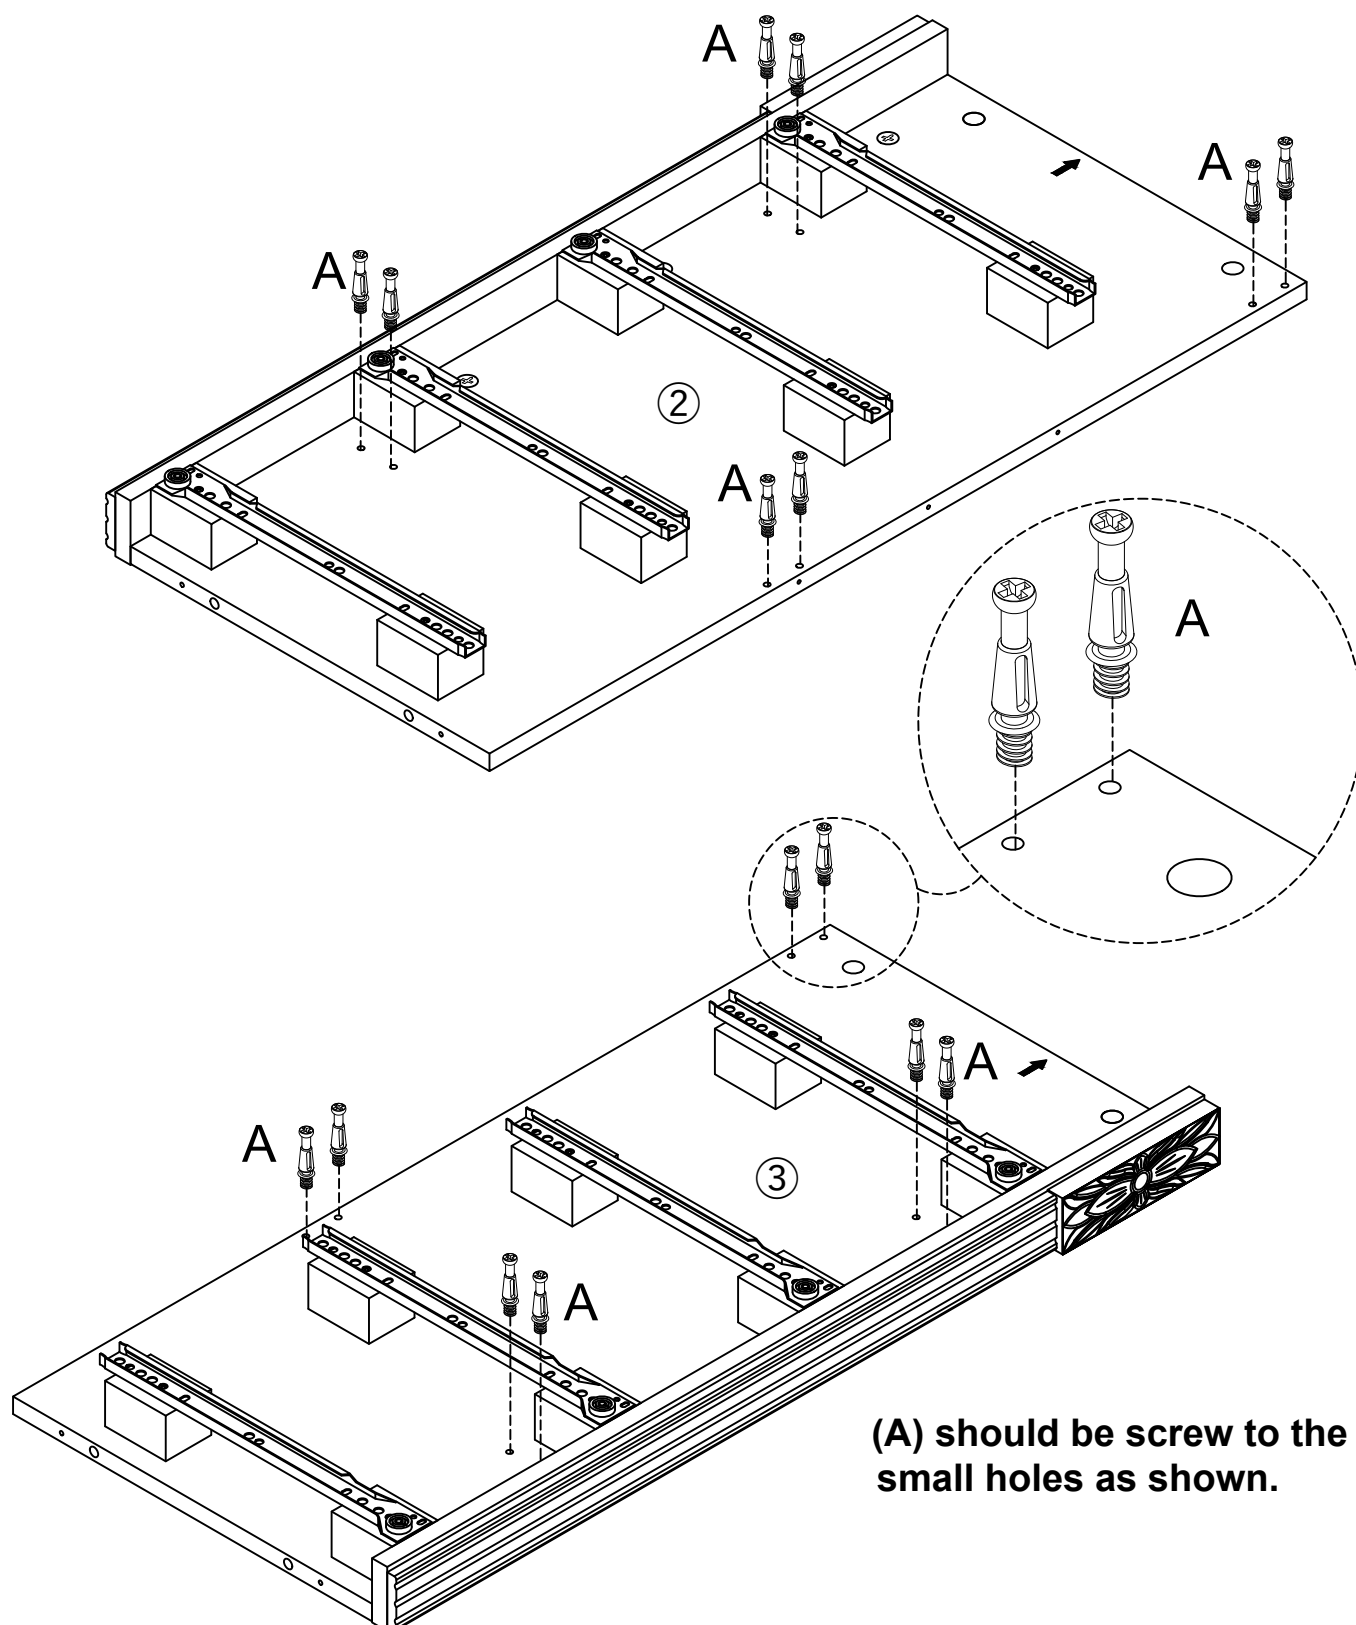

(A) should be screw to the small holes as shown.


Step 5

B



X8

-Screw (B) to lock the ⑨, ⑩, ⑪ to the panel ③ as below shown

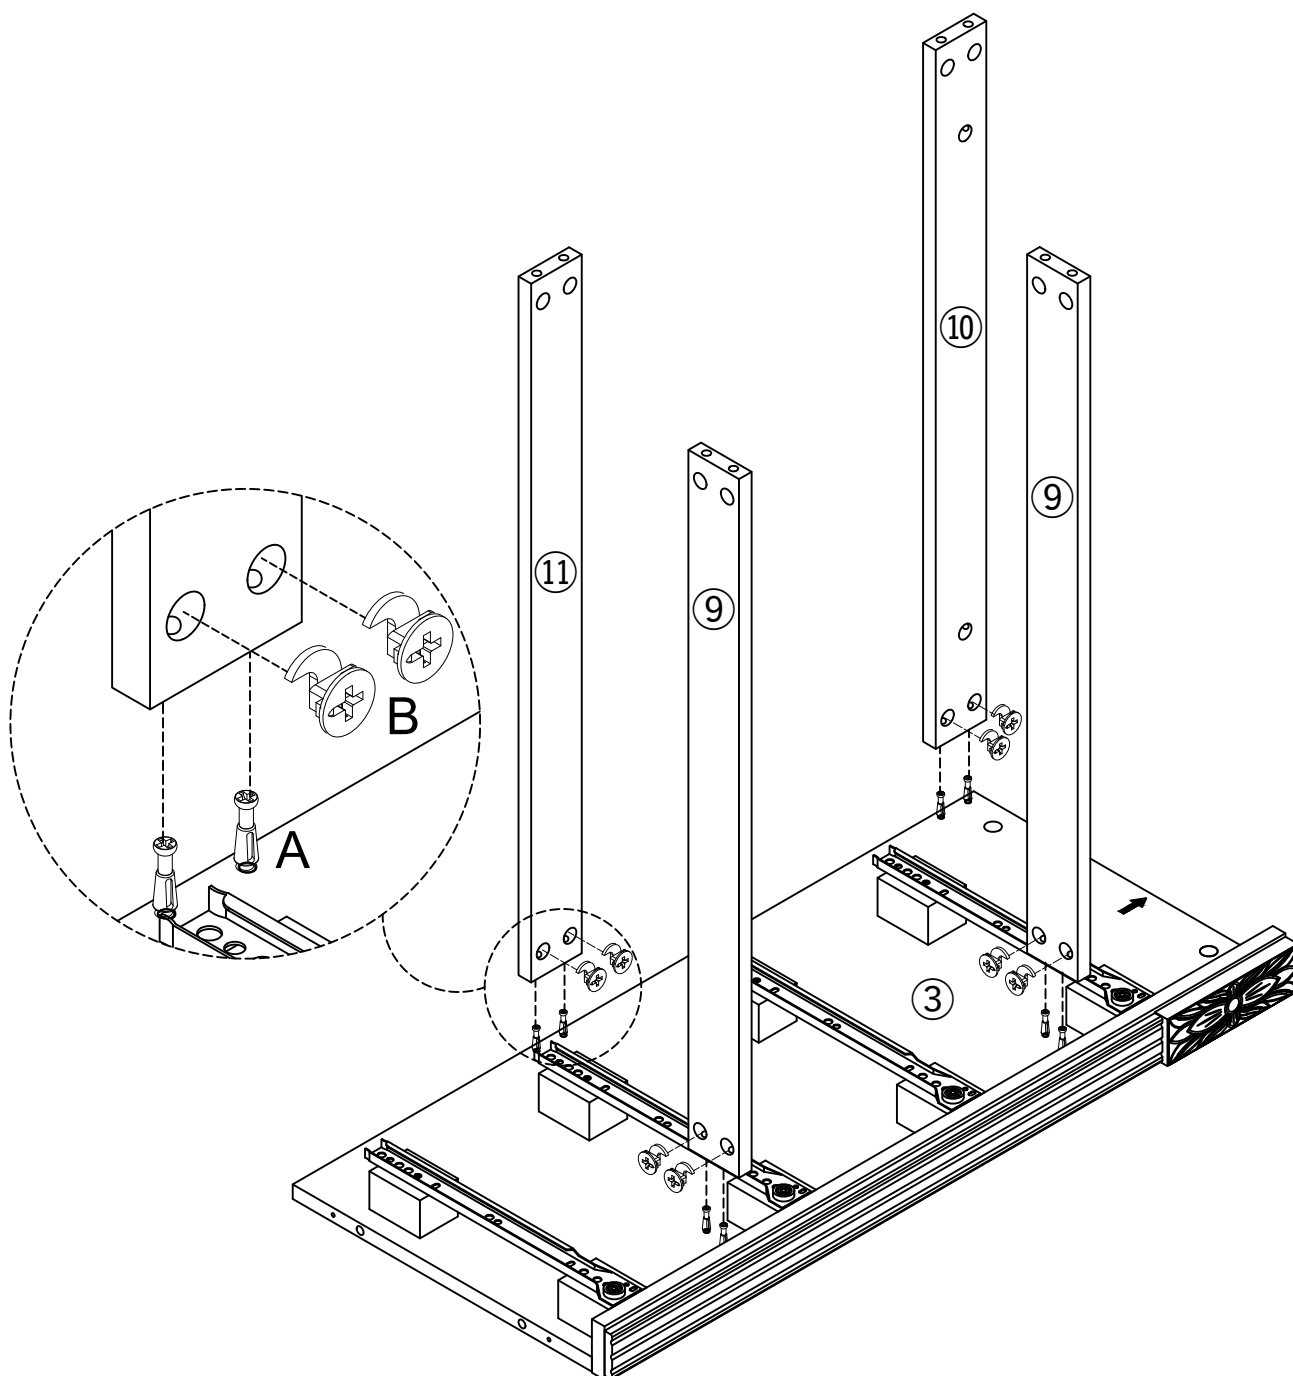


Step 6

-Screw (B) to lock the ⑨, ⑩, ⑪ to the panel ② as below shown

B




X8

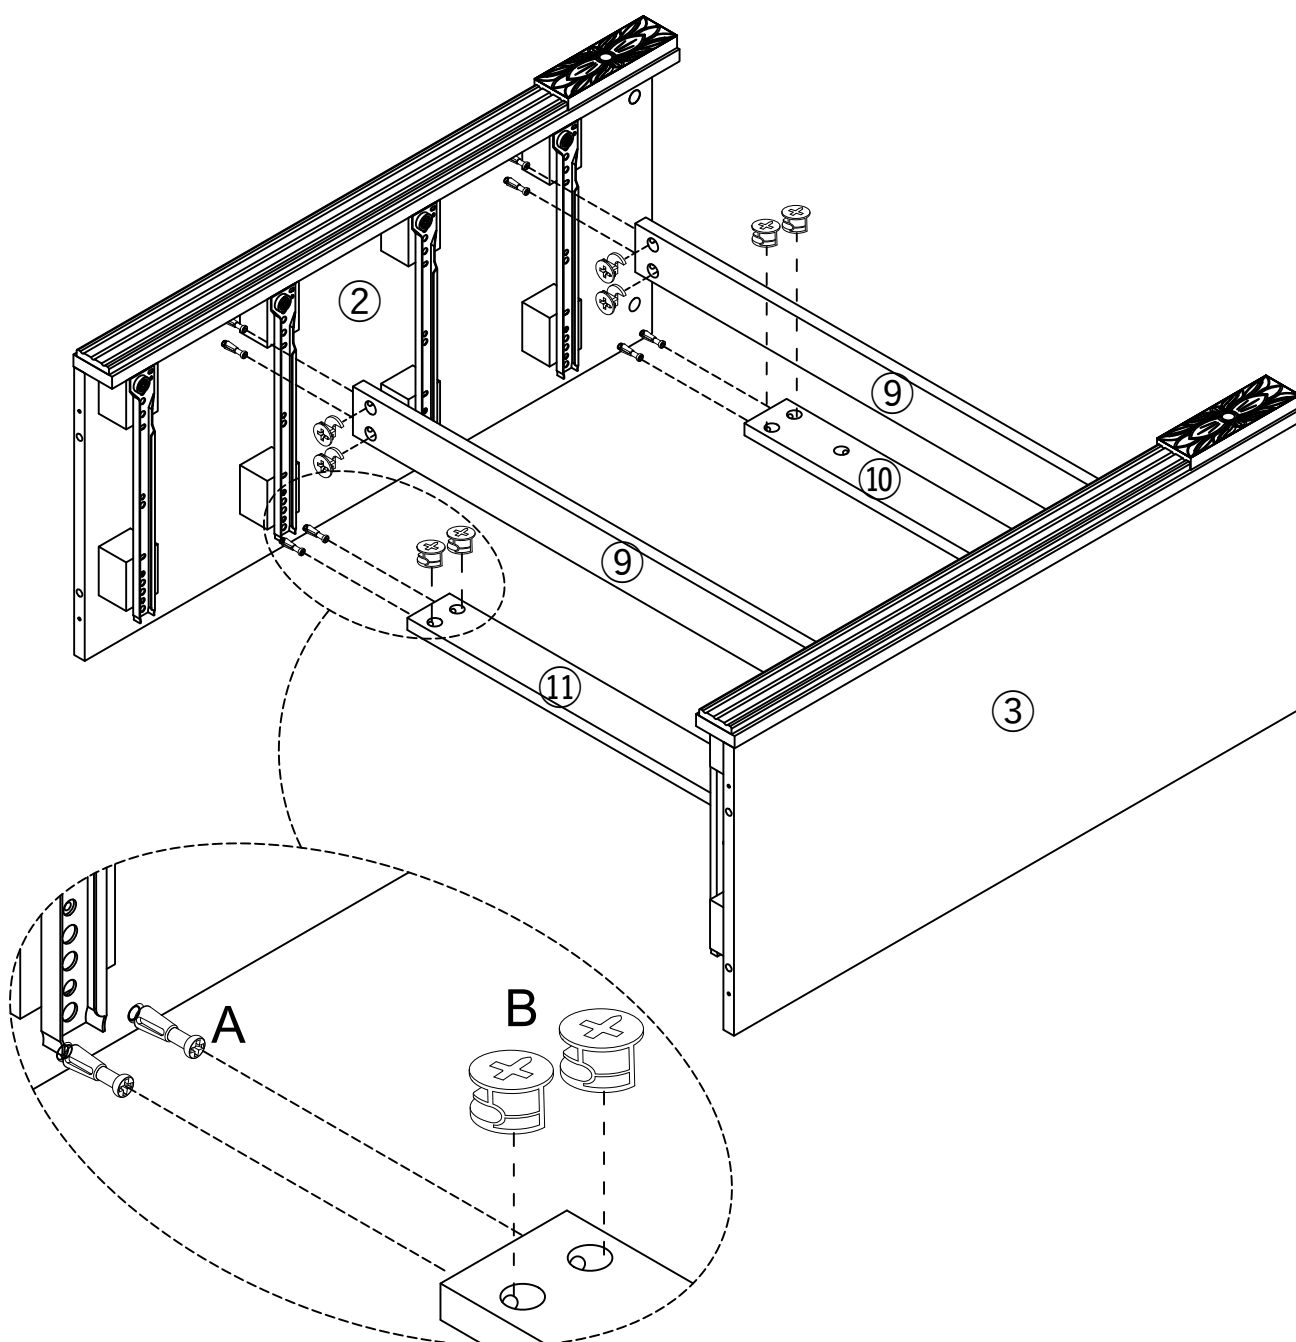


Step 7

A



X14

-Screw (A) to ④, ⑤, ⑥, ⑦ as below shown

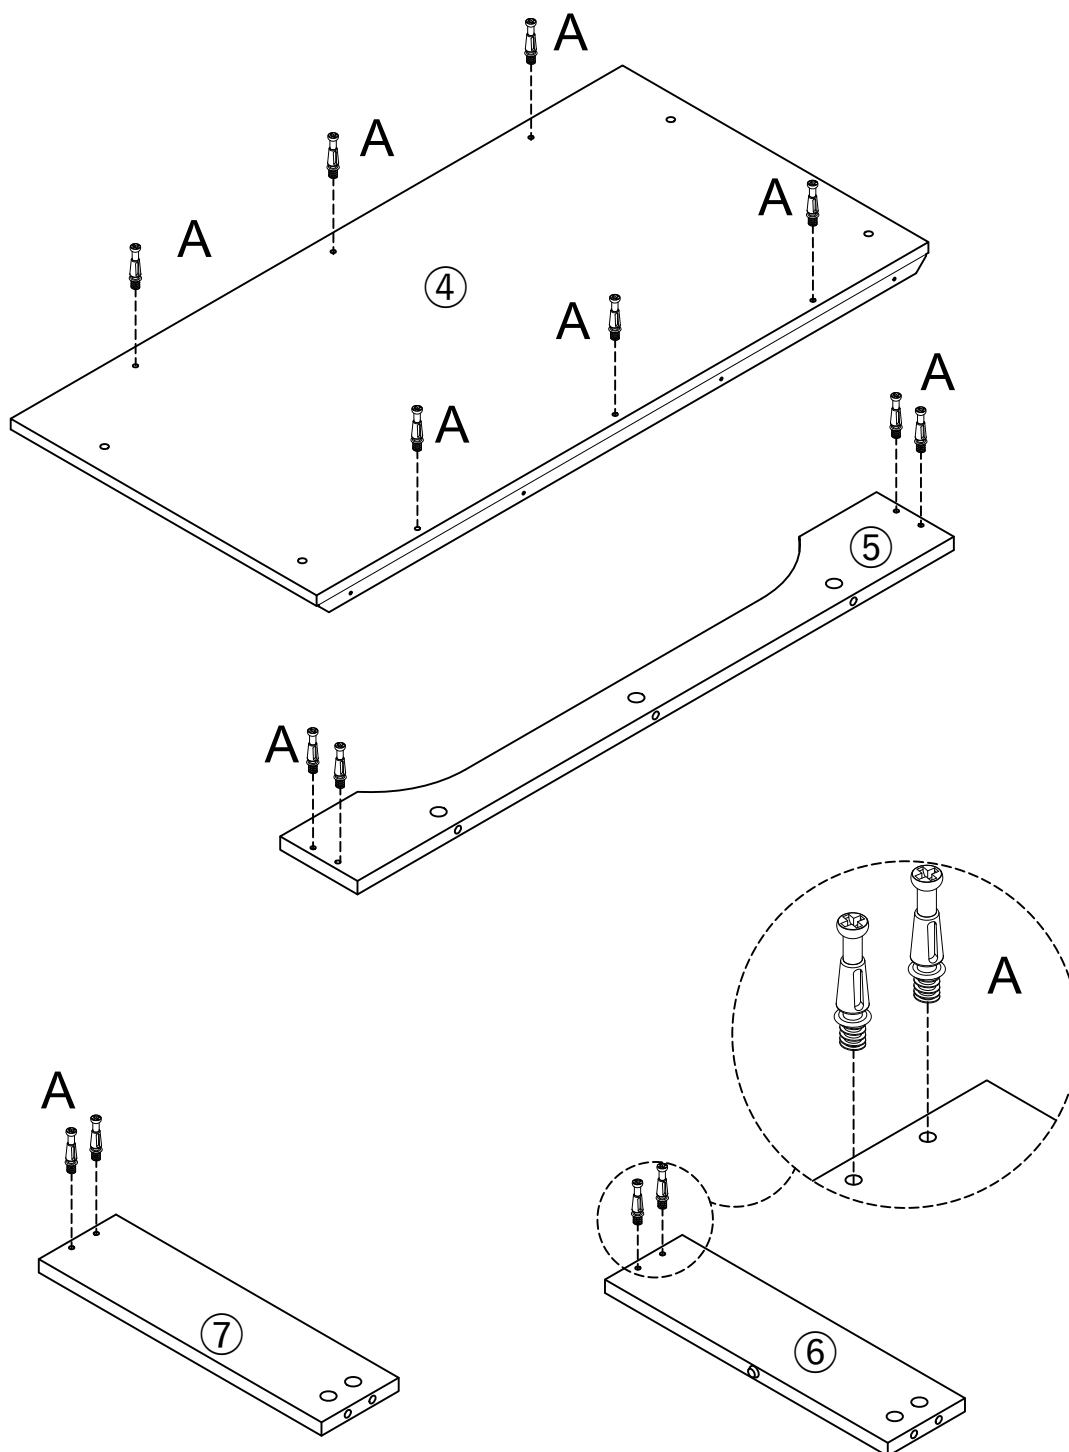


(A) should be screw to the
small holes as shown.

Step 8

C	E
	
X4	X4

-Screw (C) to ②,③ as below shown

-Screw (E) to lock the ④ with the panel ②,③ as below shown

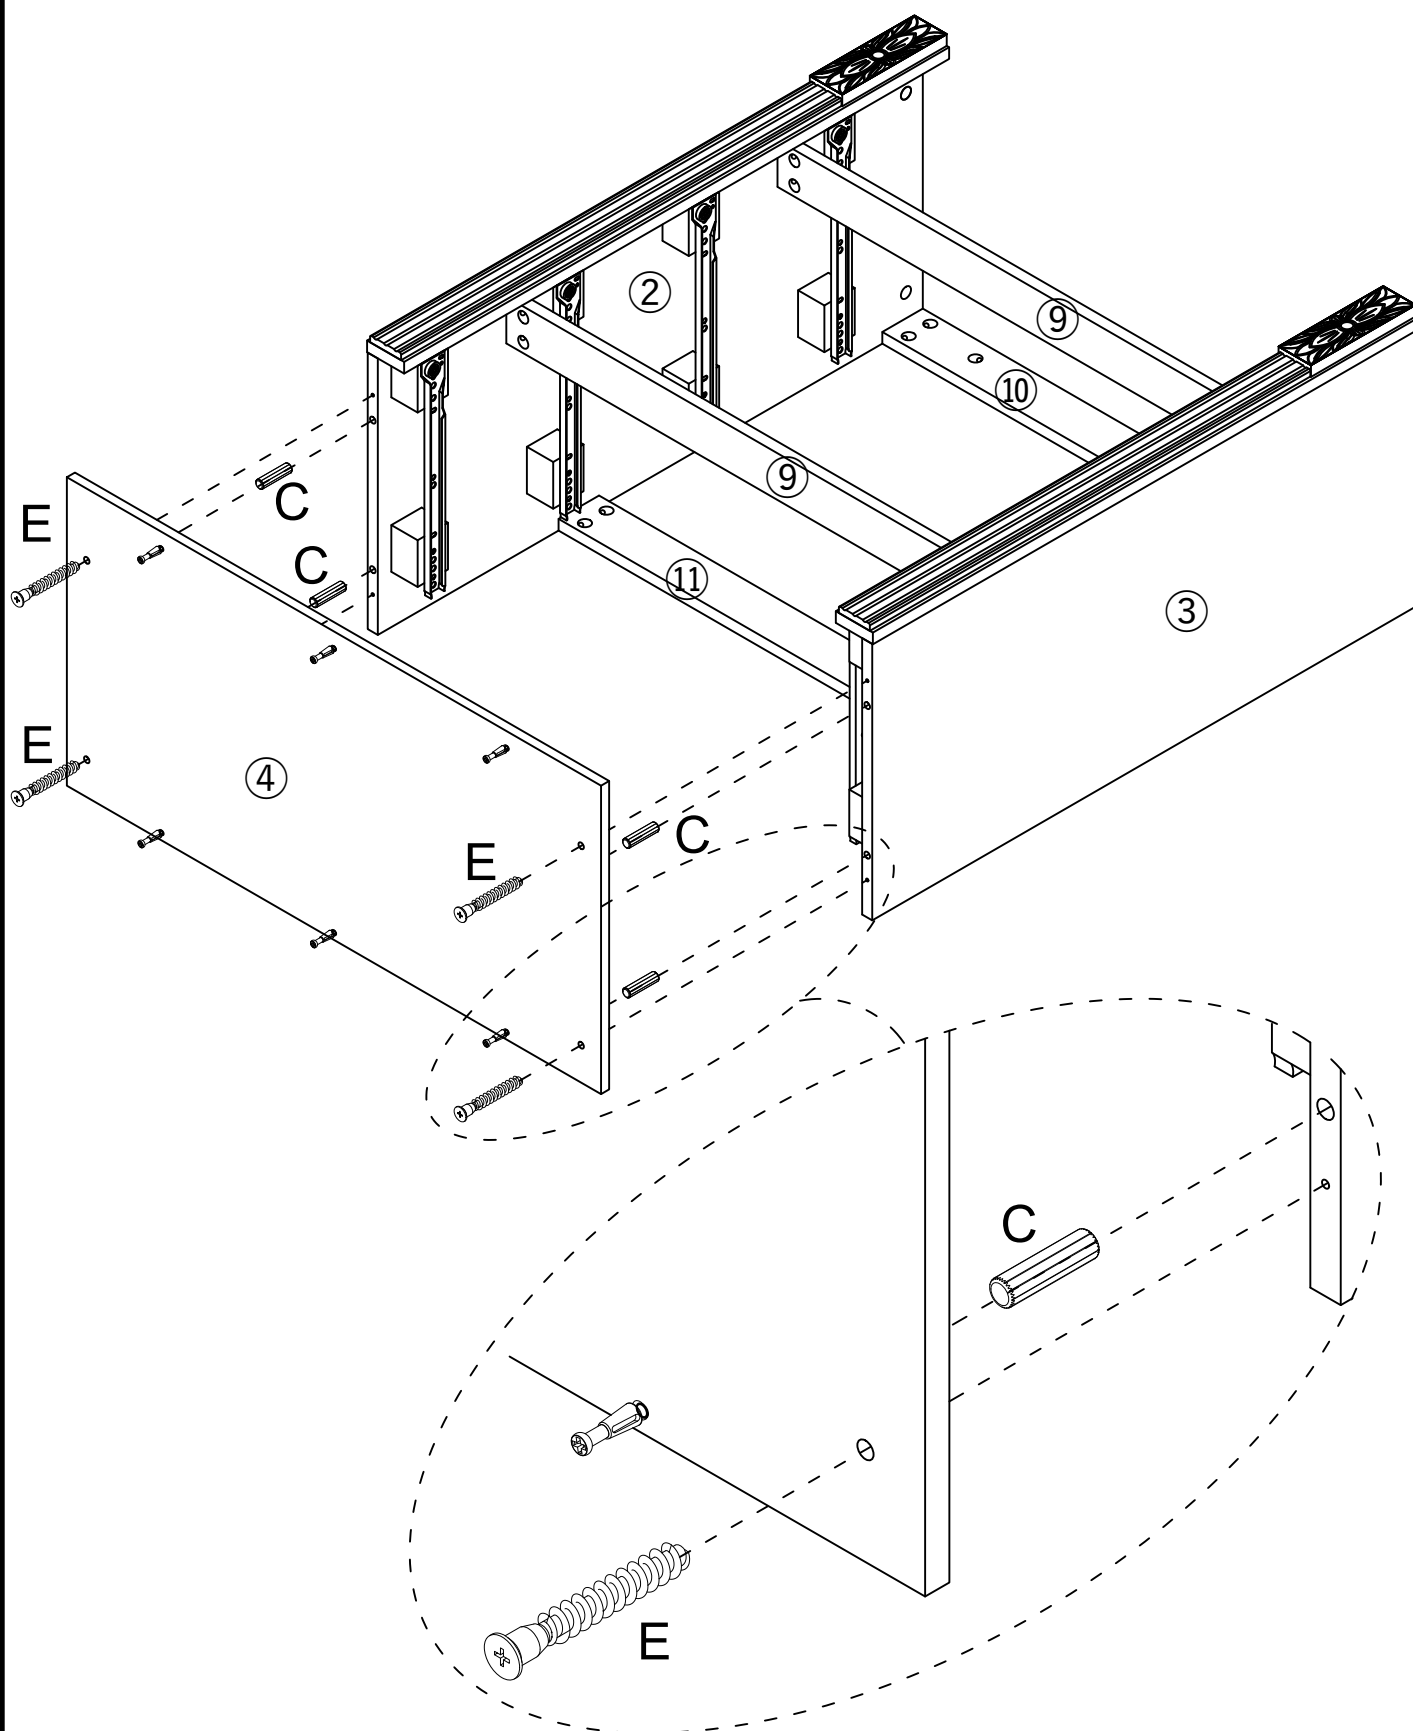

Step 9


B



X8

-Screw (B) to lock the ⑥, ⑦ to the panel ⑧ as below shown

-Screw (B) to lock the ⑥, ⑦ to the panel ⑤ as below shown

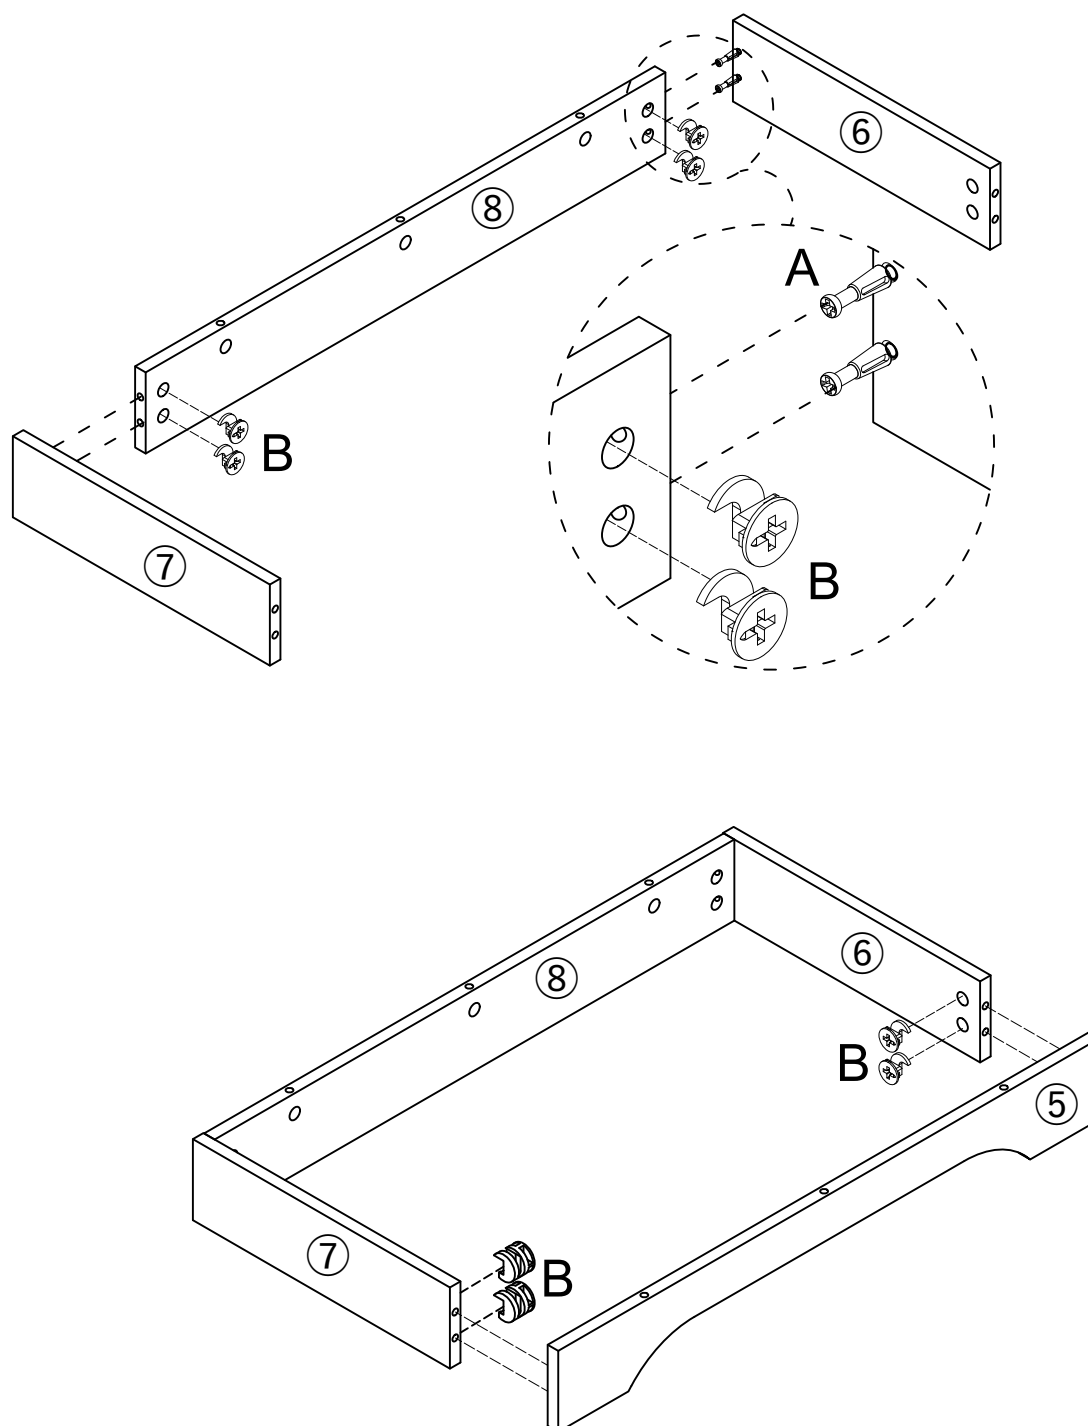


Step 10

B




X6


-Attach ⑤ & ⑥ & ⑦ & ⑧ to ④, then screw (B) to lock the panel ⑤ & ⑥ & ⑦ & ⑧ and ④ as below shown

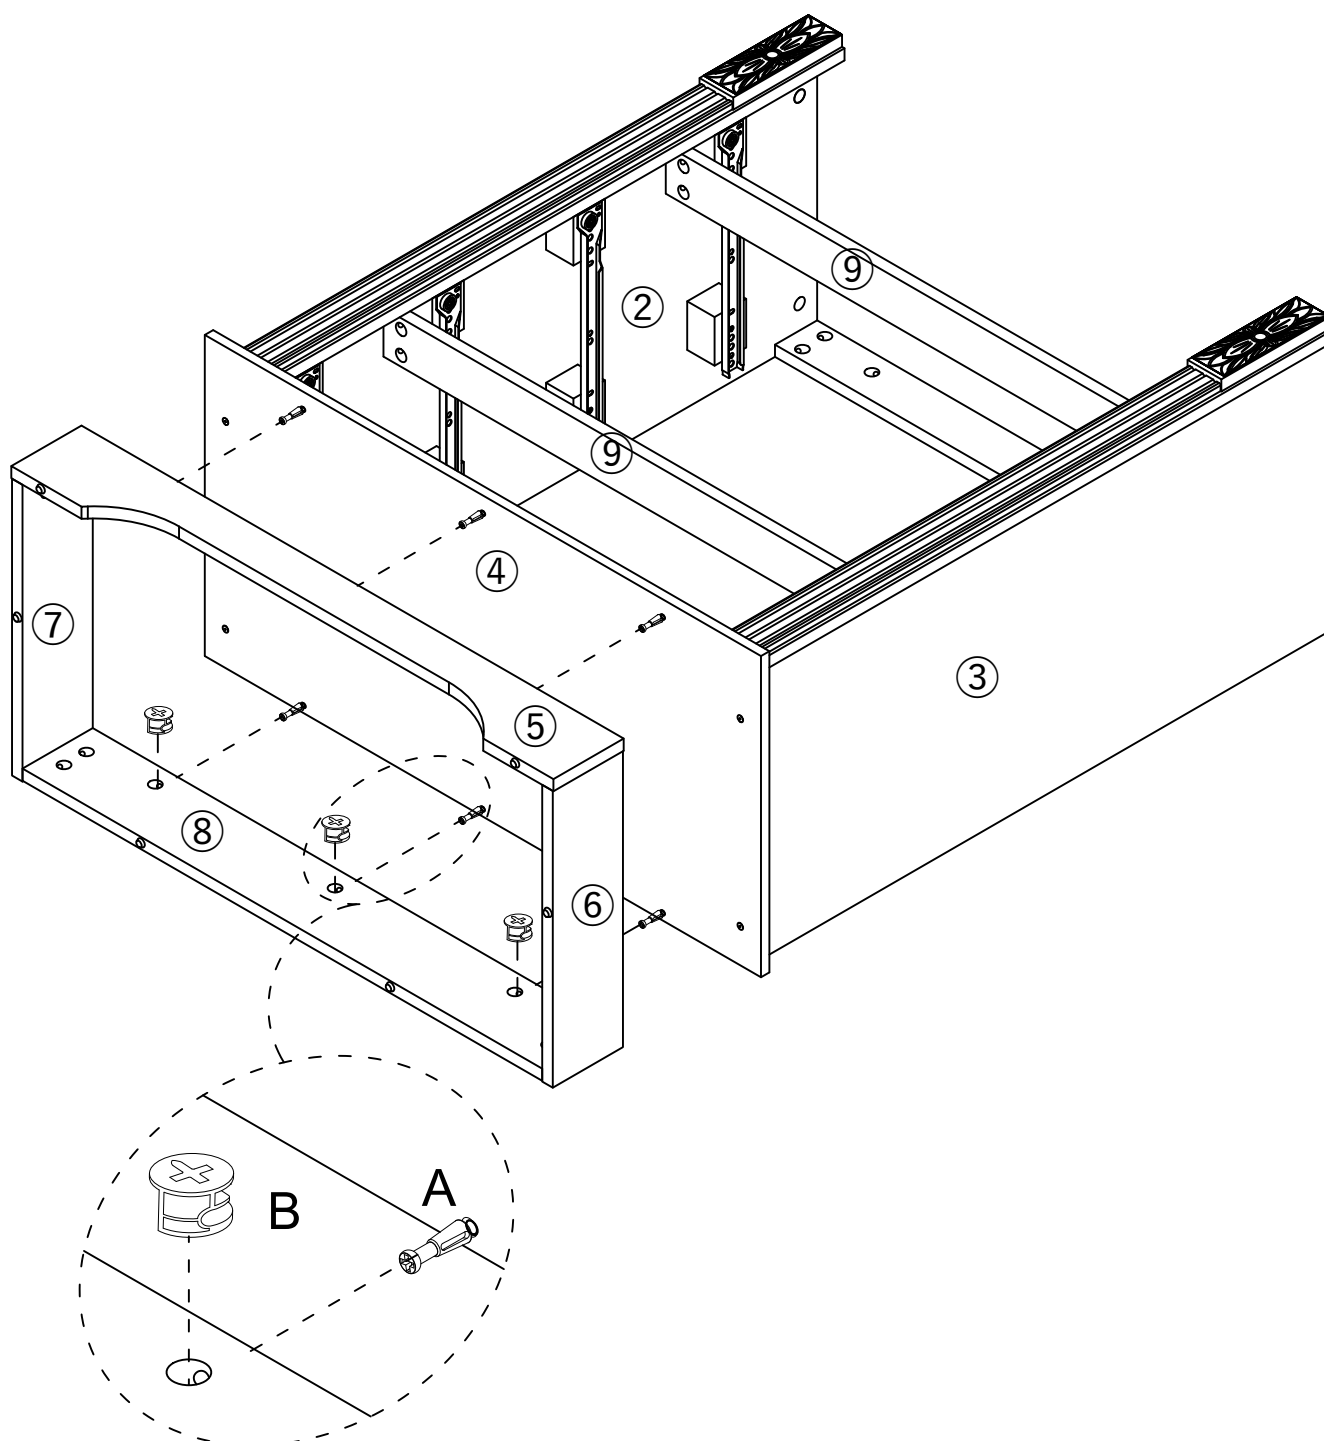

Step 11


- Screw (A) to ① as below shown
- Screw (C) to ②,③ as below shown
- Attach top panel ① to side boards ② & ③ & ⑩ as below shown
- Screw (B) to lock the ② & ③ & ⑩ with the top panel ① as below shown


A	B	C
		
X6	X6	X4

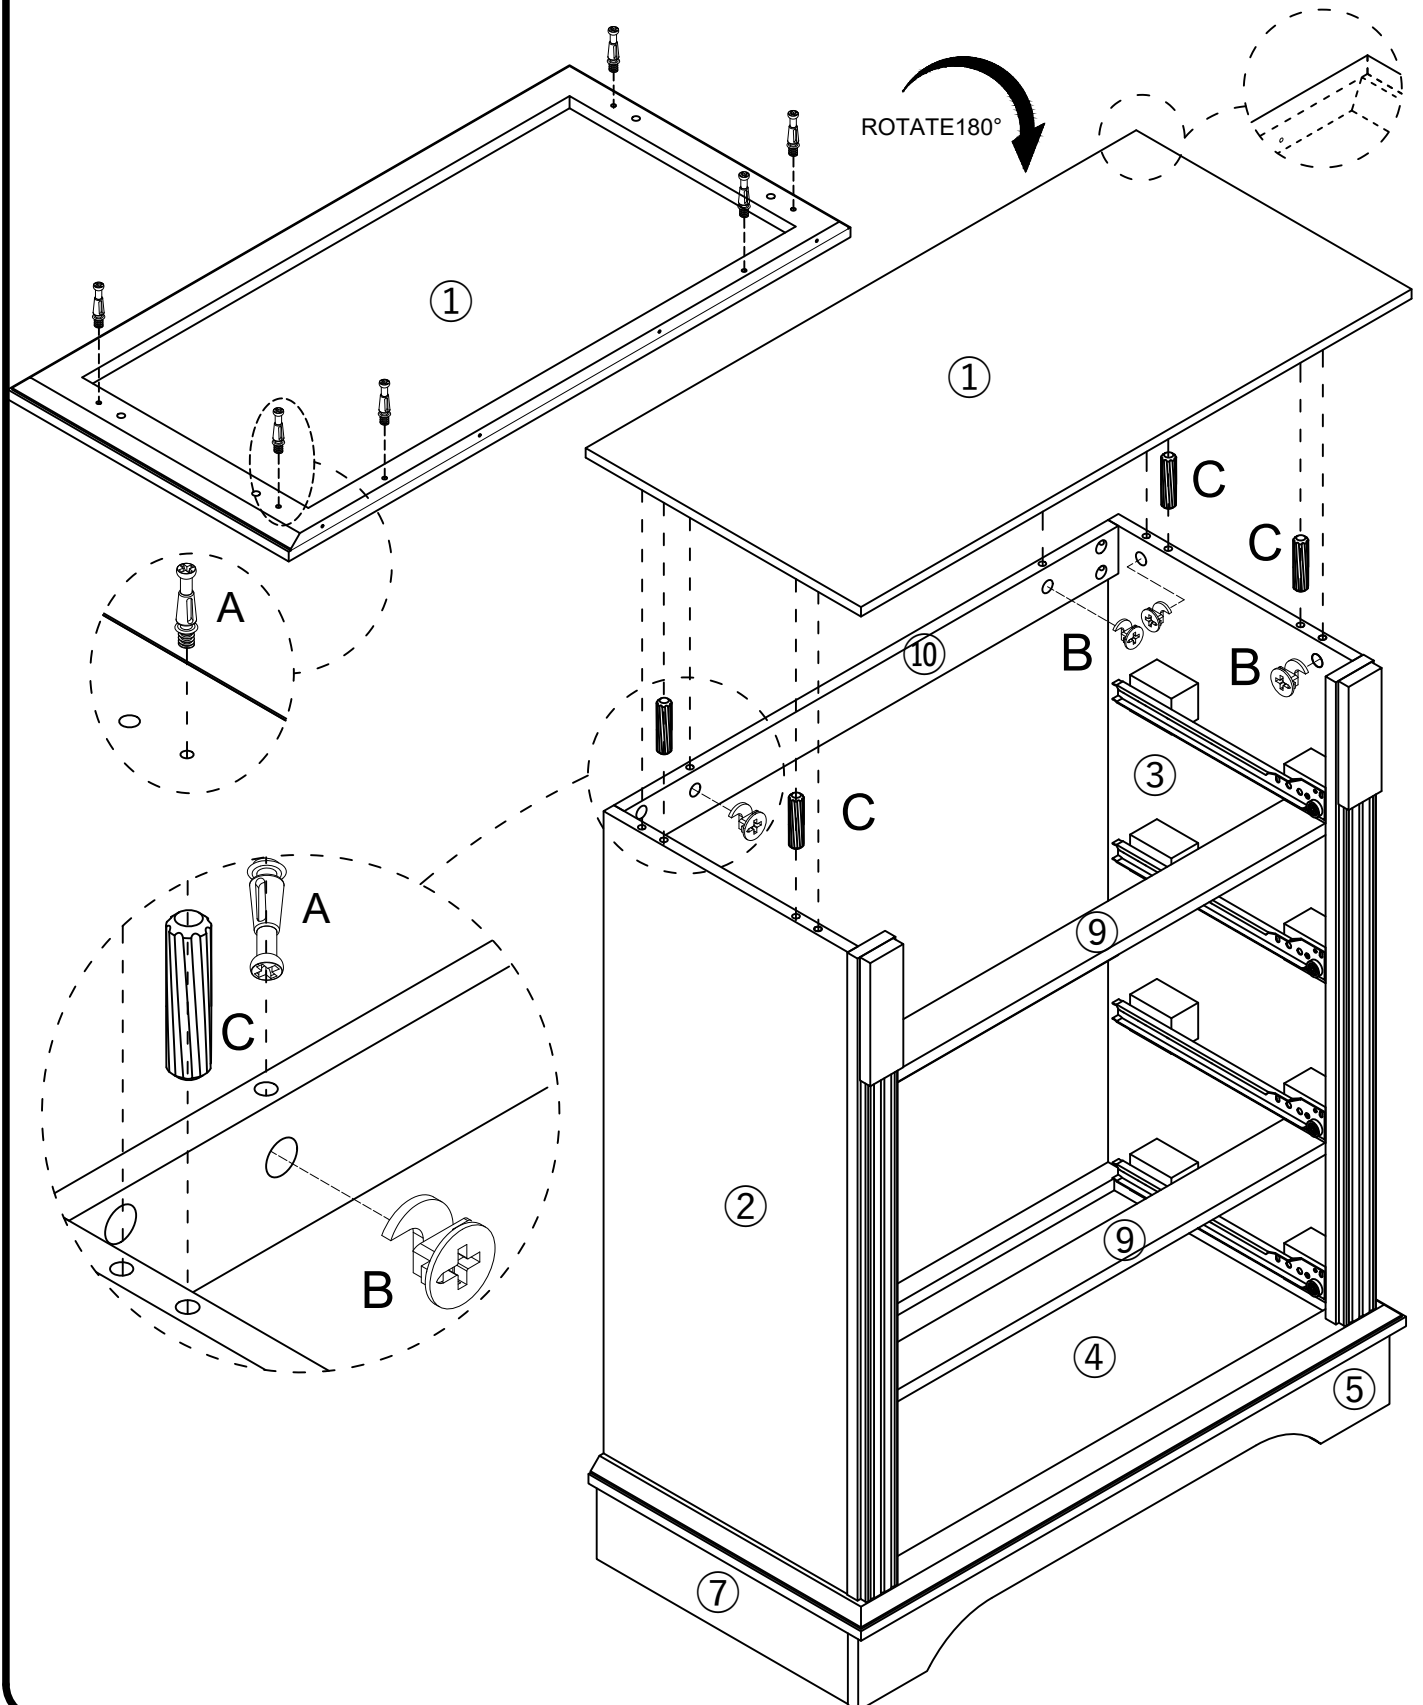

Step 12

- Screw (D) to install the back panel ⑫ as below shown
- Install the (K) as shown and lock it with (D)

D	K
	
X24	X1

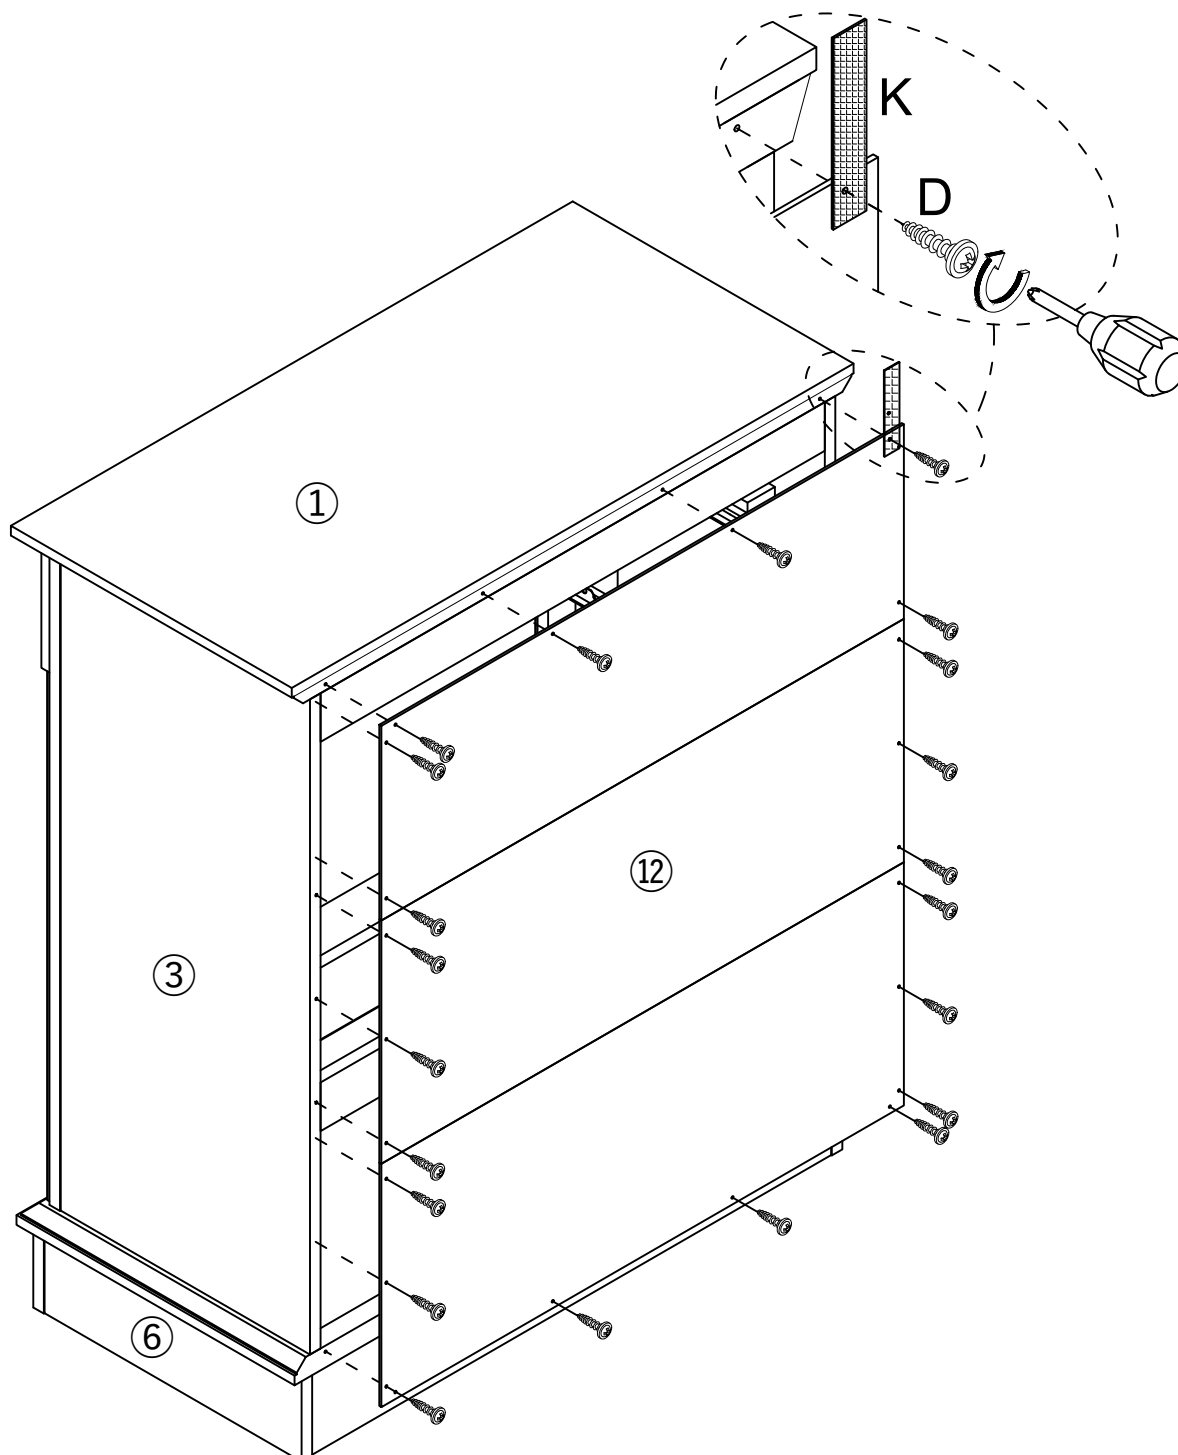


Warm Tips:

We recommend that to put the product upside down when you install the back panel, for screw the (D) easier.


Step 13

- Screw (A) to ⑬ as below shown
- Attach ⑭, ⑮, ⑱ to ⑬ as below shown
- Screw (B) to lock the ⑭, ⑮ and ⑱ with the panel ⑬

A	B
	
X20	X20

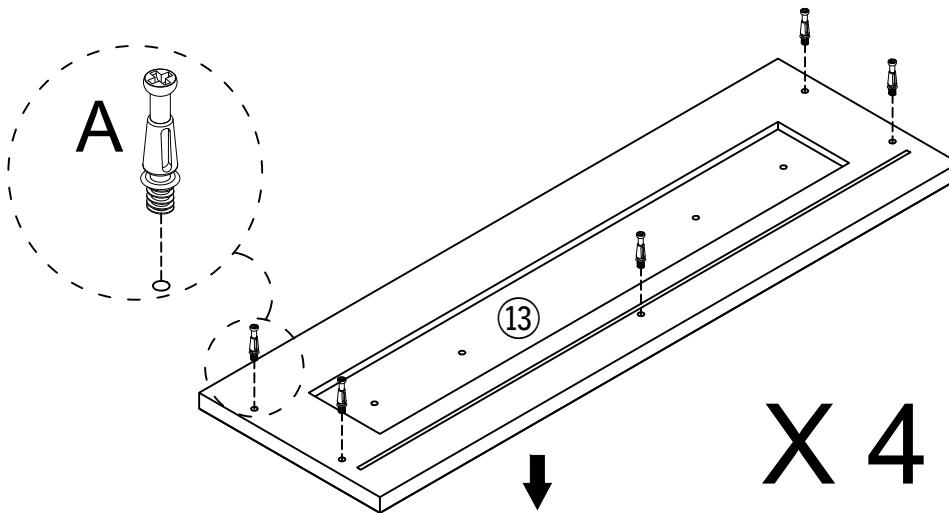

The long groove is used to install the bottom plate, make sure to take note of installing the grooves of these boards on the same side.

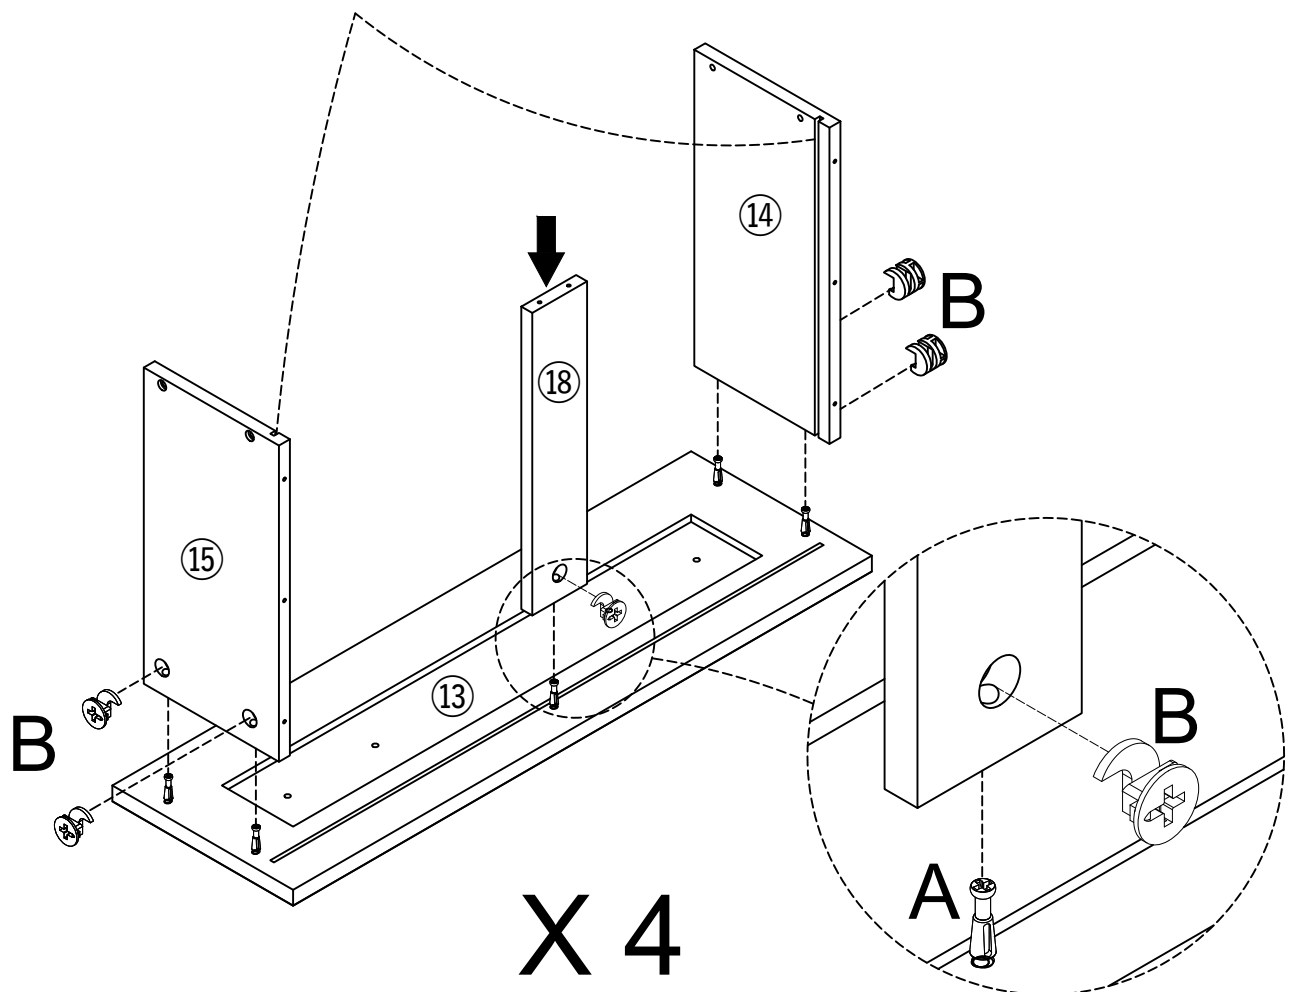


Step 14

- Insert the drawer bottom panel ⑰ as below shown
- Attach ⑯ as below shown
- Screw (F) to lock ⑭, ⑮, ⑱ with ⑯ as below shown

F


X24

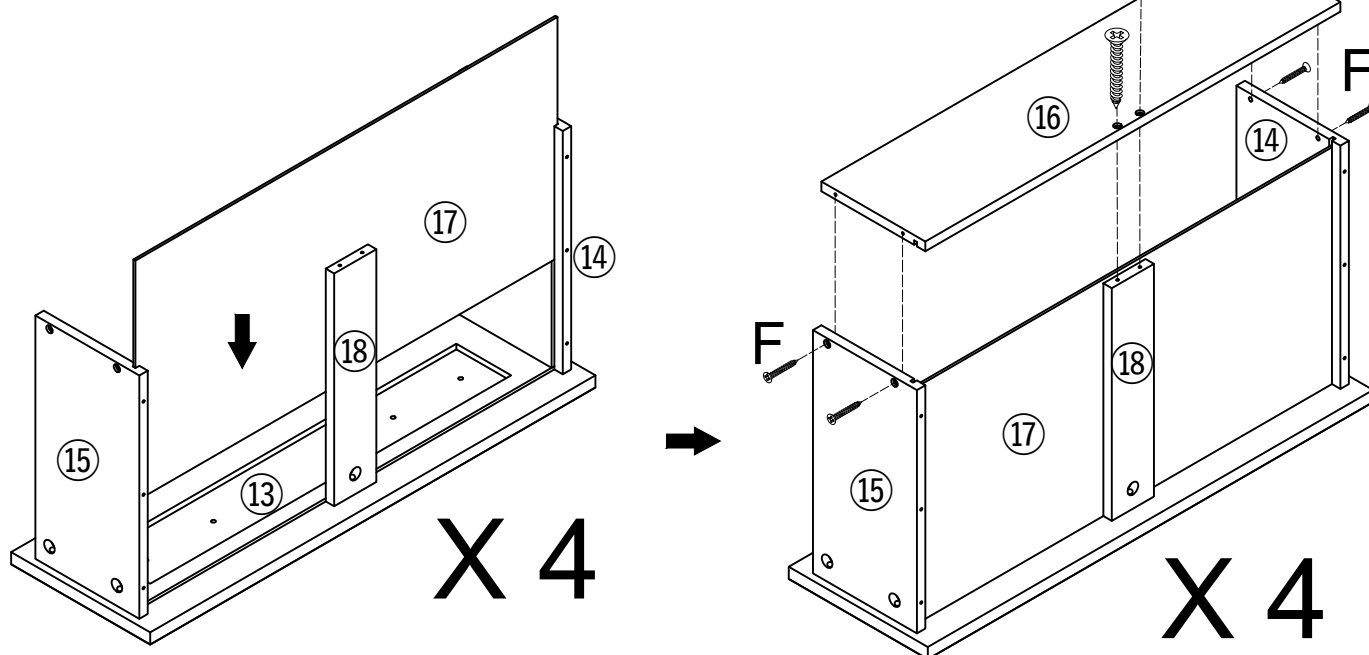

Step 15

- Use (G) to lock the drawer knob (H) to ⑬ as below shown

G	H
	
X16	X8

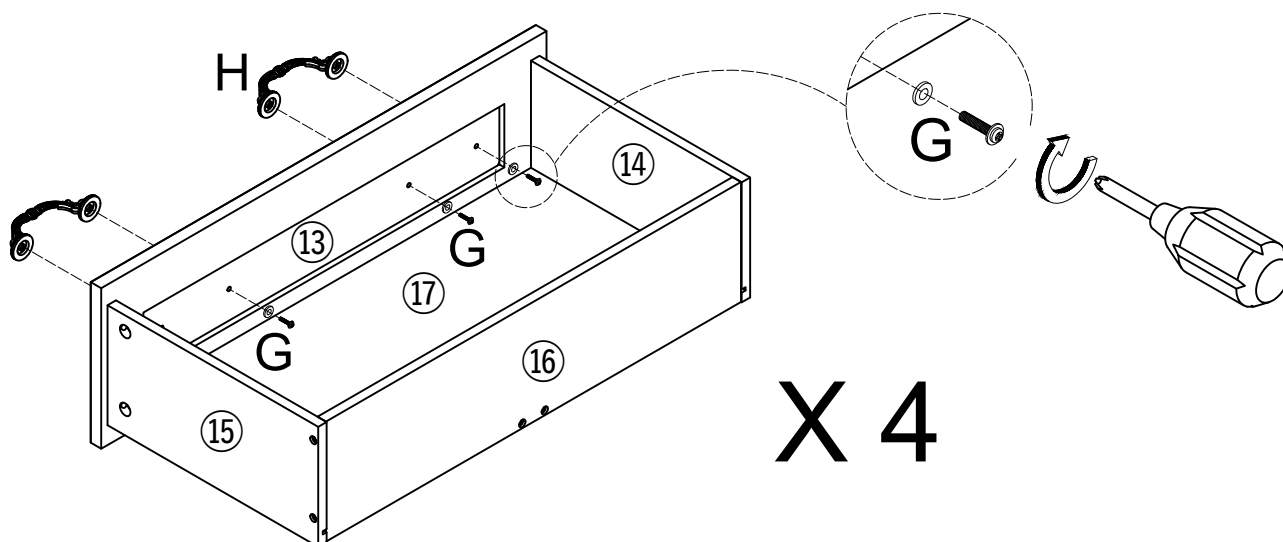


Step 16

I	I	J
 DL	 DR	
X4	X4	X24

-There is a sign on each slide like DL or DR. We mark them as below shown and we suggest you check it carefully to avoid installing in a wrong way.




-Install the drawer slides (I) on the drawer side panels ⑭ & ⑮ as below shown

If necessary, install another screw in the middle of the drawer slide.

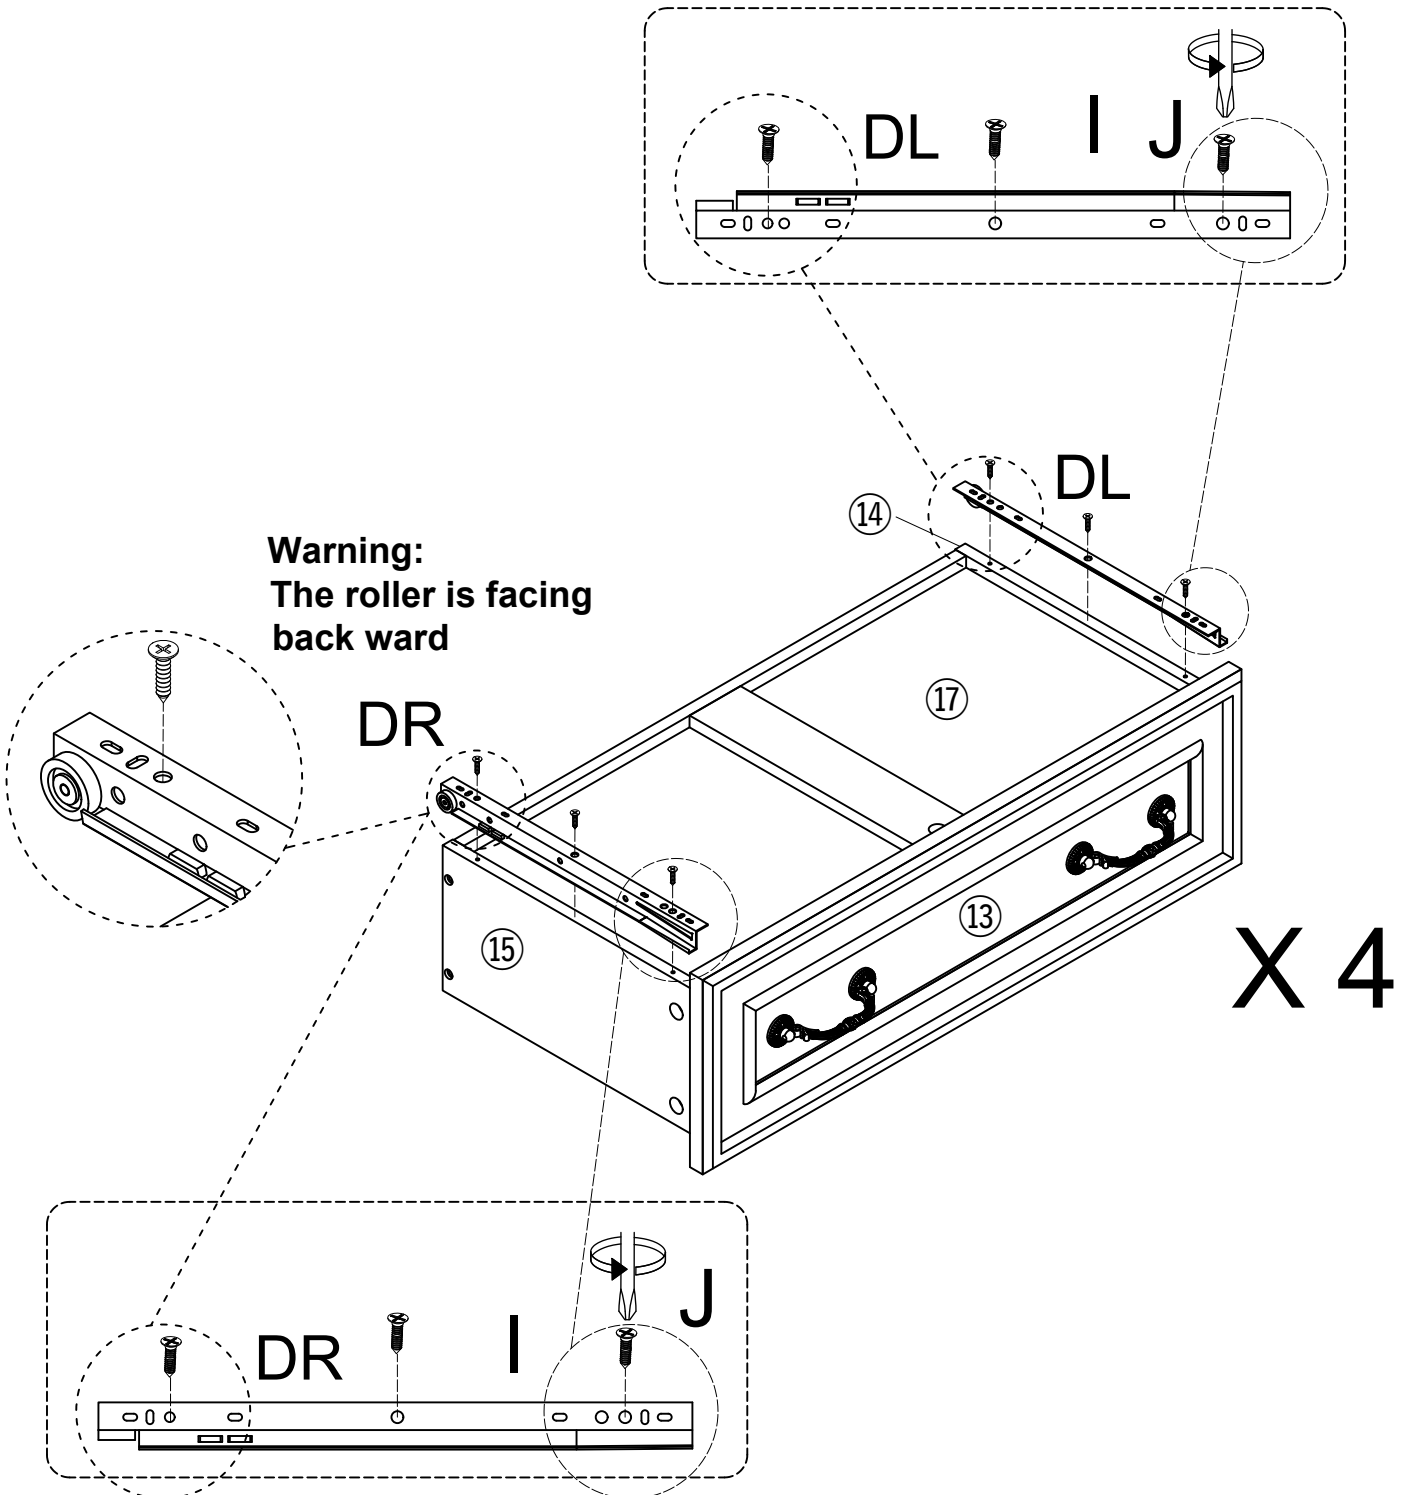

Repeat the previous step to install the remaining drawers.

Step 17

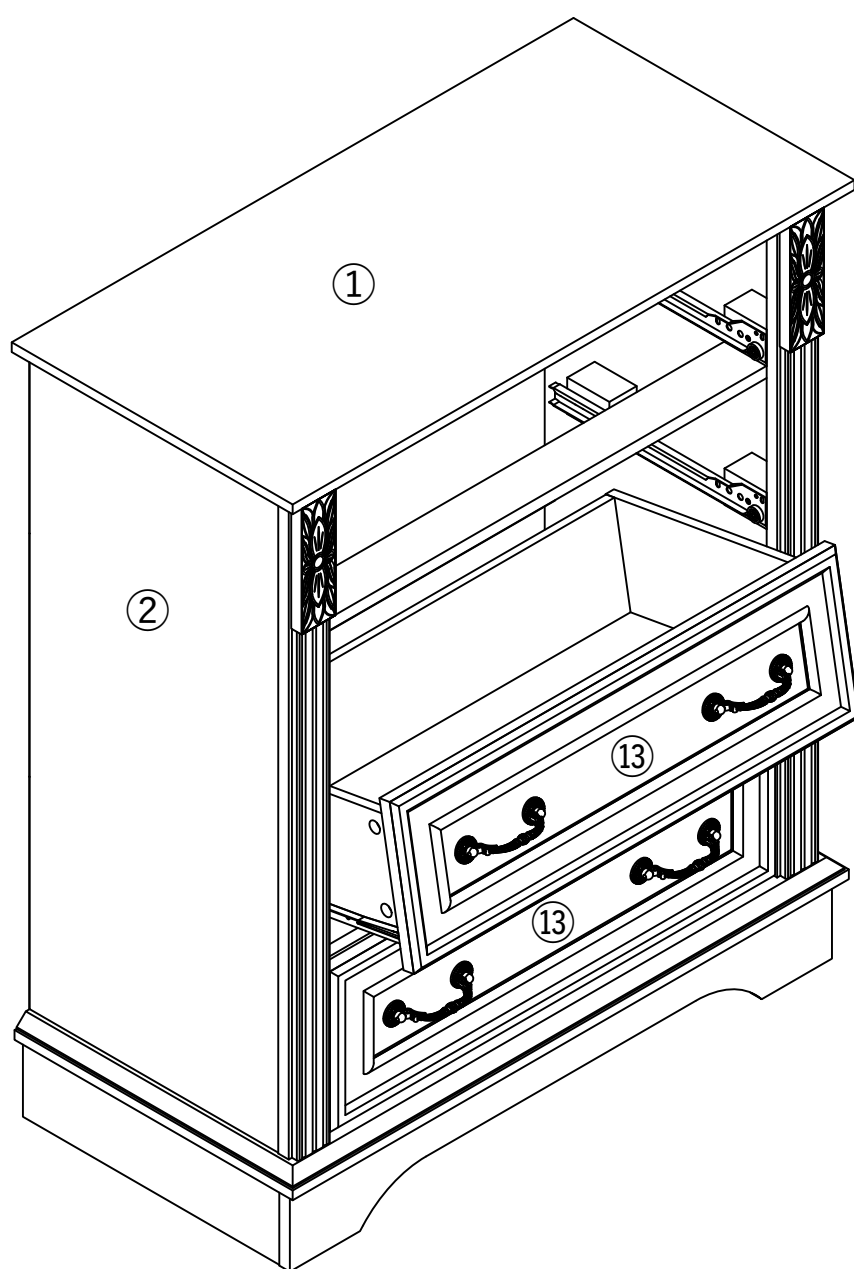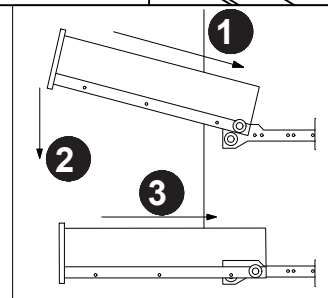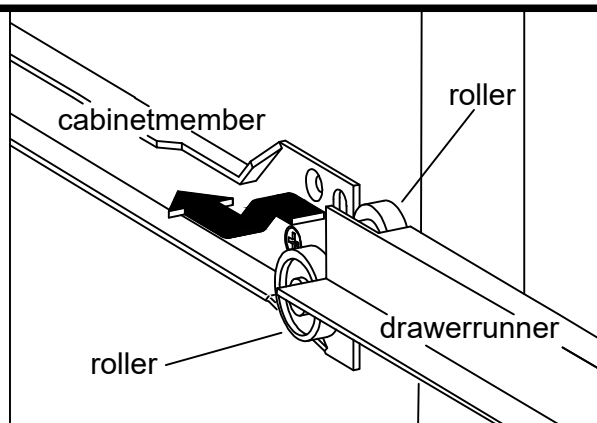


X 4

Step 18

K



X1

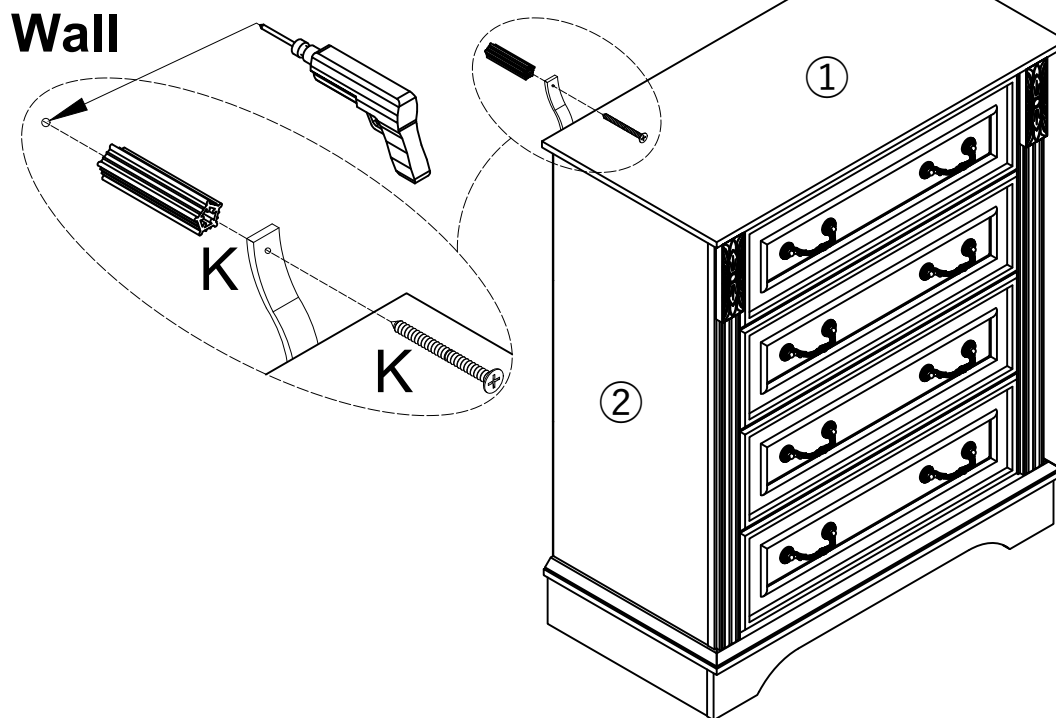

Tools required (not included): phillips screwdriver, stud finder, tape measure, pencil, power drill and 3/16" drill bit.

Now, follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud depending upon your wall construction, and different anchor hardware maybe required. Please contact your local hardware store for assistance.

Young children can be seriously injured by tipping furniture, so you must install the tipping restraint hardware with the unit to prevent the unit from tipping, in case of causing any accidents or damage.

The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision.

The tipping restraints are not earthquake restraints. if you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.