


ASSEMBLY INSTRUCTIONS:

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A FLAT SURFACE AND LINE THEM UP AS PER THE SKETCH.
2. DRILL THE HOLE ON THE WALL ACCORDING THE PLATE (D) USING PLASTIC ANCHORS (E).
3. ATTACH THE PLATE (D) TO THE PLASTIC ANCHORS (E) ON THE WALL WITH SCREWS (C).
4. ATTACH THE LAMP BODY (A) ON THE PLATE (D) WITH FINIAL (B).
5. TAKE OUT OF THE WIRE COVER FITTINGS AFTER THE BODY (A) IS FIXED ON THE WALL.
6. PUT THE WIRE COVER (F) ON THE WIRE OUTLET OF THE BODY (A) ADJUST THE POSITION TO BE SUITABLE AND DRILL THE HOLE ACCORDING THE HOLE OF THE WIRE COVER (F).
7. DRIVE THE PLASTIC ANCHOR (E) INTO THE WALL ACCORDING THE HOLE ON THE WIRE COVER (F).
8. AFFIX THE WIRE COVER (F) ON THE WALL WITH THE SCREW(C).
9. PUT THE WIRE (H) THROUGH THE WIRE COVER (F).
10. PUT THE WIRE COVER (G) INTO THE WIRE COVER (F) ASSURING THAT IT COVERS THE WIRE COVER (F) COMPLETELY.
11. INSTALL THE BULB (I) SECURELY IN THE SOCKET. TURN ON YOUR NEW WALL LAMP AND ENJOY.

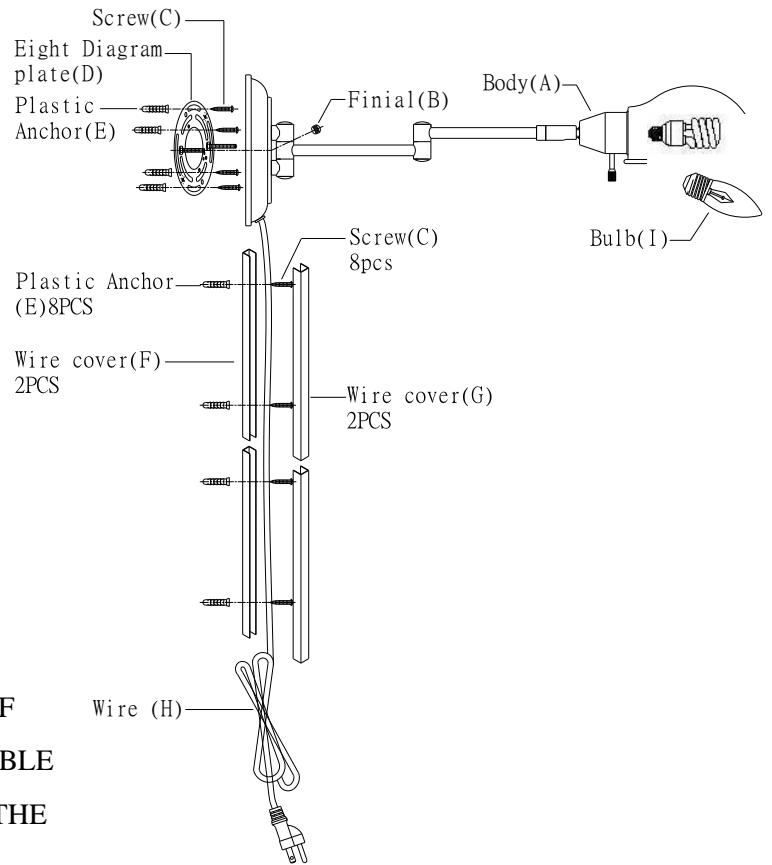

USE A 13W CFL BULB OR 40W (MAXIMUM) INCANDESCENT B TYPE BULB.

※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.