

Assembly Instructions

Caution : You must read this before you proceed



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.




- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in CABINET SINK for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.







CABINET SINK : N765P435262 + S24002-31W(31")







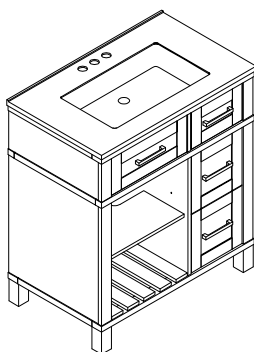






Parts List





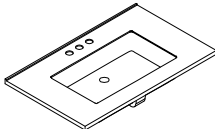
Label	Picture	Description	QTY
S24002-31W(31")			
A		Sink	1

Parts List

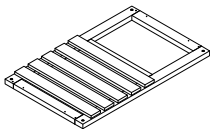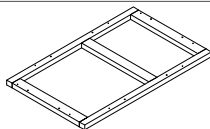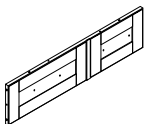Label	Picture	Description	QTY
N765P435262			
B		Lower Base Frame	1
C		Middle Frame	1
D		Upper Left Front Rail	1
E		Upper Right Front Rail	1
F		Middle Vertical Panel	1
G		Upper Front Baffle	1

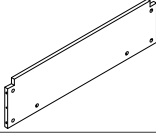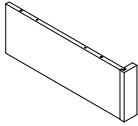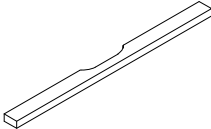
Parts List			
Label	Picture	Description	QTY
N765P435262			
H		Upper Back Panel	1
I		Lower Back Panel	1
J		Upper Side Panel	2
K		Cabinet Leg	4
L		Lower Left Side Panel	1
M		Lower Right Side Panel	1
N		Upper Front Rail	1
O		Drawer Front Panel	2
P		Drawer Left Side Panel	2
Q		Drawer Right Side Panel	2
R		Drawer Back Panel	2
S		Drawer Bottom Panel	2


Parts List			
Label		Description	QTY
N765P435262			
T		Adjustable Shelf	1
Hardware			
Label	Picture	Description	QTY
N765P435262			
①		Cam bolt (Ø6 x 33mm)	38 Extra 2
②		Cam lock (Ø15 x 10mm)	38 Extra 2
③		Wooden dowel (Ø6 x 30mm)	40 Extra 2
④		Wooden dowel (Ø10 x 40mm)	4
⑤		Screw (Ø3 x 12mm)	14 Extra 1
⑥		Screw (Ø3 x 12mm)	3
⑦		Screw (Ø3.5 x 12mm)	24 Extra 2
⑧		Screw (Ø4 x 38mm)	8 Extra 1
⑨		Screw (Ø4 x 50mm)	6 Extra 1

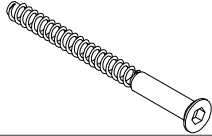Hardware			
Label	Picture	Description	QTY
N765P435262			
⑩		Hex Head Screw (Ø7 x 84mm)	4 Extra 1
⑪		Handle	4
⑫		Bolt (Ø5/32" x 12mm)	4 Extra 1
⑬		Bolt (Ø5/32" x 21mm)	4 Extra 1
⑭		Shelf Pin	3
⑯		Anti-Tip	2set
⑰		Allen key (M4 x 57mm)	1
⑱		Iron (10")	2set
		Destornillador Phillips	1

Assembly Preparation


Before
Beginning
Assembly:

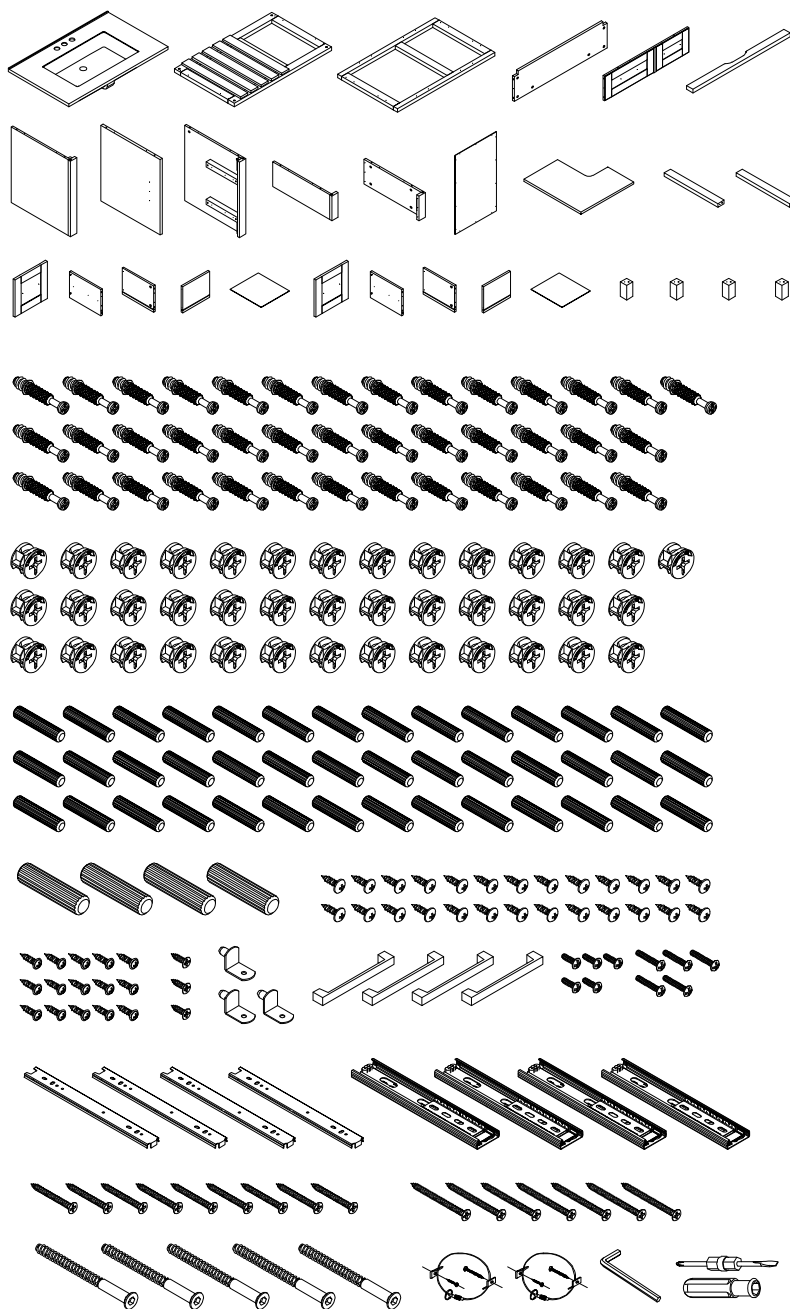

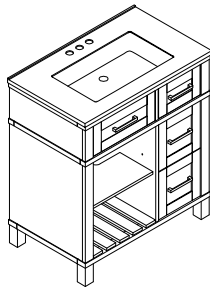


AssemblySteps

Overview

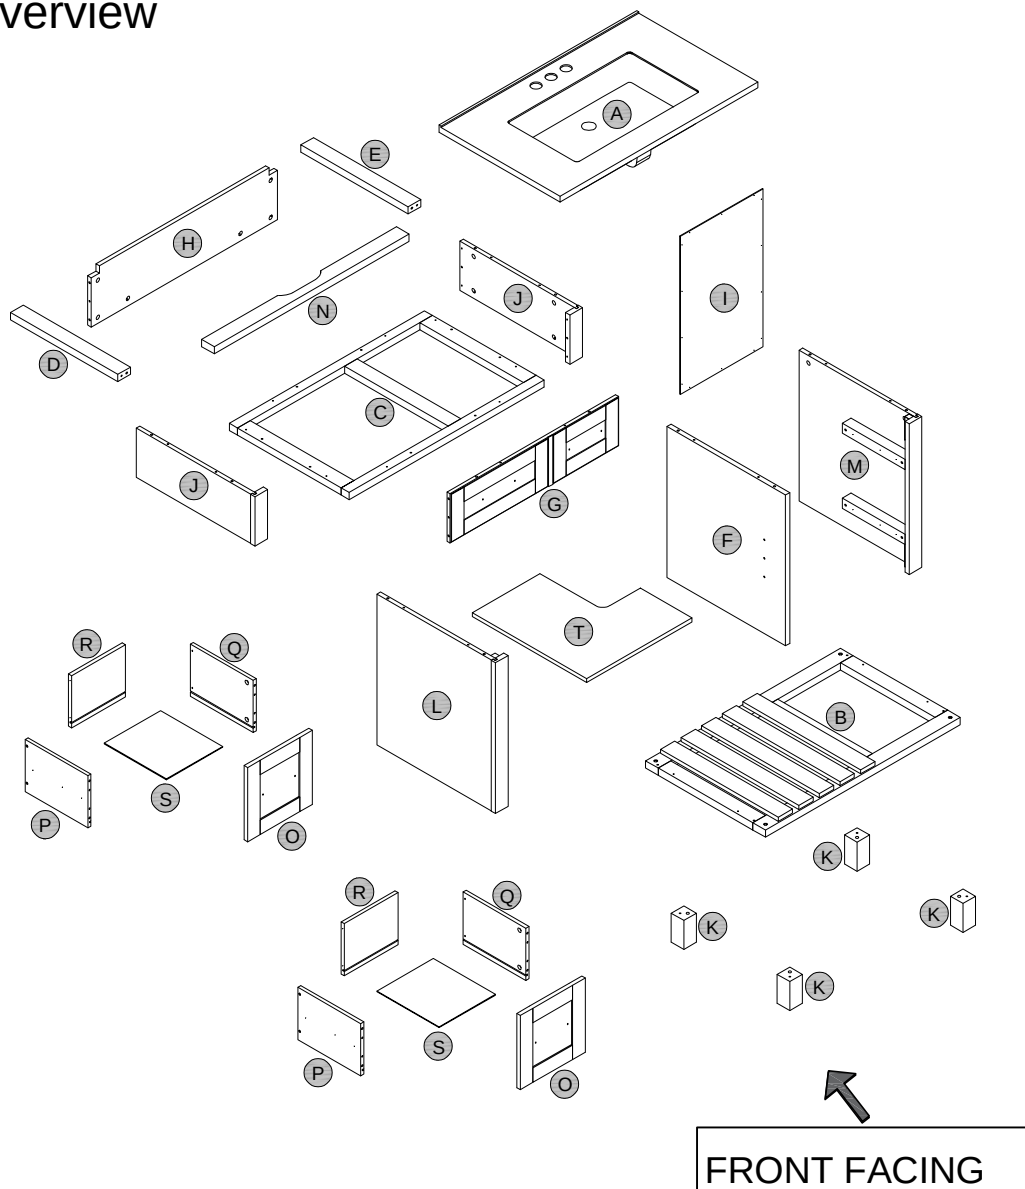

This CABINET SINK has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Lavabo 1 part, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.

Completed

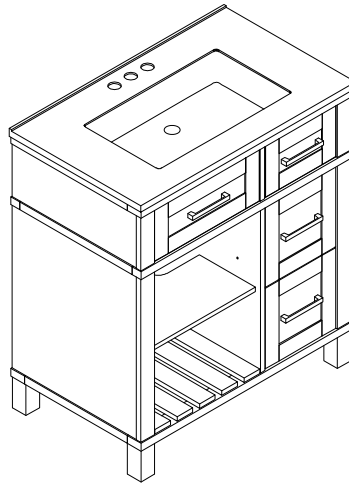

Turn the CABINET SINK right side up.

Place the CABINET SINK on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Gently and gracefully, sit into to the CABINET SINK.
This would help to align all the parts at all the joint areas.

Then get off the CABINET SINK, and in a sequential manner,
proceed to tighten all screws.

To tighten the Screws at the base of the Backrest, do secure
assistance from your adult partner(s).

You may be required to turn the CABINET SINK, to gain easy
access to the secure points.

Turn the CABINET SINK in a synchronised manner.

CAUTION 1: When tightening these screws, tighten
sequentially.

DO NOT tighten any screw fully and then towards the next
one.

This would cause the frame to warp.

If there is still wobbles, loosen the screws and execute this
same process.


WARNING!! IF CABINET SINK IS NOT STABLE , IT COULD
LEAD TO DAMAGING THE PRODUCT.

Ensure all screws are fully locked into position.


The CABINET SINK is ready to be used.

Caution 2: This CABINET SINK can only be used on a flat,
level surface.


Step 1

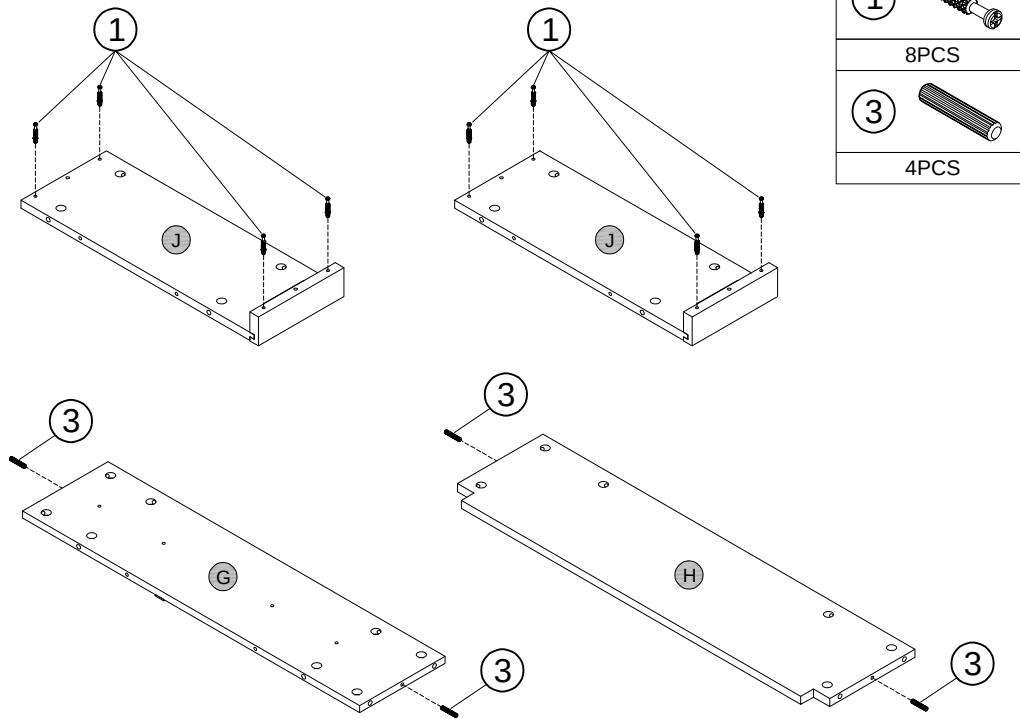


Step 2

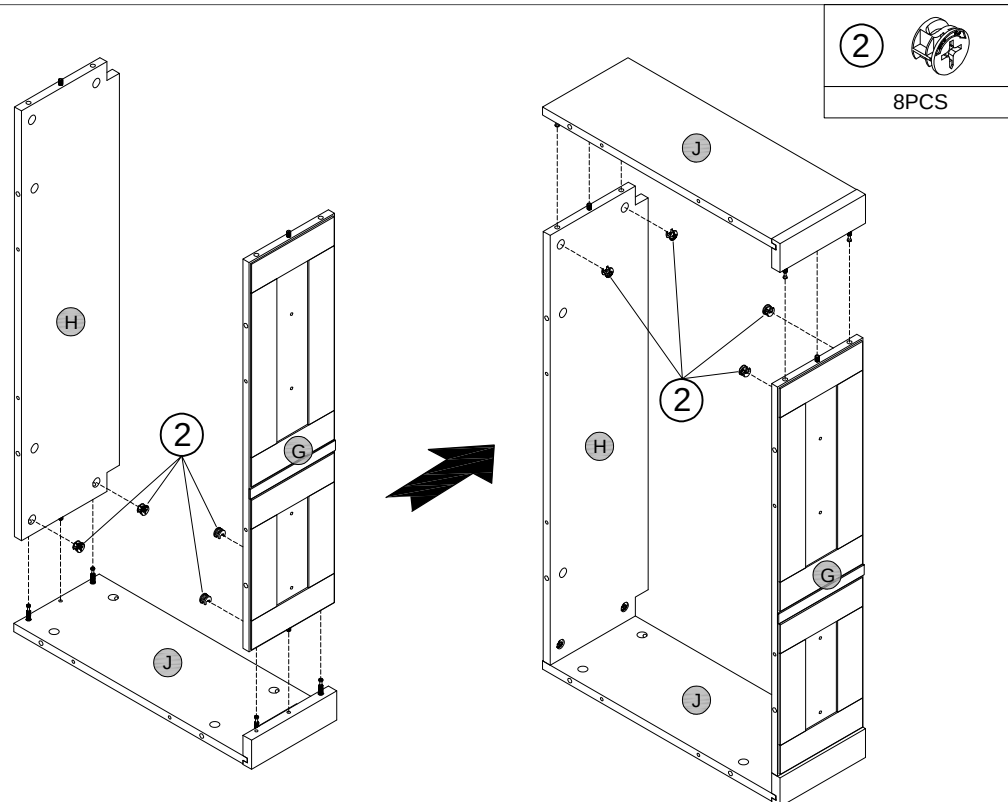



Step 3

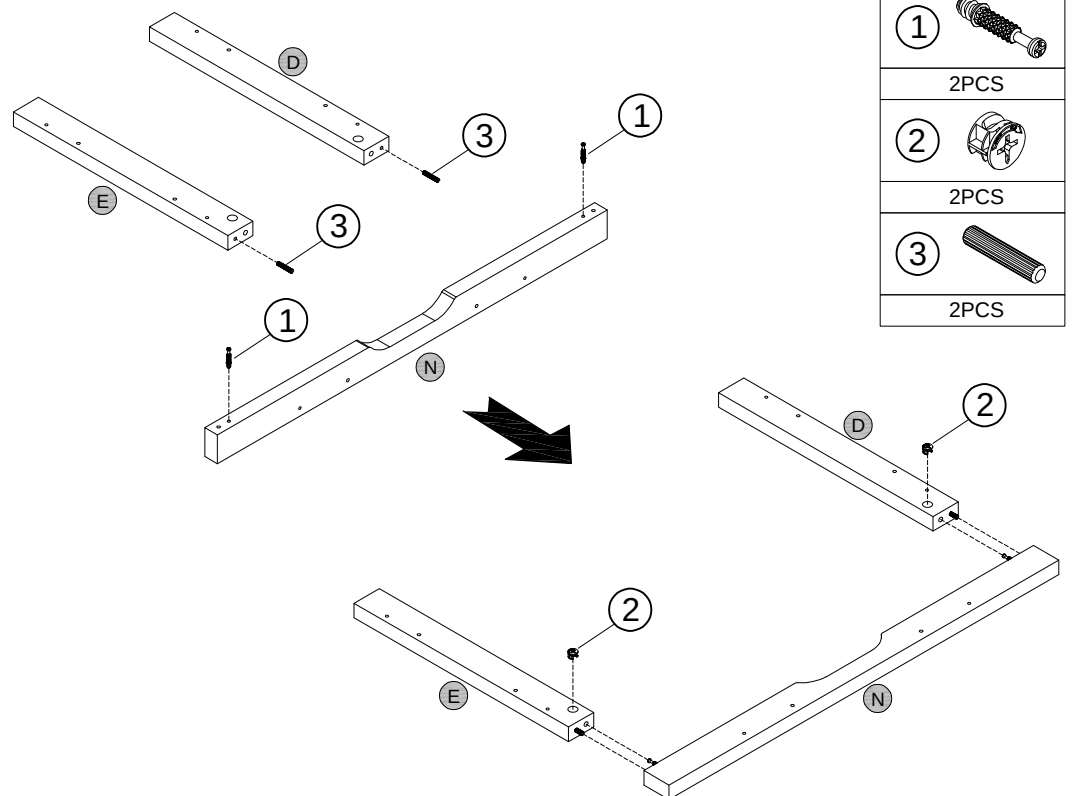




Step 4

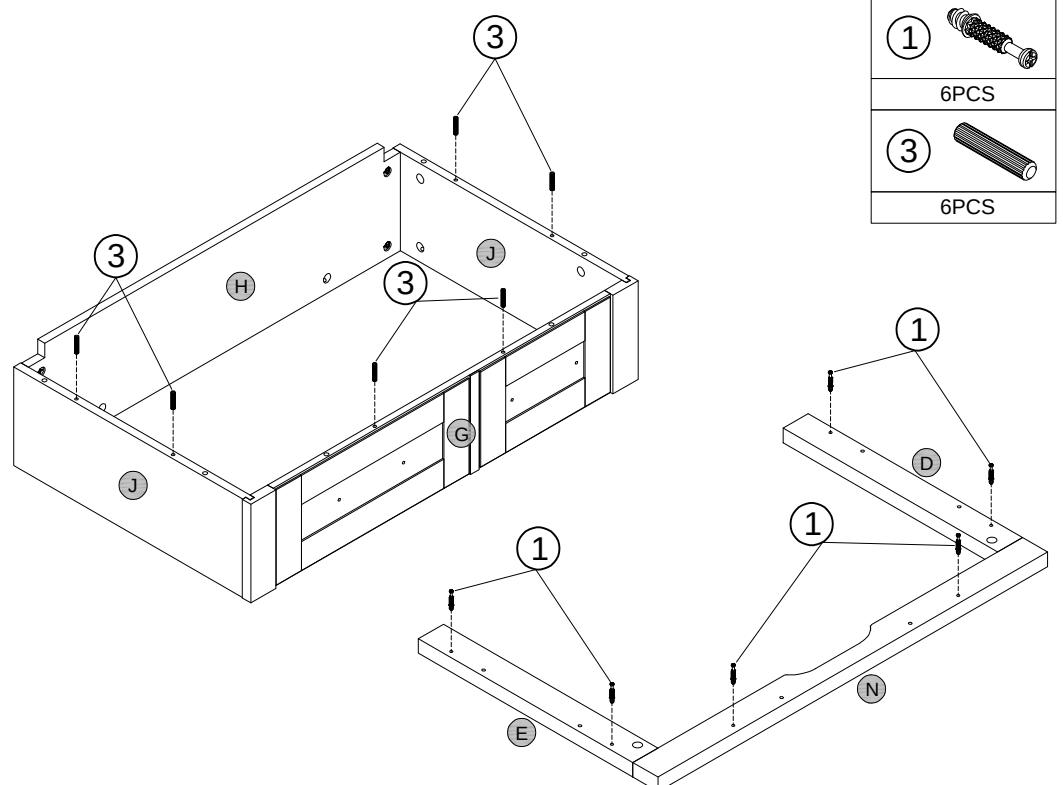

Step 5

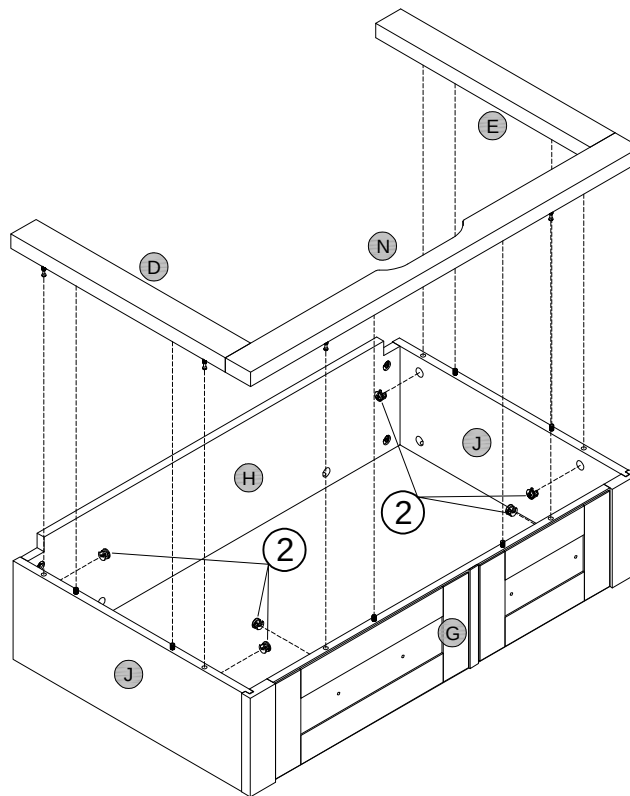



Step 6

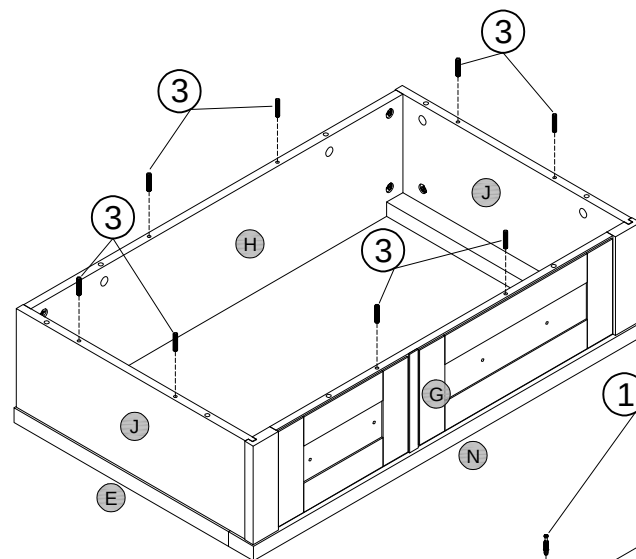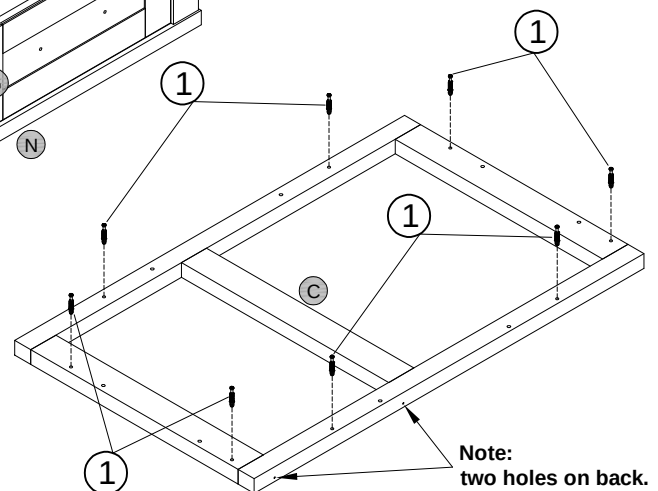


Step 7


Note:
two holes on back.

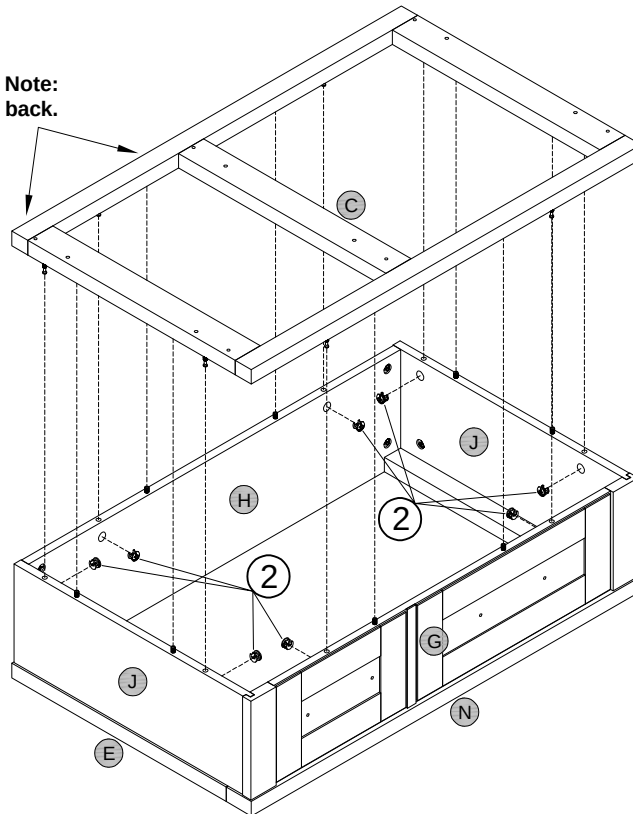

Step 8

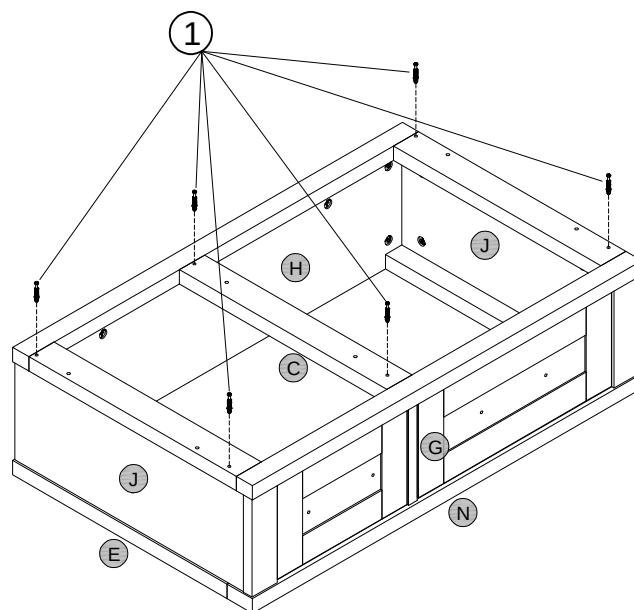


Step 9

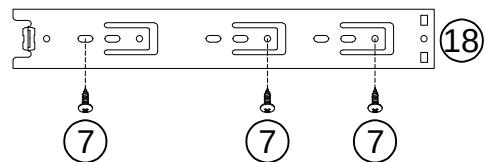


6PCS




2PCS

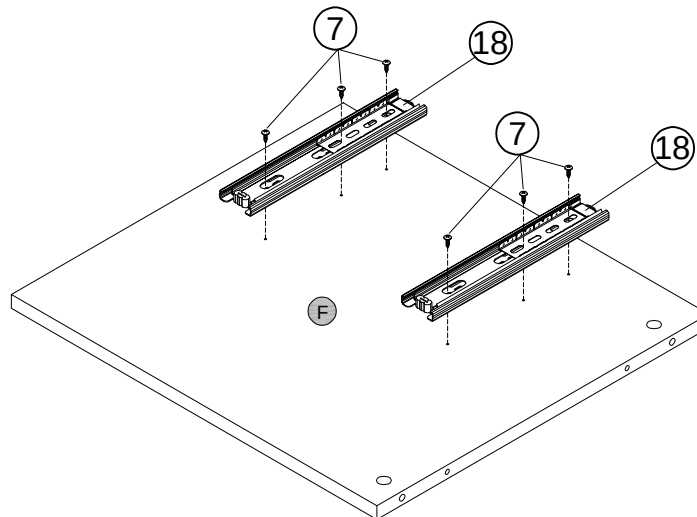



Step 10







4PCS

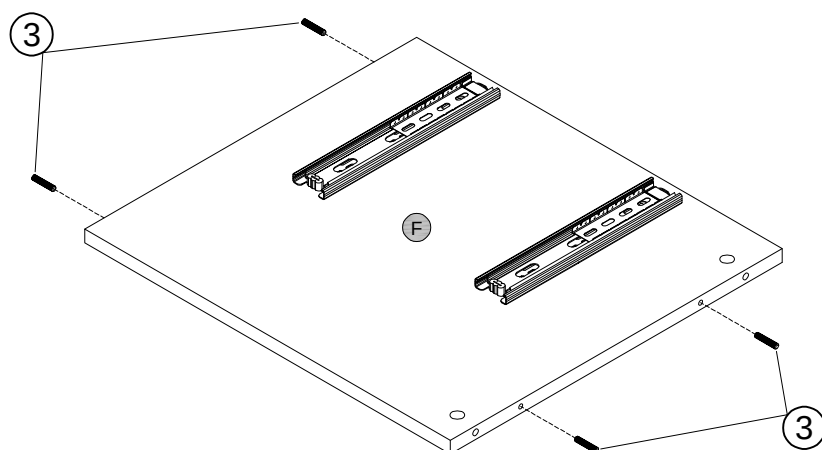



Step 11

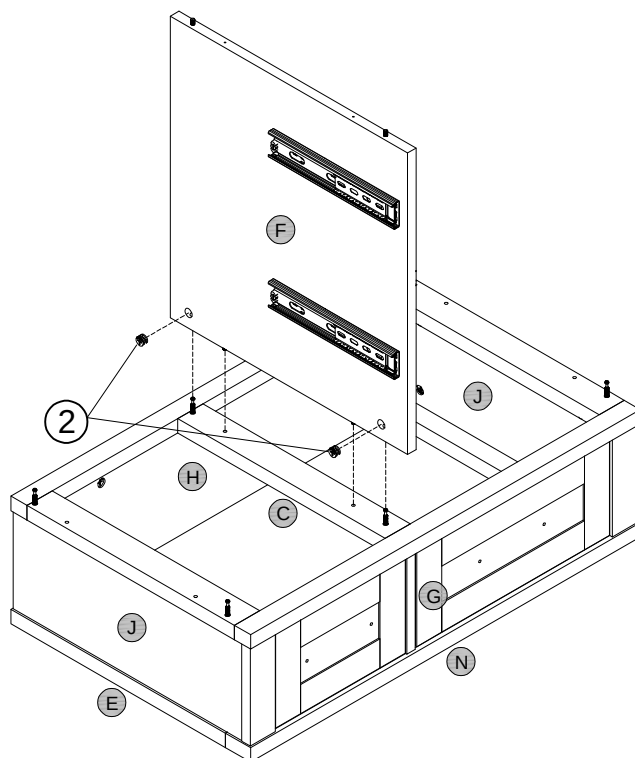



Step 12

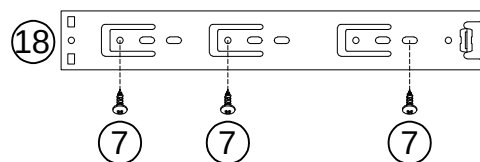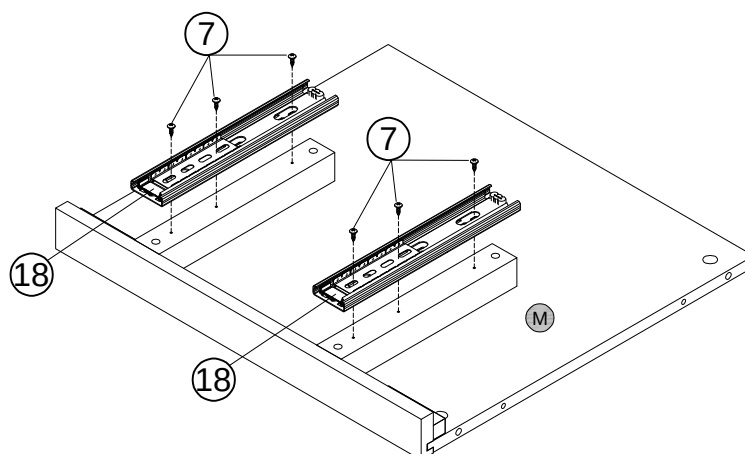


Step 13

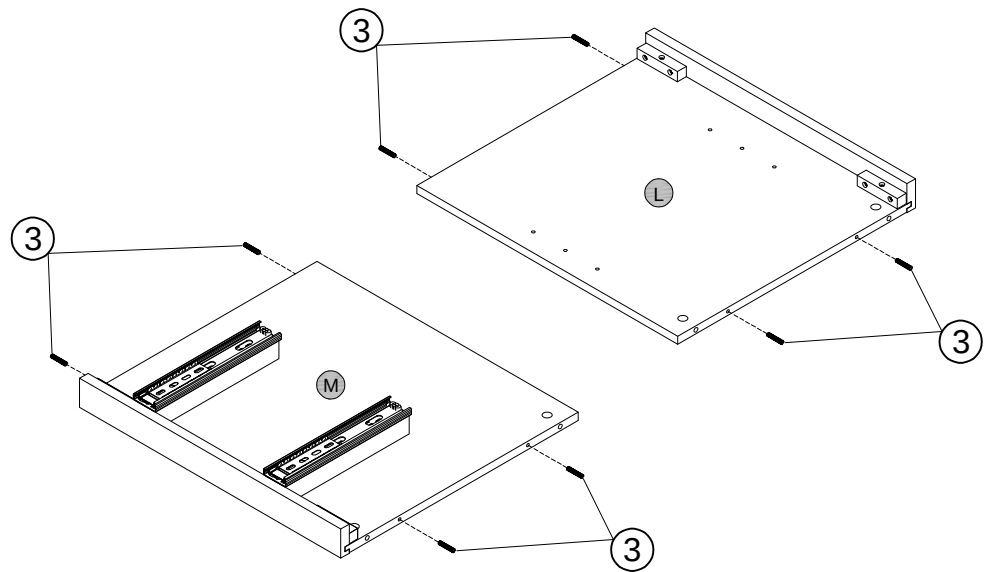



Step 14

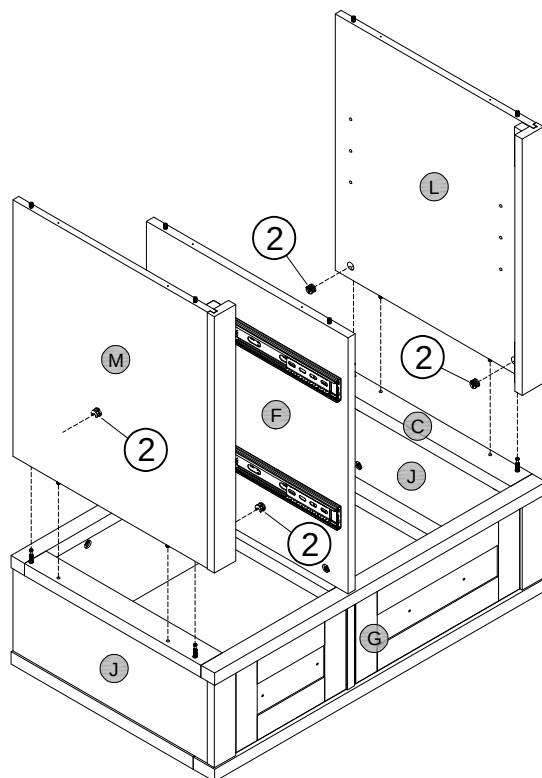


Step 15

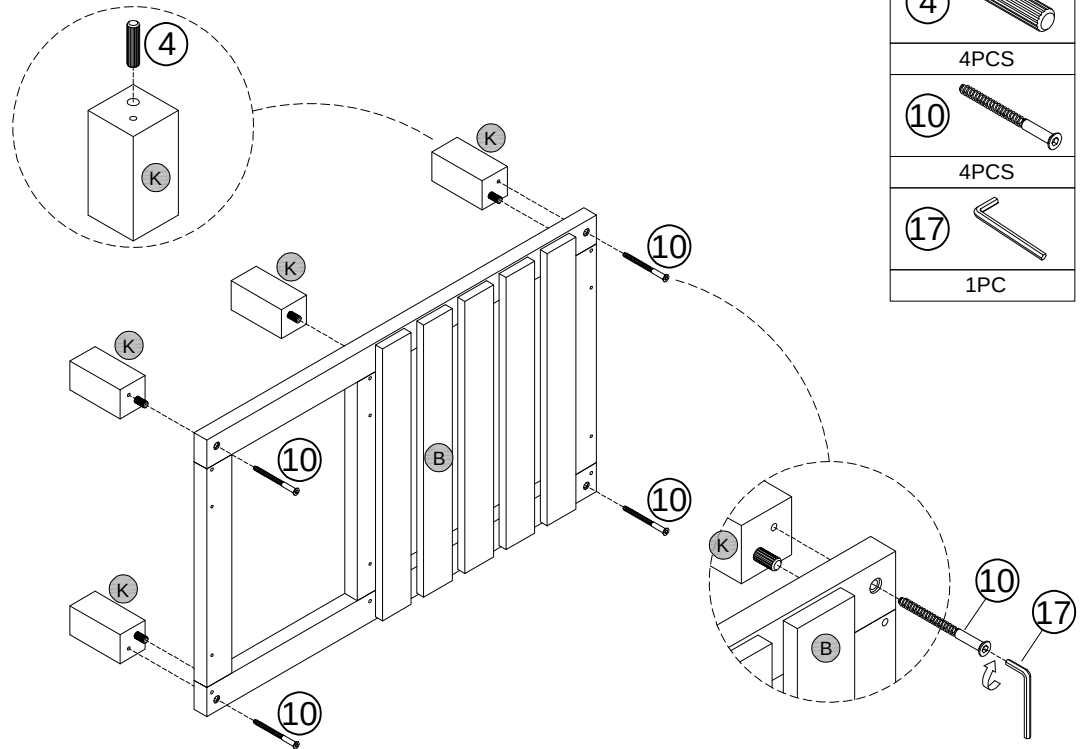


Step 16

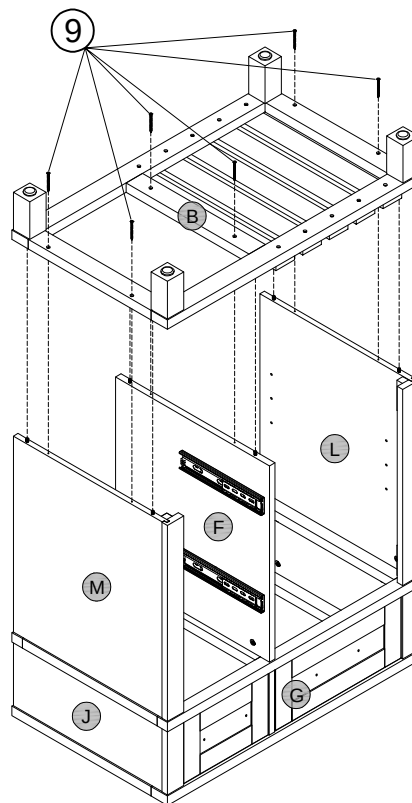

Step 17

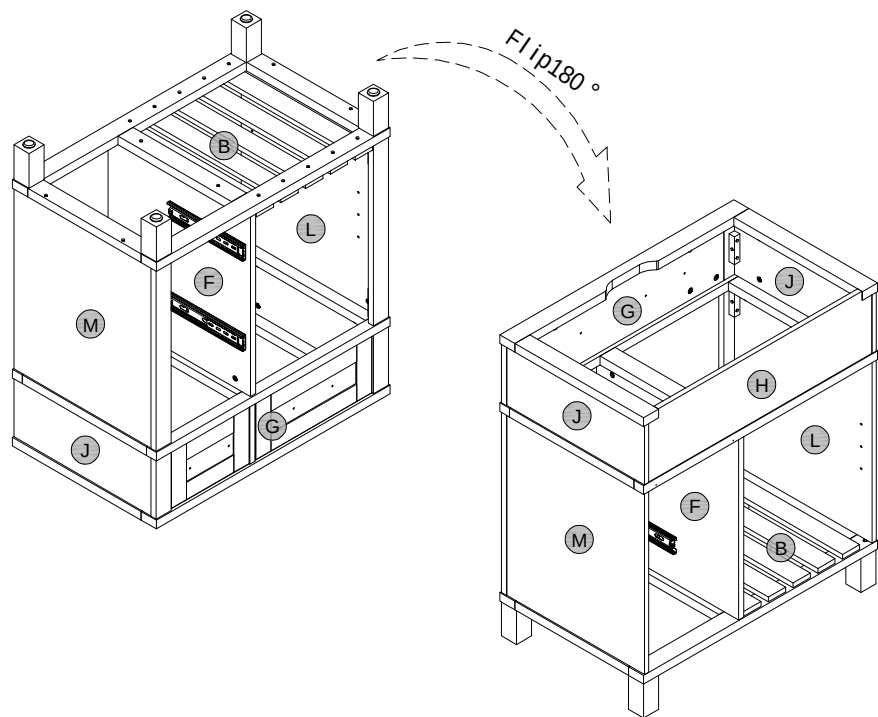

Step 18

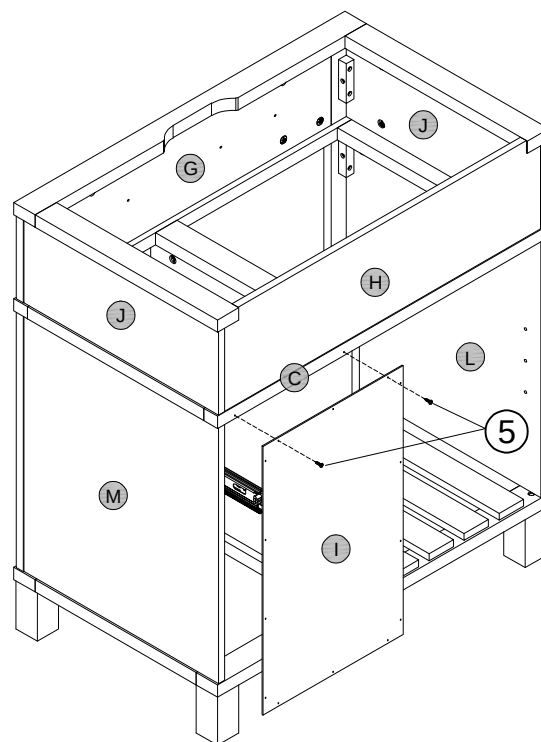


5
2PCS

Step 19

⑤


12PCS

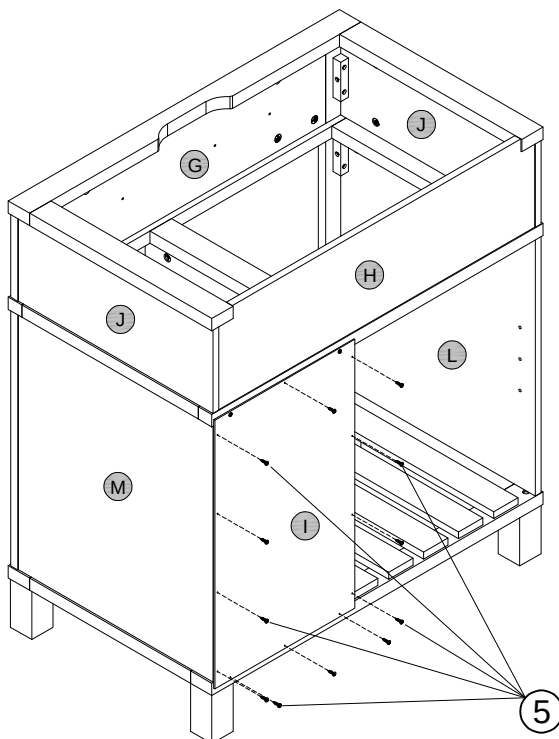


Step 20

⑭

3PCS

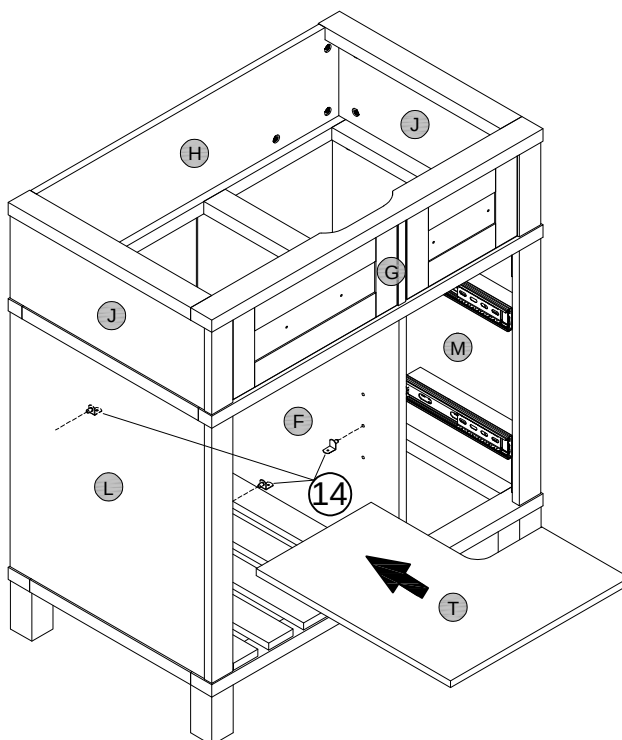

Step 21

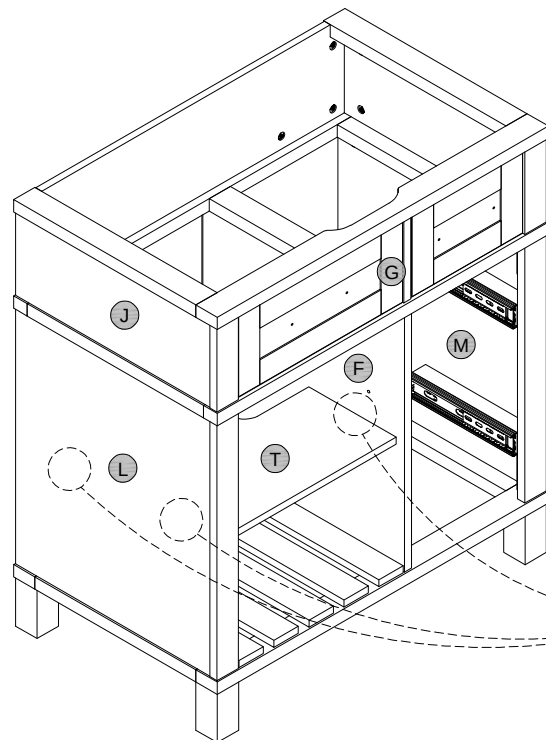


⑥




3PCS

Step 22

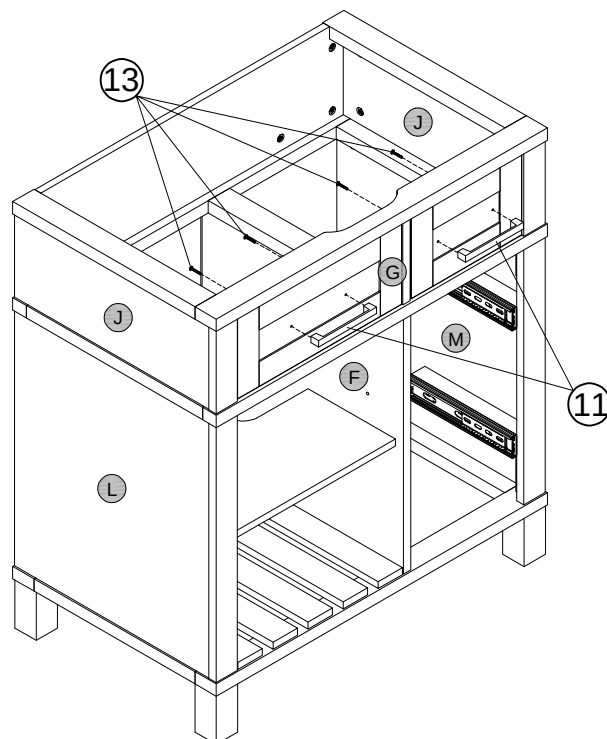

⑪




2PCS

⑬




4PCS

Step 23

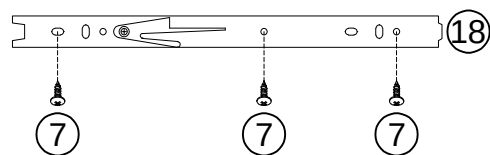


7	
12PCS	
18	
4PCS	

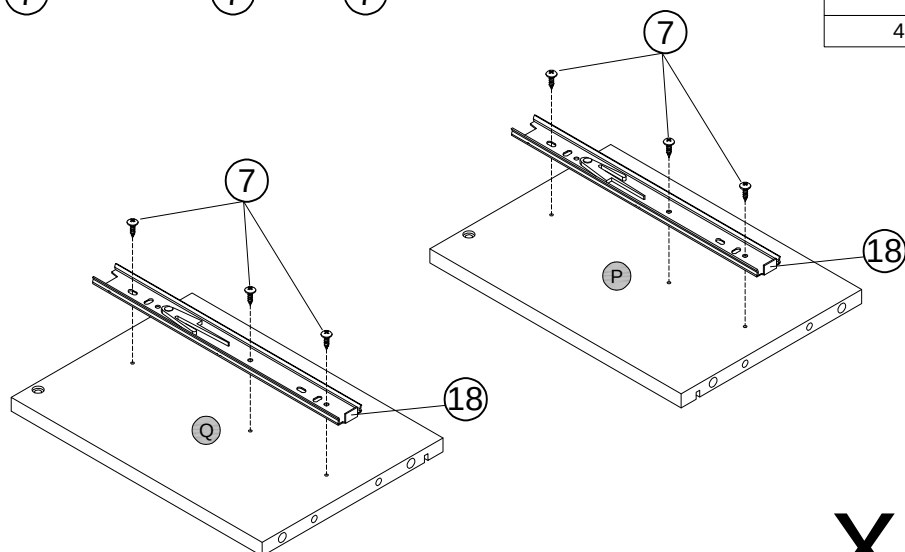


x2

Step 24

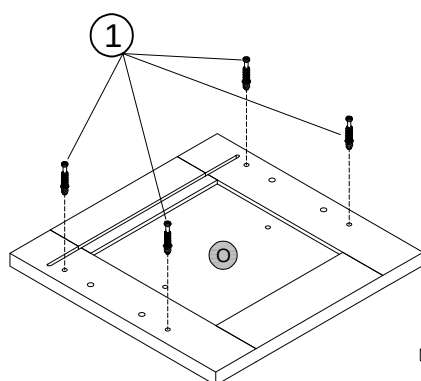


1	
8PCS	
3	
8PCS	

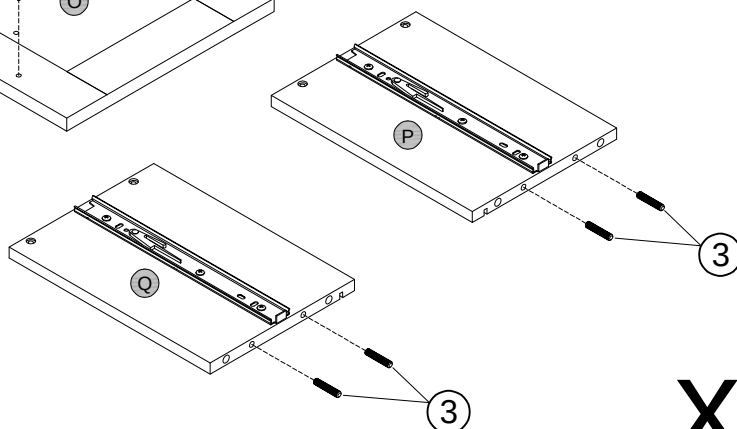


x2


Step 25

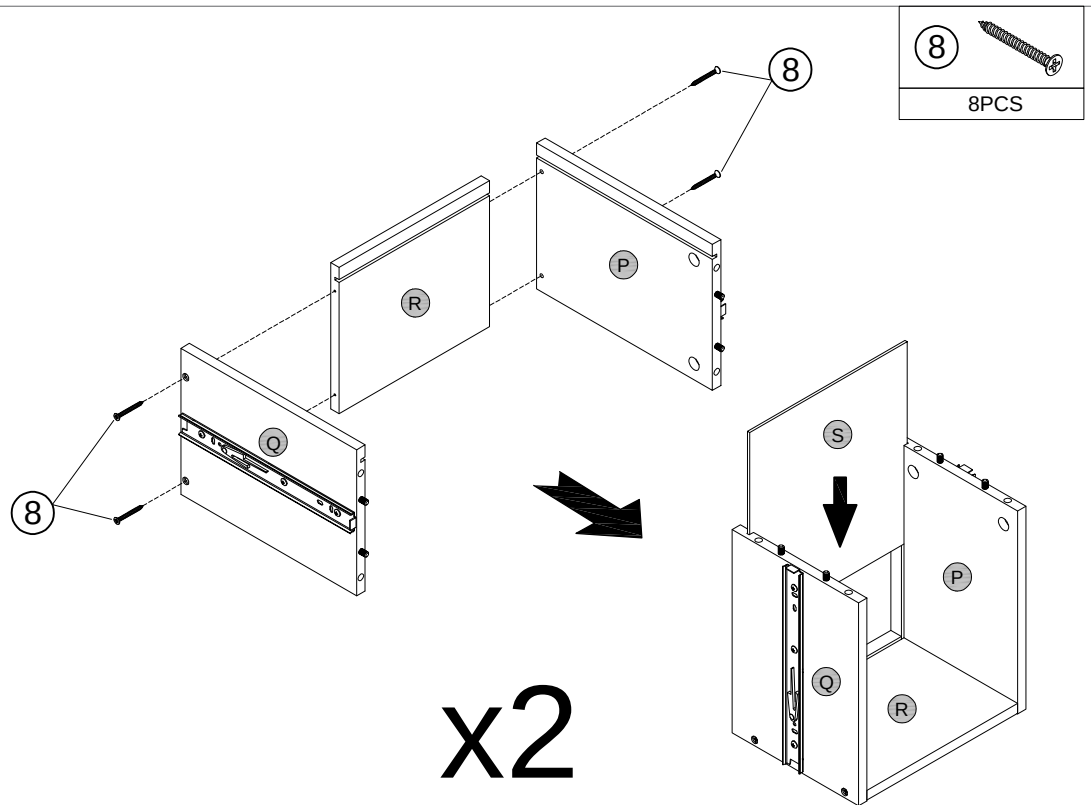


Step 26

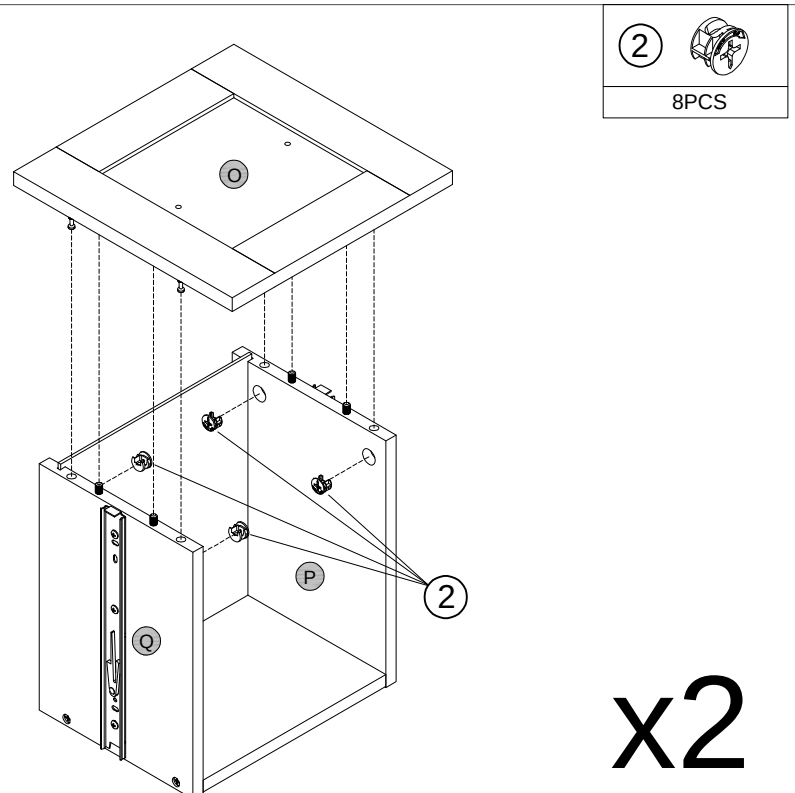





Step 27

⑪	
2PCS	
⑫	
4PCS	

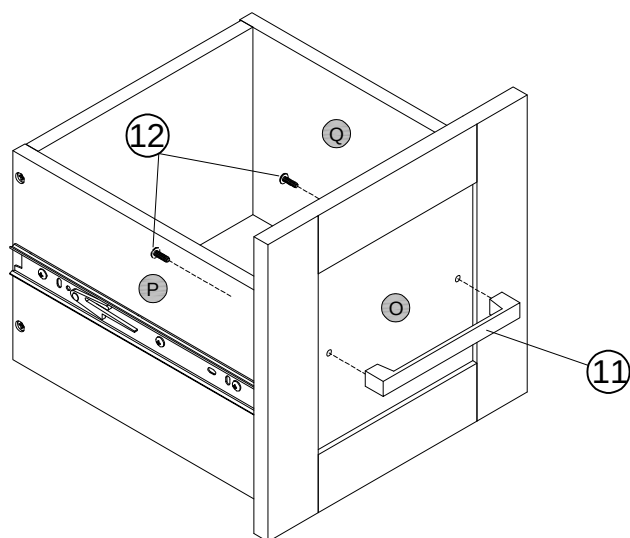


x2



Step 28

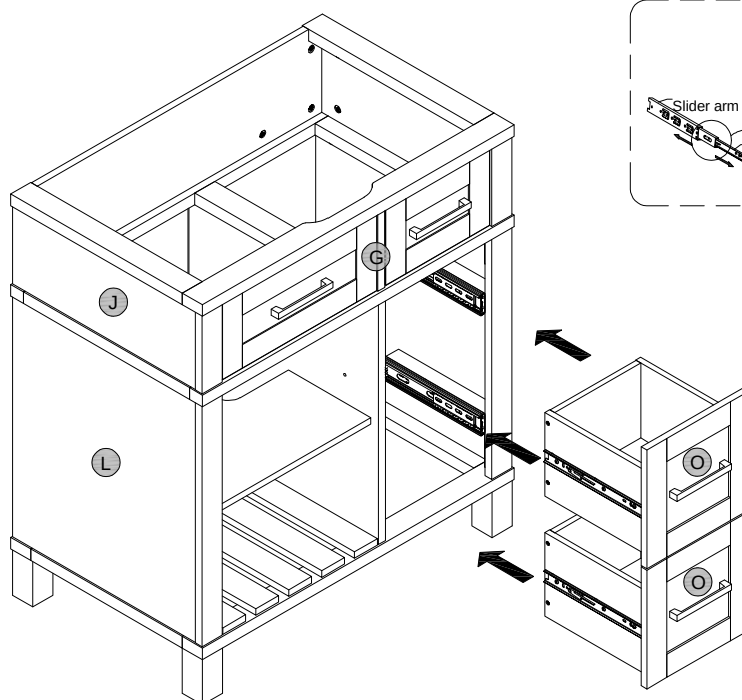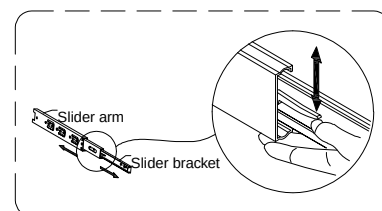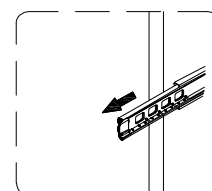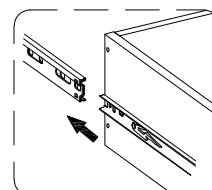

Step 29

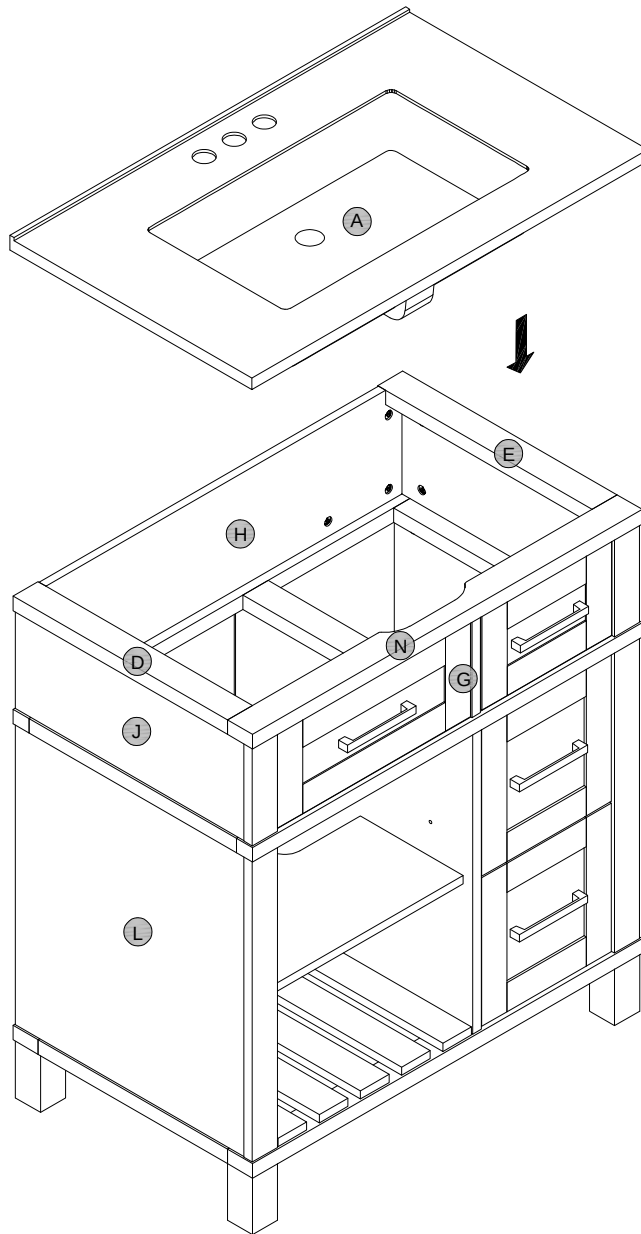

Step 30

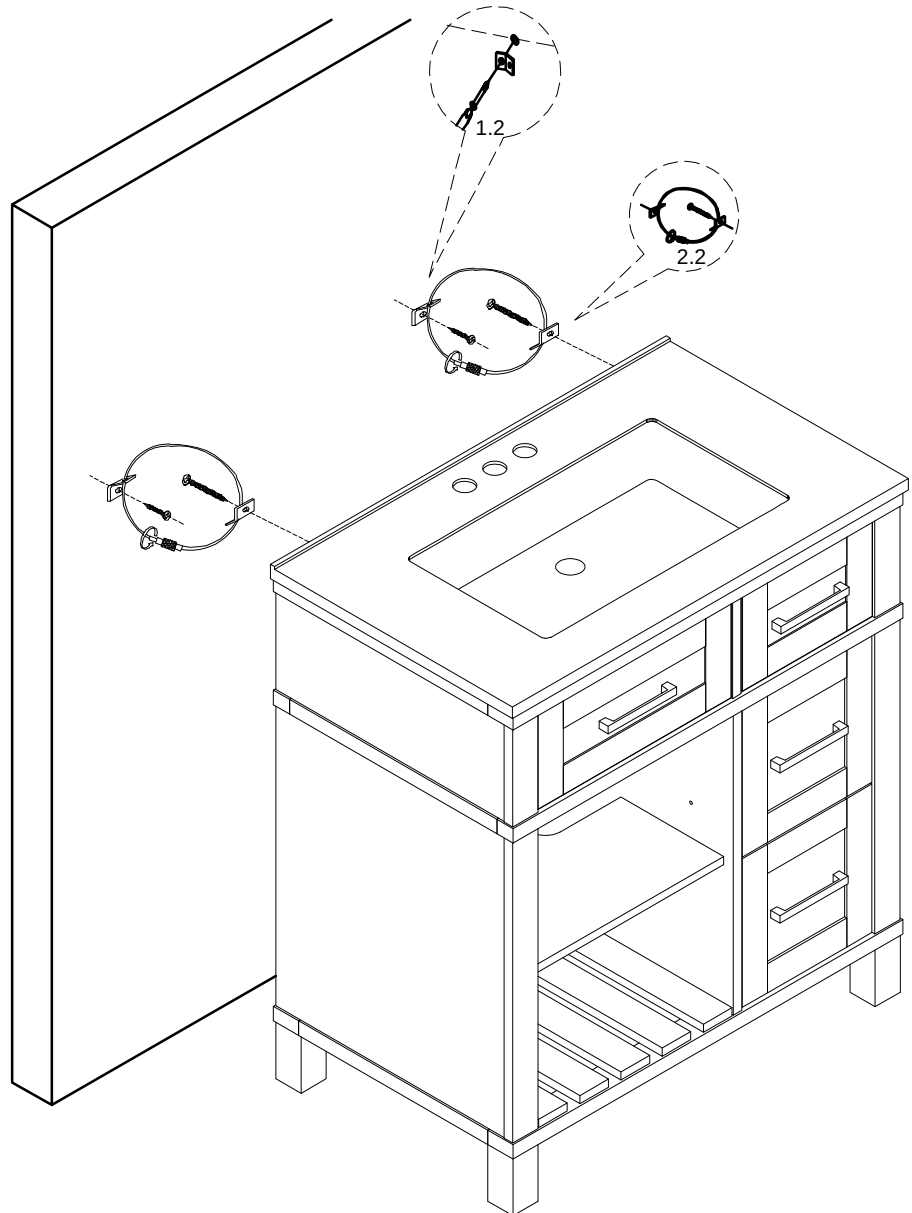

- 1.2 Attach the Metal Brackets, to the Wall Plugs, using Pan Head Screws and a Screwdriver
- 2.2 Move the Cabinet Sink against the wall. Pull the anti-tip, through the Metal Bracket, on the wall and Cabinet Sink Base respectively and tighten the lock on the anti-dumping strap