




INSTRUCTION MANUAL

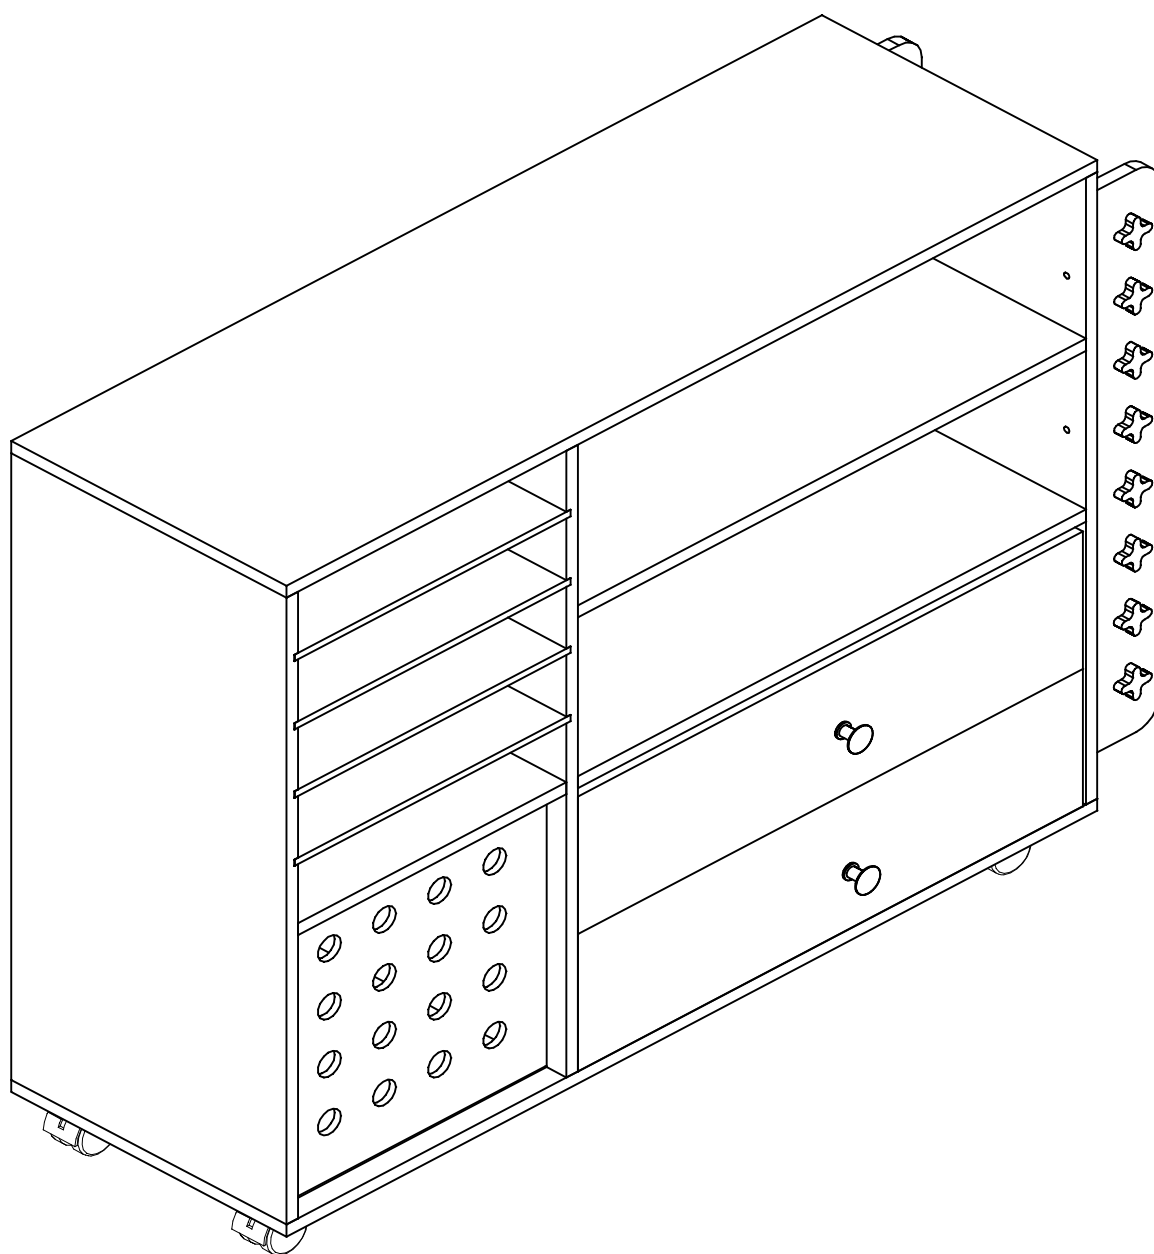

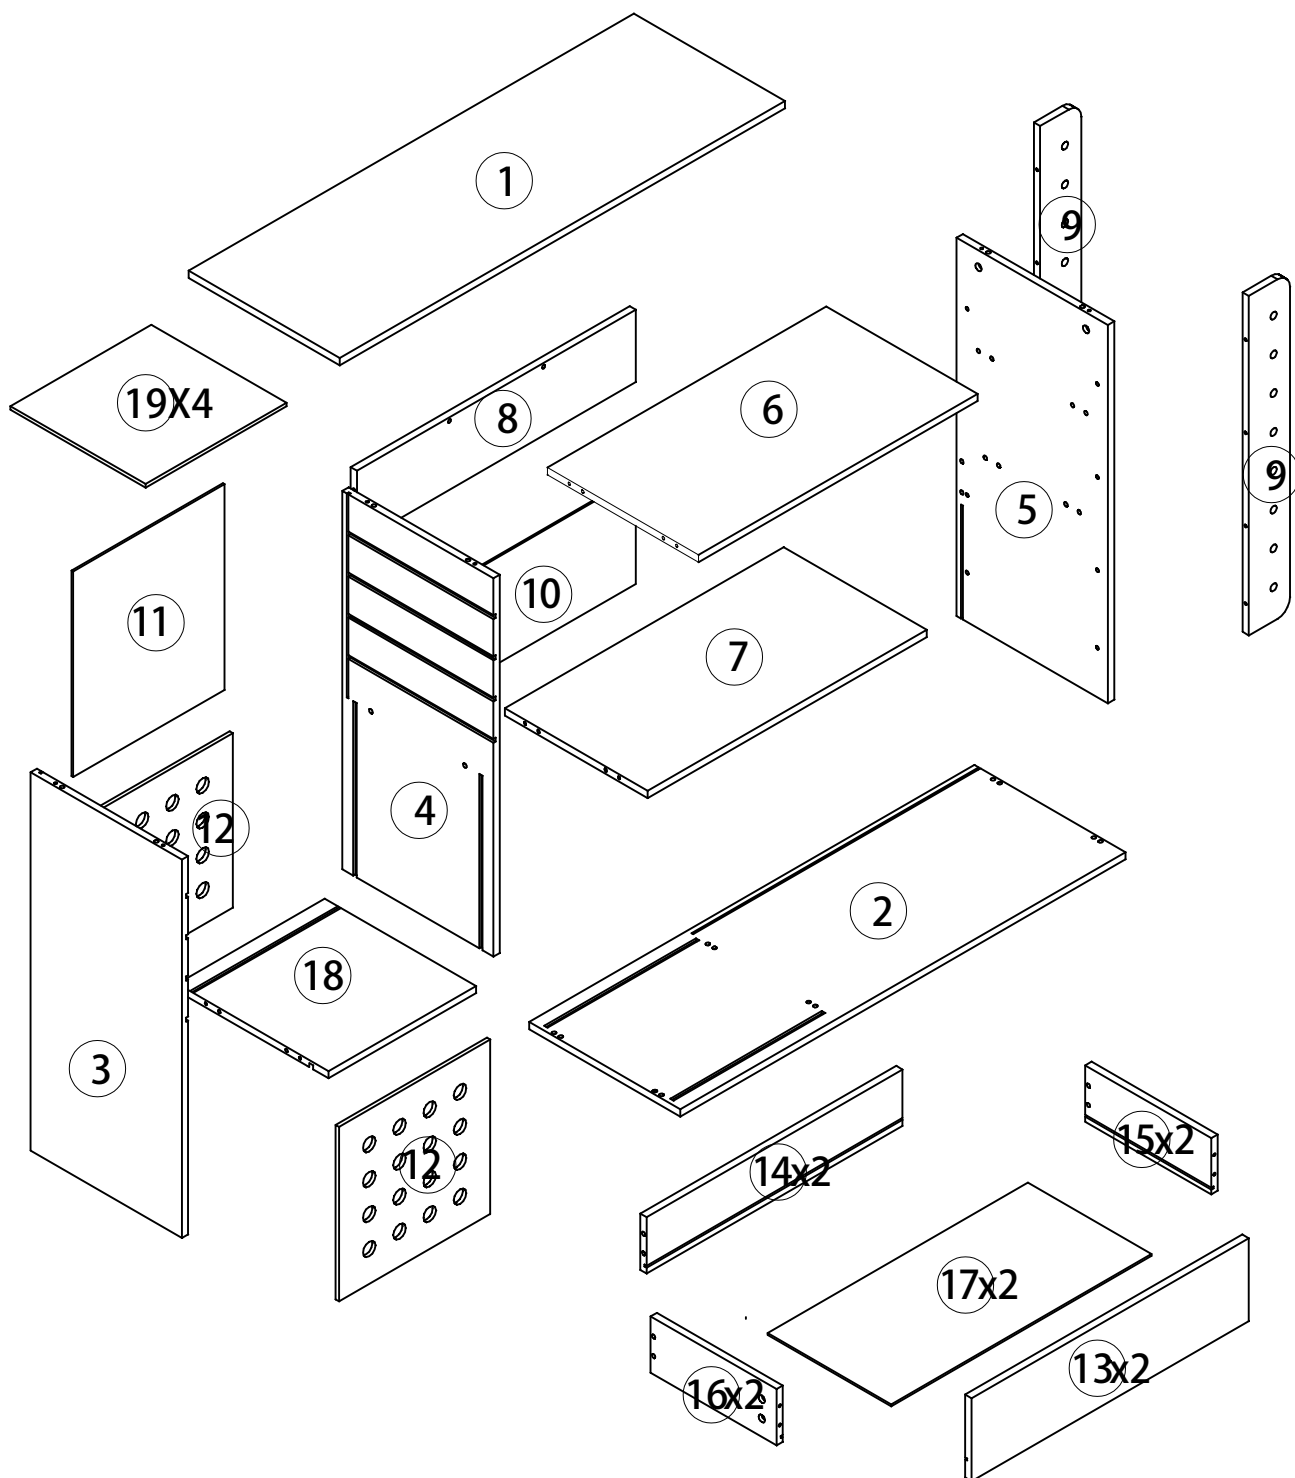


Hardware Mist




6X40 mm



15X9 mm



6.3X40 mm



8X40 mm

A x 30


B x 30

C x 24


D x 20



3.5X14 mm

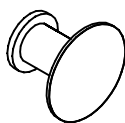

M6X10 mm



E x 24




F x 2

Gx20

H x 16



M6 X18 mm

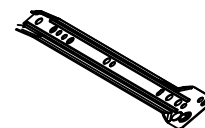
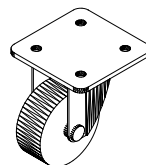
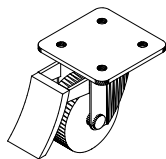


I x 2

J x 4

Kx 1

CR x 2



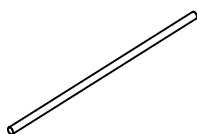


M x 8

N x 8




















L

CL x 2

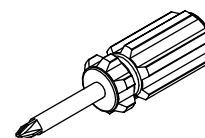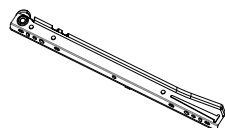

DR x 2



DL x 2

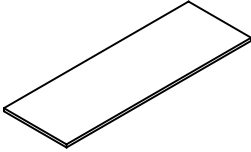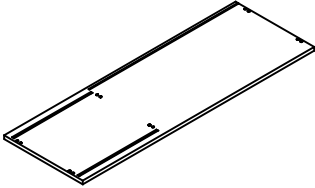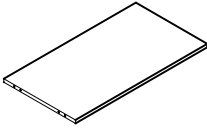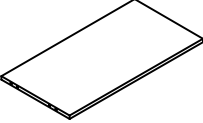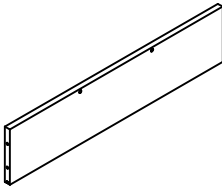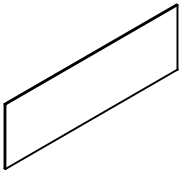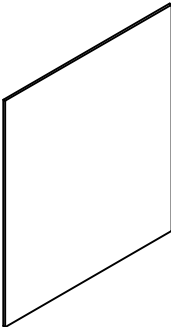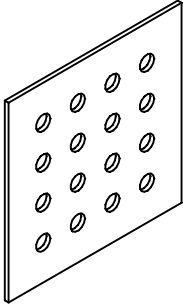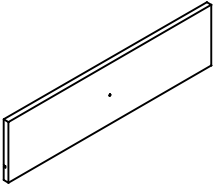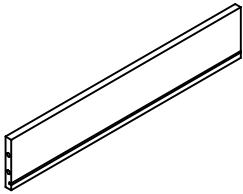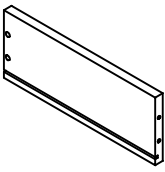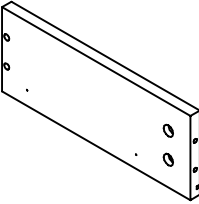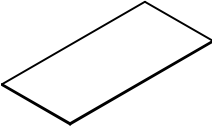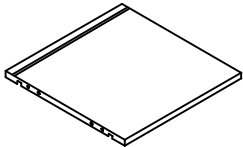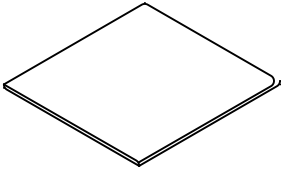			
1 x 1	2 x 1	3 x 1	4 x 1
			
5 x 1	6 x 1	7 x 1	8 x 1
			
9 x 2	10x 1	11x 1	12x 2
			
13x 2	14x 2	15x 2	16x 2
			
17x 2	18x 1	19x 4	

Step 1

Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

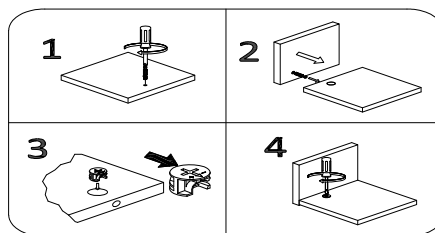


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.



EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.



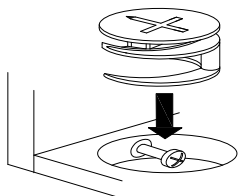


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

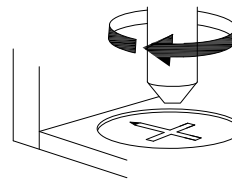


EN_Turn cam lock clockwise to tighten.

Step 2

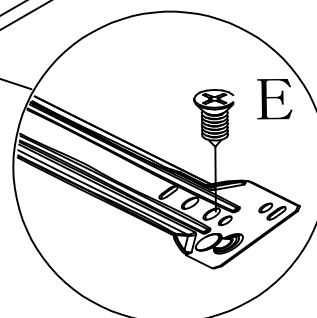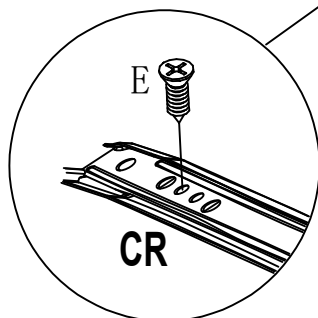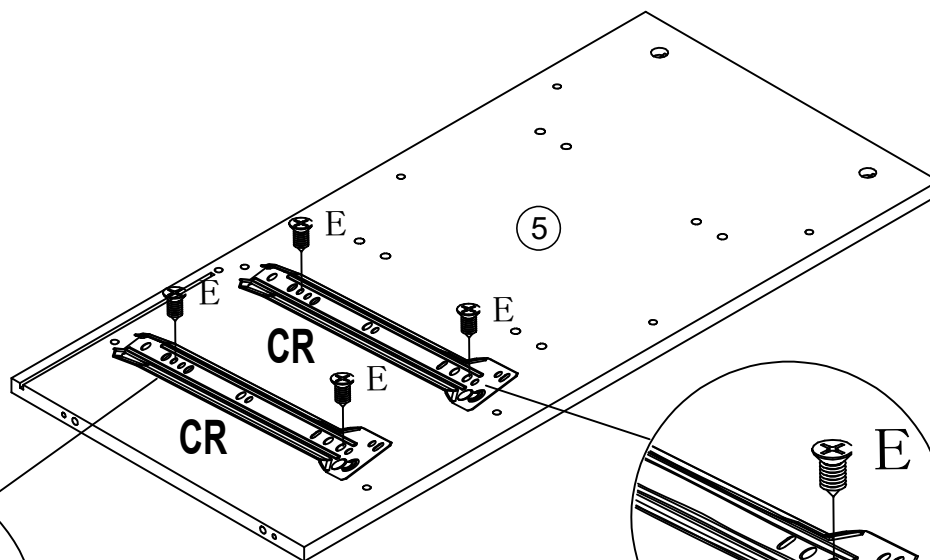


CR	x 2	E	x 4
		3.5X 14 mm	

Step 3

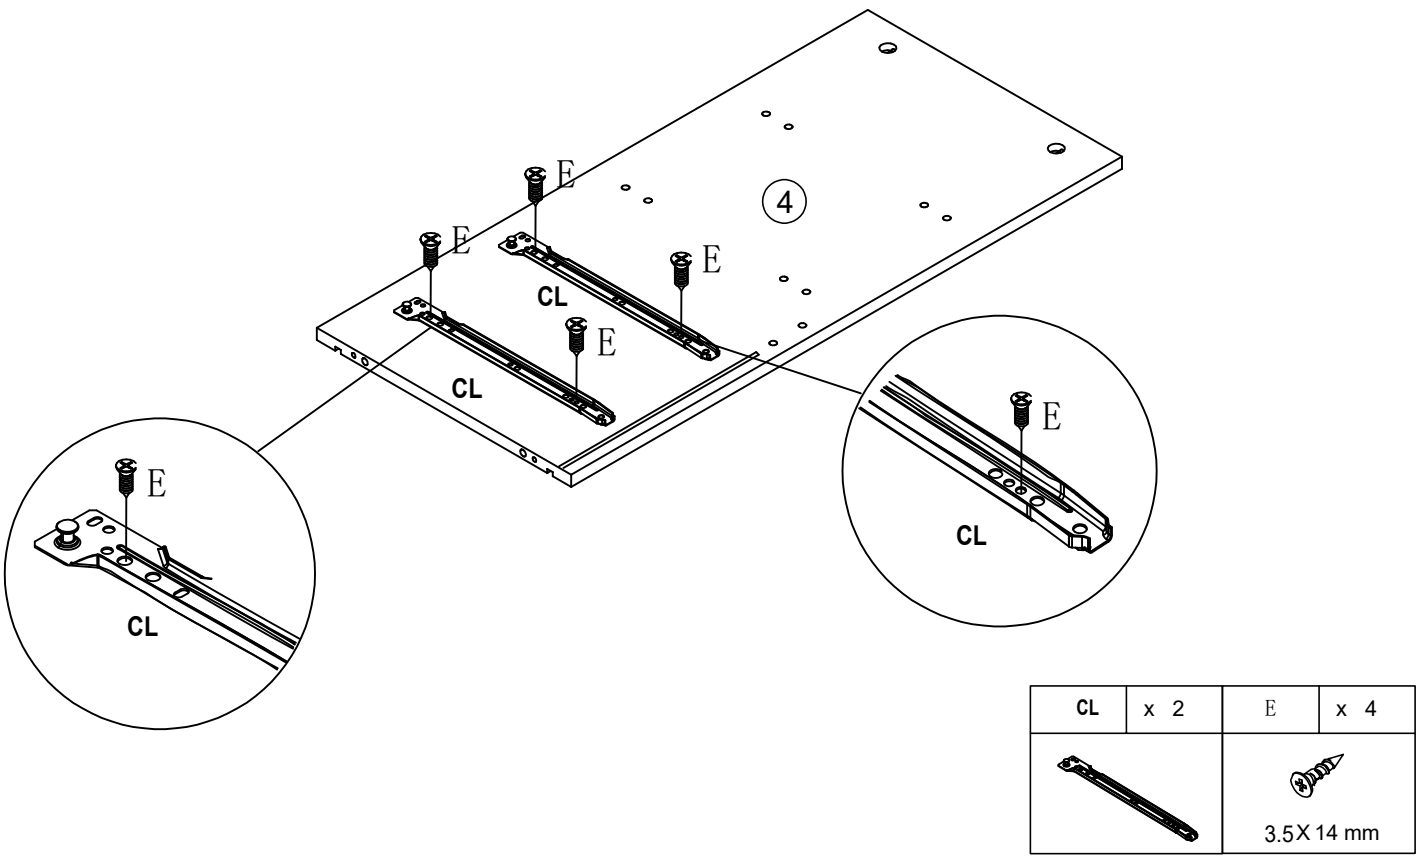


Step 4

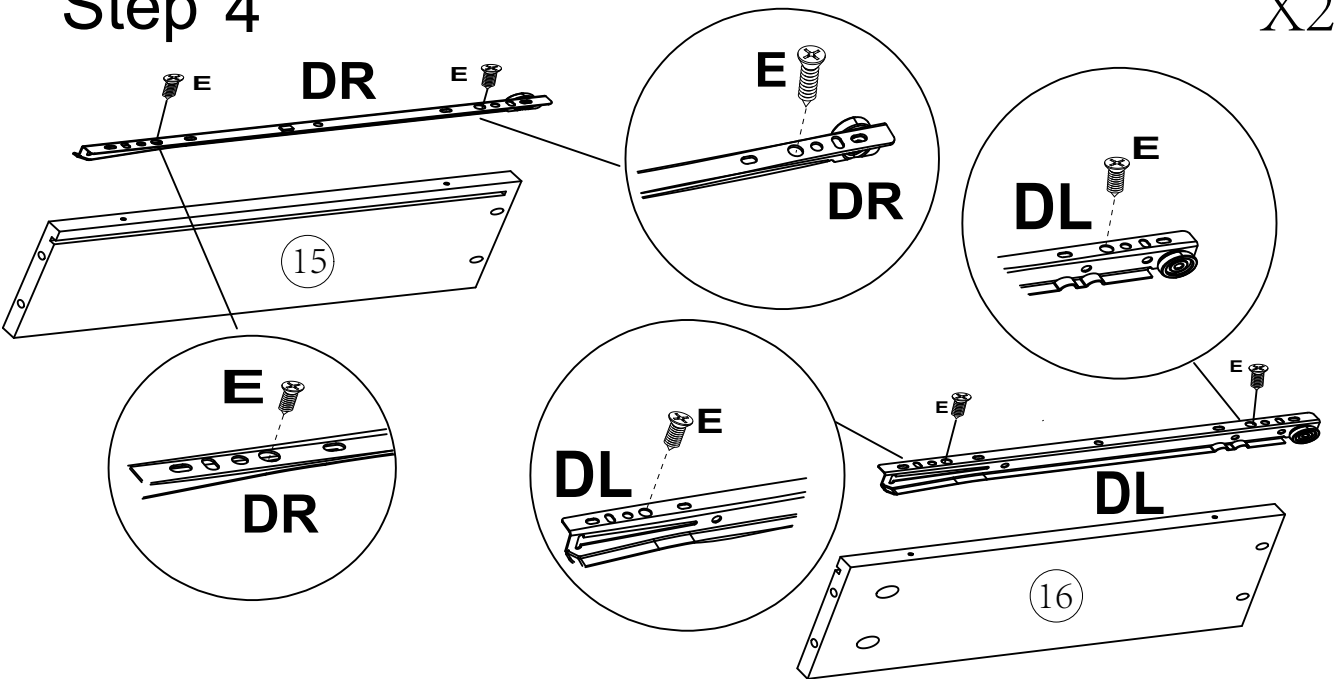

E	x 8	DR	x 2	DL	x 2
 3.5X 14 mm					


Step 5

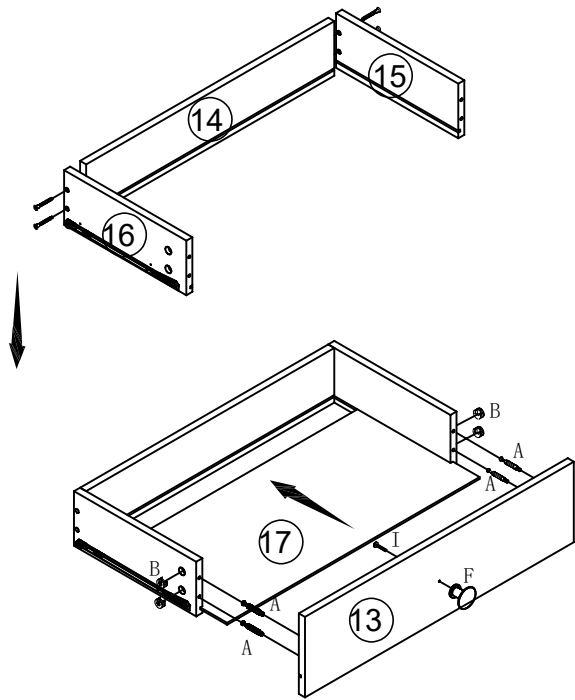

X2


C	x 8	I	x 2	F	x 2	A	x 8	B	x 8
 6.3X40 mm		 M6 X18 mm				 6X40 mm		 15X9 mm	

Step 6

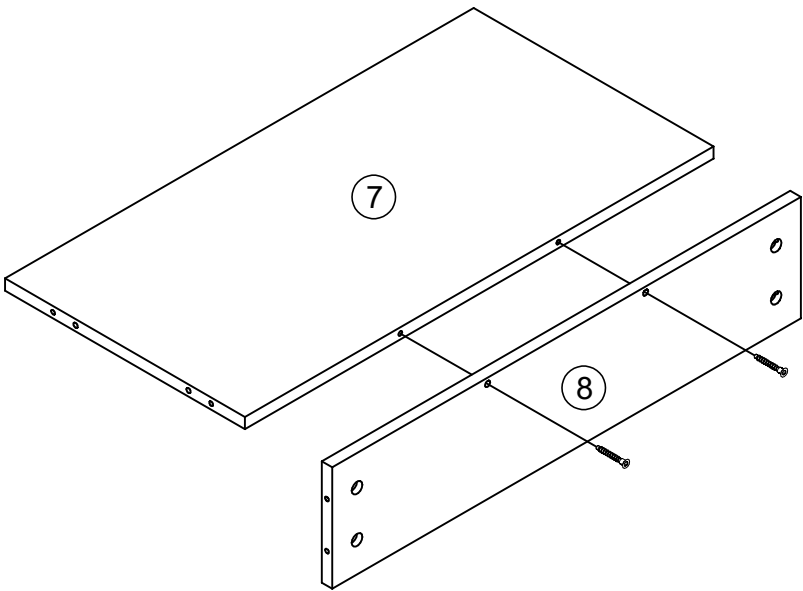


C	x 2
 6.3X40 mm	

Step 7

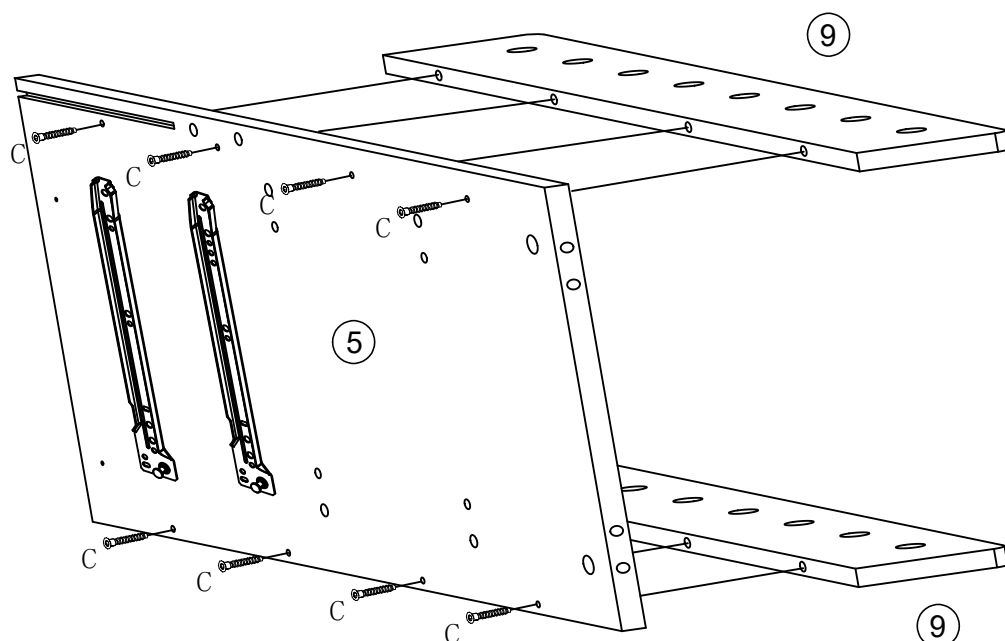


C	x 8
 6.3X40 mm	

Step 8

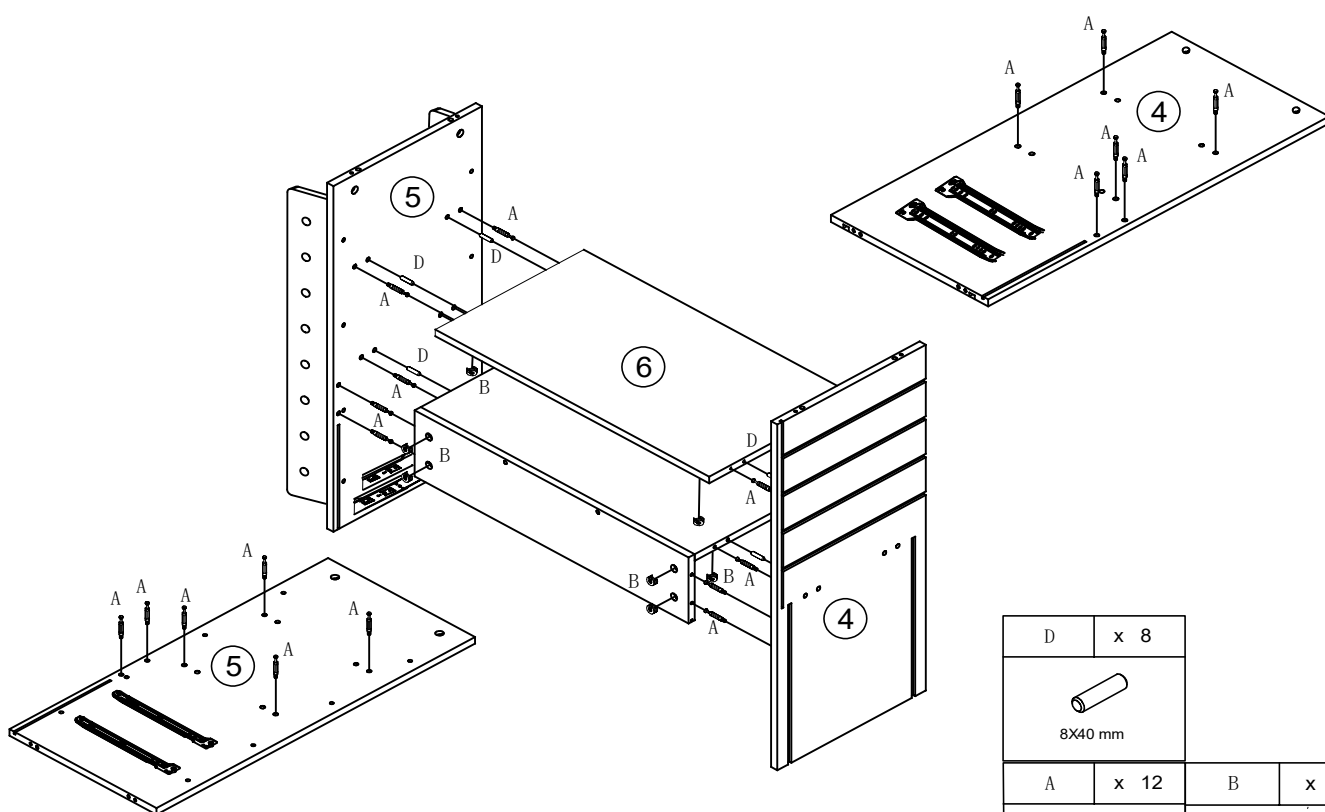


D	x 8		
 8X40 mm			
A	x 12	B	x 12
 6X40 mm		 15X9 mm	

Step 9

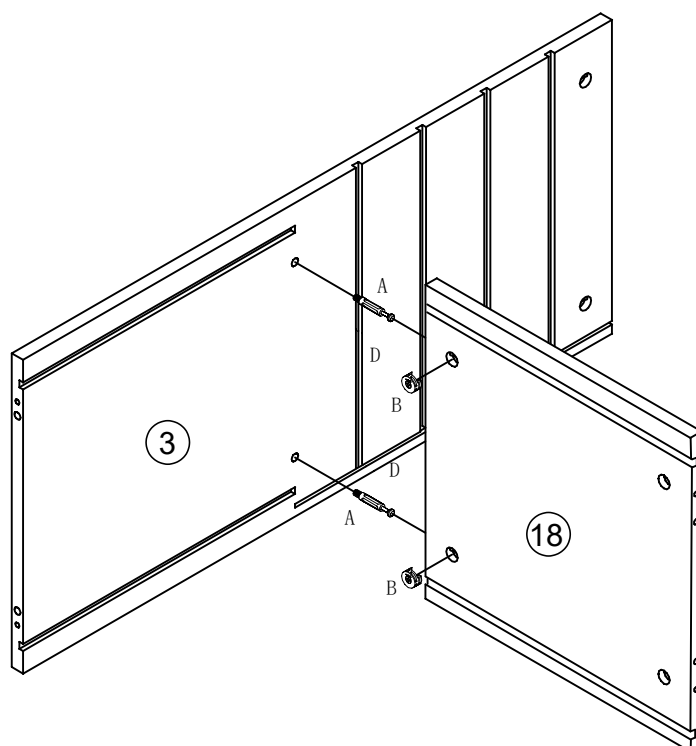


A	x 2	B	x 2
			
6X40 mm		15X9 mm	

Step 10

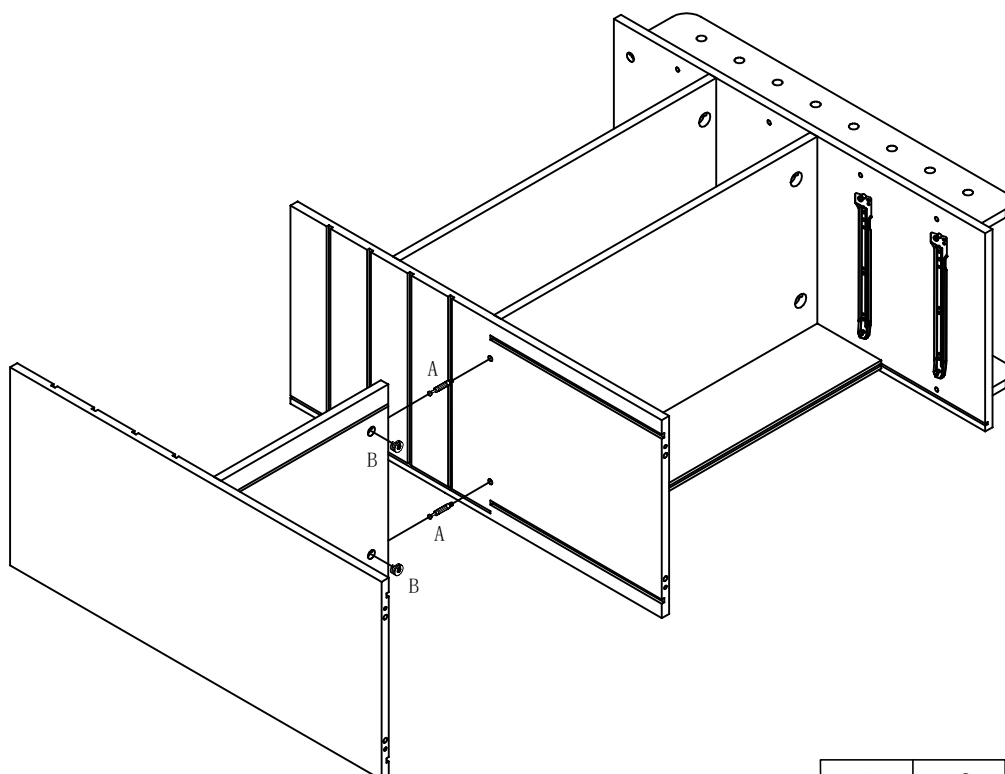


A	x 2	B	x 2
			
6X40 mm		15X9 mm	

Step 11

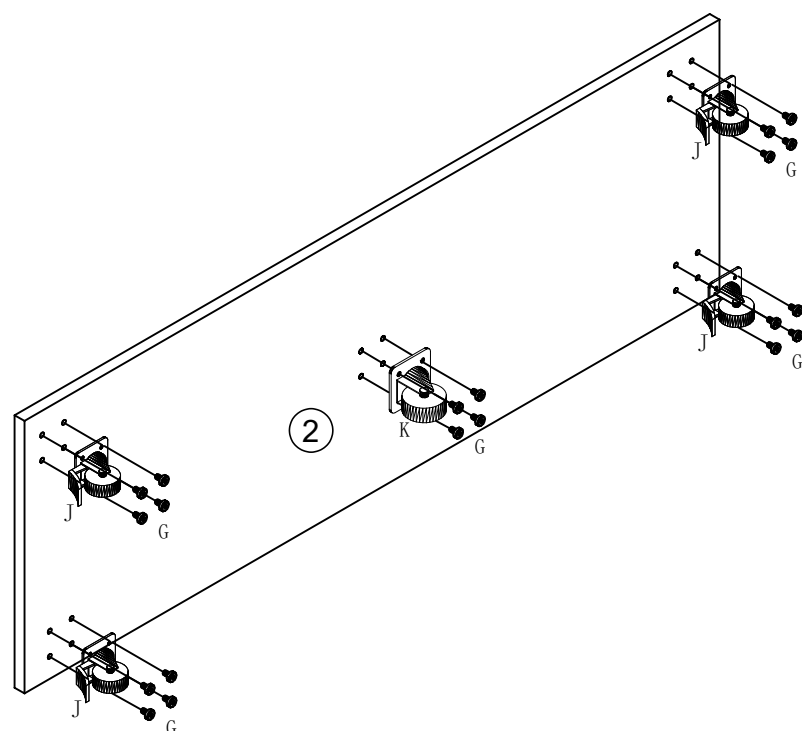


G		x 20	
		M6X10 mm	
J	x 4	K	x 1
			

Step 12

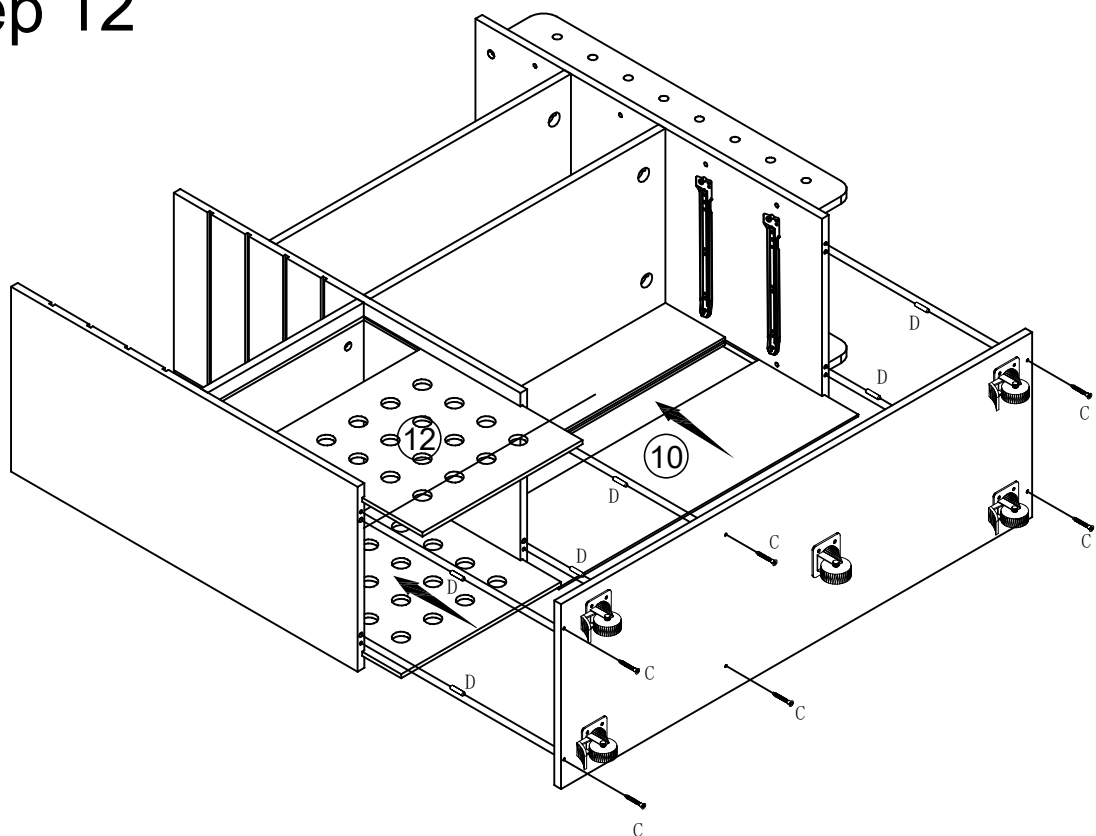


D	x 6	C	x 6
			
8X40 mm		6.3X40 mm	


Step 13

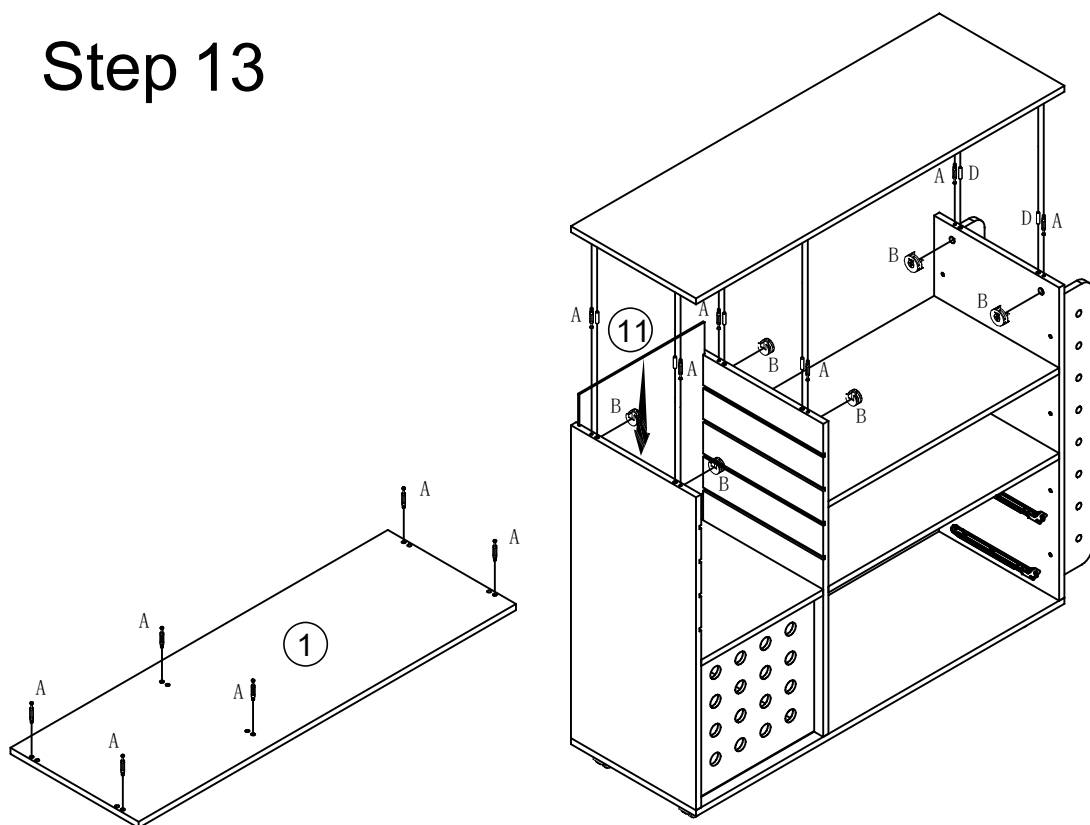



A	x 6	D	x 6	B	x 6
					
6X40 mm		8X40 mm		15X 9mm	


Step 14

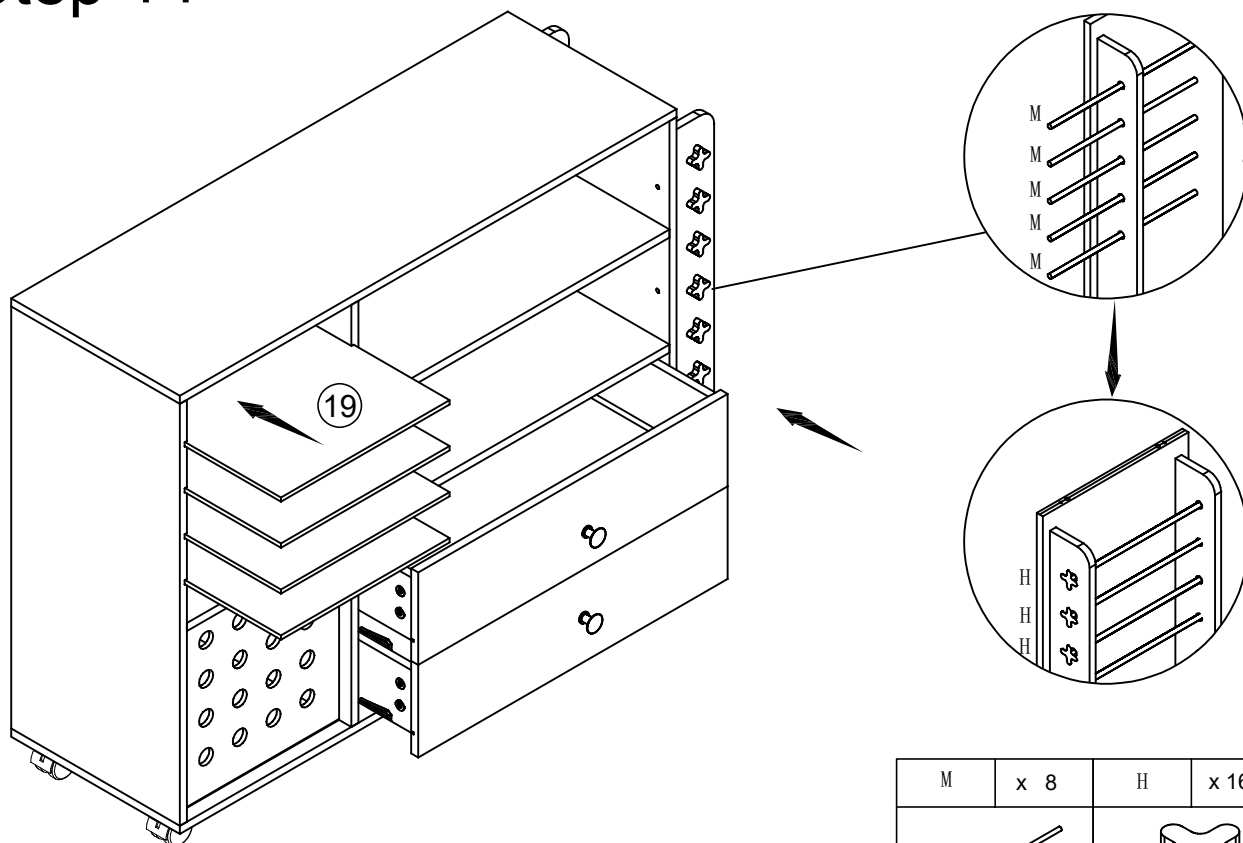

M	x 8	H	x 16
			

Step 15

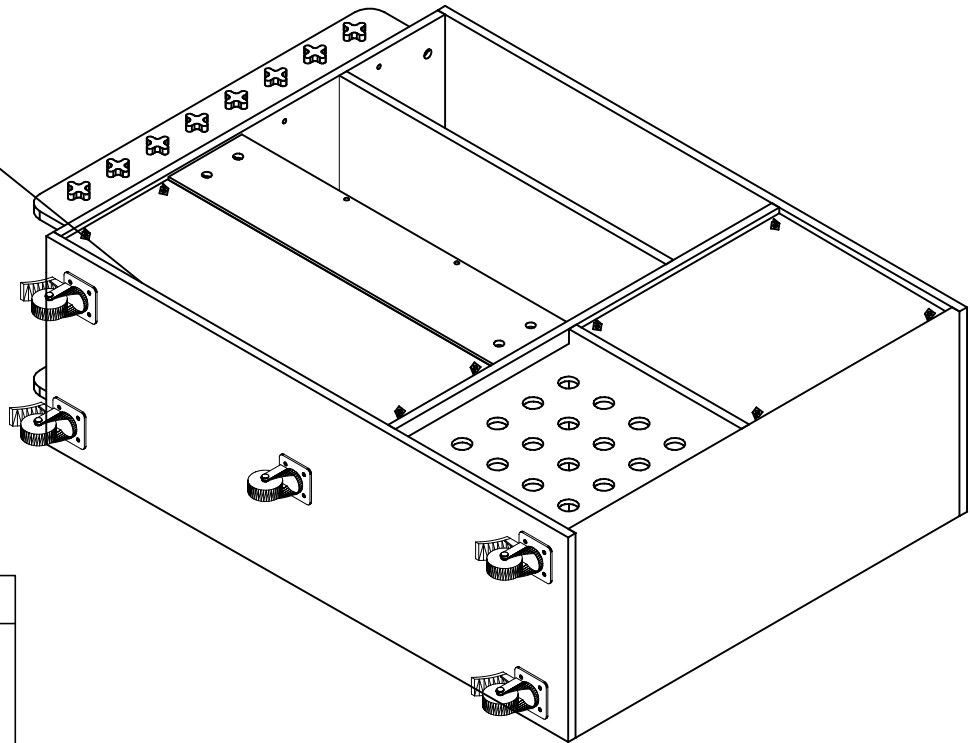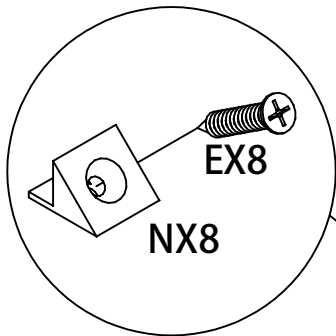

E	x 8	N	x 8
			
3.5X 14 mm			

Trouble shooting:

Missing / Wrong / Broken parts and installation issues



Send email with your question, pic and order NO.to
support @garvee.com



Respond within 24 hours



Issue resolved