


Installation Instructions Recessed mount

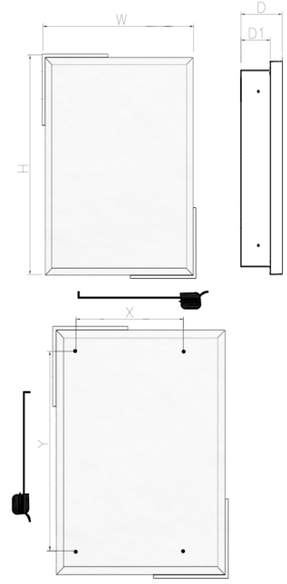

1) Before installation, please measure the actualdimensions on both sides of the X/Y image on theleft. The wall opening size should be larger thanthe actual measured product size.

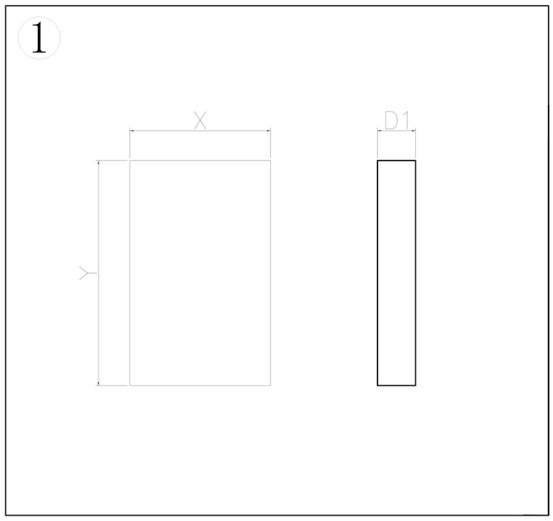


1) Install the product into the pre dug wallinstallation square hole.
2) Using a suitable screwdriver or drill, secure the cabinet into the wall with the supplied screws, via the two holes (two on each side) See Fig. below.

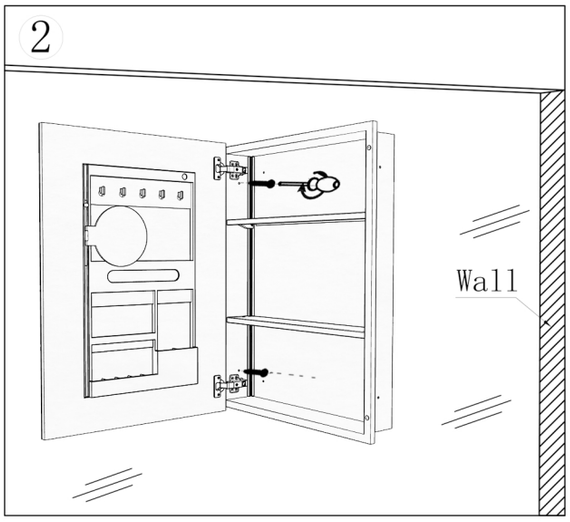


Surface Mount


l.Before installation, please place theproduct on the wall to the requiredposition, and mark the installation holeposition on the product chassis withpencil.Keep in mind that all markedmounting points to be matched up with thefixing points on the mirror accurately.

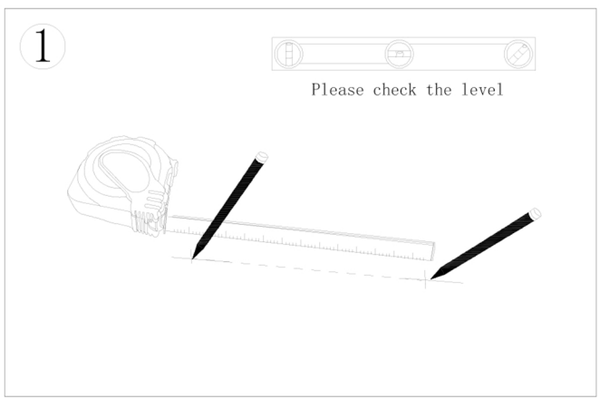

2.Mark the desired height and Width(X & Y) of the mirror. Drill the required holes.

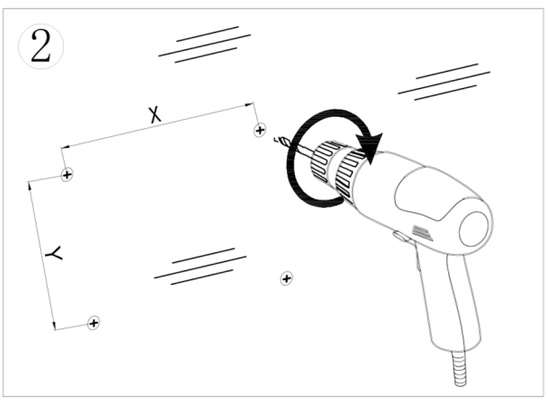

2.Insert the wall plugs.
Note: Wall plugs supplied are only suitable for solid stone/brick walls. Please ensure the screws are fully tight.

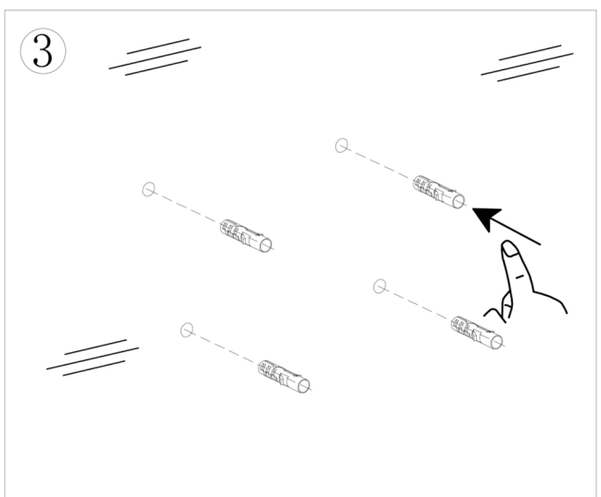

4.Hang the mirror onto the wall.

