
INSTALLATION INSTRUCTIONS

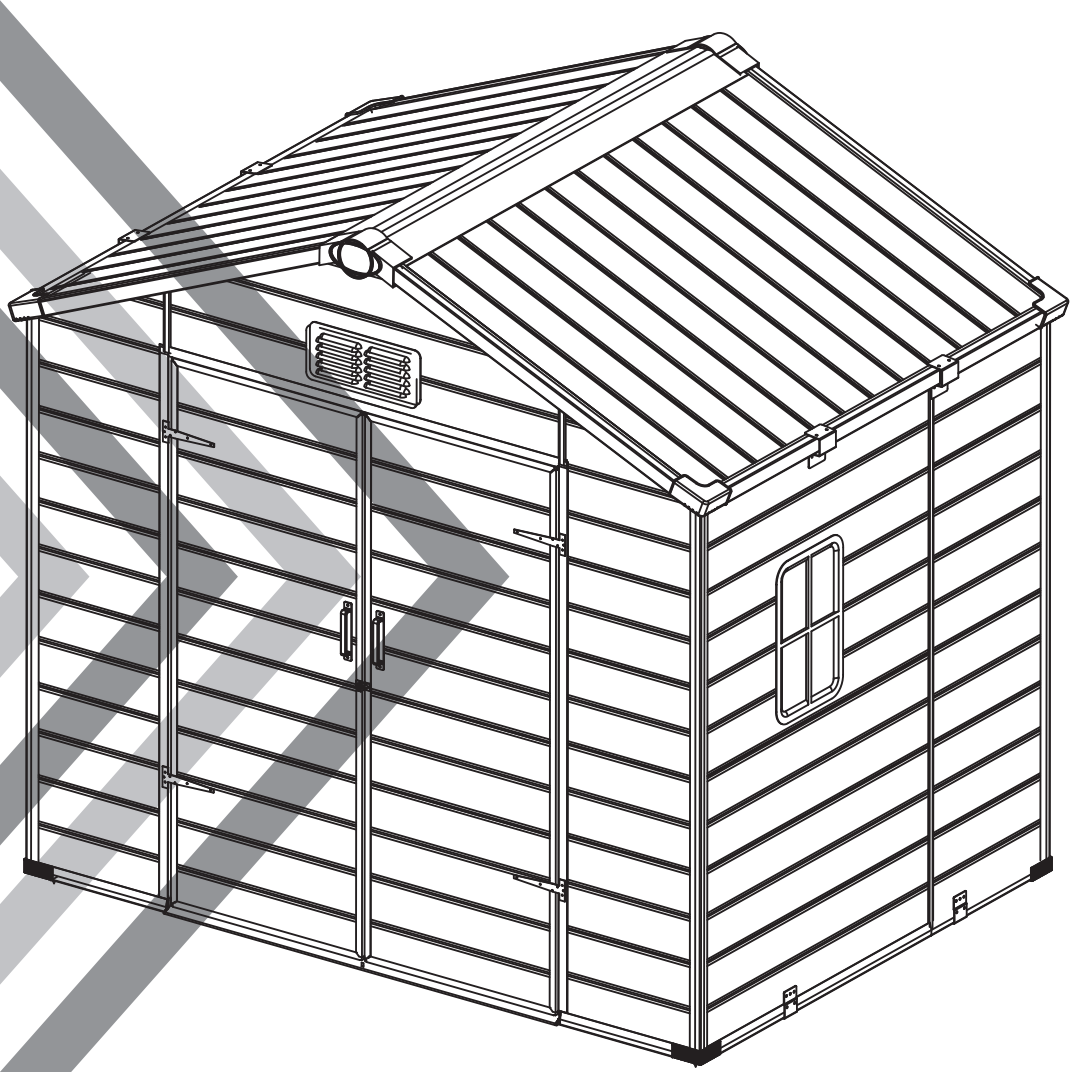

TOOL ROOM8x6

-INSTALLATION INSTRUCTIONS-

How to Use the Installation Manual

Read Thoroughly First

Before beginning assembly, carefully read all instructions and information in the manual. Verify that you have all the parts listed in the parts list.

Self-Drilling Required

Due to the ductility of the resin material, there are no pre-drilled holes on the panels. You will need to drill the holes yourself during assembly as per the instructions.

Understand the Diagrams

The manual includes diagrams and a parts list. Cross-reference the part numbers with the physical pieces to ensure all components are present.

Follow Step-by-Step

Do not skip ahead. Adhere strictly to the assembly instructions in the sequence provided to avoid errors.


Tools needed for installation


Scraper×1


Electric Drill×1


Ladder×1


Screw Driver×1

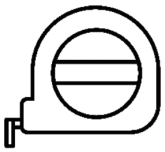
Tape Measure×1






















Small wrench×1


















Glove×1


Note:Due to the ductility of the resin,there are no pre-drilled holes on the panel,so please drill your own holes.






















Due to the large size of the product and for Safety,we recommend 2-4 people to work together on the installation,which is expected to be completed in 2-4 hours.


















Box A

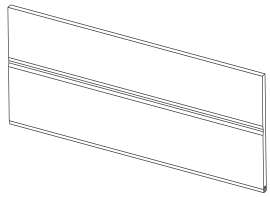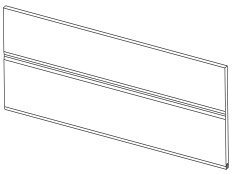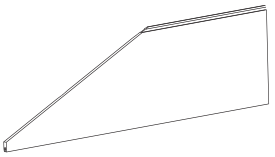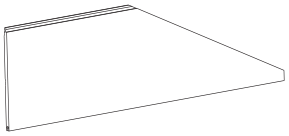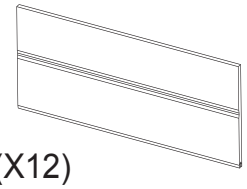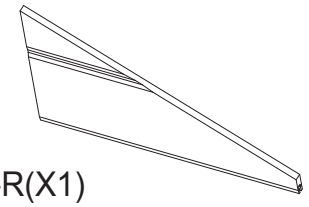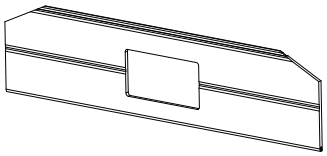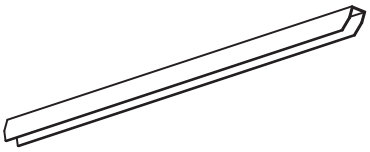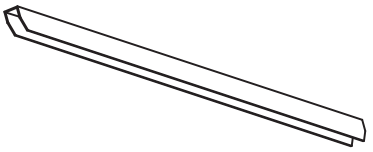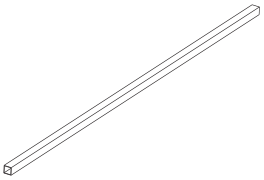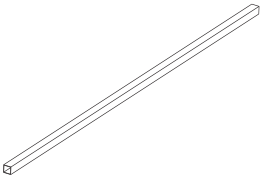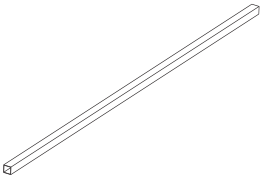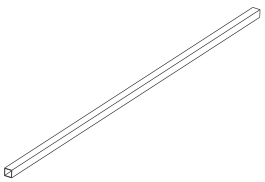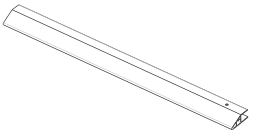
 E7(X12)	 E54(X12)	 E68-L(X1)
 E68-R(X1)	 E47(X12)	 E70-R(X1)
 E70-L(X1)	 E64-R(X1)	 E64-L(X1)
 E69(X1)	 H16-L(X1)	 H17(X4)
 F2(X2)	 F65(X1)	 F8(X1)
 F13(X4)	 J43(X8)	 J29(X3)
 J23(X2)	 J58(X2)	 F21(X1)

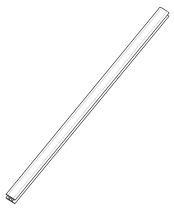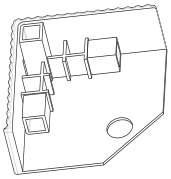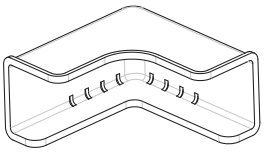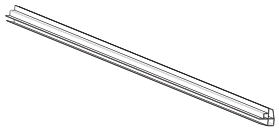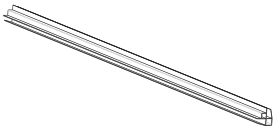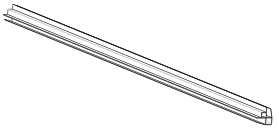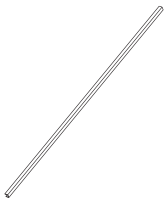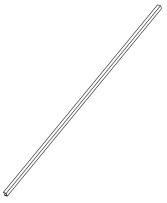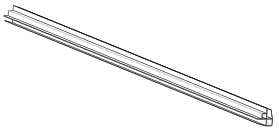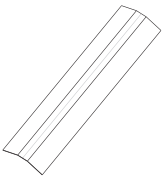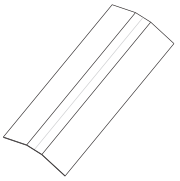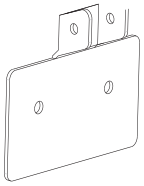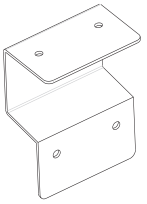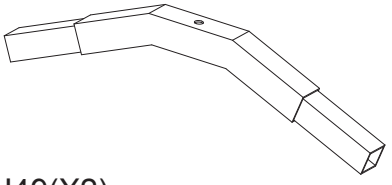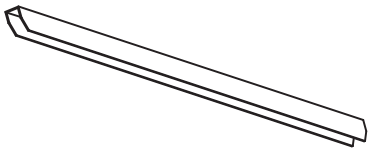 H6(X1)	 G1(X4)	 G9(X4)
 F28(X2)	 F27(X2)	 F33(X2)
 F71(X2)	 F70(X2)	 F26(X2)
 F47(X2)	 G10(X1)	 G12(X1)
 J3(X4)	 J4(X4)	 J49(X2)
 H16-R(X1)		







Box B

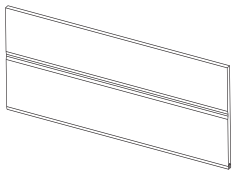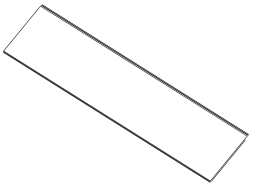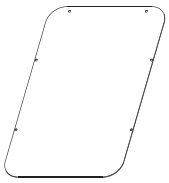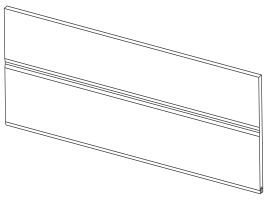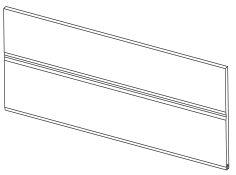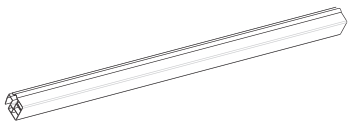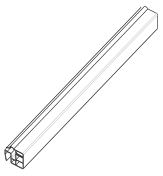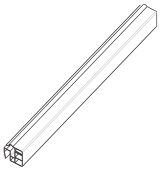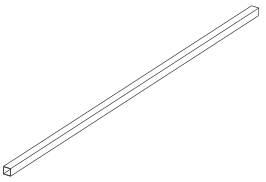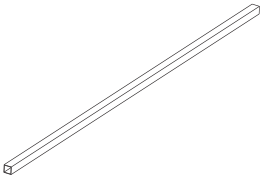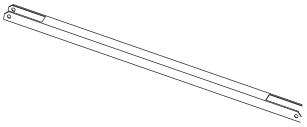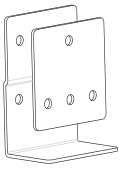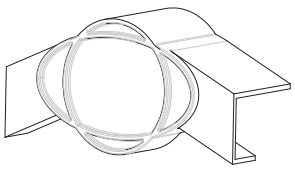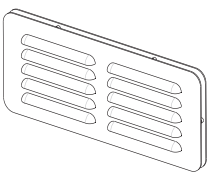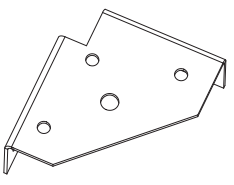 E59(X10)	 E58(X2)	 G18(X2)
 G5(X1)	 E13(X12)	 E3(X6)
 F44(X4)	 F43(X2)	 F12(X1)
 F39(X2)	 F11(X1)	 J37(X1)
 J46(X1)	 J48(X2)	 J47(X4)
 H15(X4)	 G21(X5)	 J6(X7)
 G8(X2)	 G3(X2)	 J2(X4)

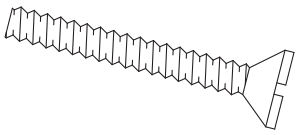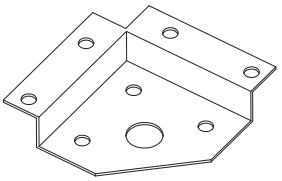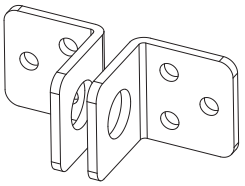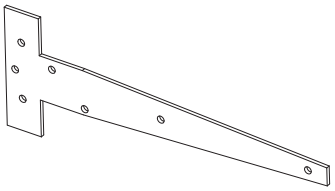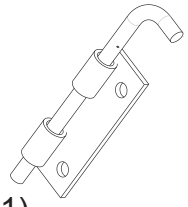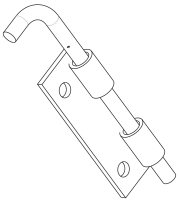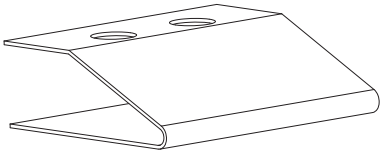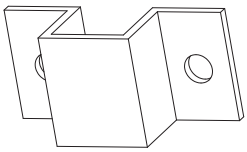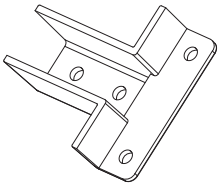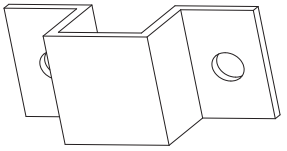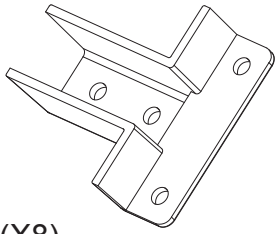
 J45(X2)	 J1(X4)	 J16(X2)
 J17(X4)	 J18(X2)	 J19(X17)
 J65(X22)	 J20(X253)	 J21(X126)
 J60(X16)	 J31(X1)	 J32(X1)
 J59(X1)	 D90(X4)	 D91(X4)
 G15(X6)	 G25(X4)	 G16(X11)
 G26(X8)	 G28(X6)	 G23(X2)

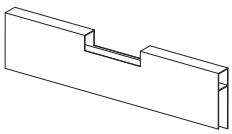
 J62(X1)		

Box C

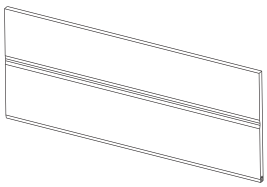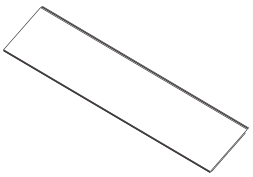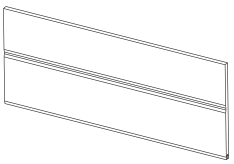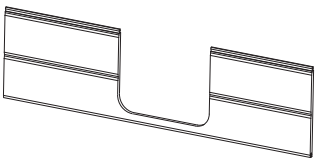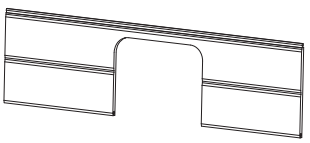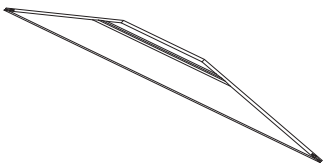
 E7-G(X10)	 E6(X2)	 E3(X4)
 E74(X1)	 E75(X1)	 E4(X1)


1 E6(x1) E7-G(X5) Cork Hammer

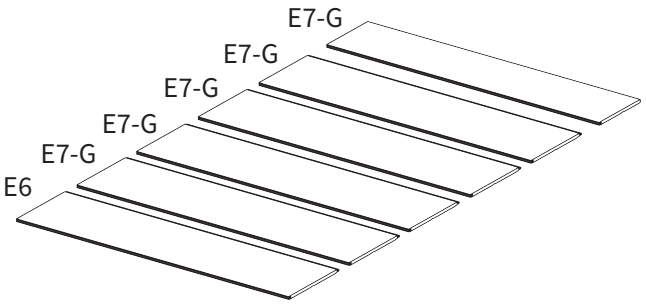

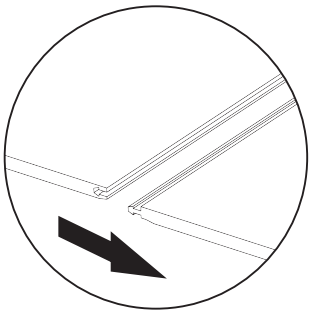



2 F12(X1) F11(X1) Cork Hammer

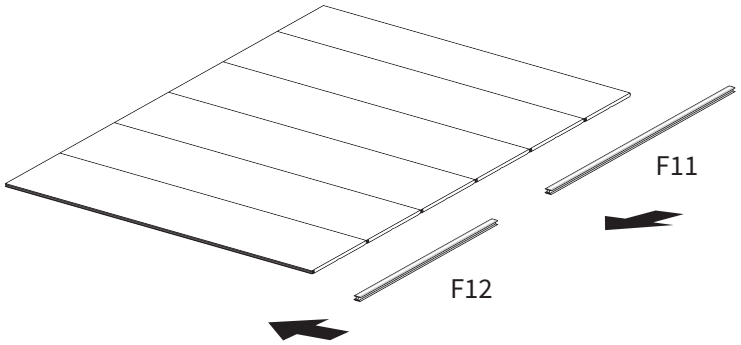

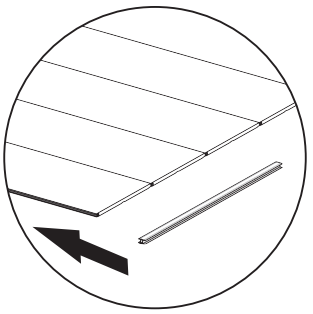



3 E6(x1) E7-G(X5) Cork Hammer

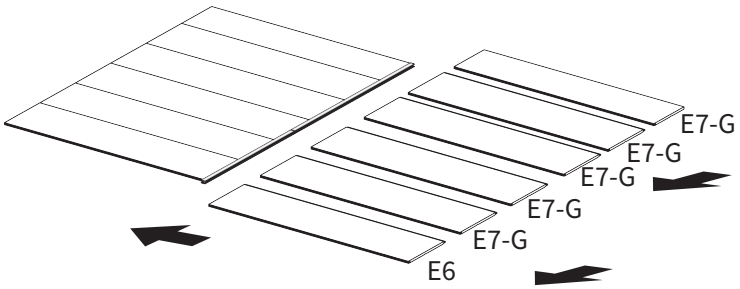

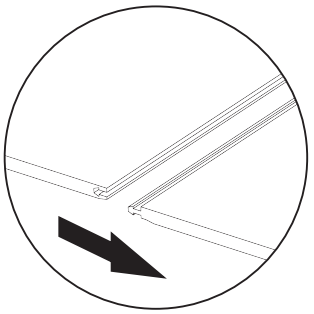



4 G1(X1) Cork Hammer

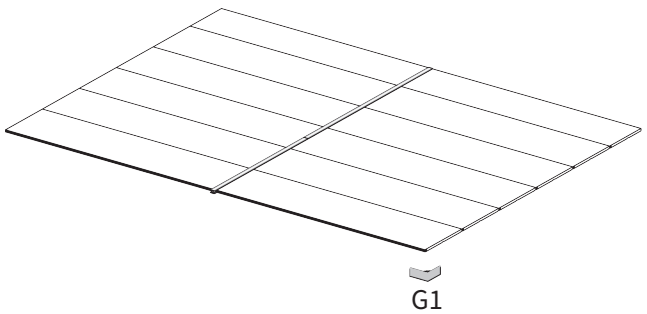

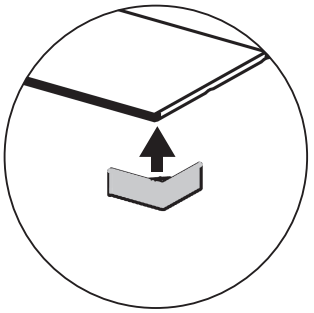


5 F26(X2) F21(X1) Cork Hammer

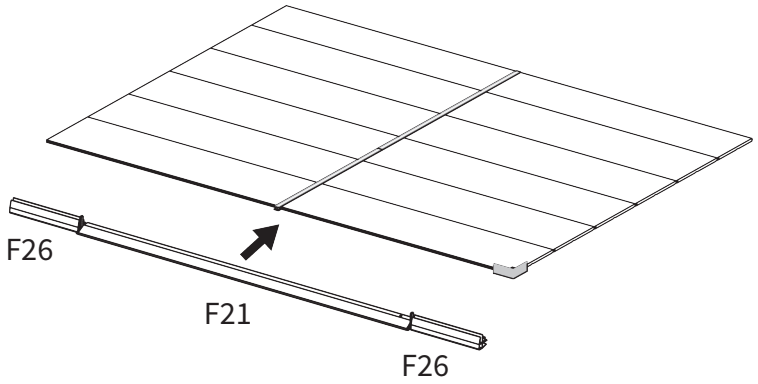


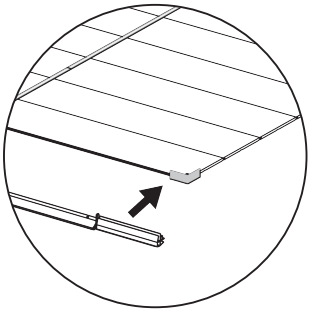


6 G1 (X1) Cork Hammer


G1

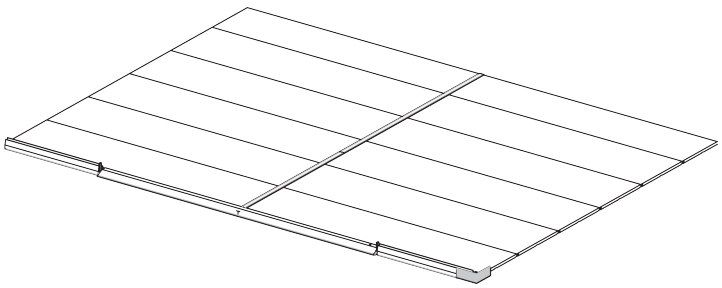

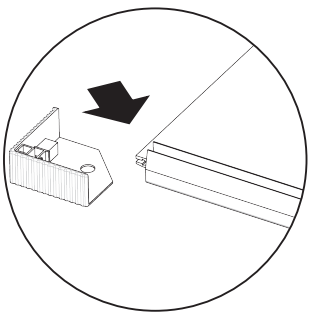



7 F28(X1) F27(X1) Cork Hammer

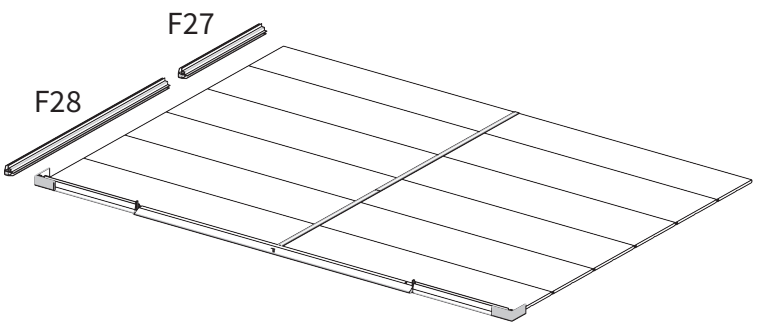

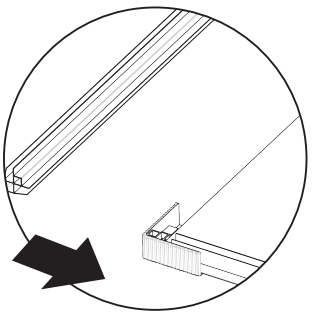



8 G1(X1) Cork Hammer

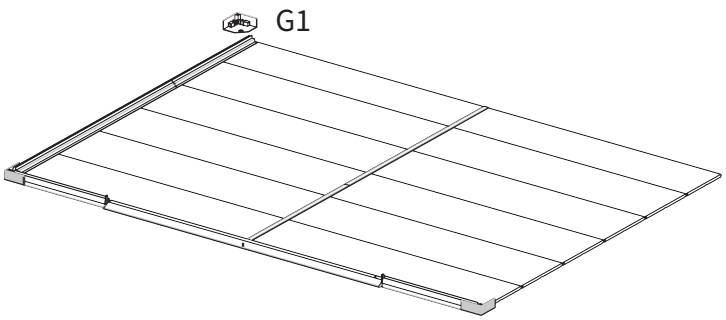

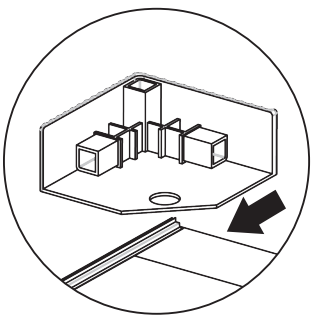



9 F33(X2) Cork Hammer

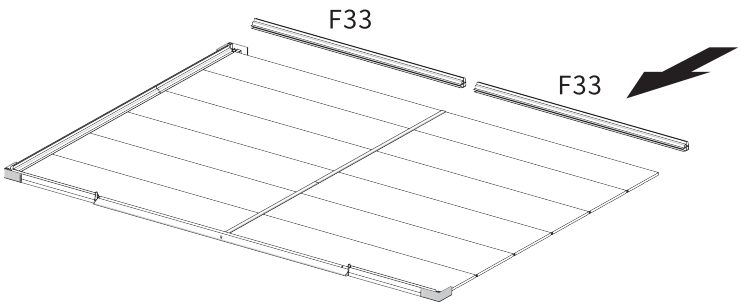

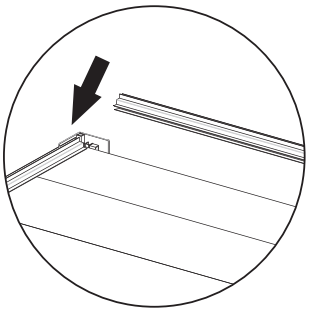



10 F28 (X1) F27 (X1) Cork Hammer

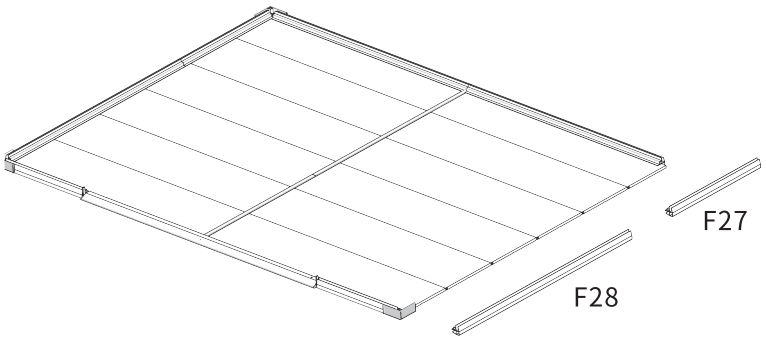

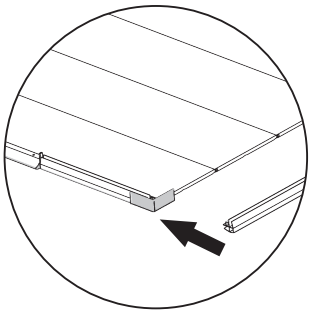



11 G1(X1) Cork Hammer

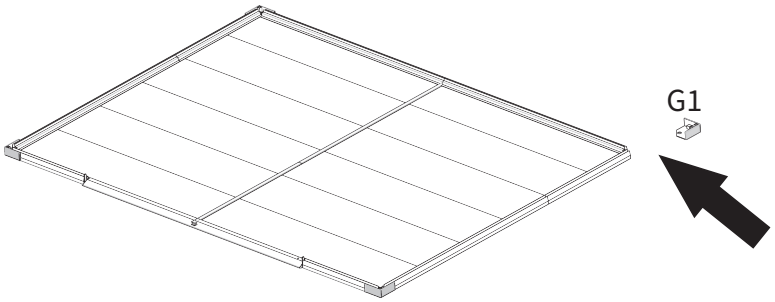

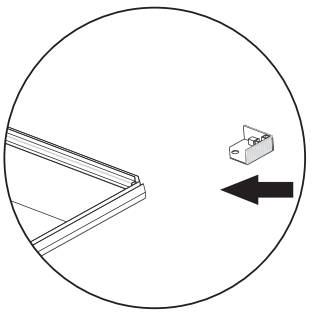


12 J20(X34) Cork Hammer Electric Drill

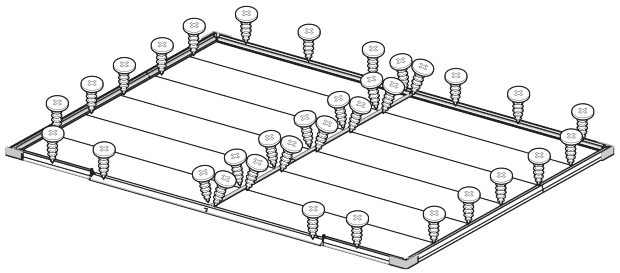

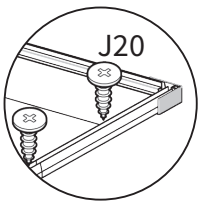


After the floor screws are tightened, proceed to the next installation step.


13 F13(X1) Cork Hammer

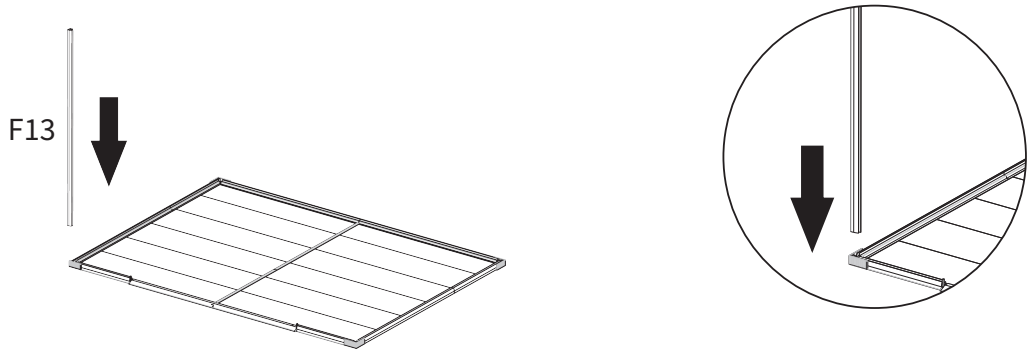


14 E3 (X3) Cork Hammer

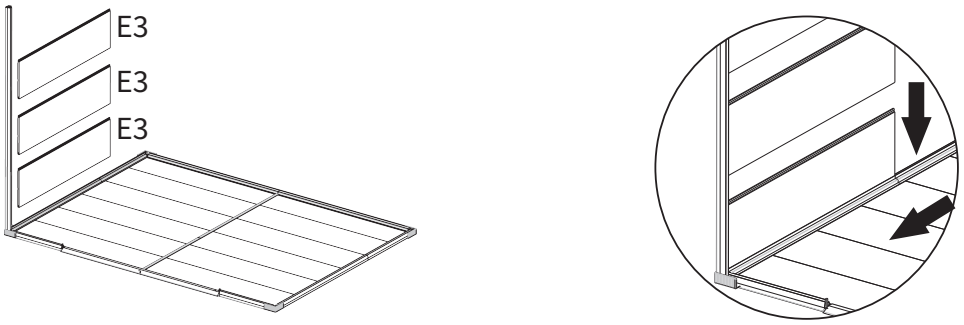


15 E47(X2) Cork Hammer

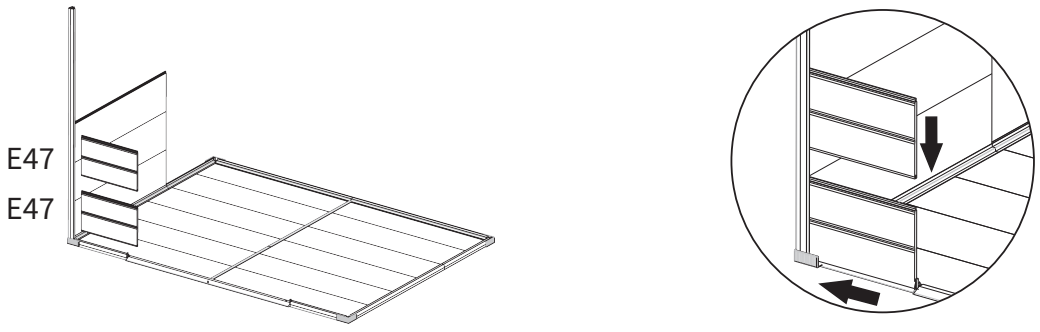


16 E3 (X3) Cork Hammer

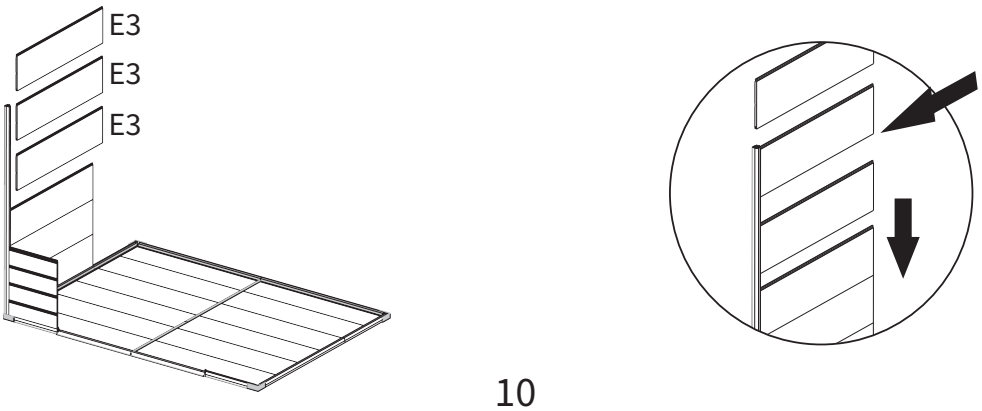


17 F2(X1) Cork Hammer

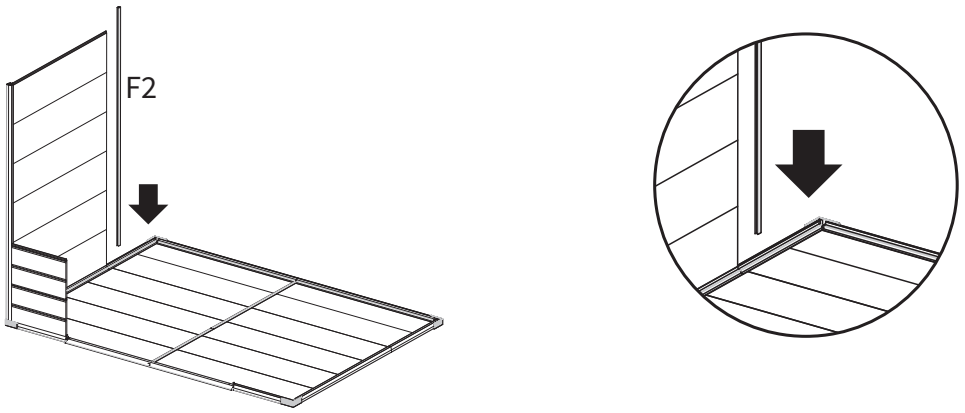


18 E54 (X6) Cork Hammer

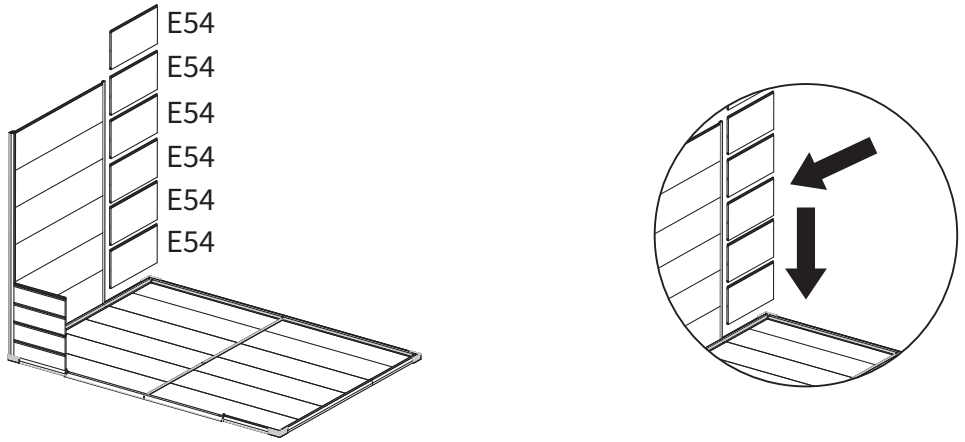


19 F13(X1) Cork Hammer

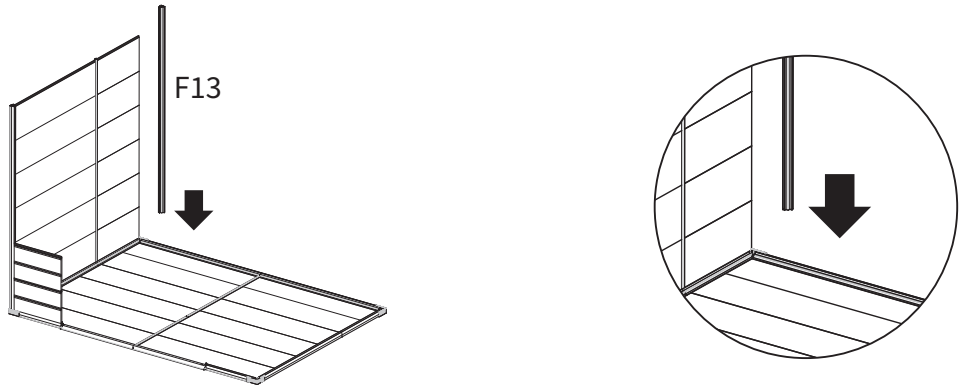


20 J20(X26) Cork Hammer Electric Drill

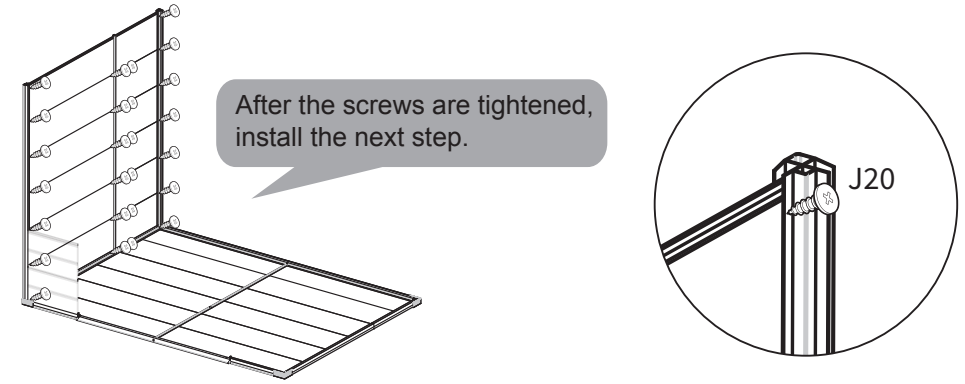



21 E7(X6) Cork Hammer

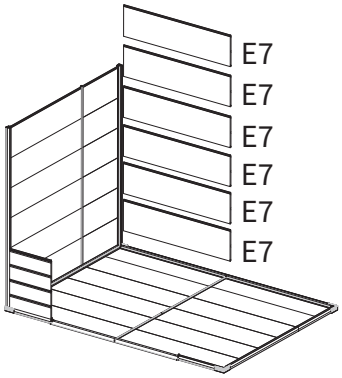

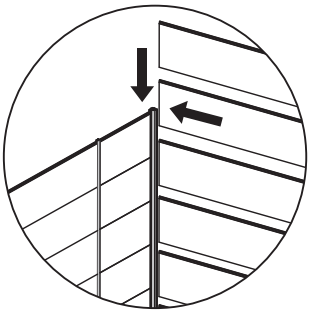



22 F65 (X1) Cork Hammer

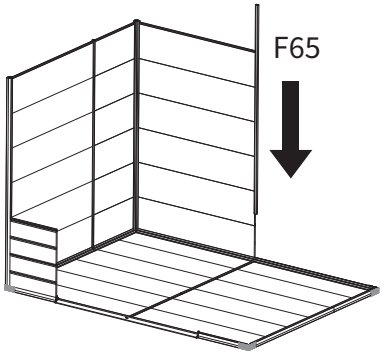

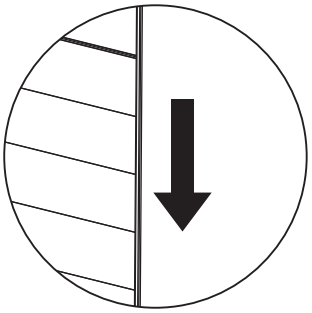



23 E7(X6) Cork Hammer

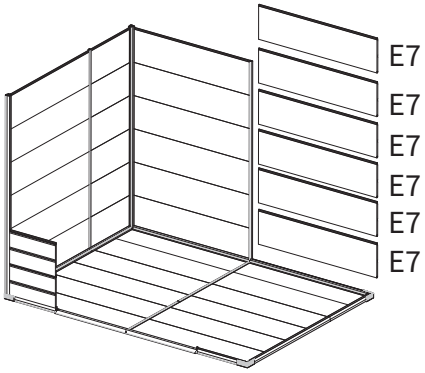

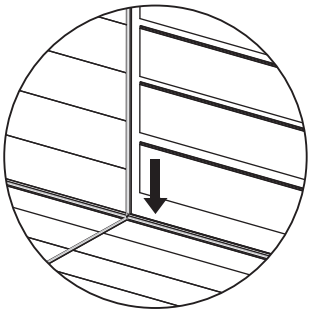



24 E68-L(X1) E70-L(X1) | F8(X1) E68-R(X1) E70-R(X1) J20(X4) J62(X1) Cork Hammer Electric Drill

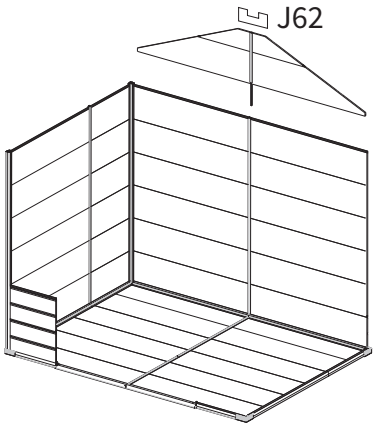

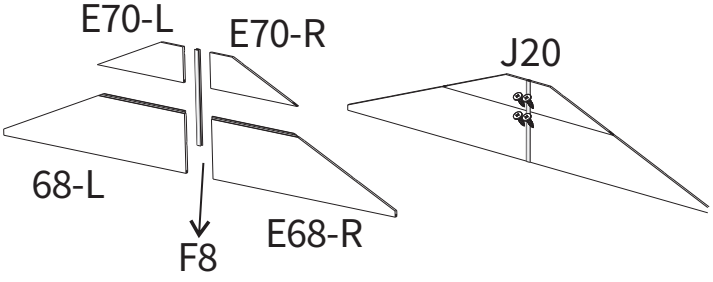



25 F13(X1) Cork Hammer

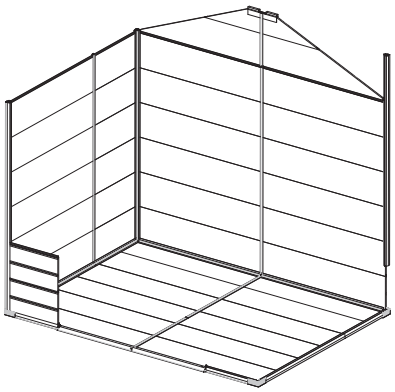

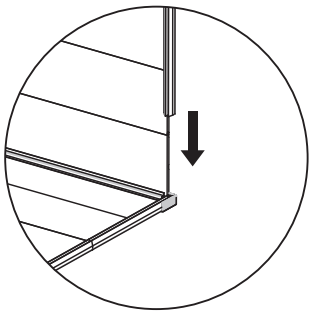


26 J20(X30) Cork Hammer Electric Drill

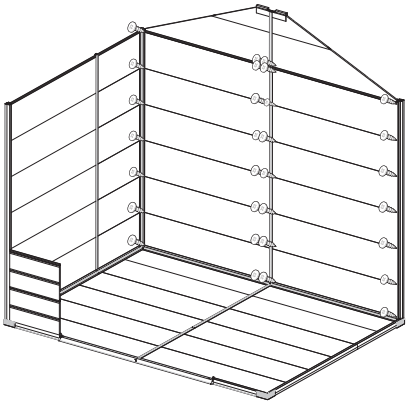


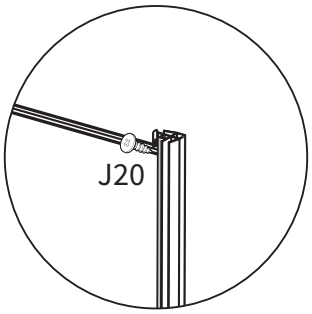


After the screws are tightened, install the next step.


27 E54(X6) Cork Hammer

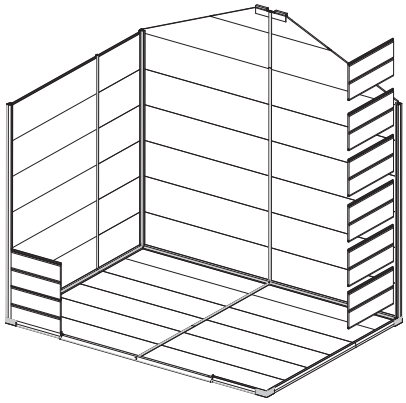

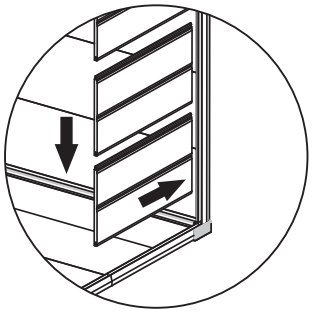



28 F2(X1) Cork Hammer

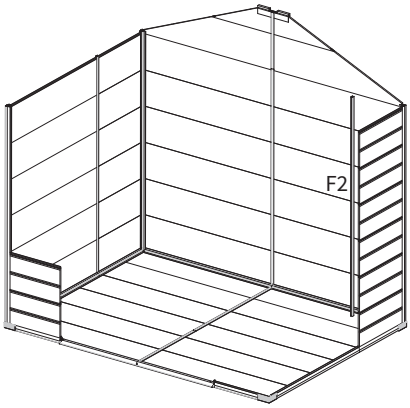

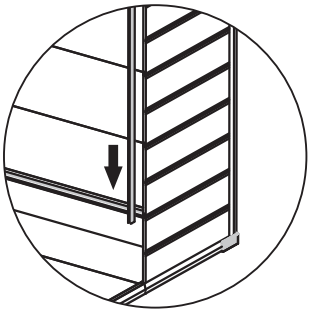



29 E3(X3) Cork Hammer

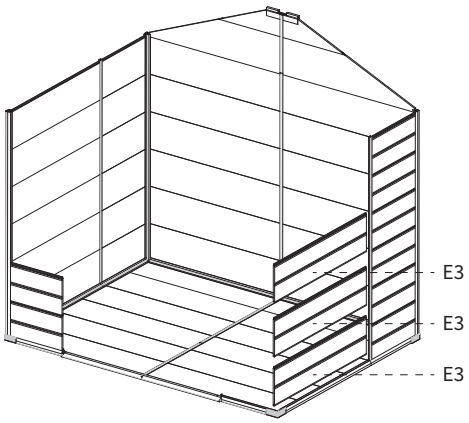


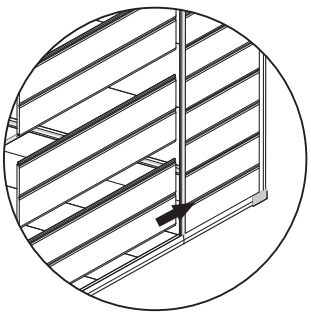


30 J20(X11) E74(X1) E75(X1) G18(X2) G5(X1) Cork Hammer Electric Drill

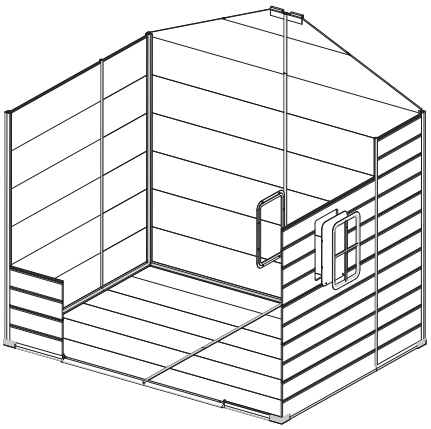


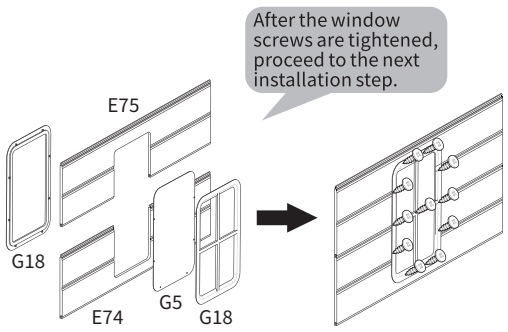

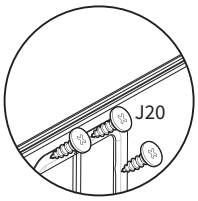



31 E3(X1) Cork Hammer

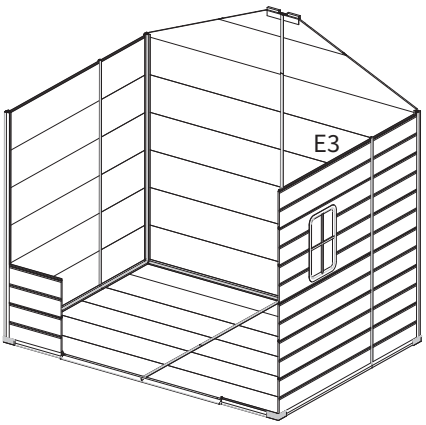

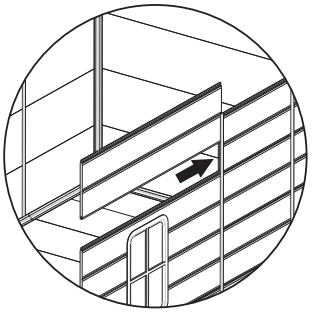



32 F13(X1) Cork Hammer J20(X26)

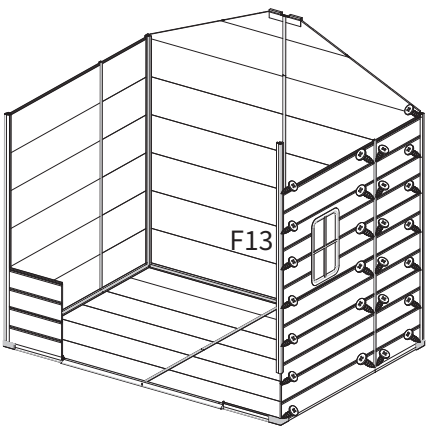

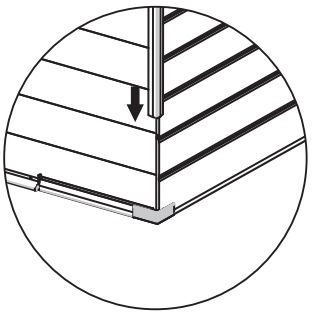



33 E47(X4) E64-L (X1) Cork Hammer

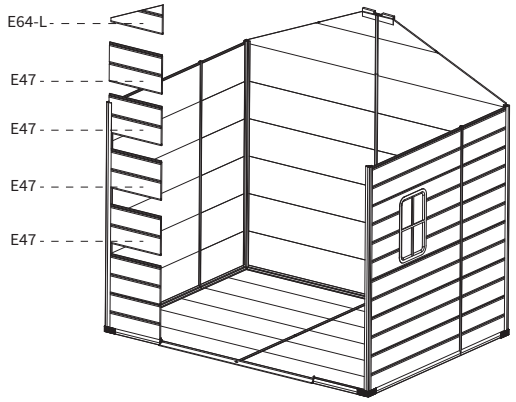

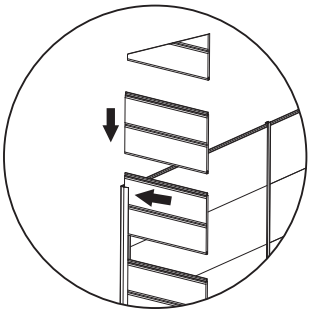


34 E47(X6) E64-R (X1) Cork Hammer

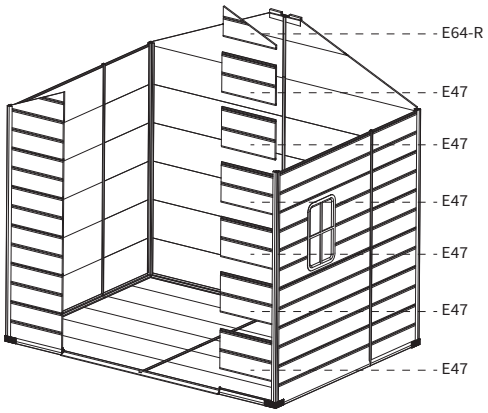

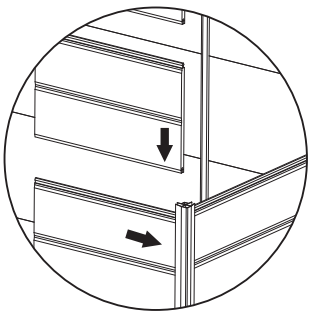



35 H16-L(X1) H16-R(X1) Cork Hammer

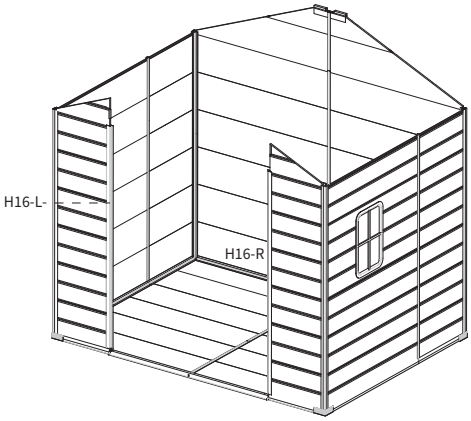





36 H6(X1) Cork Hammer

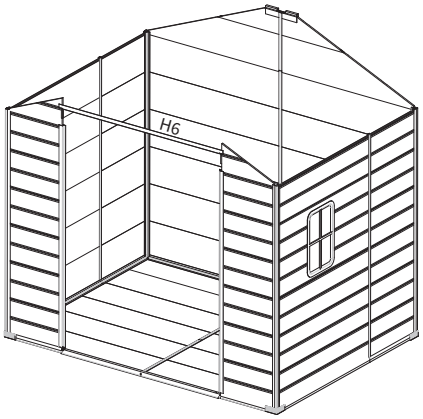

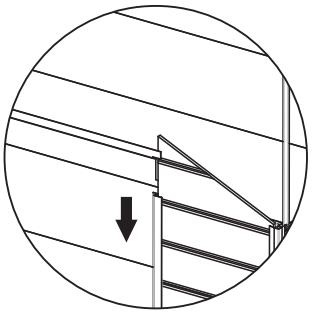



37 F47X2) Cork Hammer

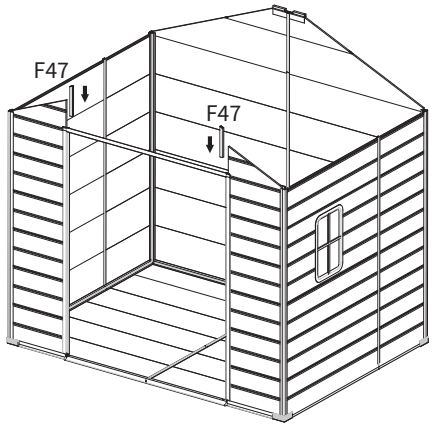


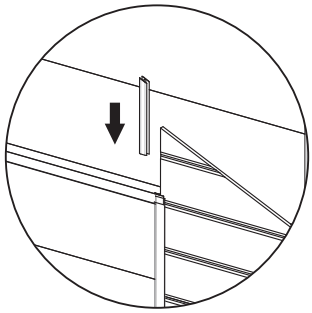


38 E69(X1) E4(X1) G3(X2) J20(X8) Cork Hammer

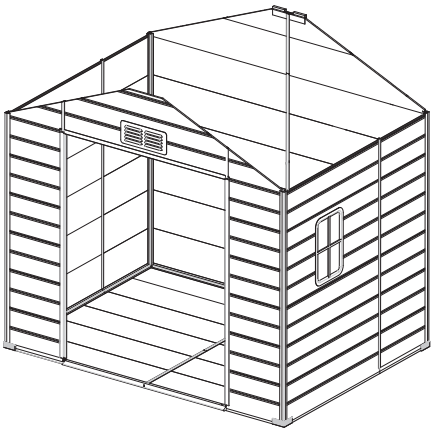


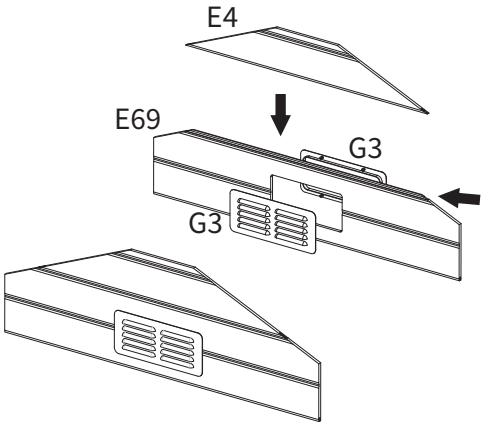


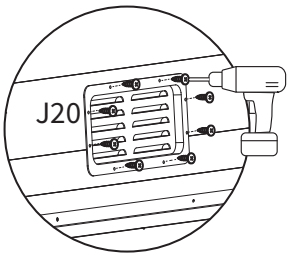


39 G21(X5) J20(X14) J21(X10) Cork Hammer Electric Drill

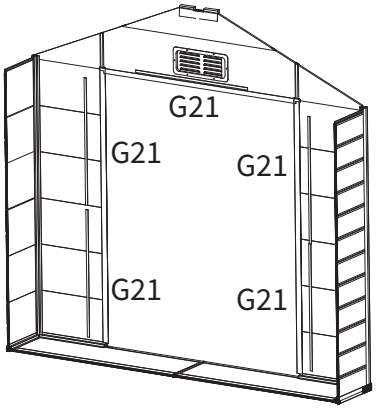


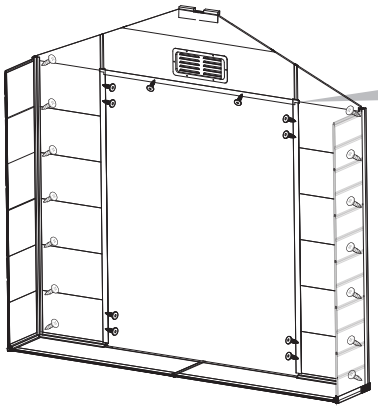

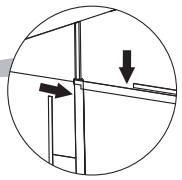



From inside the tool room, insert the door frame clip G21 into the gaps on all three sides of the door frame to maintain its stability.

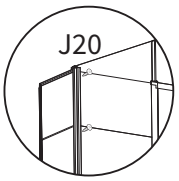

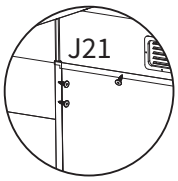



40 F43(X2) F39(X2) J20(X10) Cork Hammer

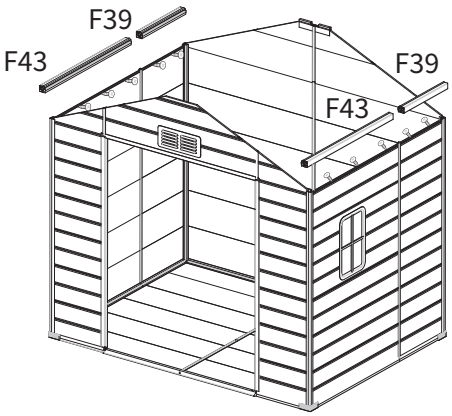

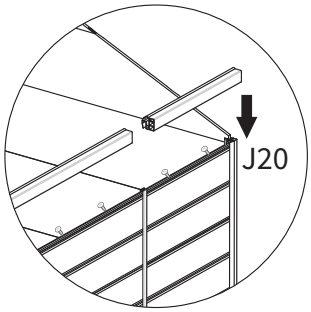


41 J3(X4) J4(X4) Cork Hammer Ladder

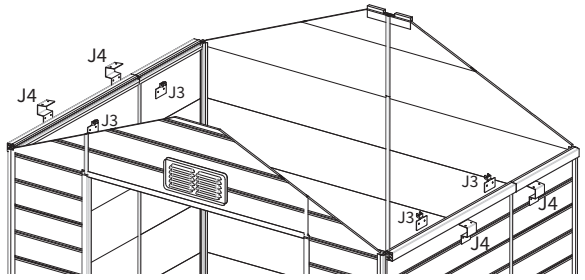


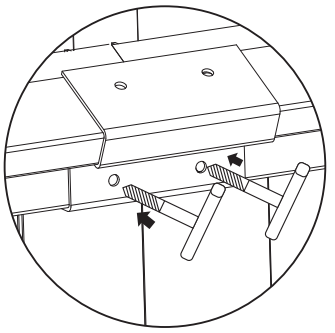


First, drill two holes on each side of the tool room, then install J3 and J4.

42 J65(X8) Small Wrench Allen key Ladder

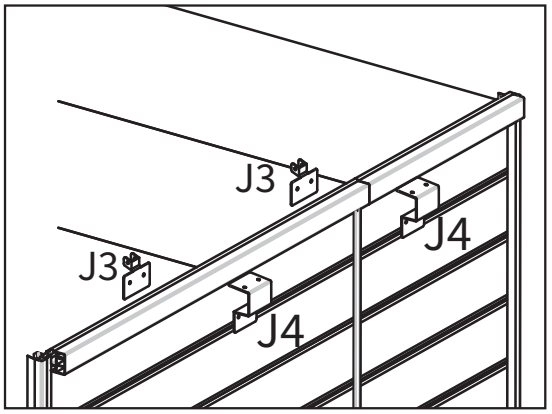


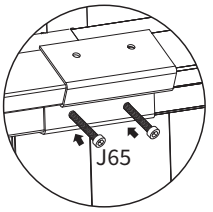

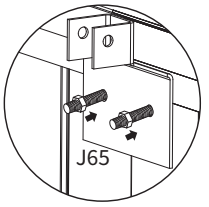


The screw passes through the holes of J3 and J4 and is locked with a nut.


43 J19(X12) J47(X4) J48(X2) J49(X2) Small Wrench Allen key

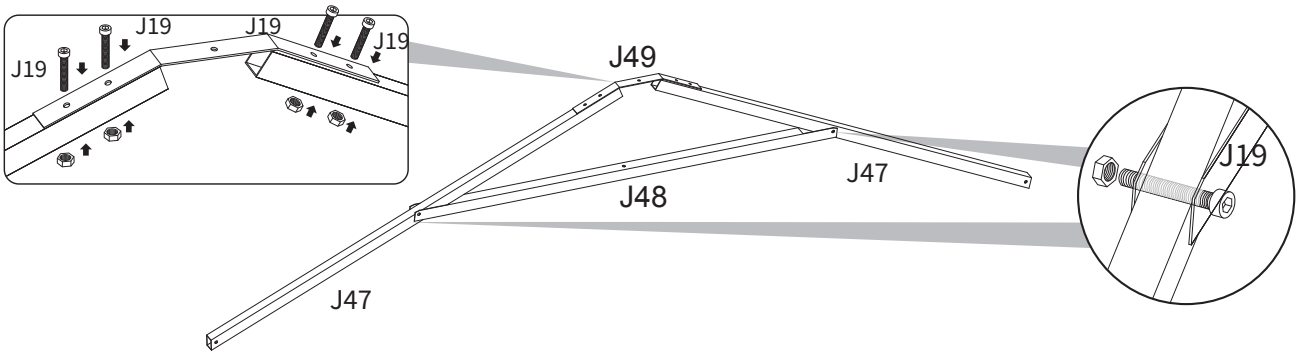


44 J19(X4) Small Wrench Allen key Ladder

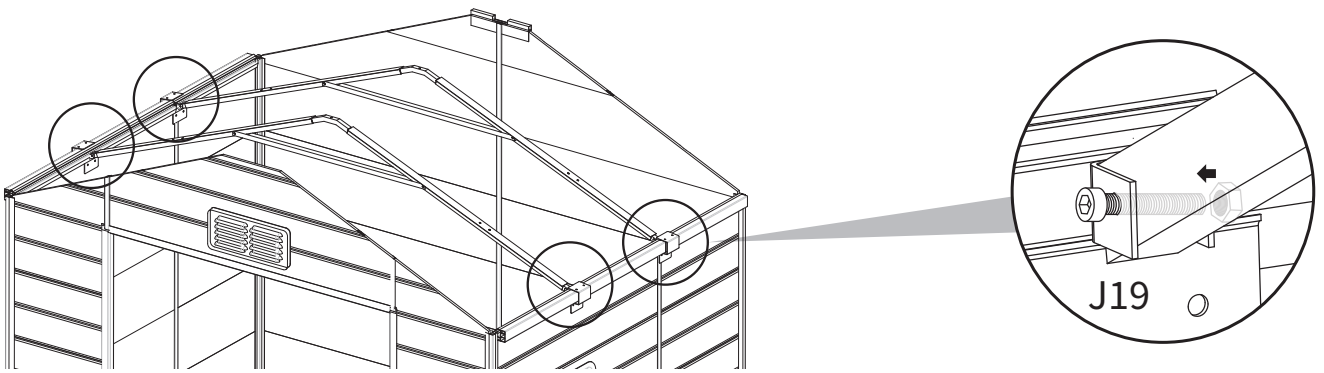



45 E13(X6) Cork Hammer Ladder Scraper

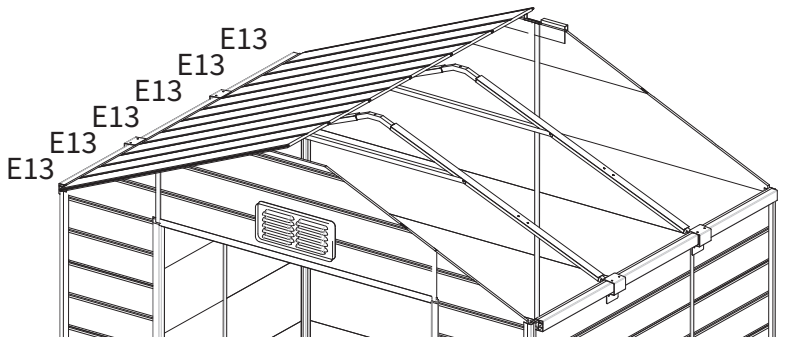

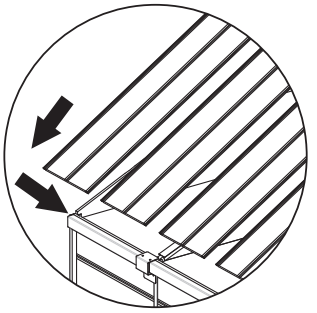



46 F71(X1) F70(X1) Cork Hammer Ladder

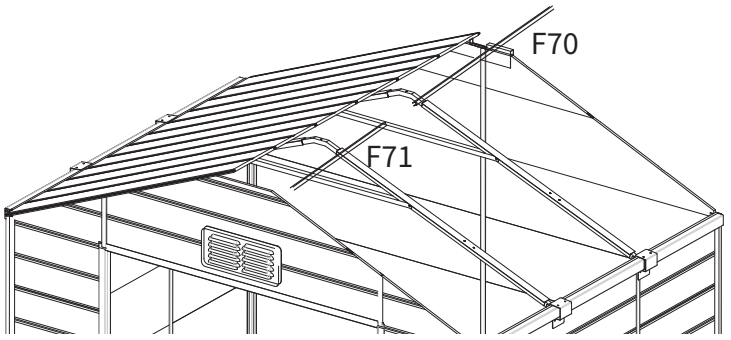

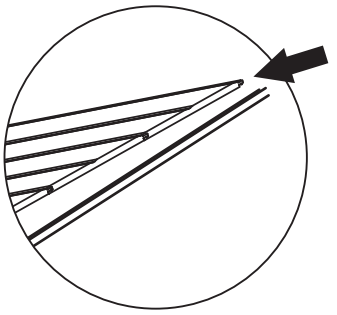



47 F44(X2) Cork Hammer Ladder

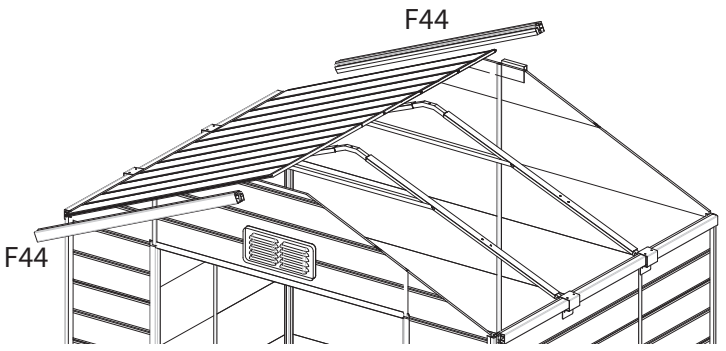

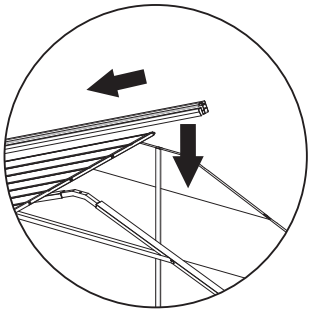



48 E13(X6) Cork Hammer Ladder Scraper

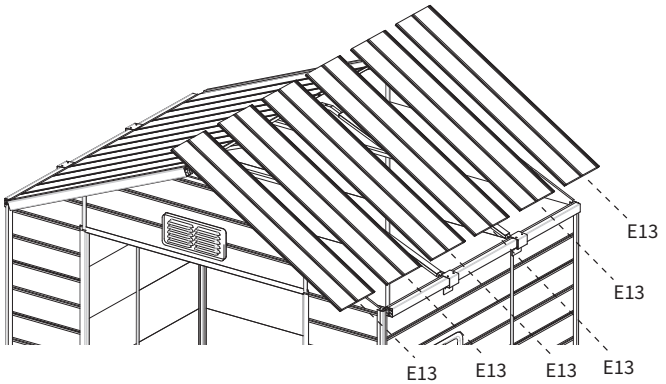

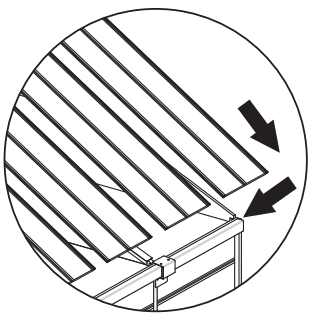



49 F71(X1) F70(X1) Cork Hammer Ladder

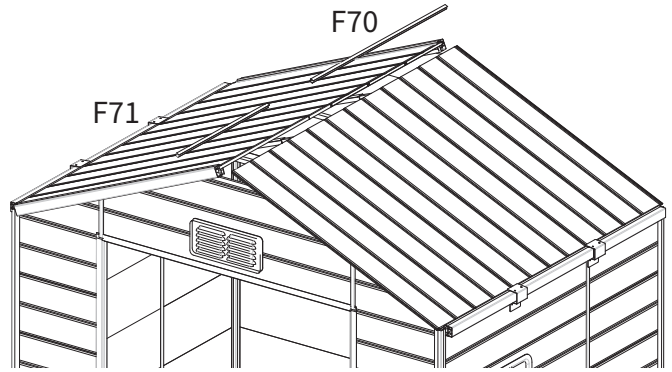

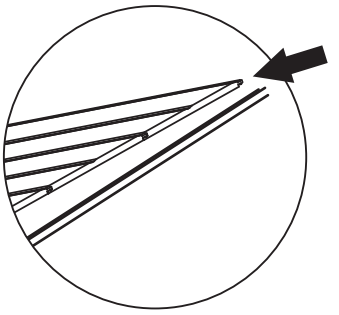



50 F44(X2) Cork Hammer Ladder

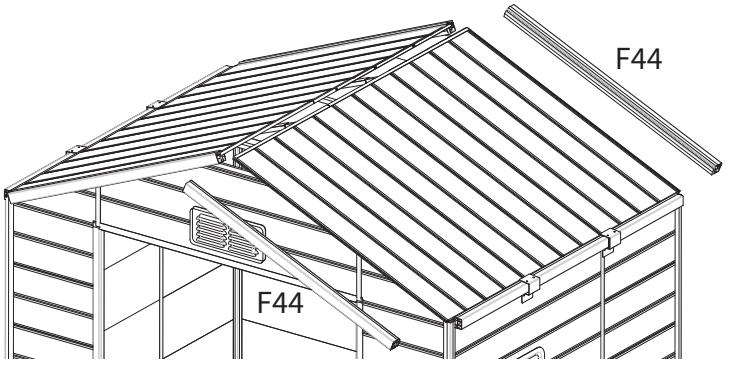

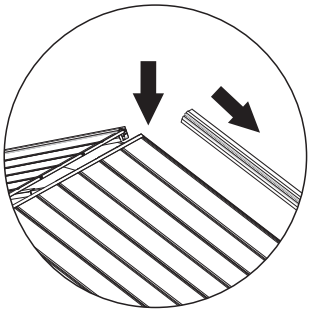



51 J37(X1) J46(X1) J19(X1) Cork Hammer Small Wrench Allen key Ladder

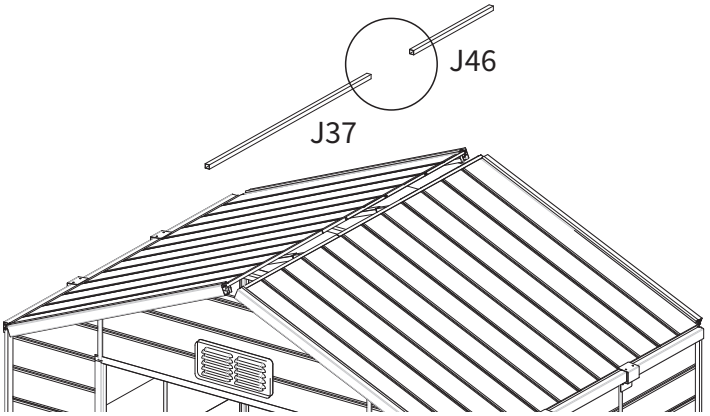

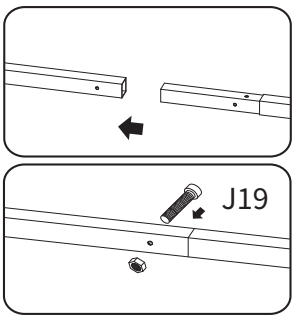



52 J45(X2) Cork Hammer Ladder

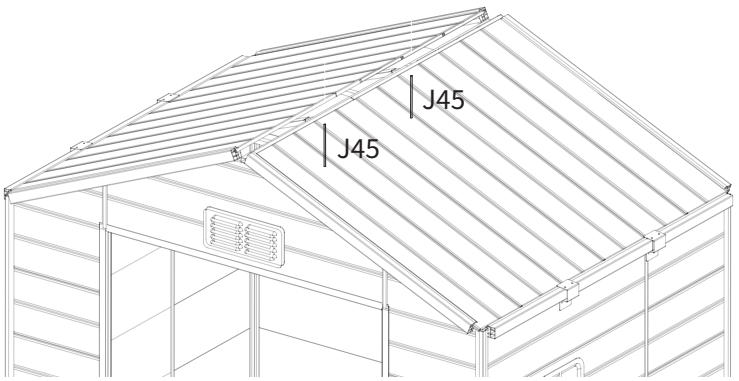

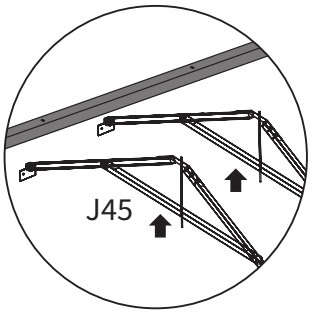



53 G10(X1) G12(X1) Cork Hammer Ladder

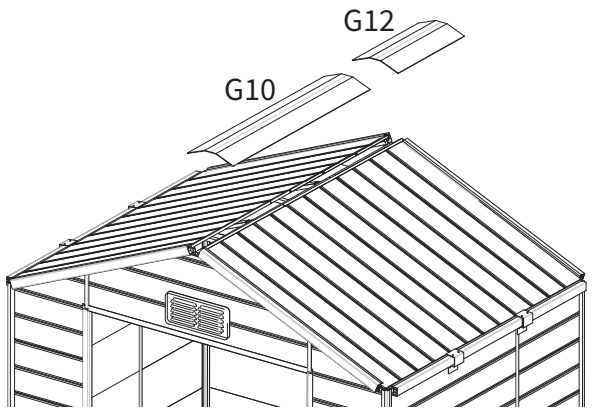

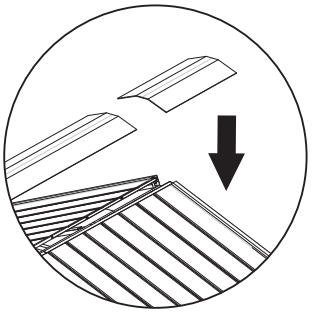



54 G8(X2) Ladder

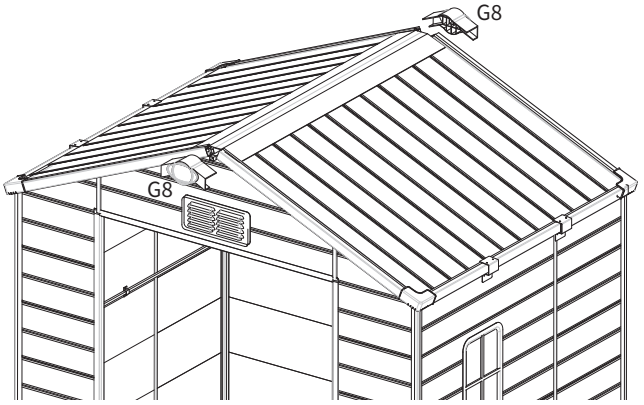

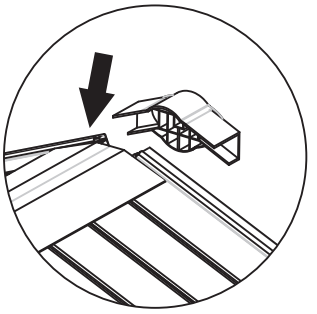



55 G9(X4) J20(X40) Cork Hammer Ladder

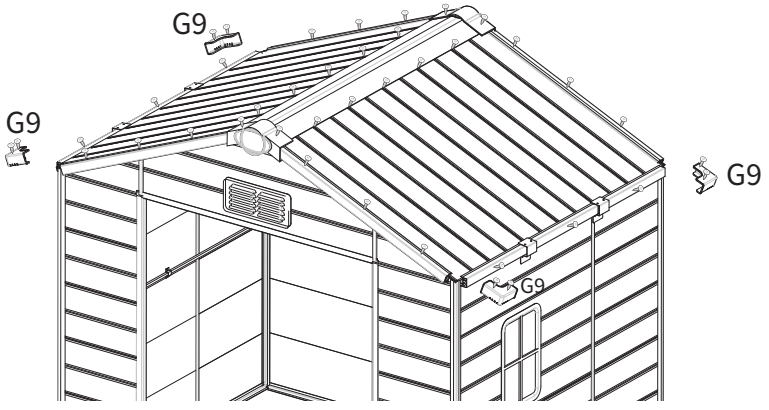


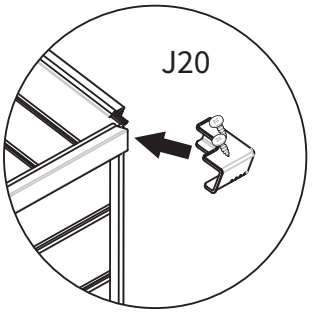


56 G16(X1) G26(X1) J43(X1) J21(X6) Electric Drill

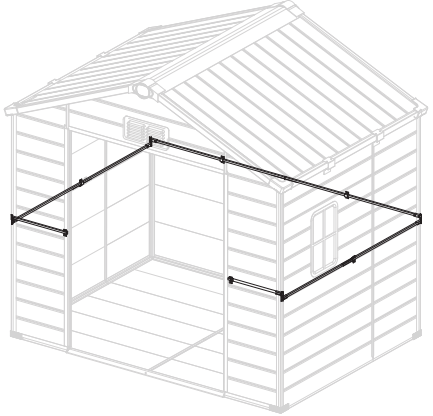


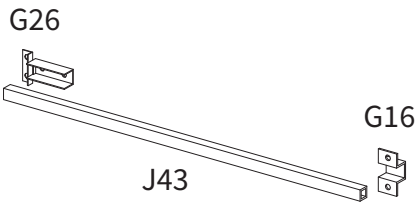

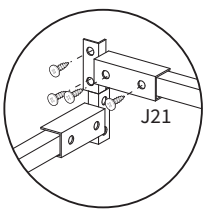


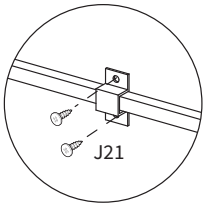


57 G15(X3) G25(X2) J23(X1) J58(X1) G23(X1) J20(X4) J21(X10) Electric Drill

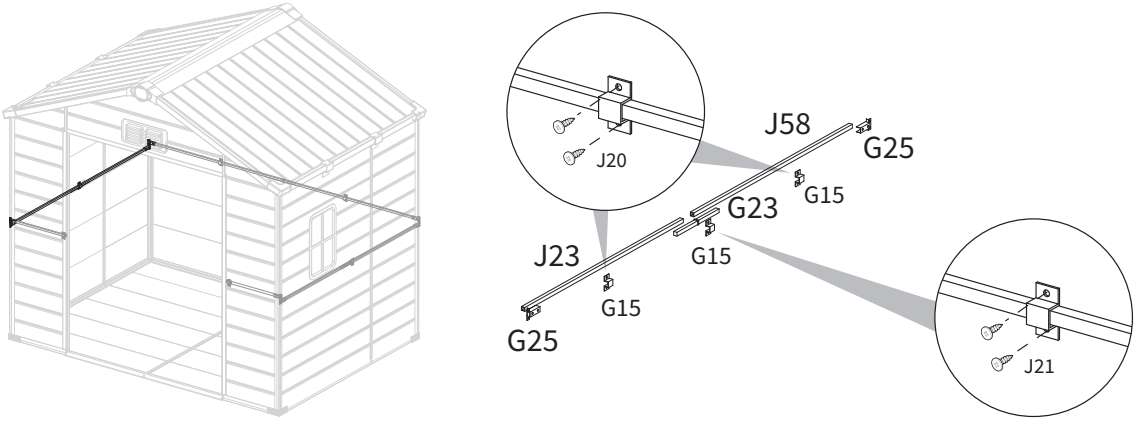


58 G16(X6) G26(X4) J43(X4) J29(X2) G28(X4) J20(X8) J21(X20) Electric Drill

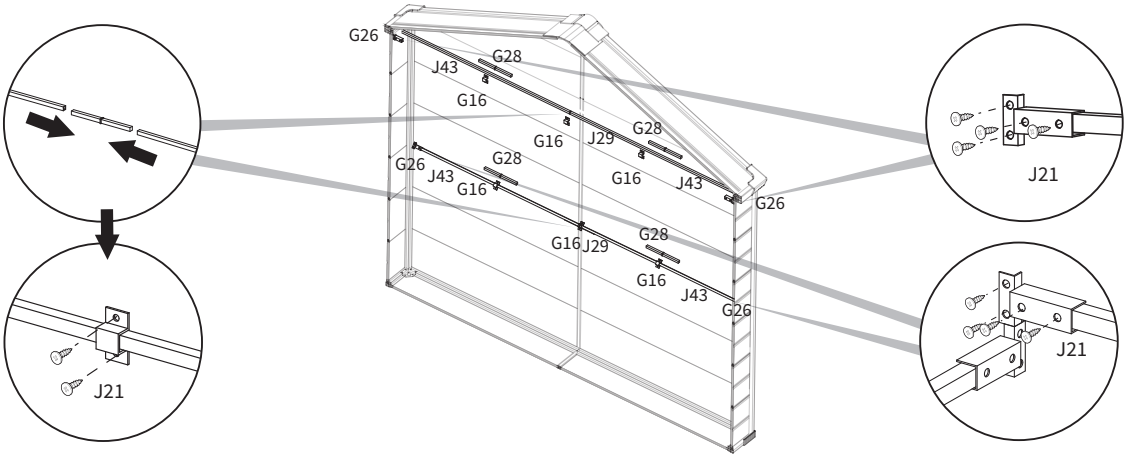


59 G15(X3) G25(X2) J23(X1) J58(X1) G23(X1) J20(X4) J21(X10) Electric Drill

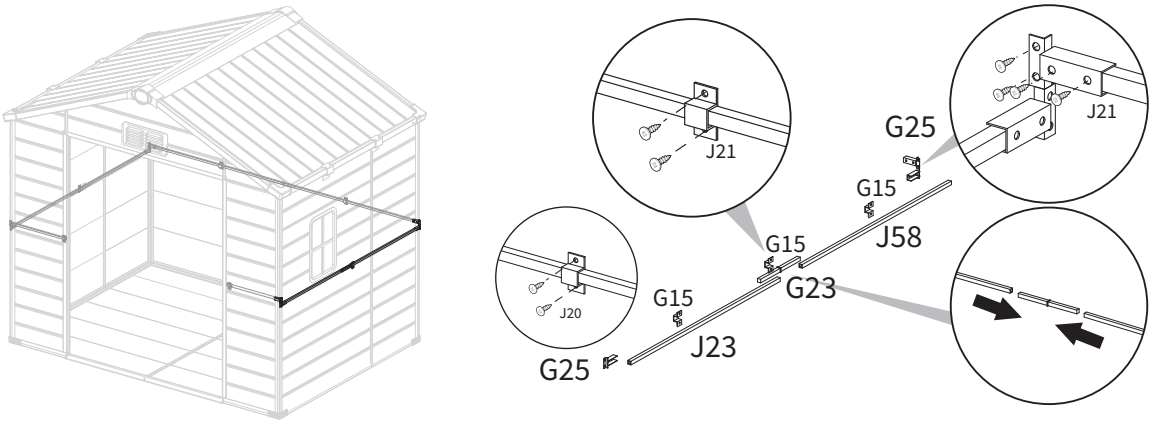


60 G16(X4) G26(X3) J43(X3) J21(X20) G28(X2) J29(X1) Electric Drill

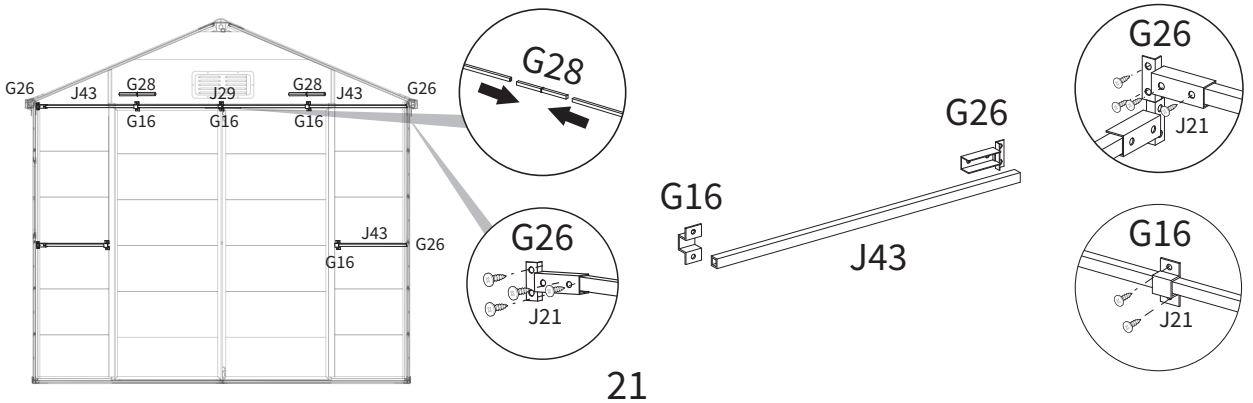


61 J2(X4) J21(X16) Electric Drill

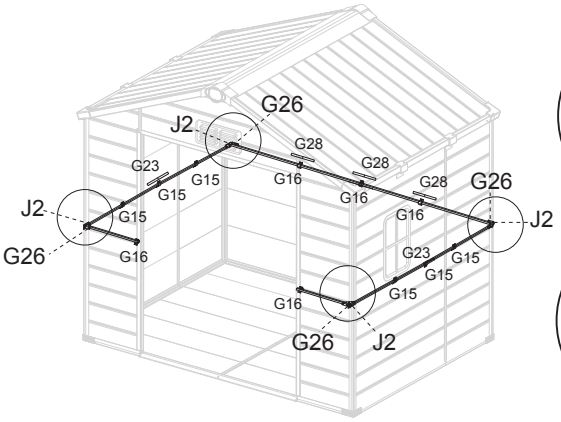


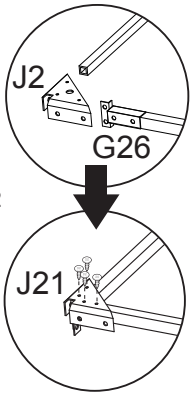


If you choose to install J2, remove a G26 at the corner, and then install the horizontal alignment screw.


62 •E58(×2) •E59(×10) •J60(×16) •H15(×4) •H17(×4) Cork Hammer Electric Drill

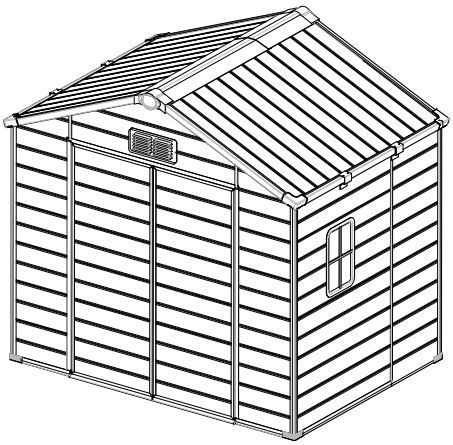

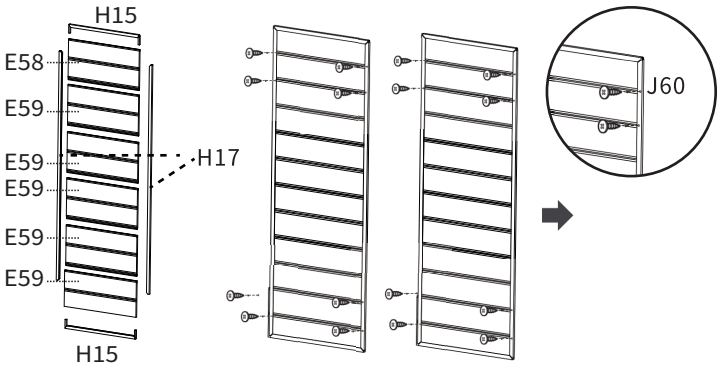



63 J17(X4) J21(X20) J20(X8) Electric Drill

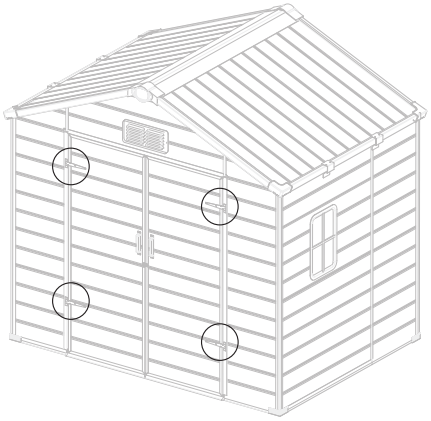

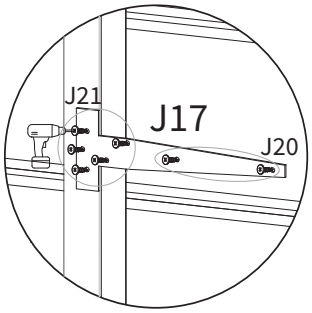



64 J16(X2) J21(X10) J18(X2) Electric Drill

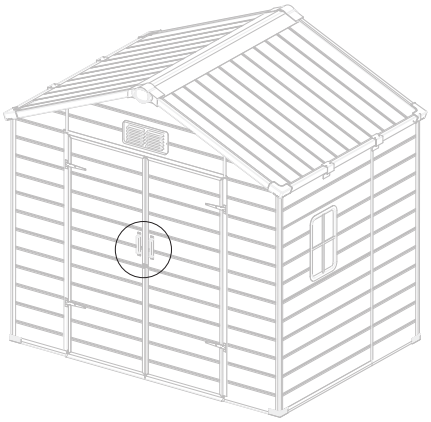


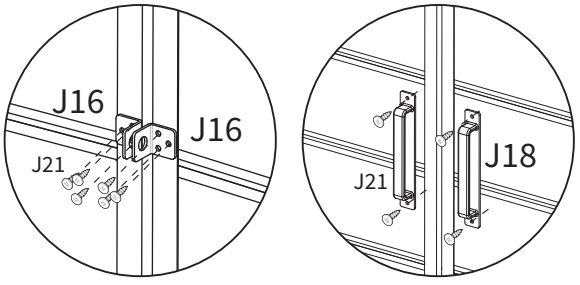


65 J31(X1) J32(X1) J59(X1) J21(X4) J20(X2) Electric Drill

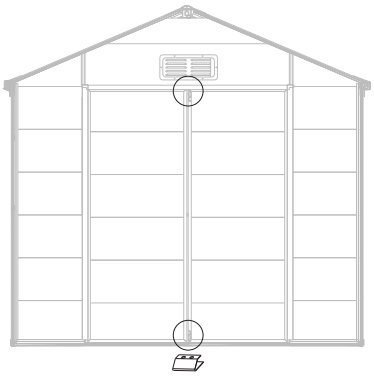


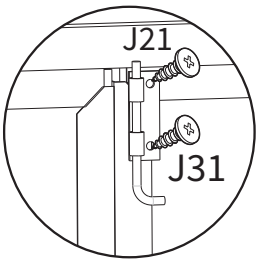


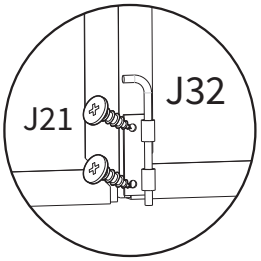


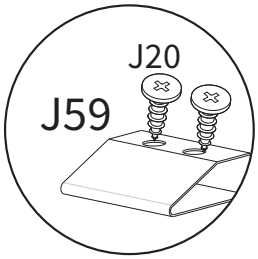


66 J1(X4) D90(X4) D91(X4) J20(X28) Electric Drill

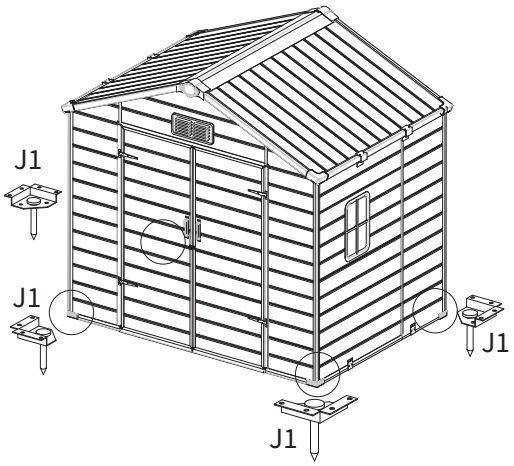

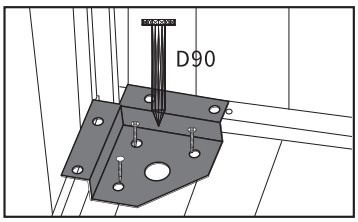


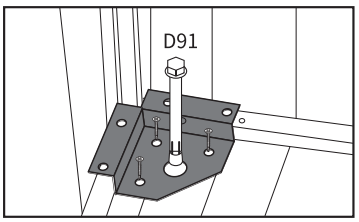


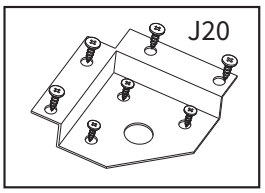



Install separately at the four corners inside the house

67 J6(X7) J65(X14) Small Wrench Allen key

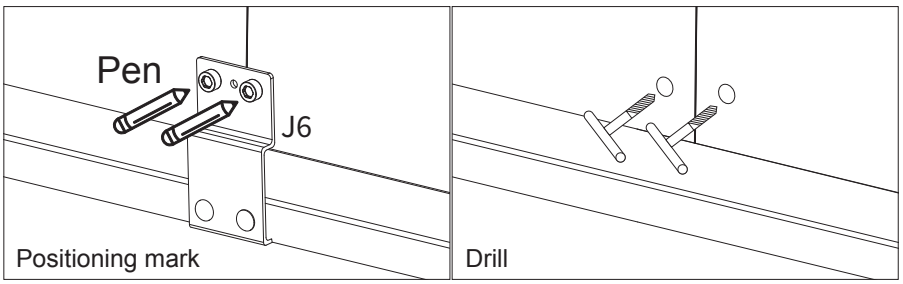

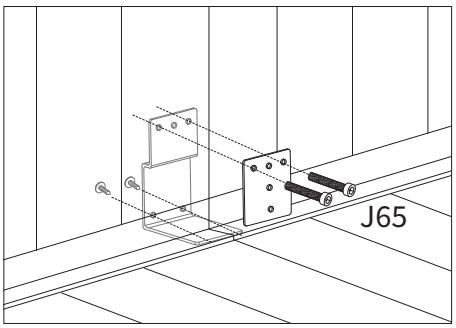

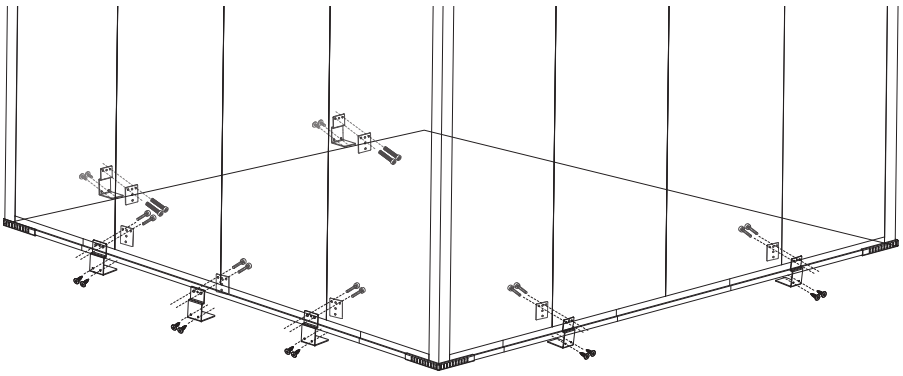

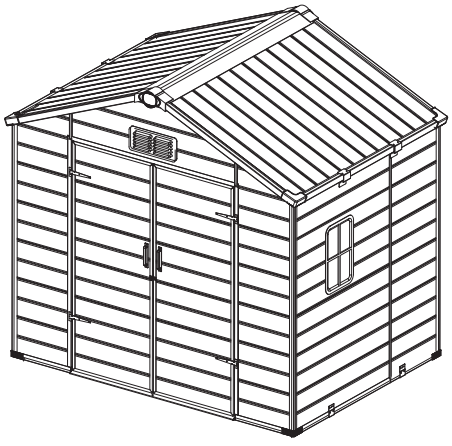

Bottom reinforcement, effective wind resistance