

WINNERS ONLY® ASSEMBLY INSTRUCTIONS

PROD. NO.: BA2001CKHS/BA2001KHS
BA2001CKFS/BA2001KFS
BA2001CKRS

Thank you for purchasing this quality product. Please read the instructions thoroughly before unpacking the assembly parts.
Caution: sharp exposed staple tips can cause injury, therefore for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make the assembly easier, and will help to prevent personal injury and to insure parts are not damaged during the assembly process.
2. Before beginning, please check the packing materials carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.
3. To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residues and rough surfaces and also check for staples or nails left after removing the packing materials. The manufacturer will not be held responsible if preventive steps are not taken prior to installation.
4. Please do not over tighten screws or bolts. During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.
5. Please lay all parts and hardware on a non abrasive surface such as a carpet, and follow the assembly steps.

NOTE: Bunkie Board must be used to replace Box Spring.

Components List:BA2001CKHS/BA2001KHS			
NO	DESCRIPTION	QTY	
A	 HB Left Leg	1 PC	
B	 HB Right Leg	1 PC	
C	 Headboard	1 PC	
D	 Wood stretcher	1 PC	
Components List:BA2001CKFS/BA2001KFS			
E	 Storage Footboard	1 PC	
F	 Slat Roll	1 SET	
G	 Support Leg	6 PCS	
H	 Slat Connector	2 PCS	
Components List:BA2001CKRS			
I	 Side Rail	2 PCS	
J	 Rail Cap	2 PCS	

Hardware List: BA2001CKHS/BA2001KHS				
NO	Description	Size	Sketcher	QTY
1	Allen Key	4*74*29mm		1 PC
2	Bolt	1/4"*15*57mm		6 PCS
3	Bolt	1/4"*15*45mm		4 PCS
4	Spring Washer	1/4"*11*2mm		10 PCS
5	Flat Washer	1/4"*18*2mm		10 PCS
Hardware List: BA2001CKFS/BA2001KFS				
6	Screw	Ø8*30mm		26 PCS
Hardware List: BA2001CKRS				
7	Allen Key	4*74*29mm		1 PC
8	Bolt	1/4"*15*45mm		8 PCS
9	Spring Washer	1/4"*11*2mm		8 PCS
10	Flat Washer	1/4"*18*2mm		8 PCS

STEP 1

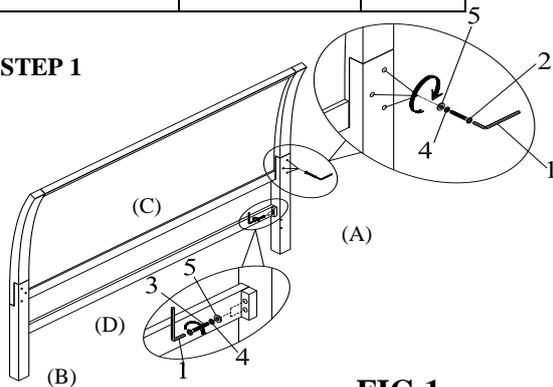


FIG 1

STEP 1:

Lay the Headboard (C) front side down on a smooth and clean surface.

Attach HB Left Leg (A) and HB Right Leg (B) to Headboard (C) using Flat Washer (5), Spring Washer (4), Bolt (2). Do not fully tighten yet.

Attach Wood Stretcher (D) to HB Left (A) and HB Right legs (B) using Flat Washer (5), Spring Washer (4), Bolt (3), fully tighten with Allen Key (1).

Fully tighten all the bolts located in HB Left Leg (A) and HB Right Leg (B).


WINNERS ONLY®

ASSEMBLY INSTRUCTIONS

BA2001CKHS/BA2001KHS
 BA2001CKFS/BA2001KFS
 PROD. NO.: BA2001CKRS

STEP 2

FIG 2

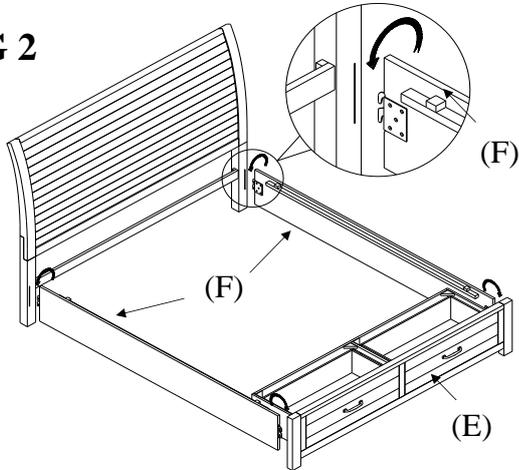

STEP 2: Hook both Side Rails (I) to the Headboard assembly and to the Footboard (E) as shown in FIG 2.

STEP 3: Attach Support Legs (G) to the Slat Connector (H) and Slat Roll (F) as shown in FIG 3 .

STEP 4: Attach Slat Roll (F) with Support Legs and Slat Connector (G&H) to the Side Rails (I) using Screws (6) as shown in FIG 3.

STEP 3


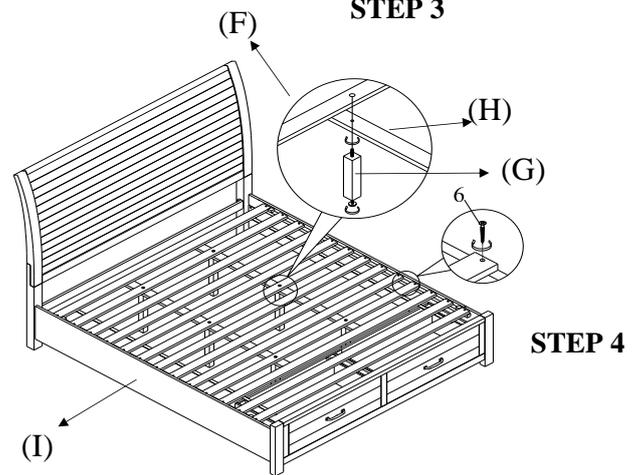


FIG 3

STEP 5



STEP 5: Attach the rail cap (J) to side rail (I), using bolt(8), spring washer (9), flat washer (10) and tighten them by Allen Key (7).

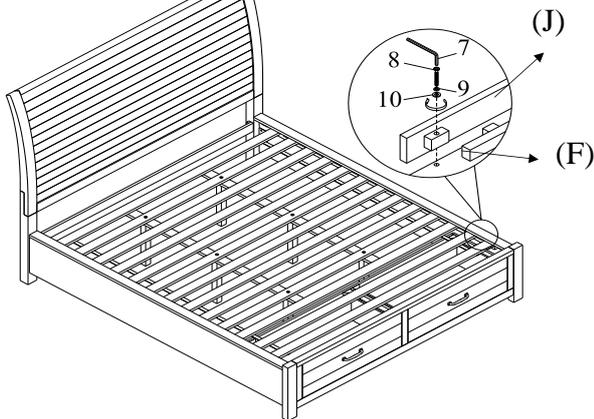