


Assembly Instructions

LGR222BQ

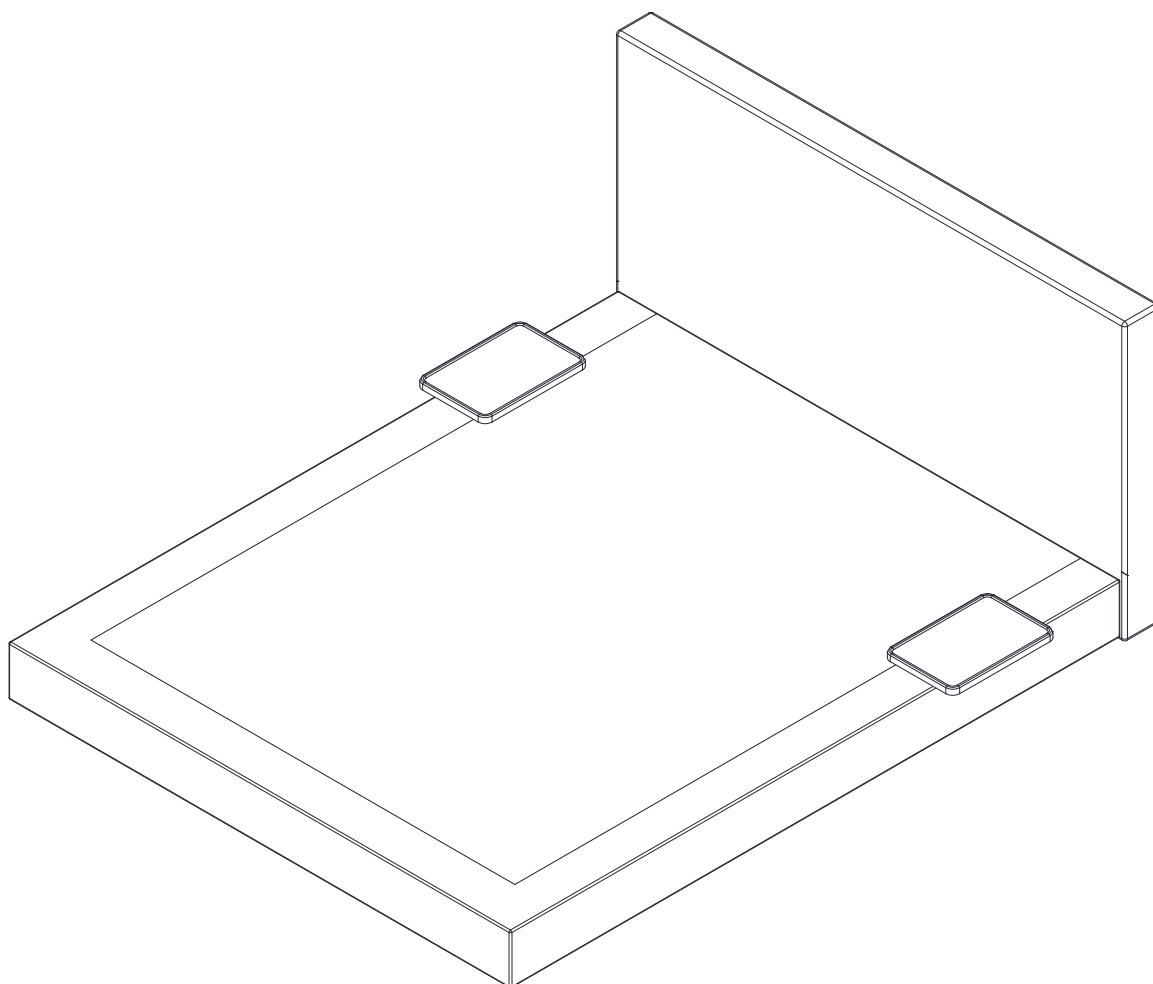

General Guidelines


- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.

Notes


- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.

Warnings


- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.
- Do not shake or move the product violently during use to avoid tipping over.

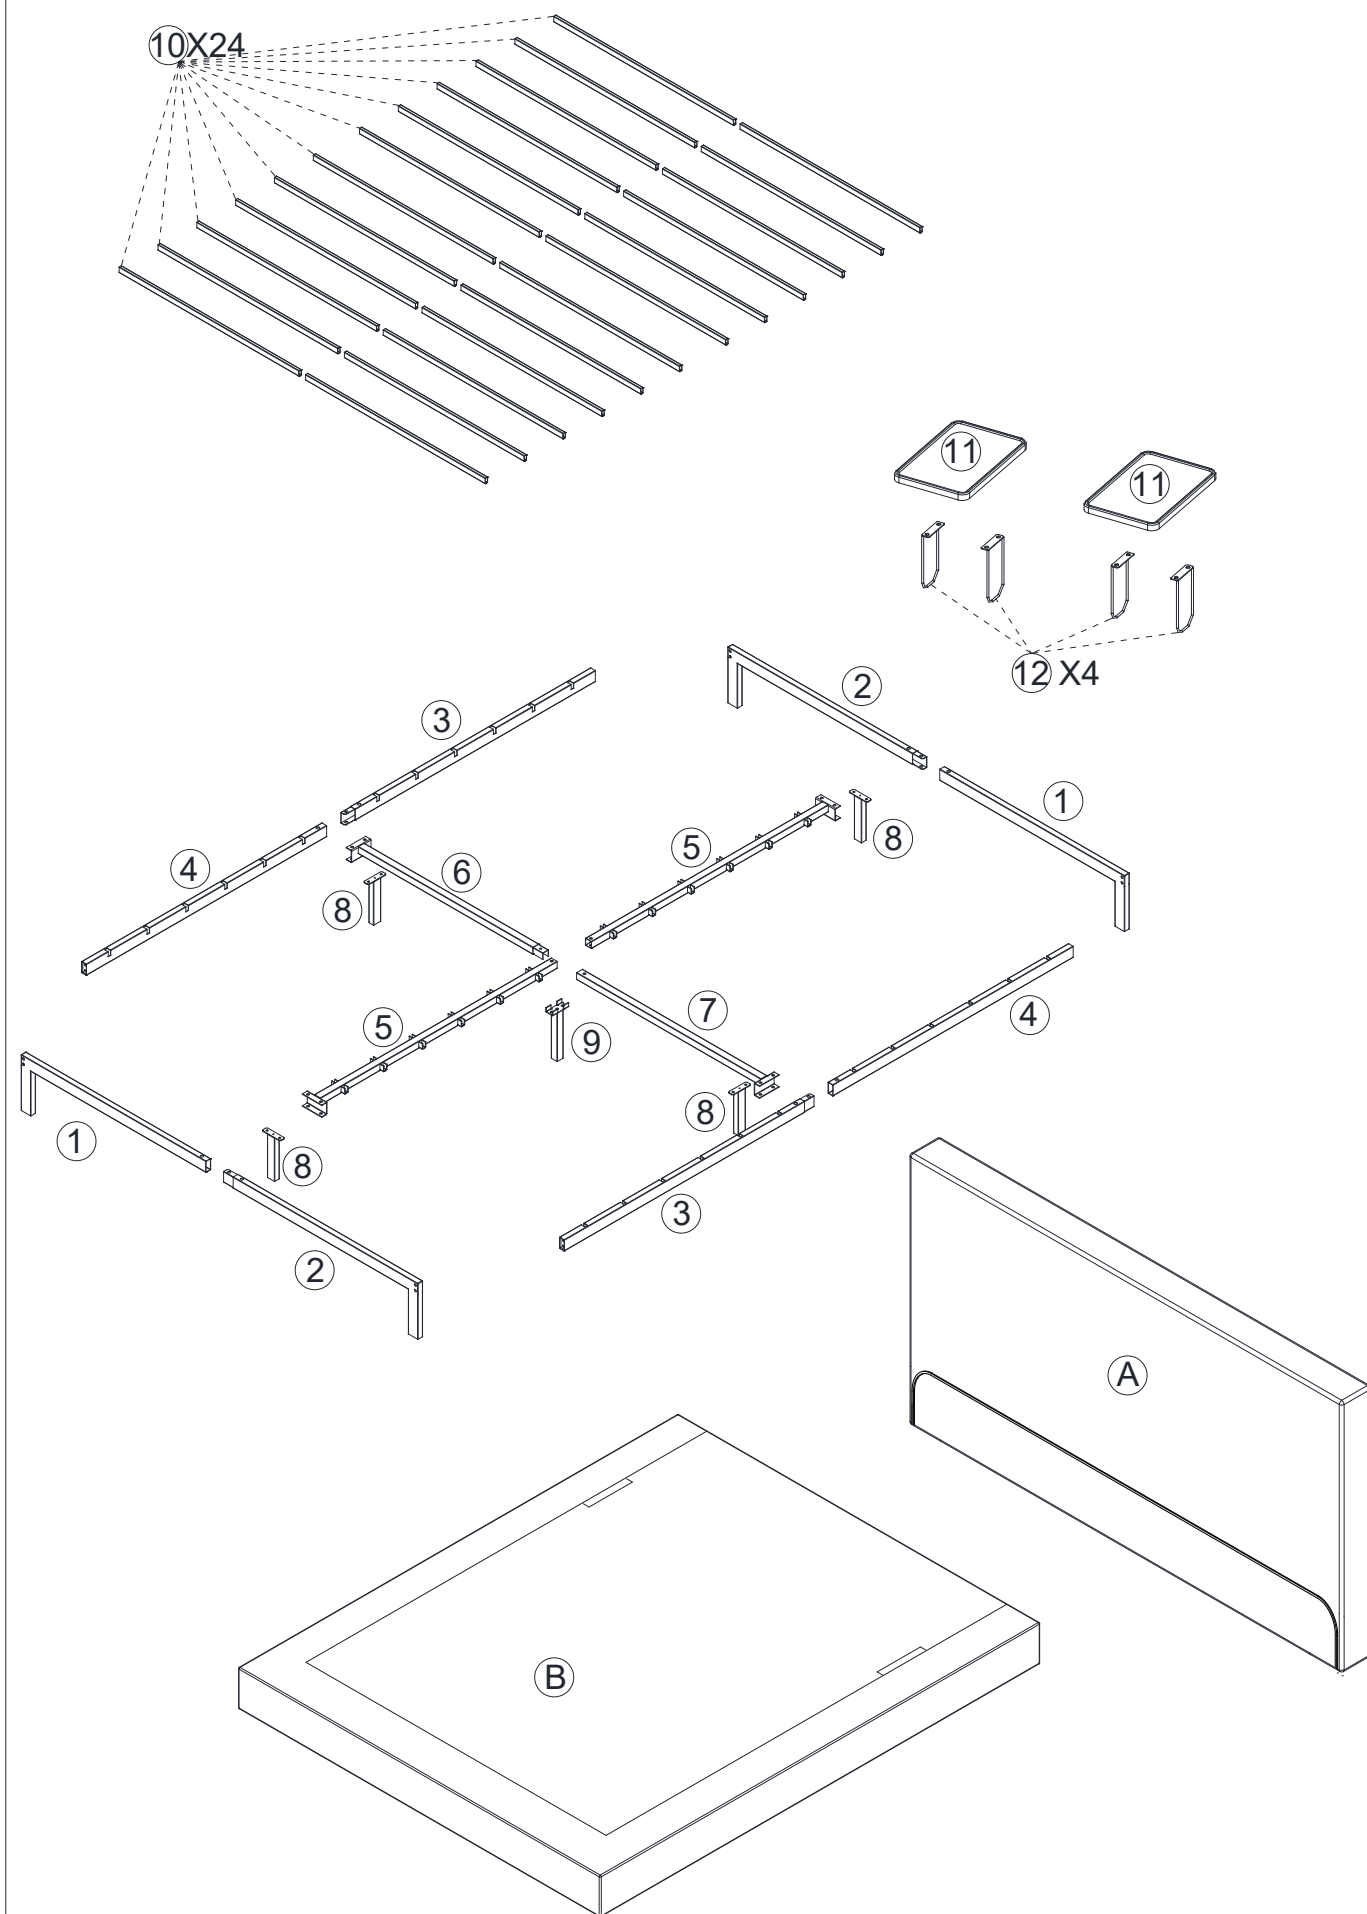


Part list

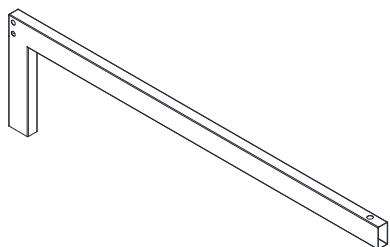


① X2

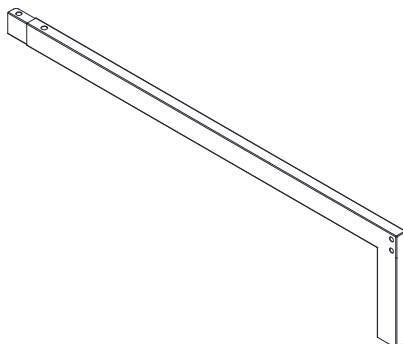


② X2

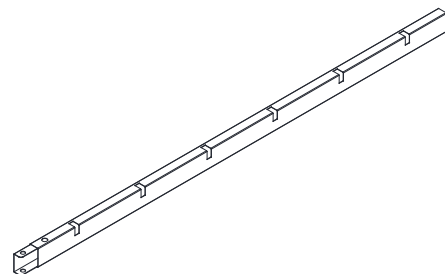


③ X2

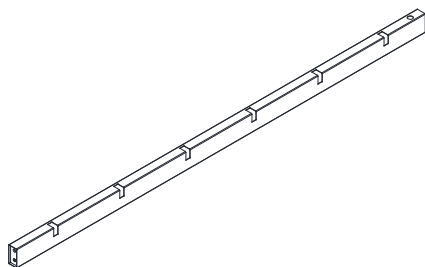


④ X2

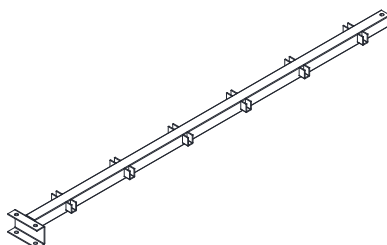


⑤ X2

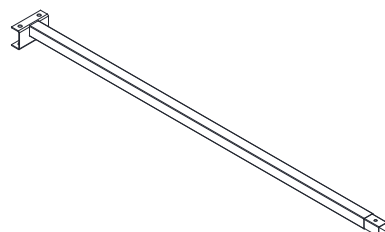


⑥ X1

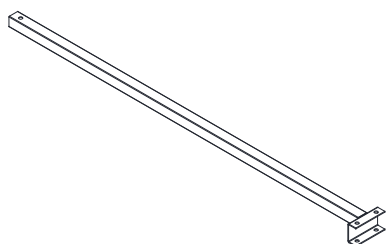


⑦ X1




⑧ X4




⑨ X1

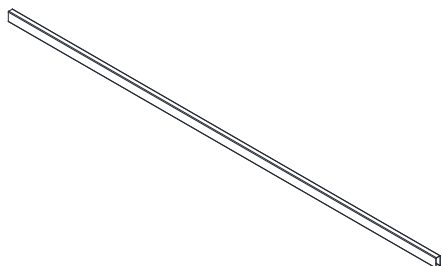

⑩ X24

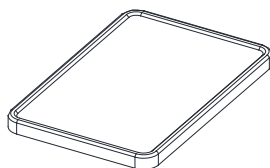


⑪ X2




⑫ X4

Hardware list


Open the vacuum compression bag to remove component A, component B and component I.

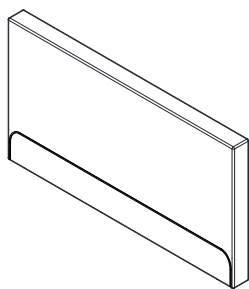

A X1

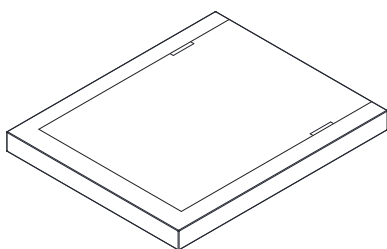


B X1



hook and loop fasteners


I X3

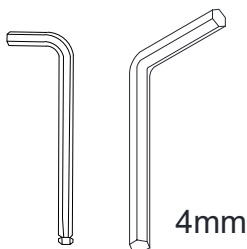

C X1




D X11+1

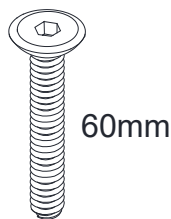


E X8+1



F X8+1

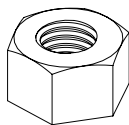


G X8+1

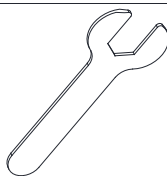


H X1

Matters needing attention


Open the vacuum compression bag to remove component A, component B and component I.

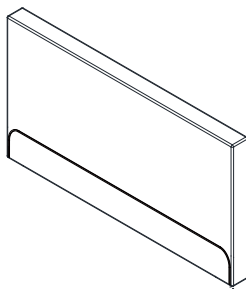

Ⓐ X1

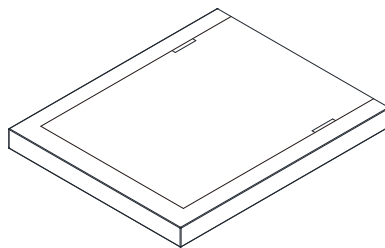

Ⓑ X1



hook and loop fasteners

Ⓘ X1



Methods to prevent scratching sofa upholstery while unpacking:

1. Hold the blade gently.
2. Keep cutting depth shallow.
3. Prevent damage to soft upholstery.

The vacuum-compressed upholstery may deform slightly after unpacking. It will recover its original shape after natural expansion for a period of time.

Quick Resilience Method for Soft Pack Sponge: Patting & Kneading

1. Hold both sides of the soft pack, repeatedly fold, squeeze and release. Knead the whole inner core thoroughly from all directions.

2. Use fists to pat the front, back, four corners and sunken areas continuously for 3 – 5 minutes.

Effect: Force air into pores of sponge/fiber cotton to eliminate vacuum compression.


3. Flip the soft pack and continue patting. Repeat one cycle every 20 minutes. After roughly 3 cycles, leave it to stand overnight.

Important Reminder:

Do not pat vigorously non-stop. Long-time continuous heavy patting may shift the filling layer and damage the sponge surface. Intermittent resting is vital to let the filler absorb air and expand.

1

Note the front and back sides of tube 5,
with the grooves facing up.

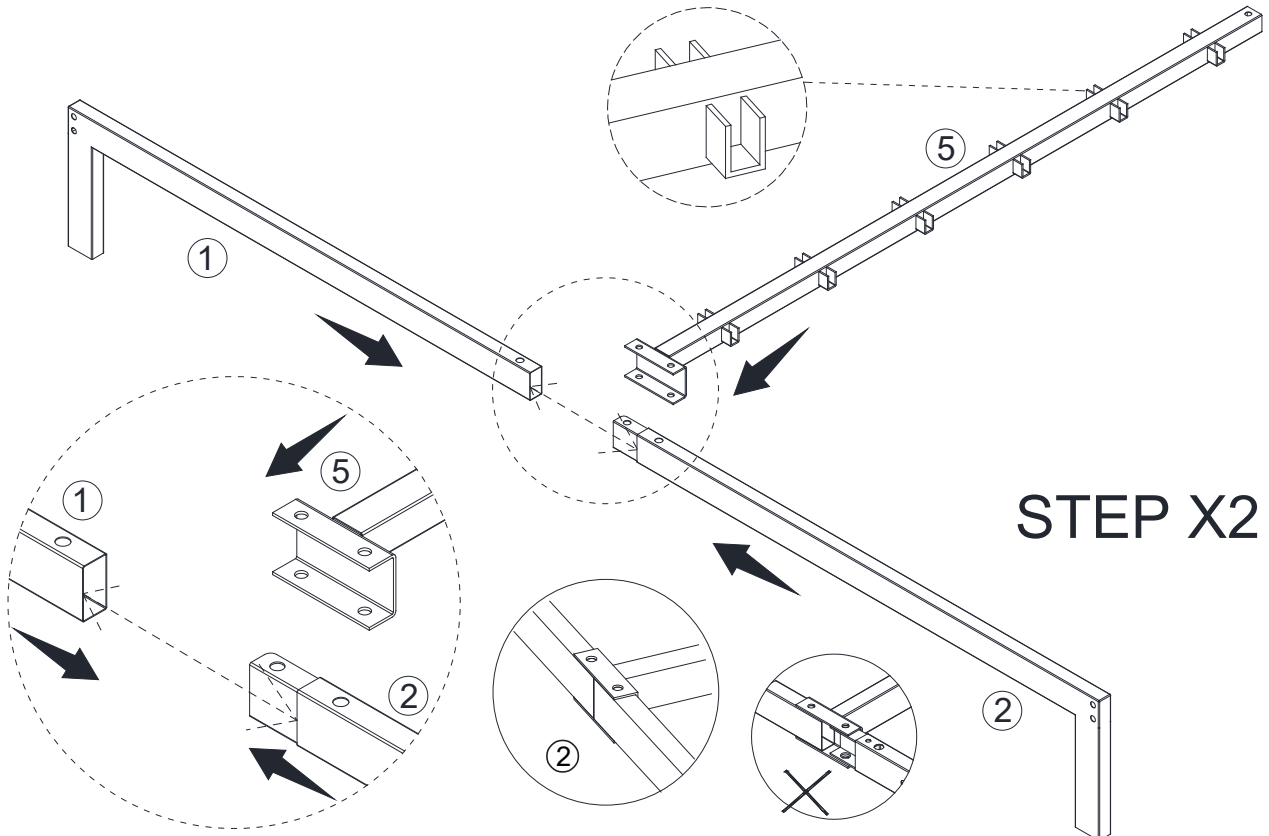

STEP X2




Ensure that parts 1 and 2 are inserted into each
other, and then clip them into fasteners 5


Installation shown:
Incorrect Practice

2

Note the front and back sides of tube 5,
with the grooves facing up.

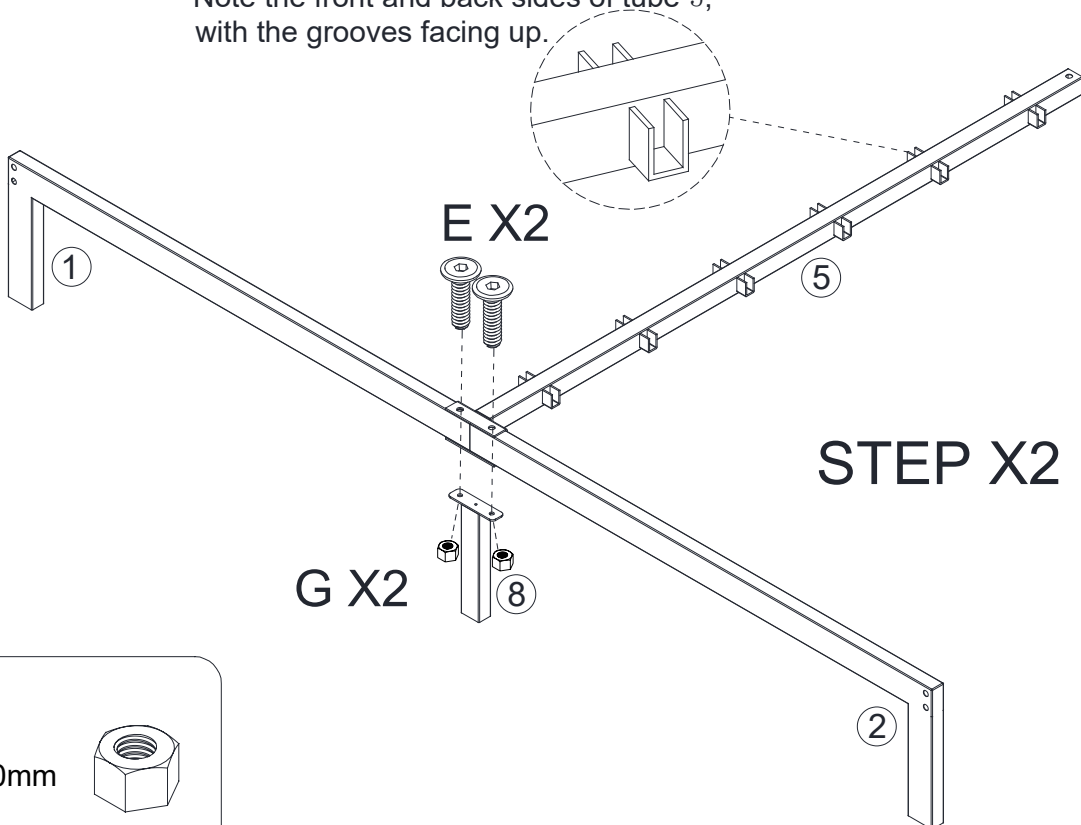


STEP X2

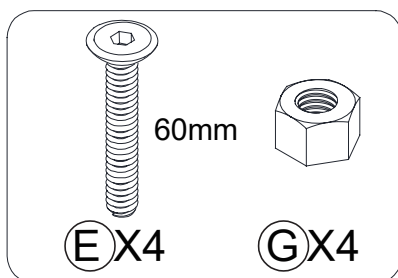


3

⚠ Ensure that parts 3 and 4 are inserted into each other, and then clip them into fasteners 6 and 7

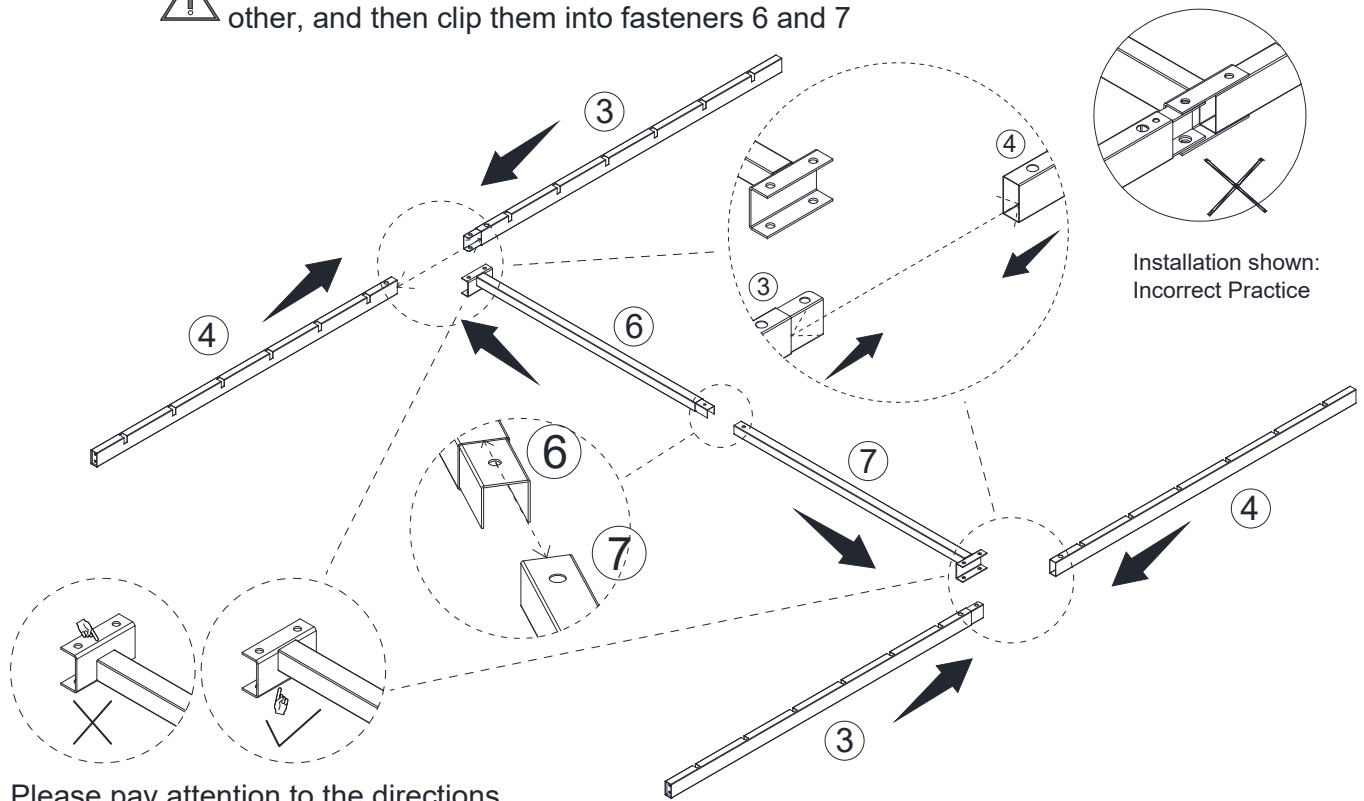


Please pay attention to the directions at both ends of 6# and 7#.

4

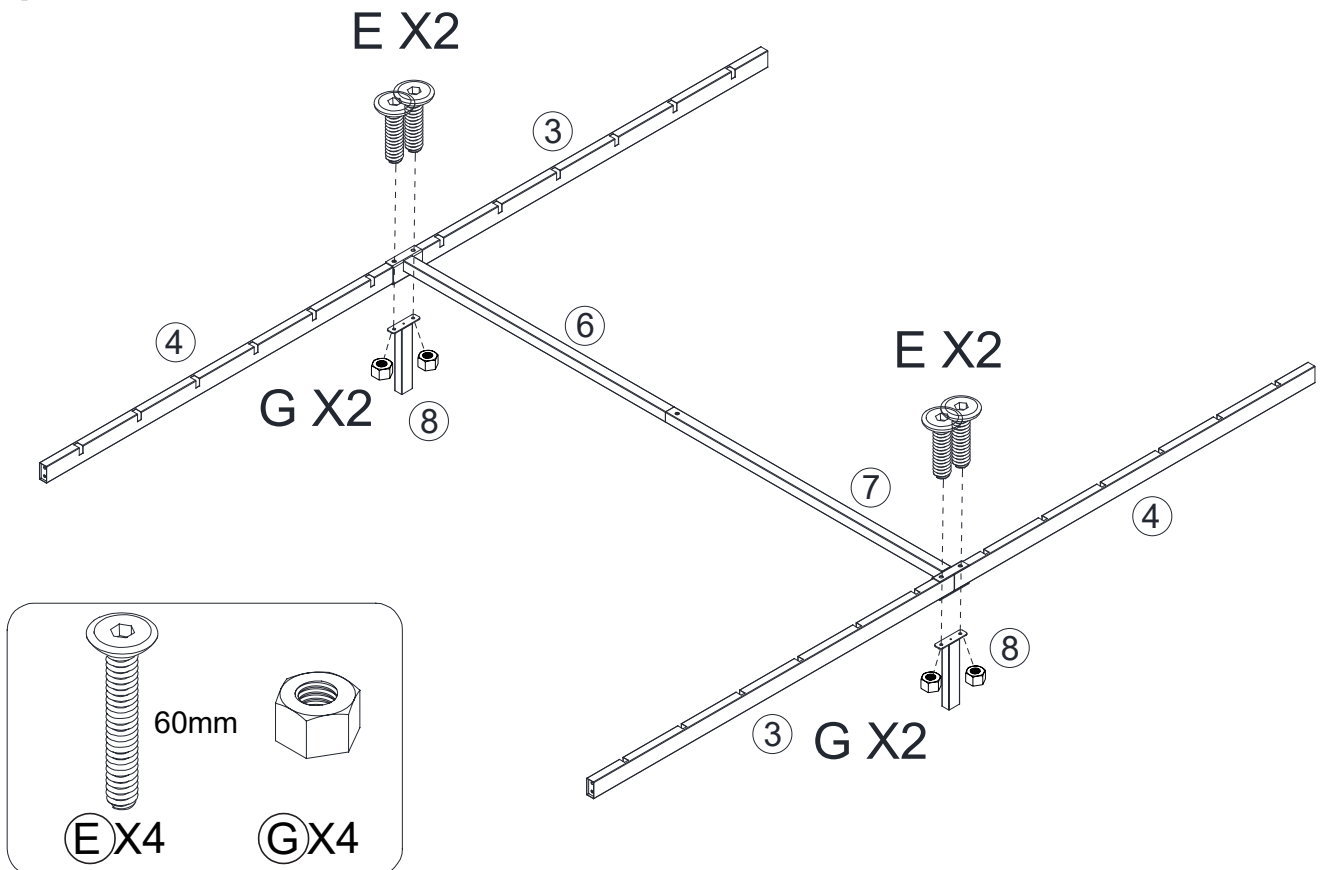


5



D X3

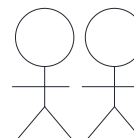

Caution: Install with two people – hold and assemble together.

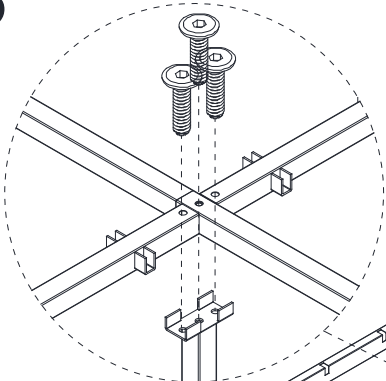

D X3

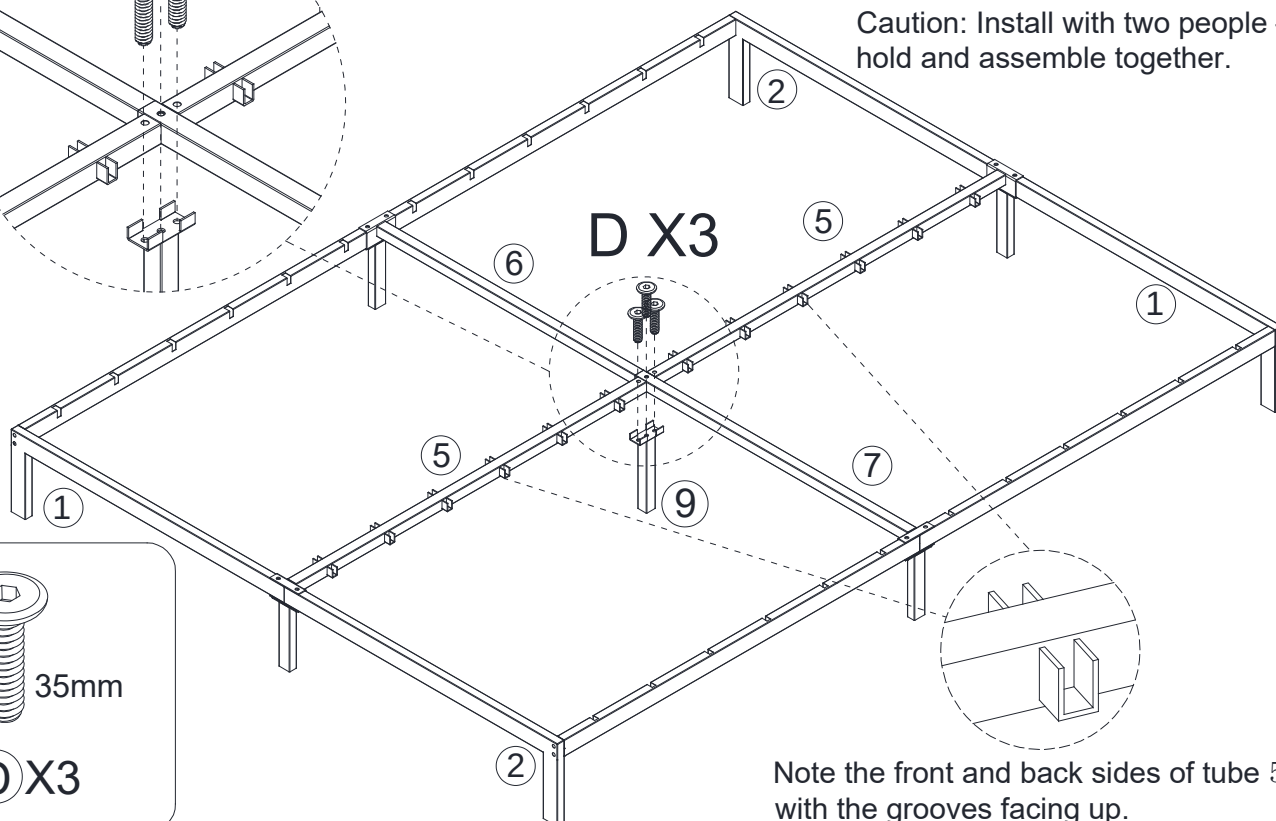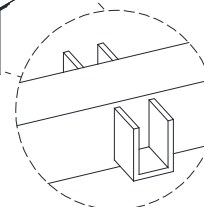

Note the front and back sides of tube 5, with the grooves facing up.




35mm


D X3

6

D X2

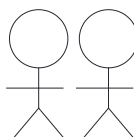

Caution: Install with two people – hold and assemble together.

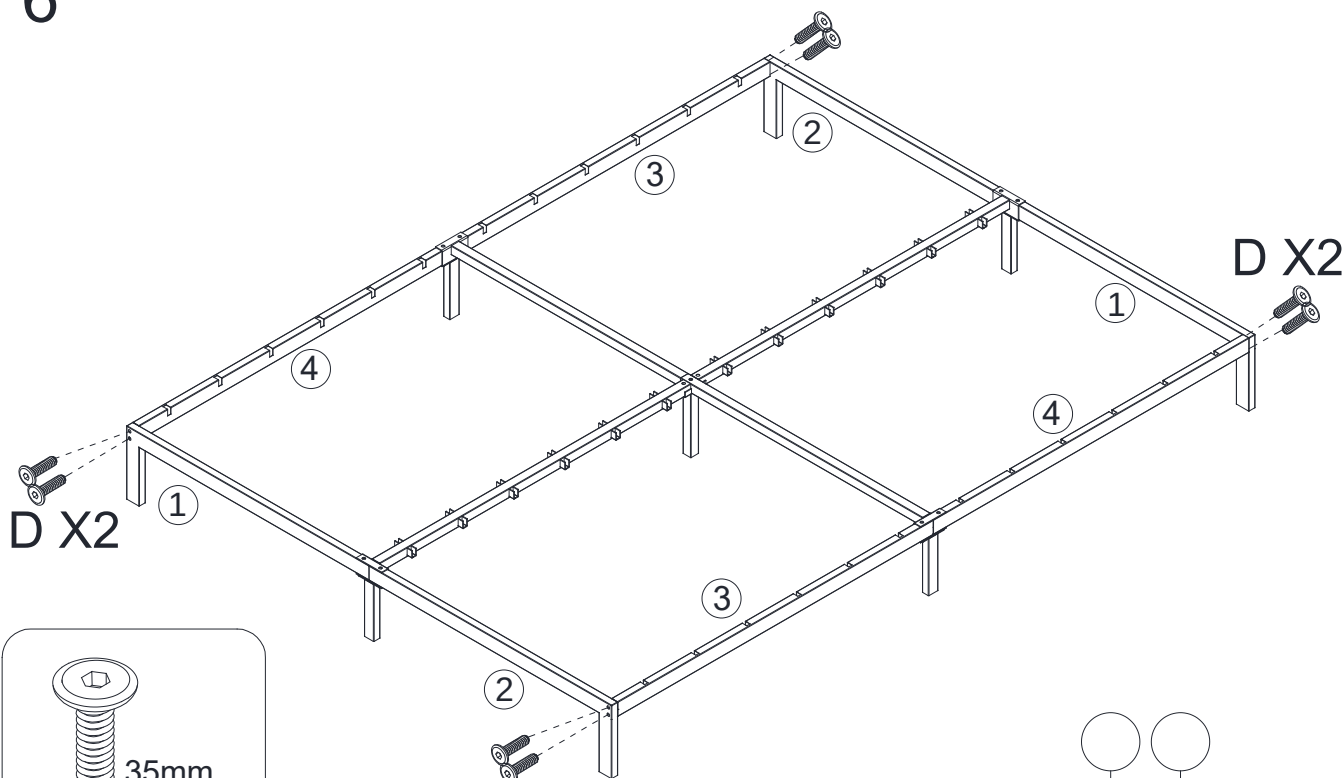

D X2

D X2


D X2



35mm


D X8

7

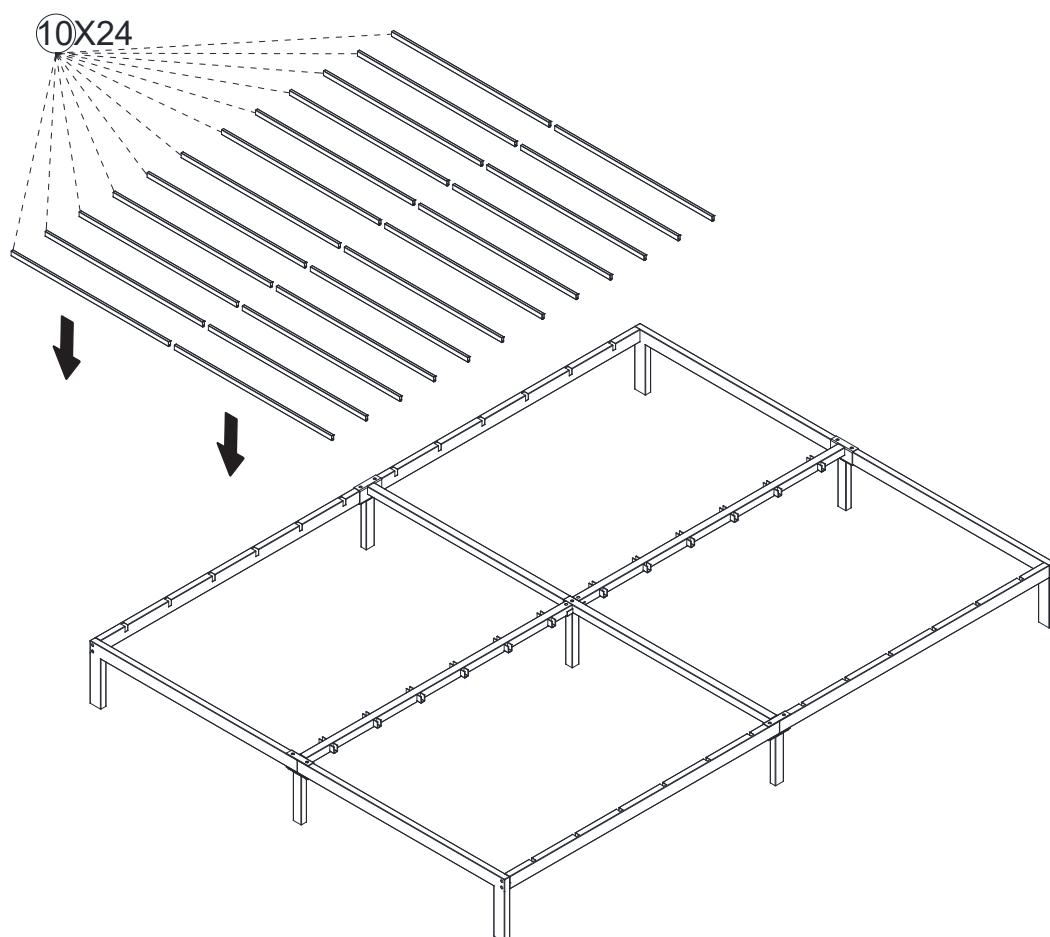


8

Unfold Part B, then install to the bed frame

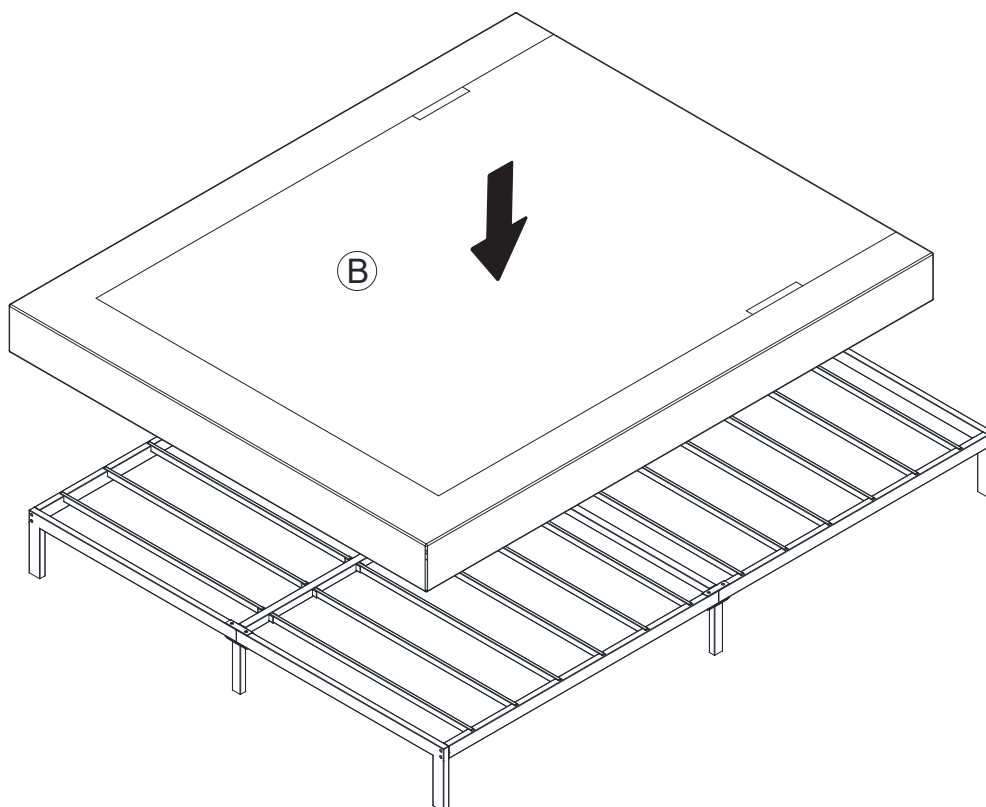


9

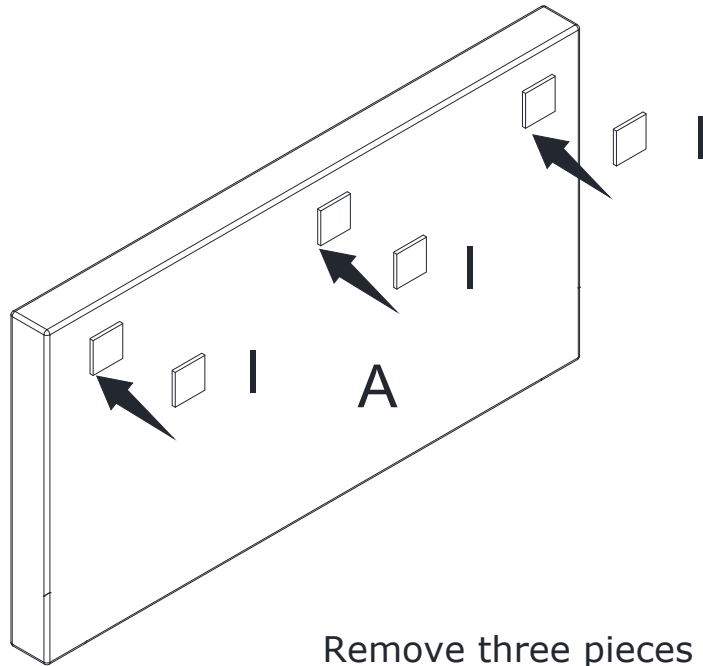

Remove three pieces of Velcro stickers and attach the Velcro to the back of the bedside.



10

Locate a suitable position to install the headboard. When installing the headboard, peel off the three stickers on the top of its back and stick them onto the wall. (Note: Ensure the wall surface is clean and tidy to prevent poor adhesion.)

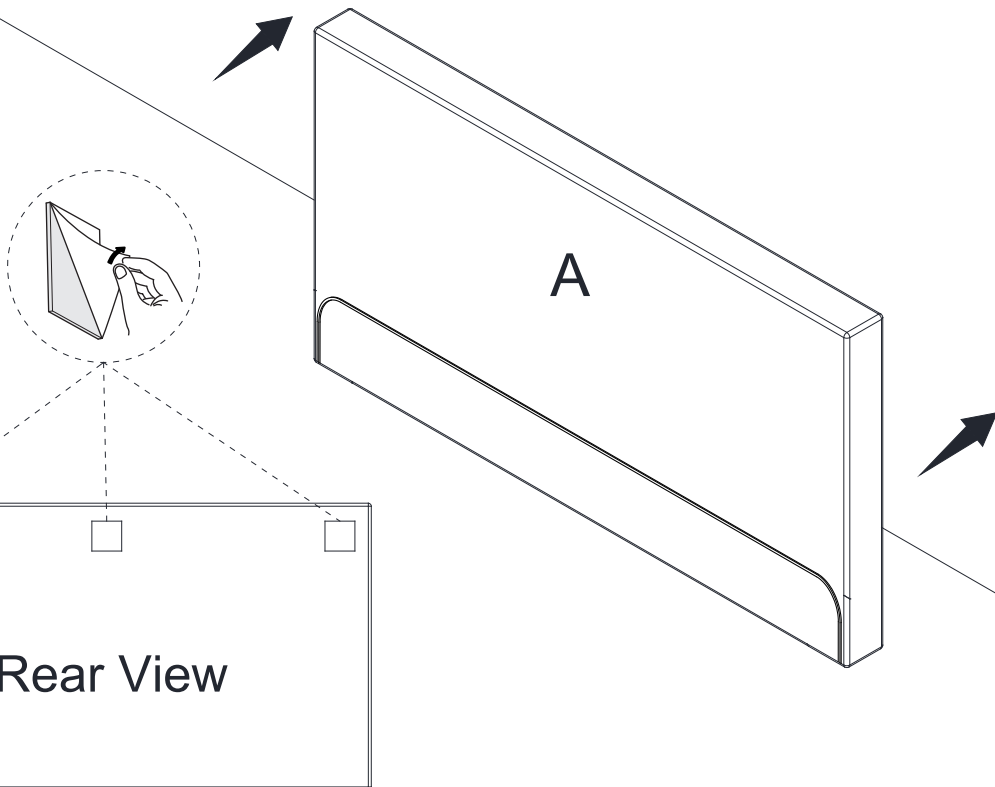


11 Please pull the zipper in the direction indicated by the arrow.

WARNING: Fabric conceals bed frame gaps. Risk of injury from stepping into voids. Do not step on bed frame before installing mattress.

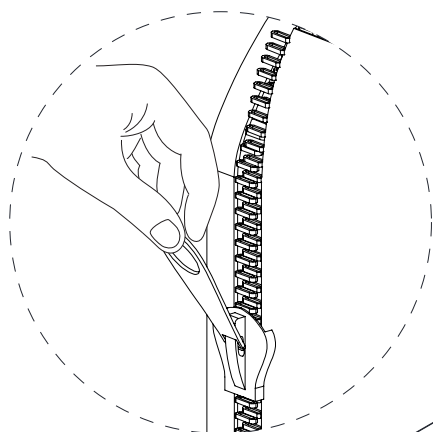
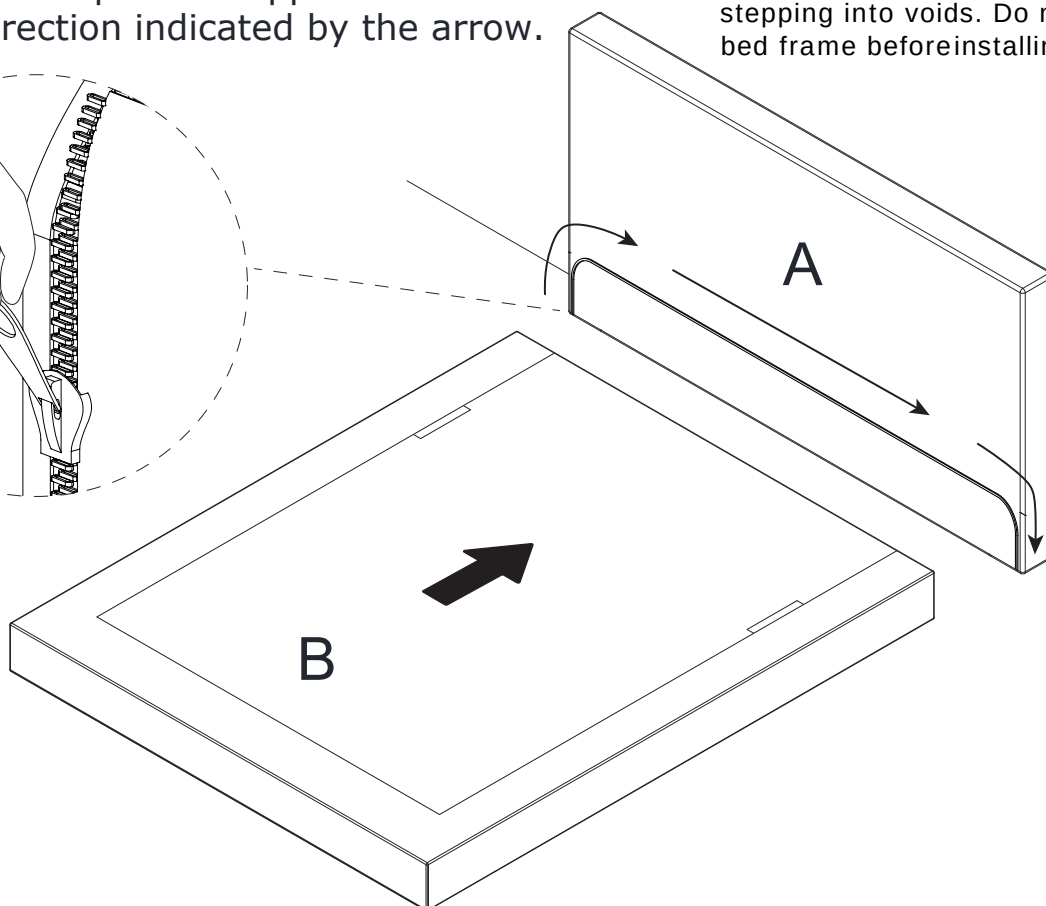


12

Note that the assembled Part 11 is only inserted into Component B and shall not be connected to the bed frame. (Note: After installation, the wooden boards on both sides shall face the outer side of the bed frame instead of the inner side, as shown in the figure.)

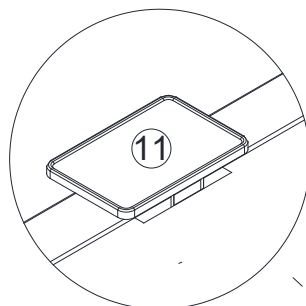

Caution: Install Part 12 – metal wires face outward (both sides), leave middle space for Component B connection.

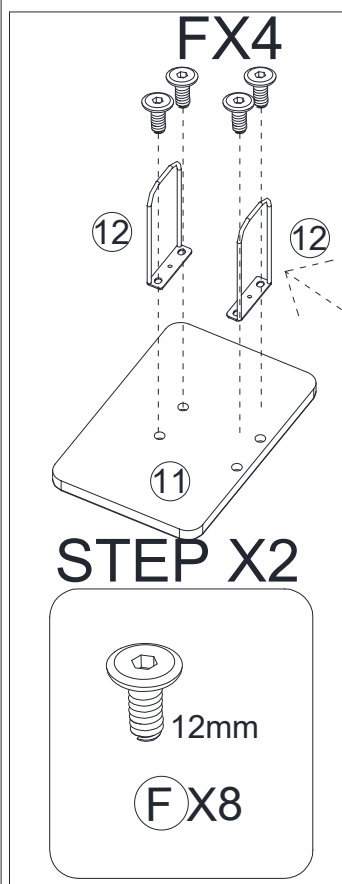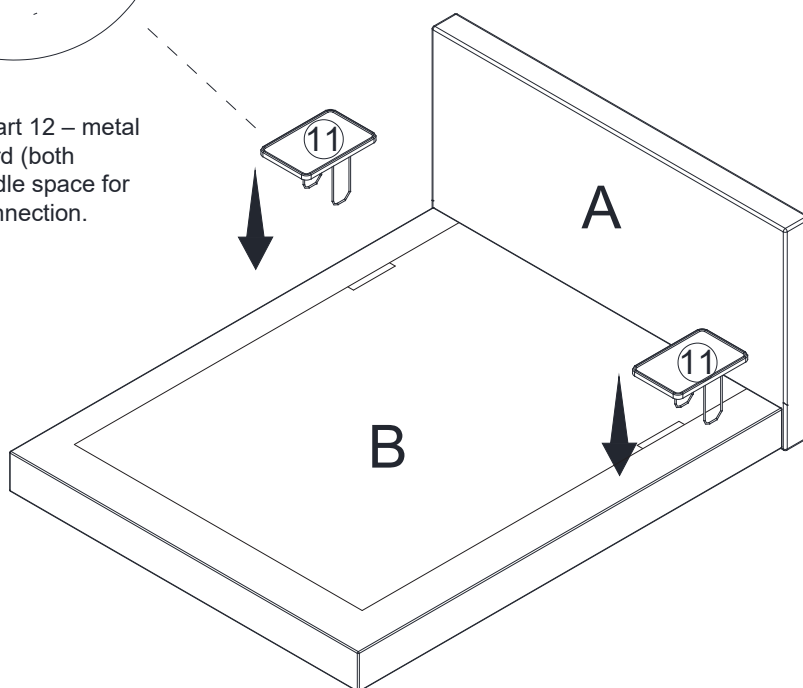

13



WARNING: Fabric conceals bed frame gaps. Risk of injury from stepping into voids. Do not step on bed frame before installing mattress.

Complete Assembly

