







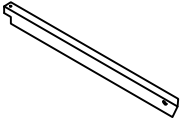


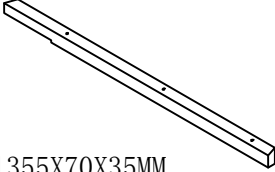
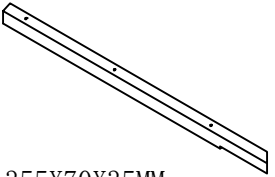
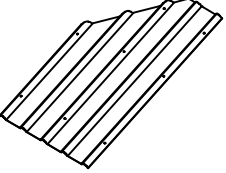
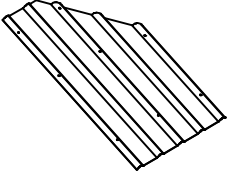
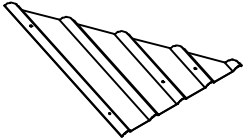
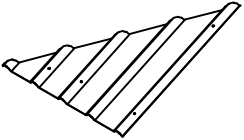


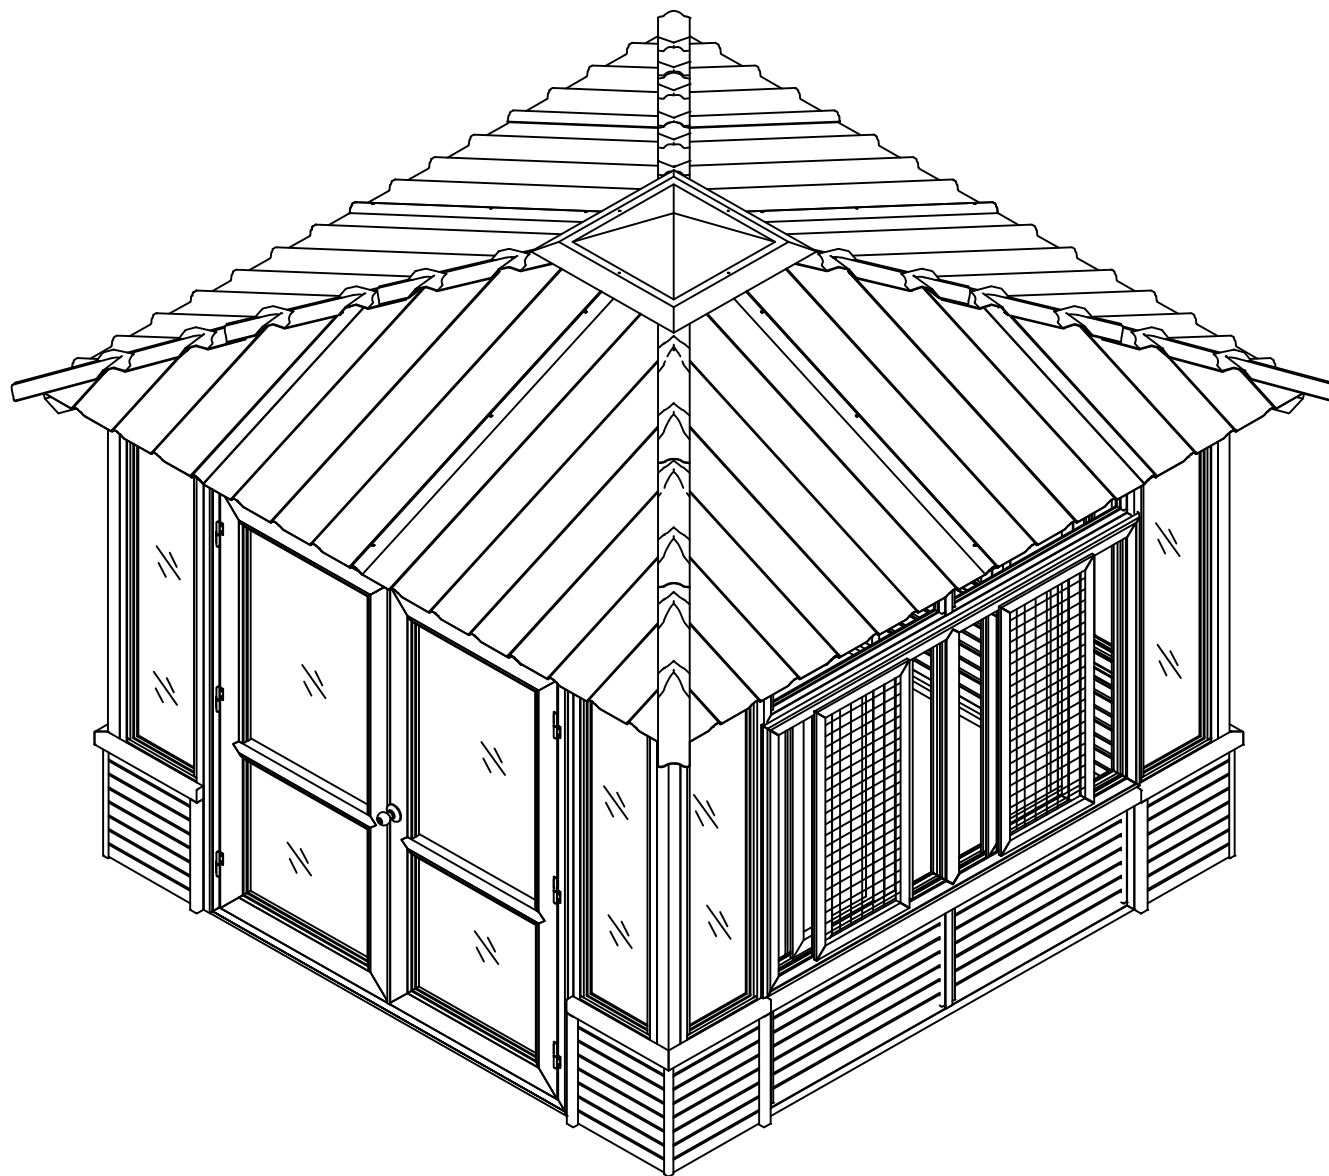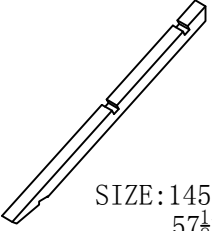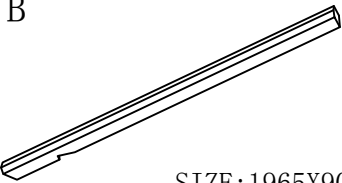
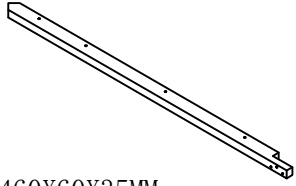










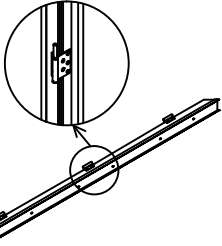


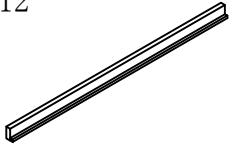





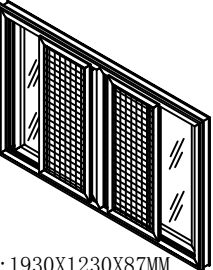
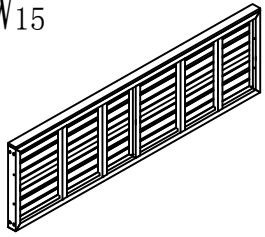


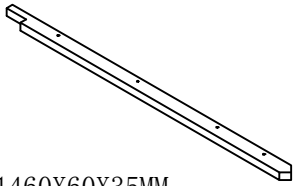





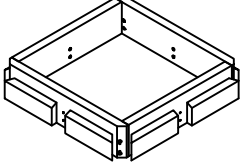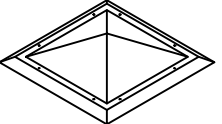

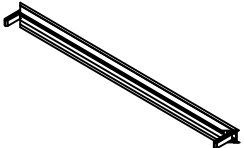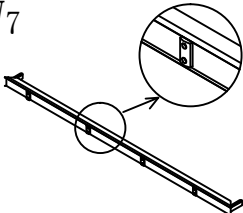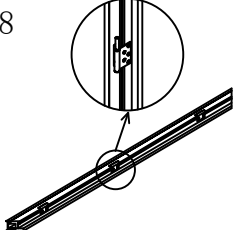




ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

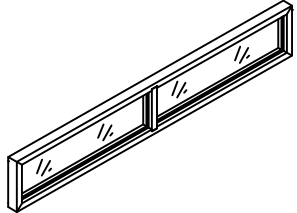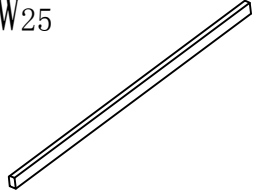

ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


<p>A</p>  <p>SIZE: 1450X80X70MM 57¹/₈" X 3" X 2³/₄" X4</p>	<p>B</p>  <p>SIZE: 1965X90X70MM 77³/₈" X 3¹/₂" X 2³/₄" X4</p>	<p>C1</p>  <p>SIZE: 1460X60X35MM 58¹/₂" X 2³/₈" X 1³/₈" X4</p>	<p>C2</p>  <p>SIZE: 1460X60X35MM 58¹/₂" X 2³/₈" X 1³/₈" X4</p>
<p>D</p>  <p>SIZE: 590X90X35MM 23¹/₄" X 3¹/₂" X 1³/₈" X4</p>	<p>D1</p>  <p>SIZE: 180X90X35MM 7¹/₈" X 3¹/₂" X 1³/₈" X4</p>	<p>E</p>  <p>SIZE: 886X60X35MM 35⁷/₈" X 2³/₈" X 1³/₈" X4</p>	<p>F</p>  <p>SIZE: 886X60X35MM 35⁷/₈" X 2³/₈" X 1³/₈" X4</p>
<p>G</p>  <p>SIZE: 400X60X35MM 16³/₄" X 2³/₈" X 1³/₈" X4</p>	<p>H</p>  <p>SIZE: 400X60X35MM 16³/₄" X 2³/₈" X 1³/₈" X4</p>	<p>I</p>  <p>SIZE: 1355X70X35MM 53³/₈" X 2³/₄" X 1³/₈" X4</p>	<p>J</p>  <p>SIZE: 1355X70X35MM 53³/₈" X 2³/₄" X 1³/₈" X4</p>
<p>K</p>  <p>SIZE: 1485X880X30MM 58⁷/₁₆" X 34⁵/₈" X 1³/₁₆" X4</p>	<p>L</p>  <p>SIZE: 1485X880X30MM 58⁷/₁₆" X 34⁵/₈" X 1³/₁₆" X4</p>	<p>M</p>  <p>SIZE: 945X864X30MM 37¹/₄" X 34" X 1³/₁₆" X4</p>	<p>N</p>  <p>SIZE: 945X864X30MM 37¹/₄" X 34" X 1³/₁₆" X4</p>
<p>O</p>  <p>SIZE: 720X115X50MM 28³/₈" X 4¹/₂" X 2" X8</p>	<p>P</p>  <p>SIZE: 835X115X50MM 33" X 4¹/₂" X 2" X4</p>	<p>Q</p>  <p>SIZE: 650X650X140MM 26⁵/₈" X 26⁵/₈" X 5¹/₂" X1</p>	<p>R</p>  <p>SIZE: 740X740X190MM 29¹/₄" X 29¹/₄" X 7¹/₂" X1</p>

ASSEMBLY INSTRUCTION FOR 10' X 10' ULTRAWOOD GAZEBO


<p>W1</p>  <p>SIZE: 525X95X2080MM 20³/₈" X 3³/₄" X 81¹/₈" X4</p>	<p>W6</p>  <p>SIZE: 1837X65X45MM 72³/₈" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W7</p>  <p>SIZE: 1837X65X45MM 72³/₈" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W8</p>  <p>SIZE: 1995X65X45MM 78⁹/₁₆" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>T1</p>  <p>X4</p>	<p>T2</p>  <p>X4</p>	<p>T3</p>  <p>X4</p>	<p>T11</p>  <p>X2</p>
<p>W9</p>  <p>SIZE: 1995X65X45MM 78⁹/₁₆" X 2⁹/₁₆" X 1³/₄" X1</p>	<p>W10</p>  <p>SIZE: 900X35X1932MM 35³/₈" X 1³/₈" X 76¹/₈" X1</p>	<p>W11</p>  <p>SIZE: 900X35X1932MM 35³/₈" X 1³/₈" X 76¹/₈" X1</p>	<p>W12</p>  <p>SIZE: 1900X59X90MM 74⁴/₅" X 2³/₈" X 3¹/₂" X1</p>	<p>T12</p>  <p>X1</p>	<p>T13</p>  <p>X2</p>	<p>T14</p>  <p>X1</p>	<p>T15</p>  <p>X4</p>
<p>W13</p>  <p>SIZE: 60X35X1990MM 2³/₈" X 1³/₈" X 78³/₈" X2</p>	<p>W14</p>  <p>SIZE: 1930X1230X87MM 76" X 48³/₈" X 3³/₈" X3</p>	<p>W15</p>  <p>SIZE: 1900X880X60MM 74⁴/₅" X 34³/₈" X 2³/₈" X3</p>	<p>U3</p>  <p>126-Ø5X55MM SIZE: ³/₁₆" X 2³/₁₆"</p>	<p>U4</p>  <p>194-Ø4X30MM SIZE: ³/₁₆" X 1³/₁₆"</p>	<p>U5</p>  <p>92-Ø4X55MM SIZE: ³/₁₆" X 2³/₁₆"</p>	<p>U6</p>  <p>8-Ø4X20MM SIZE: ³/₁₆" X 1¹³/₁₆"</p>	
<p>W18</p>  <p>SIZE: 1900X305X60MM 74⁴/₅" X 12" X 2³/₈" X3</p>	<p>W25</p>  <p>SIZE: 1900X60X35MM 74⁴/₅" X 2³/₈" X 1³/₈" X3</p>		<p>U7-1</p>  <p>4-Ø6X20MM SIZE: ³/₁₆" X ¹³/₁₆"</p>	<p>U8</p>  <p>Color:Black 12-Ø5X55MM SIZE: ³/₁₆" X 2³/₁₆"</p>	<p>U9</p>  <p>Color:Black 38-Ø4X30MM SIZE: ³/₁₆" X 1³/₁₆"</p>	<p>U10</p>  <p>48-Ø5X65MM SIZE: ³/₁₆" X 2³/₁₆"</p>	
			<p>V</p>  <p>SHIM X10</p>	<p>V1</p>  <p>PLASTIC SPACER PIECE X32</p>	<p>V2</p>  <p>X4</p>	<p>V3</p>  <p>X4</p>	<p>X</p>  <p>1-Ø5X30x70MM</p>

ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#1

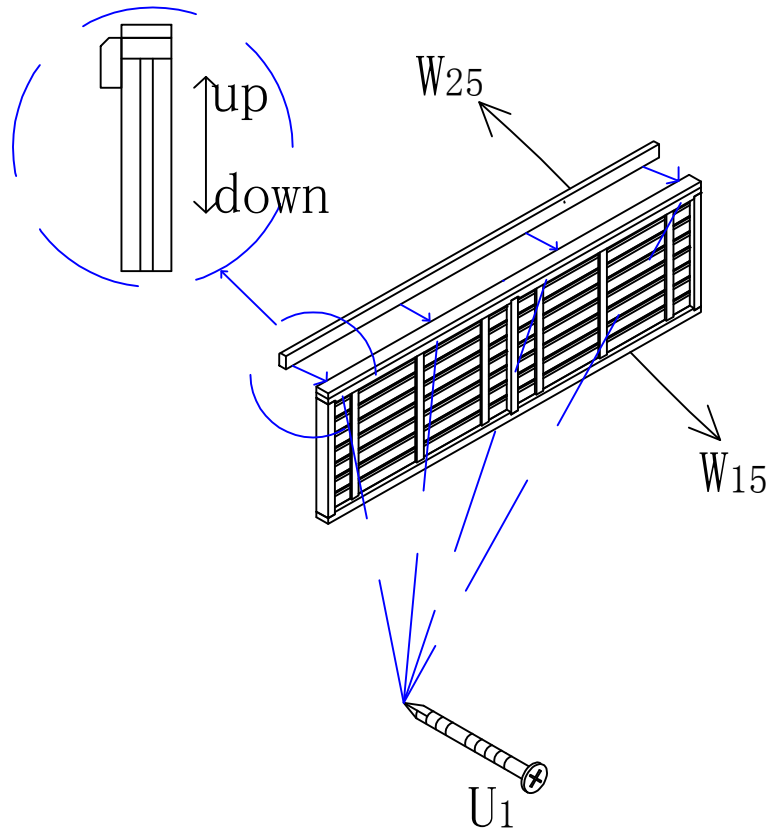


#2

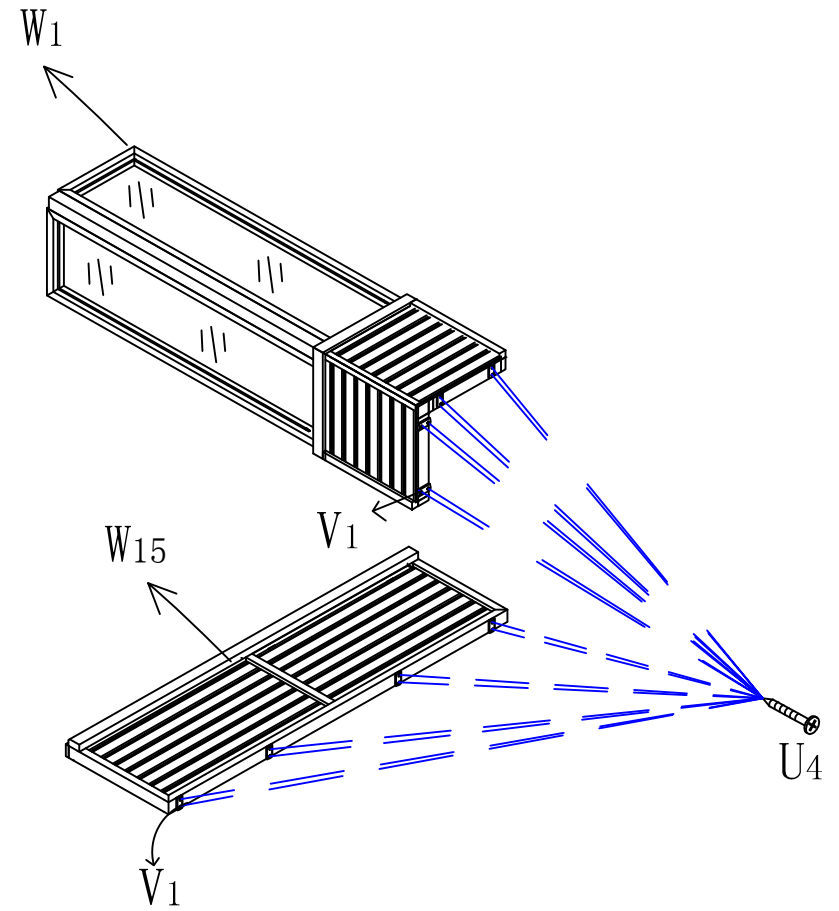


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#3

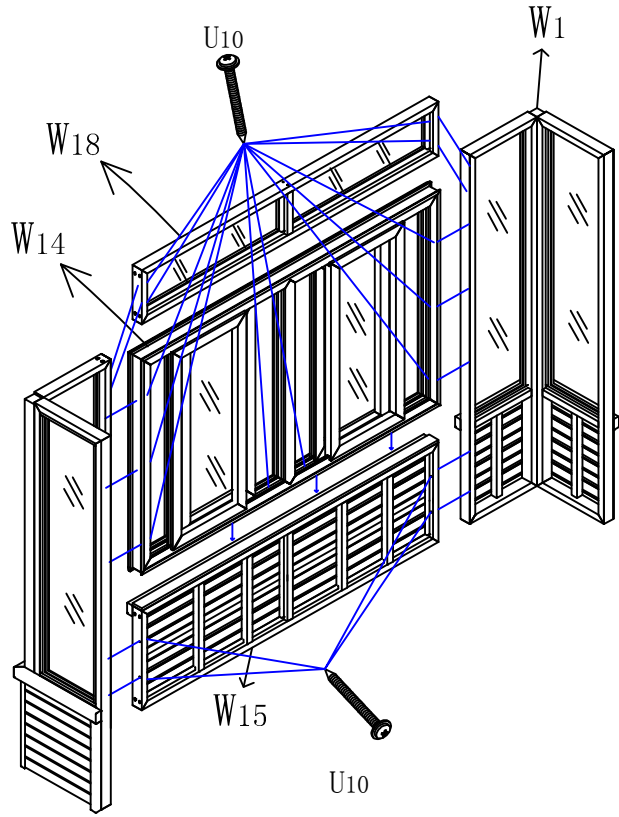


#4

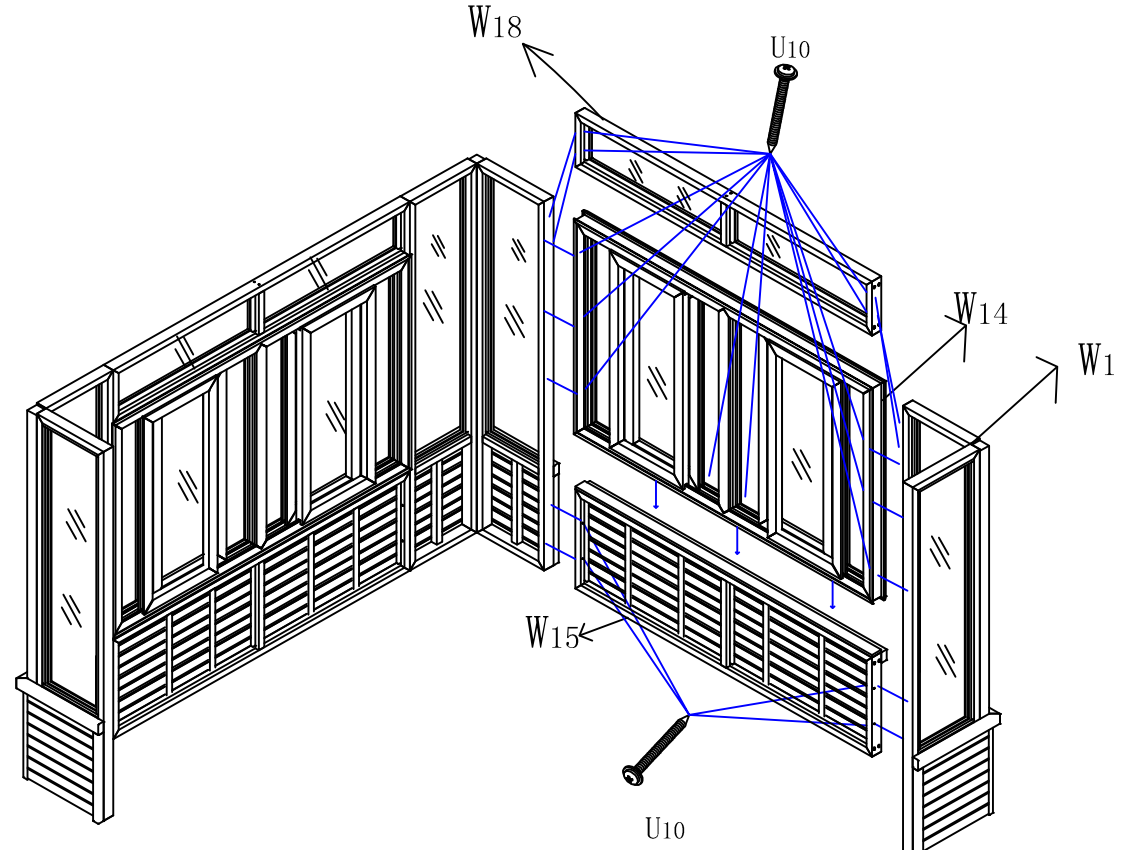


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#5

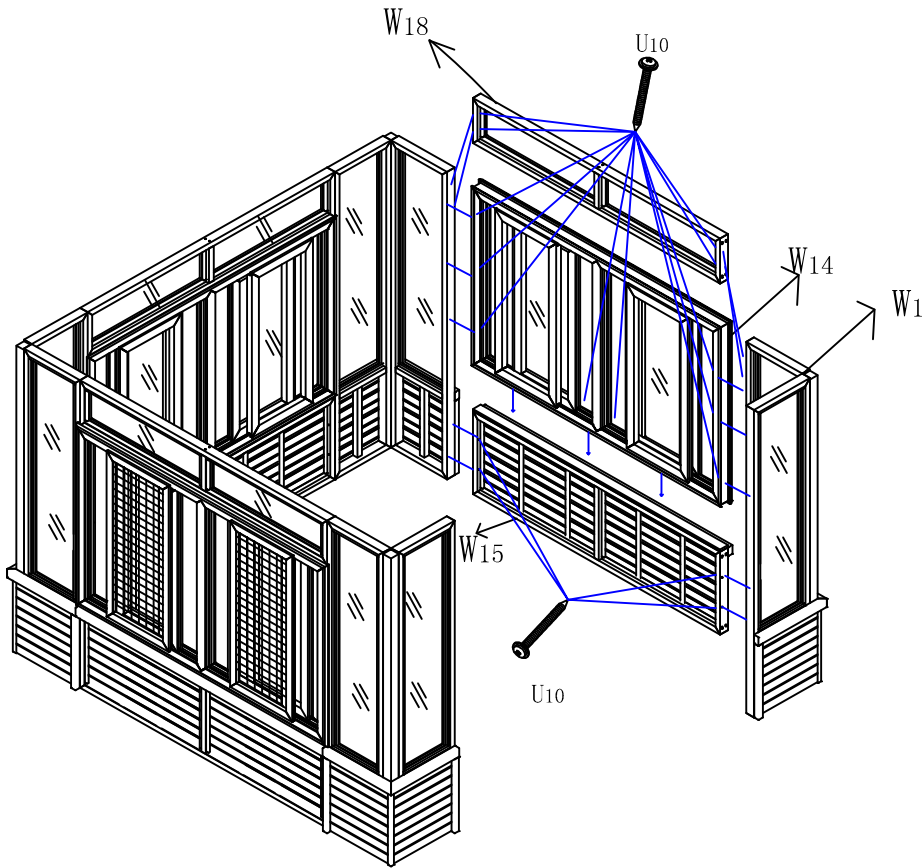


#6

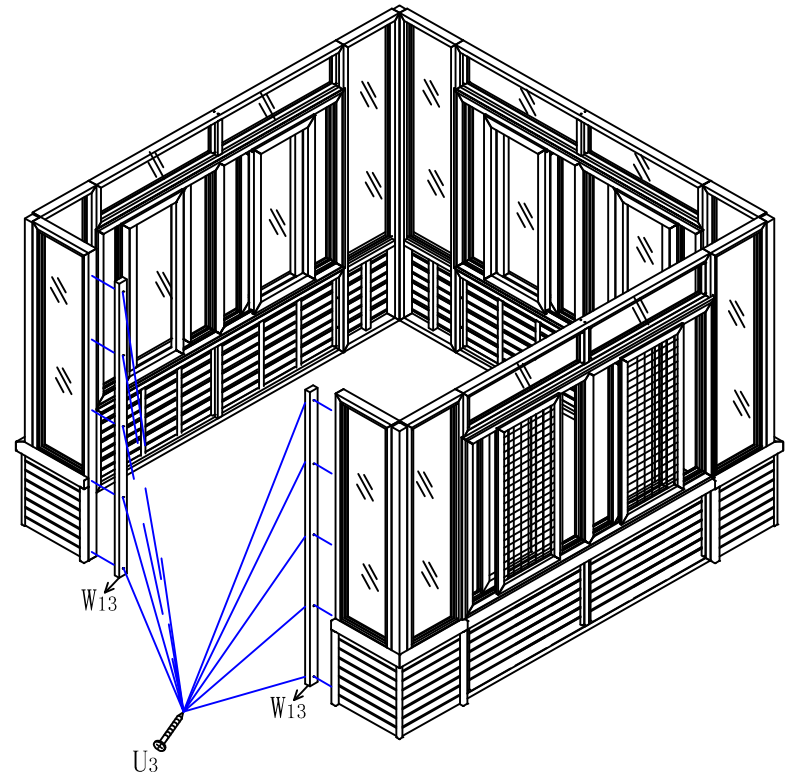


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#7

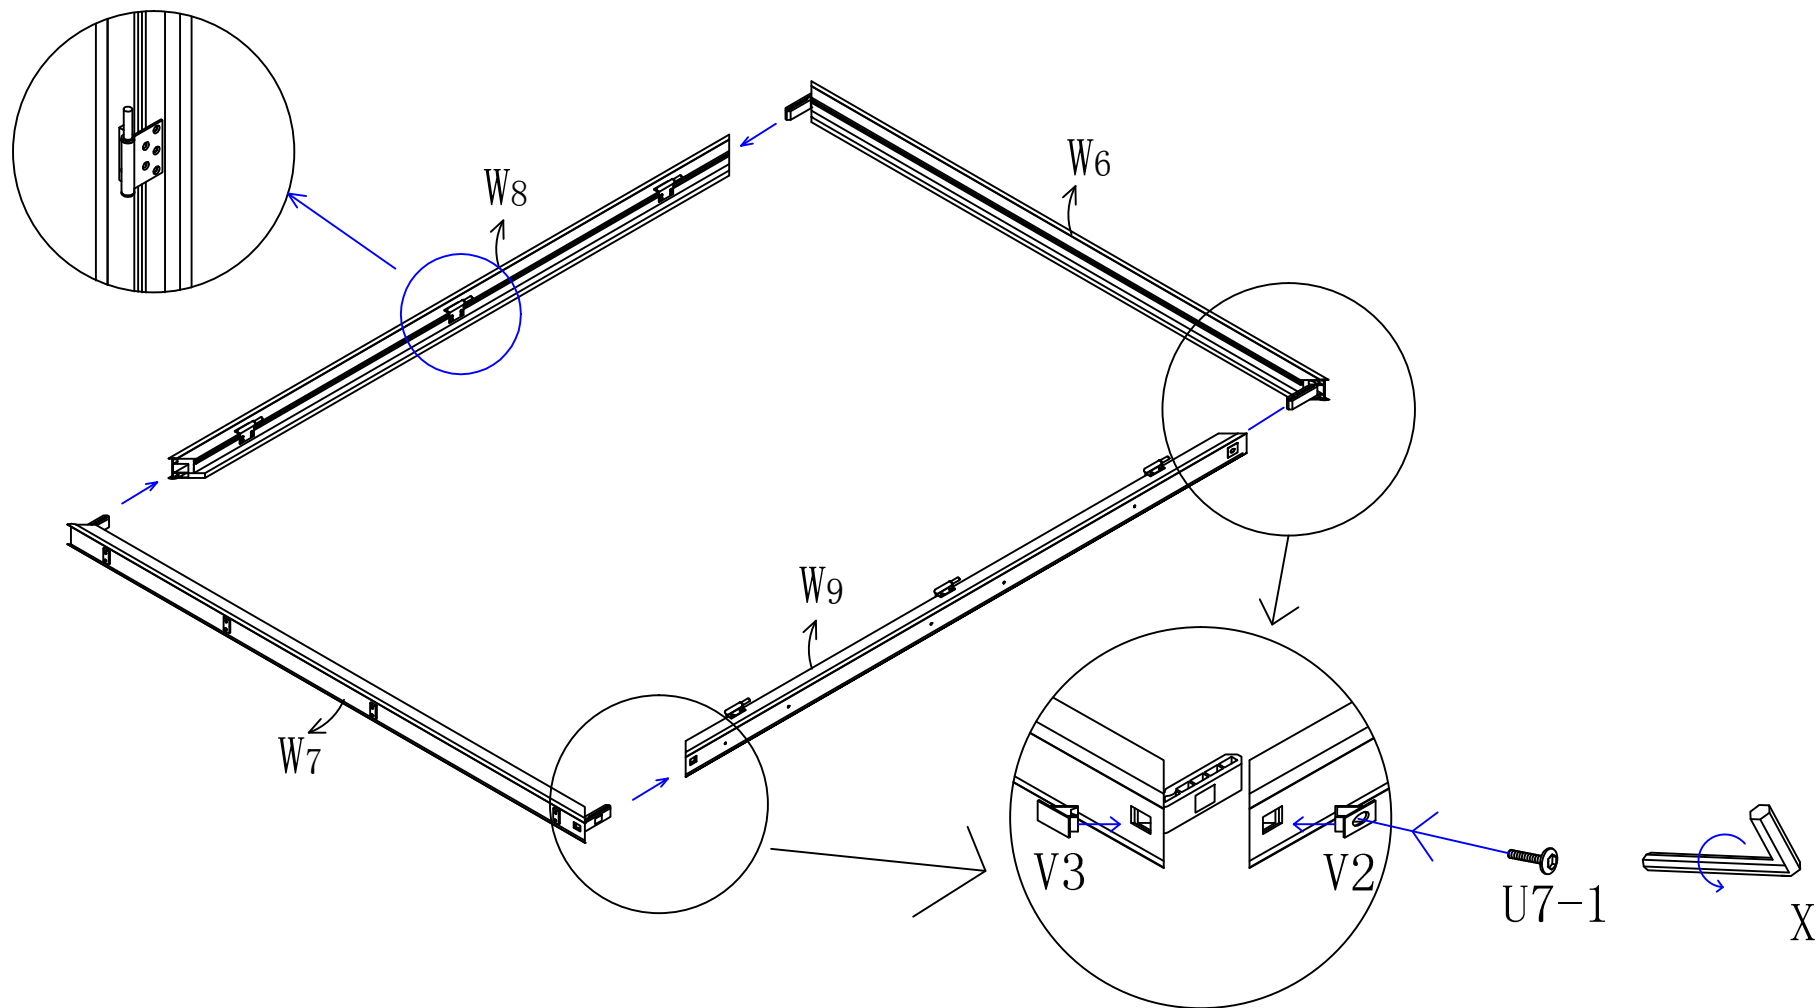


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#8

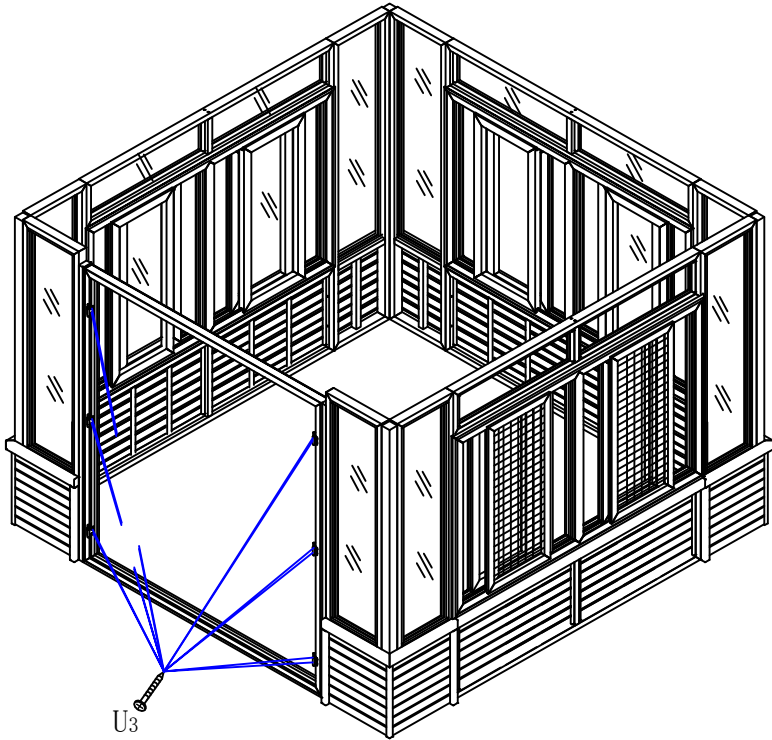


#9

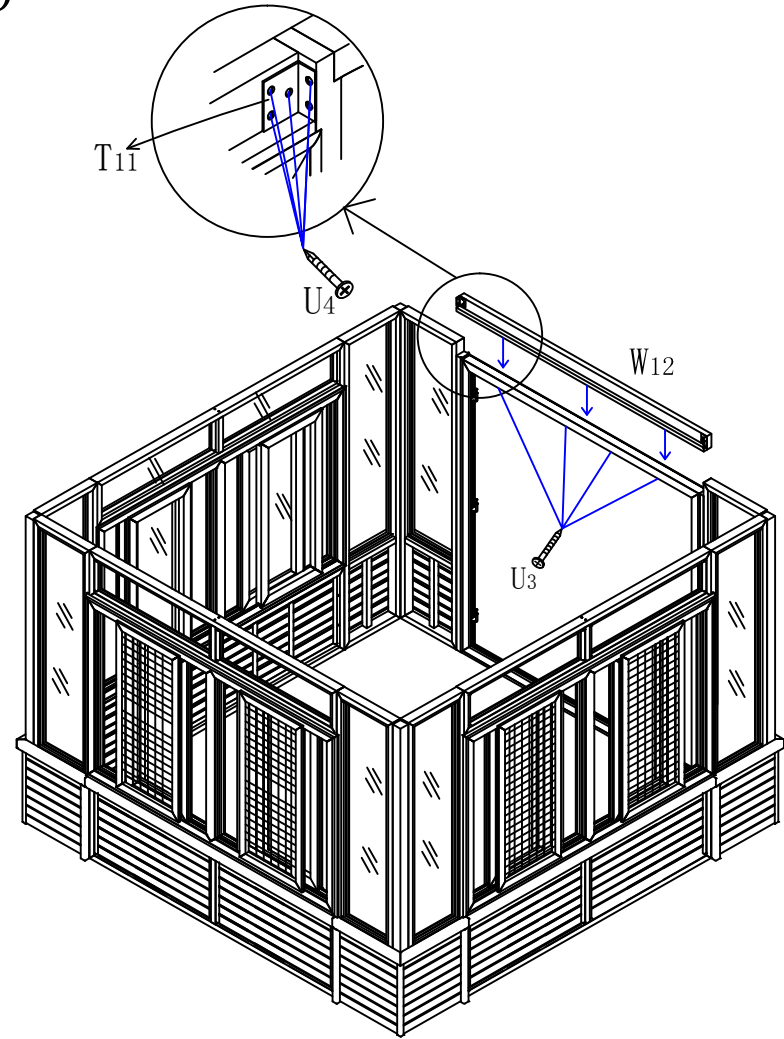


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#10

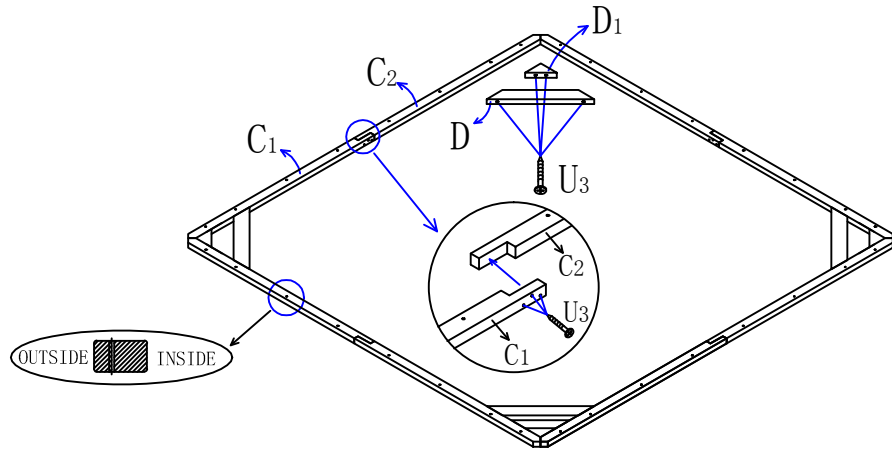


#11

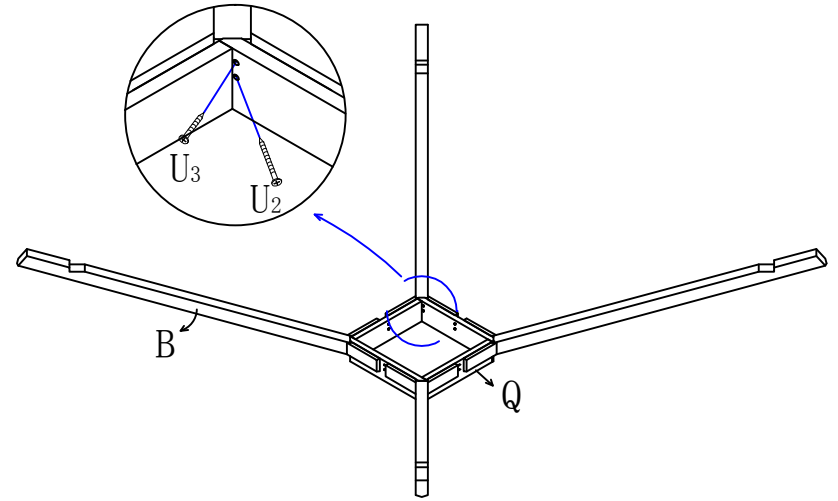

#12

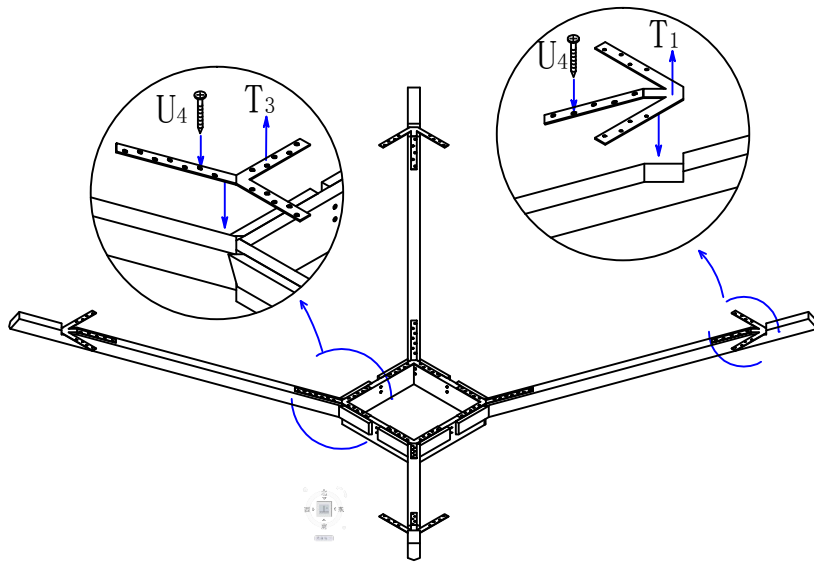


#13

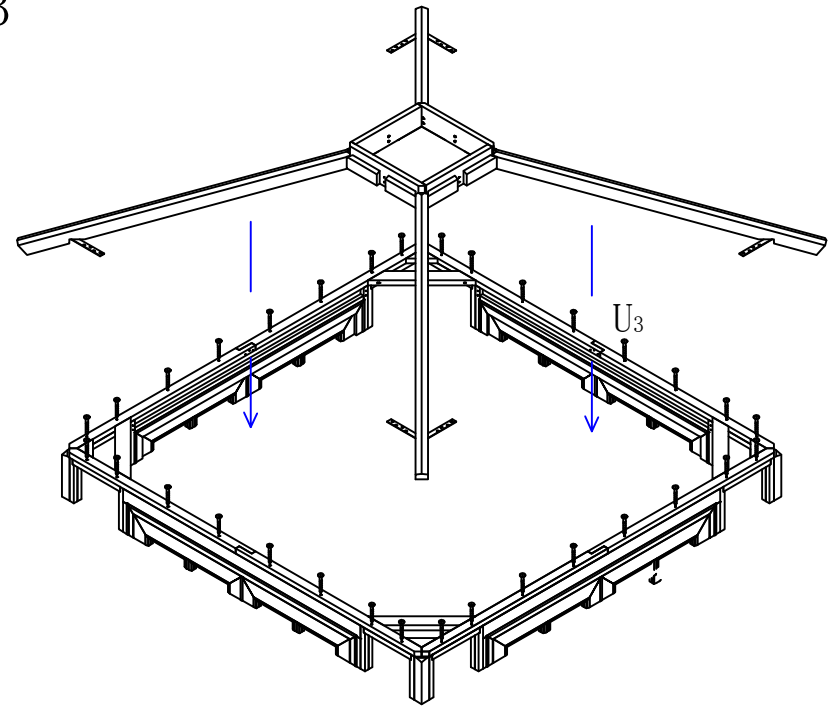


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#14

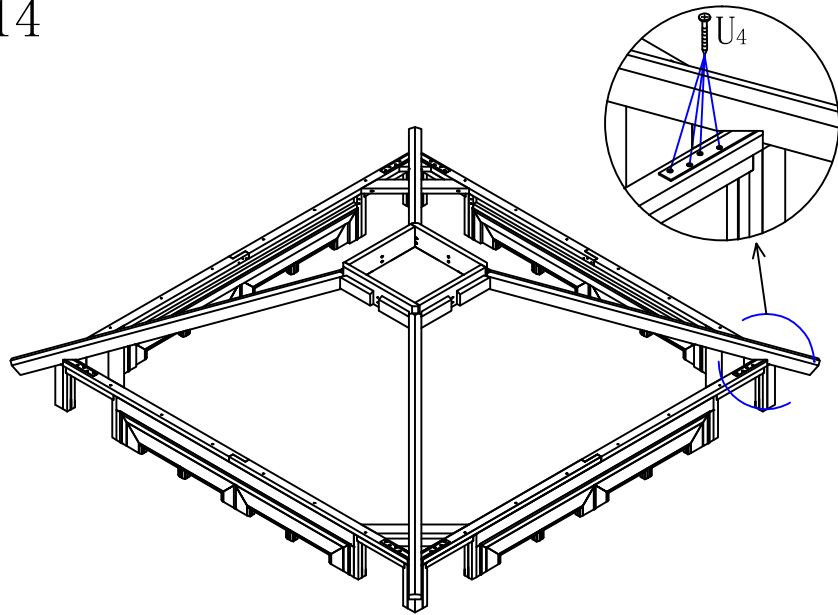


#15

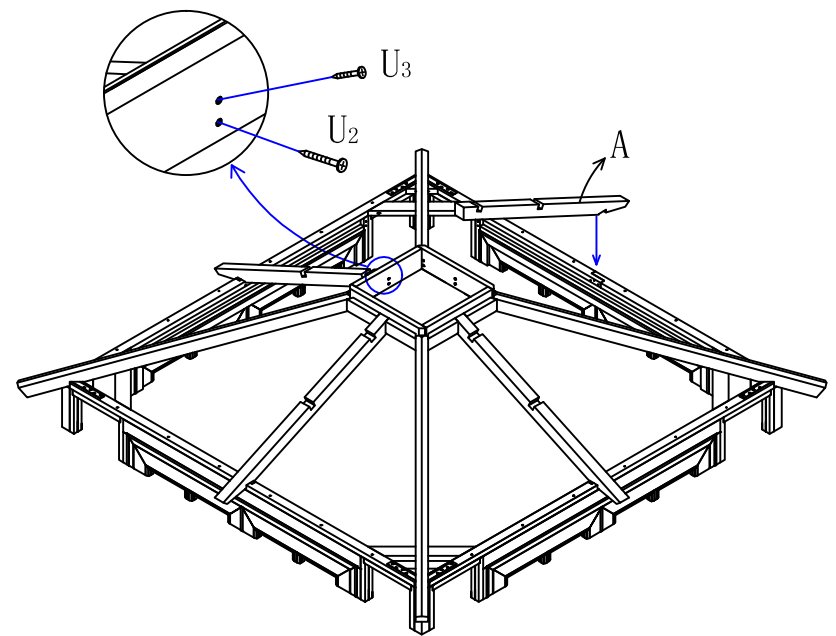

#16


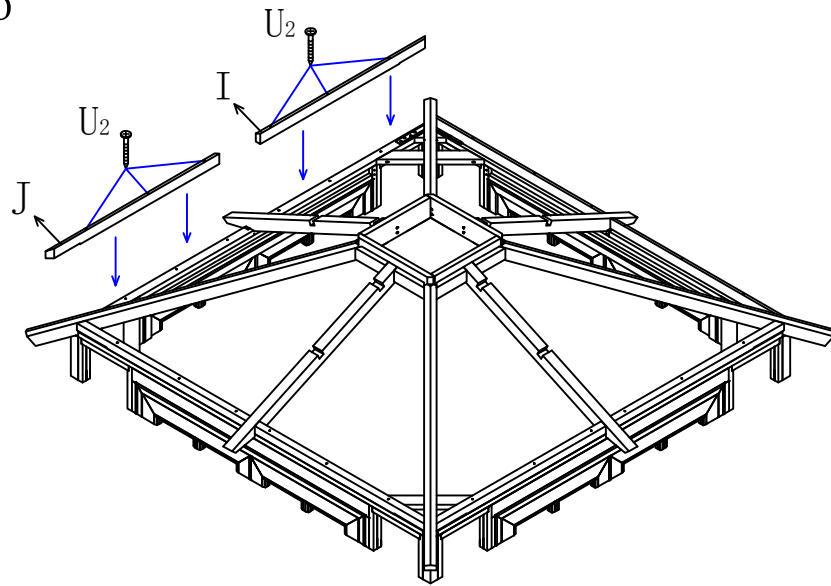


#17

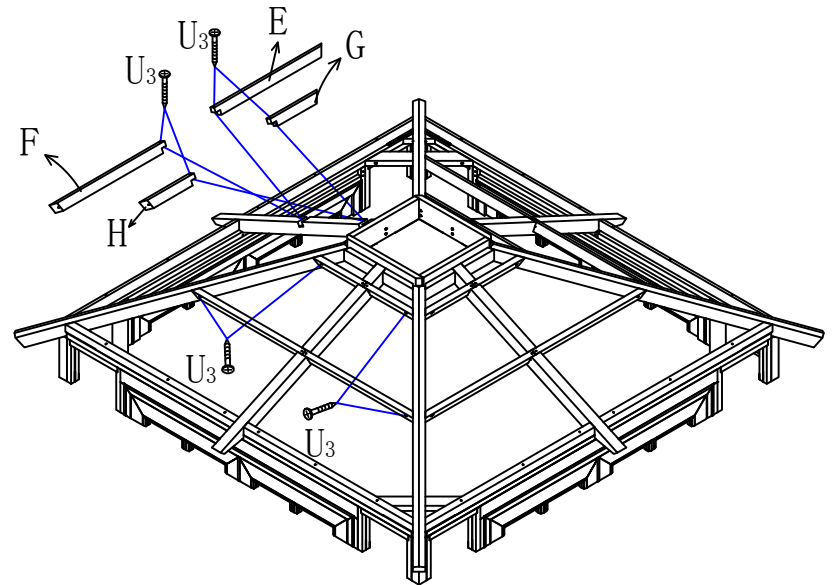


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO


#18

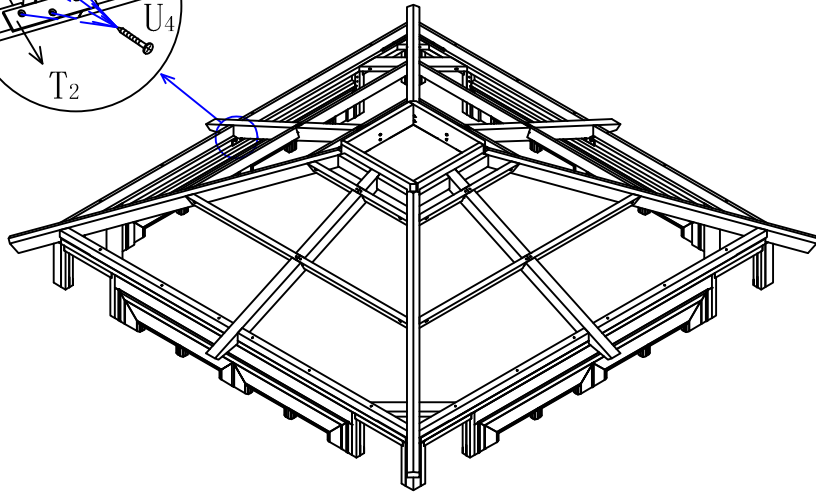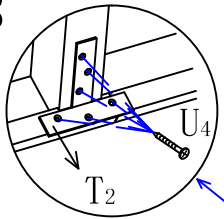


#19

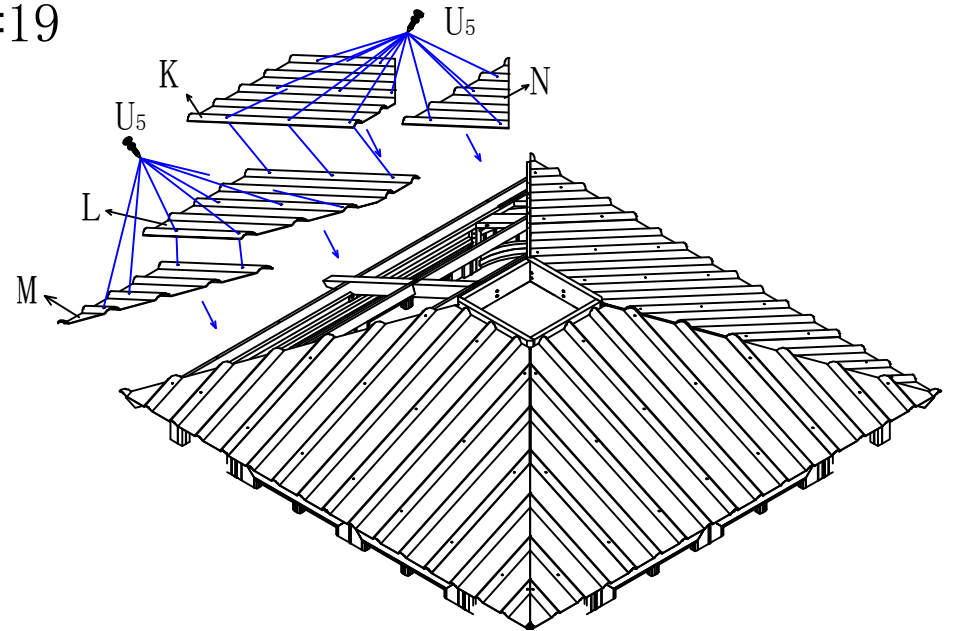

#20

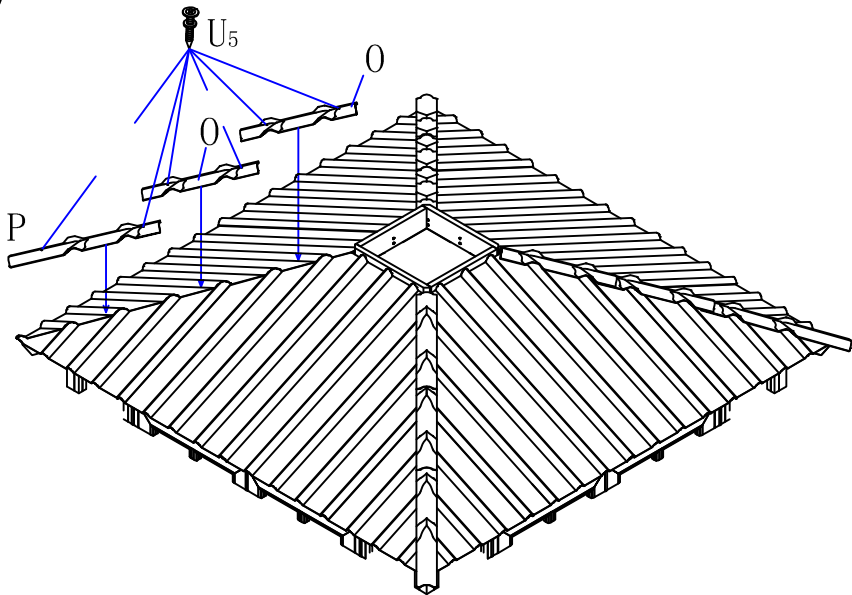


#21


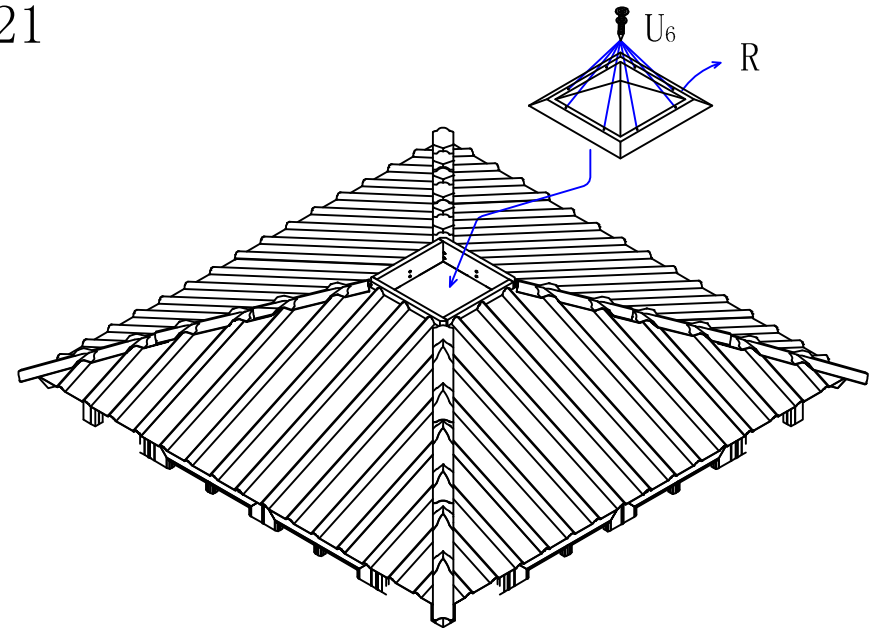


ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO







#22

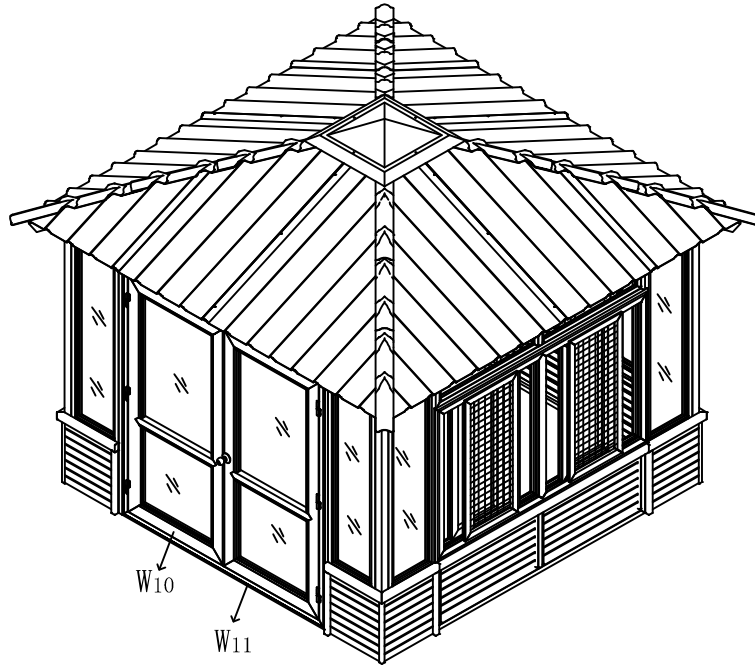

Install shims for smooth operation.

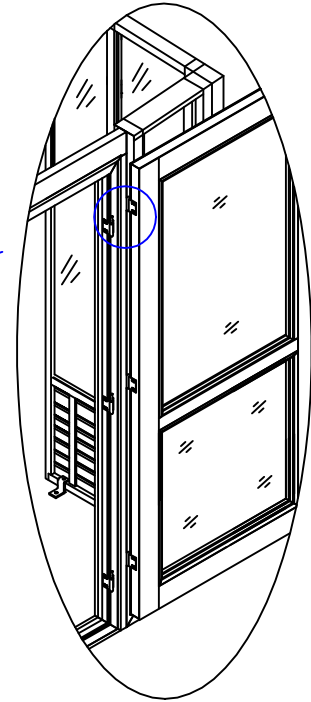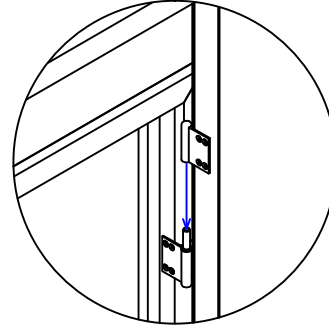

Install handle /lock assembly
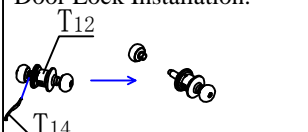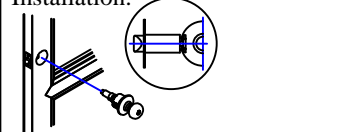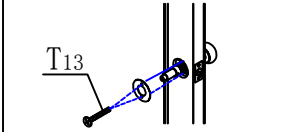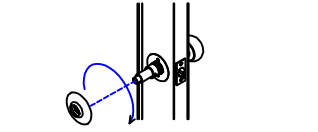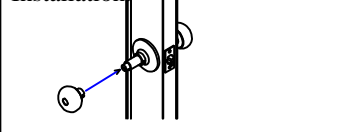
<p>STEP 1: Door Lock Installation.</p>  <p>Remove door lock handle by pressing the knob in the gap for installation.</p>	<p>STEP 2: Remove door lock cover ring and inner lock ring.</p> 	<p>STEP 3: Door Lock Handle Installation.</p>  <p>Install door lock handle into door hole and lock the end part of the door handle.</p>
<p>STEP 4: Install door lock inner ring with screw that shown.</p> 	<p>STEP 5: Door Lock Cover Ring Installation.</p> 	<p>STEP 6: Door Lock Handle Installation</p>  <p>Complete the installation by pushing the door lock handle to the inner part of door lock.</p>

ASSEMBLY INSTRUCTION FOR 10'X10' ULTRAWOOD GAZEBO

#23

