

# Assembly Instruction

## ASSEMBLY TIPS:

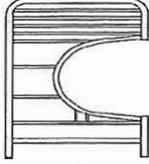
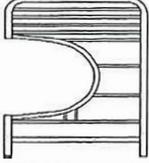




1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as number to assure fast & easy assembly.




### Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

## PARTS IDENTIFICATION

(A)		1PC	(F)		2PCS
	RIGHT HEADBOARD			BED SUPPORTS	
(B)		1PC	(G)		2PCS
	LEFT HEADBOARD			HAND RAIL	
(C)		1PC	(H)		1PC
	TOP BEDPLATE			RIGHT JOINT	
(D)		1PC	(I)		1PC
	FRONT BEDPLATE			LEFT JOINT	
(E)		1PC	(J)		1PC
	BACK BEDPLATE			HOOK	


## HARDWARE PACKAGE

NO	FIGURE	DESCRIPTION	QTY
(1)		∅8mm x 53mm BOLT	8PCS
(2)		5/16" x 1 3/4" BOLT	8PCS
(3)		5/16" x 1 1/4" BOLT	4PCS
(4)		∅6mm x 10mm BOLT	8PCS
(5)		WASHER	20PCS
(6)		SPRING WASHER	12PCS
(7)		NUT	12PCS
(8)		PVC STICKER	4PCS
(9)		HEX WRENCH 5mm	1PC
(10)		OPEN WRENCH	1PC
(11)		HEX WRENCH 4 mm	1PC

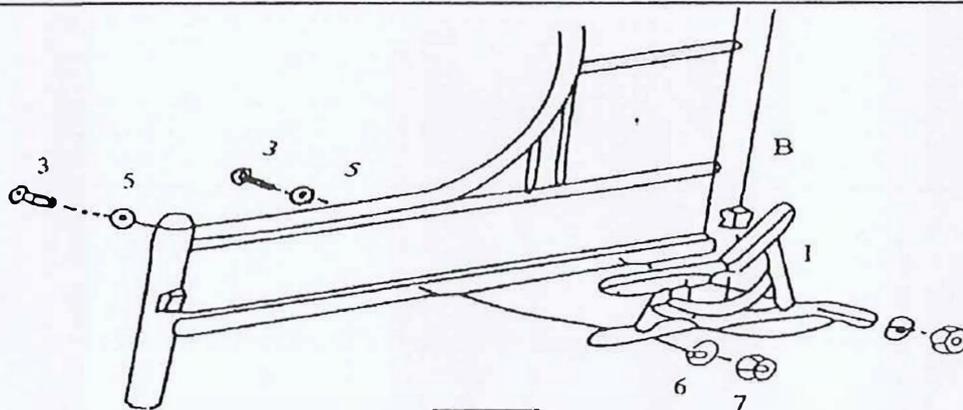


STEP 1

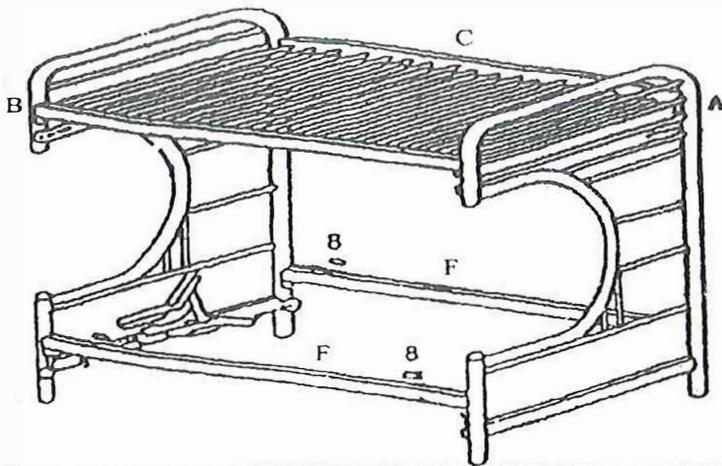ATTACH TRANSMISSION (H) TO RIGHTSIDE FRAME (A) ATTACH TRANSMISSION (I) TO LEFT SIDE FRAME (B). USE HEX WRENCH (9). OPEN WRENCH (10). BOLT (3). WASHER (5) SPRING WASHER (6) AND NUT (7). TO TIGHTEN THE TRANSMISSIONS (H) (I) WITH SIDE FRAMES (A) (B)




**STEP 2**

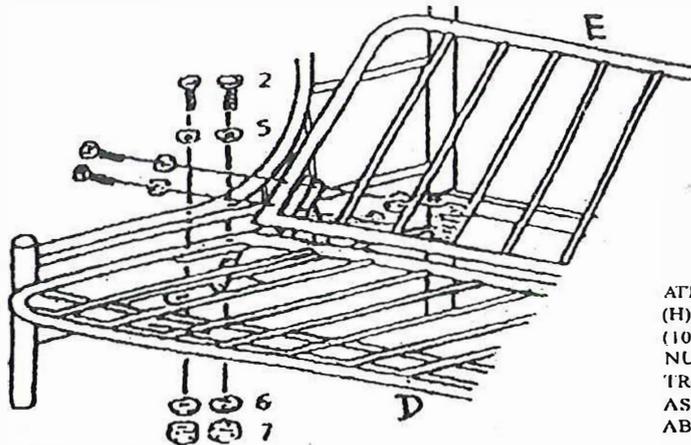PUT CROSS BAR (F) INTO BRACKET OF BOTTOM SIDE FRAMES (A)(B) AND PUT TOP MATTRESS FRAME (C) INTO BRACKET OF UPPER SIDE FRAMES (A) (B). THEN USE HEX WRENCH (11) BOLT (4) TO TIGHTEN THEM. PUT 4PCS OF PVC STICKERS (8) ON THE CROSS BARS (F)



**STEP 3**

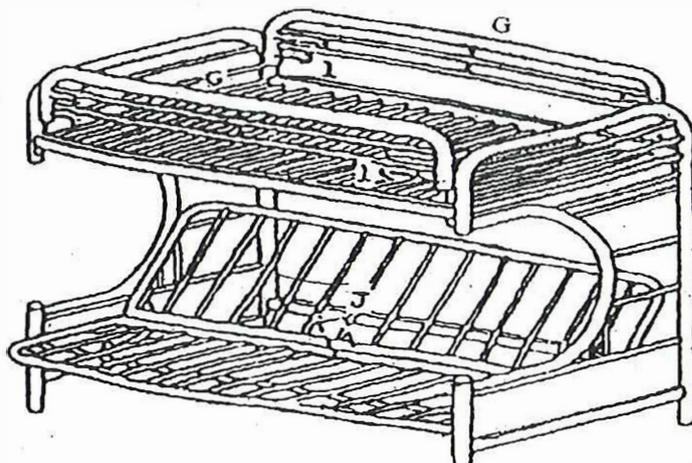ATTACH BACK MATTRESS FRAME (E) TO TRANSMISSIONS (H) (I) THEN USE HEX WRENCH (9) OPEN WRENCH (10) BOLT (2). WASHER (5). SPRING WASHER (6). AND NUT (7). TO TIGHTEN THE BACK MATTRESS WITH THE TRANSMISSIONS. ASSEMBLE THE FRONT MATTRESS FRAME (D) AS ABOVE DESCRIPTION



**STEP 4**

ATTACH GUARD RAILS (G). TO TOP MATTRESS FRAME (C) THEN USE HEX WRENCH (9). BOLT (1). WITH WASHER (5). TO TIGHTEN THE GUARD RAILS (G) WITH SIDE FRAMES (A) (B). GUARD RAILS MUST TO BE LOCK USING WASHER (5) USE HOOK (J) CONNECT THE FRONT MATTRESS FRAME (D) WITH BACK MATTRESS FRAME (E).



U. S. PATENT NO. 5, 522, 101