



Bookshelf L-shaped Desk






OR


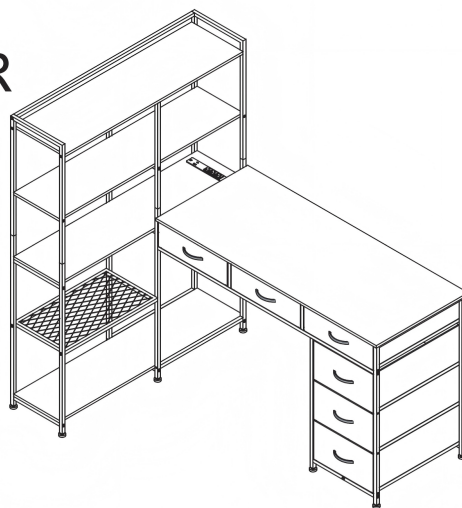










































ASSEMBLY INSTRUCTIONS

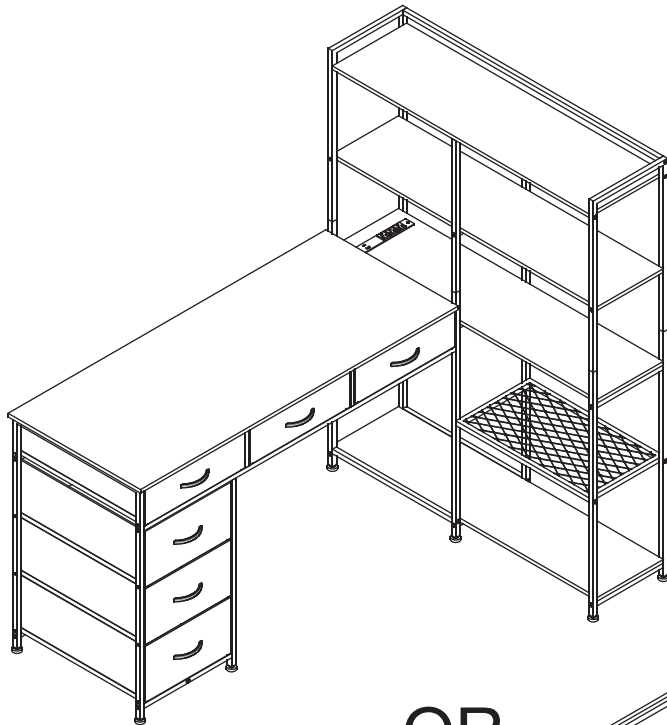


OR

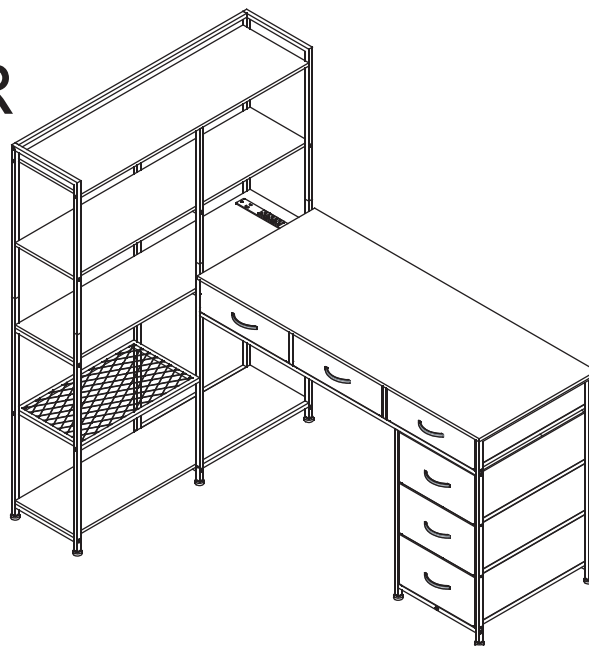

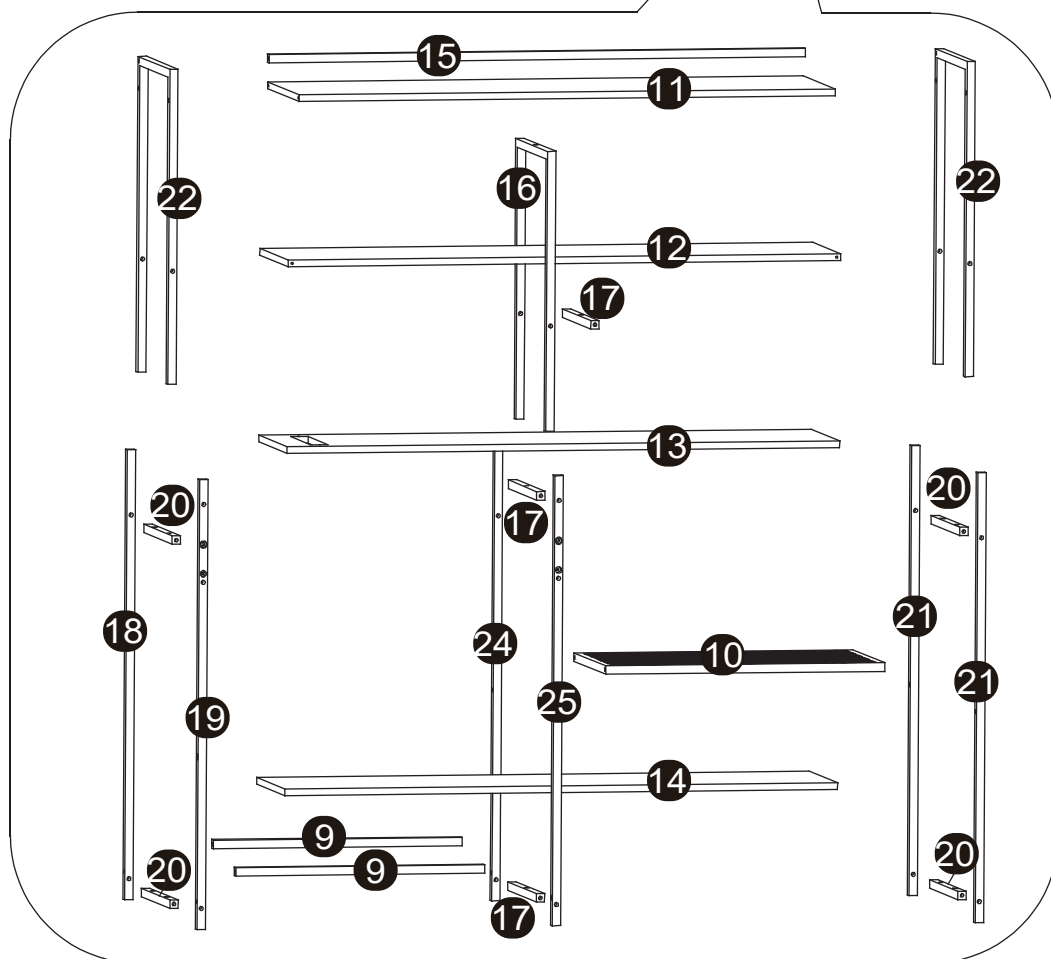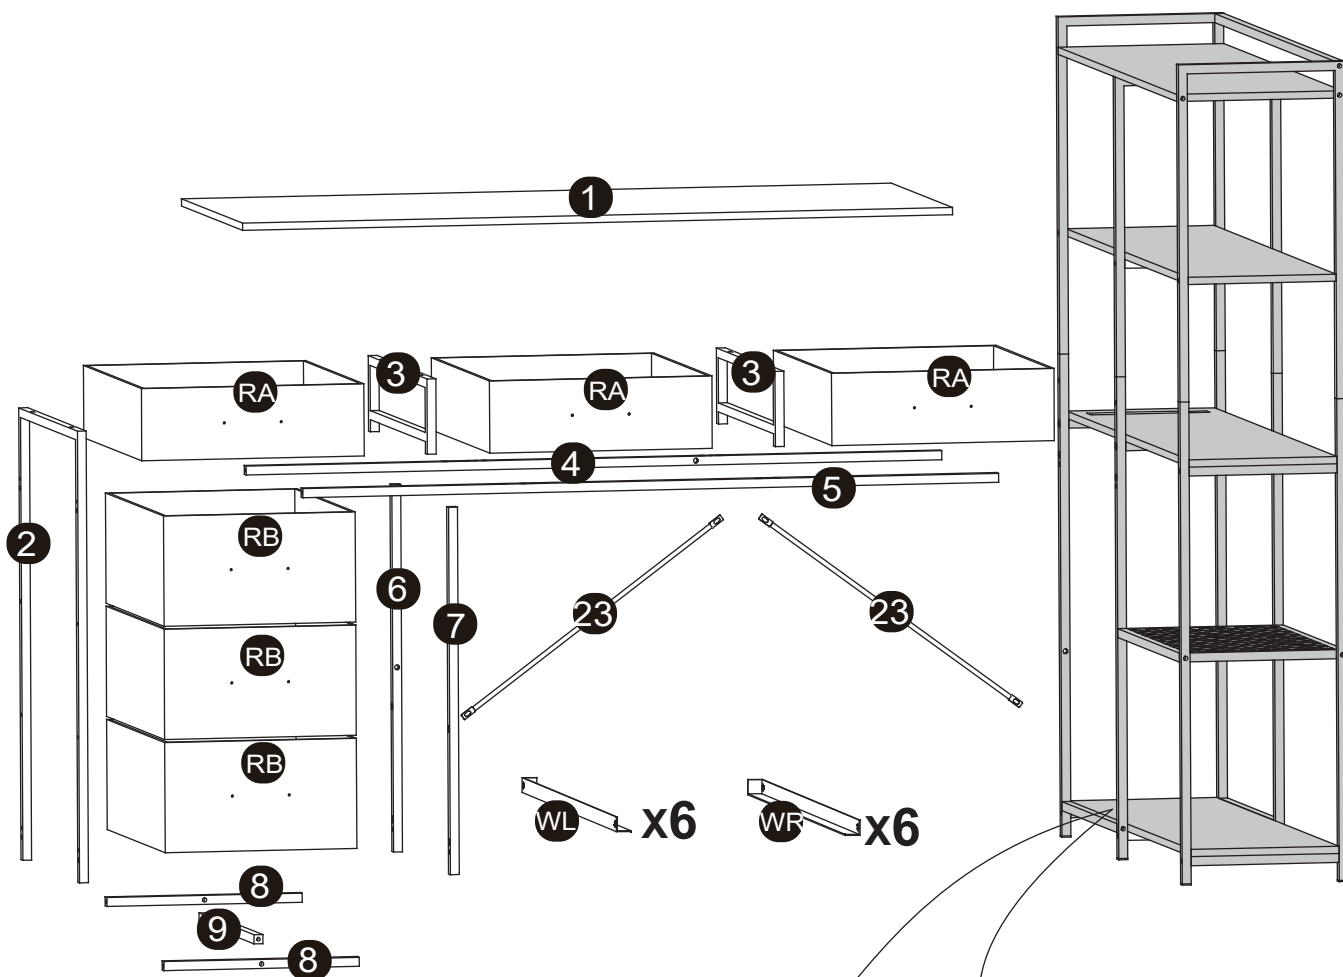

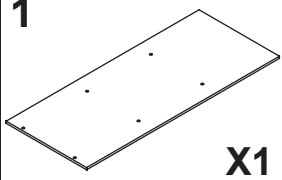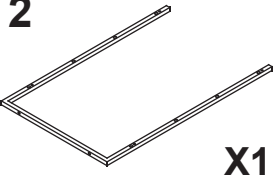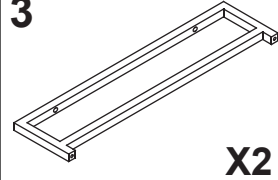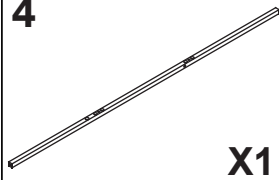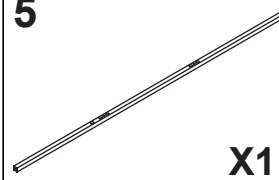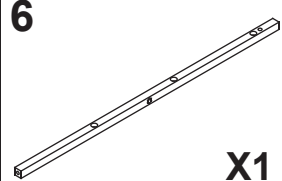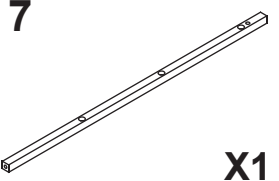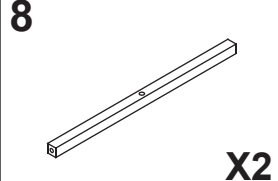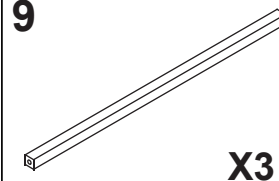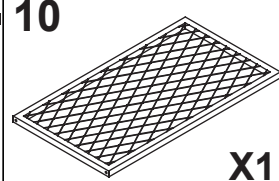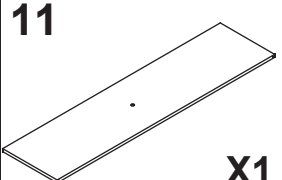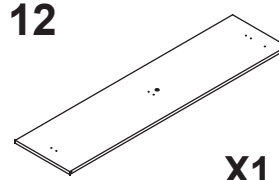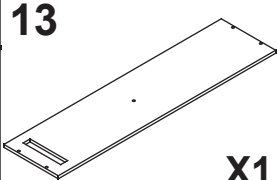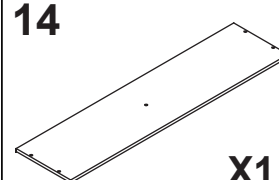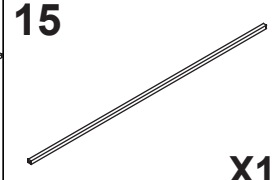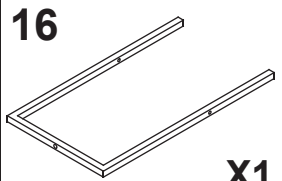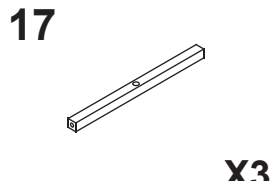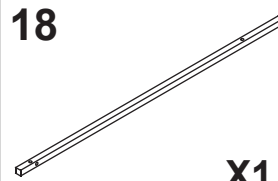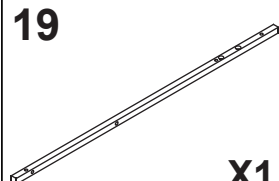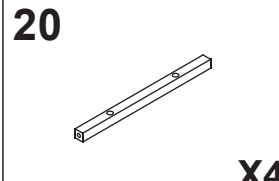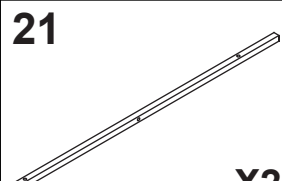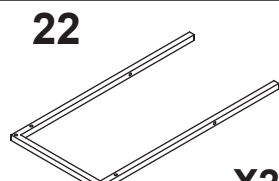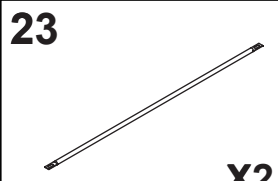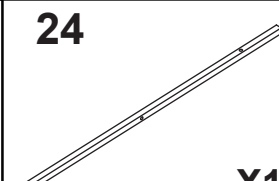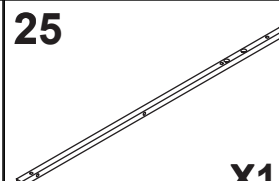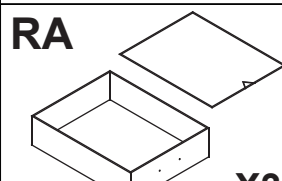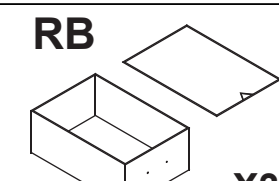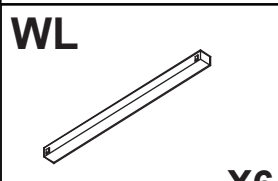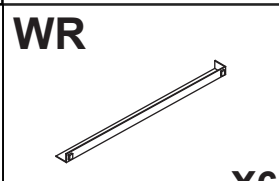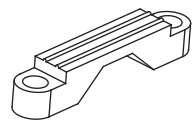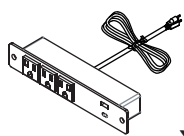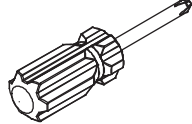
1  X1	2  X1	3  X2	4  X1	5  X1
6  X1	7  X1	8  X2	9  X3	10  X1
11  X1	12  X1	13  X1	14  X1	15  X1
16  X1	17  X3	18  X1	19  X1	20  X4
21  X2	22  X2	23  X2	24  X1	25  X1
RA  X3	RB  X3	WL  X6	WR  X6	
A M6x28mm  X40(+3)	B H=40mm  X6	C M6x23mm  X18(+1)	D M6.3x40mm  X10(+1)	E  X3 (+1)
F M6  X10(+1)	G M4x12mm  X24(+2)	H  X24 (+2)	I  X6 (+1)	J M4x10mm  X12(+1)
K  X1	L M6x12mm  X12(+1)	M M3x10mm  X9 (+1)	N  X1	O  X1 (+1)
P  X2	Q  X1	R M6x16mm  X3 (+1)		

MODEL A

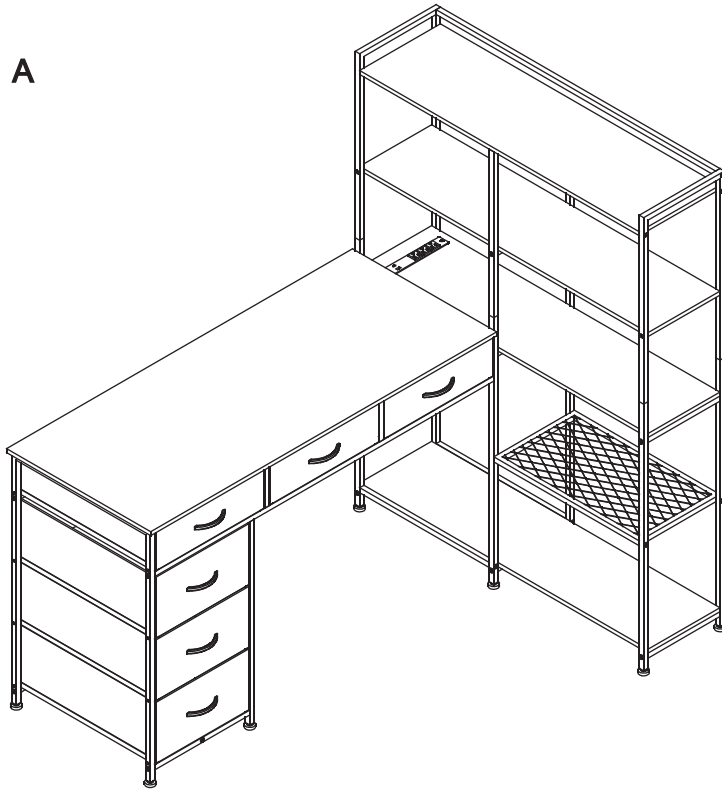


For the assembly steps Of MODEL A
Please refer to STEP 1 to STEP 16

MODEL B

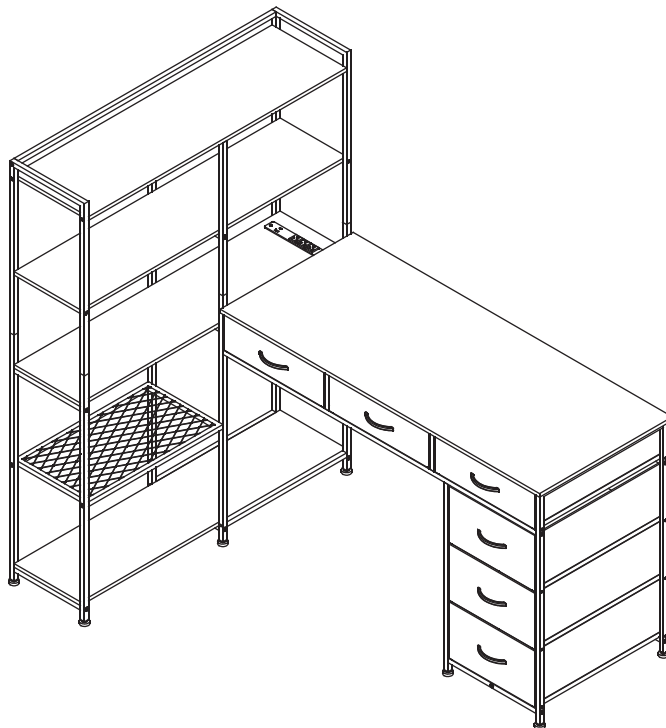


For the assembly steps Of MODEL B
Please refer to STEP 17 to STEP 32


Step1

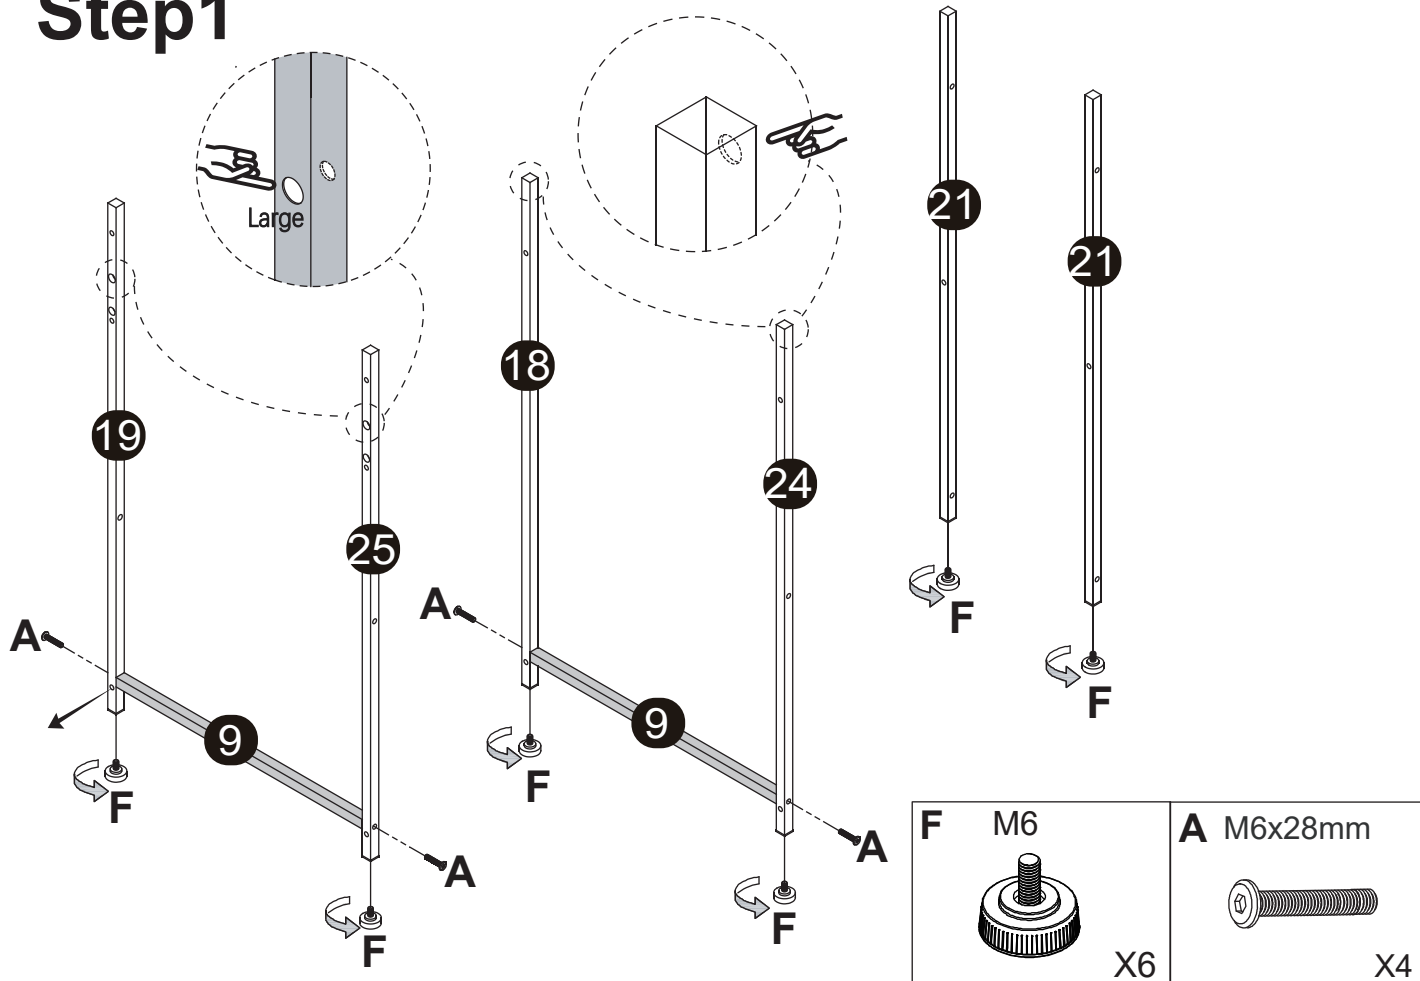


Step2

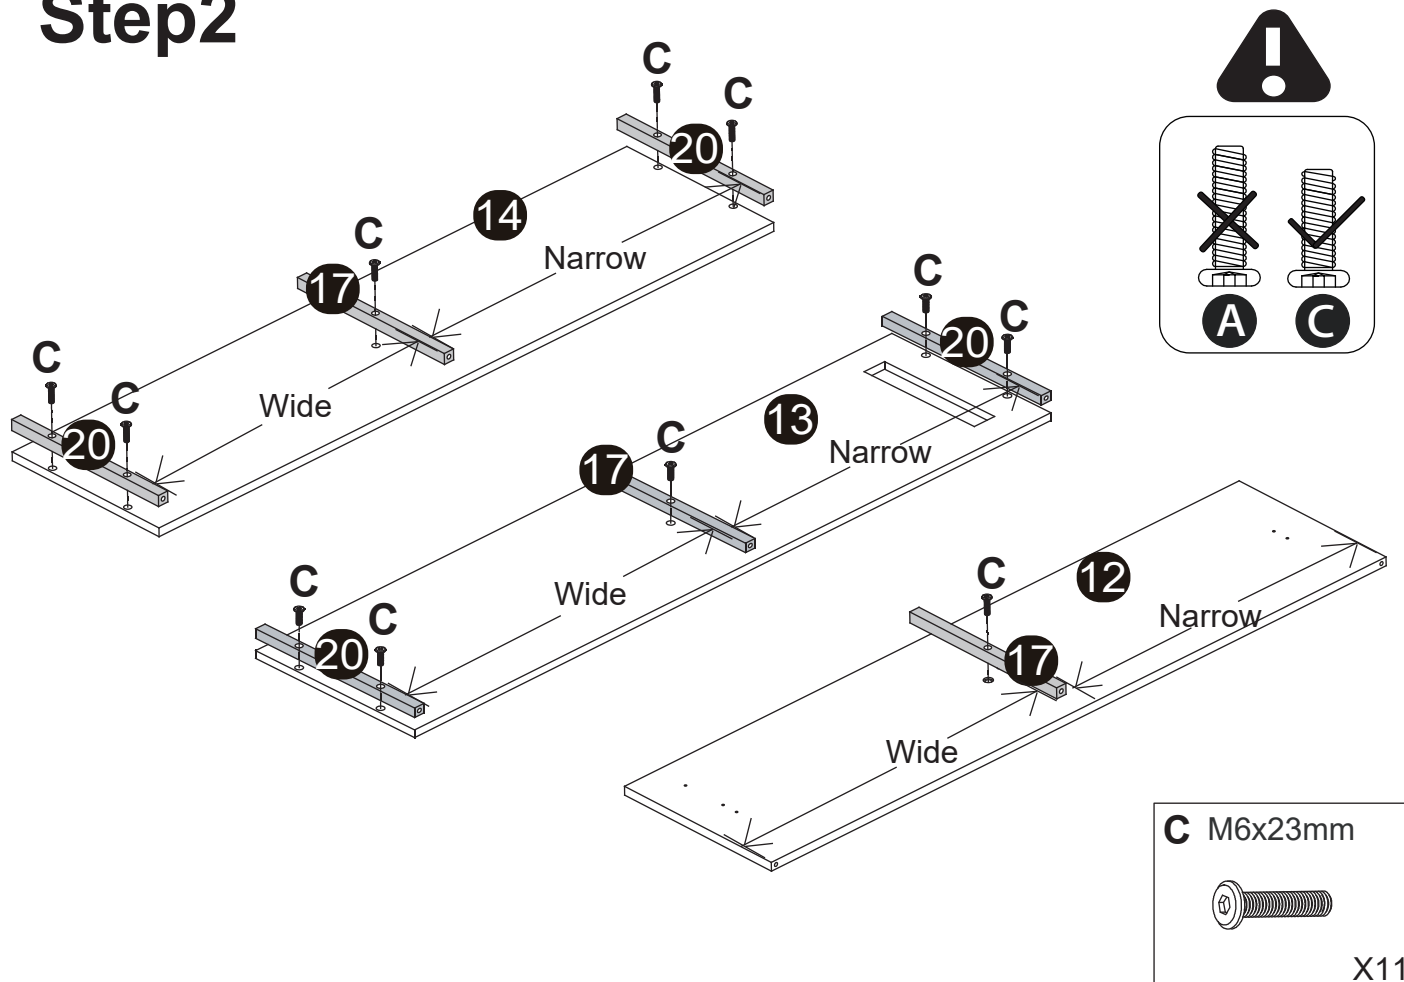

Step3

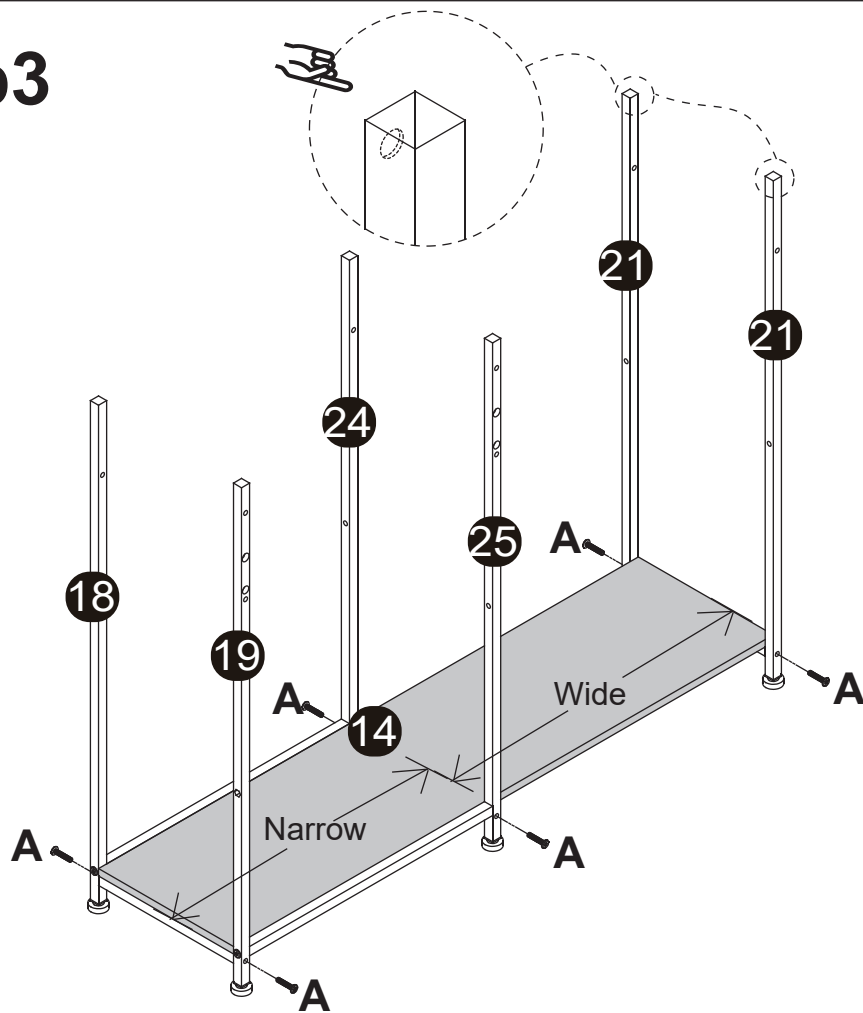


A M6x28mm



X6

Step4

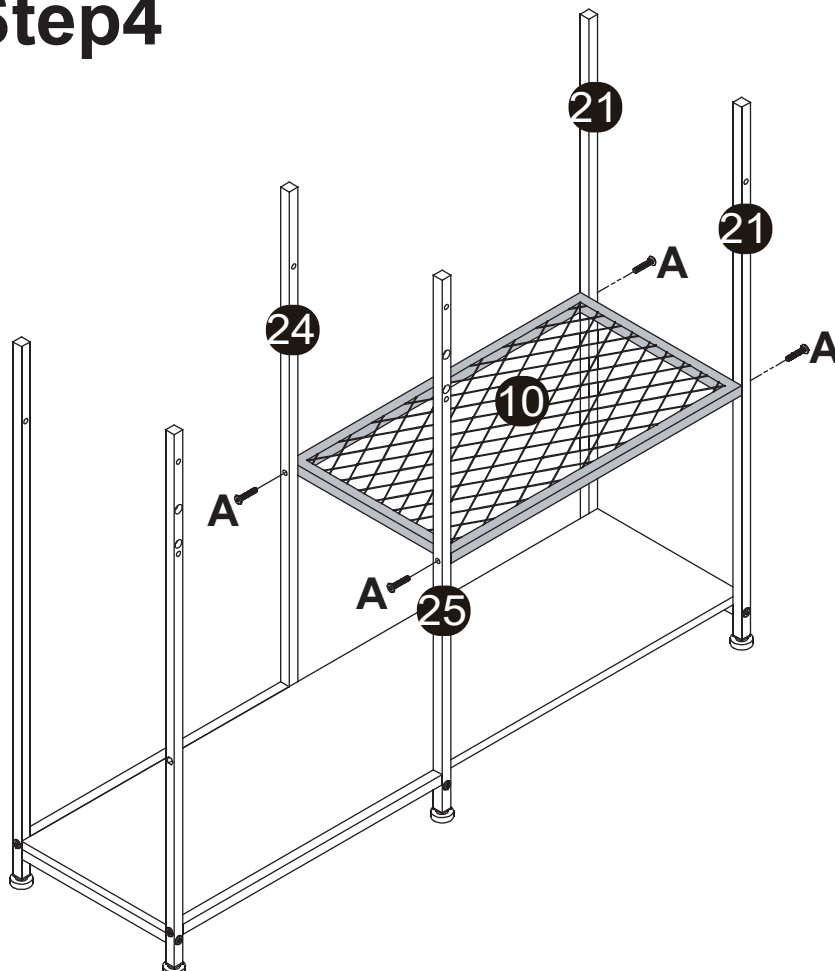


A M6x28mm




X4


Step5

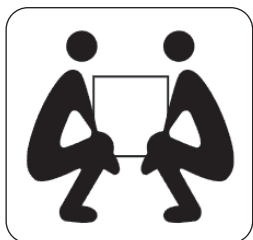

Need Two or More
People To Complete




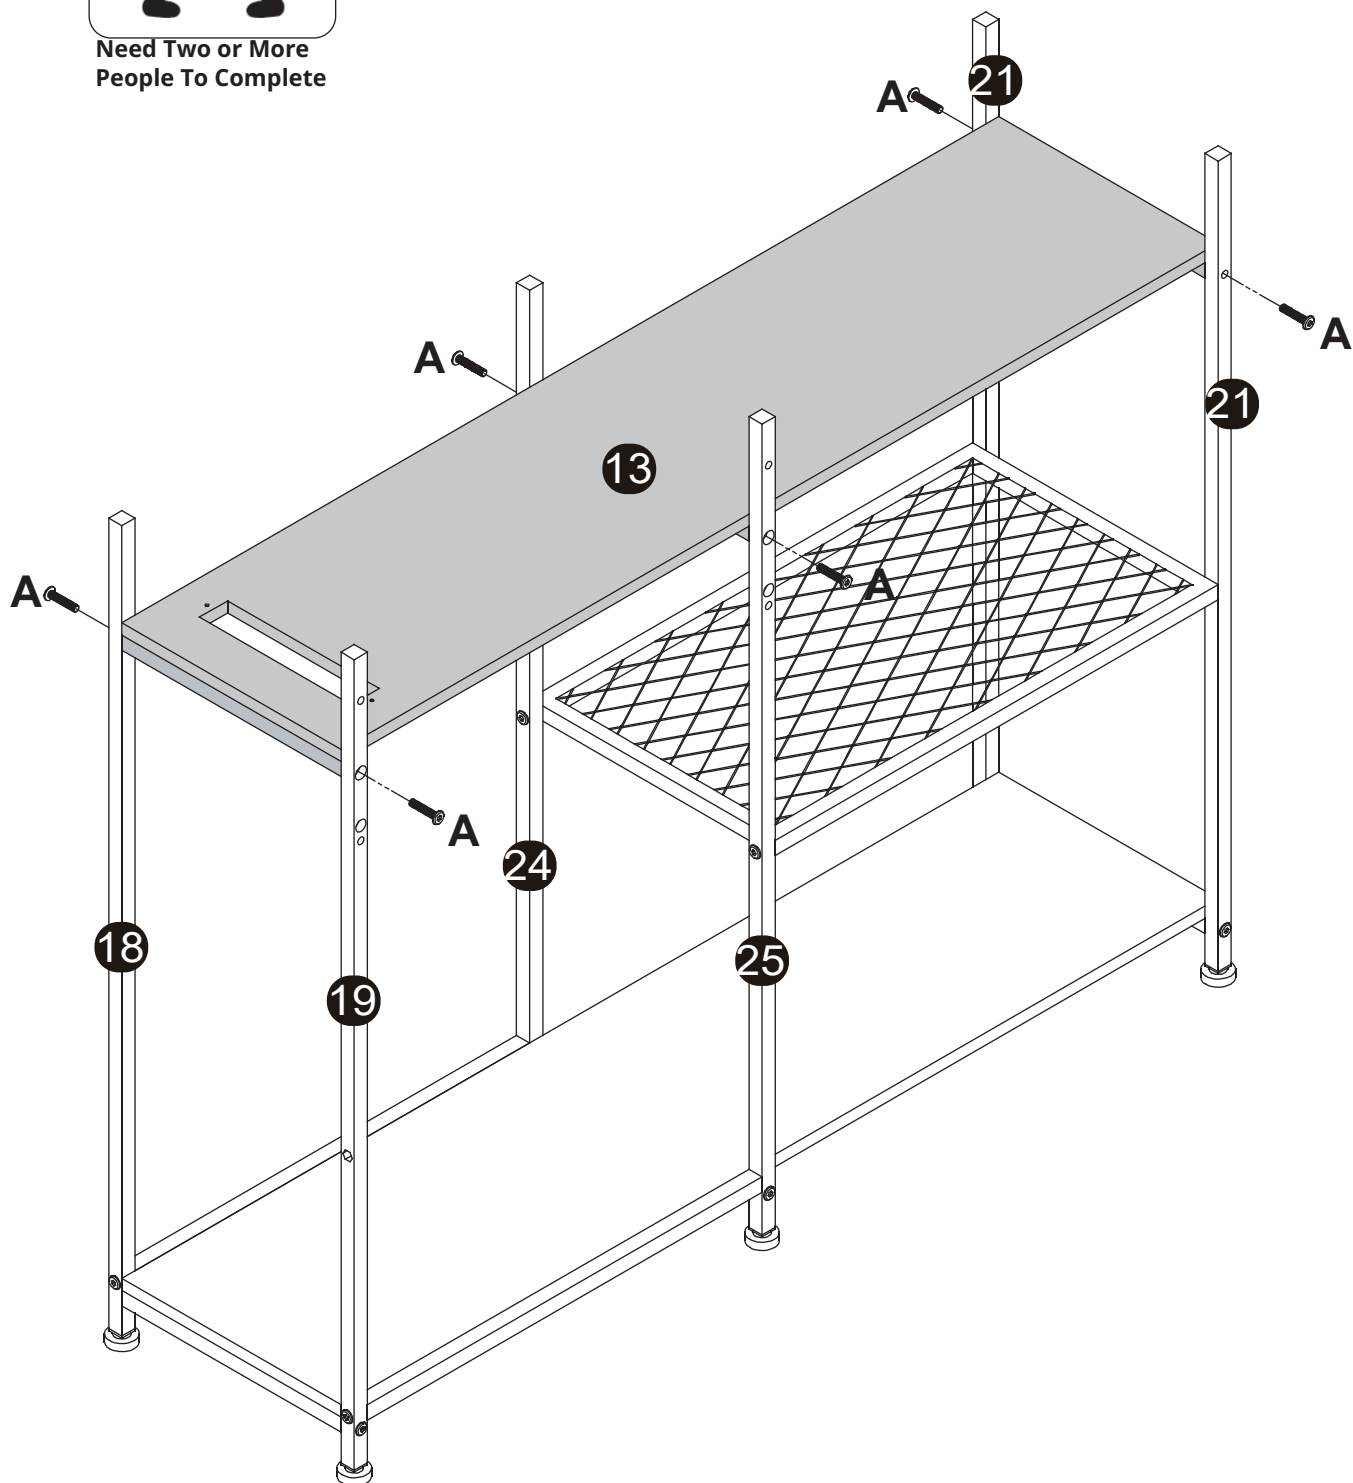


A M6x28mm




X6

Step6

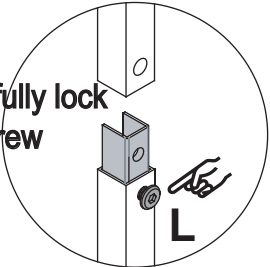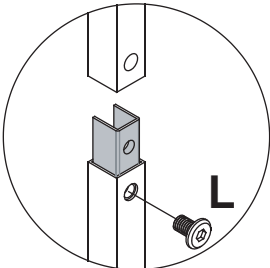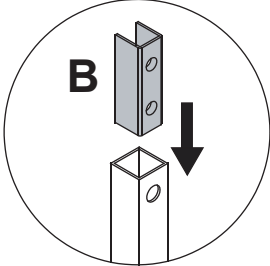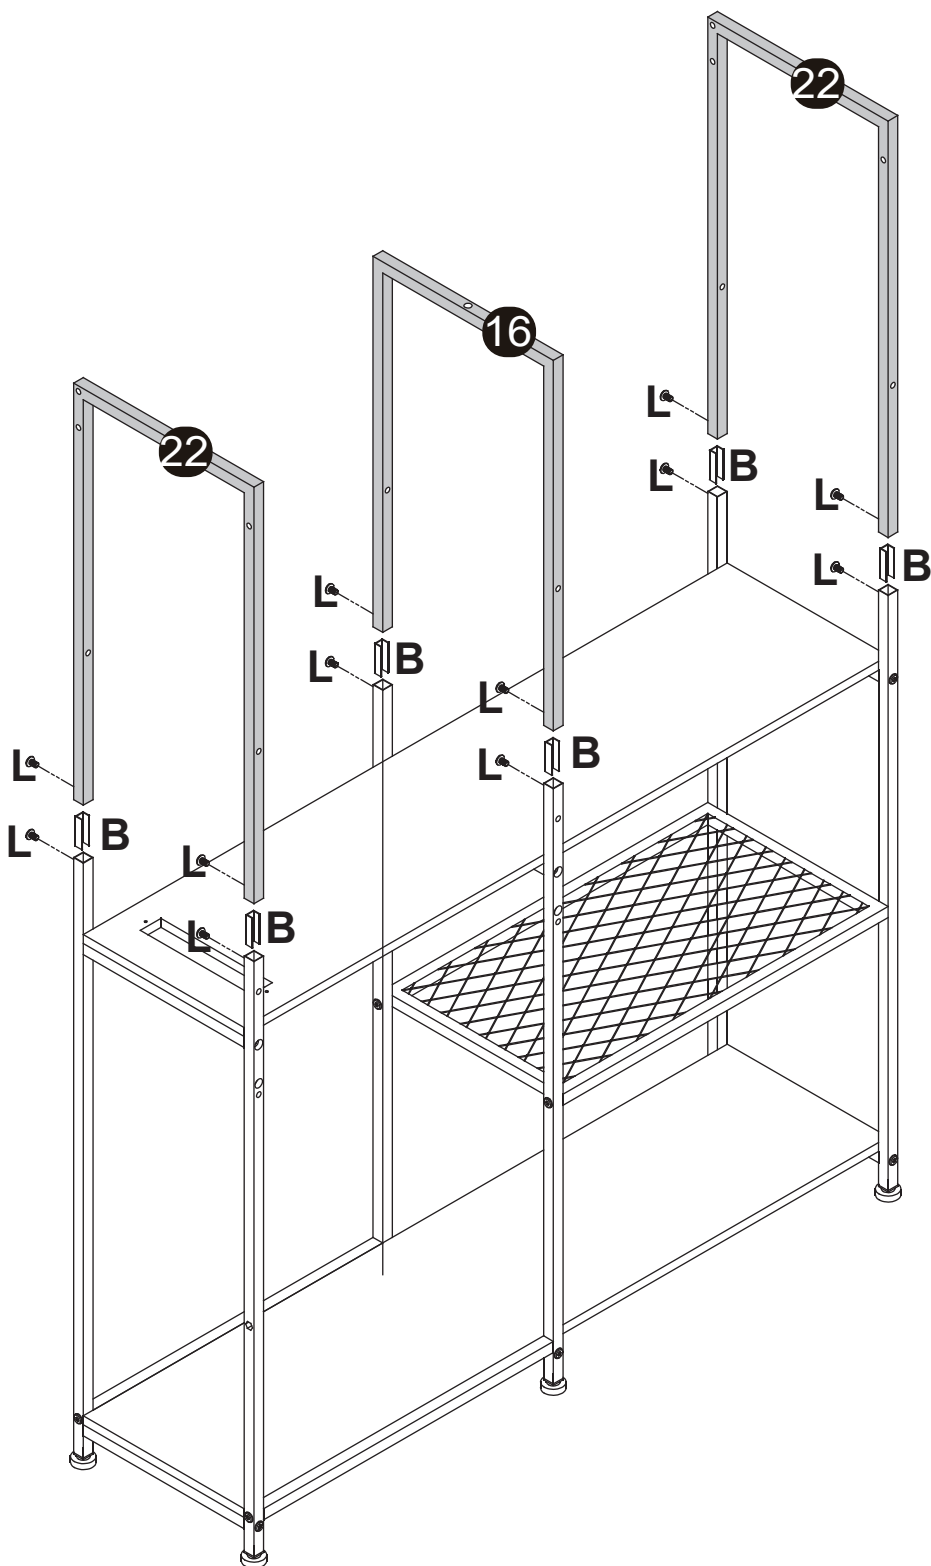

Don't fully lock
the screw

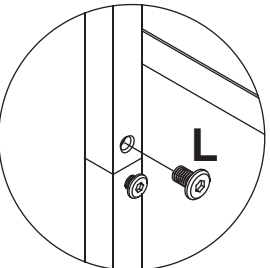

Lock all
screws

L M6x12mm




X12

B H=40mm




X6



Step7

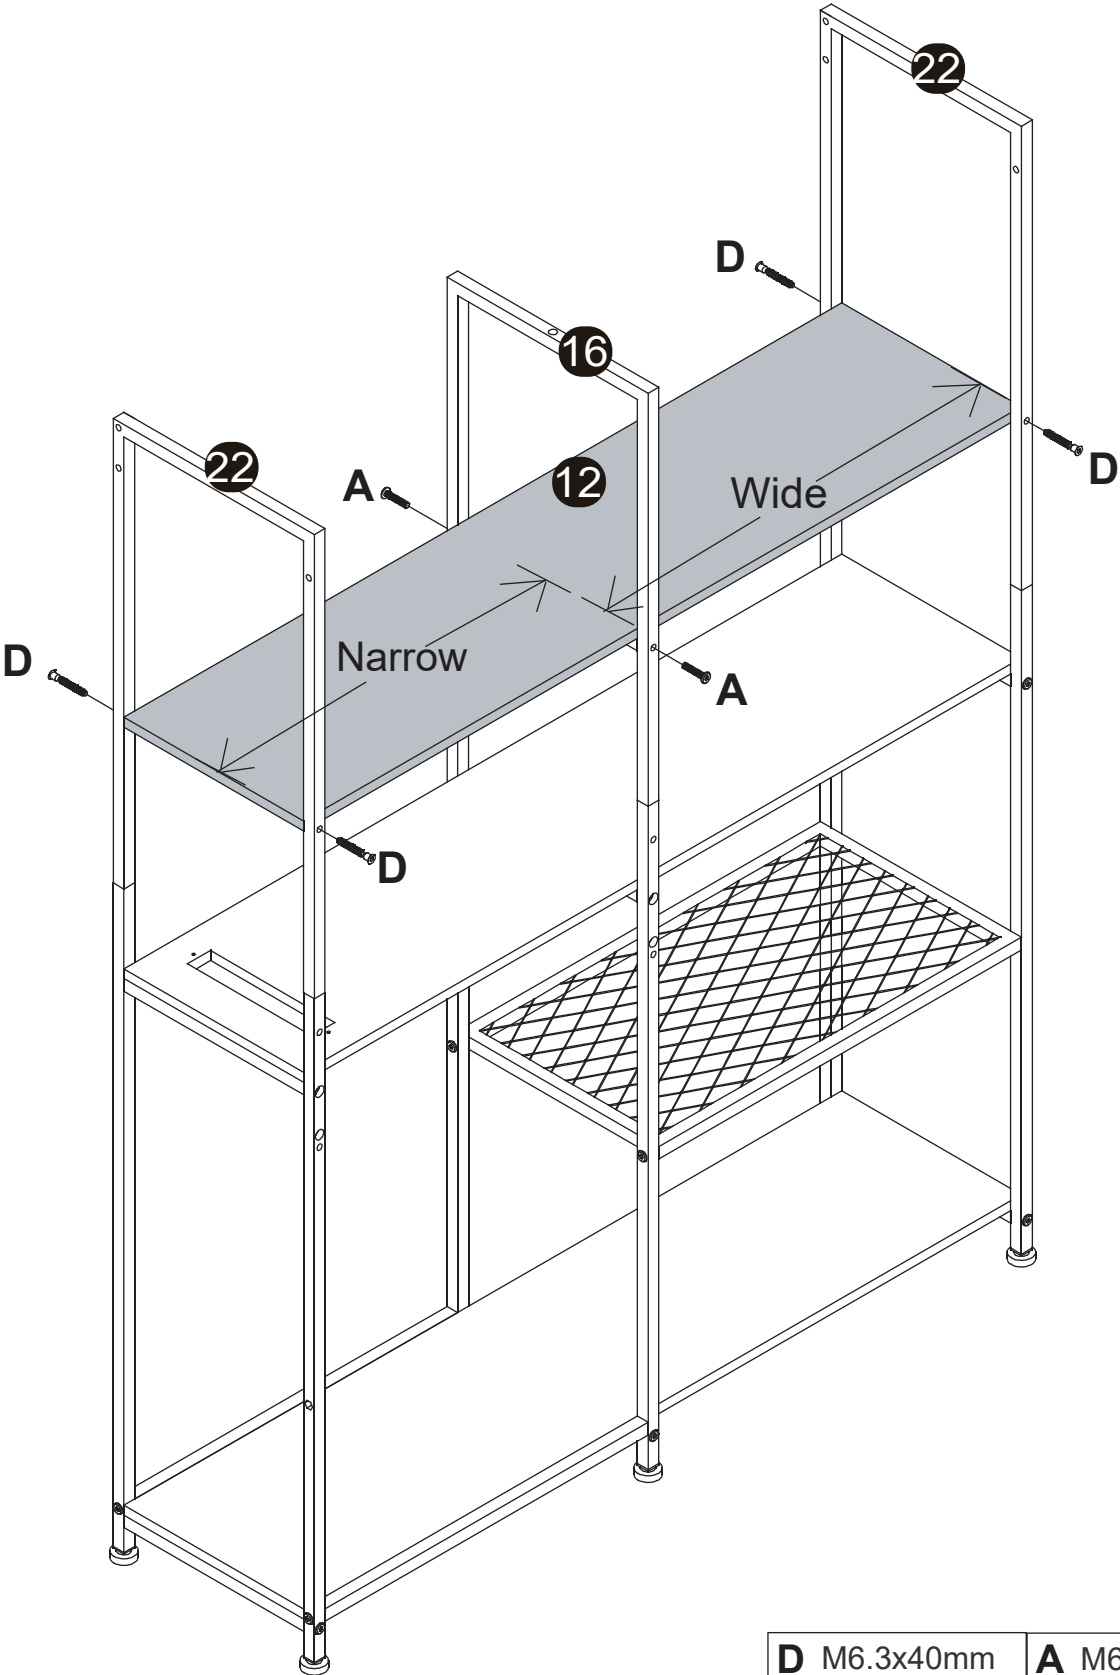






D M6.3x40mm	A M6x28mm
	
X4	X2

Step8

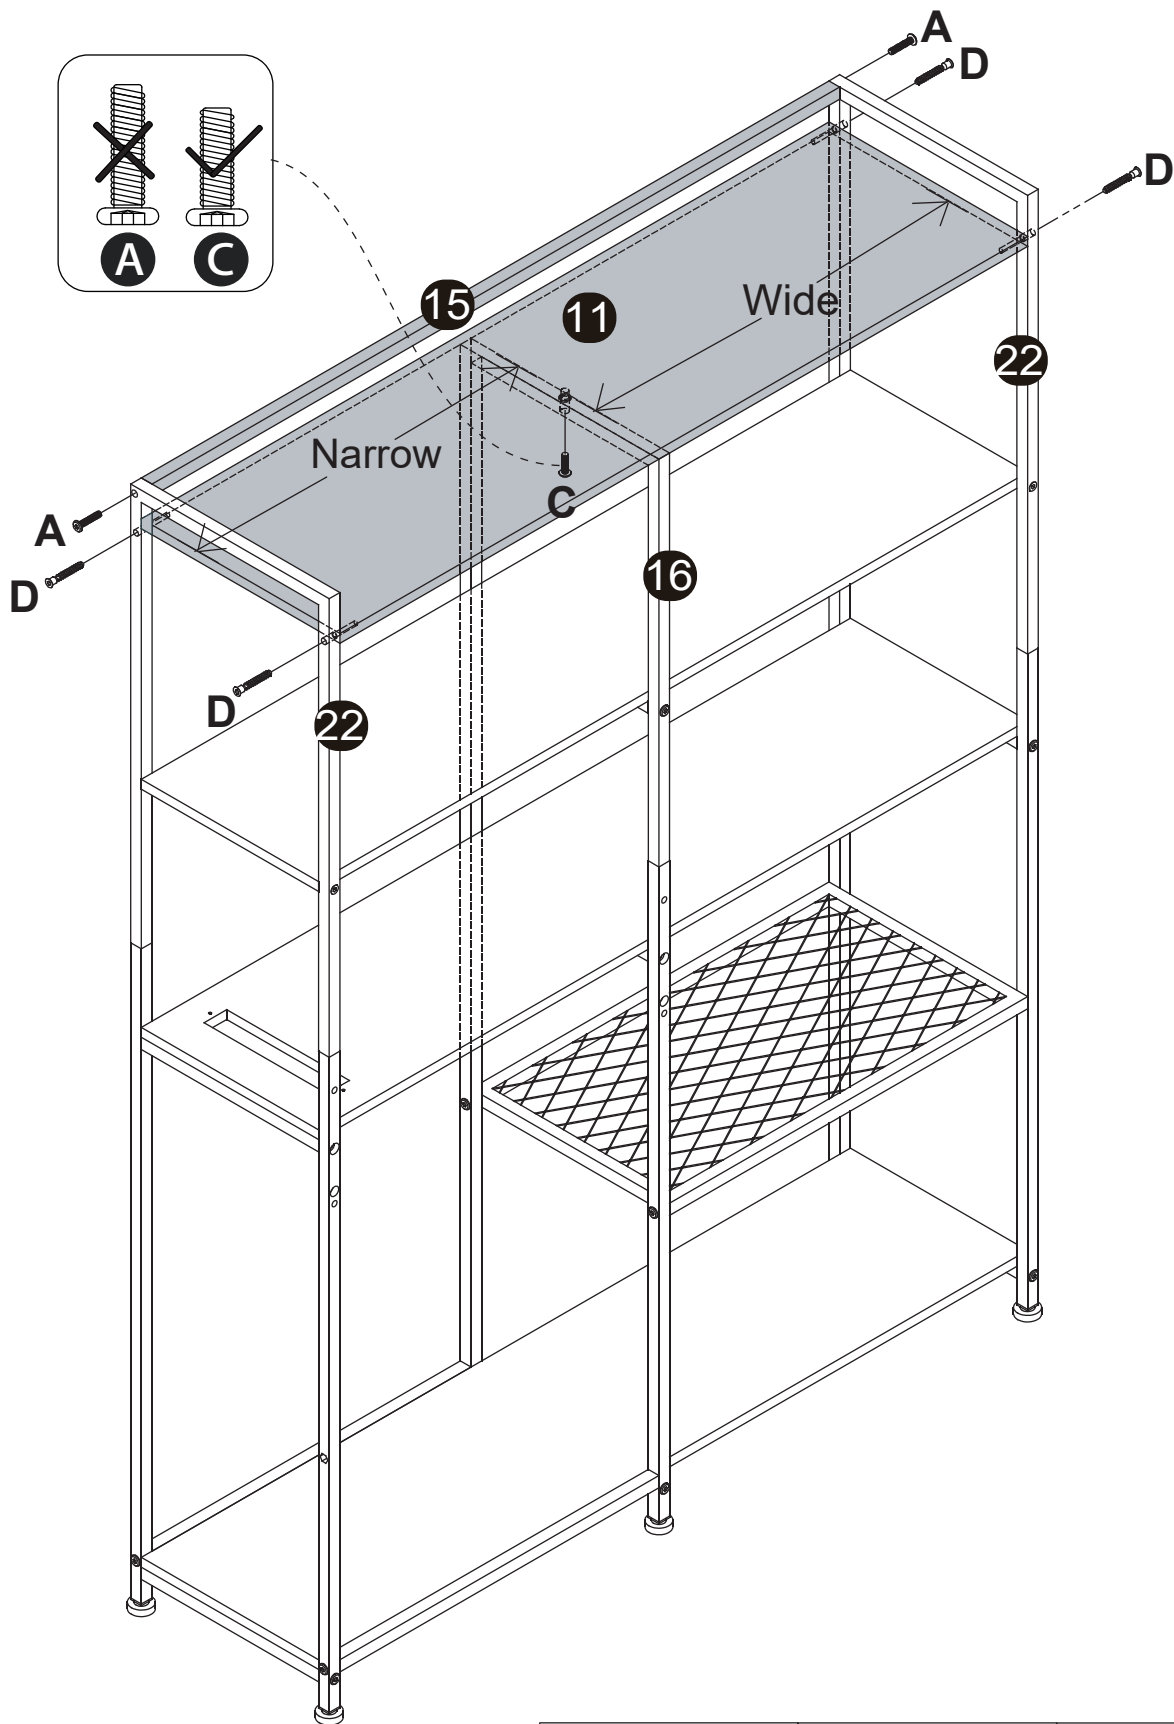


A M6x28mm  X2	C M6x23mm  X1	D M6.3x40mm  X4
---	---	---





Step9

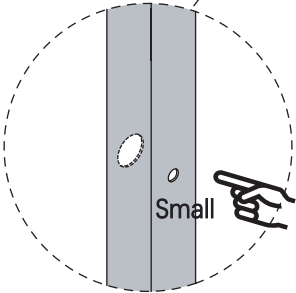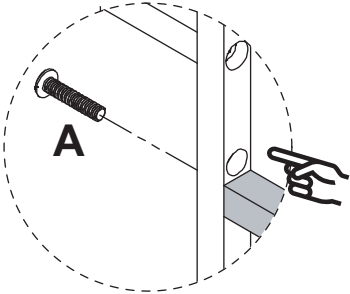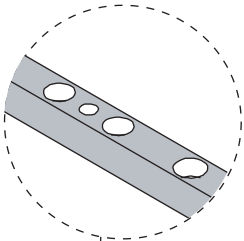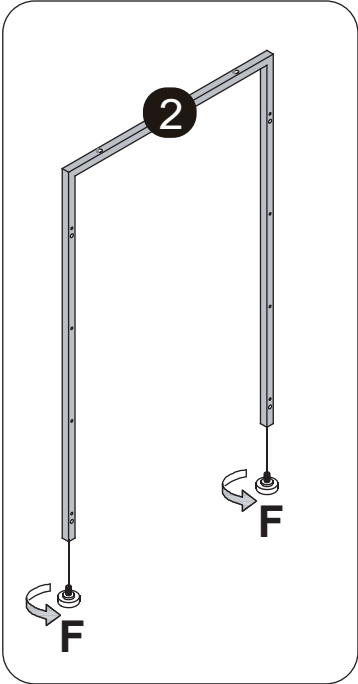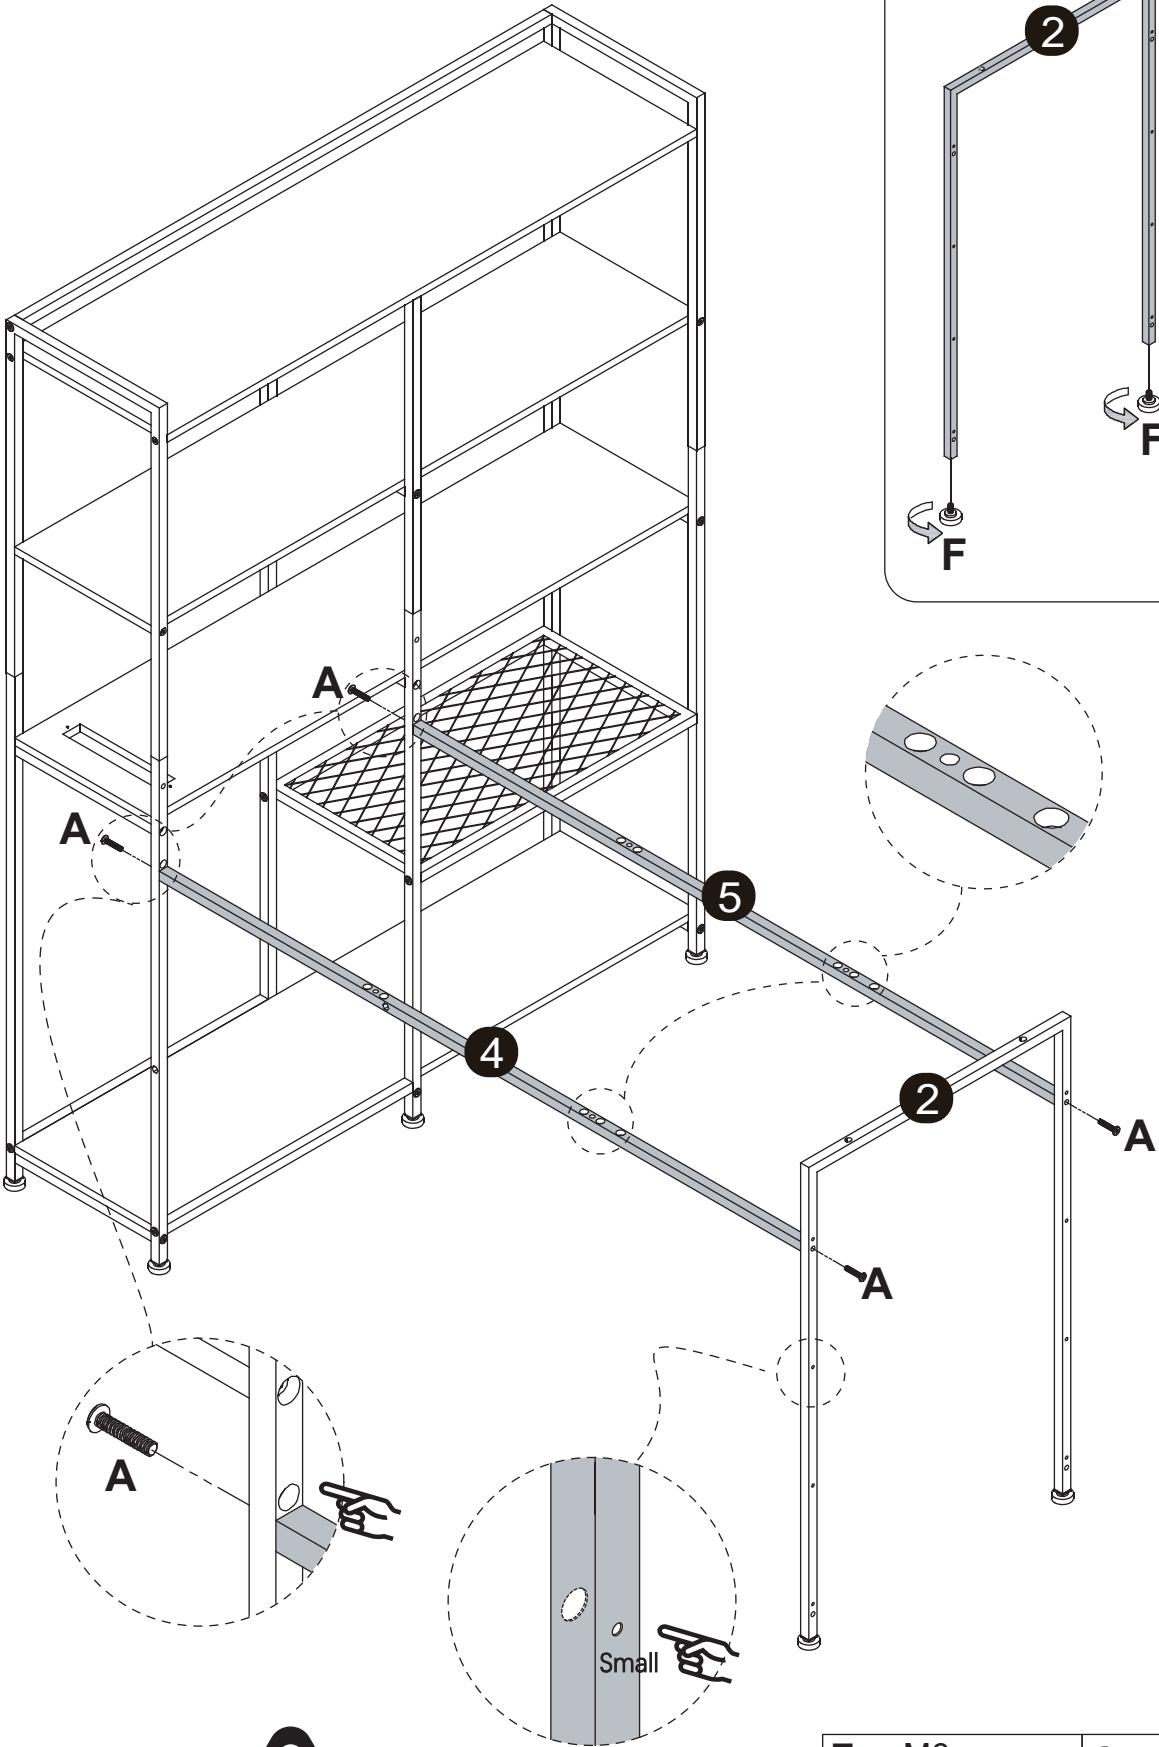



The large hole faces inside, small hole faces outside!

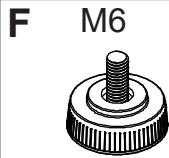


Step10

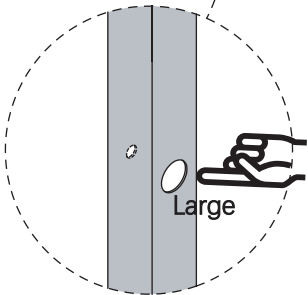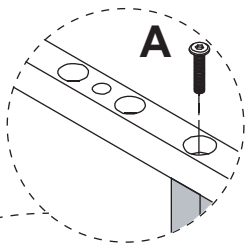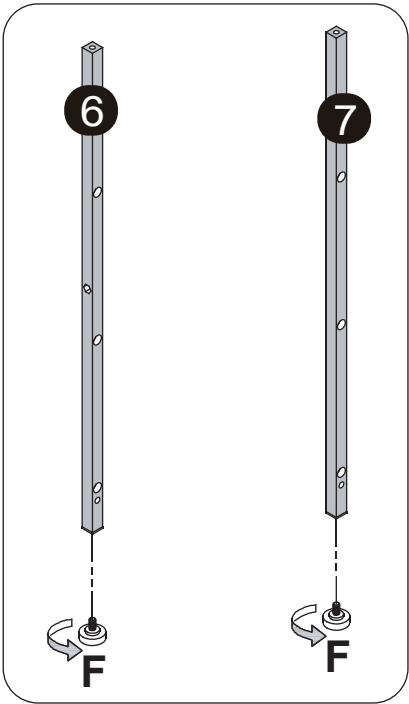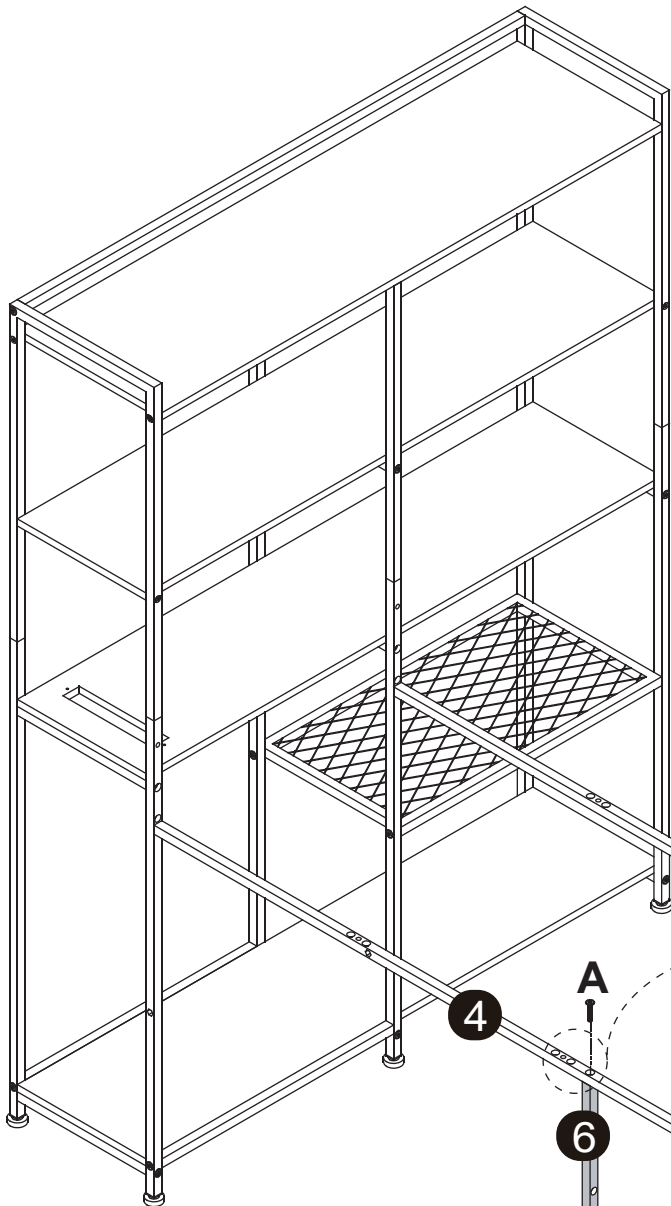


The large hole faces inside,
small hole faces outside!

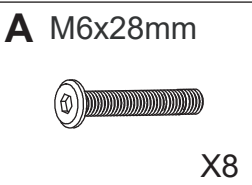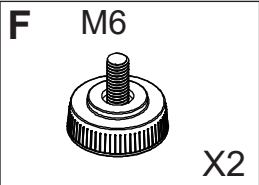

Step11

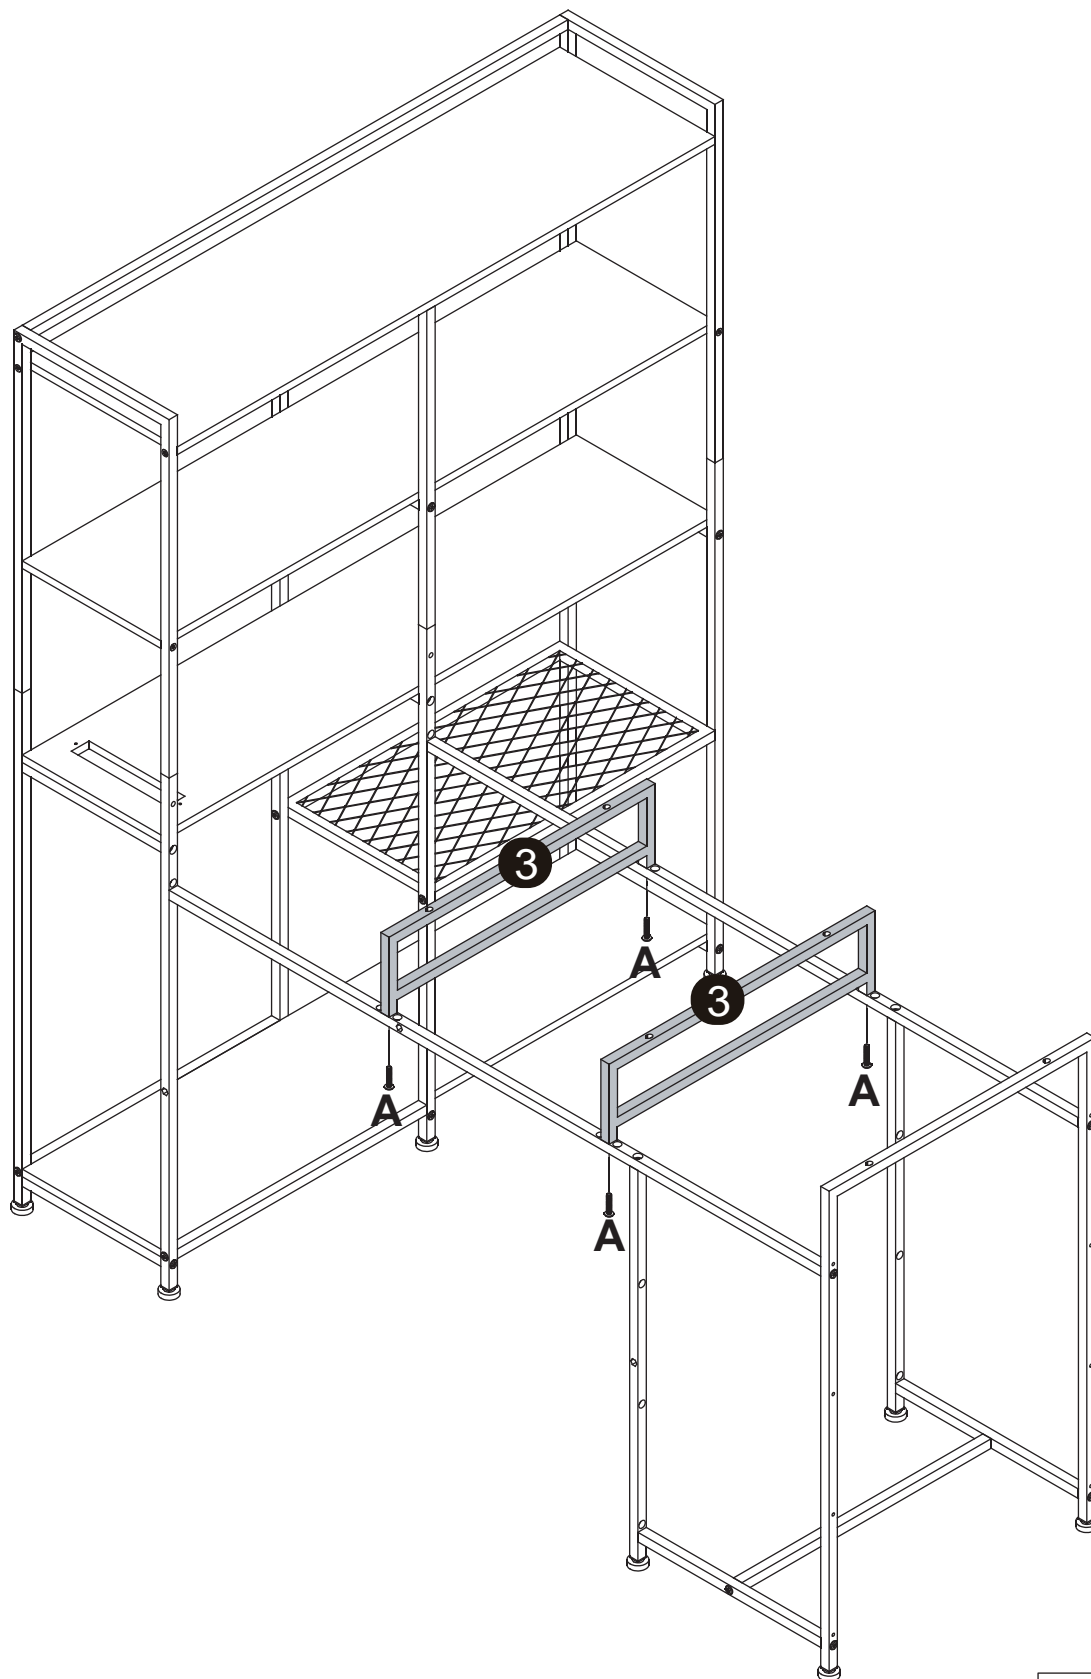


A M6x28mm




X4

Step12

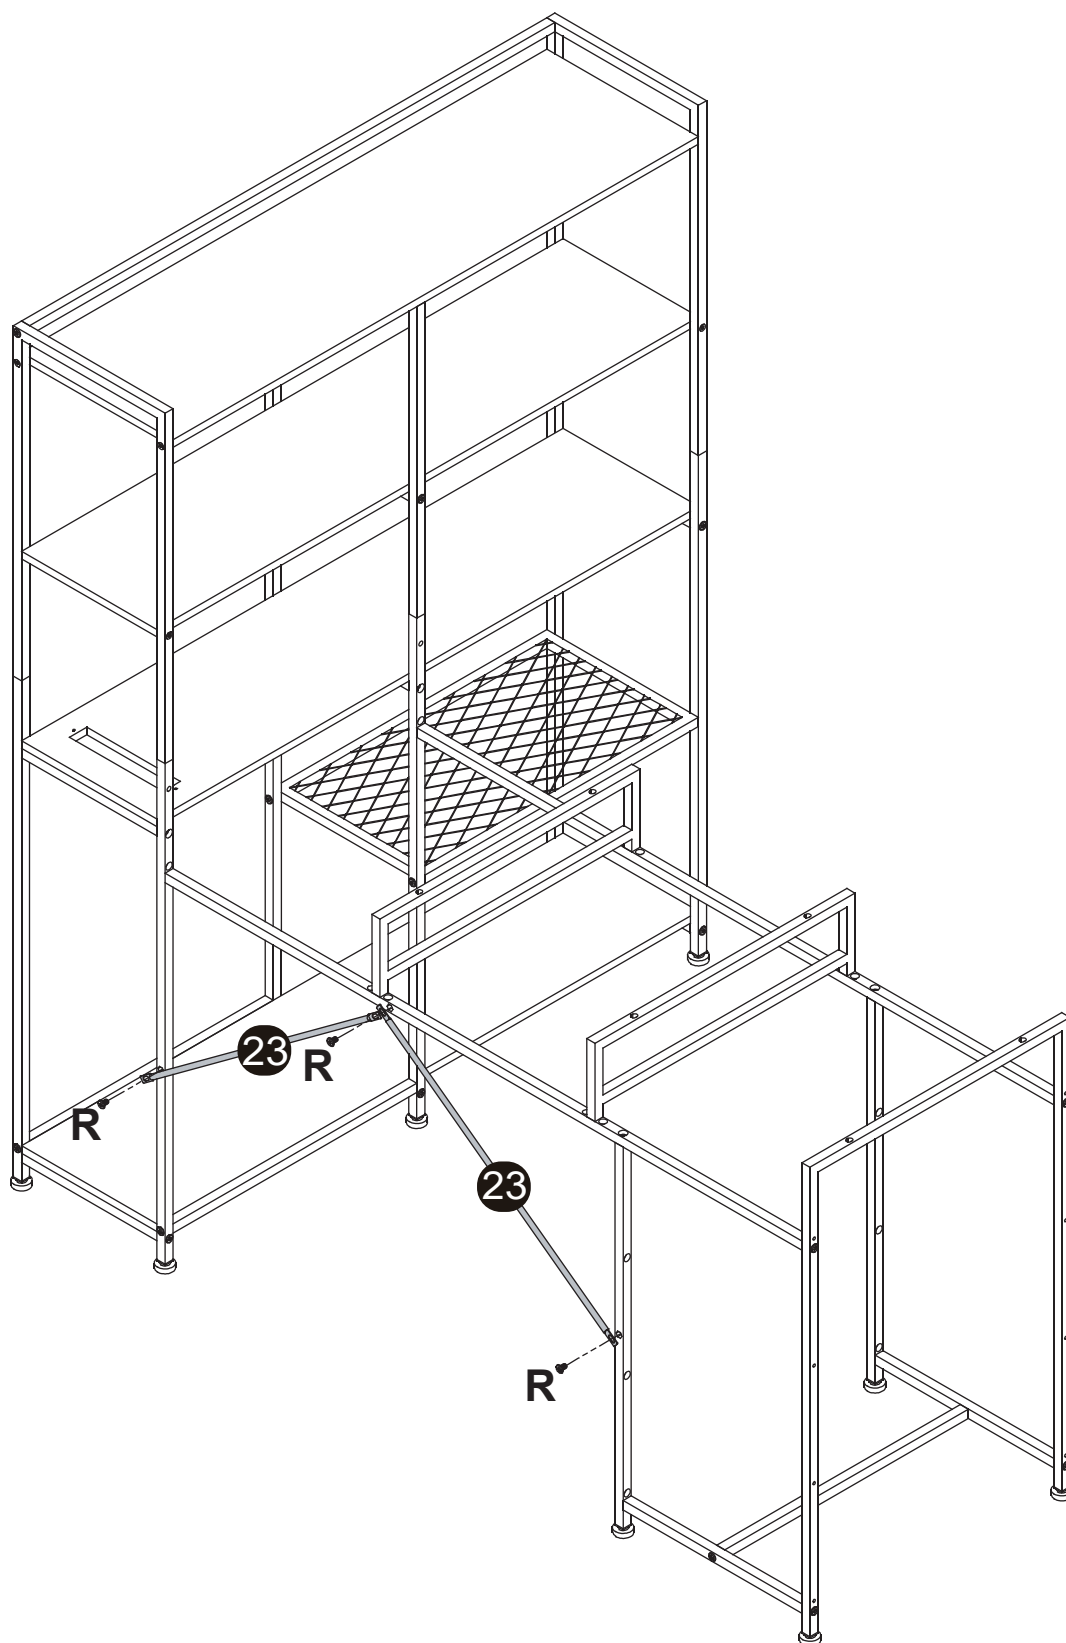


R M6x16mm




X3

Step13

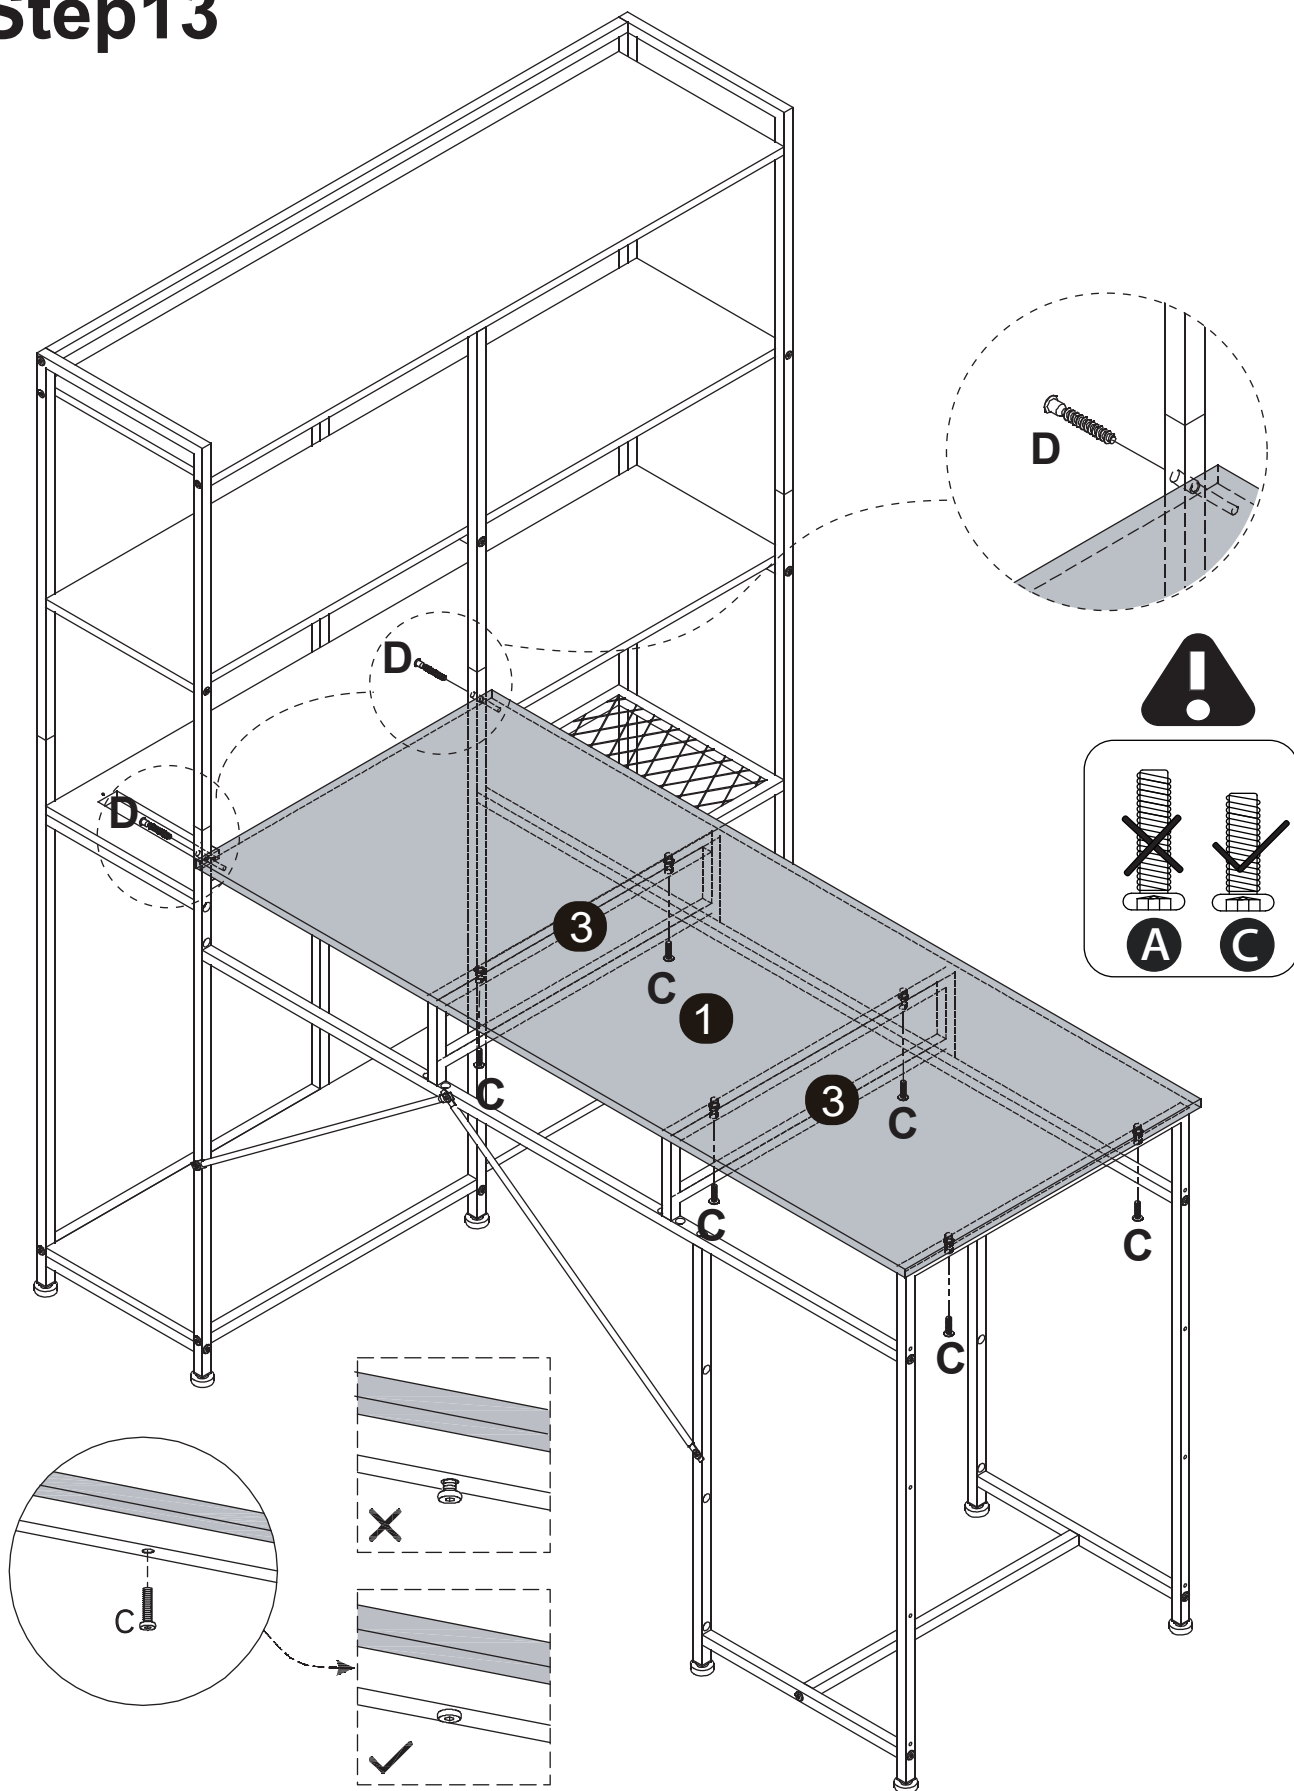

As shown in the picture, please tighten the screws after aligning the desktop.

C M6x23mm





X6

D M6.3x40mm



X2



Step14

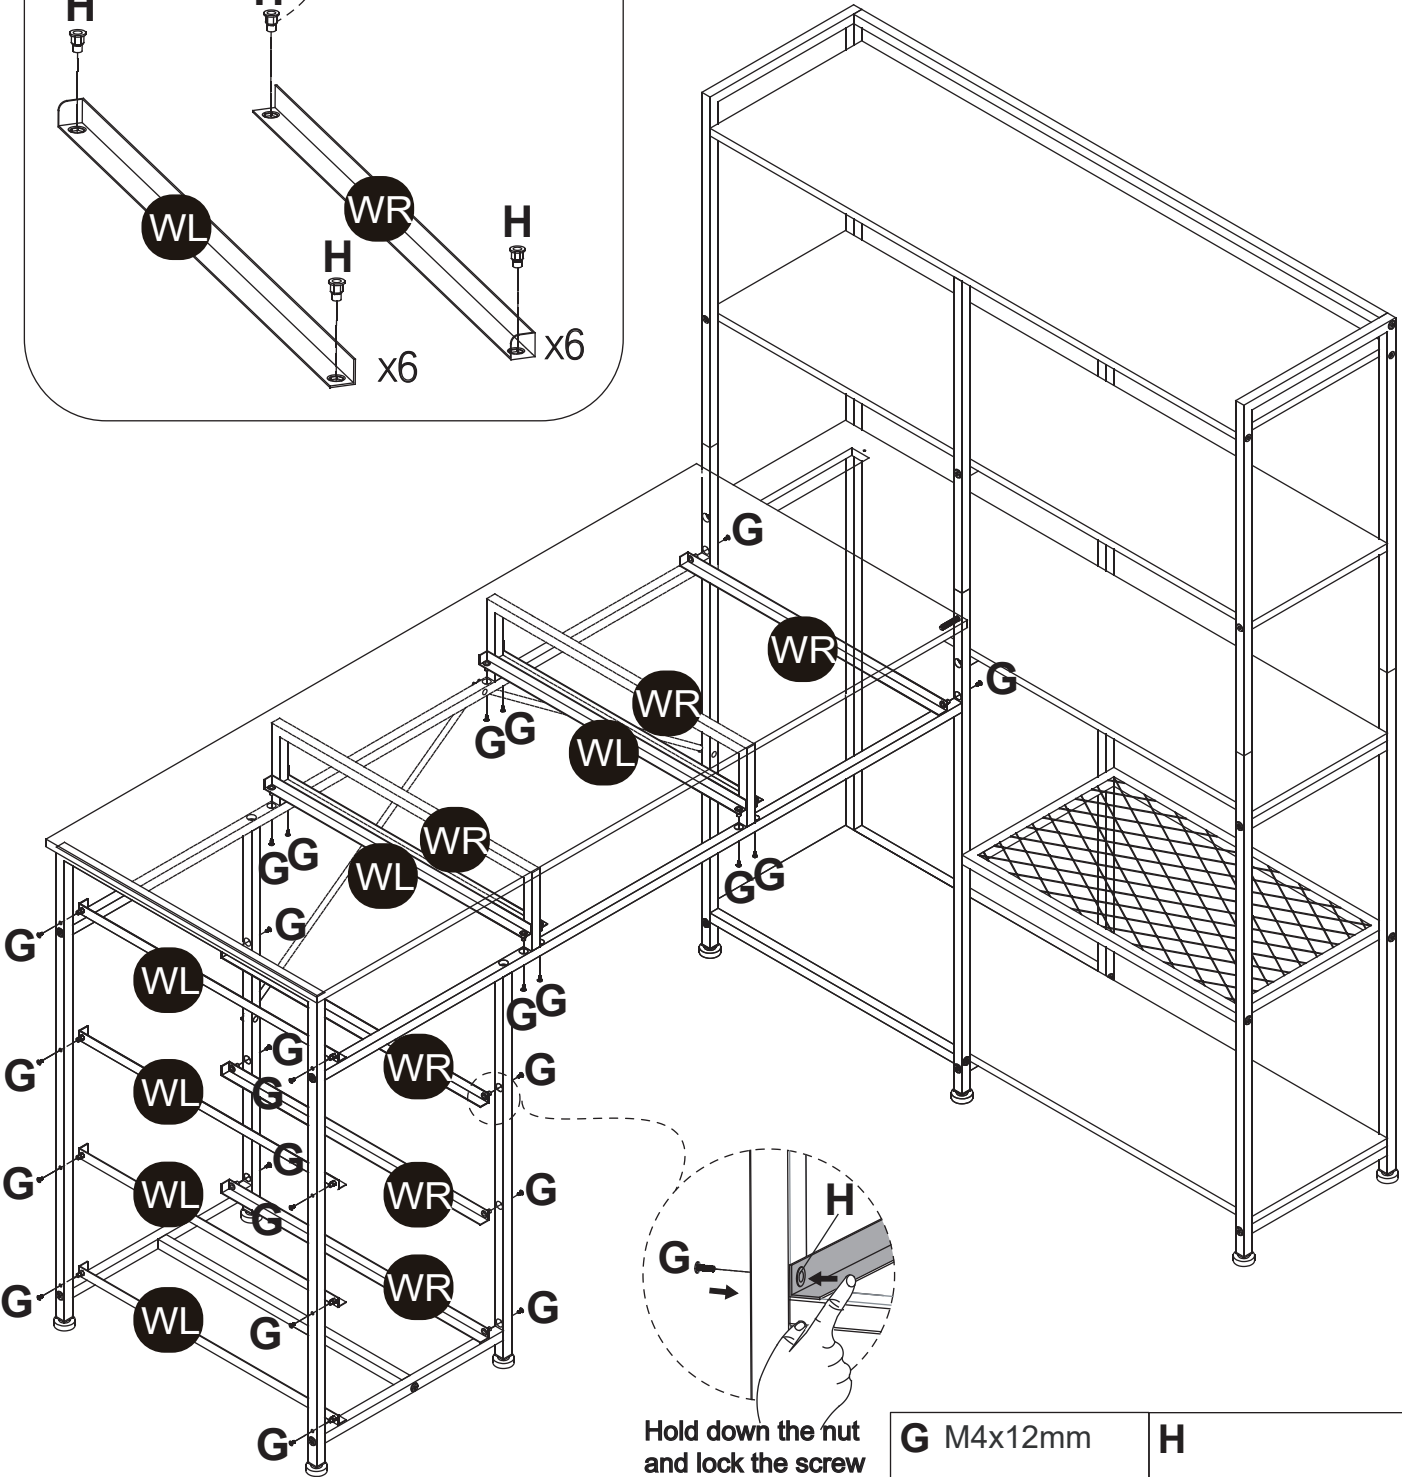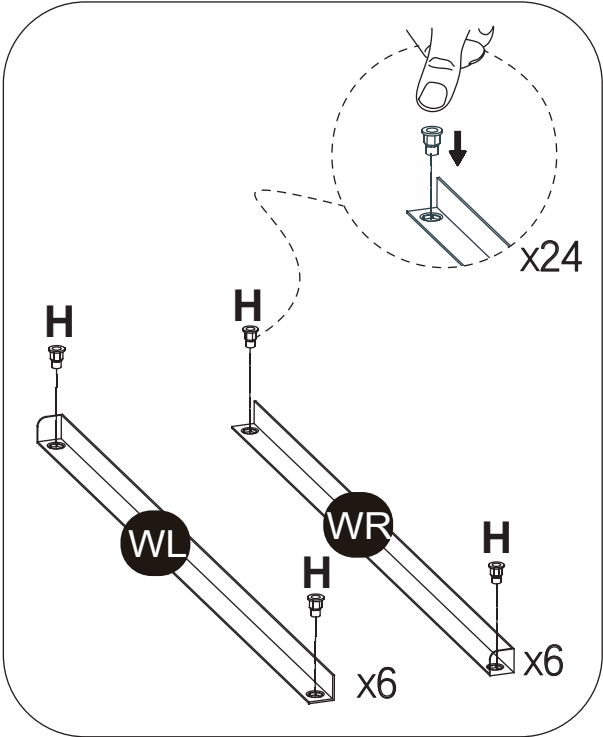

Hold down the nut
and lock the screw

G M4x12mm	H
	
X24	X24

Step15

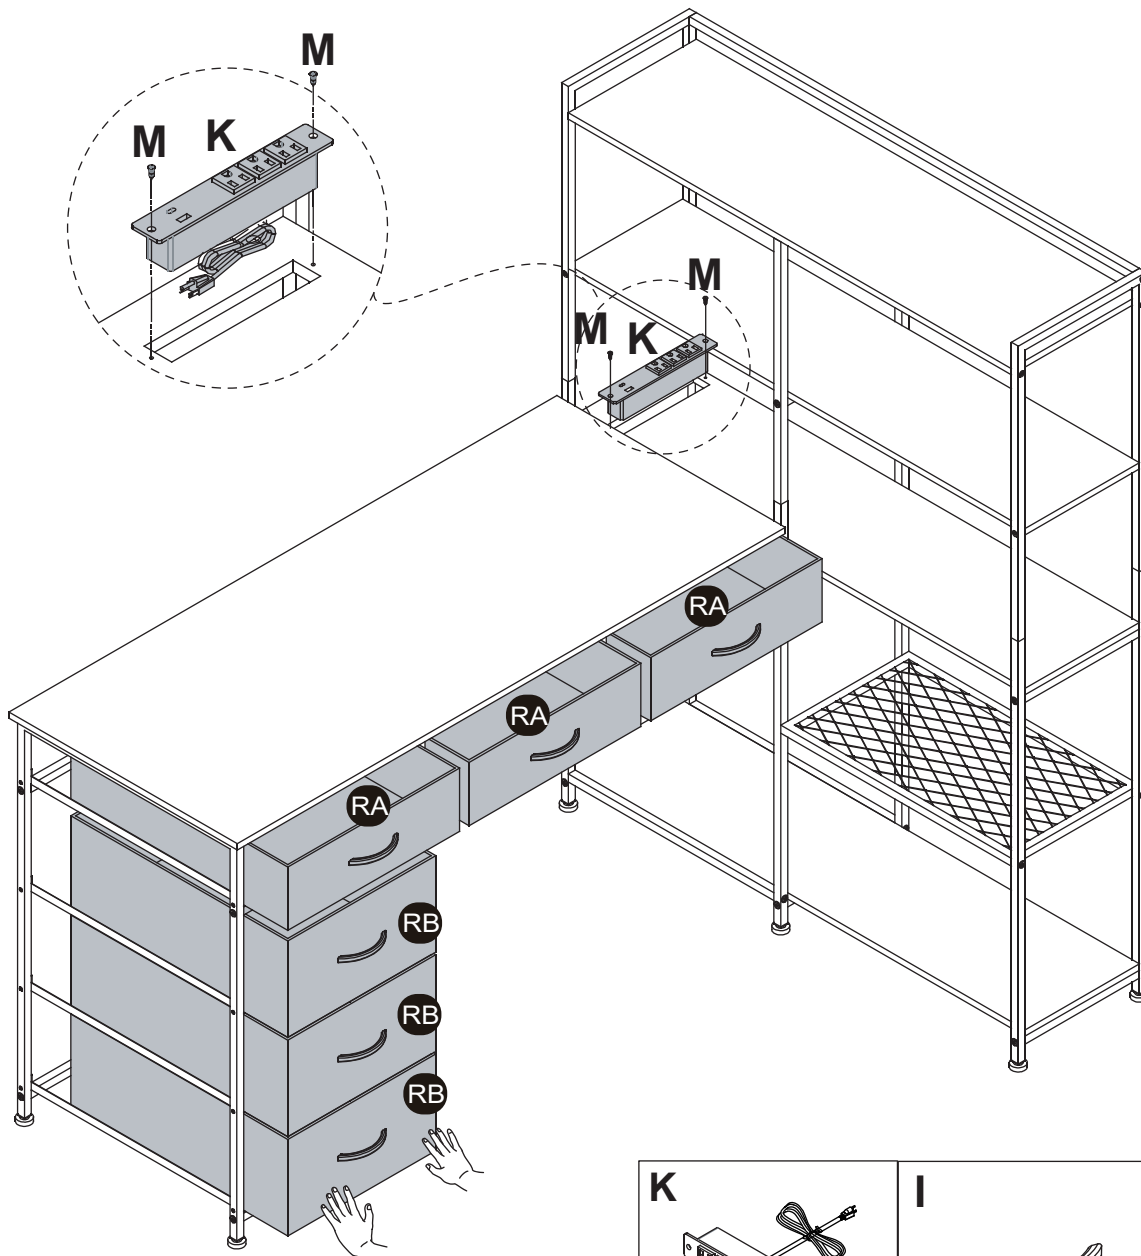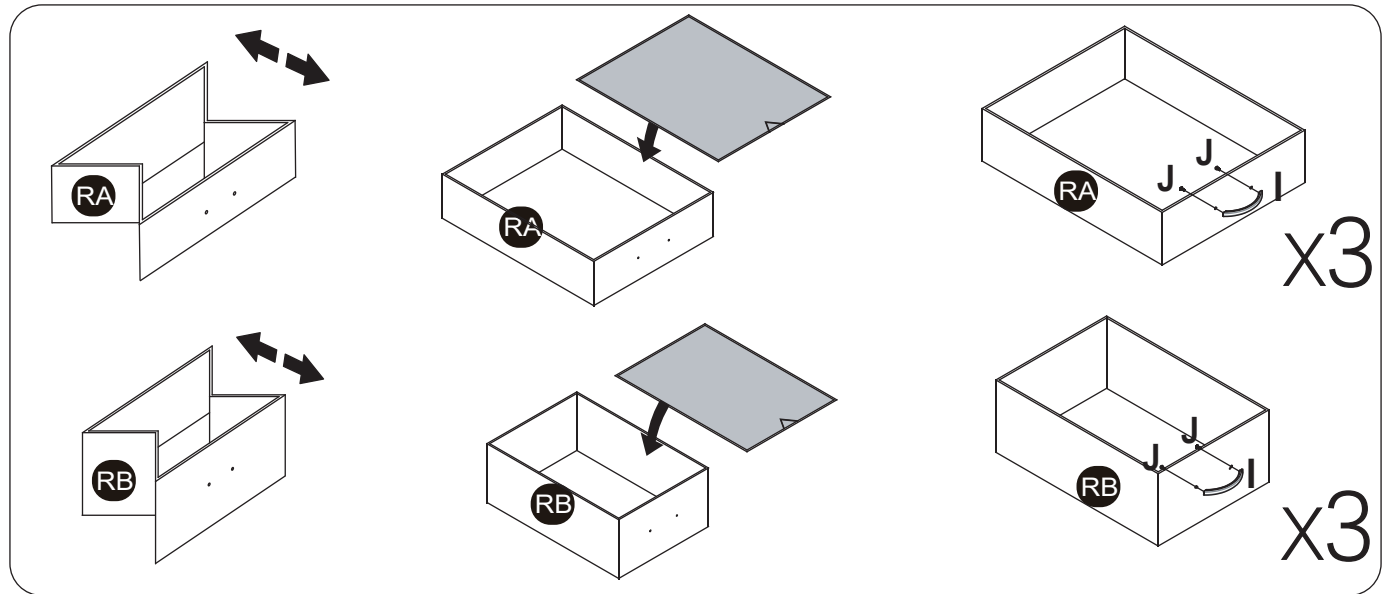


M M3x10mm




X2

J M4x10mm



X12

K

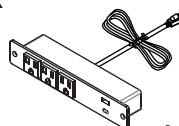


X1



I




X6

Step16

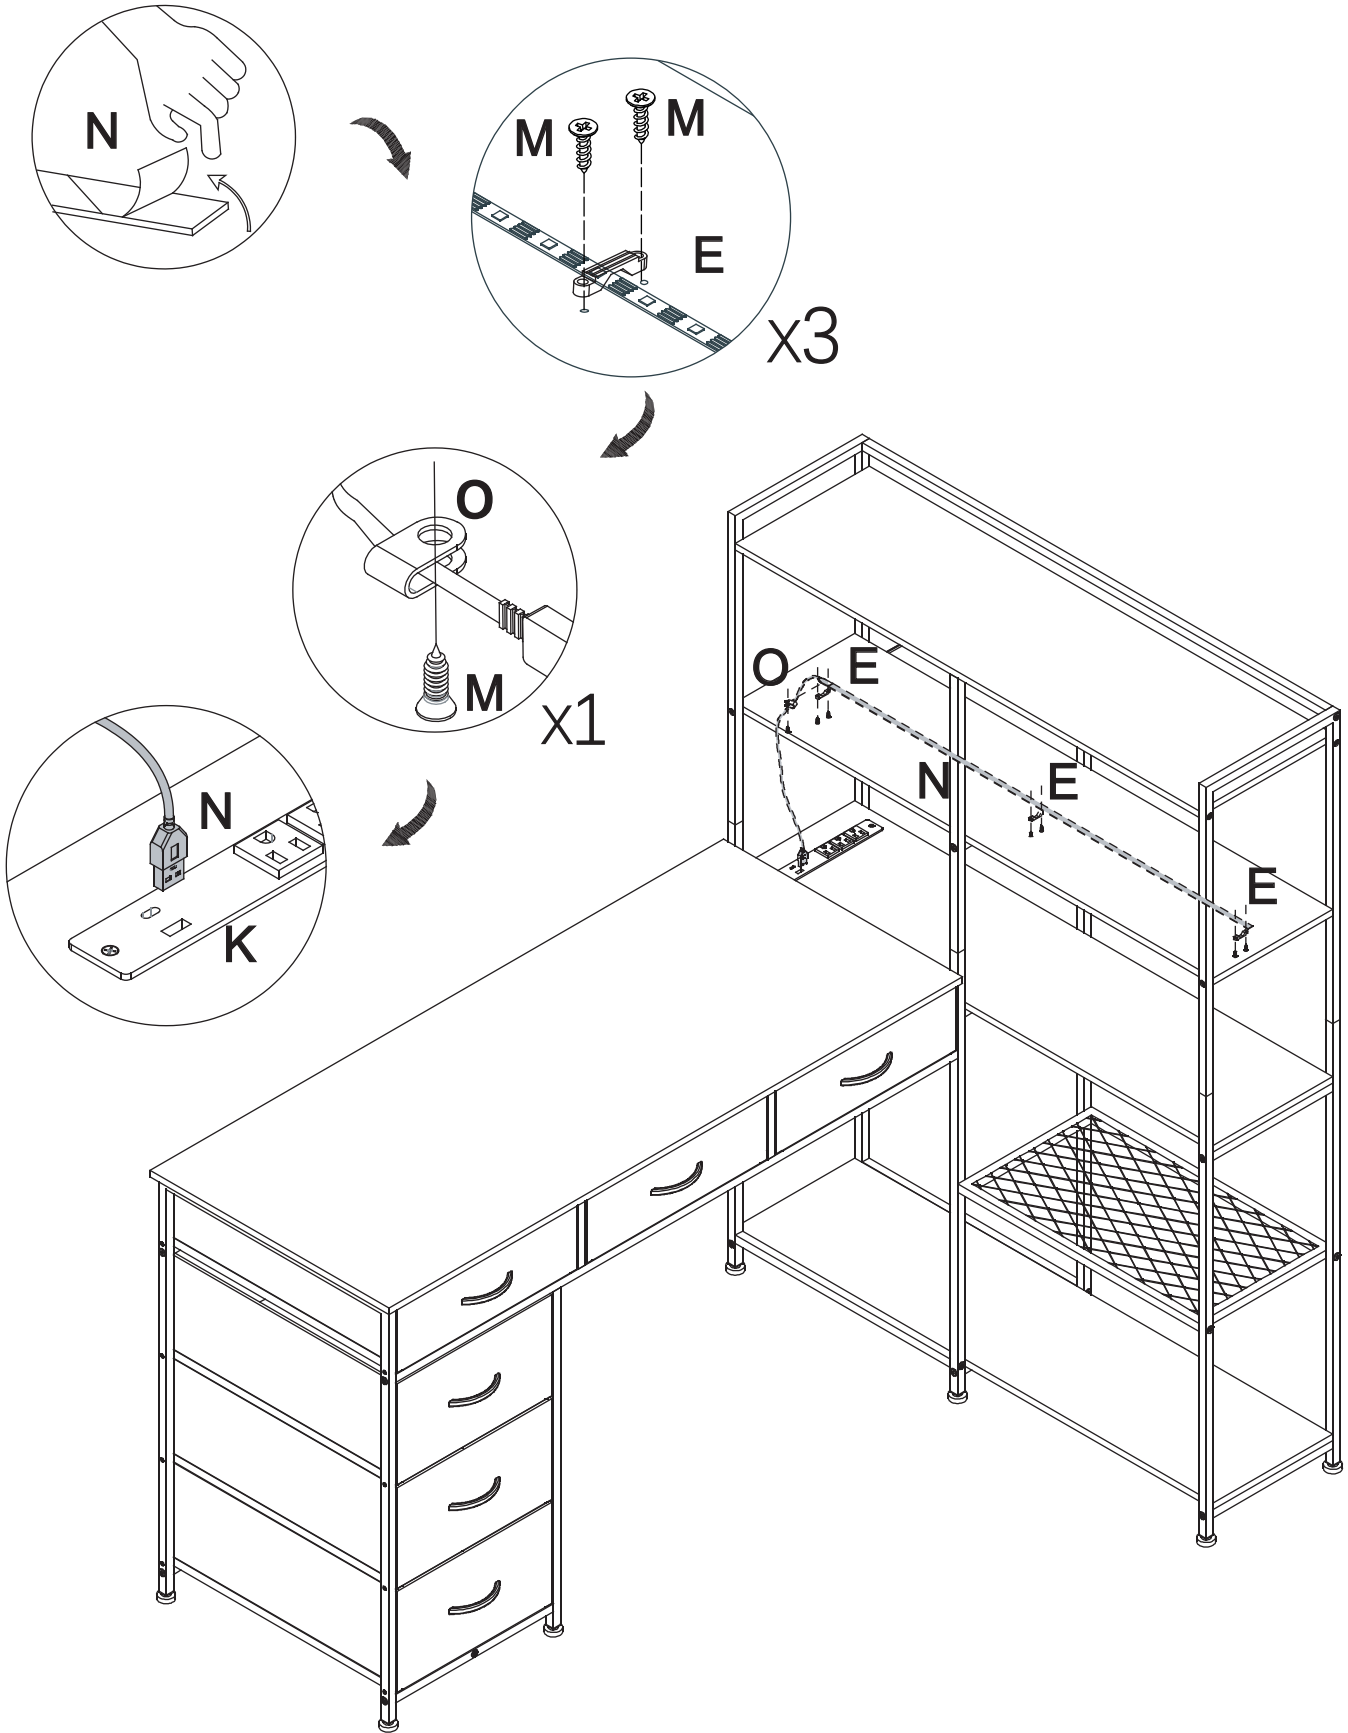


O  X1	E  X3	N  X1	M M3x10mm  X7
---	---	---	---



Step17

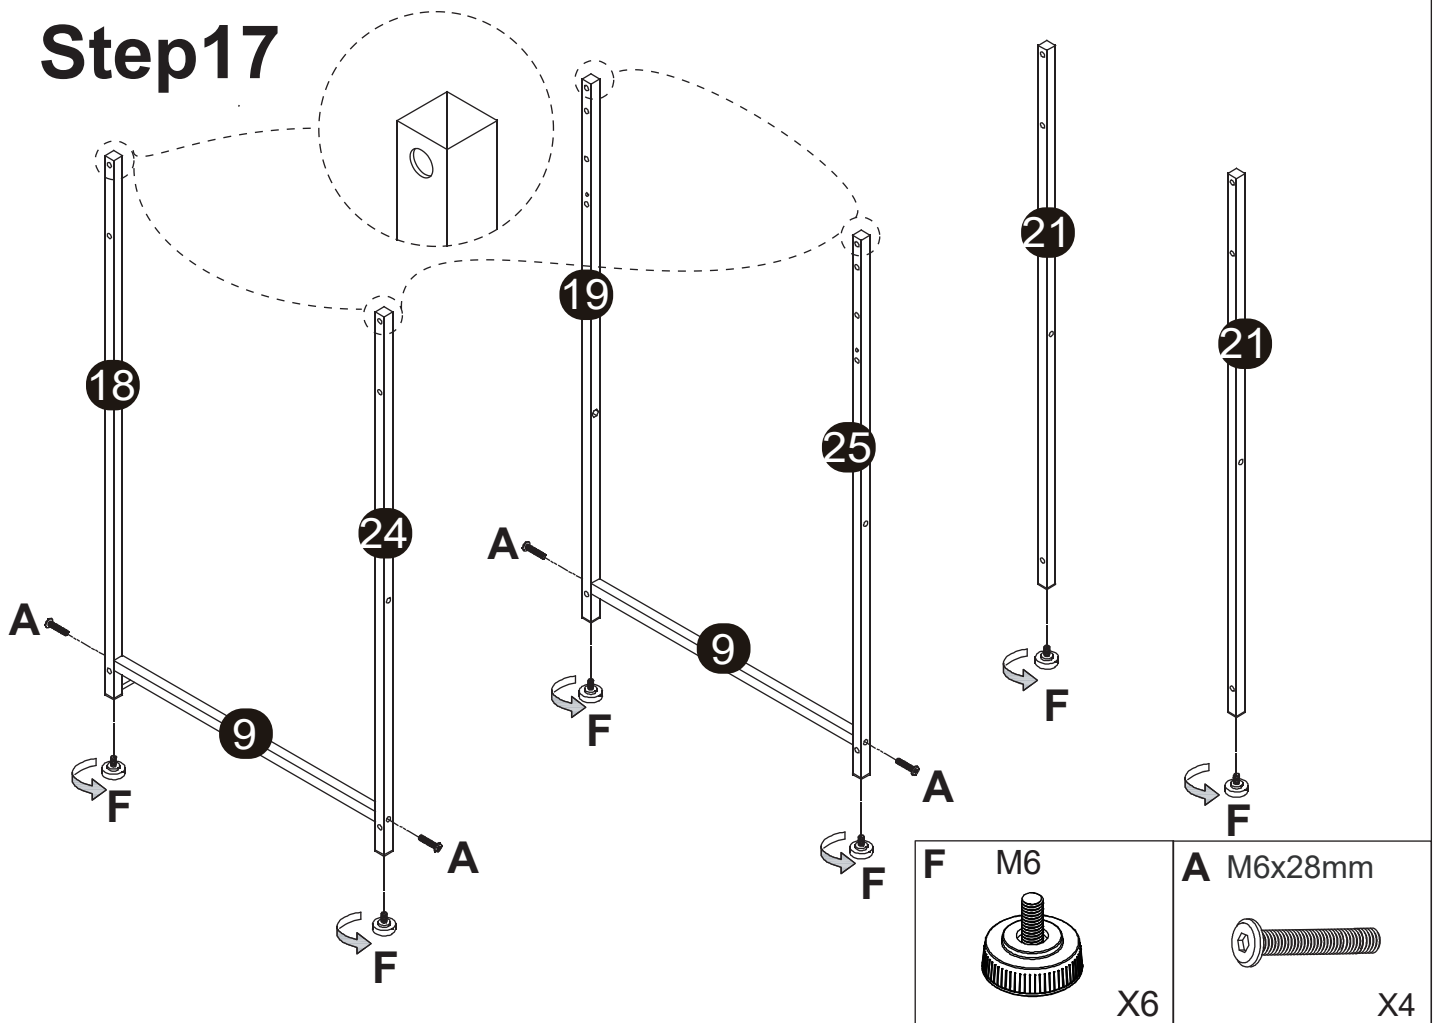

Step18

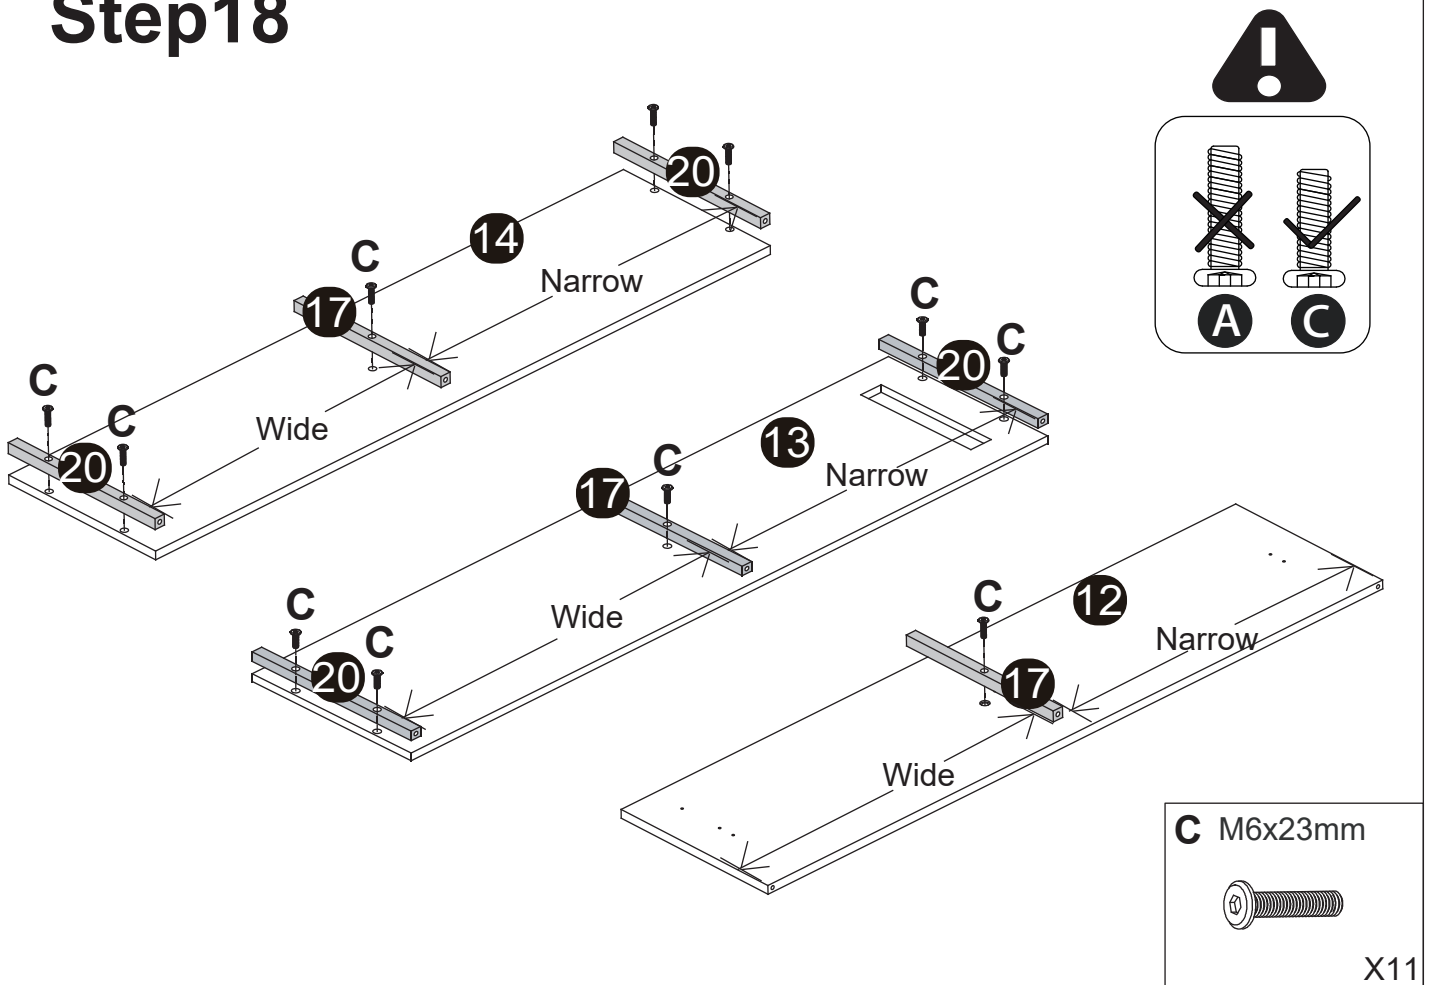

Step19

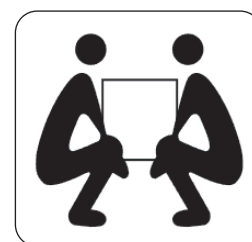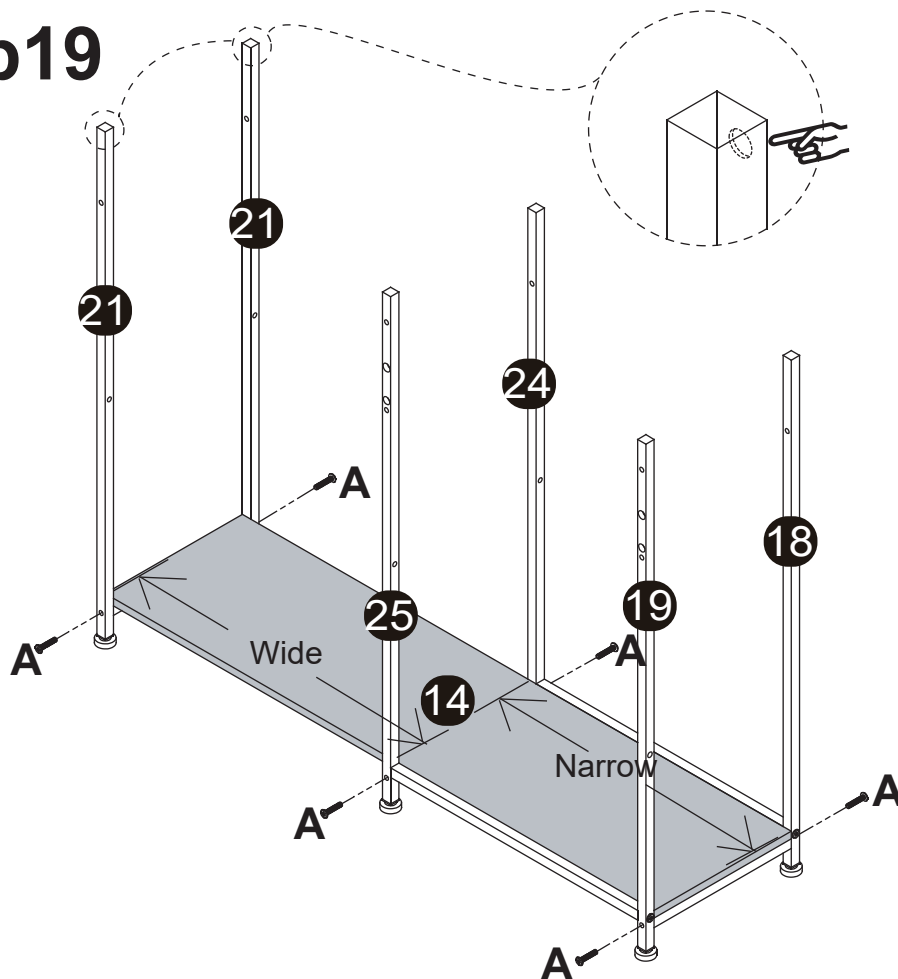


Need Two or More
People To Complete

A M6x28mm




X6

Step20

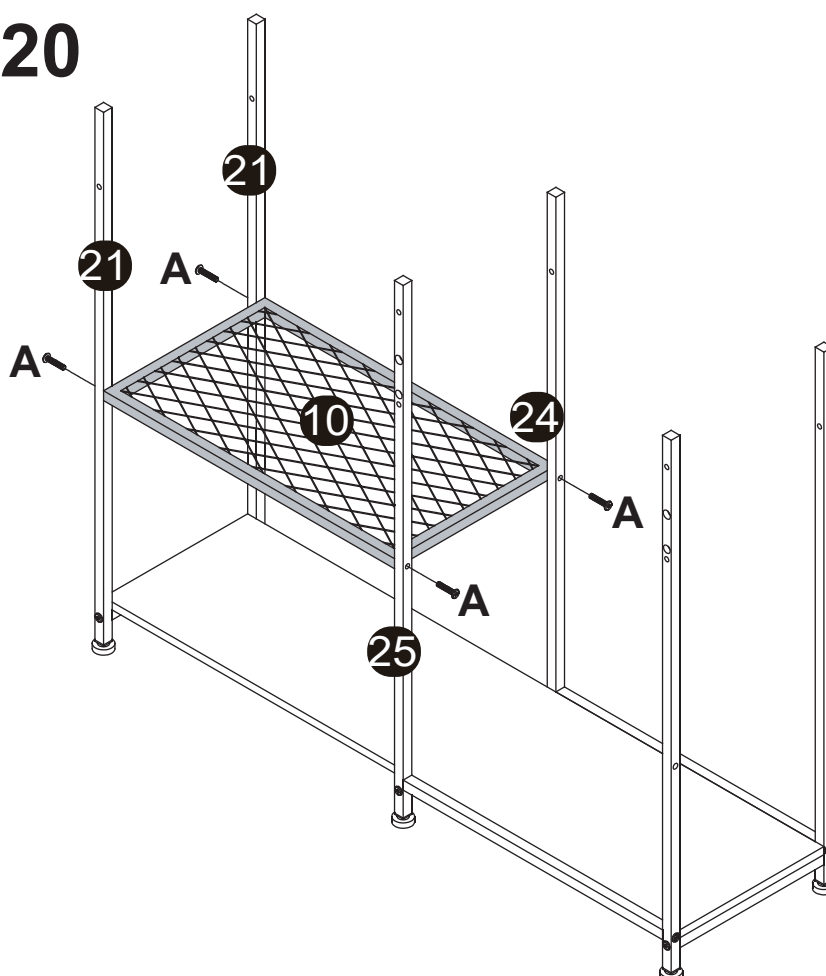

A M6x28mm




X4


Step21



Need Two or More
People To Complete





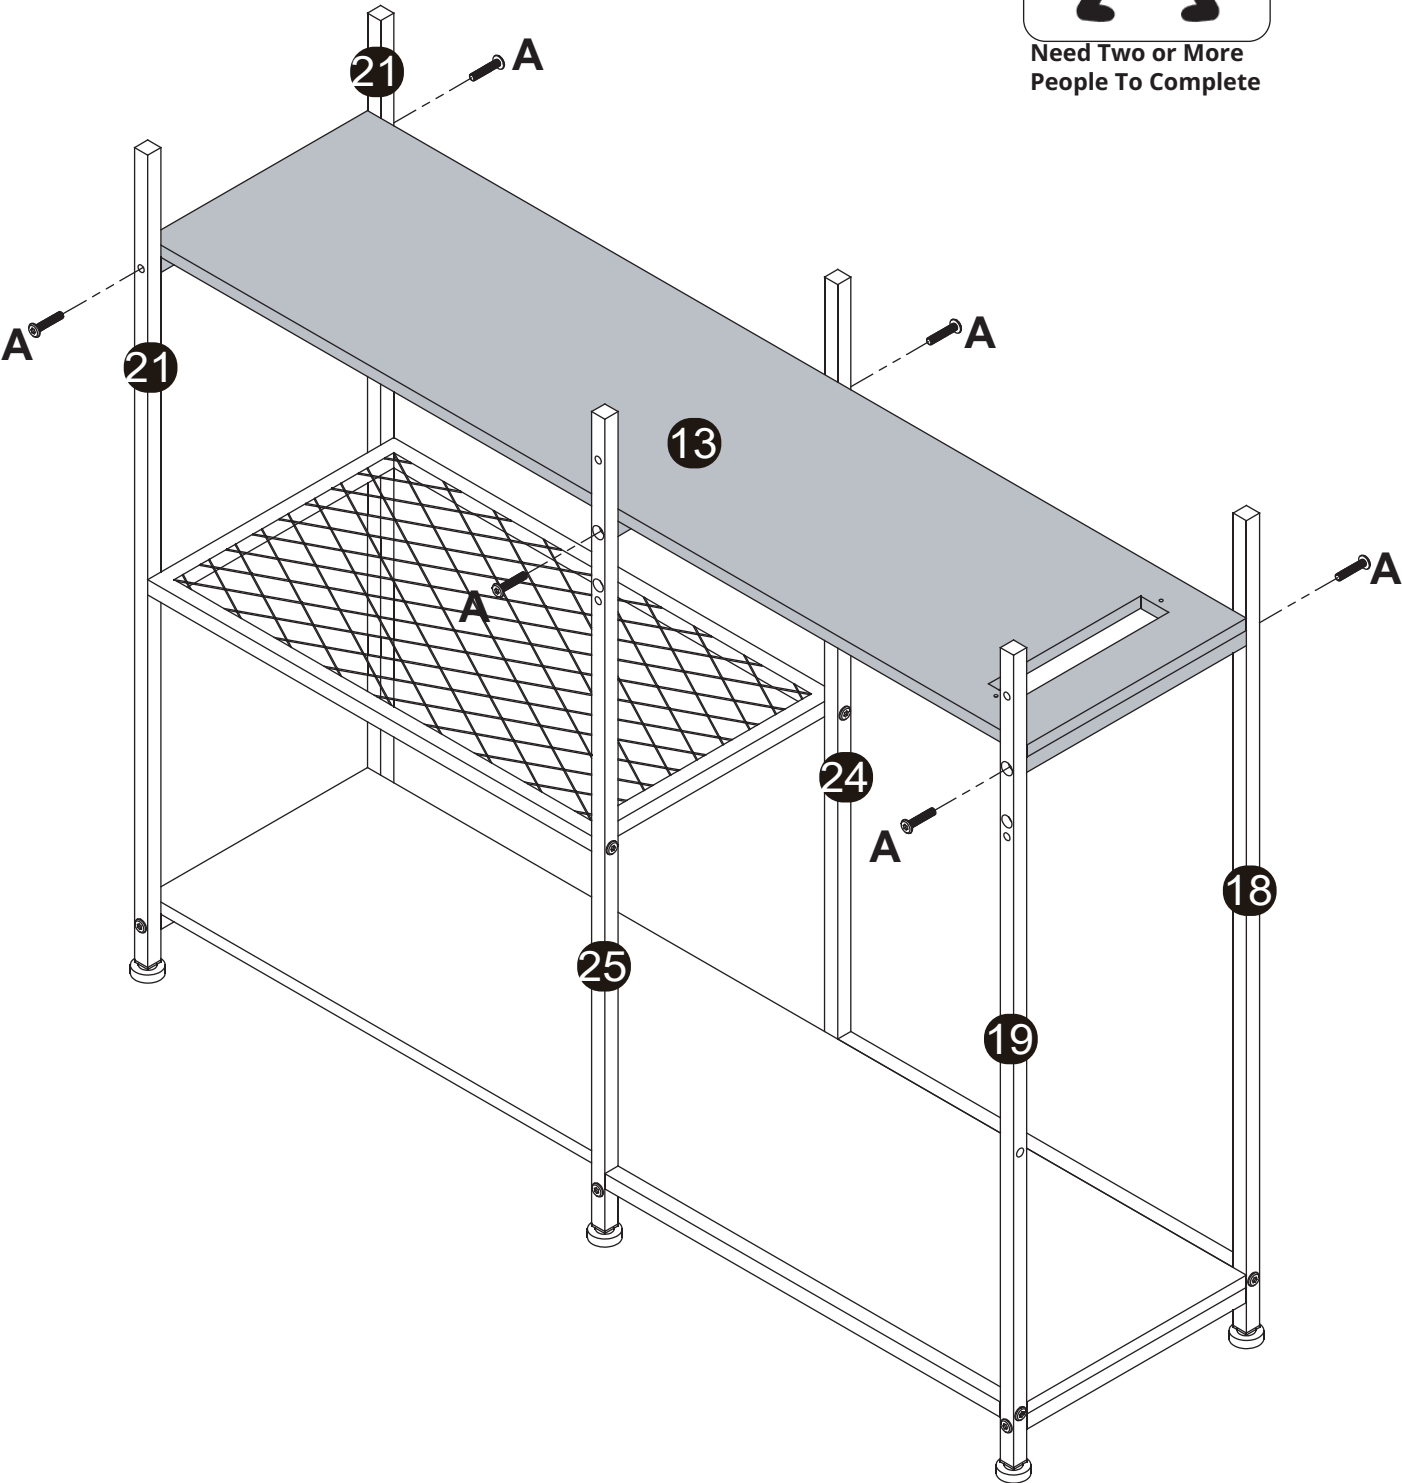



A M6x28mm




X6

Step22

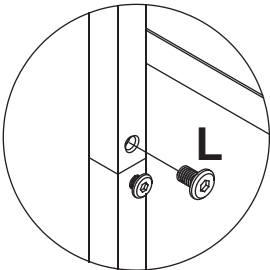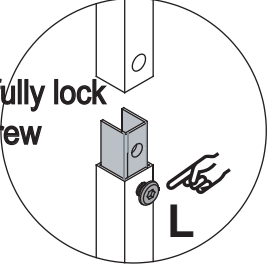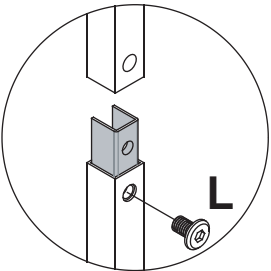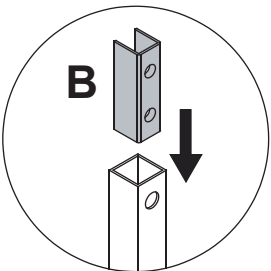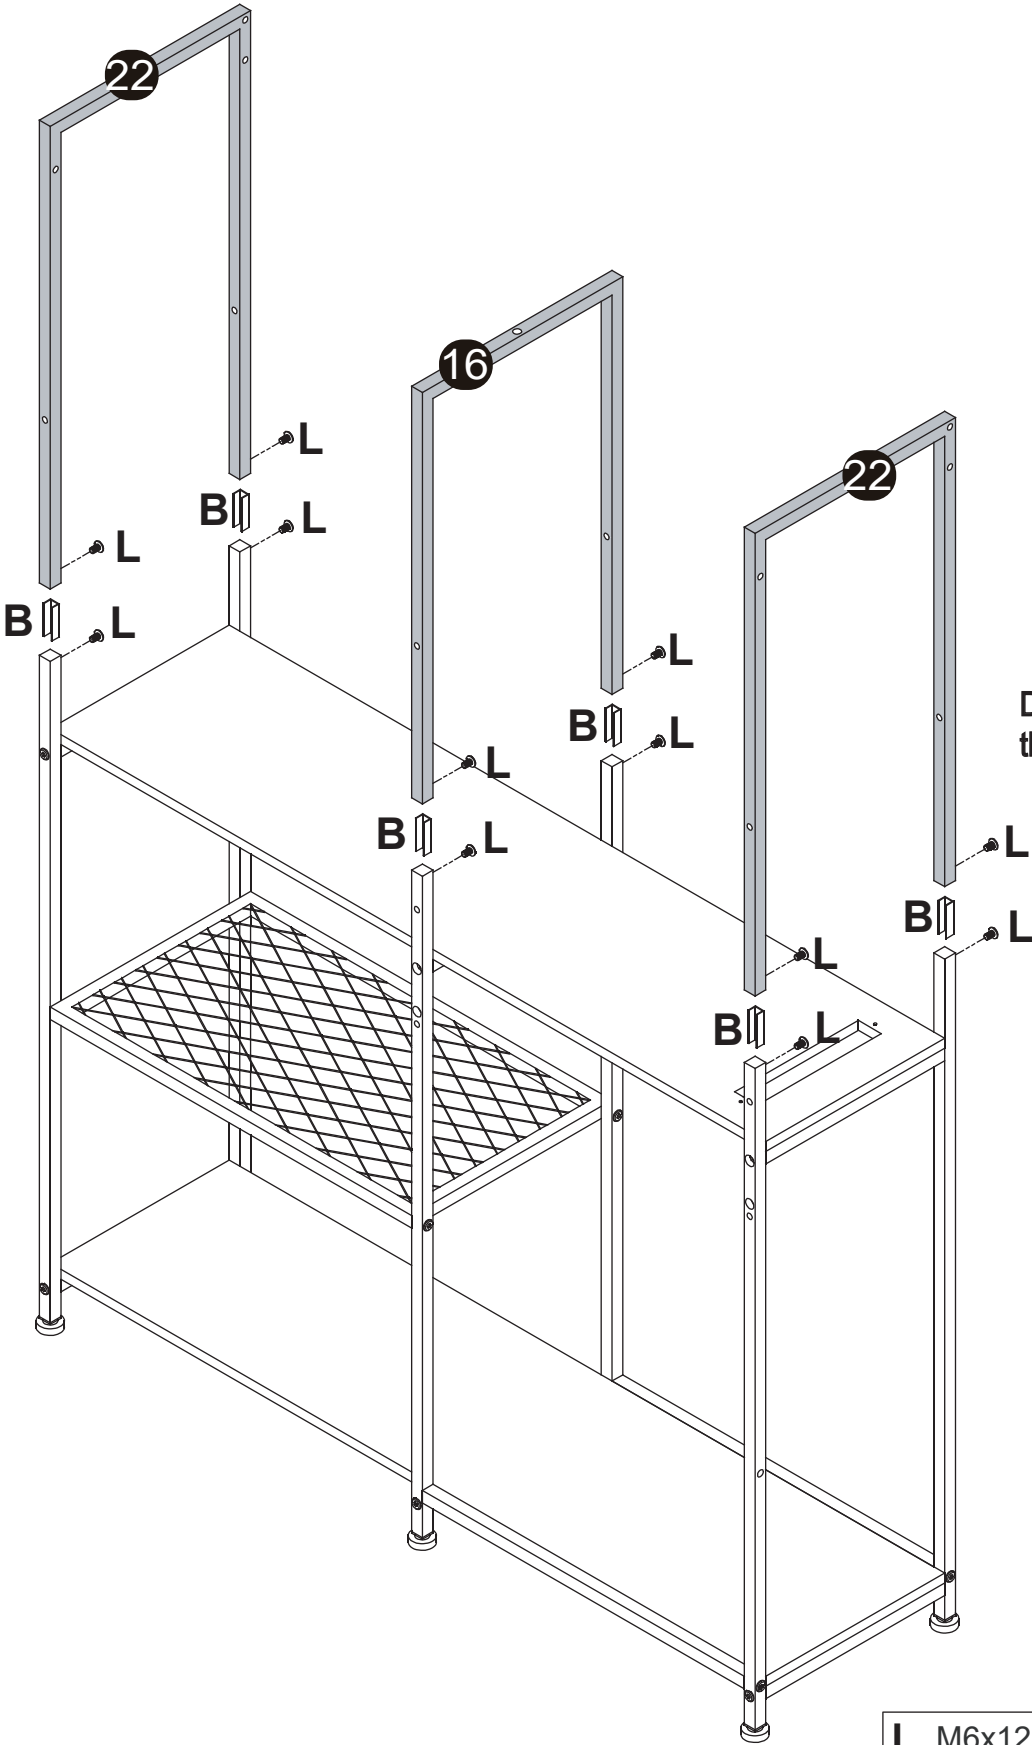

L M6x12mm	B H=40mm
	
X12	X6

Step23

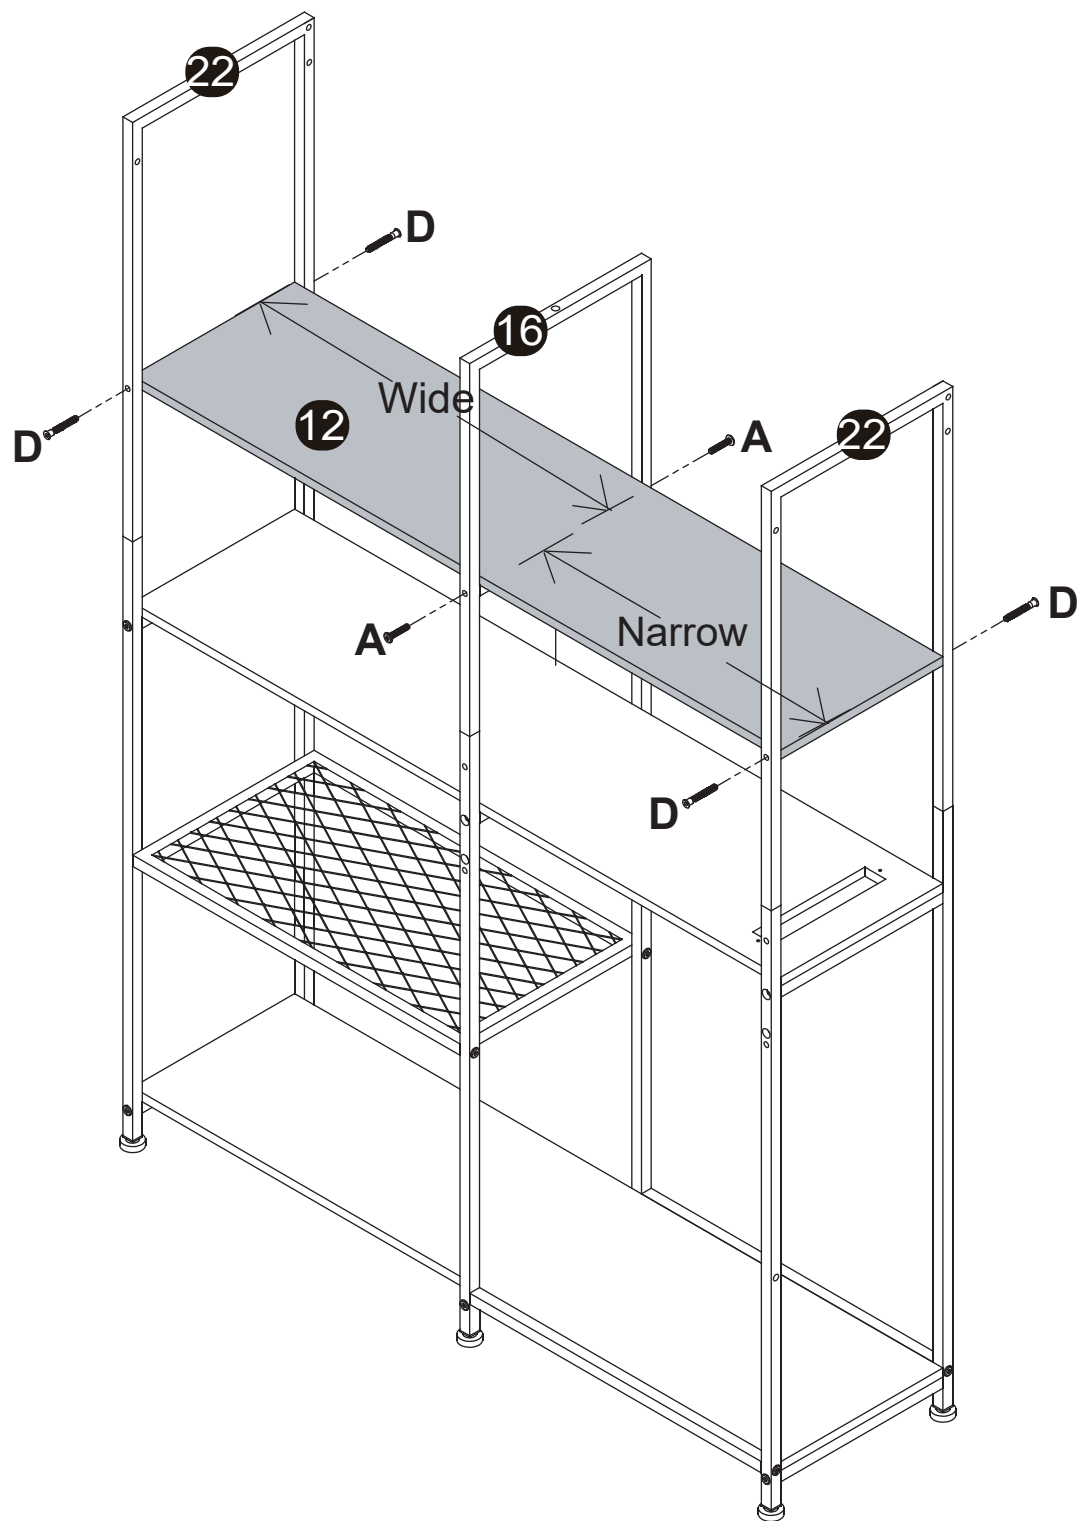

D M6.3x40mm




X4



A M6x28mm






X2

Step24

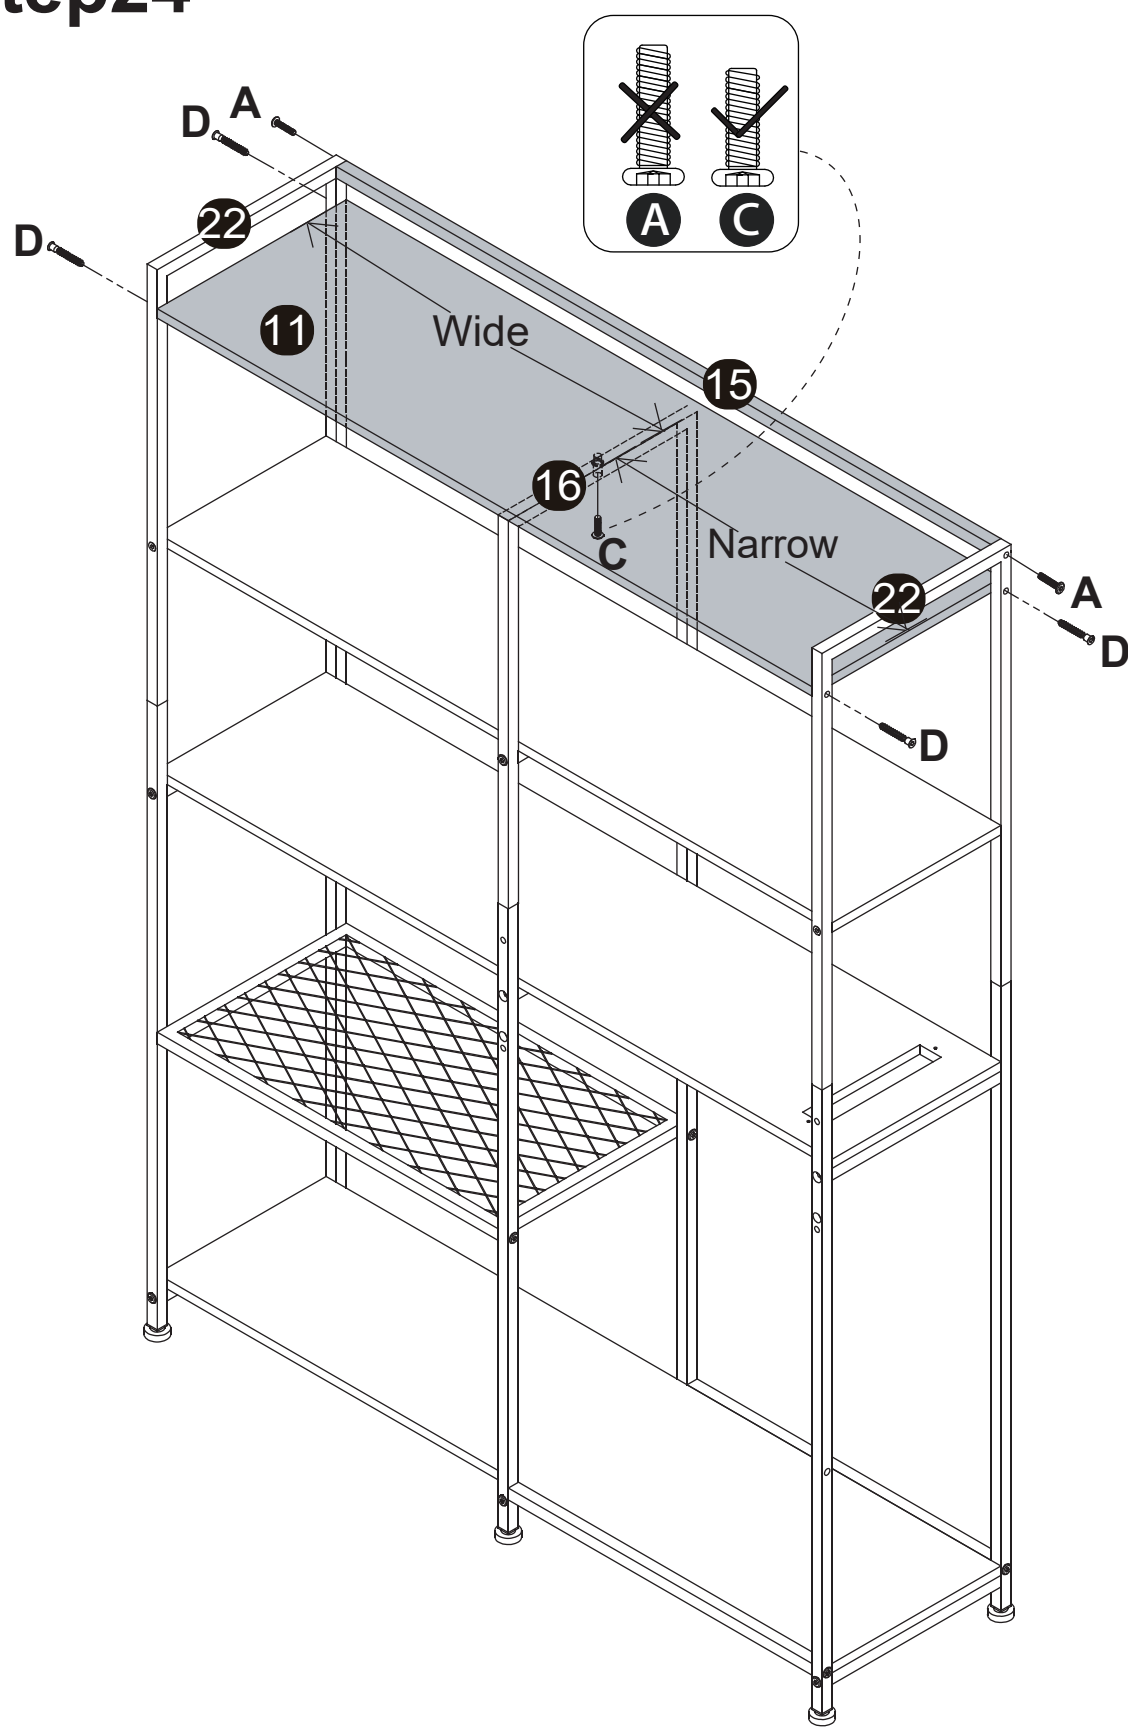




A M6x28mm  X2	C M6x23mm  X1	D M6.3x40mm  X4
---	---	---

Step25

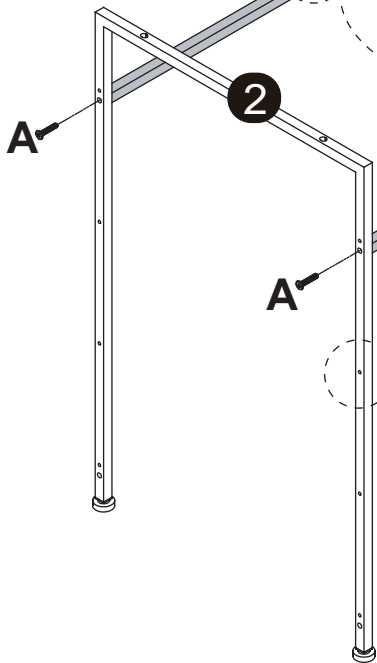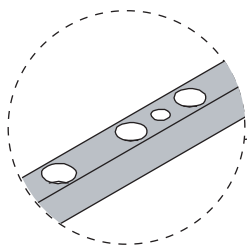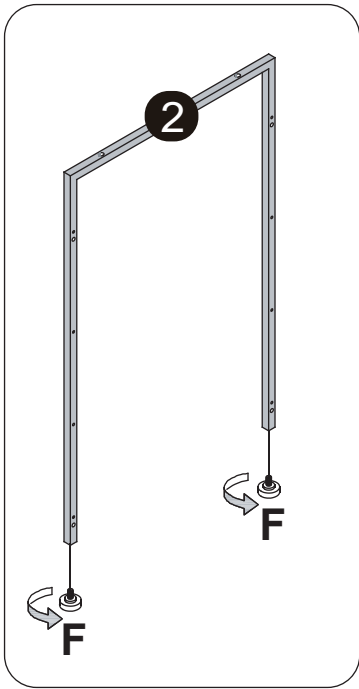


5

4

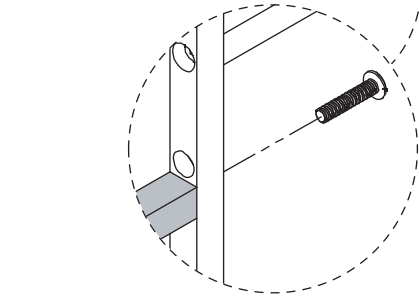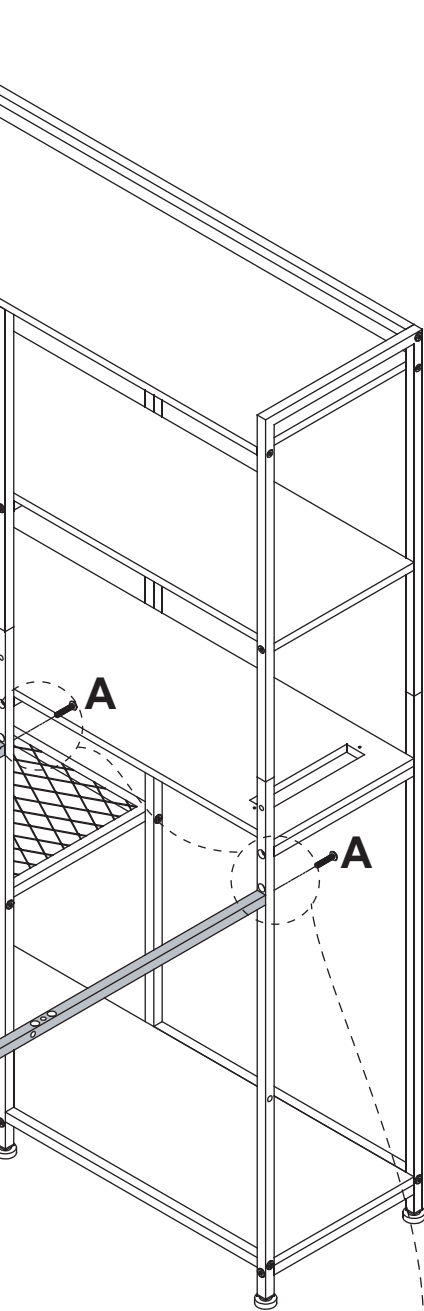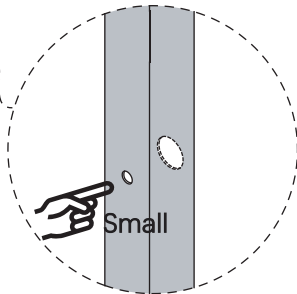


The large hole faces inside,
small hole faces outside!

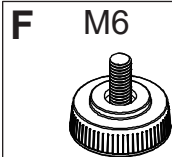





X2

A M6x28mm





X4


Step26

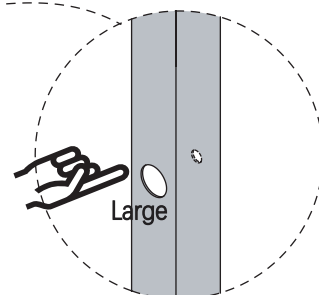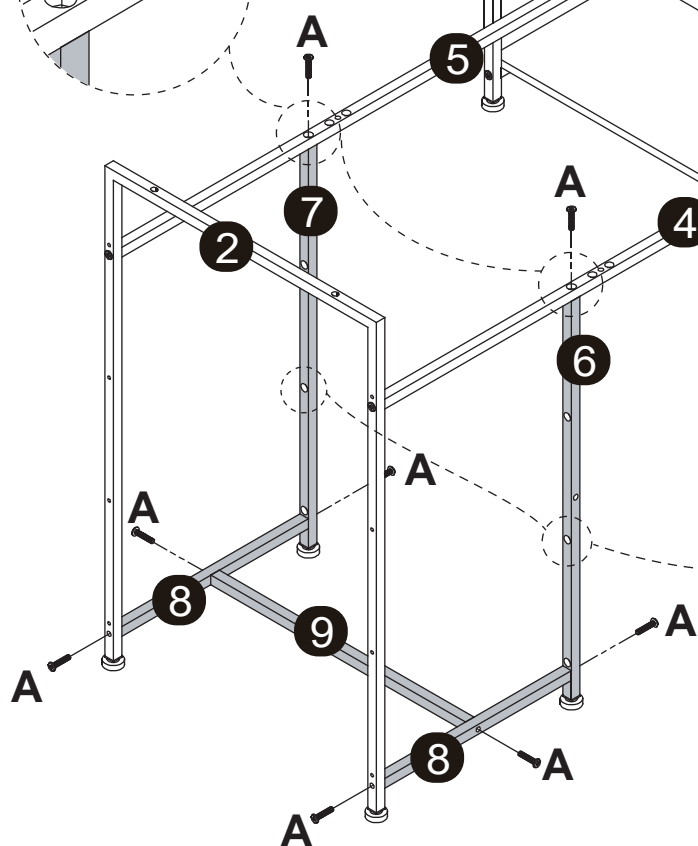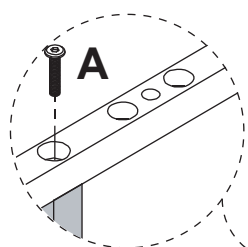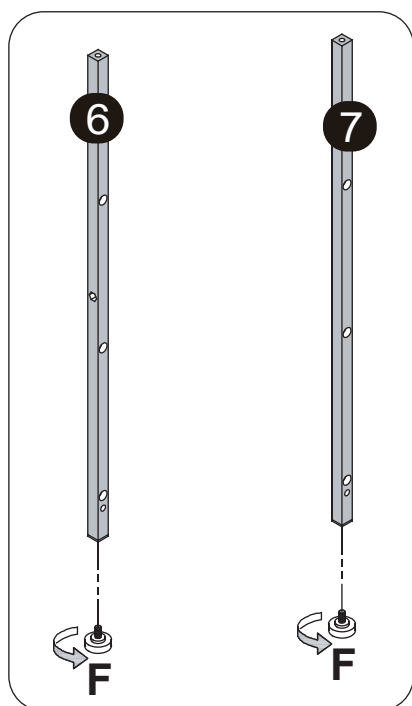


The large hole faces inside,
small hole faces outside!

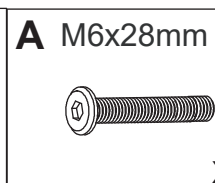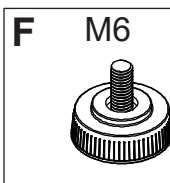

Step27

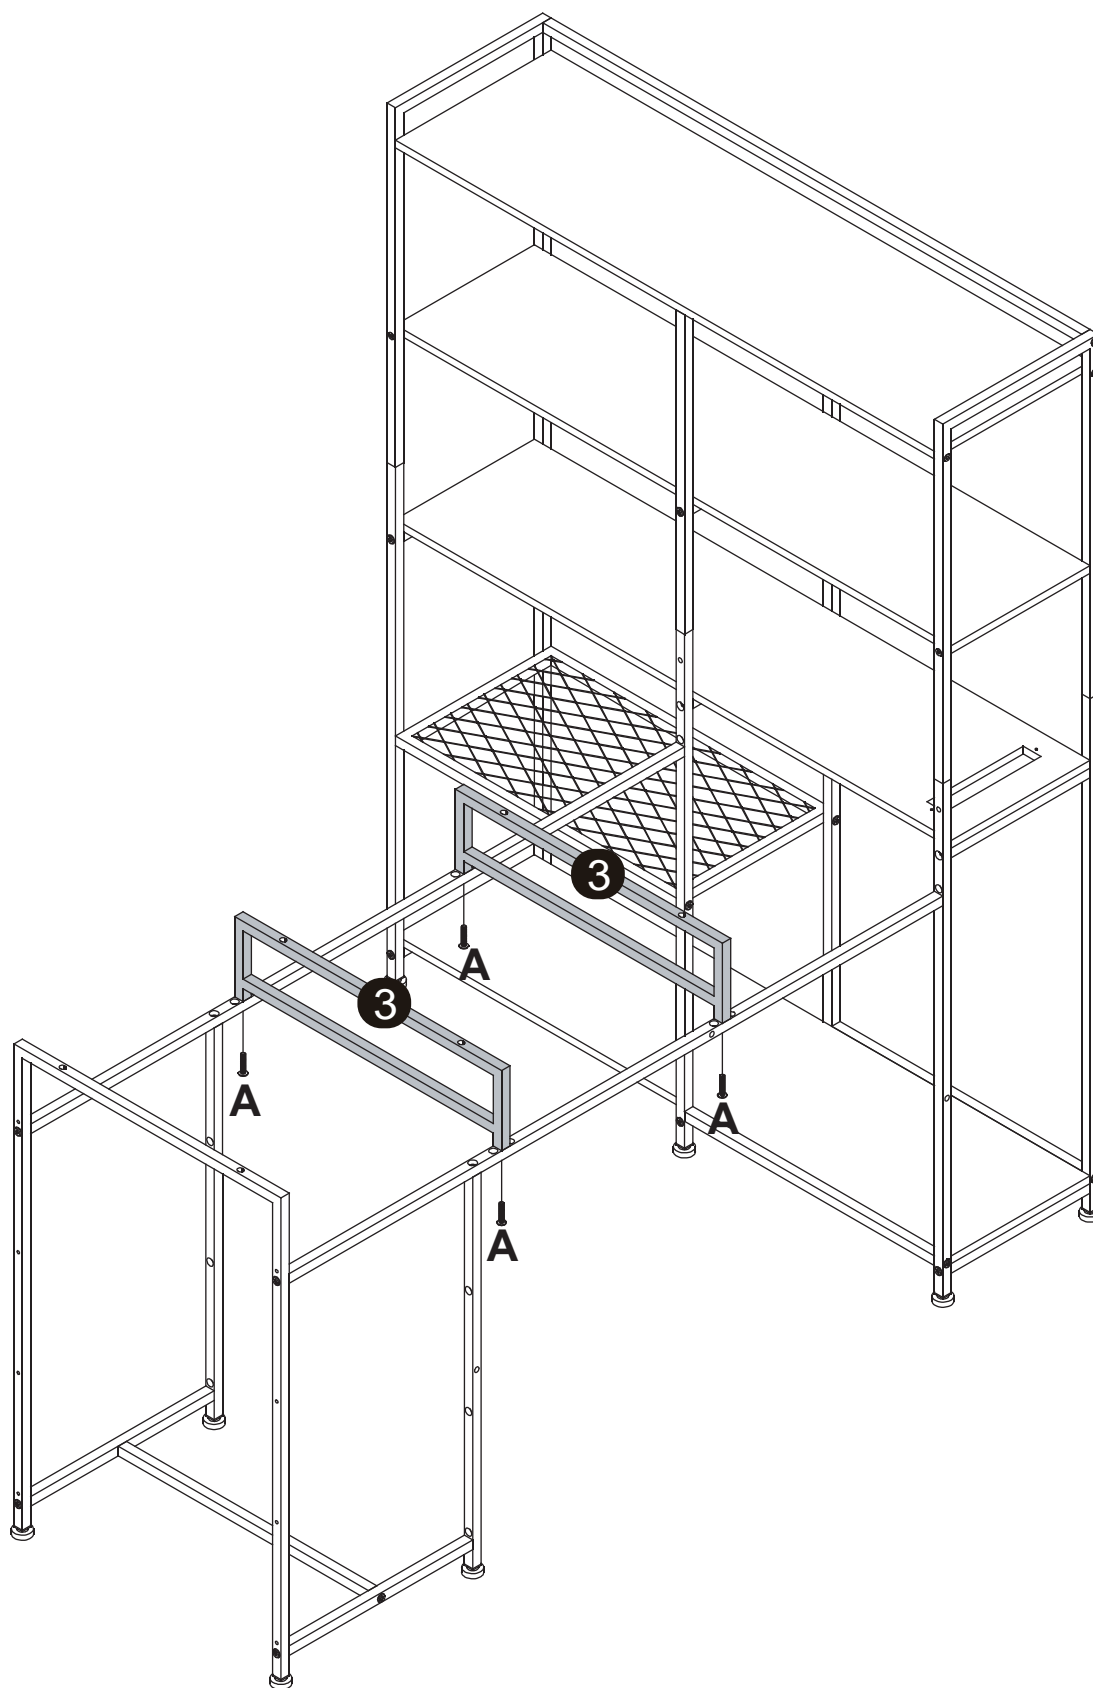


A M6x28mm




X4

Step28






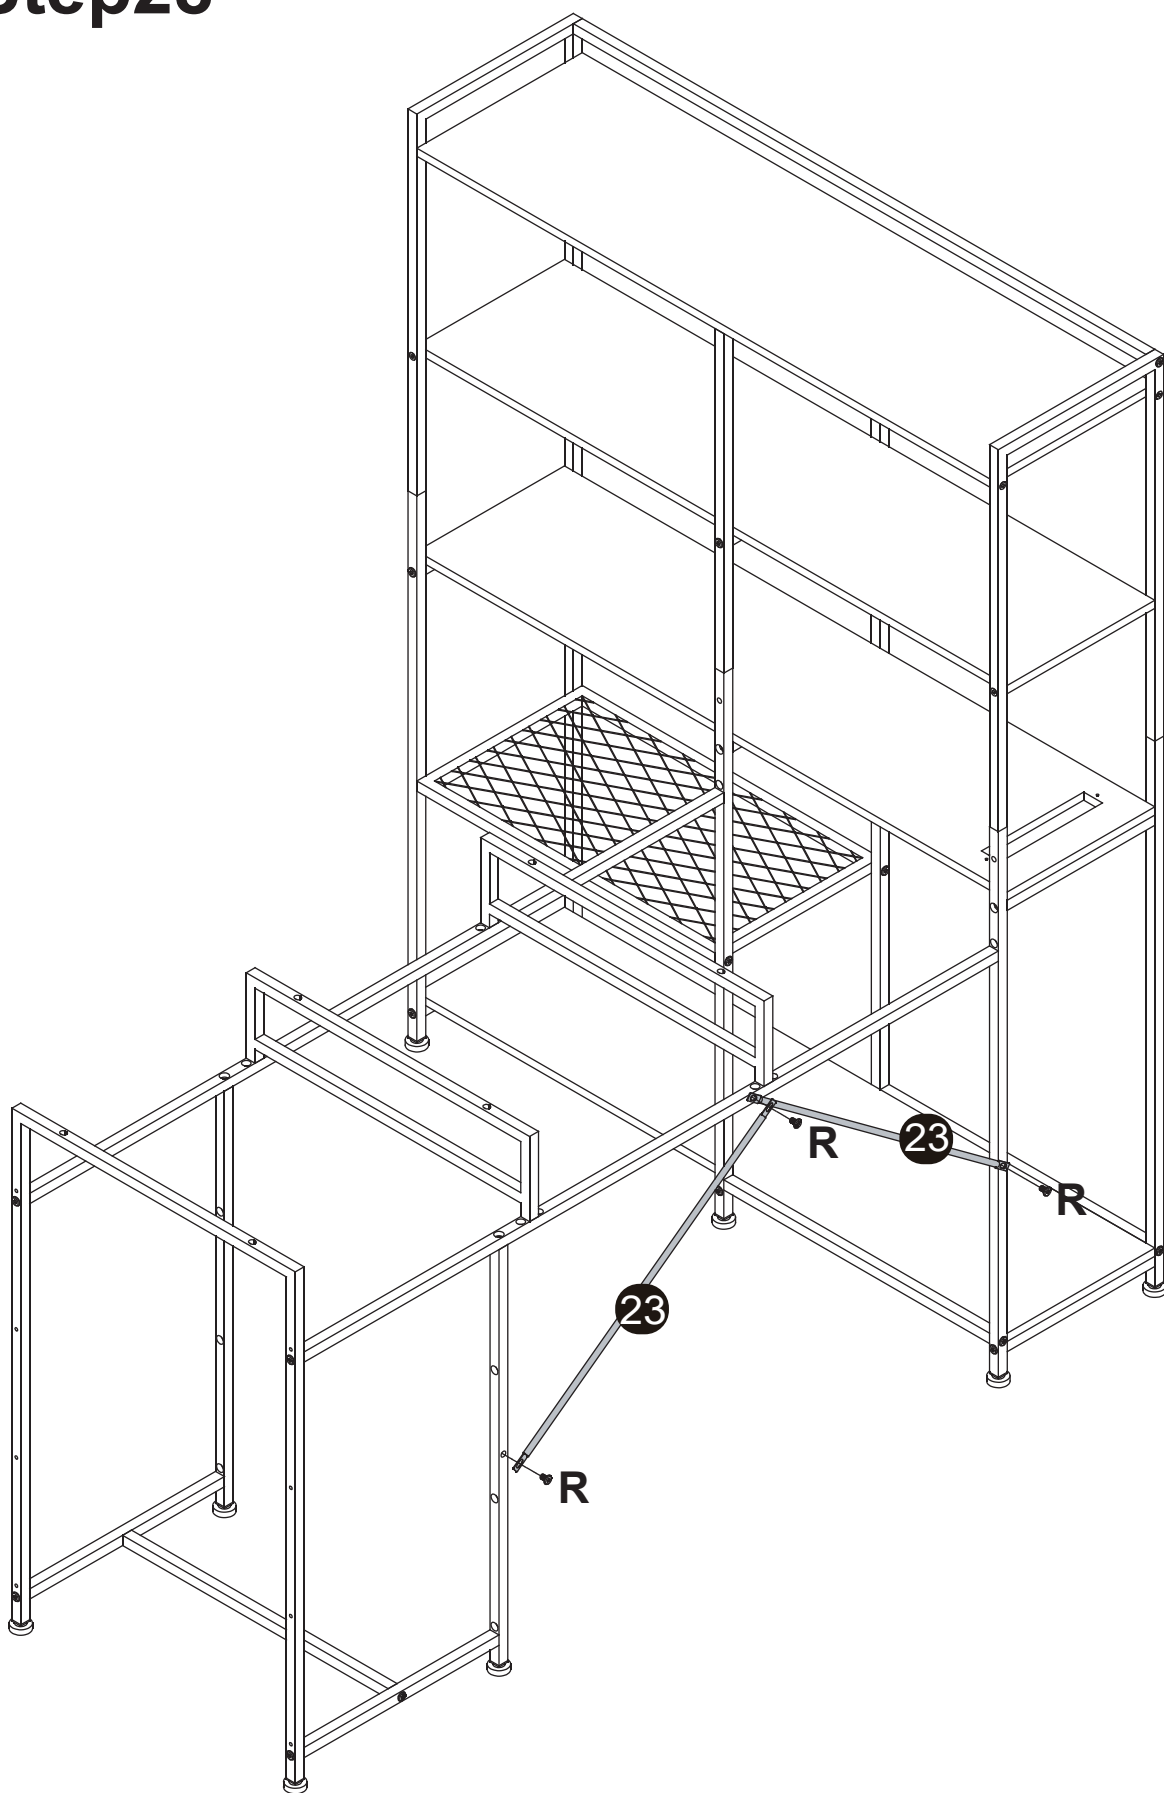


R M6x16mm




X3

Step29

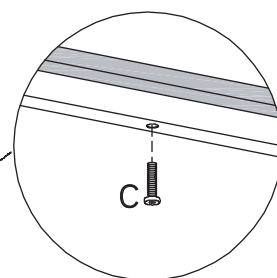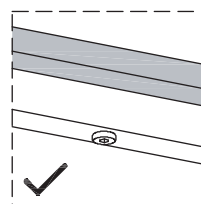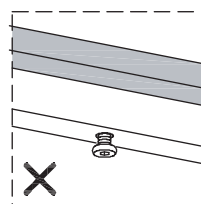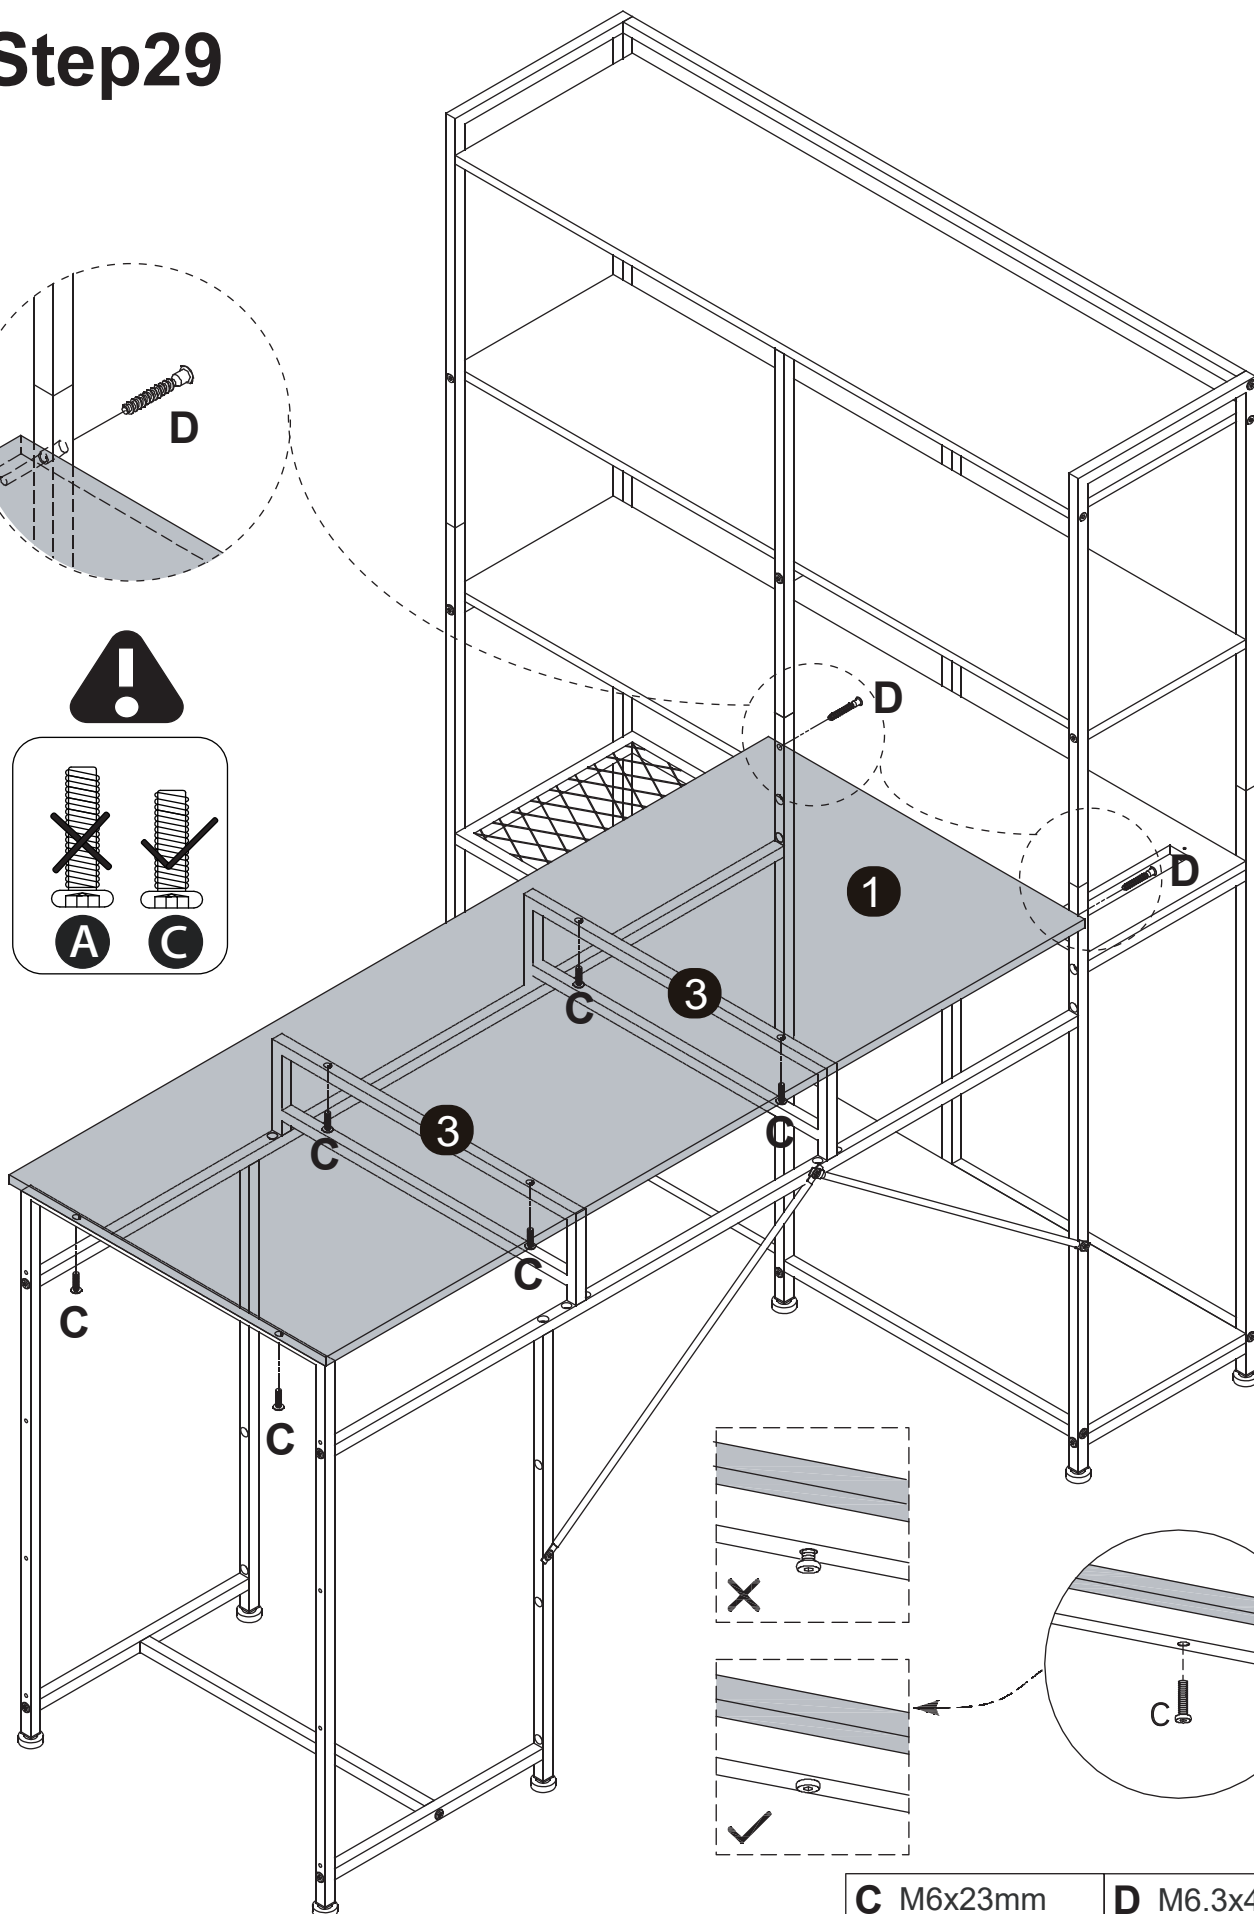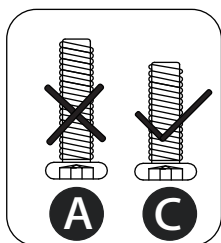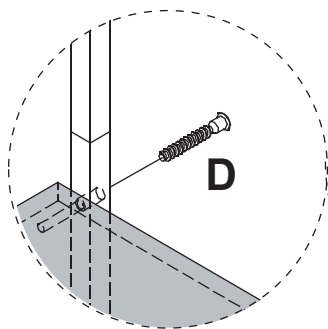

As shown in the picture, please tighten the screws after aligning the desktop.

C M6x23mm






X6

D M6.3x40mm



X2

Step30

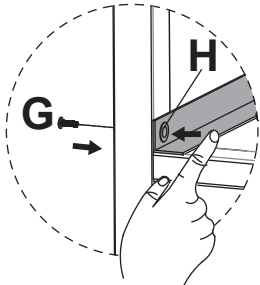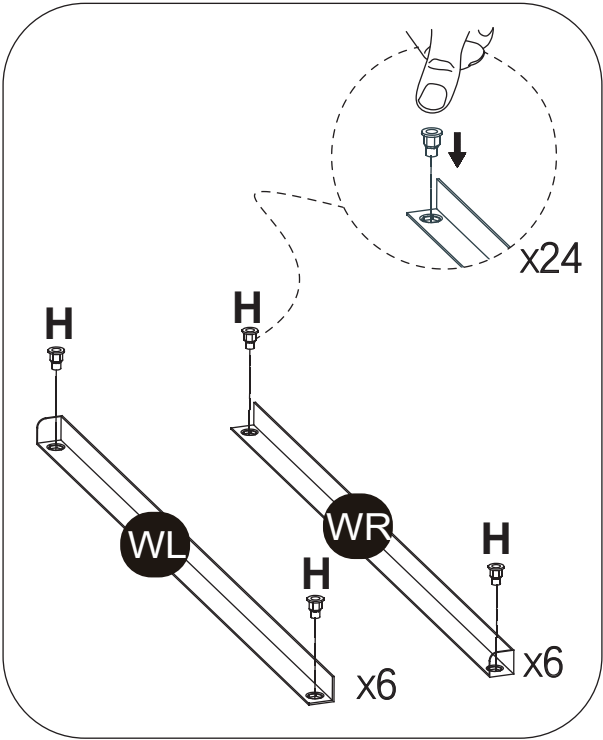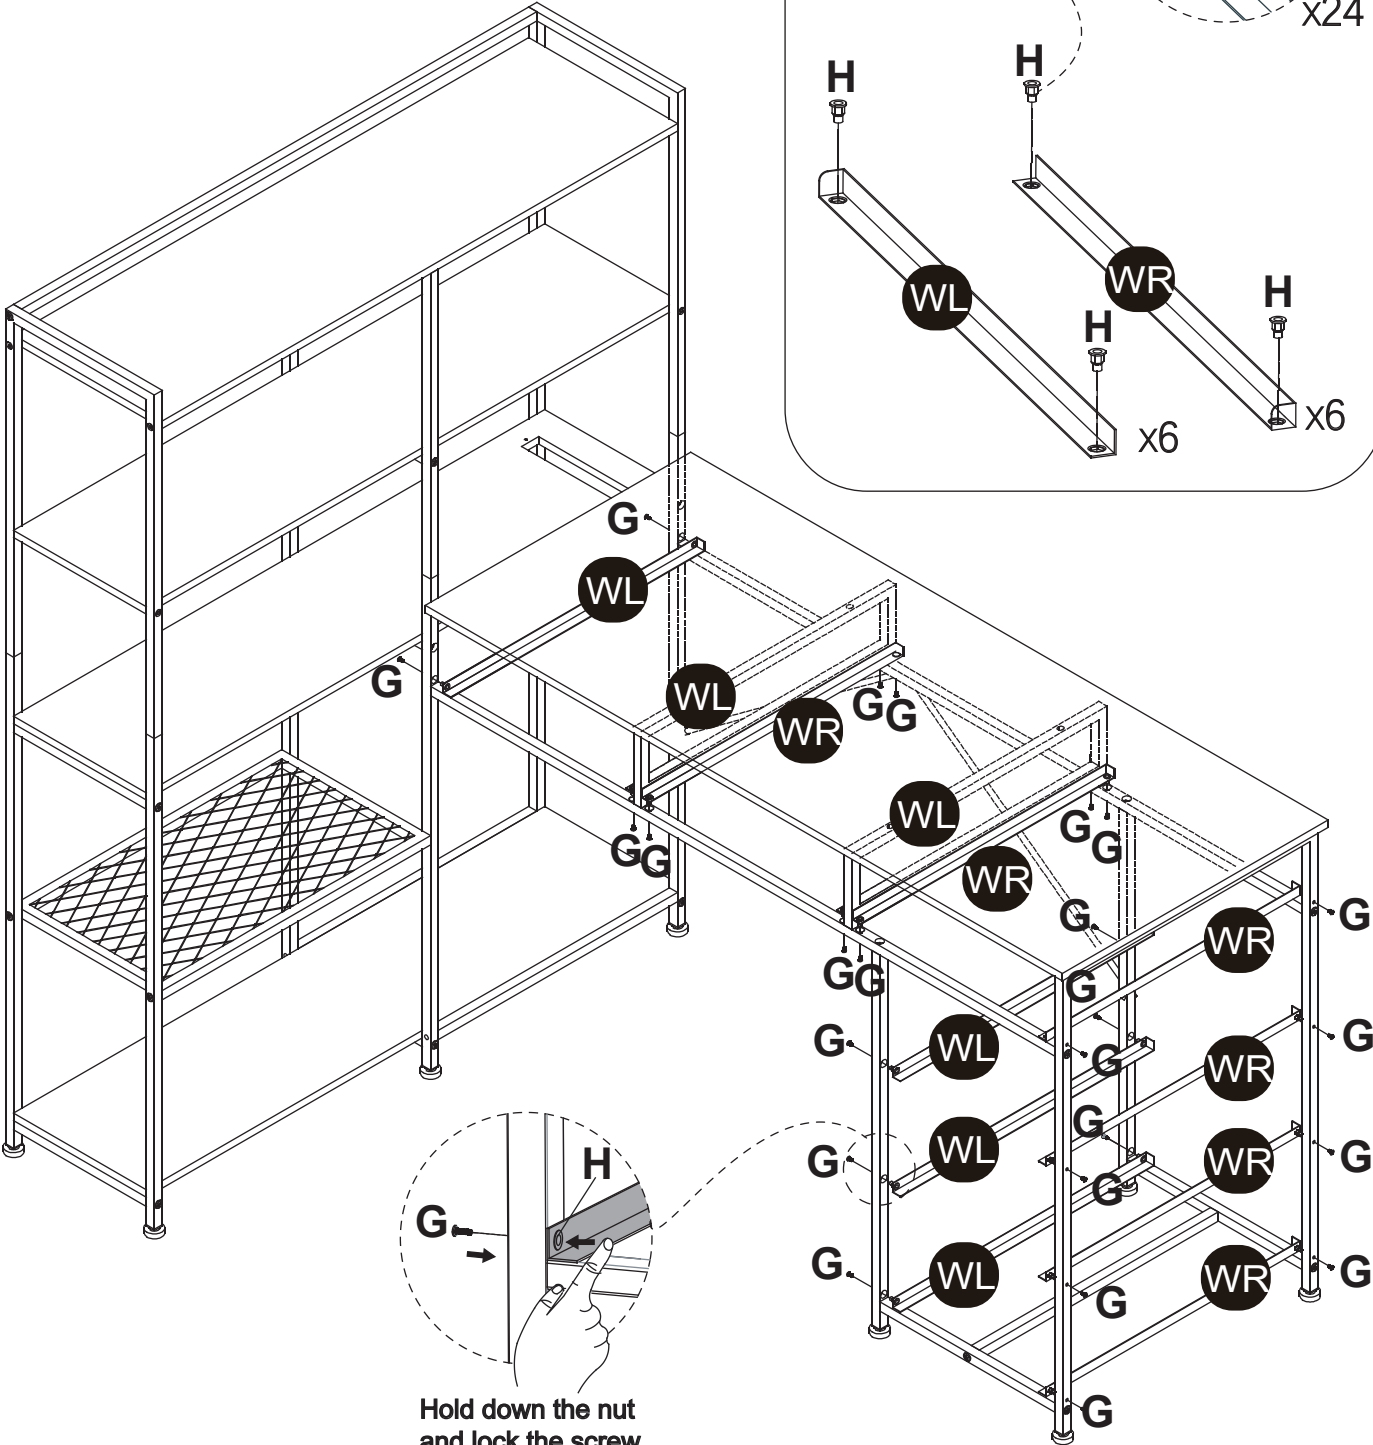

Hold down the nut
and lock the screw

G M4x12mm





X24

H



X24

Step31

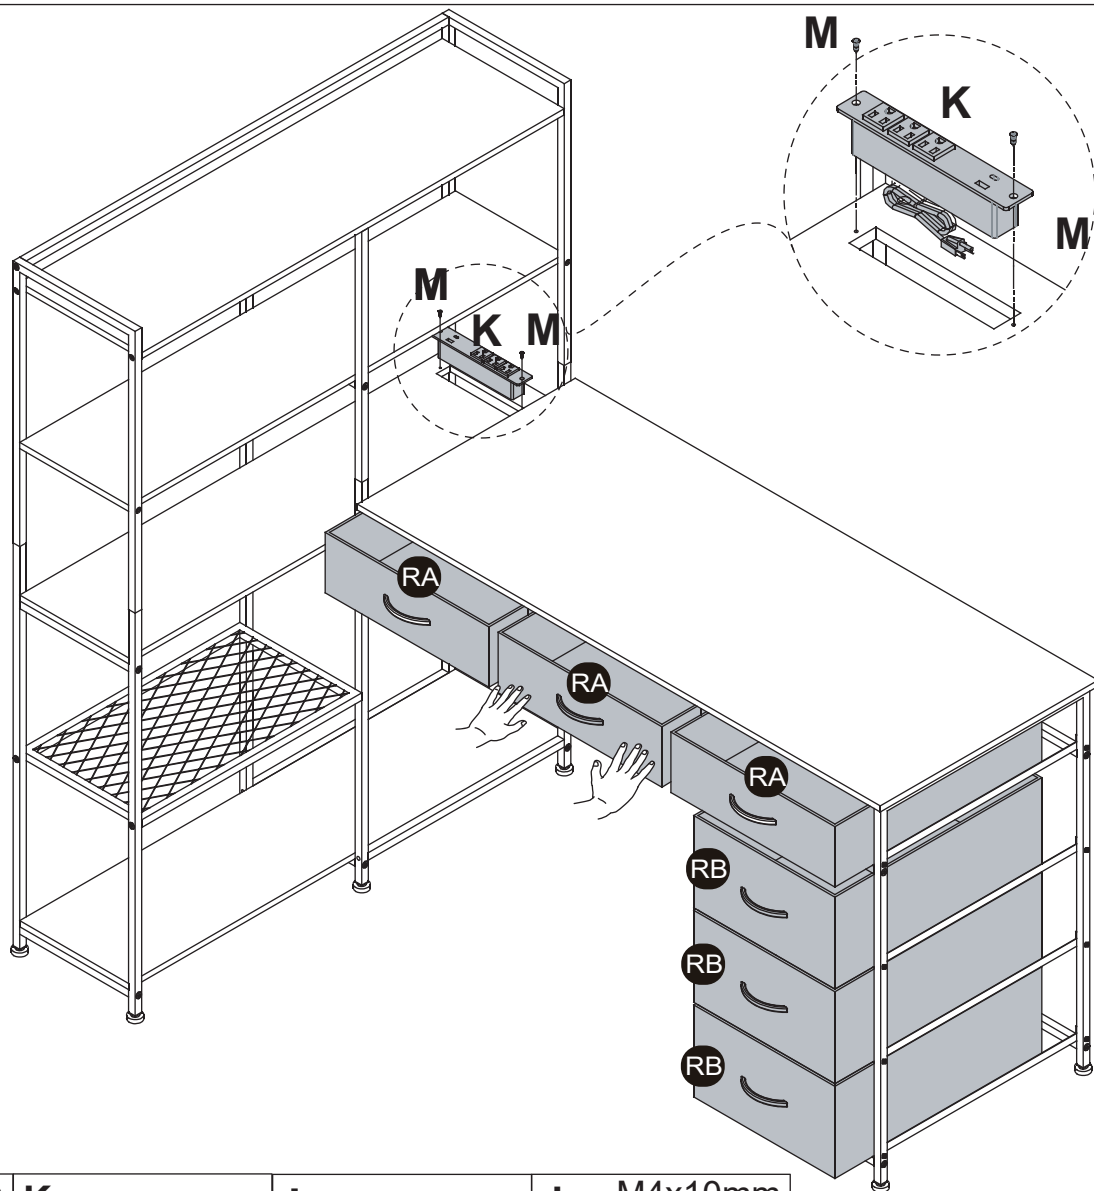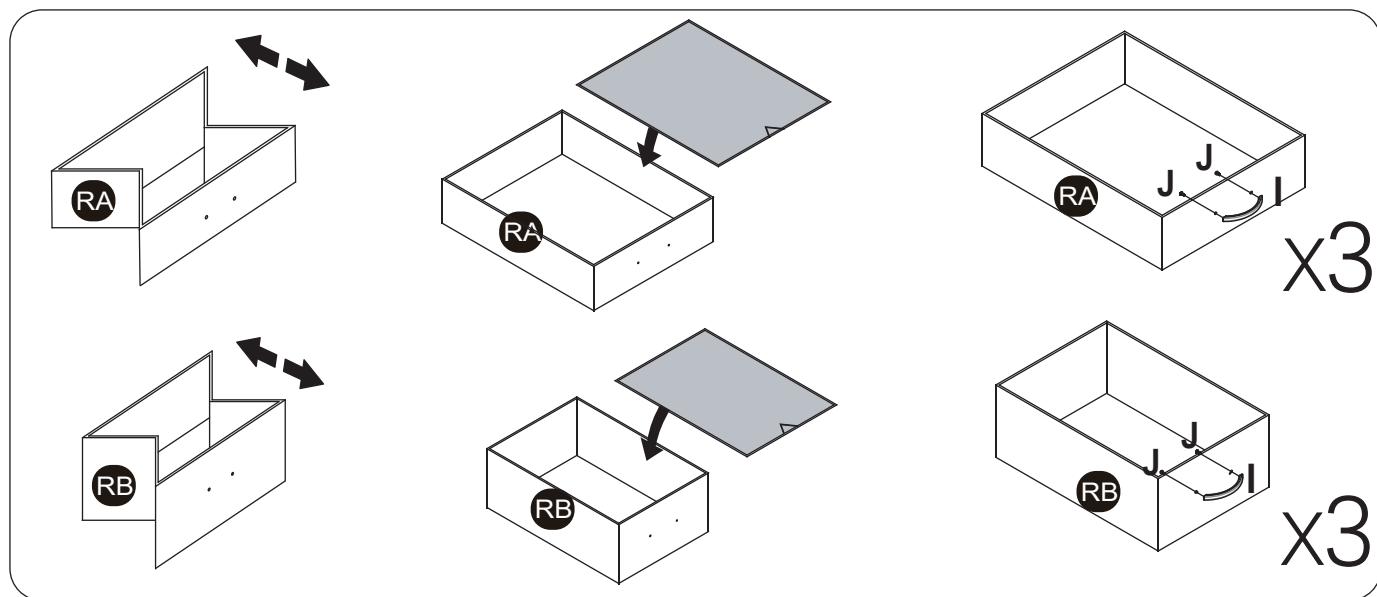


M M3x10mm



X2

K

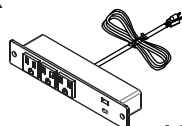

X1

I



X6



J



M4x10mm



X12

Step32

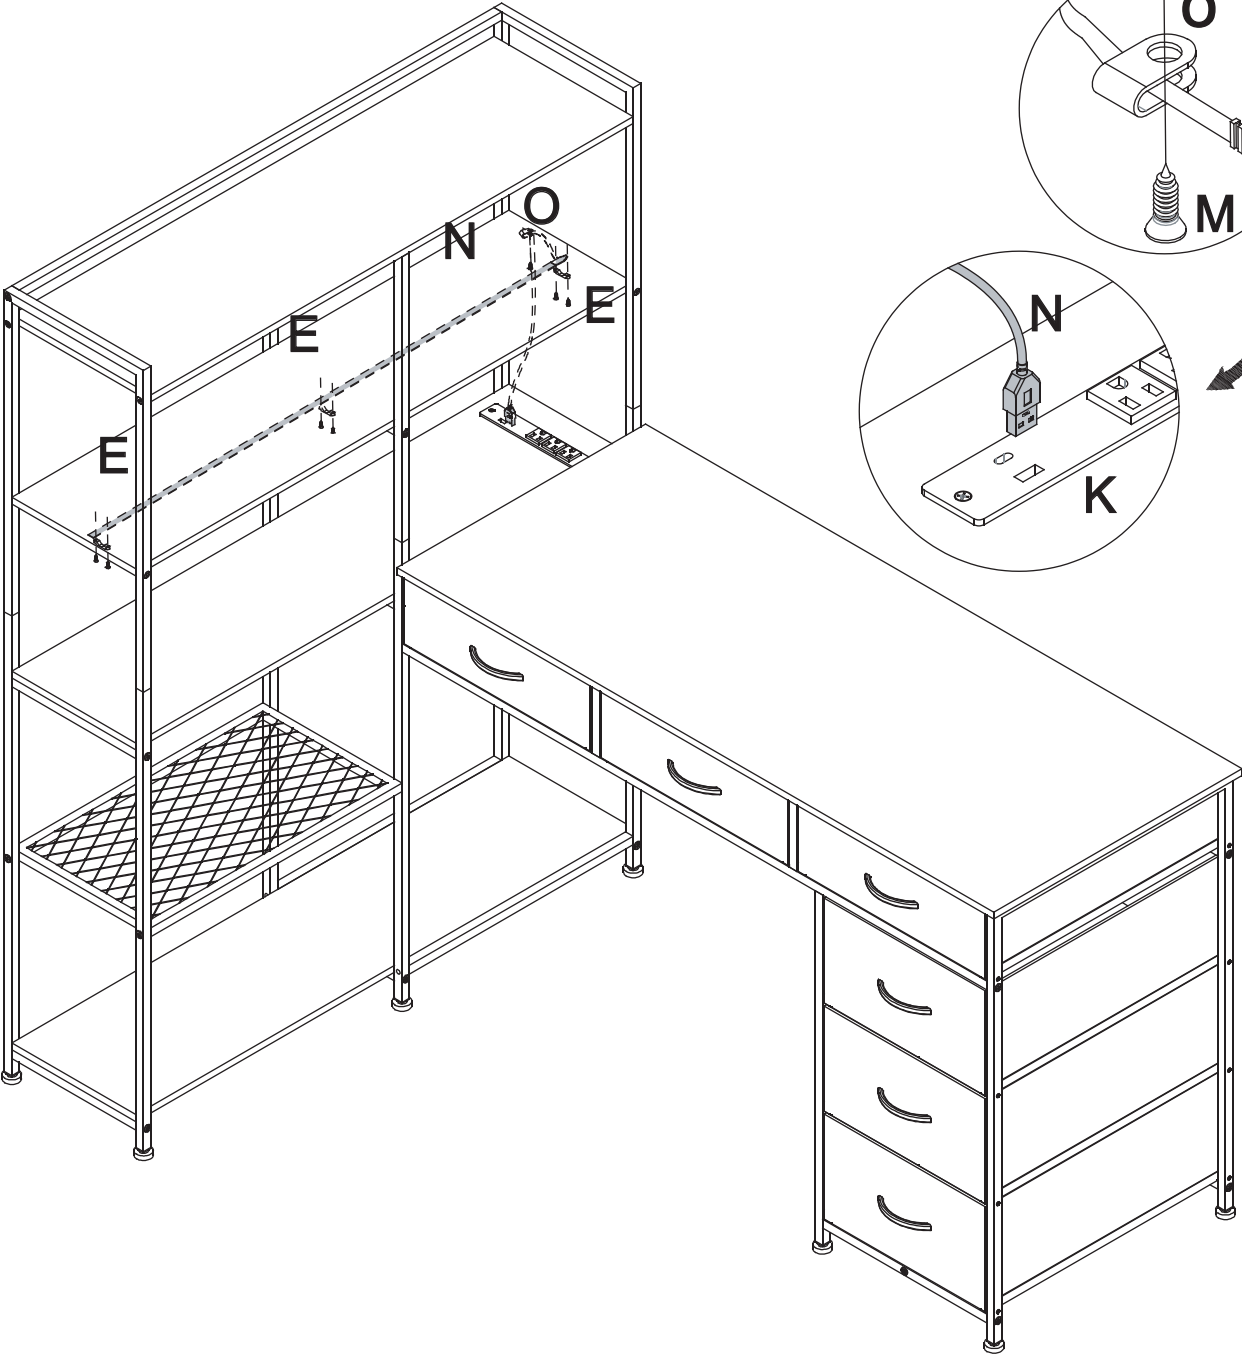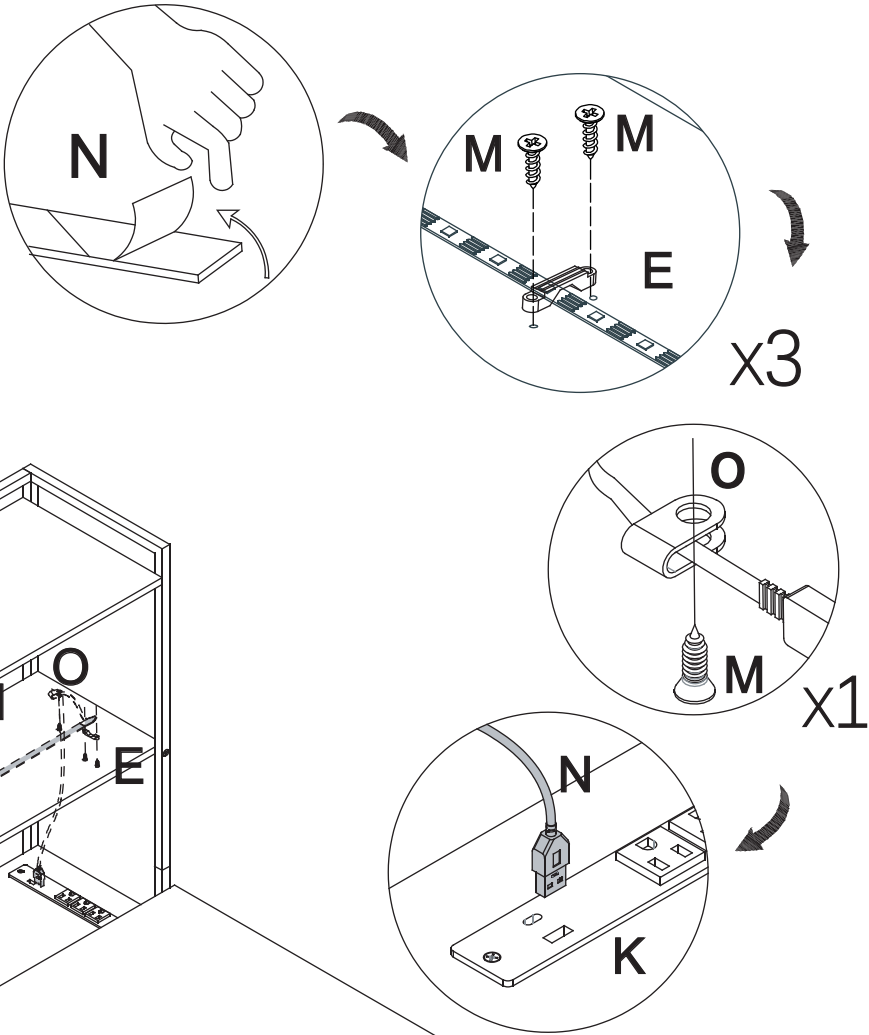

O  X1	E  X3	N  X1	M M3x10mm  X7
---	---	---	---