


ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

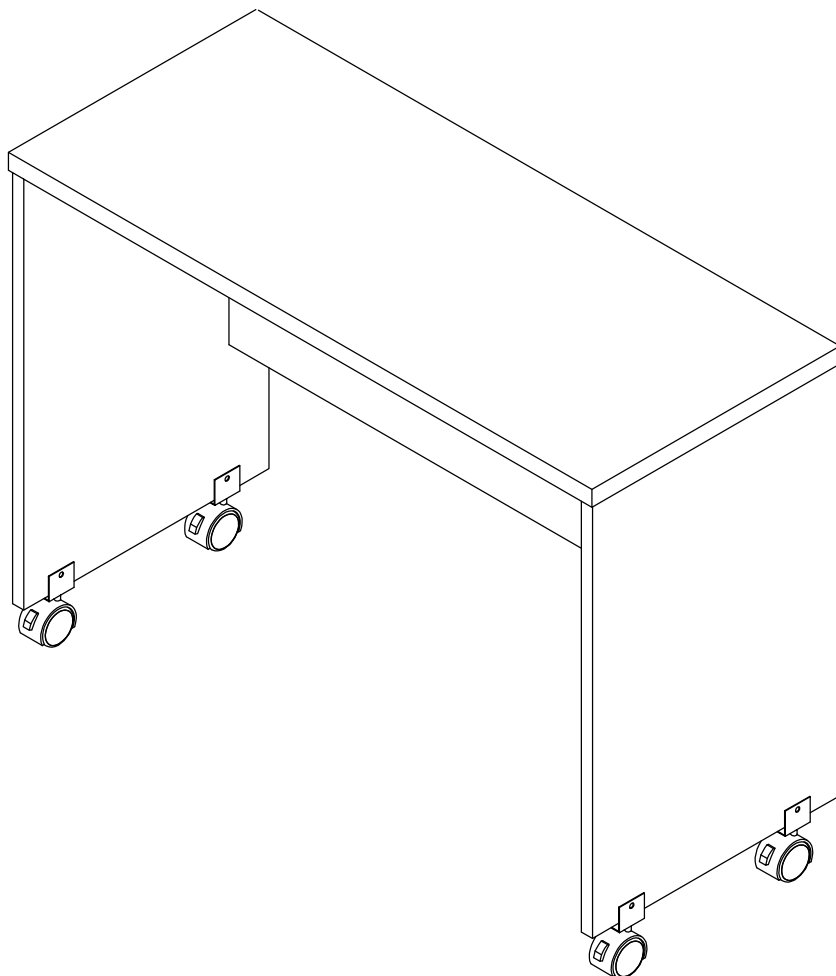





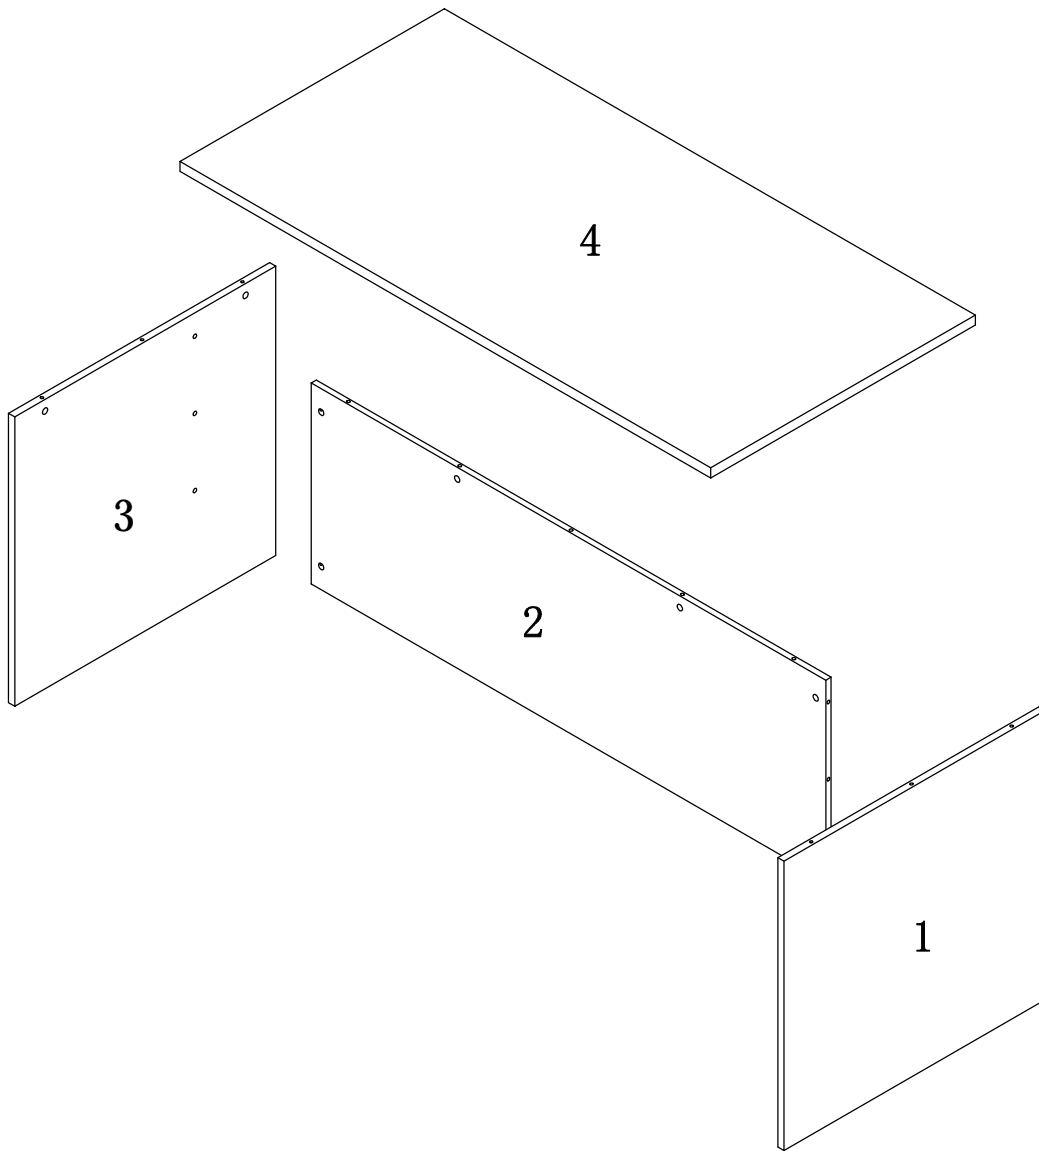


PARTS IDENTIFICATION



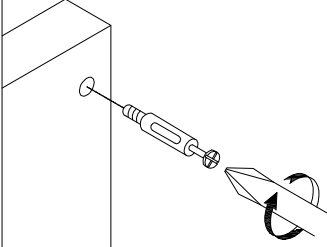
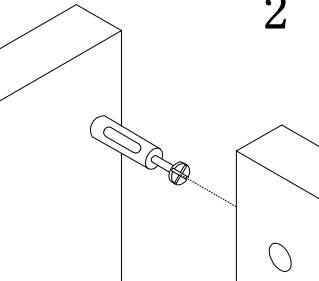
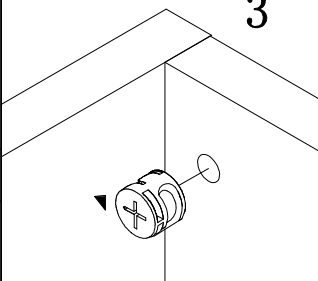
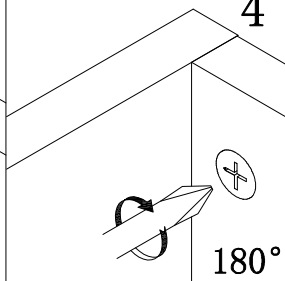


(1)	1pc	(3)	1pc
(2)	1pc	(4)	1pc


HARDWARE IDENTIFICATION

A		L29	10pcs
B		φ 15	10pcs
C		H50	2pcs
D		H50	2pcs
E		M6、φ 6×25	4pcs
F		φ 18	10pcs
G		φ 8×25	7pcs
H		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION


HOW TO  Cam Bolt  Cam Lock	1	2	3	4
				
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

ASSEMBLY INSTRUCTION

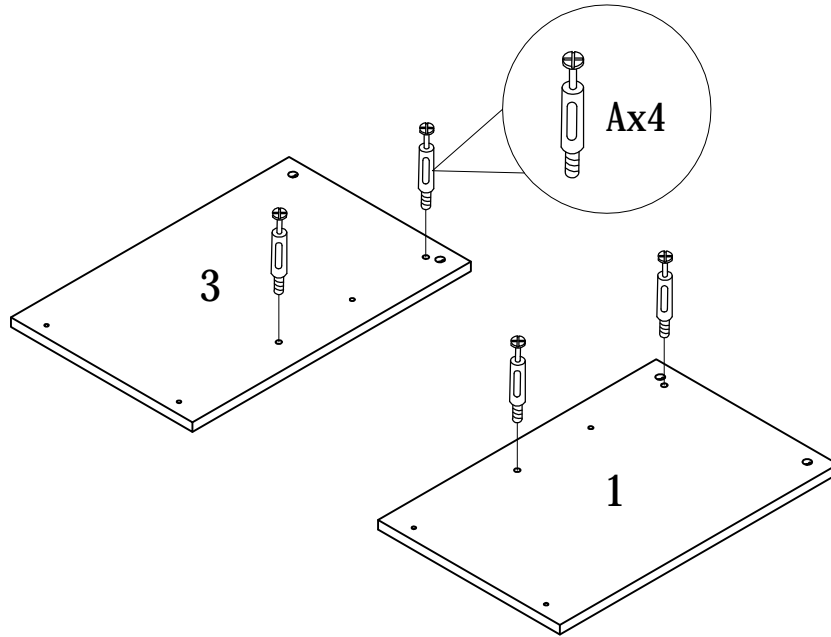


STEP1

STEP2

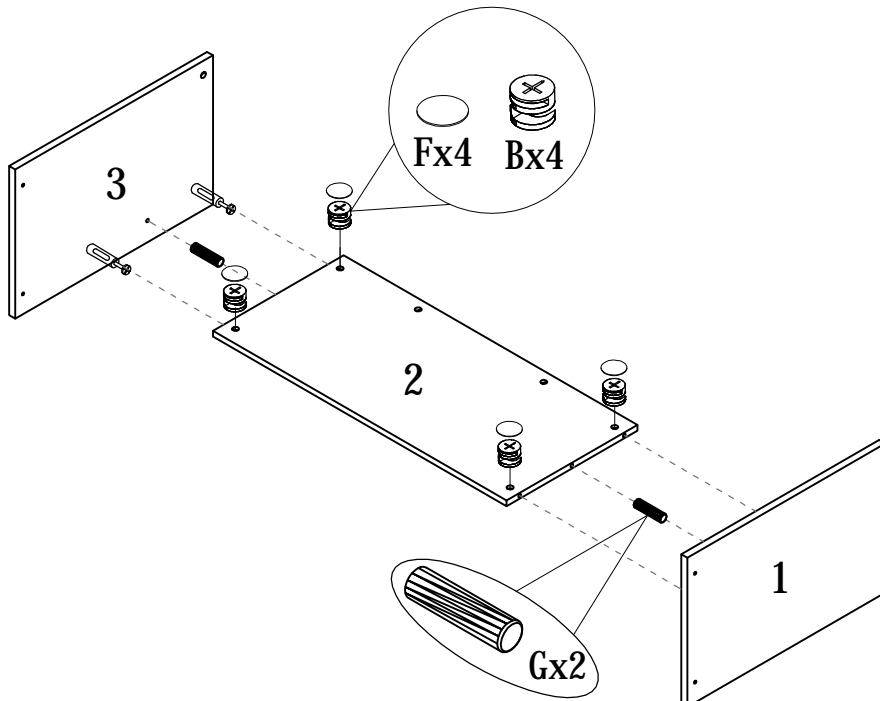


ASSEMBLY INSTRUCTION

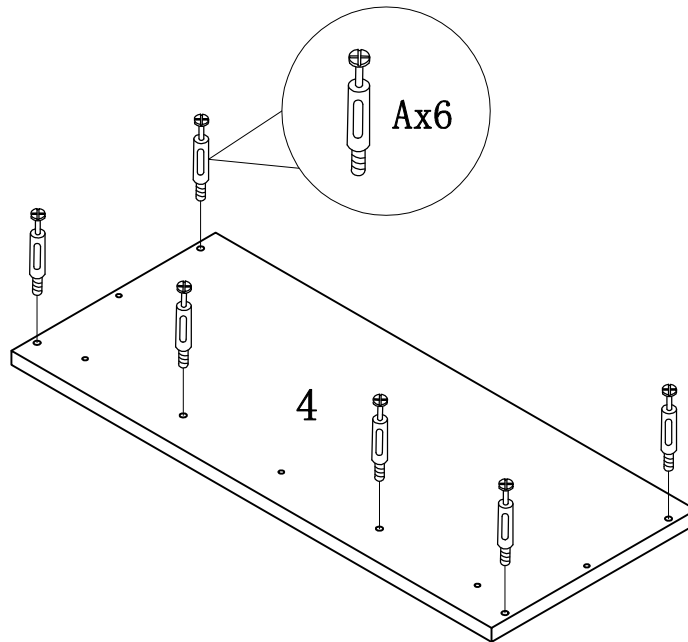


STEP3

STEP4

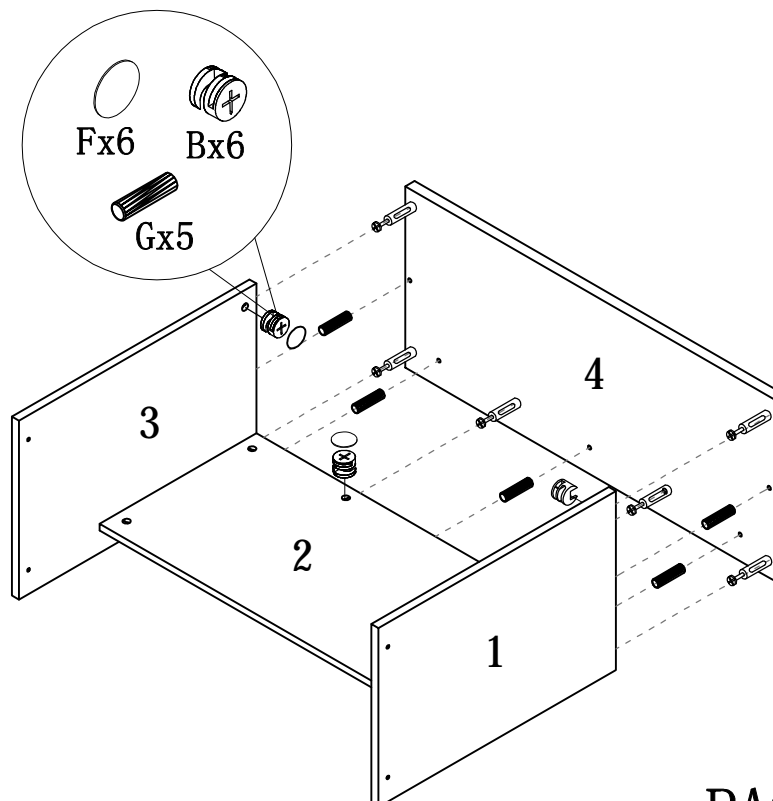

ASSEMBLY INSTRUCTION

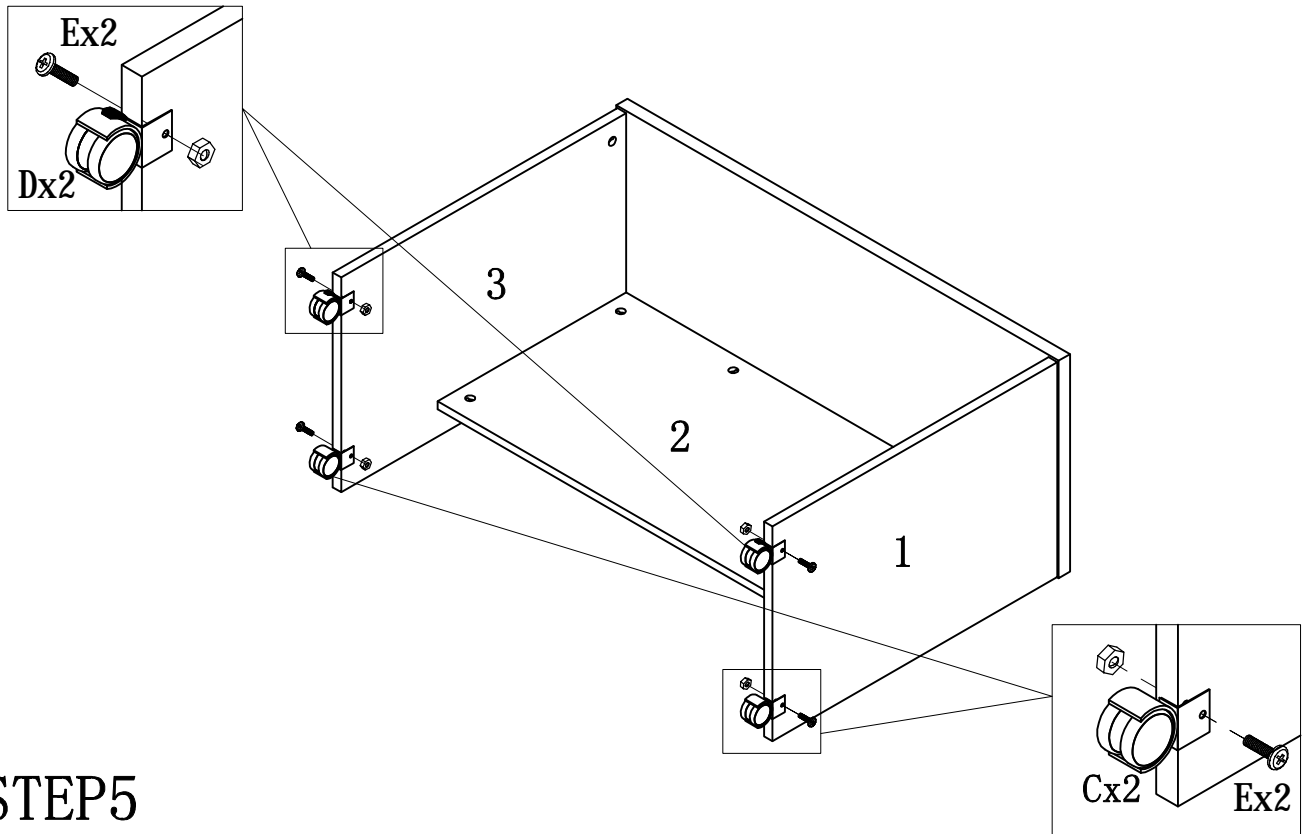

STEP5

STEP6

