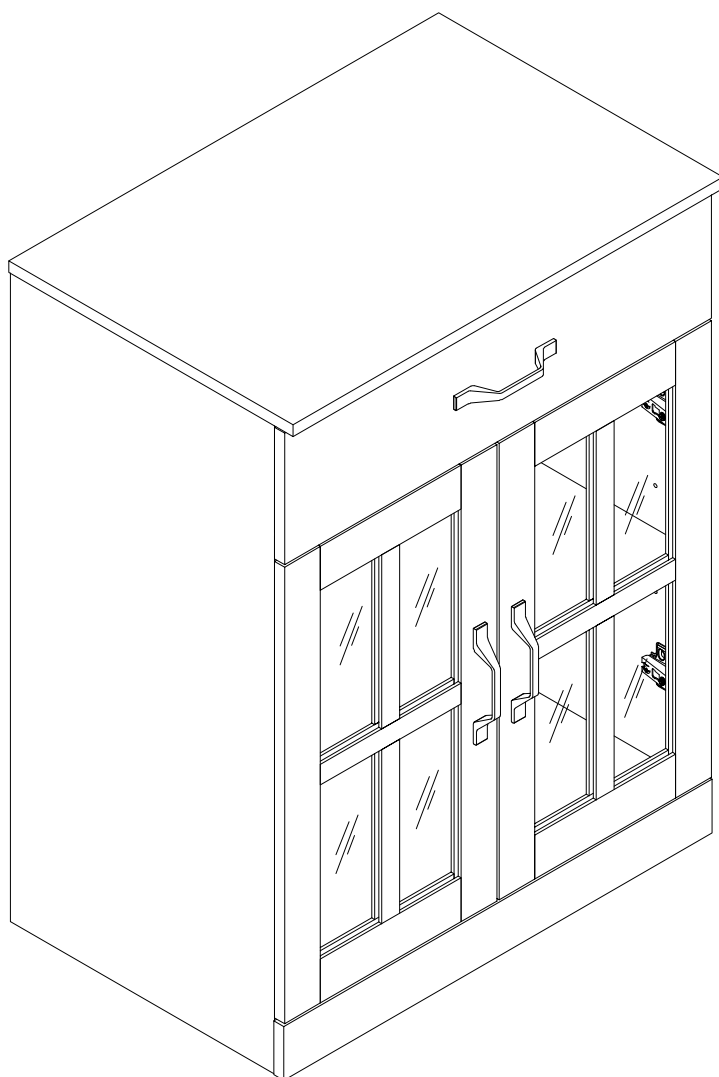




STORAGE CABINET

User Manual

INTRODUCTION

Thank you for choosing the Storage Cabinet. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact us by email with your order number and details.










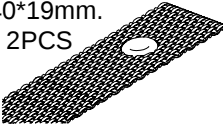


PACKAGE CONTENTS


- ☐ 1 x Storage Cabinet
- ☐ 1 x Pack of Accessories
- ☐ 1 x User Manual

PRODUCT CARE

- ☐ Please follow the instruction to assemble this item correctly.
- ☐ Don't make the screws be too loose or too tight.
- ☐ Please put the screws into the holes' position just as shown in the arrows of the image, and then clockwise rotate 90° or 180°
- ☐ More product parts, it is recommended that two people install
- ☐ The fittings pack contains small accessories that should be kept away from small children.

HARDWARE SUPPLIED

A. 6.5x36mm  28+2PCS	B. 15x9.8mm  28+2PCS	C. Ø6x30mm  18+2PCS	D. M3.5x14mm  38+2PCS	E. Ø13.8*18*4mm  4PCS
F.  F.1 12PCS	G. 142*10*27mm  3PCS	H. M4*16mm  6PCS	J. 140mm  1PC	
K.  4PCS	L. Ø5*7*17mm  4PCS	M. Ø20mm  28+2PCS	N.1  Ø6x35mm. 2PCS	N.2  Ø8xM4x35mm. 2PCS
O.1 140*19mm. 2PCS 	O.2  Ø8xM4x16mm. 2PCS	O.3  Ø16xØ6x1mm. 4PCS	P.  12inch/300mm <u>CL</u> <u>DL</u> <u>DR</u> <u>CR</u> 1SET	
Q. #9.5xM4x35mm  6+1PCS				

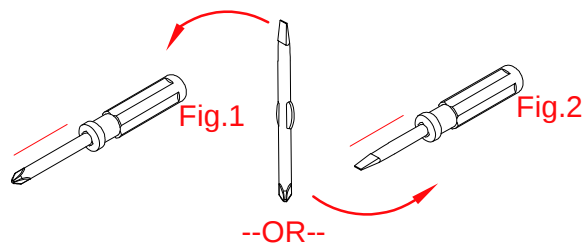


PARTS LIST

Unit: (mm)




① 600*397*14 1PC	② 786*369*14 1PC	③ 786*369*14 1PC	④ 568*350*14 1PC
⑤ 568*355*14 1PC	⑥ 564*340*14 1PC	⑦ 598*65*14 1PC	⑧ 568*65*14 1PC
⑨ 568*96*14 1PC	⑩ 578*322*3 2PCS	⑪ 552*296.5*14 2PCS	⑫ 596*159*14 1PC
⑬ 300*116*12 1PC	⑭ 300*116*12 1PC	⑮ 518.5*116*12 1PC	⑯ 286*50*12 1PC
⑰ 528.5*296*3 1PC			





PANEL LAYOUT

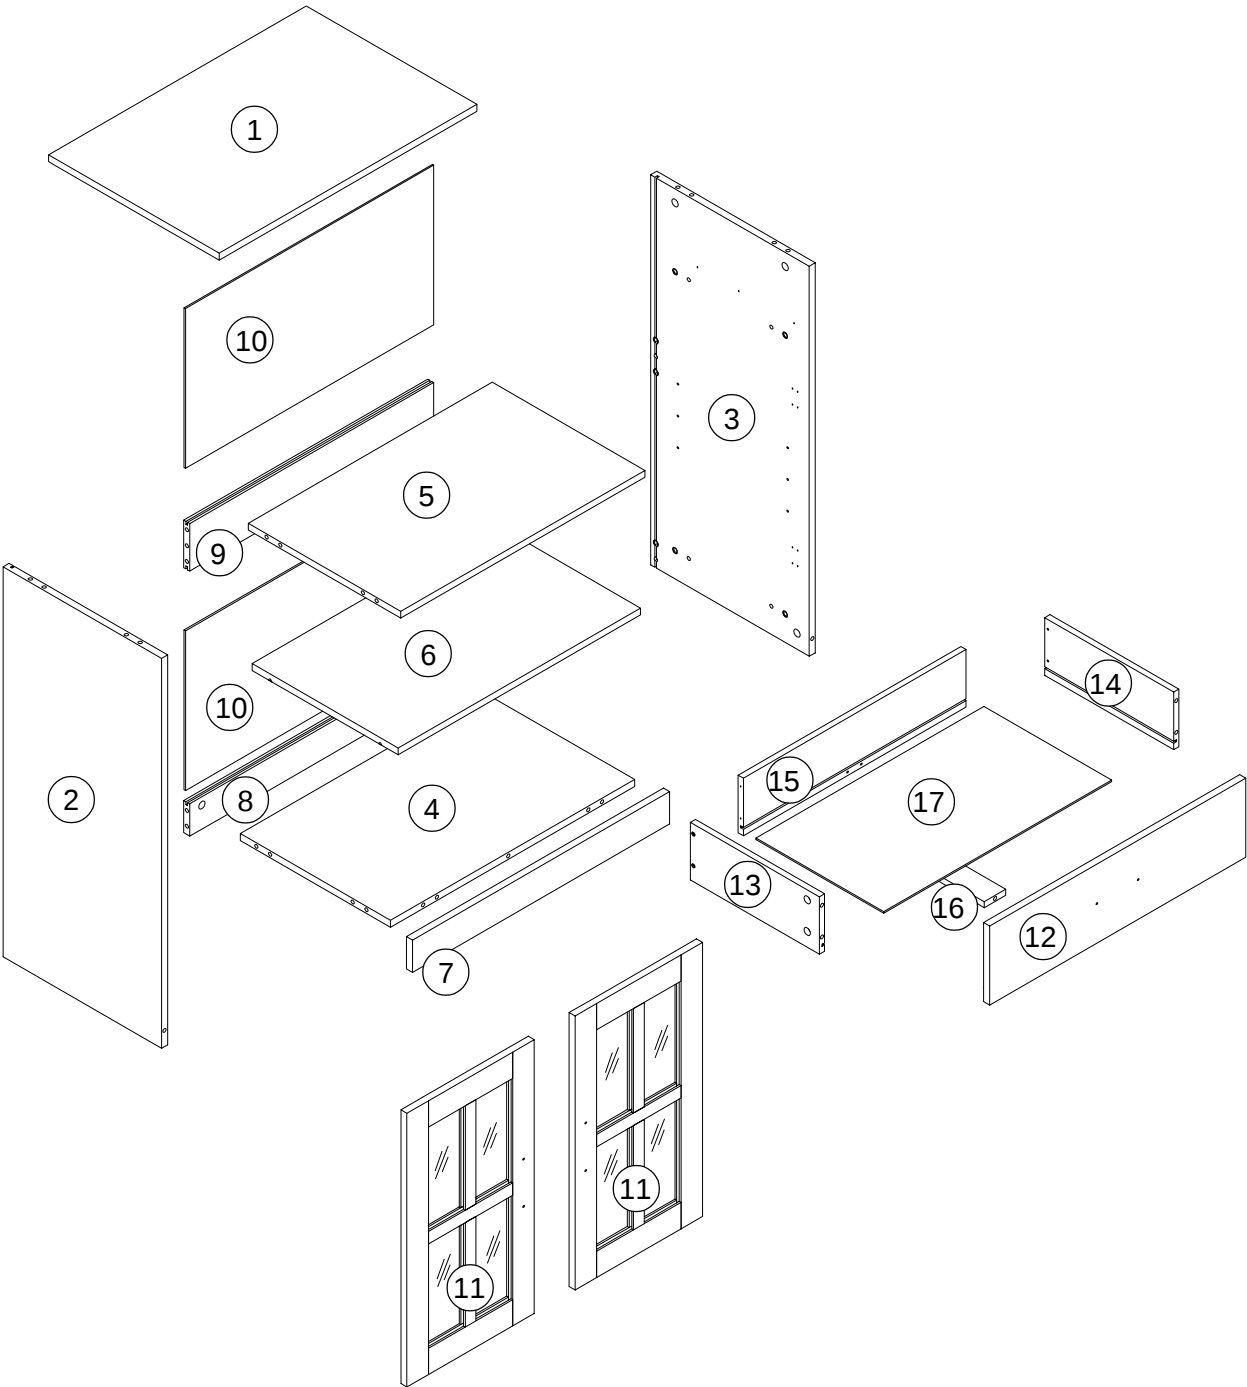Top



Bottom

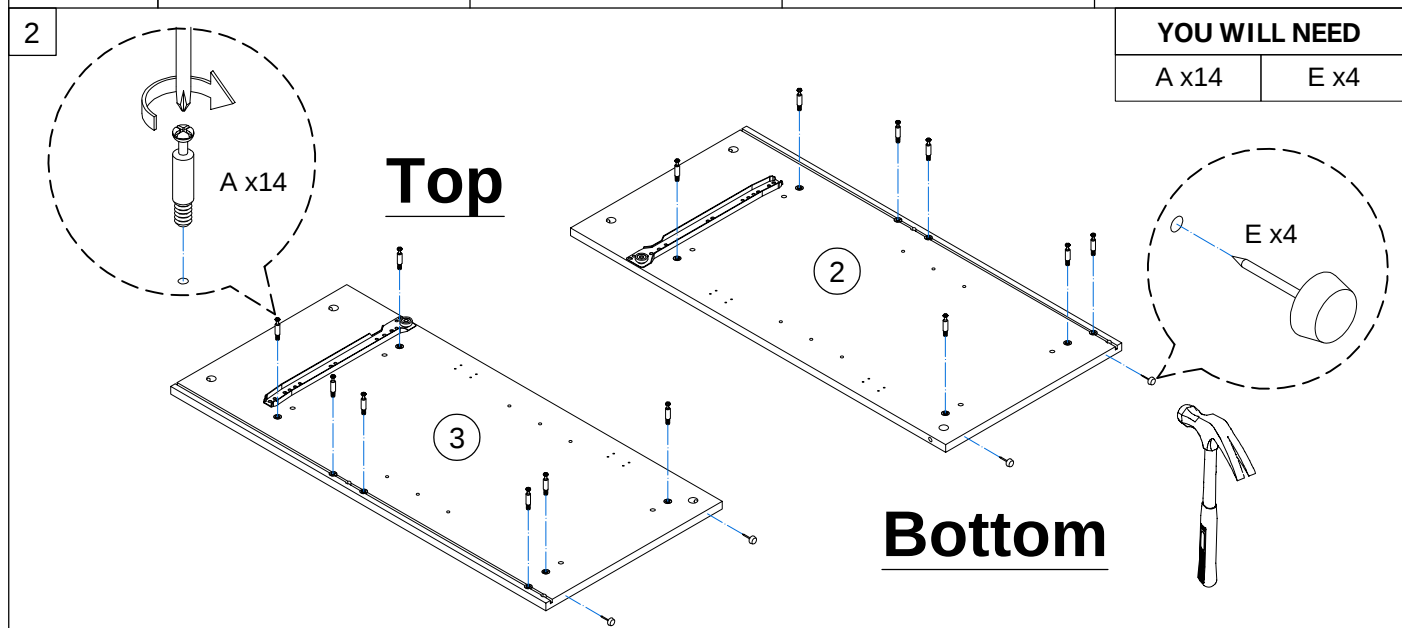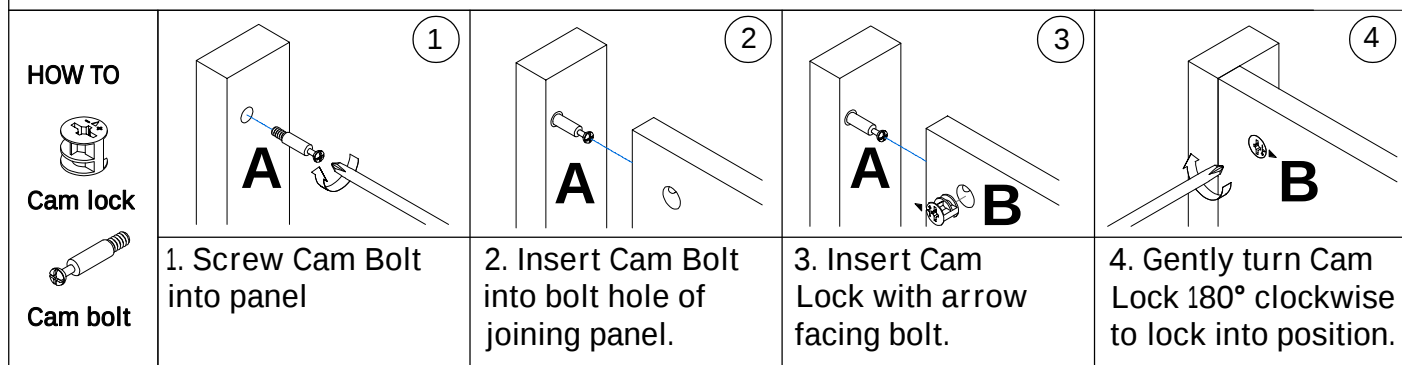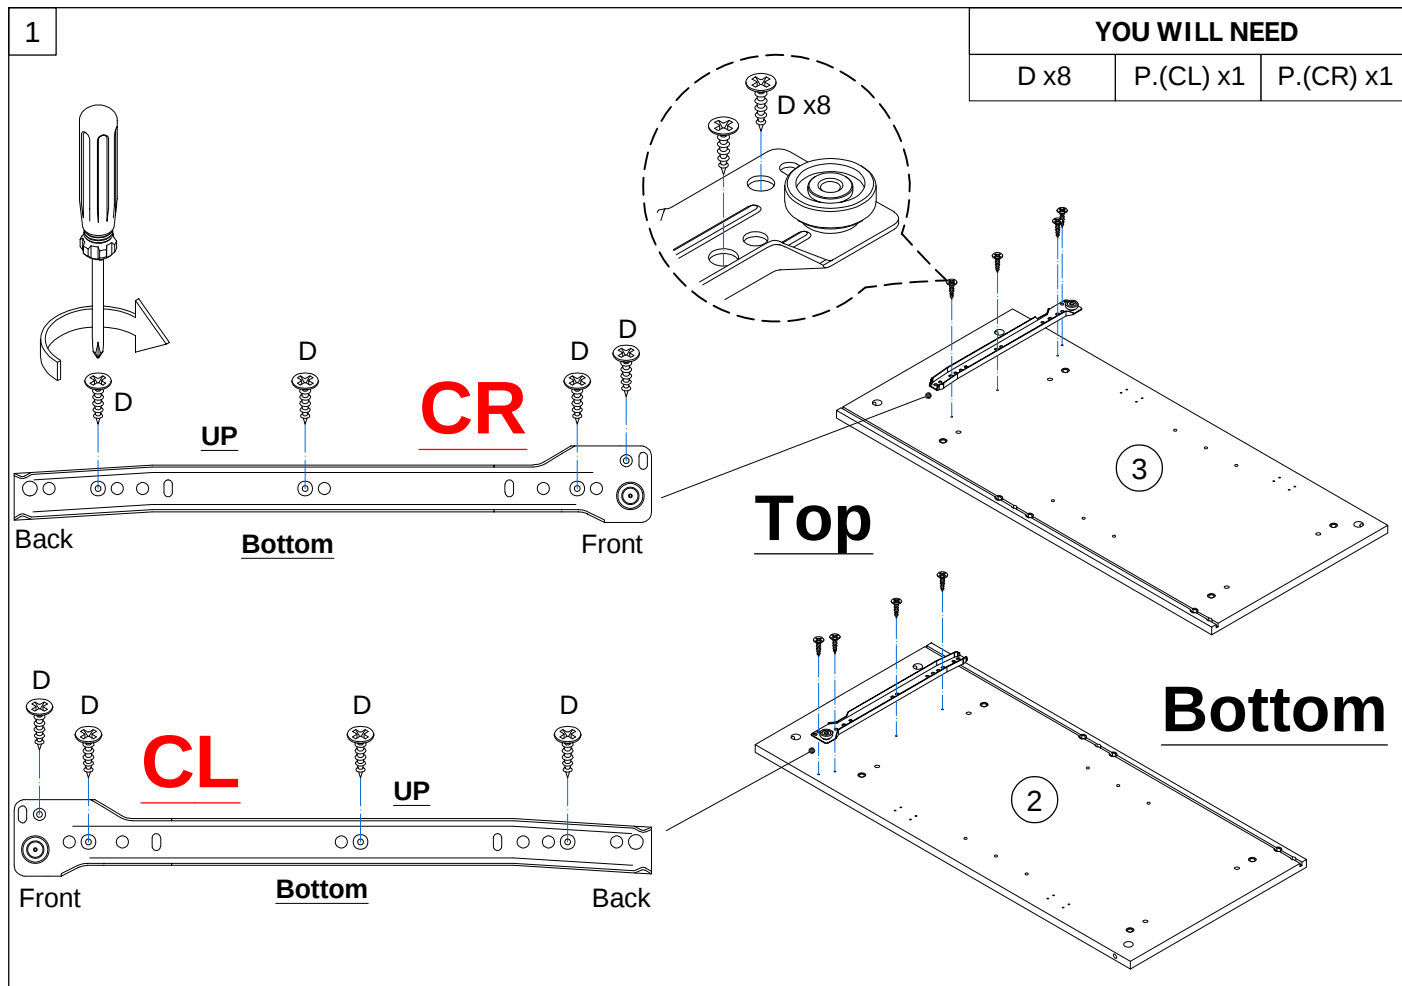


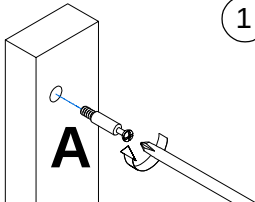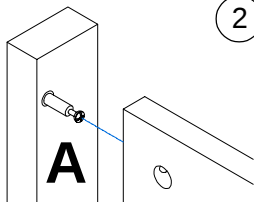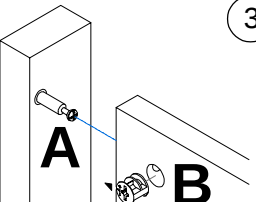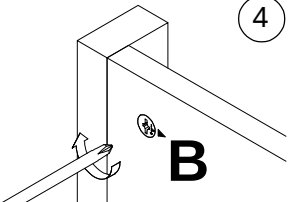HOW TO  Cam lock Cam bolt	①  A 1. Screw Cam Bolt into panel	②  A 2. Insert Cam Bolt into bolt hole of joining panel.	③  A B 3. Insert Cam Lock with arrow facing bolt.	④  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

3

Top


YOU WILL NEED	
B x7	C x6

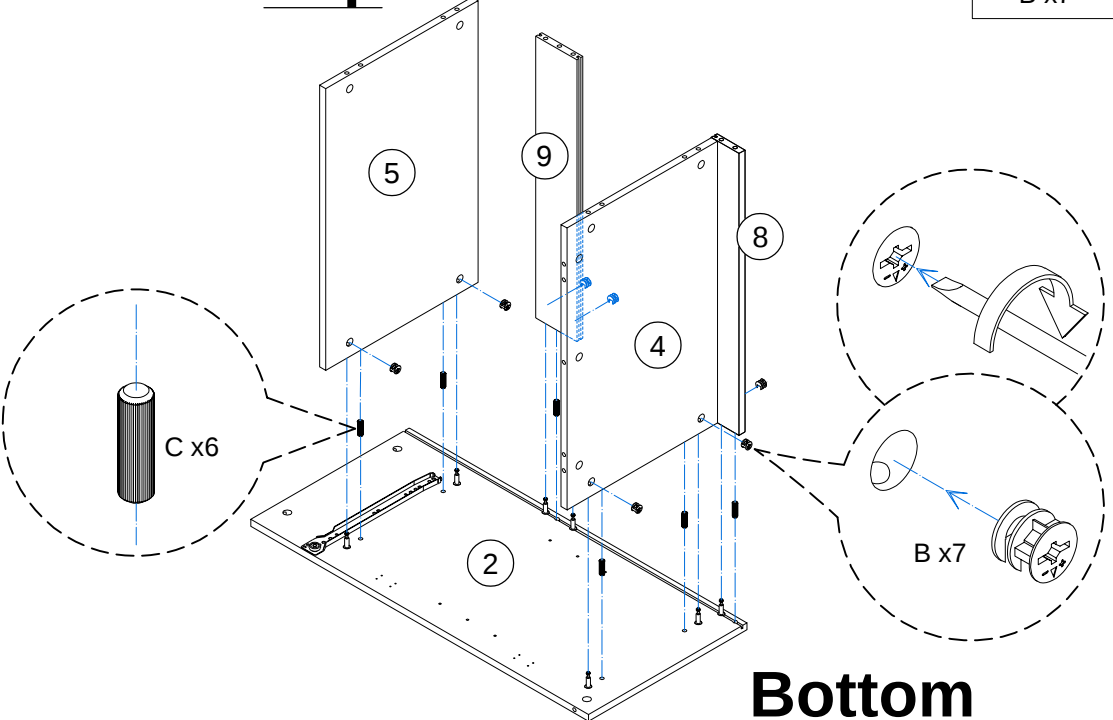






Bottom

4

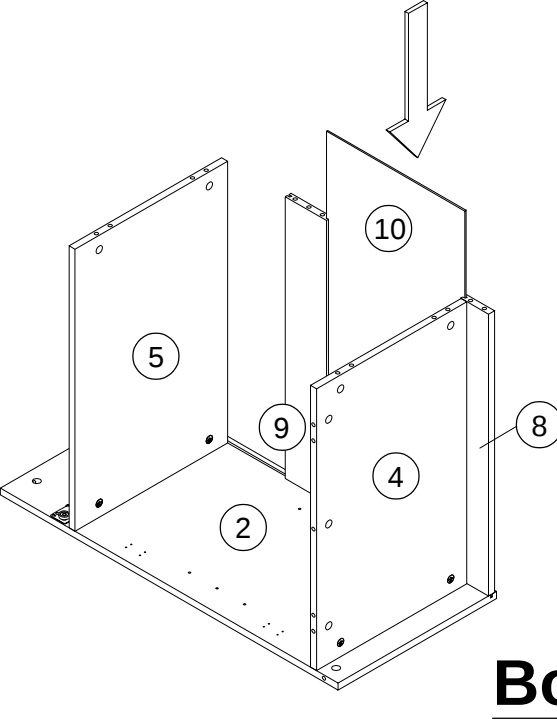Top



Bottom

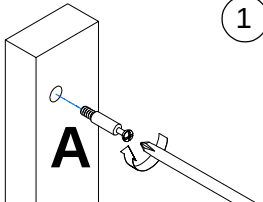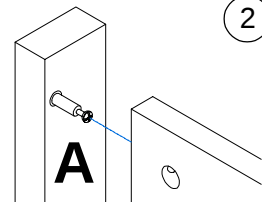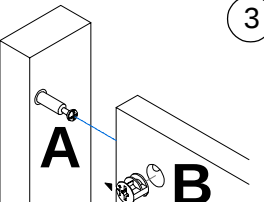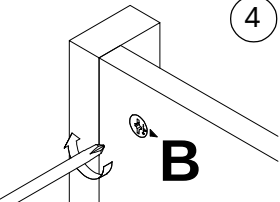HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

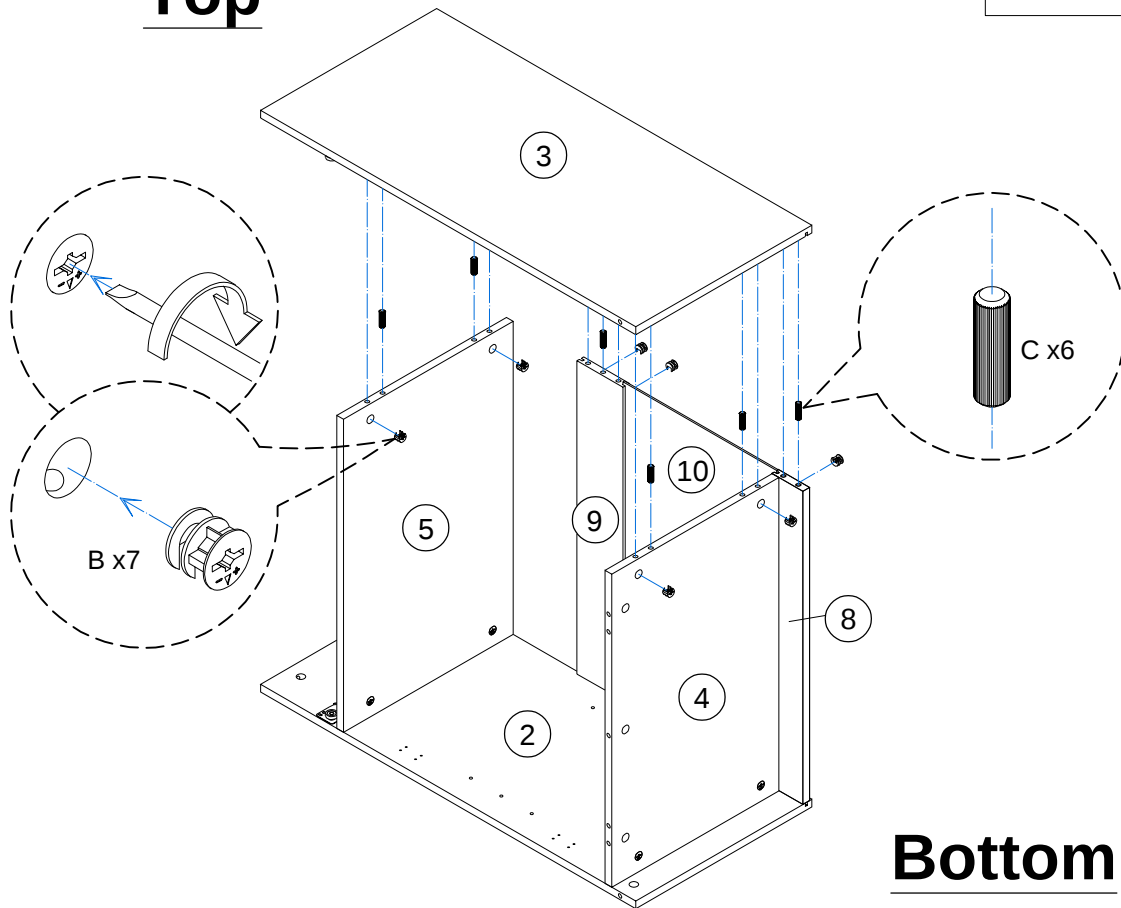
5

Top

YOU WILL NEED

B x7

C x6









Bottom

6

YOU WILL NEED

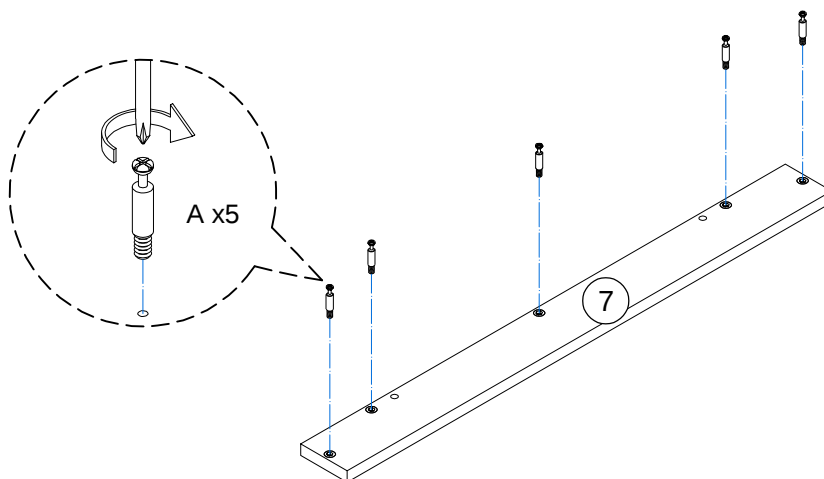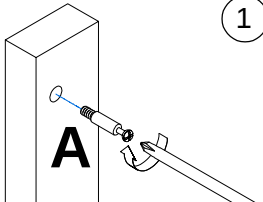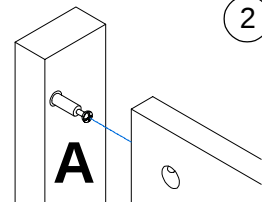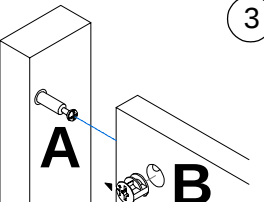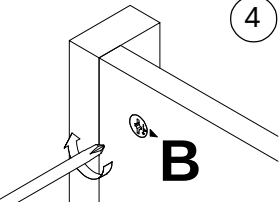A x5



HOW TO  Cam lock Cam bolt	1  A 1. Screw Cam Bolt into panel	2  A 2. Insert Cam Bolt into bolt hole of joining panel.	3  A B 3. Insert Cam Lock with arrow facing bolt.	4  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

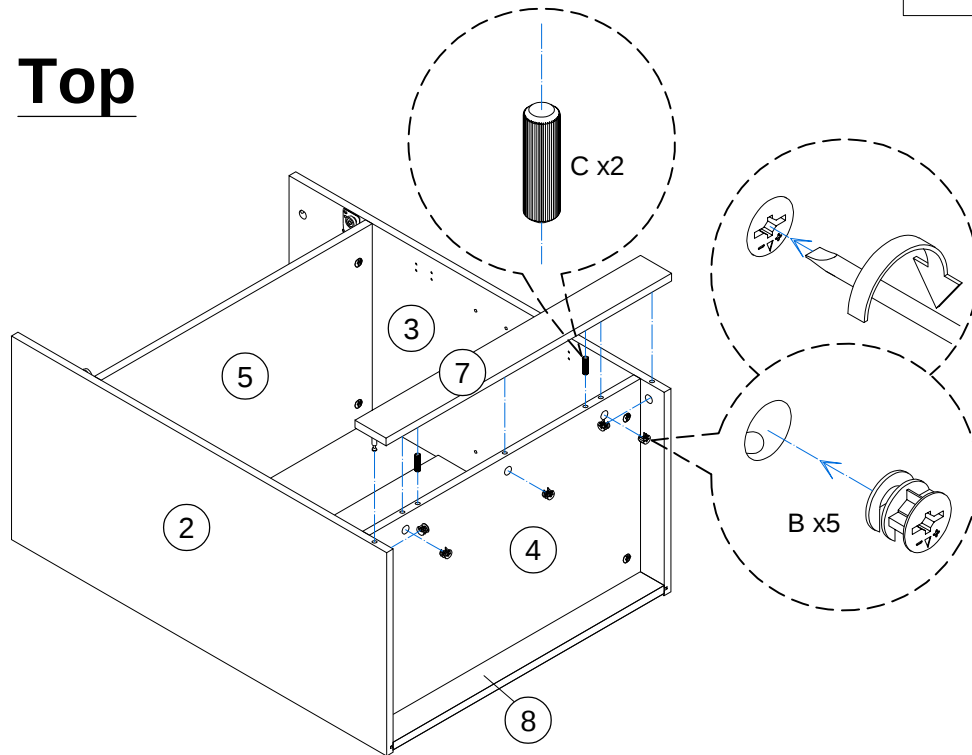
7

YOU WILL NEED

B x5

C x2

Top








Bottom

8

YOU WILL NEED

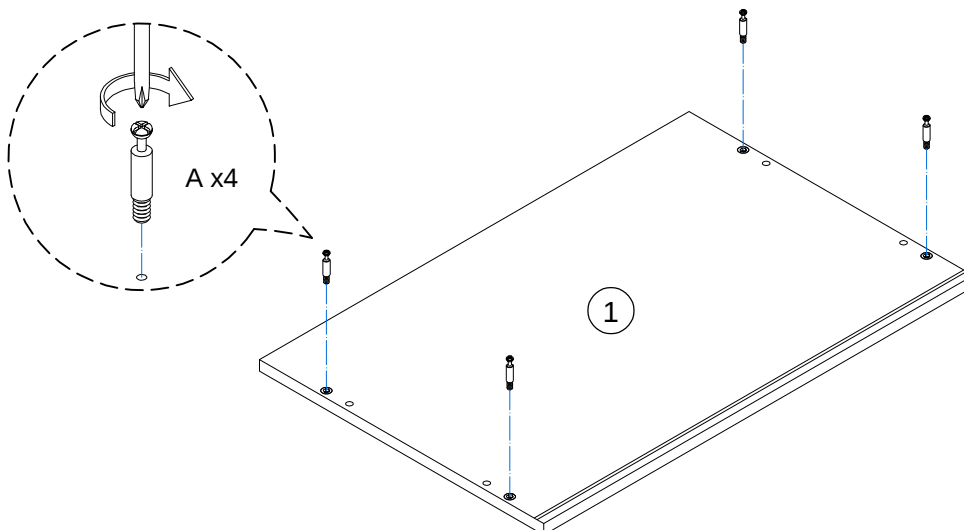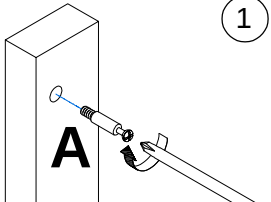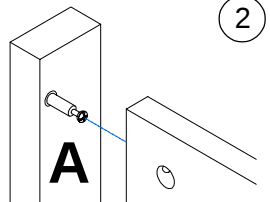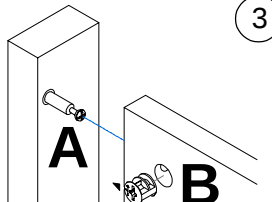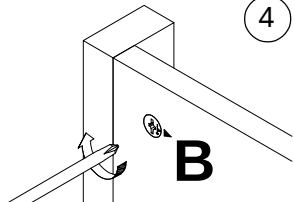A x4



HOW TO  Cam lock Cam bolt	①  A 1. Screw Cam Bolt into panel	②  A 2. Insert Cam Bolt into bolt hole of joining panel.	③  A B 3. Insert Cam Lock with arrow facing bolt.	④  B 4. Gently turn Cam Lock 180° clockwise to lock into position.
--	--	---	--	---

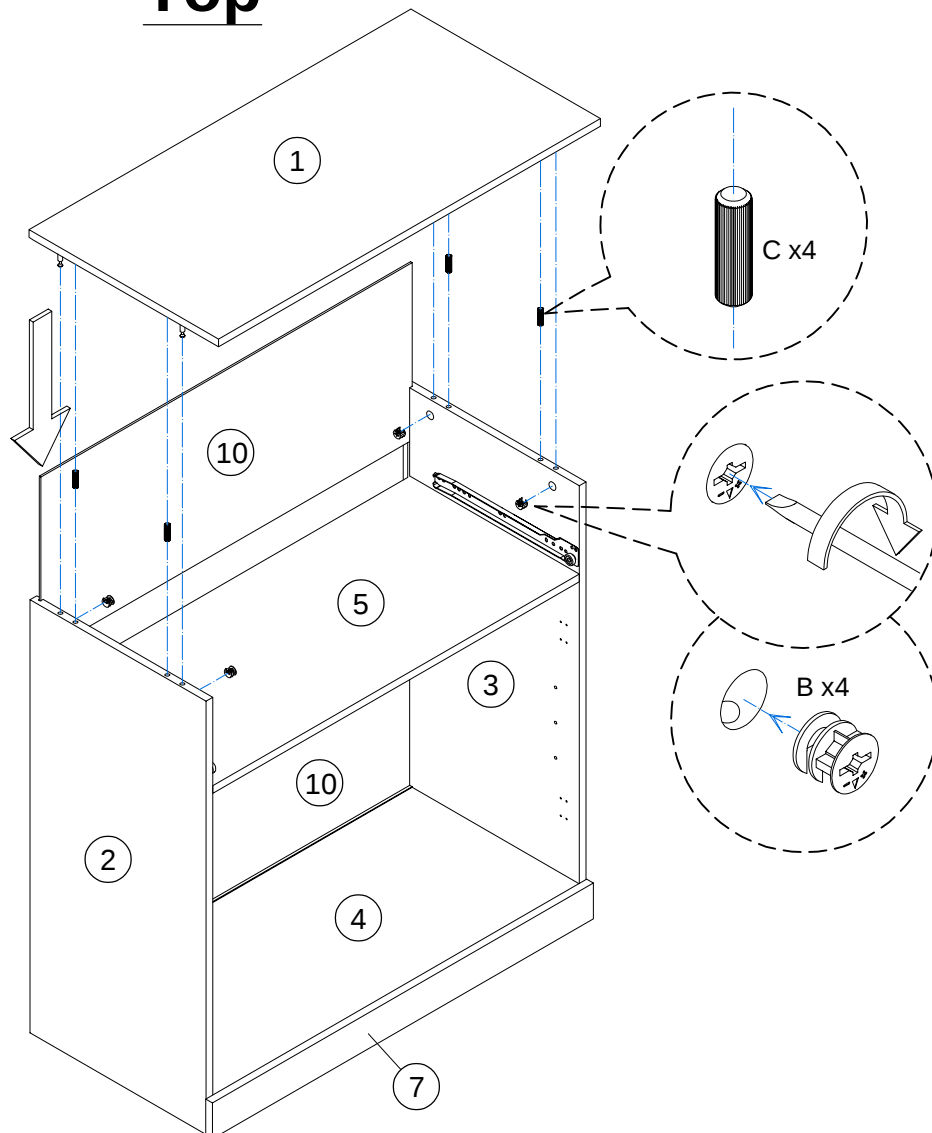
9

YOU WILL NEED

B x4

C x4

Top




Bottom

10

YOU WILL NEED

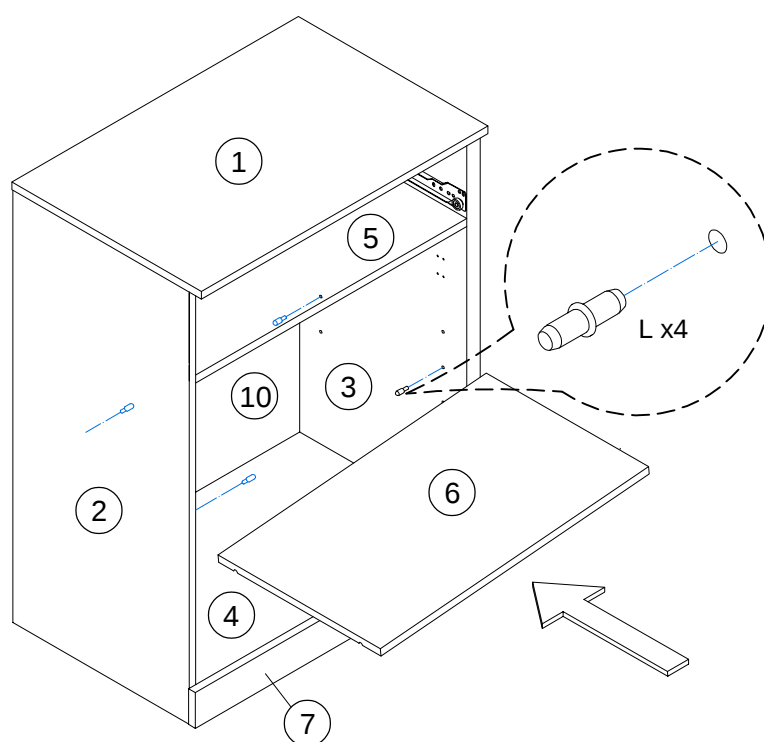L x4




11

YOU WILL NEED

D x8

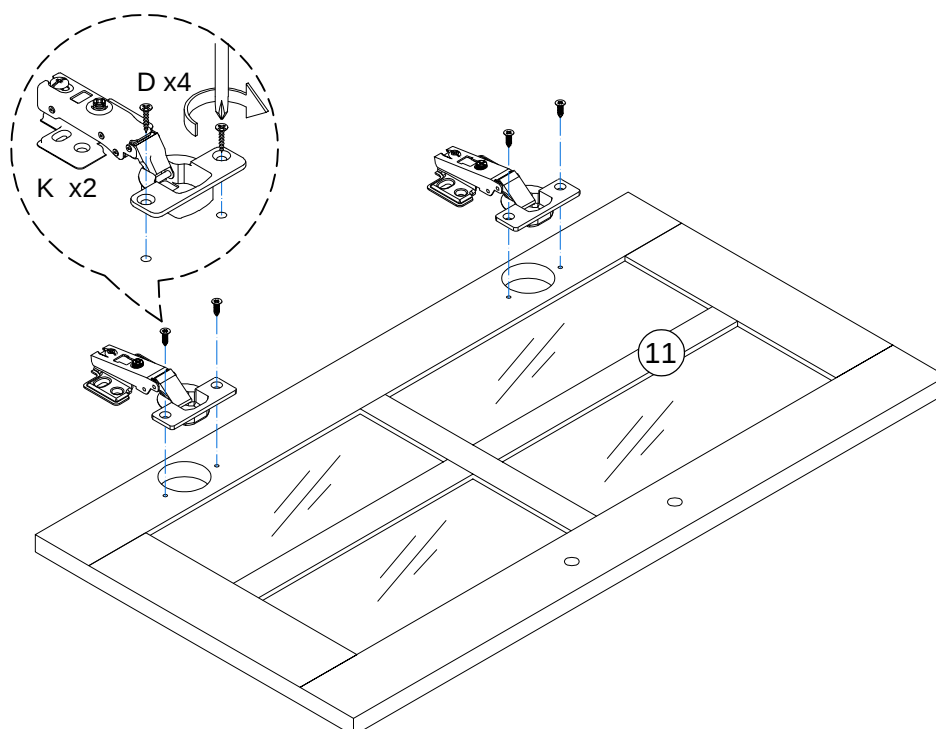K x4

**x2**

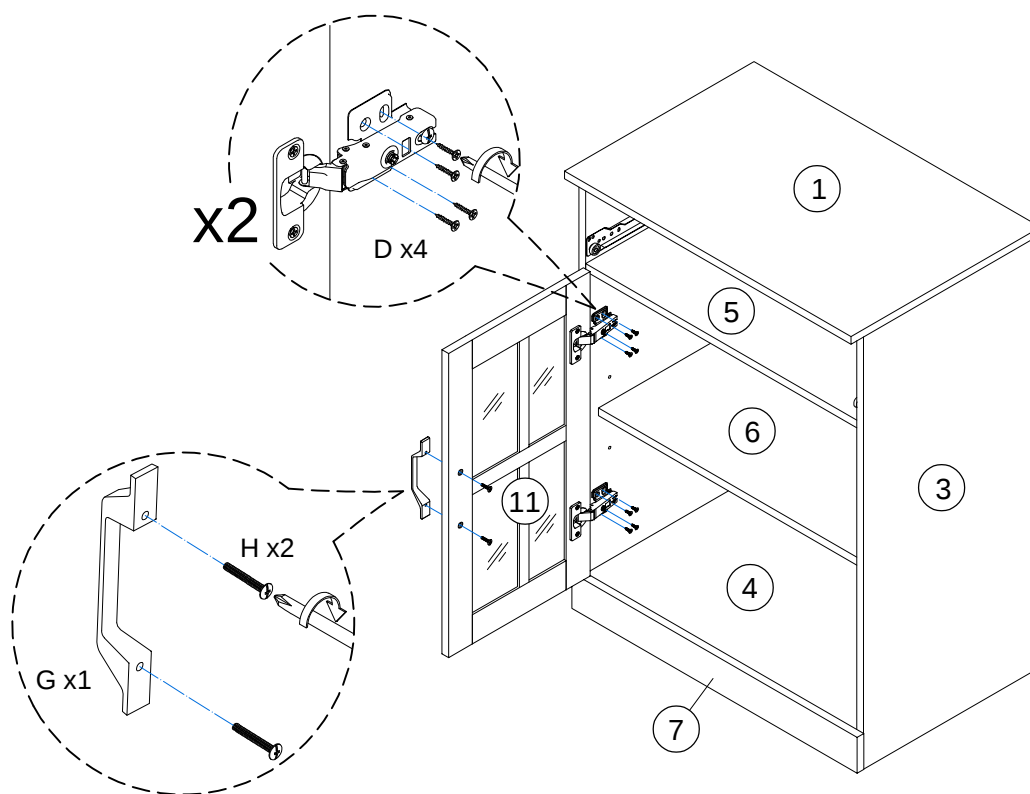
12

YOU WILL NEED

D x8

H x2

G x1




13

YOU WILL NEED

D x8

H x2

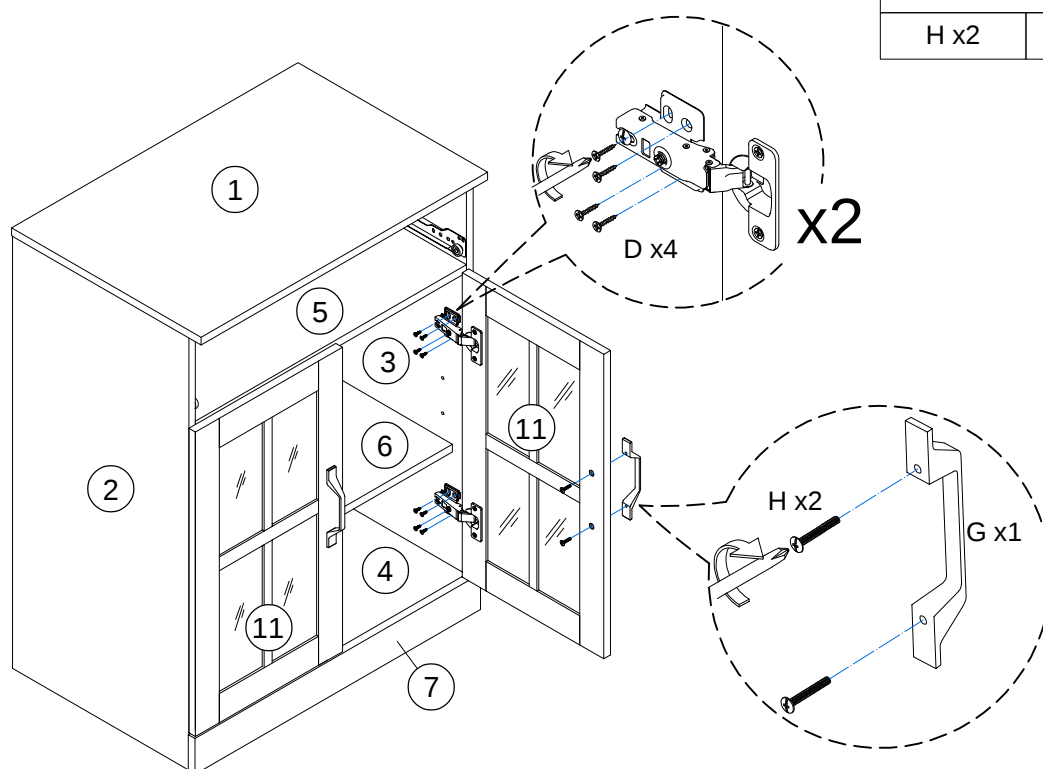G x1



YOU WILL NEED

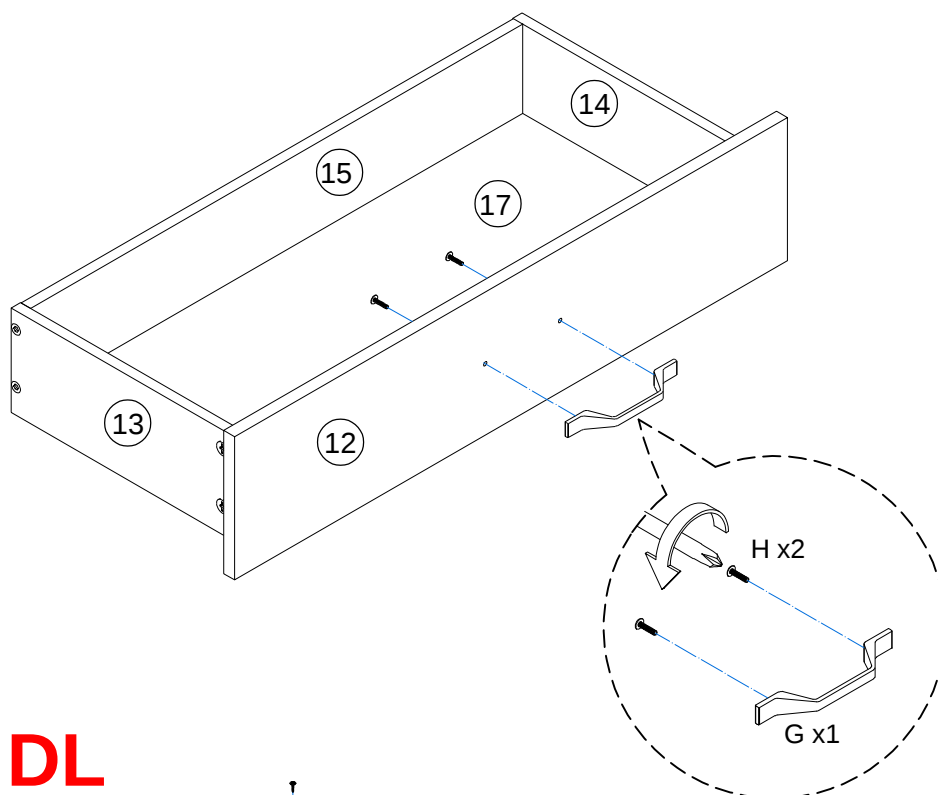
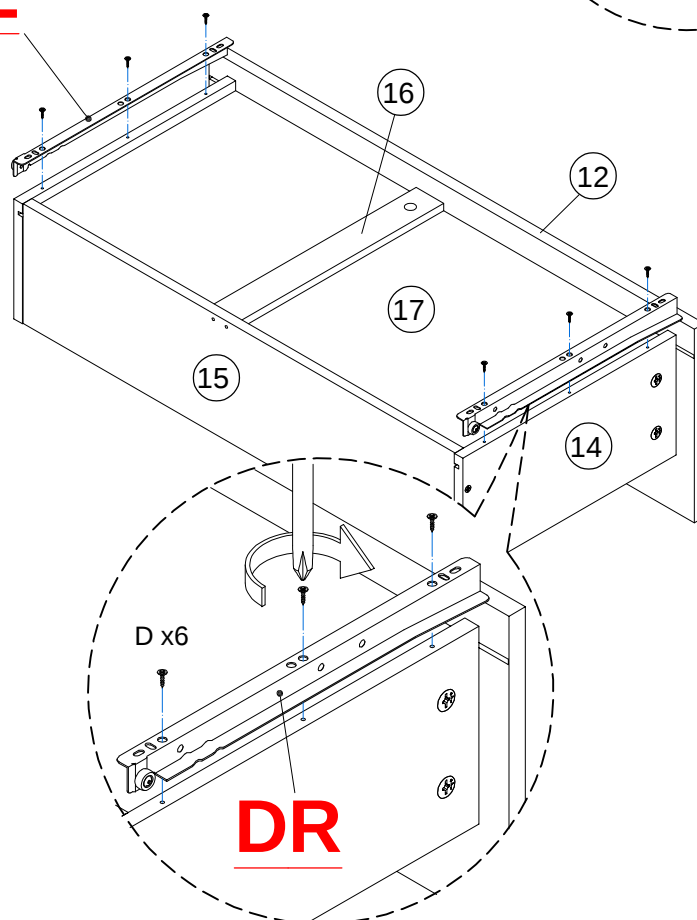
P.(DR) x1


P.(DL) x1

D x6

G x1

H x2

**DL**

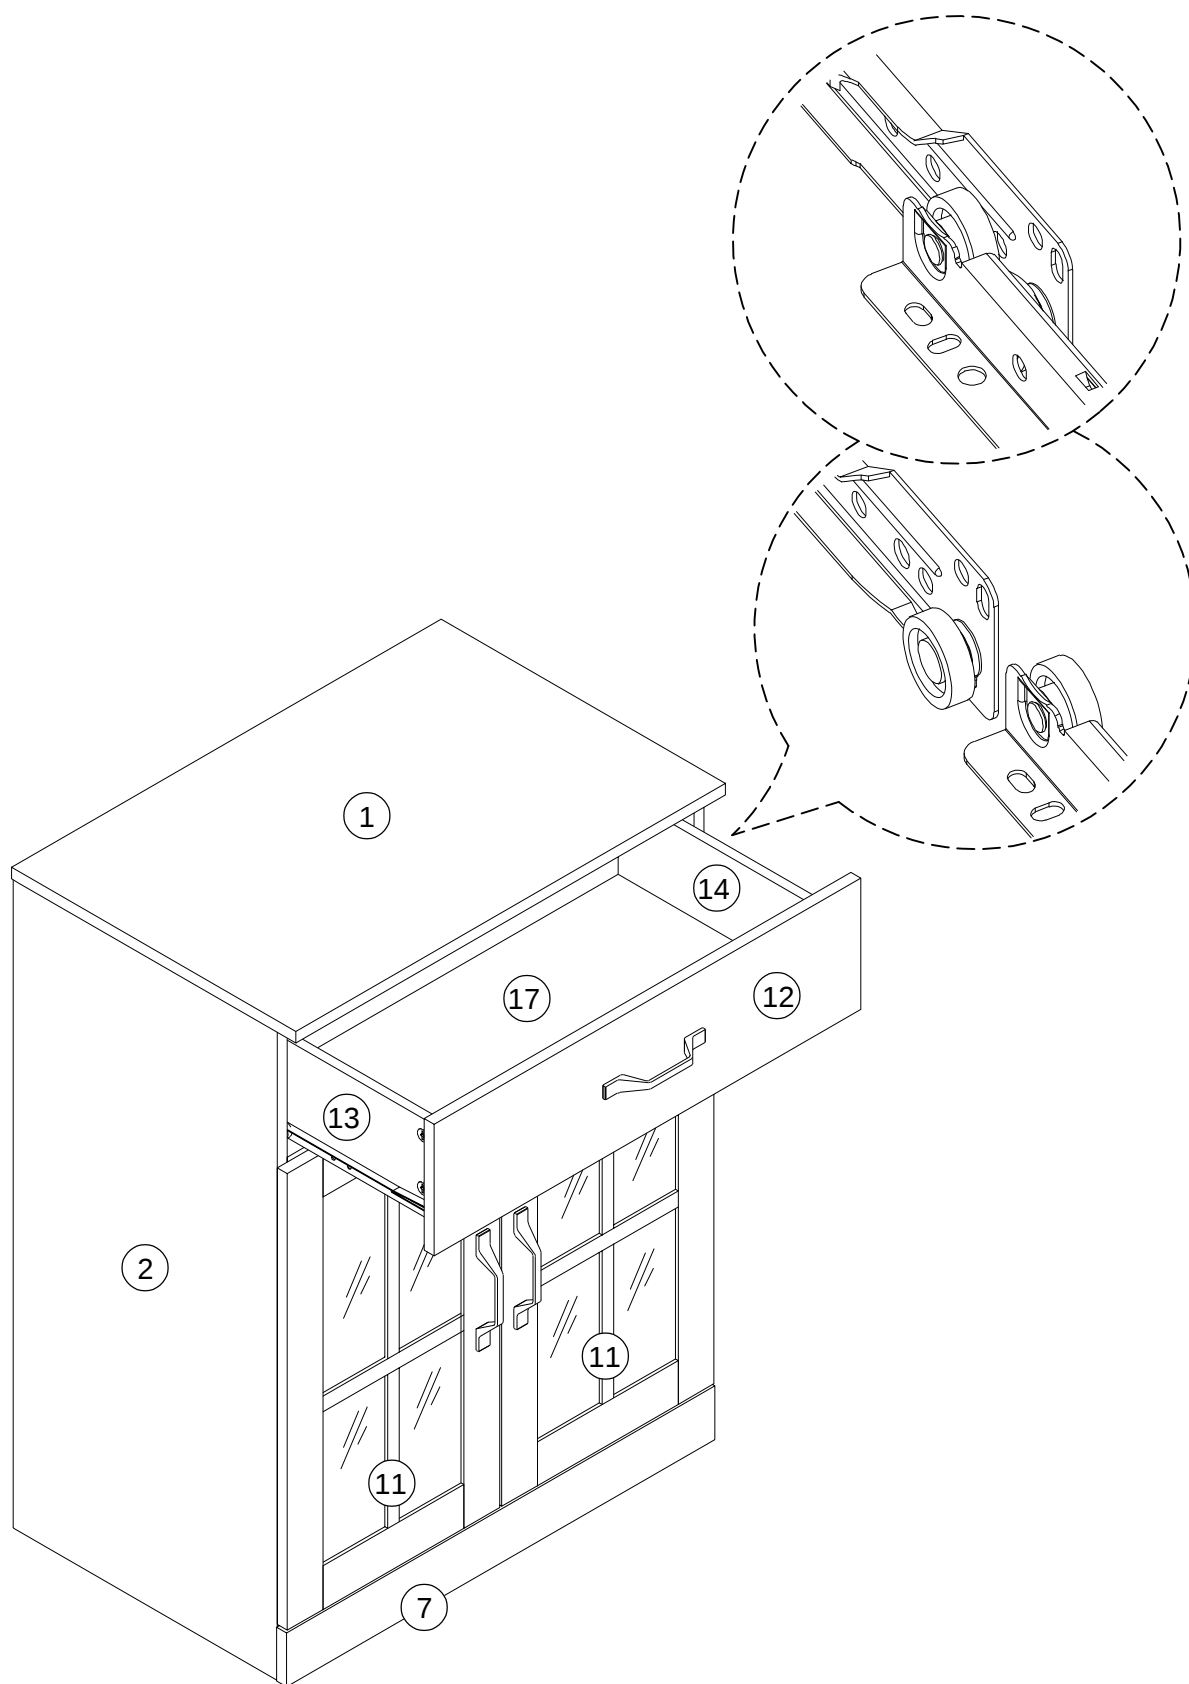

YOU WILL NEED

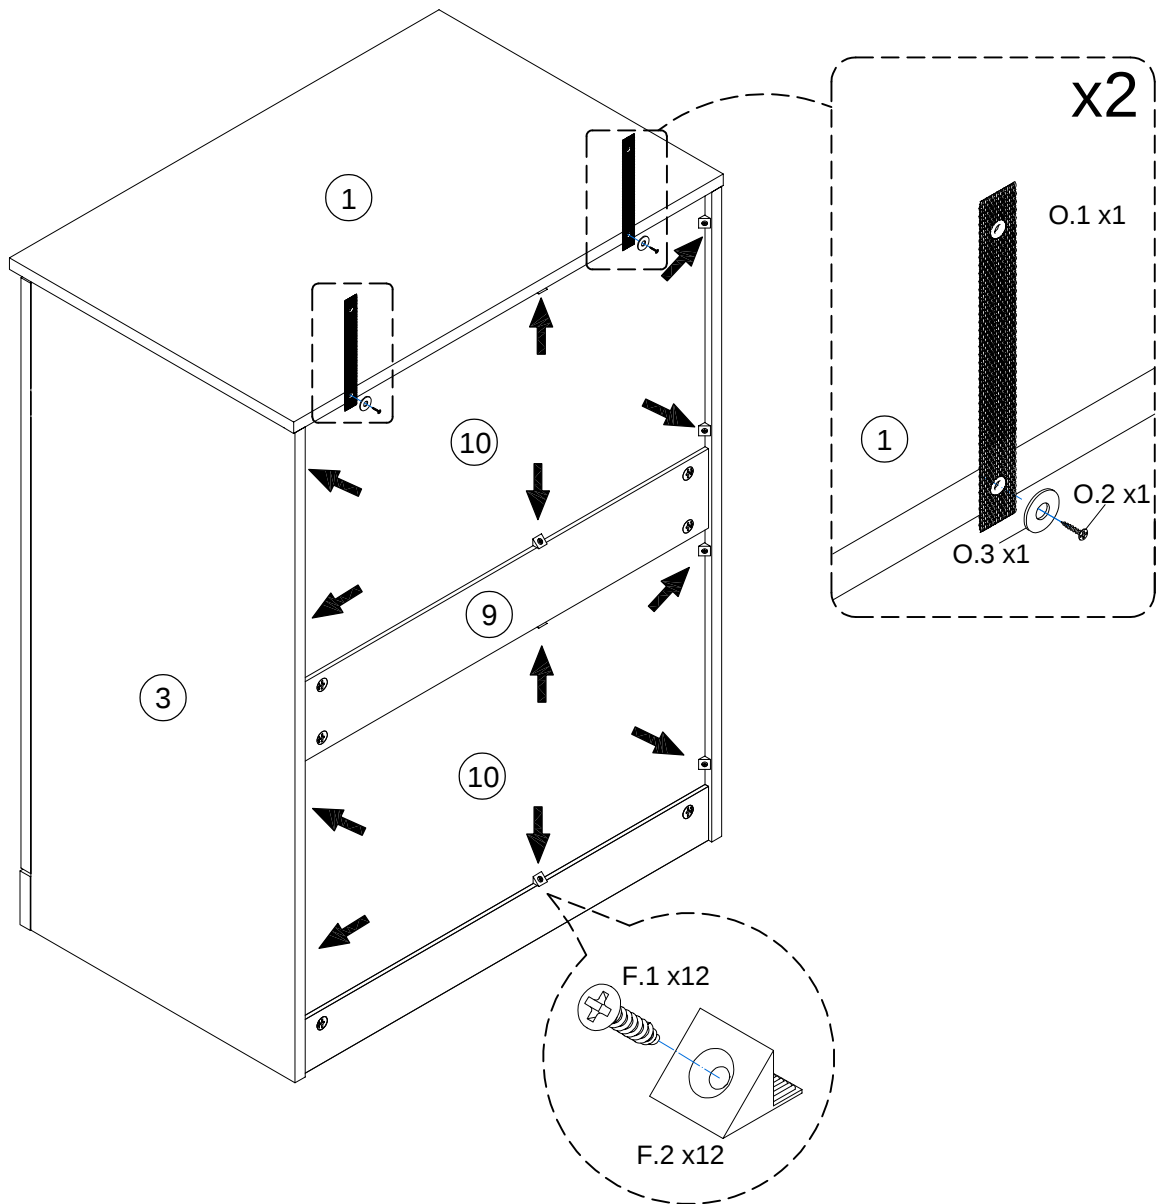
O.1 x2

O.2 x2


O.3 x2

F.1 x12

F.2 x12



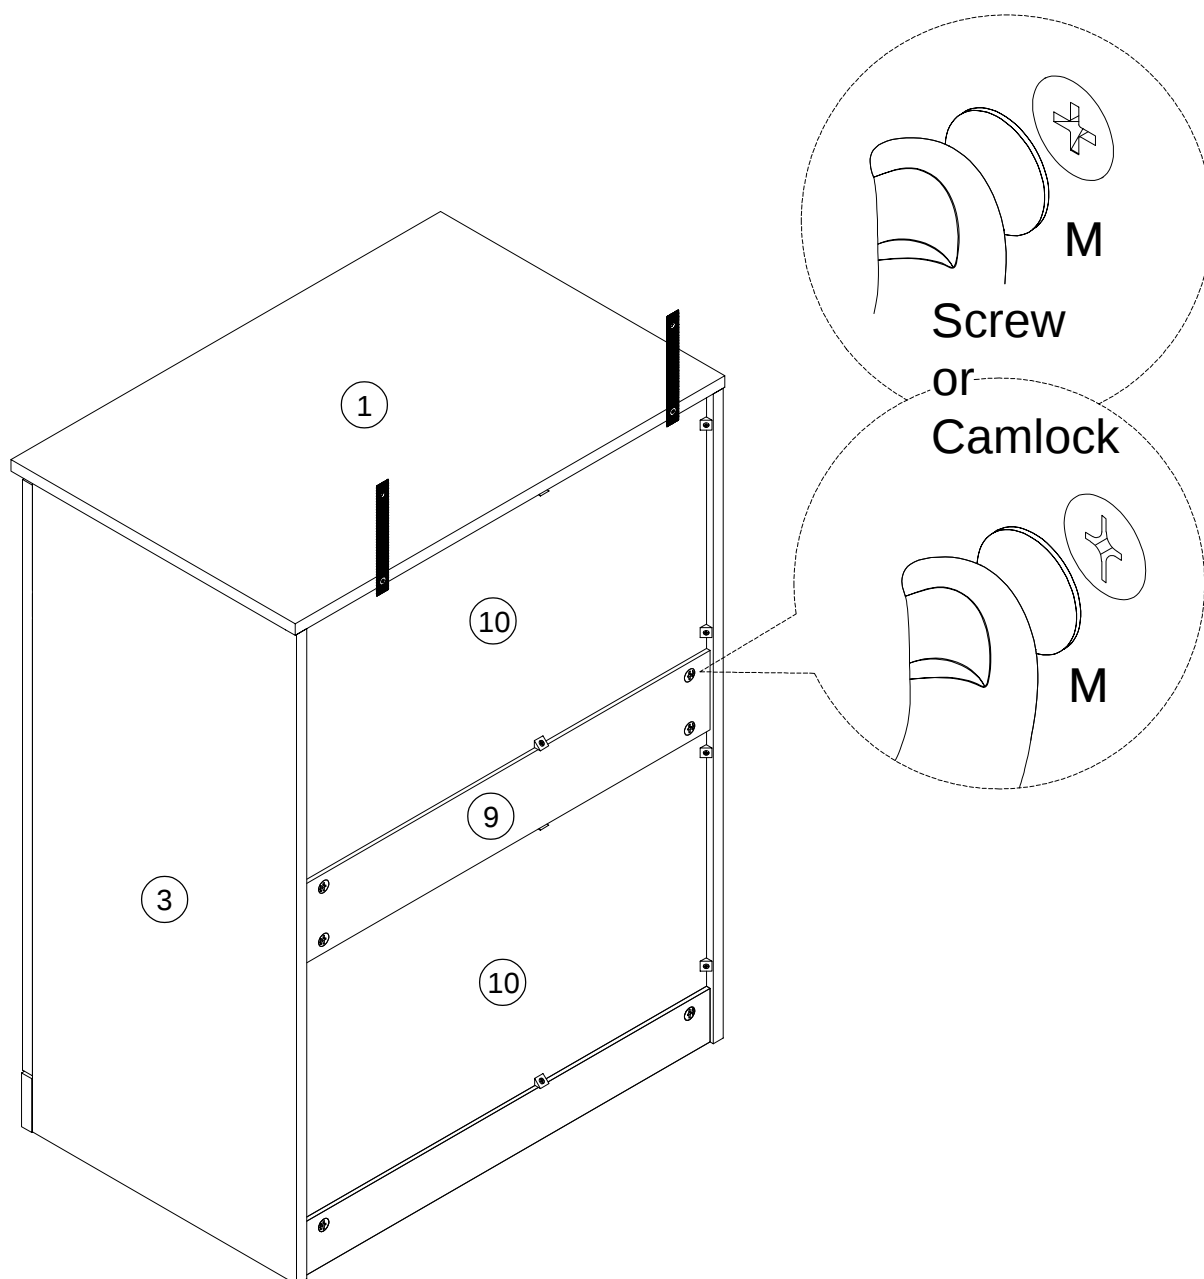**Add (M) fittings to all exposed holes (Screw or Camlock)
on the front of the product**




YOU WILL NEED

O.3 x2

N.1 x2

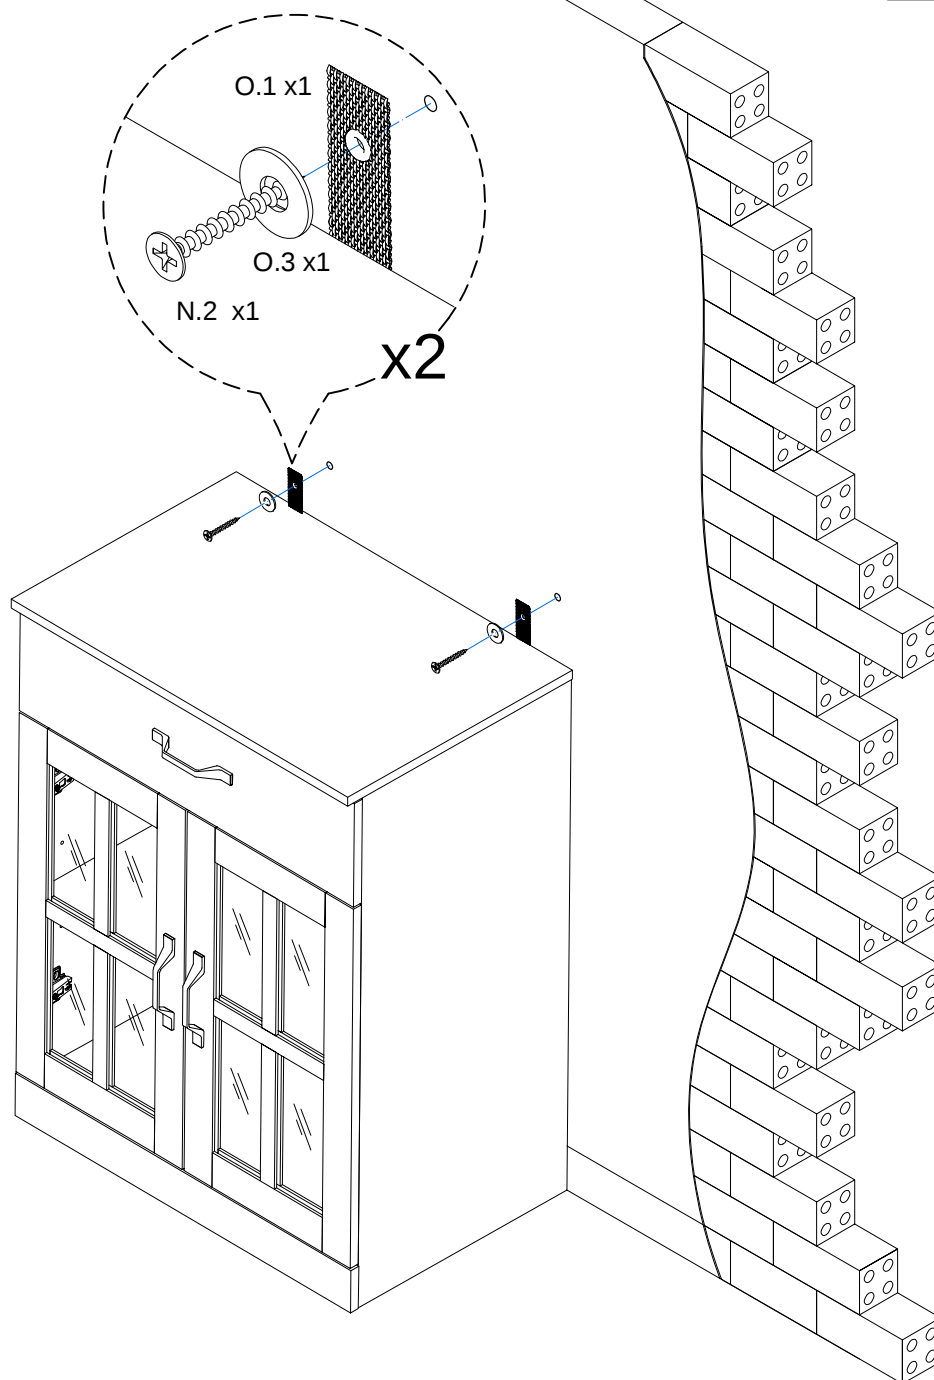N.2 x2



WALL

Mark the
hole drilling
location

I x2

WALL

Drill a hole

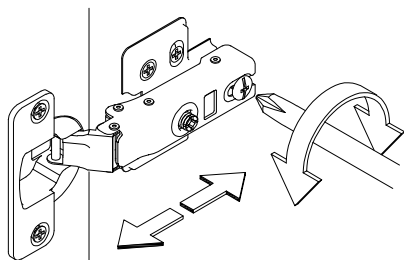
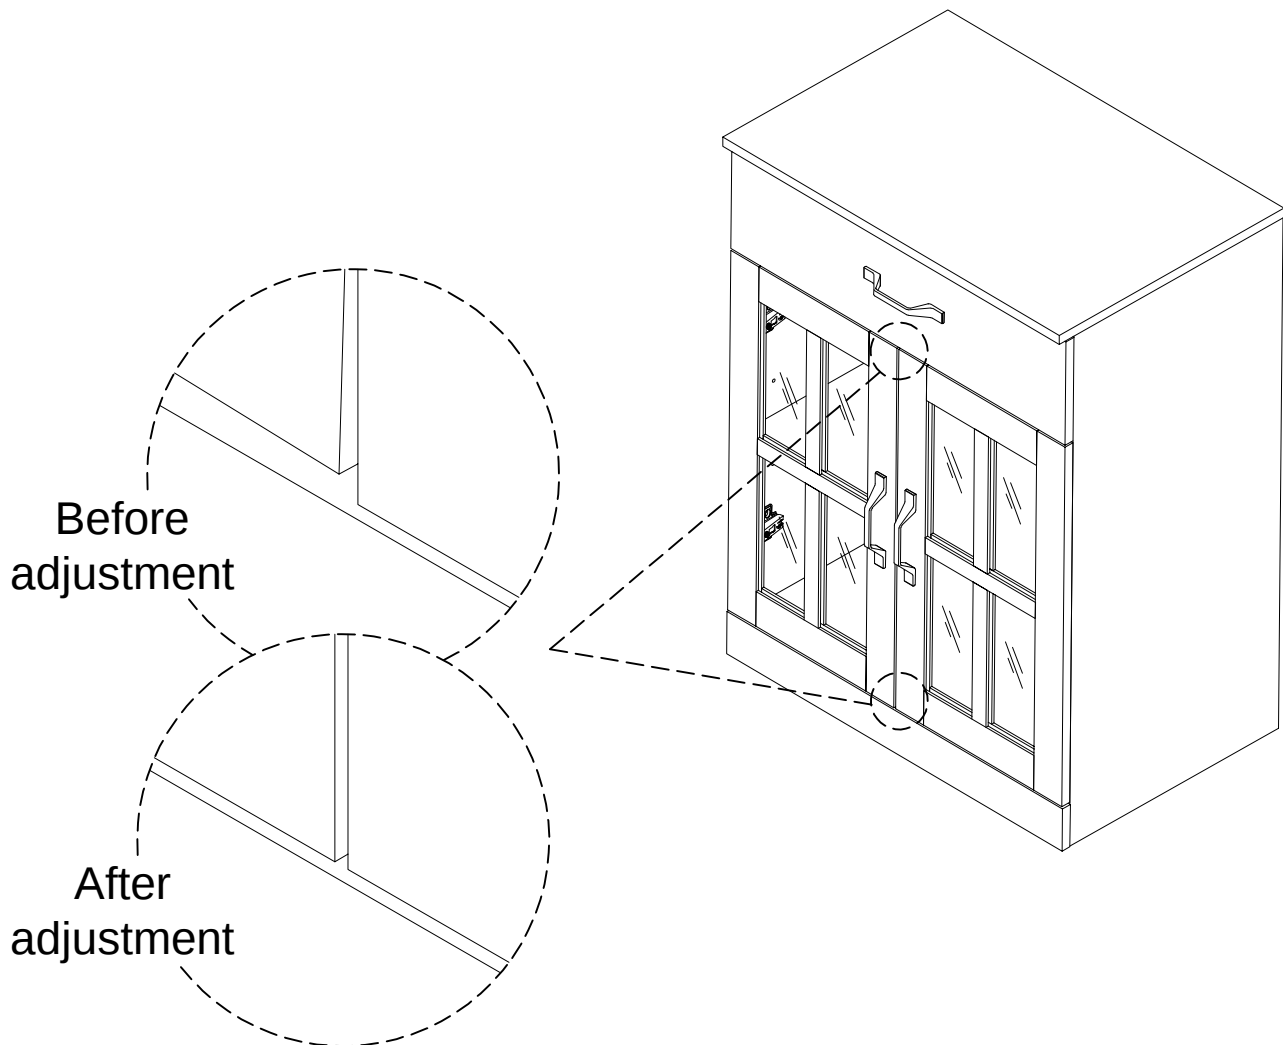
II x2

WALL


Use a hammer
to close
anchor (N.1)

III x2


Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the hole and then fixed the anchor (N.1) on the wall
Step 3: use screw (N.2) to fix the strap (O.1), and washers (O.3) on the wall

***IF THE DOOR ARE NOT BALANCE**

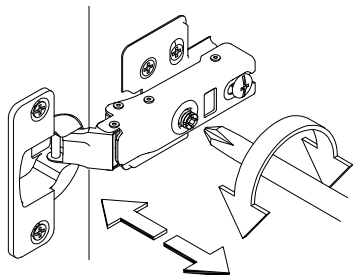Adjust the
door to run
back and
forth



Adjust the
door left
and right

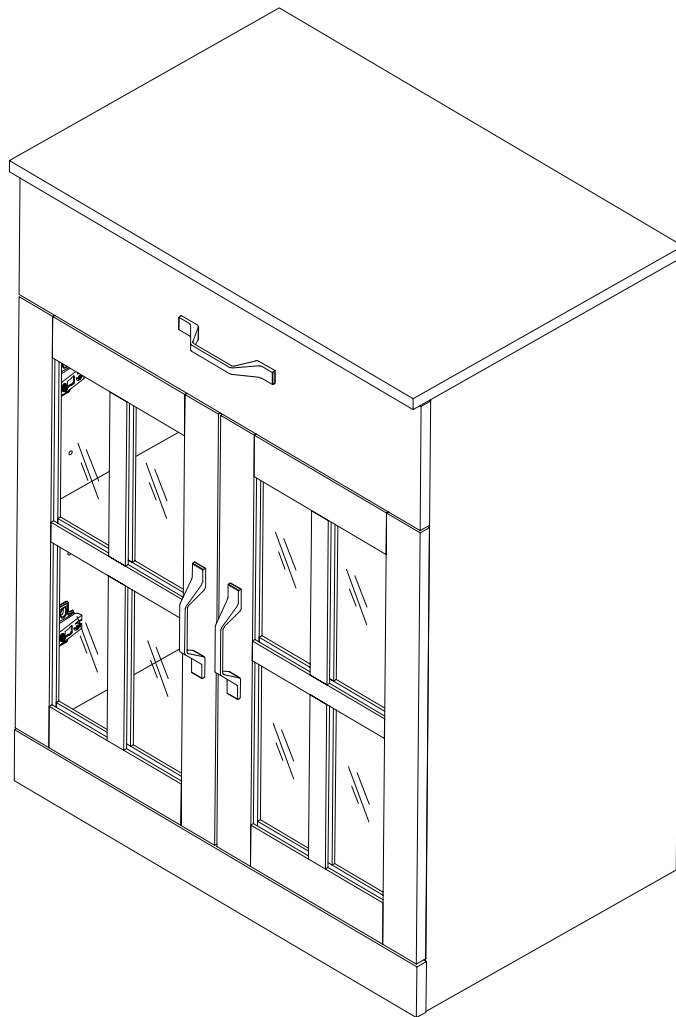

GUARANTEE

Storage Cabinet offers a 90-days warranty that begins on the date of the original purchase and applies to problems caused by the manufacturer.