


Caution:

Ensure to wear gloves while installing and be mindful of the sharp edge on the steel plate.

Installation Guide


STEP: 1

Place the two sideboard onto the baseboard.

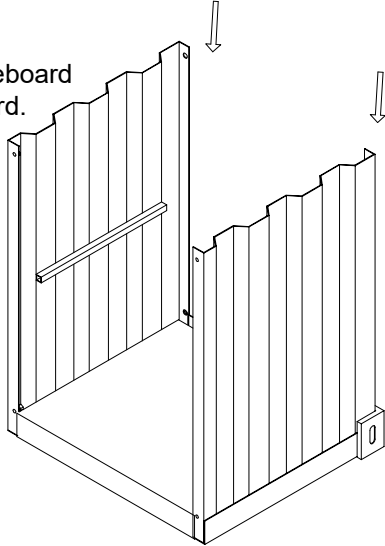


STEP: 2

Place the backboard onto the baseboard and keep it inside.

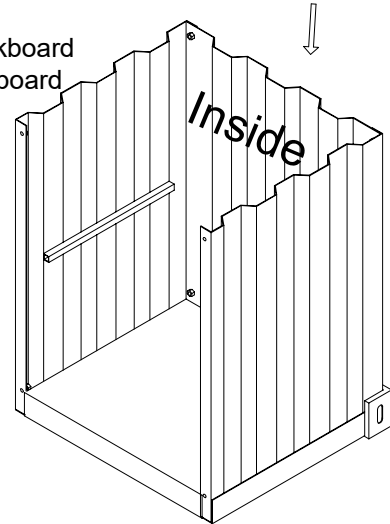


STEP: 3

Cover the lid.

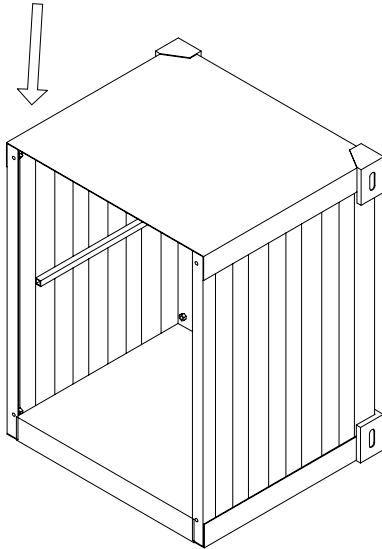


STEP: 4

Ensure proper alignment of all holes before securely tightening the four **short** screws into the backboard. (Use screwdriver).

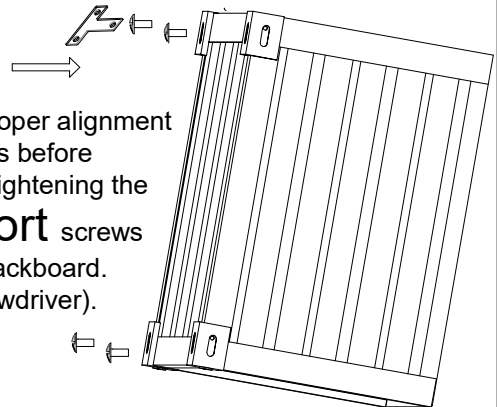


STEP: 5

Assemble the front door.

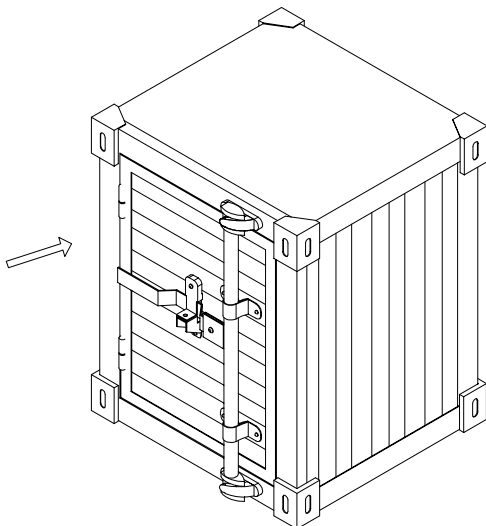


STEP: 6

Ensure proper alignment of all holes before securely tightening the four **long** screws into the front door. (Use screwdriver)

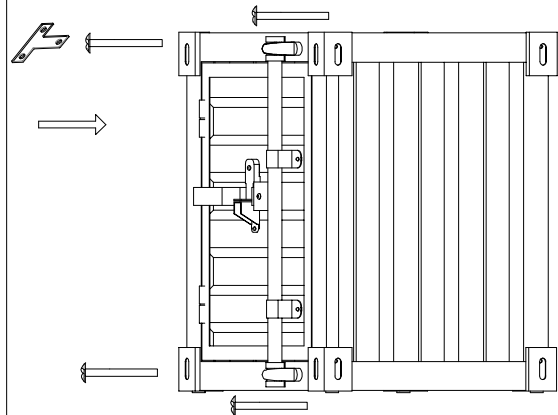


STEP: 7

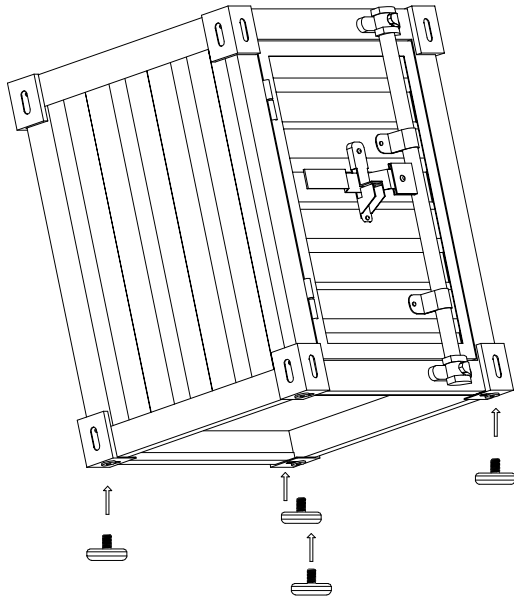

Securely fasten the footpad

STEP: 8

Place the separator plate.

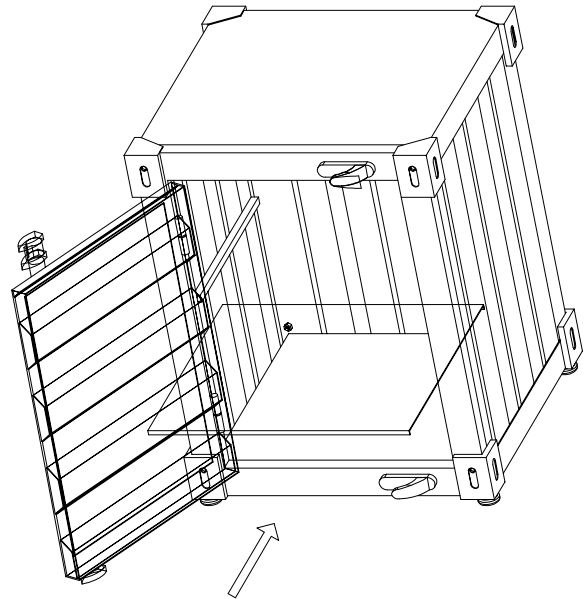

Accessories:



Long Screw 4pcs



Short Screw 4pcs



Footpad 4pcs



Lock 1pc



Screwdriver 1pc