


INSTALLATION MANUAL

BATHROOM MIRROR


CONTACT US

Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.


ACCESSORIES LIST

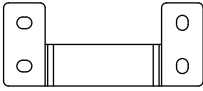

Bracket

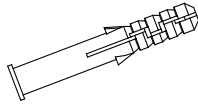


Wall Anchor-A

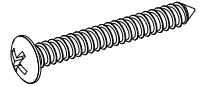

Short Screw

TOOLS REQUIRED

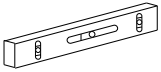


Level Ruler




Marker




Hammer

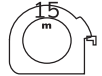

Tape Measure

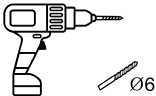

Electric Drill

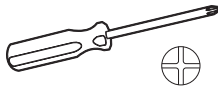


Phillips Screwdriver




Safety Goggles

INSTRUCTIONS

1. Confirm the locations of four drill holes with a level and mark them on the wall.

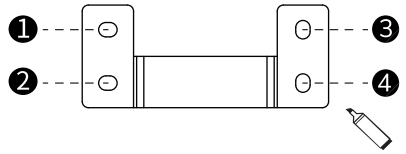

2. Use an electric drill to punch holes at the marked spots, and then apply wall anchors A with a hammer.

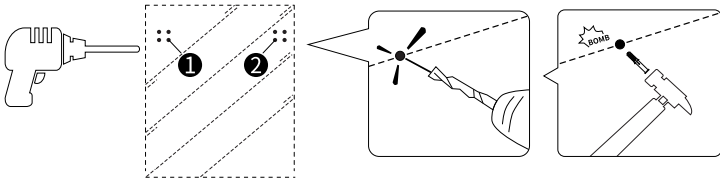

Thickness of Wall

Recommended Drill Bit

> 16mm



1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)


< 8mm

Unapplicable

Note: Please wear goggles and pay attention to safety.

3. Screw the bracket to the wall.

Note: If your mirror has only one hook, just install one hanging strip.

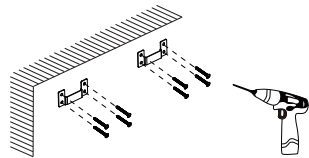

4. Place the mirror against the wall, align the hook with the mounted bracket, slowly lower the mirror down, and make sure that it slots into the right position and hangs securely.

