

SIMPLE INSTALLATION STEPS

* This product must be installed on a load-bearing or solid wall. Before installation, confirm that the wall is flat and free of hollow areas, and avoid the paths of electrical wires and water pipes inside the wall to prevent damage while drilling.

{Obtain the following installation tools in advance}

Electric Screwdriver
(Recommended use)




or



Screwdriver


After unboxing, verify each product part and its parts package against the checklist below before starting installation

1 pc

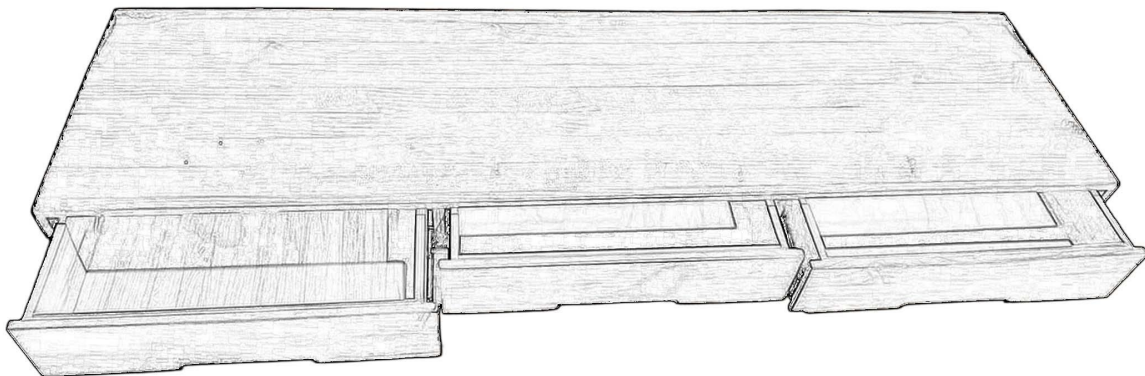

Cabinet (Desk body)

4 pcs

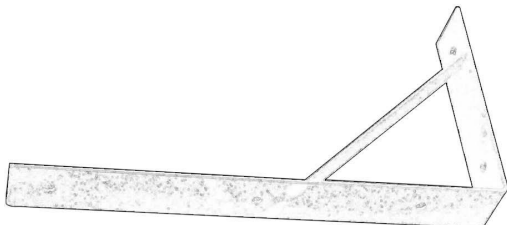

Triangular support bracket
(L-shaped bracket)

Several



Long screws

Several



Green plastic
expansion anchors

Several



Self-tapping
screws

SIMPLE INSTALLATION STEPS



01 STEP1

Place the triangular support bracket against the wall, determine the installation position and height, then mark the bracket's fixing holes on the wall with a marker pen. Use a spirit level to make sure the bracket is level, preventing the cabinet from tilting after placement.



02 STEP2

Drill holes at the marked positions. Align the green plastic expansion anchor with the wall hole and tap it lightly with a hammer until it is fully embedded; the outer end of the anchor should be flush with the wall surface.



03 STEP3

Place the triangular support bracket against the wall, paying attention to its orientation: the supporting surface faces upward to hold the desk, and the fixing surface stays flush against the wall. Insert the long screws through the bracket's fixing holes and drive them one by one into the wall anchors, firmly securing the bracket to the wall. Tighten all screws and confirm the bracket is stable before proceeding to the next step.

SIMPLE INSTALLATION STEPS



04 STEP4

Place the cabinet steadily onto the supporting surfaces of the fixed brackets and align its position. Then insert the self-tapping screws one by one into the three corresponding small holes on the cabinet base to reinforce the connection, ensuring the cabinet is firmly joined to the brackets.



05 STEP5

After installation, check that the cabinet is level, the brackets are secure, and all screws are fully tightened. Once everything is confirmed, the desk is ready for normal use.