

ASSEMBLY INSTRUCTIONS

2630Q1





Weight Capacity Max to 700LBS



Mattress Size :



80"L x 60"W x (6"-10")H

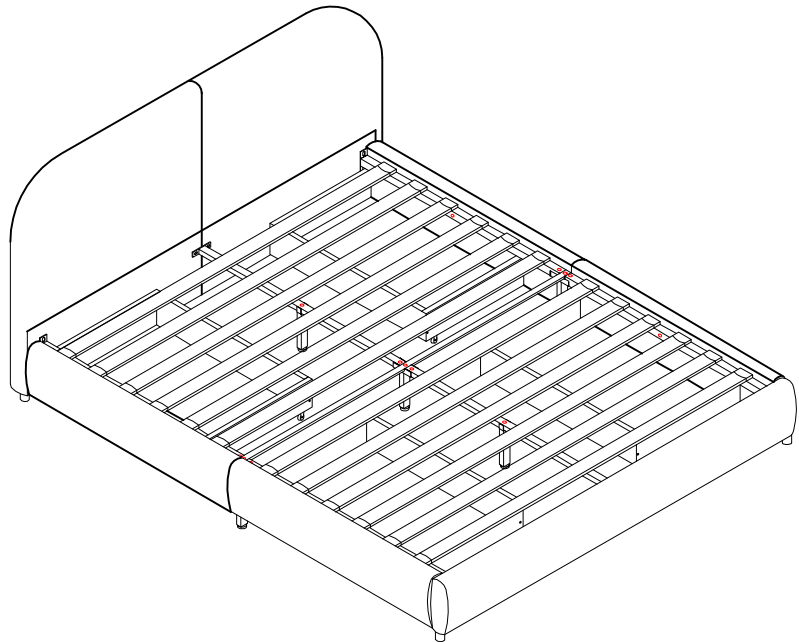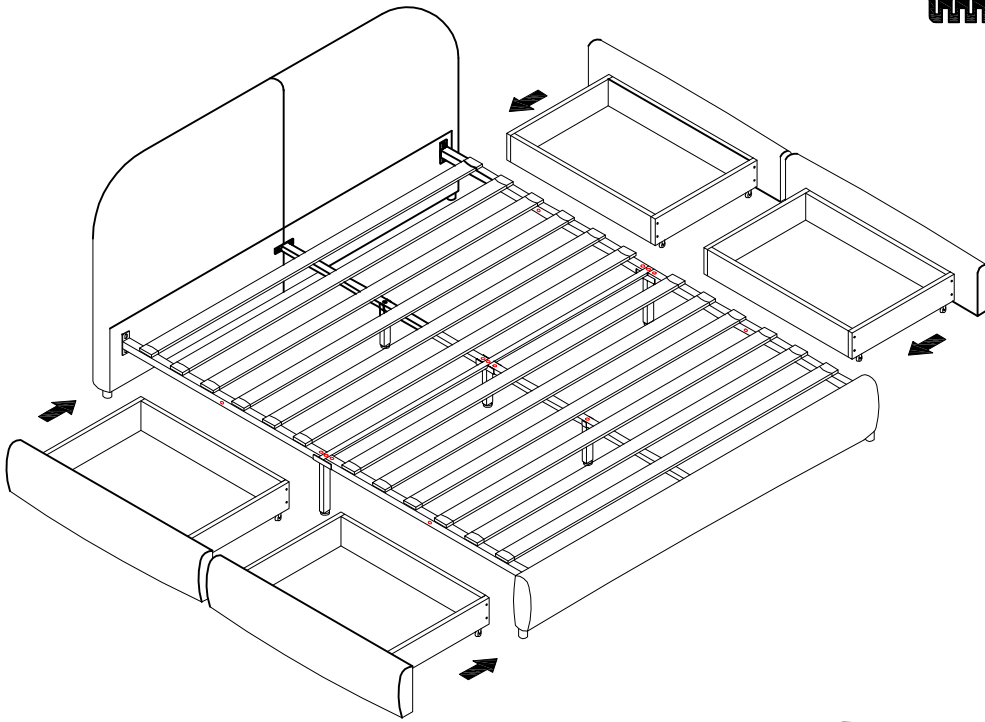

Install all screws according to the instructions, and then tighten them completely.


PACKING DETAILS:TOTAL 2 BOXES

2630Q1-A



	1-(1pc)
	2-(1pc)
	6-(2pcs)
	7-(1pc)
	8-(2pcs)
	9-(4pcs)
	10-(24pcs)

2630Q1-A




(Hardware Packet)

	M8 x 30mm A-(12pcs +1)
	M8 x 45mm B-(14pcs +1)
	M6 x 30mm C-(20pcs +1)
	M8 D-(26pcs +1)
	M8 x19mm E-(26pcs +1)
	M8 F-(1pc)
	M6 x 40mm G-(80pcs +2)
	M8 x15mm H-(64pcs +2)
	I-(1pc)
	M6 x 14mm J-(16pcs +1)
	M6 K-(1pc)


2630Q1-A

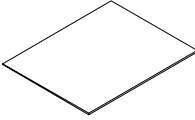	12-(16pcs)
	14-(8pcs)
	15-(4pcs)
	16-(8pcs)
	17-(4pcs)
	18-(4pcs)
	19-(4pcs)


2630Q1-B

	3-(4pcs)
	4-(2pcs)
	5-(1pc)
	11-(12pcs)
	13-(4pcs)
	20-(1pc)


STEP 1

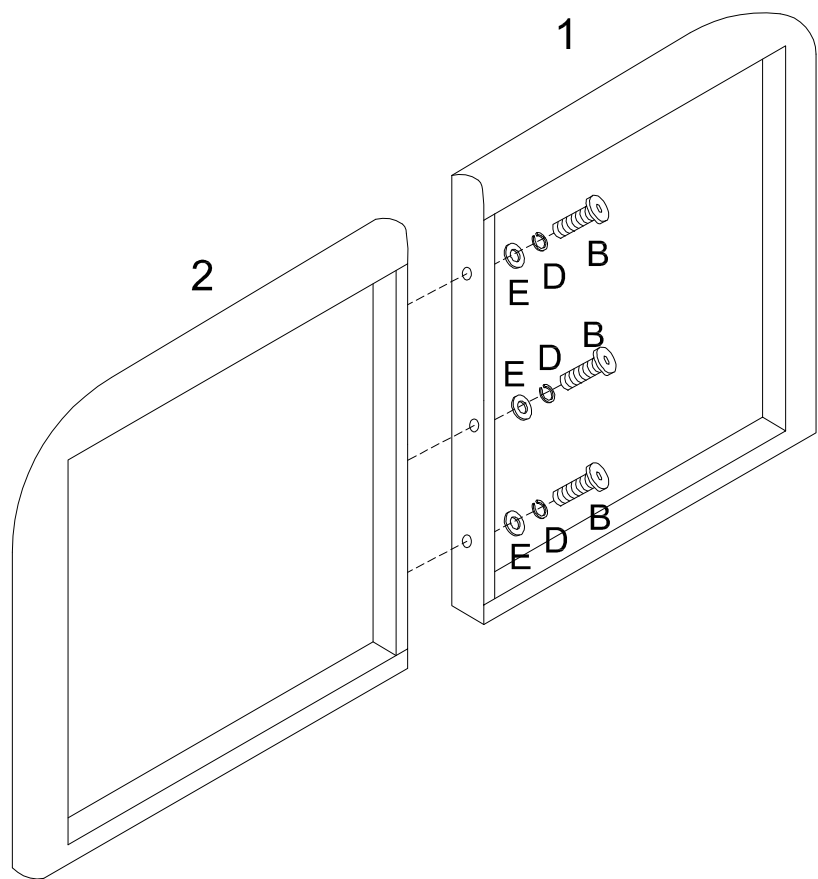


STEP 2

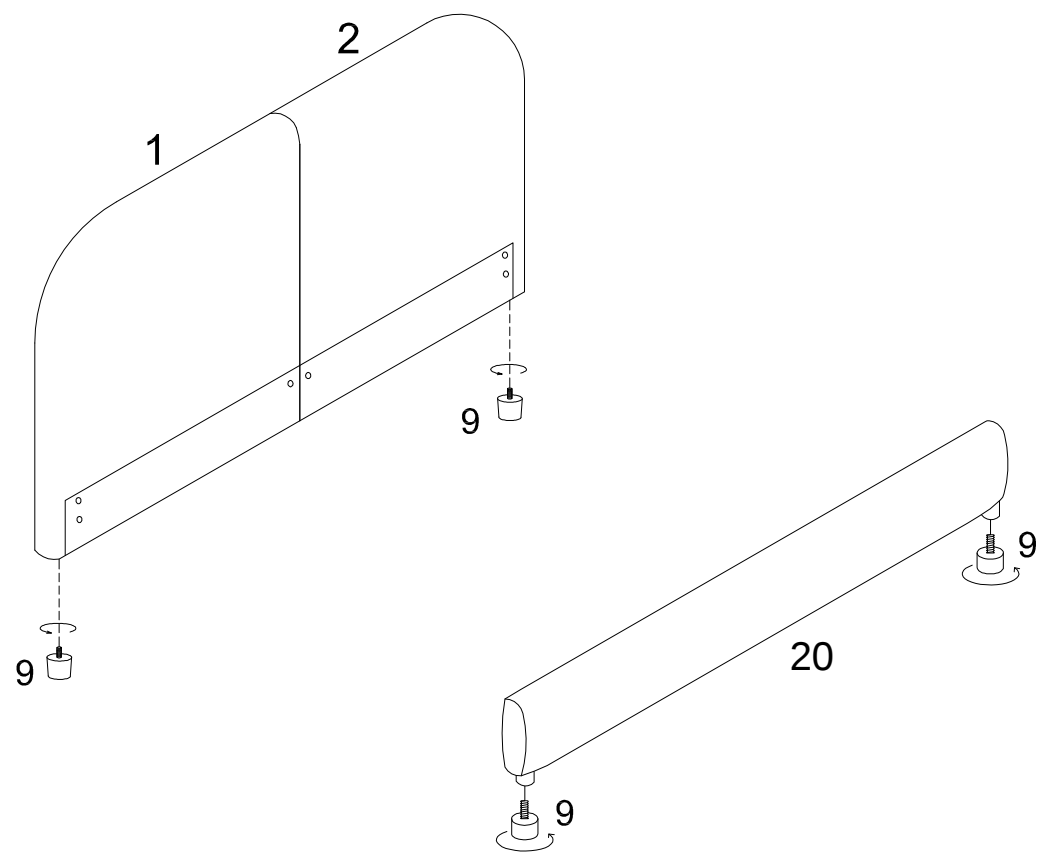


STEP 3

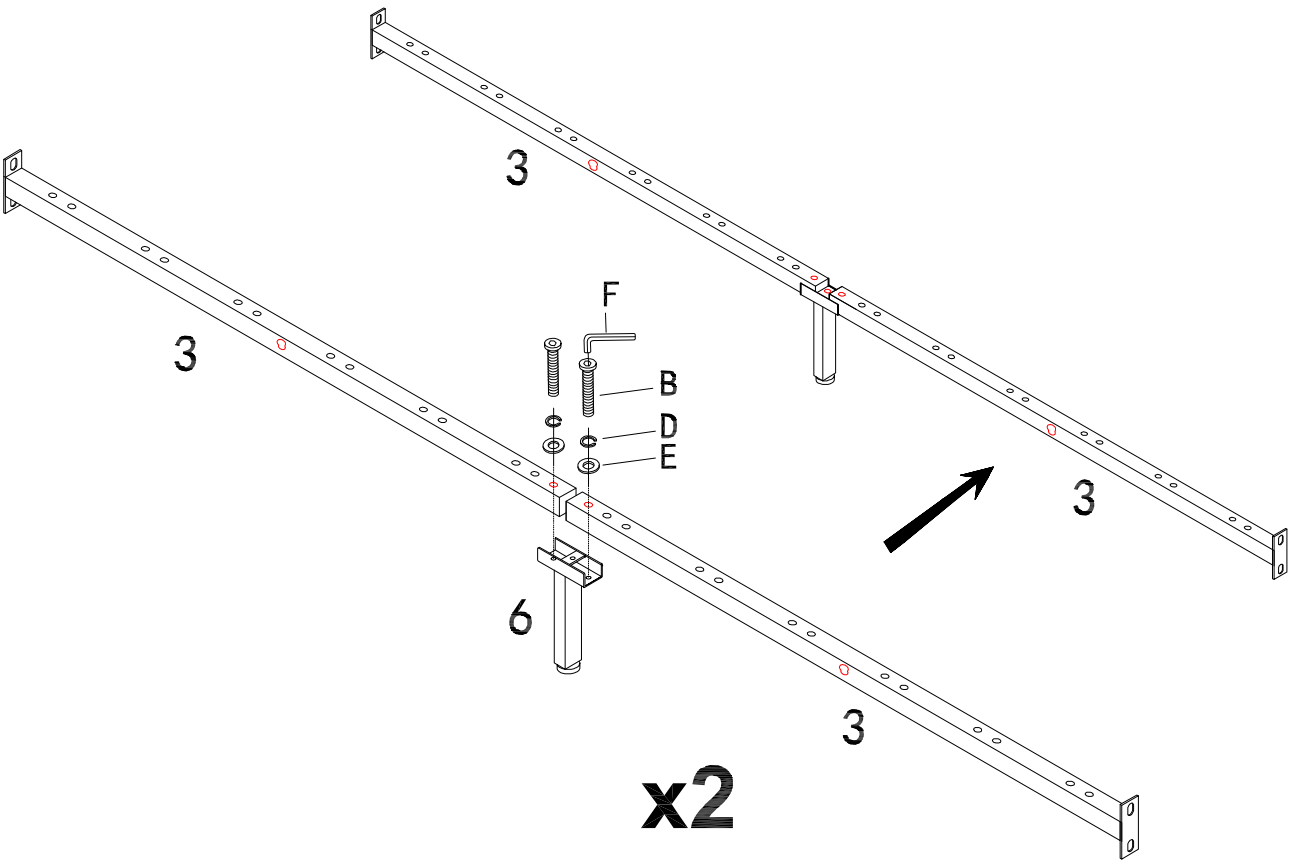


STEP 4

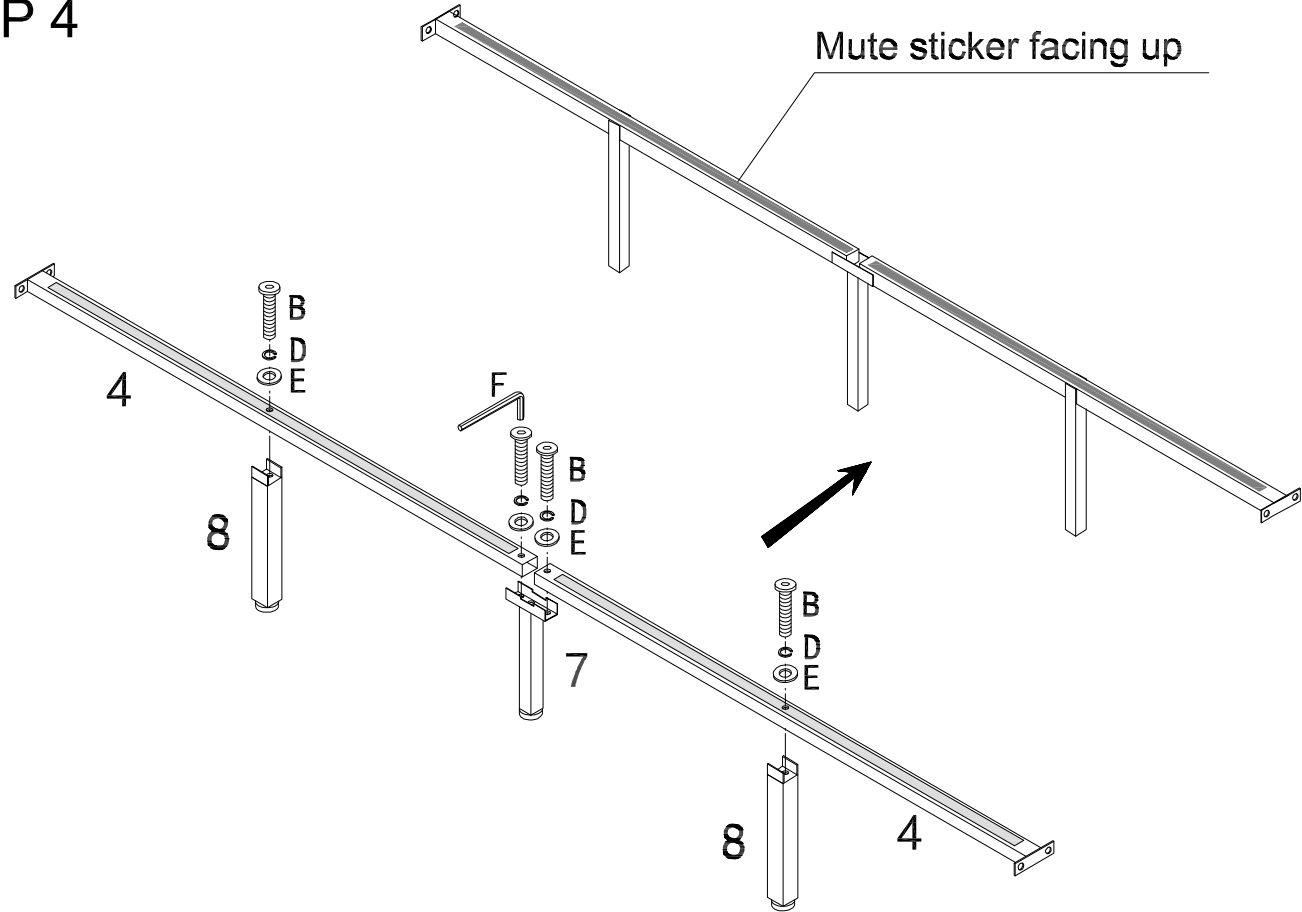


STEP 5

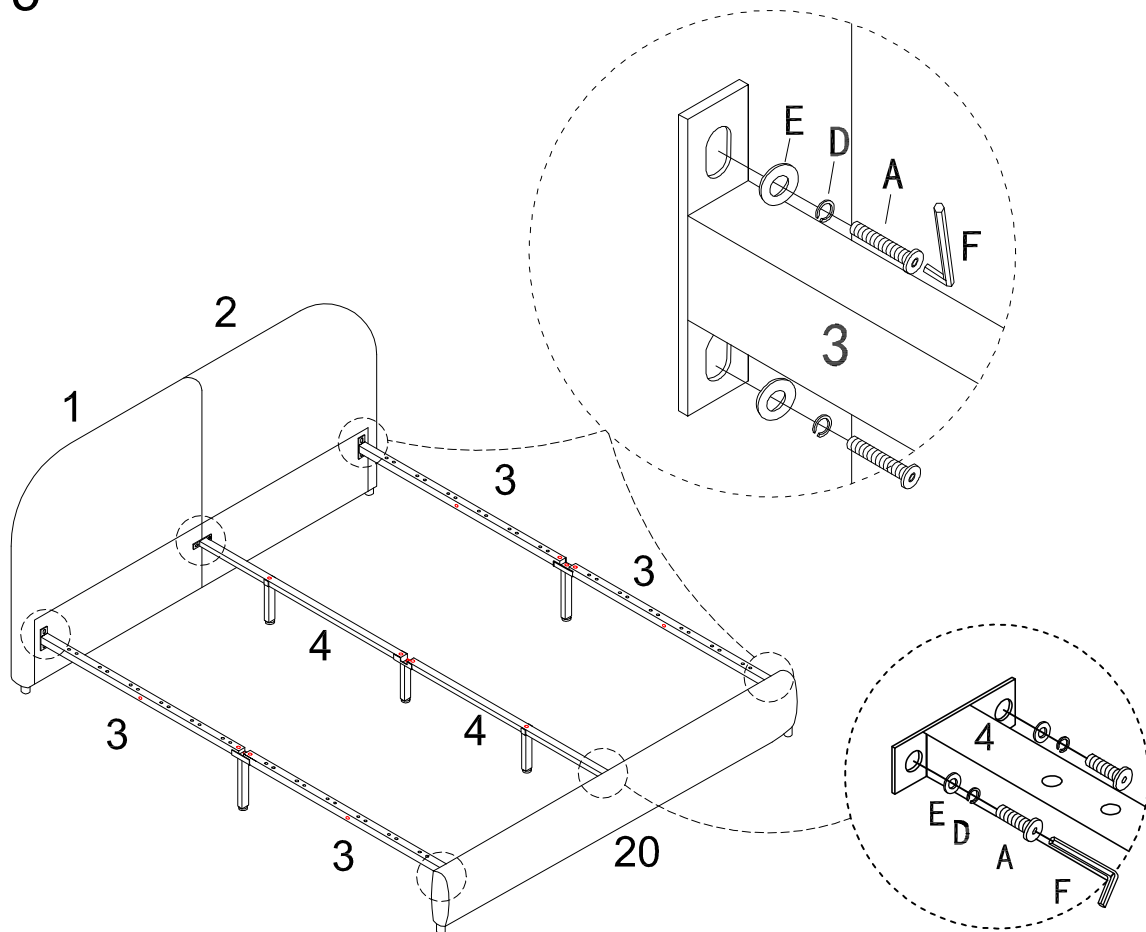


STEP 6

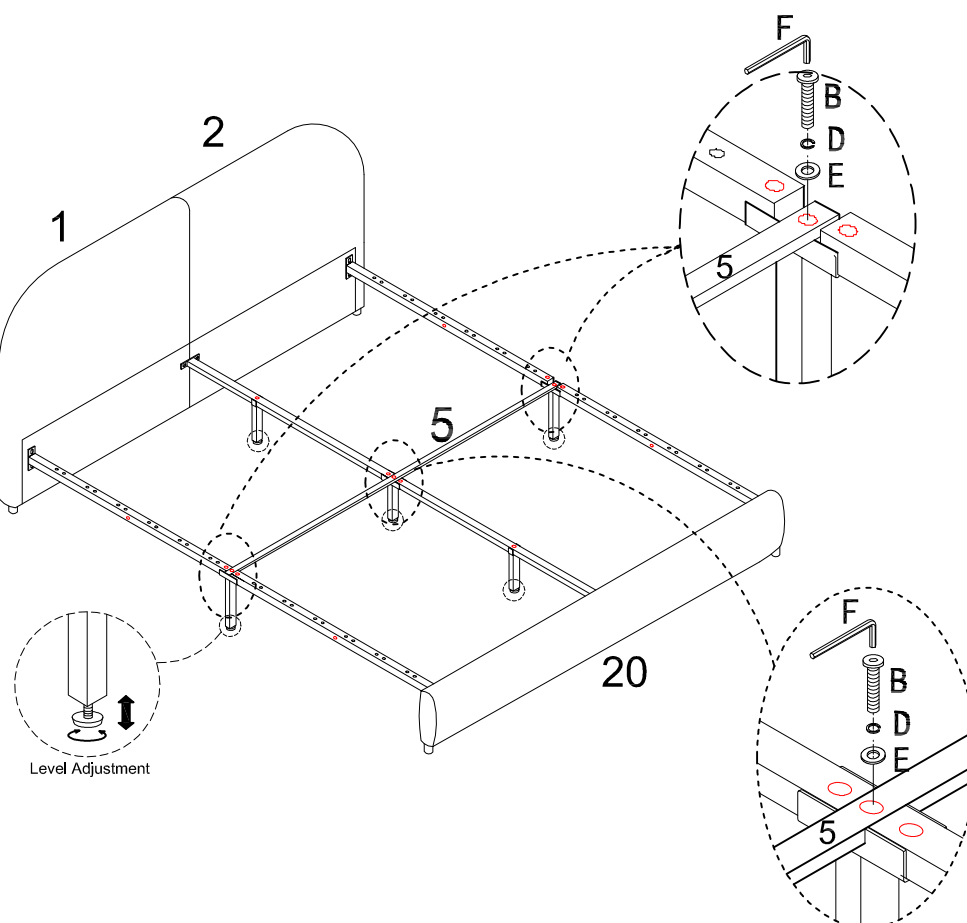

STEP 7

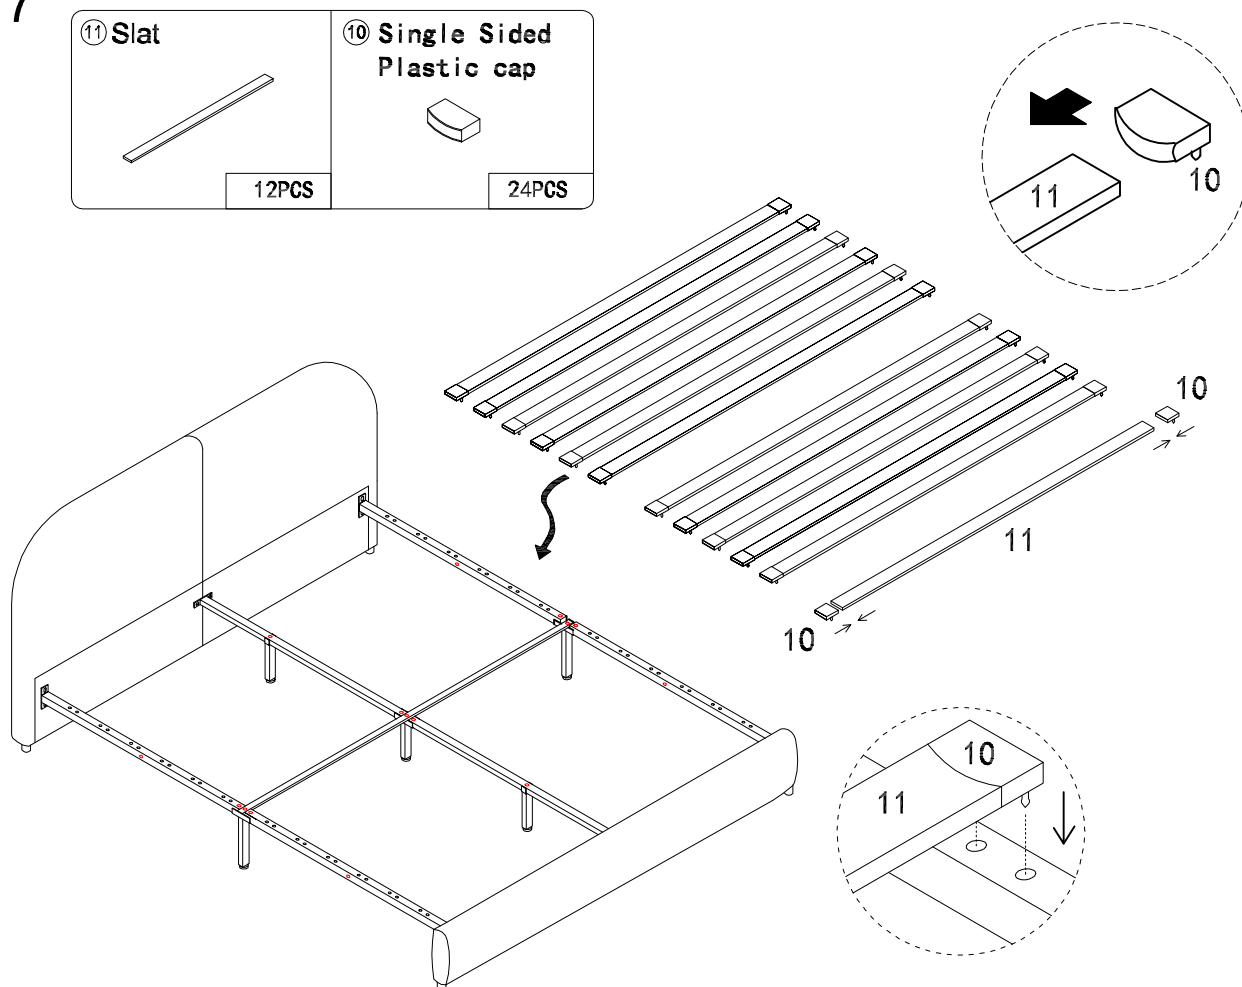


STEP 8

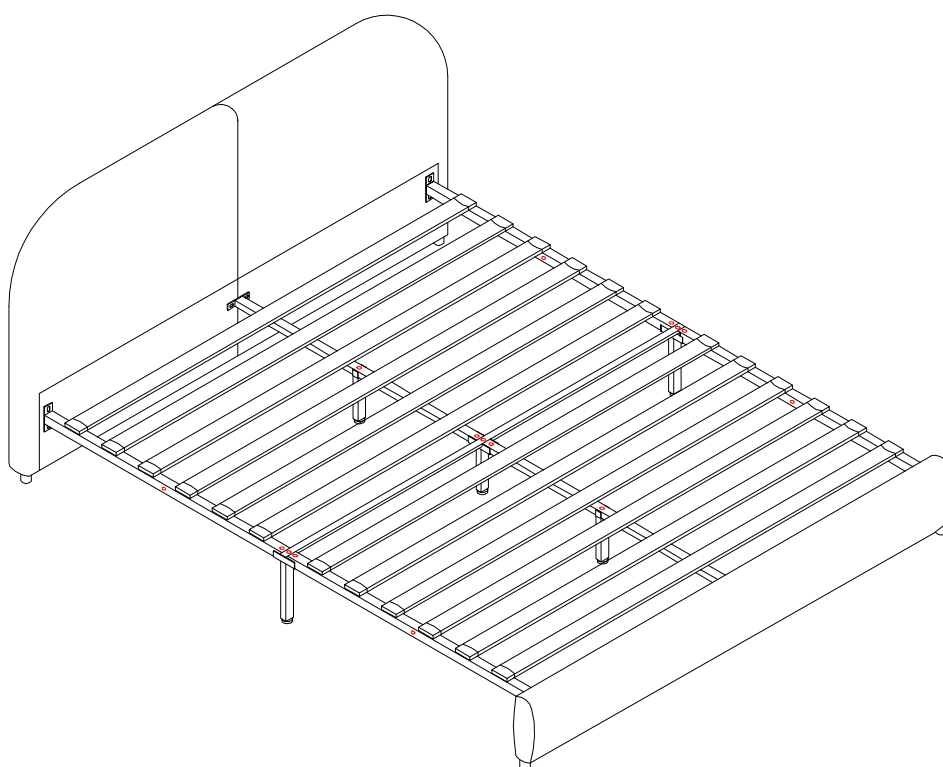


STEP 9

ASSEMBLE DRAWER

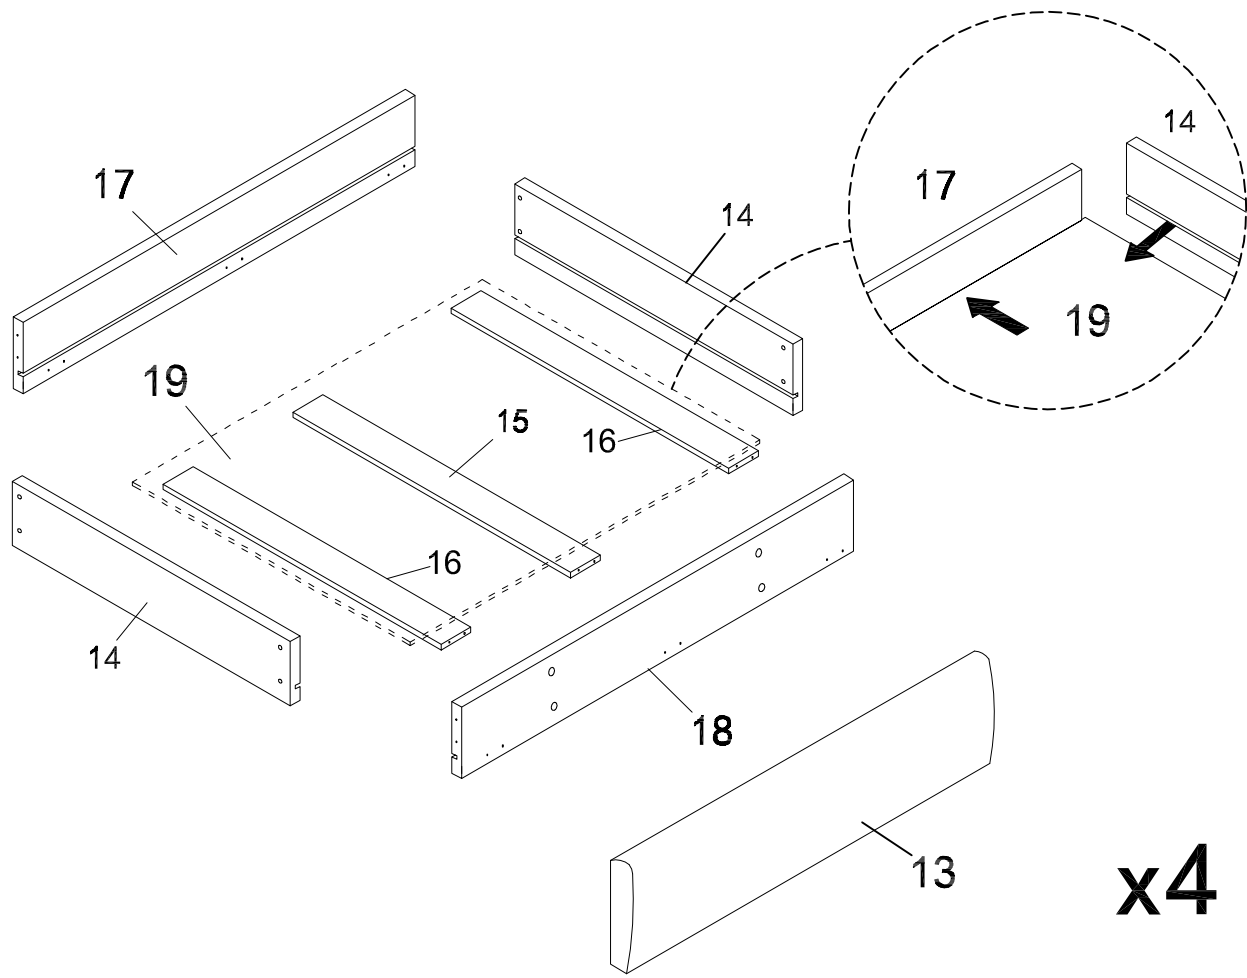


x4

STEP 10

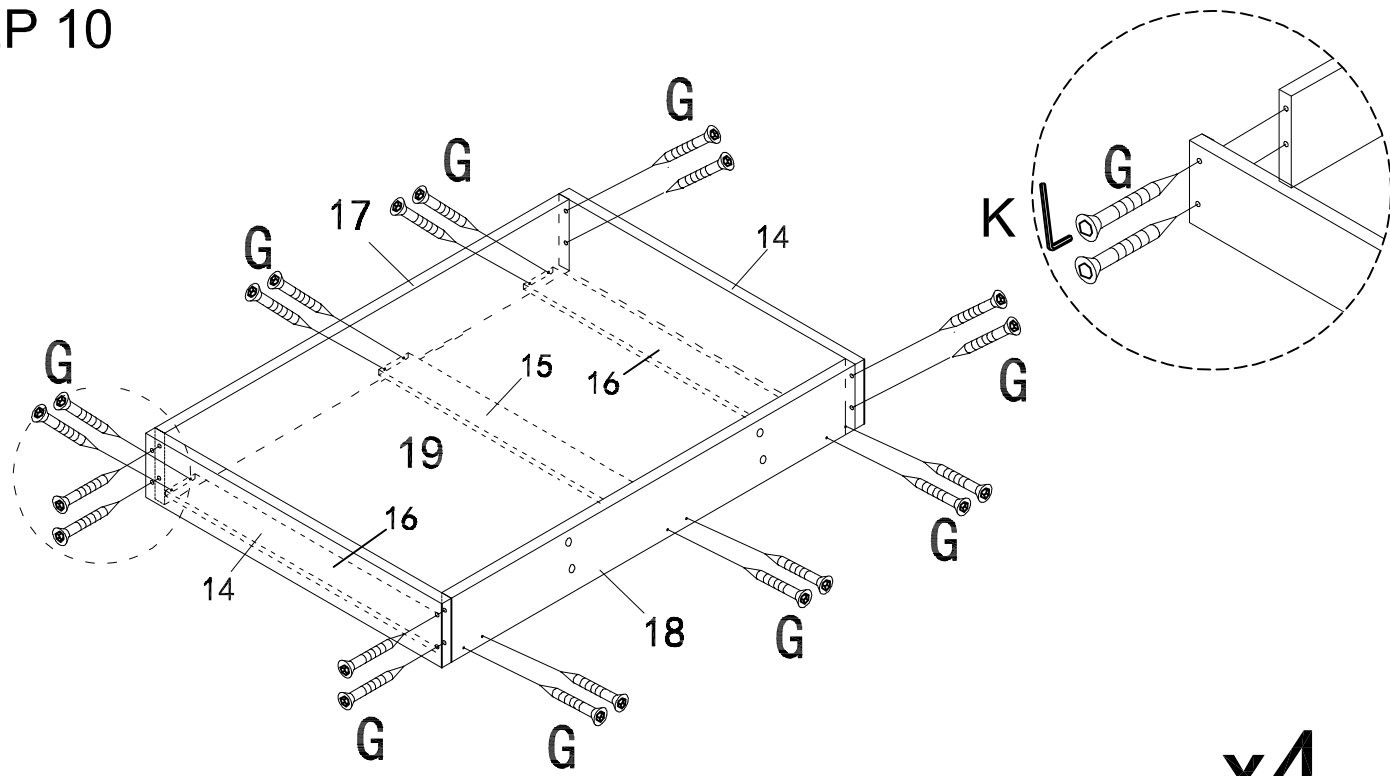


x4

STEP 11

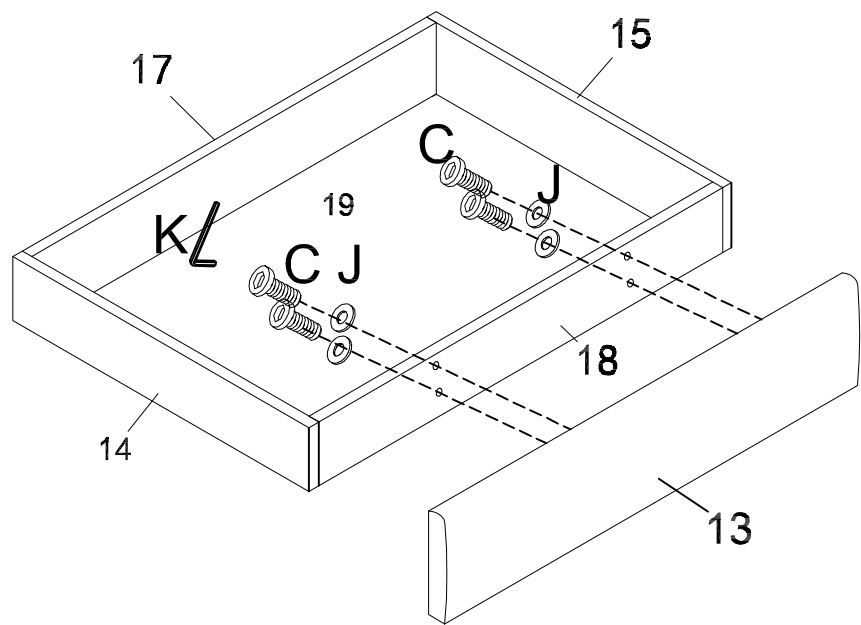


x4

STEP 12

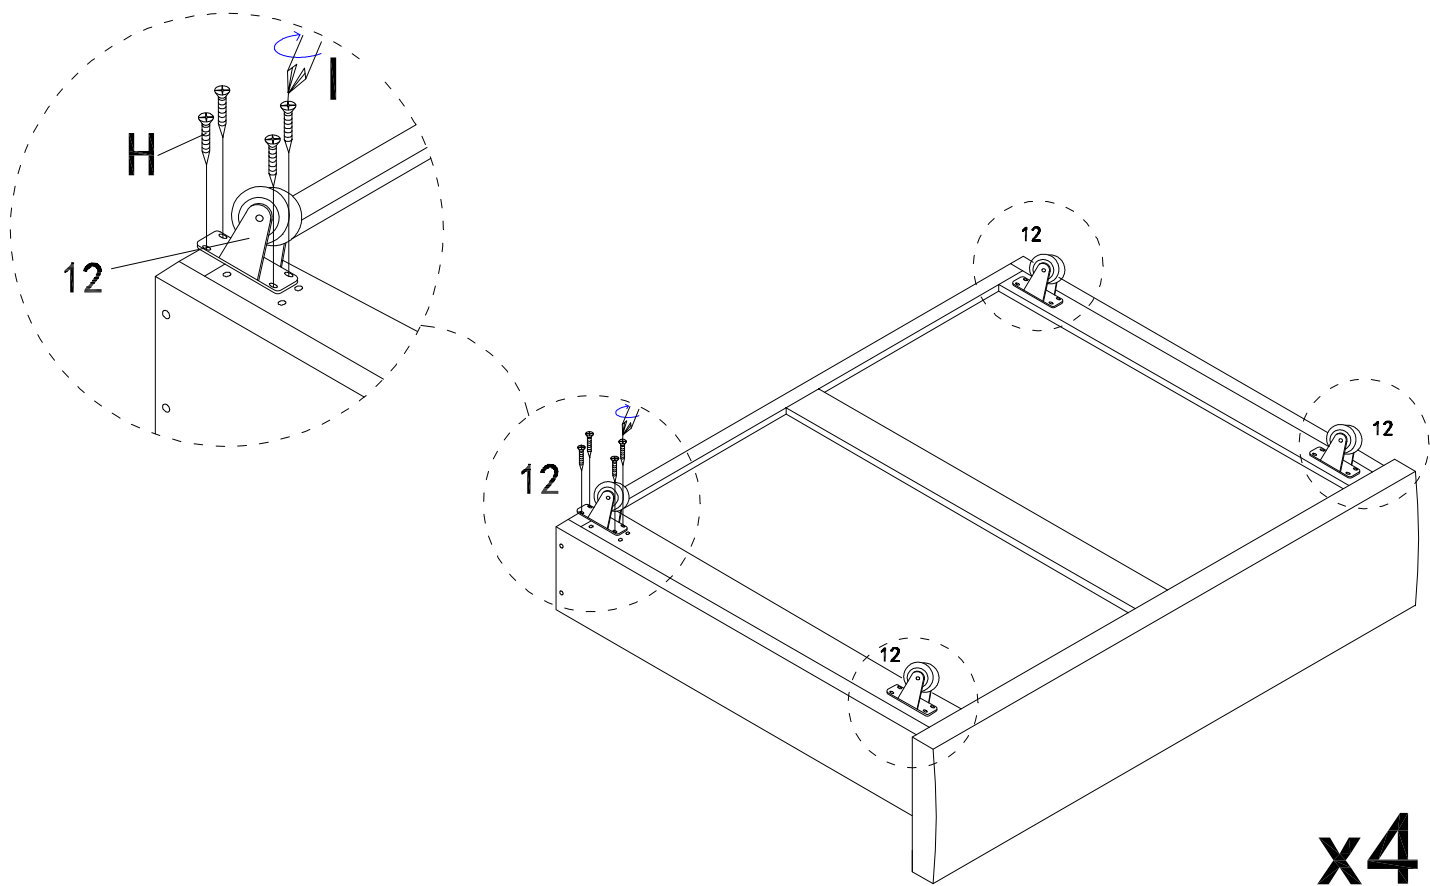

x4


STEP 13

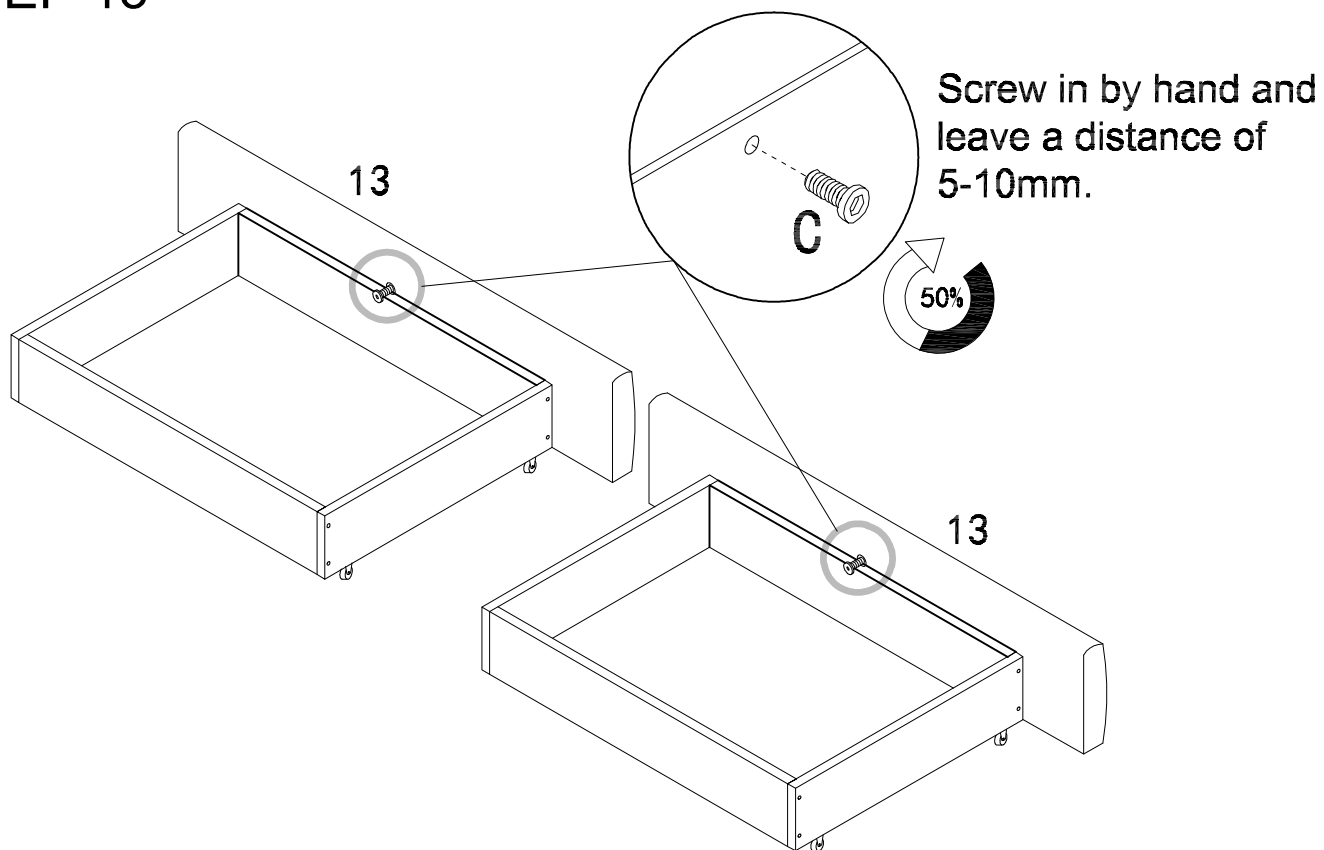

x2

STEP 14


DRAWER ASSEMBLE COMPLETE

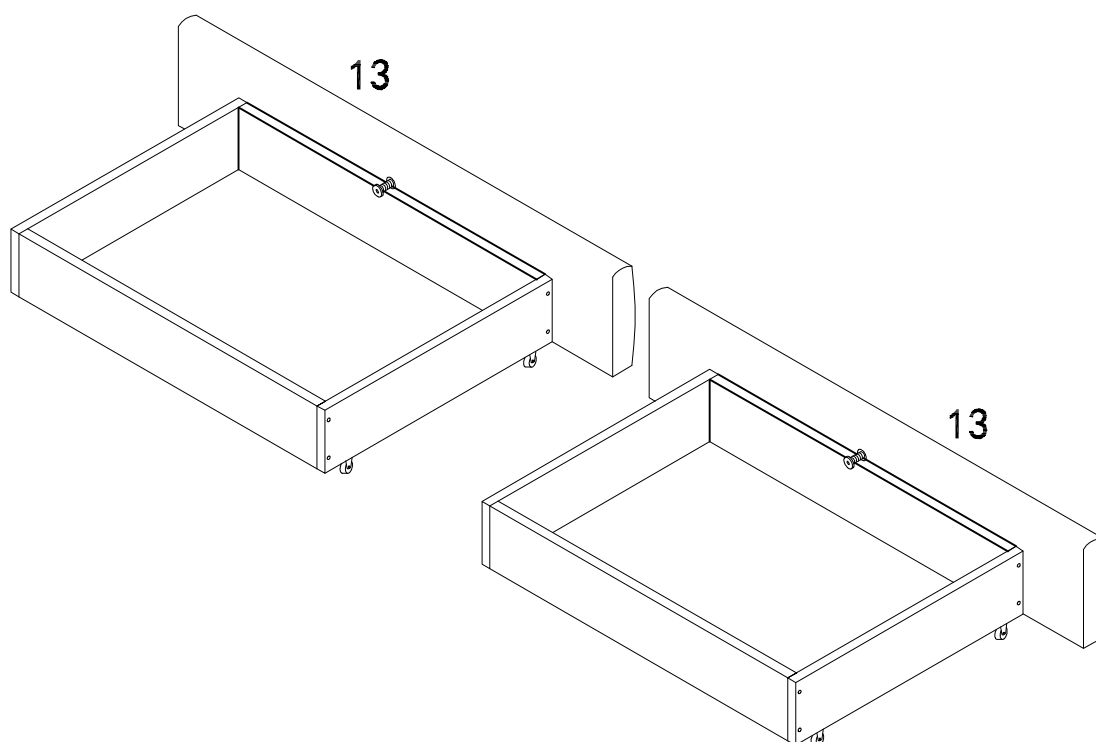

x2

STEP 15

Drawer panel screw hang into side cross beam hole.

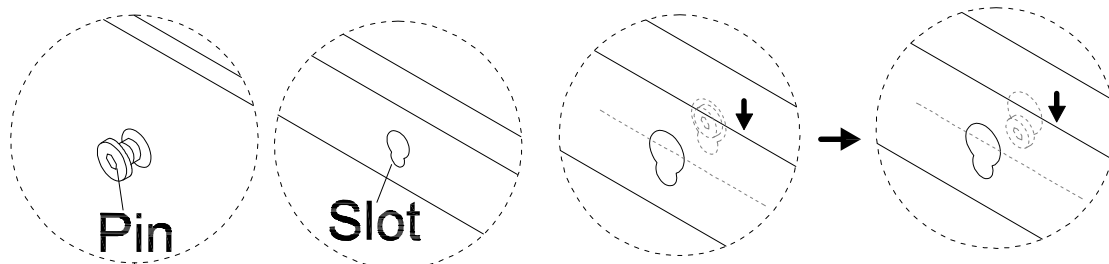

There is a screw head on the drawer board. Hang them in the hole as shown in the figure.

