

ASSEMBLY INSTRUCTION


STEP 1

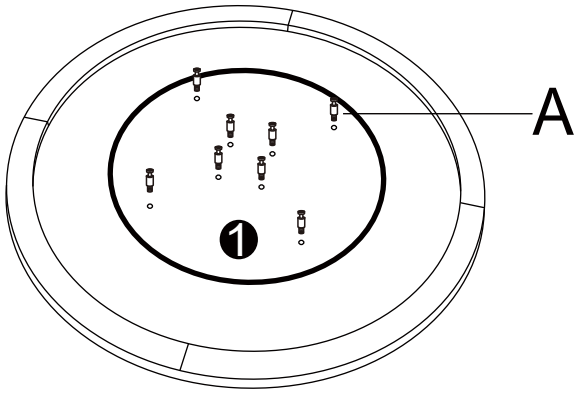


STEP 2

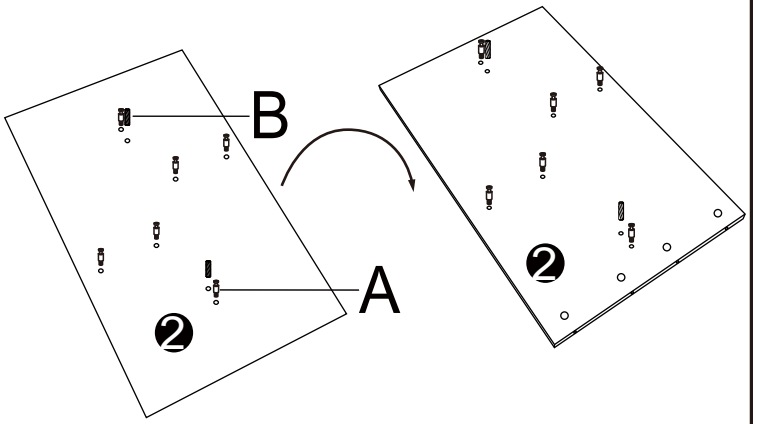


STEP 3

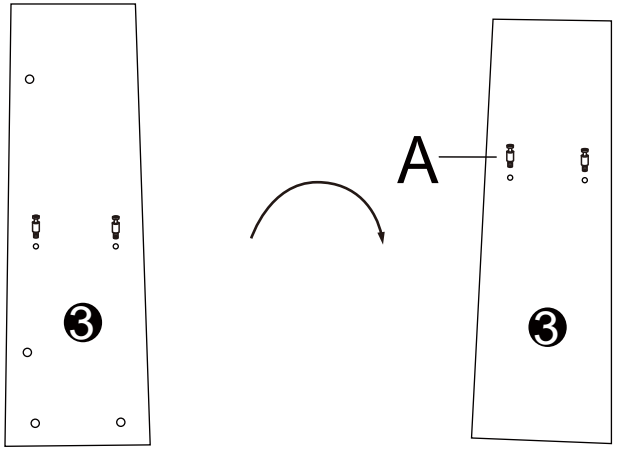


STEP 4

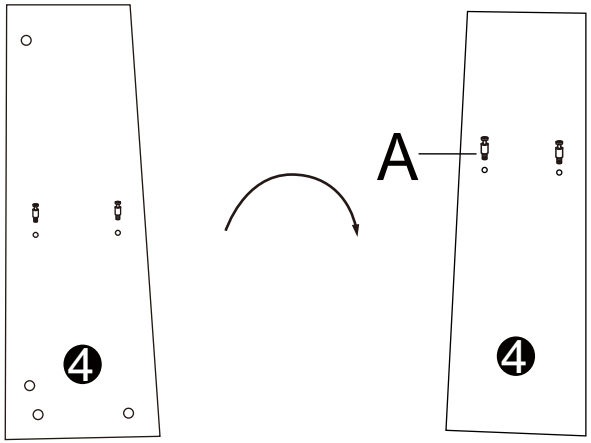


STEP 5

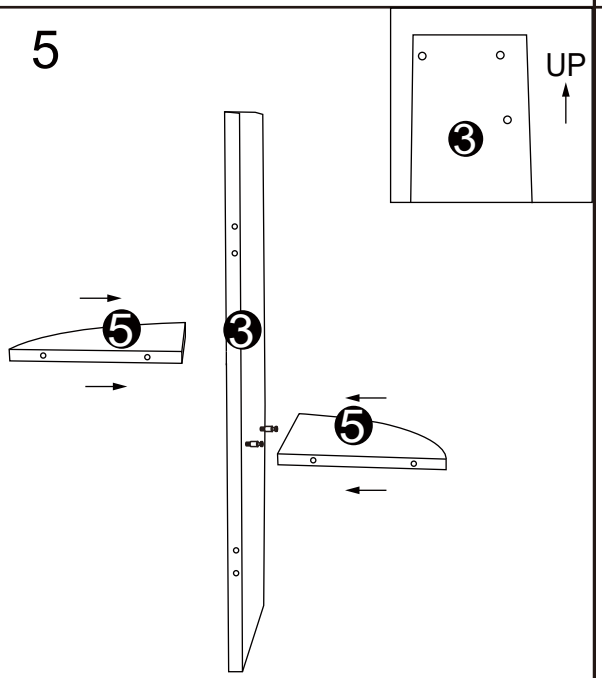


STEP 6

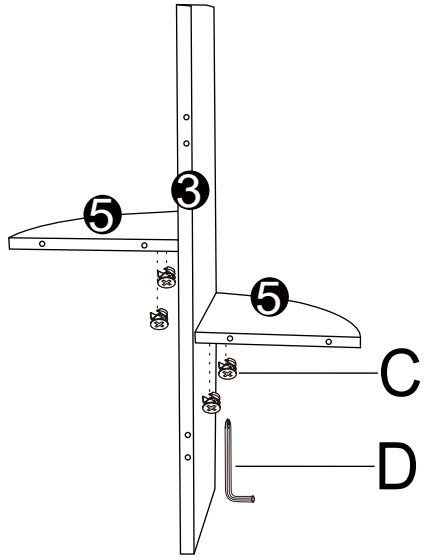


STEP 7

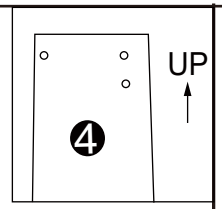


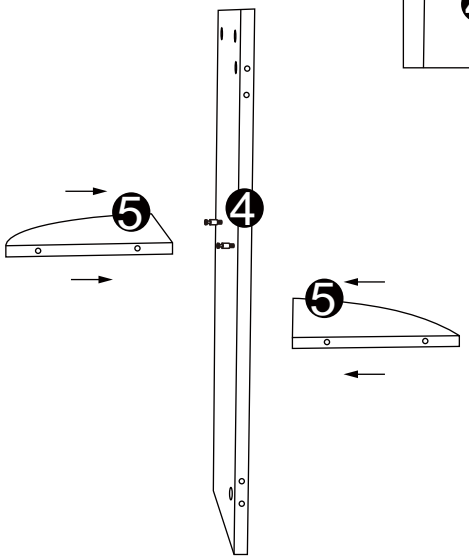


STEP 8

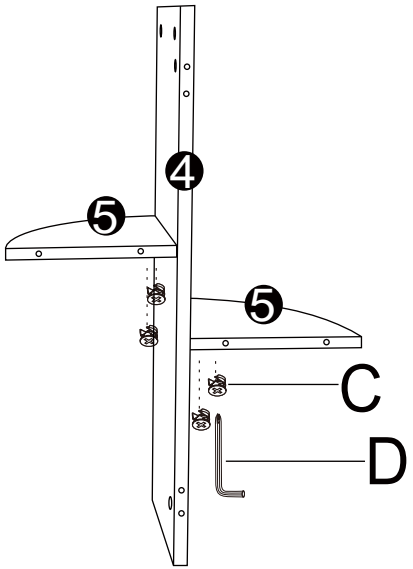


STEP 9

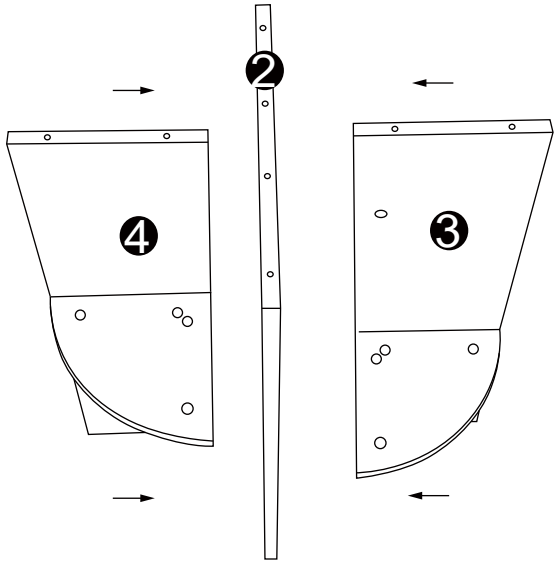


STEP 10

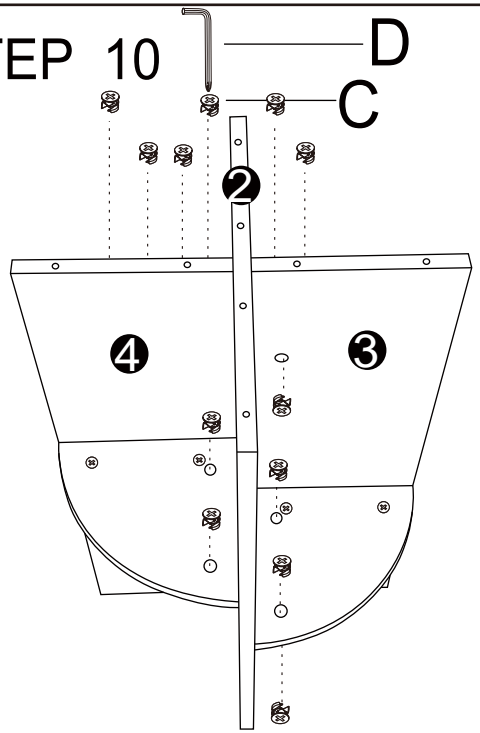


STEP 11

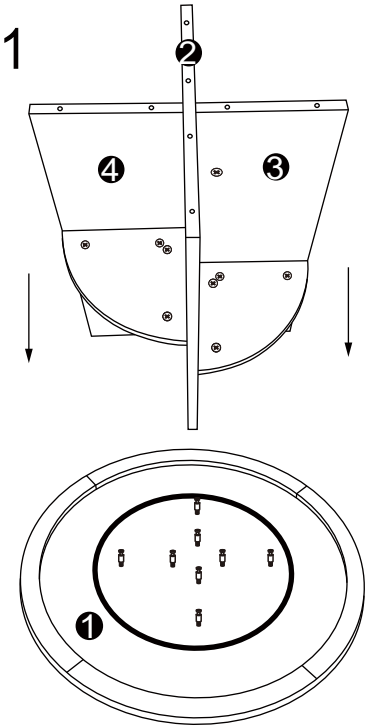


STEP 12

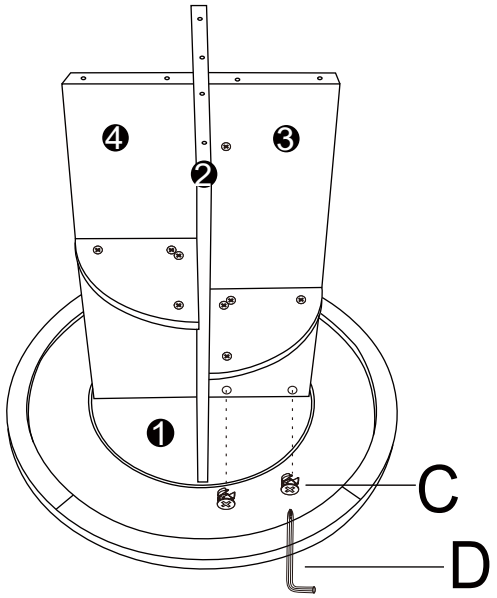

STEP 13

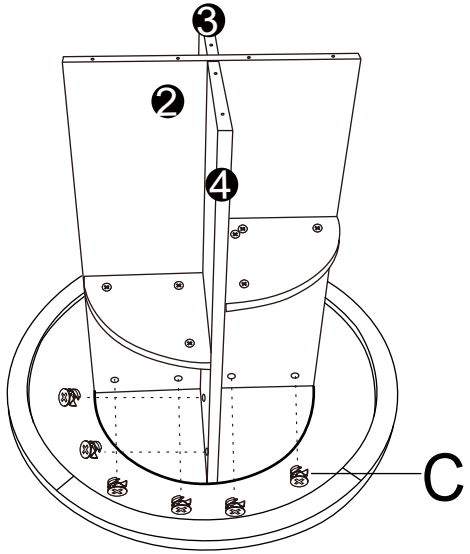


STEP 14

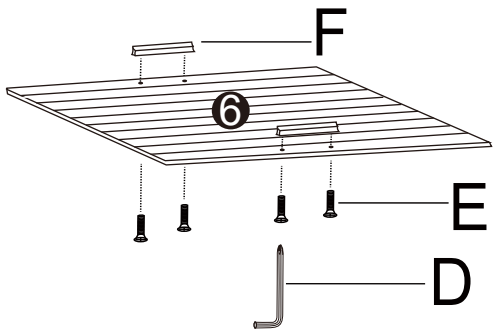


x2

STEP 15

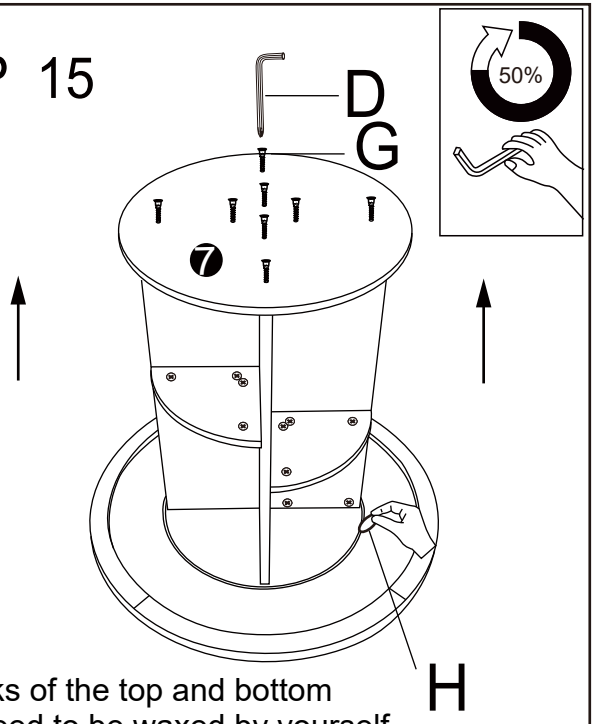


Two tracks of the top and bottom boards need to be waxed by yourself.


STEP 16

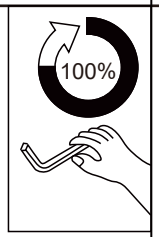


Please tighten the screws after two Part❻ are intered into the tracks.

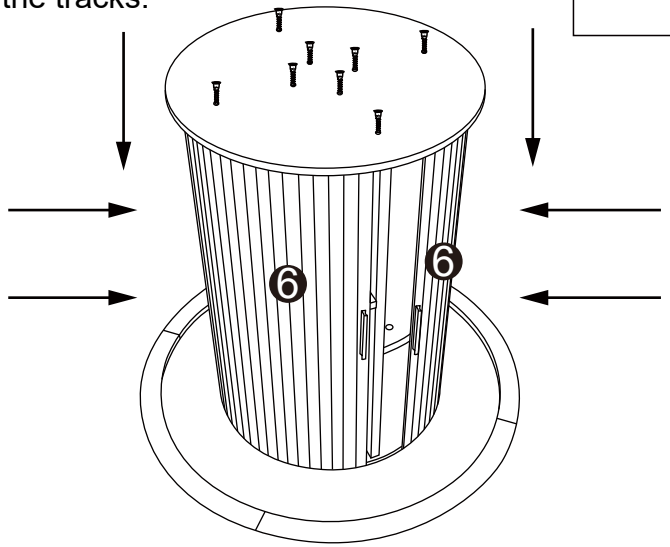


STEP 17








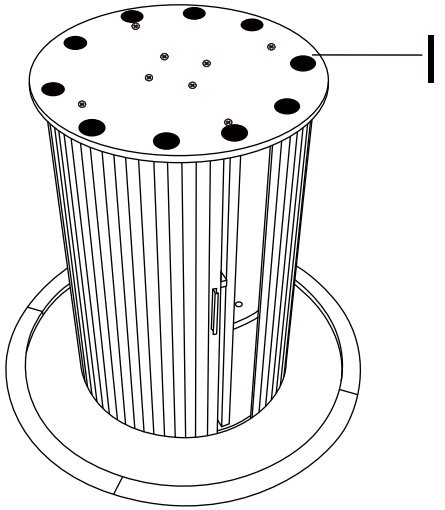


STEP 18

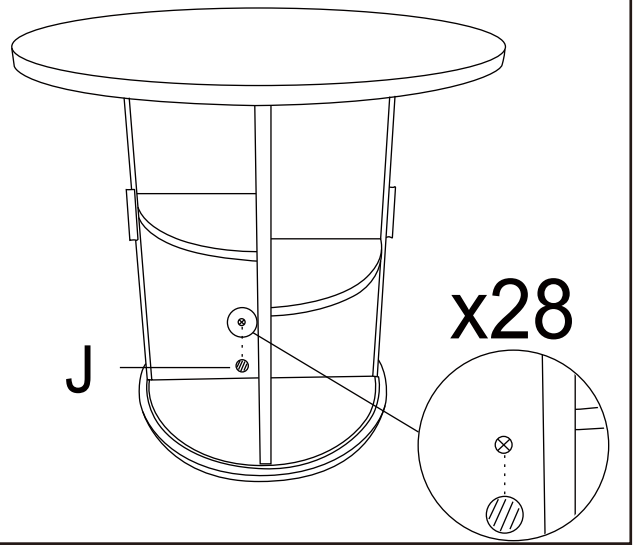

STEP 19

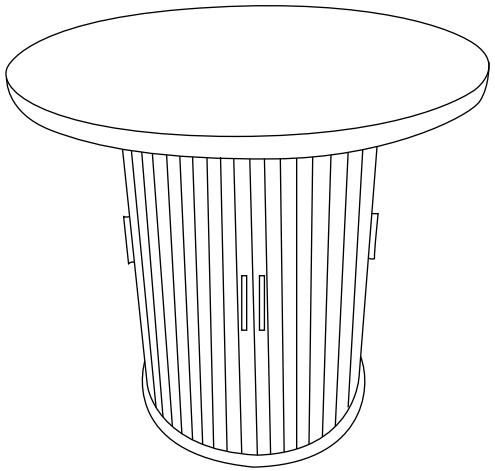

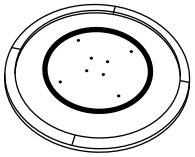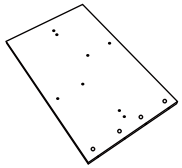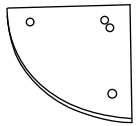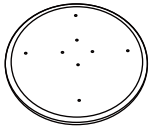❶  x1	❷  x1	❸  x1	❹  x1	❺  x4	❻  x2
❼  x1					
A  x28+3	B  x4+1	C  x28+3	D  x1	E  x8+1	F  x4
G  x8+1	H  x1	I  x10+2	J  x28+3		