



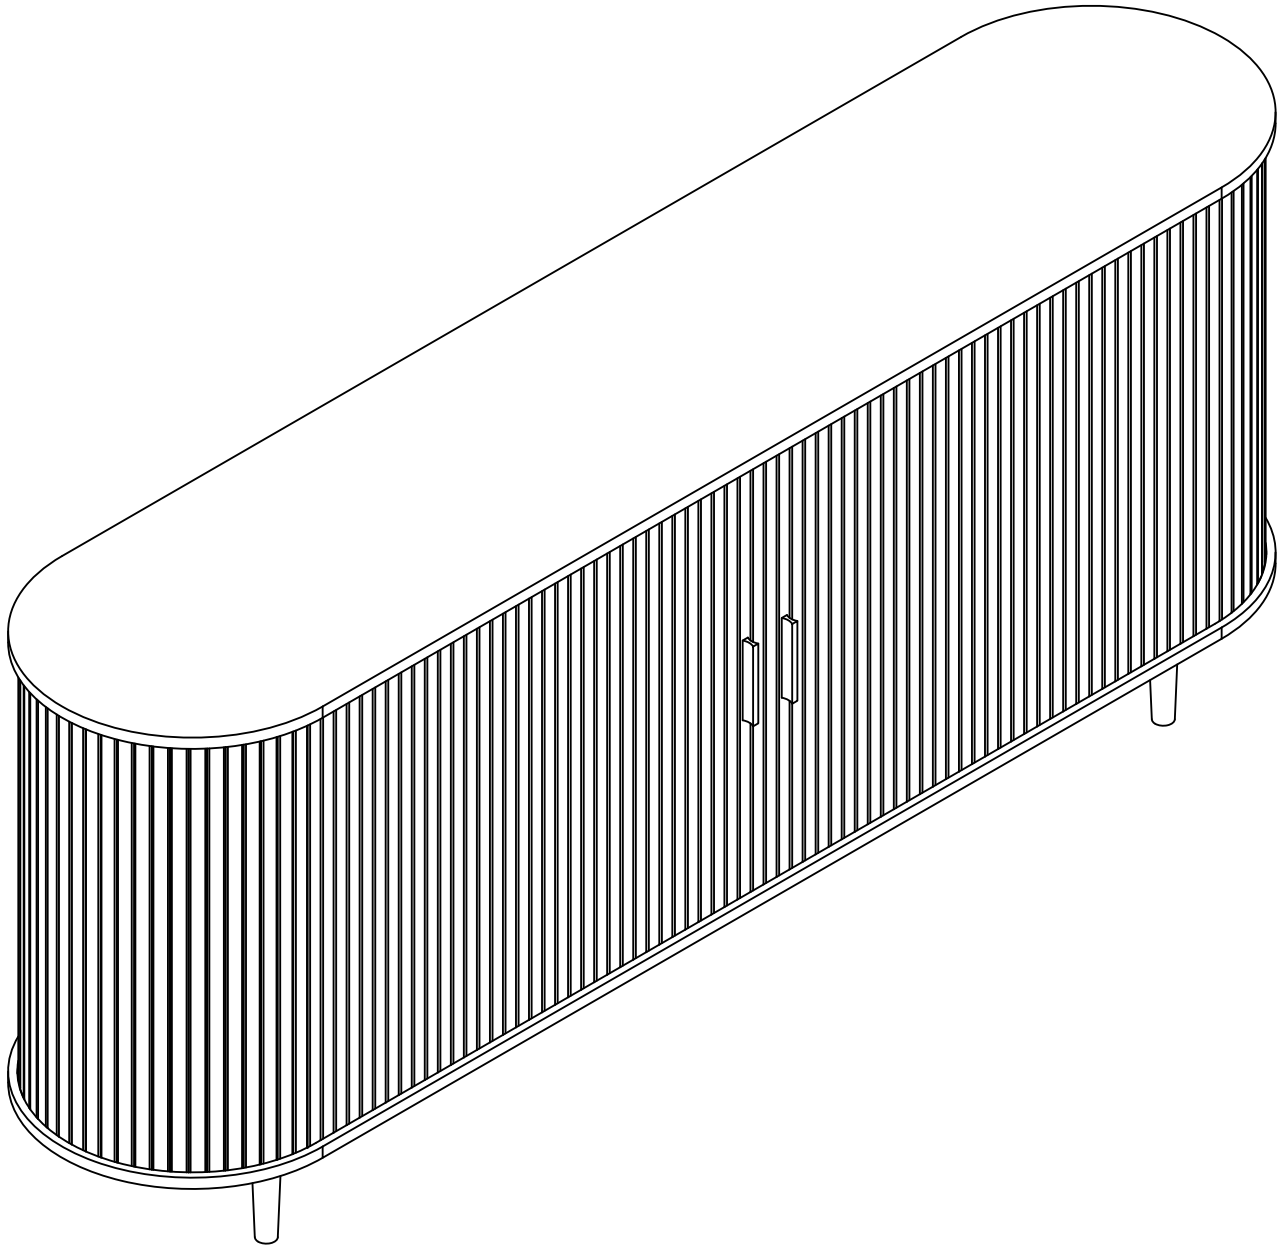

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Before You Start



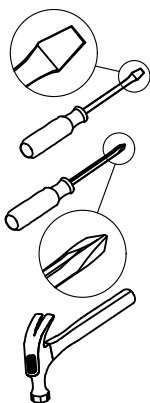


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

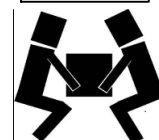


Board Identification

Not actual size

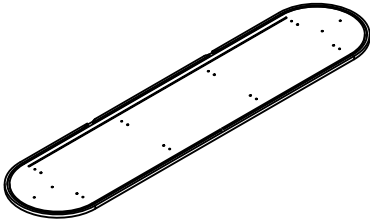


①

Qty:1

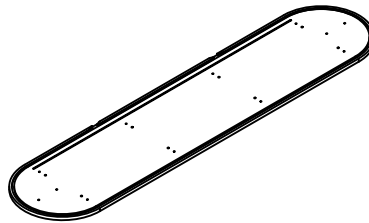


②

Qty:1

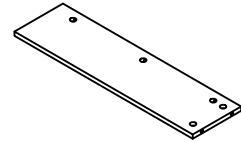


③

Qty:1

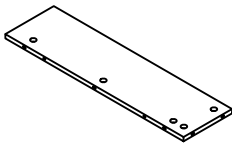


④

Qty:1

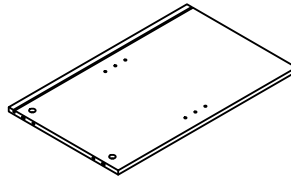


⑤

Qty:1

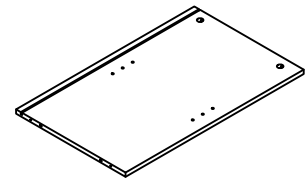


⑥

Qty:1

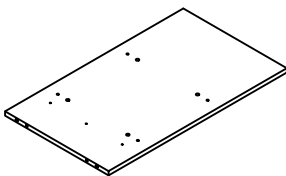


⑦

Qty:1

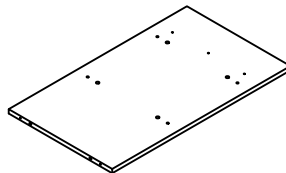

⑧

Qty:1

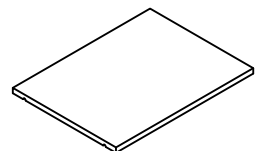


⑨

Qty:2


Board Identification

Not actual size

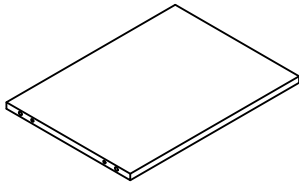


⑩

Qty:2

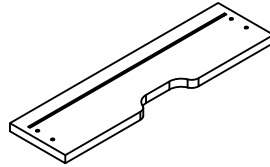


⑪

Qty:1

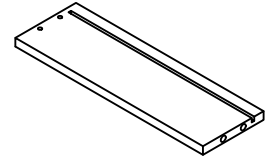


⑫

Qty:1

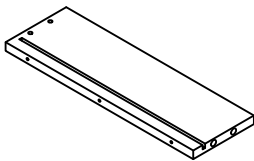


⑬

Qty:1

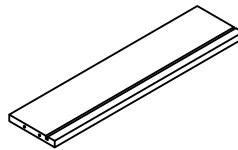


⑭

Qty:1

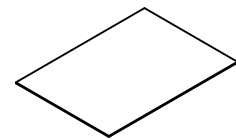


⑮

Qty:1

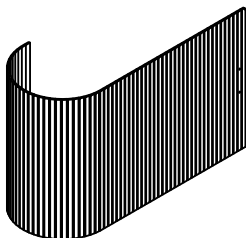


⑯

Qty:1

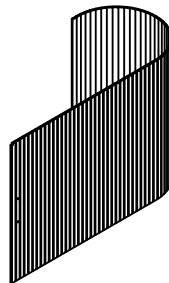

⑰

Qty:1

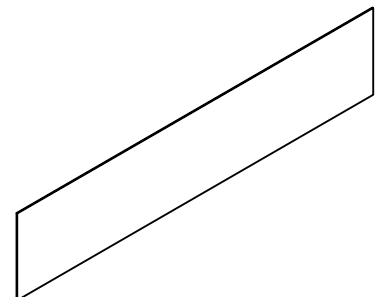


⑱

Qty:2


Board Identification

Not actual size

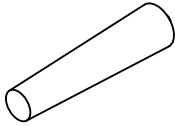

19


Qty:4

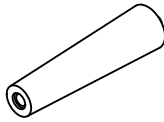


20

Qty:1


Part List

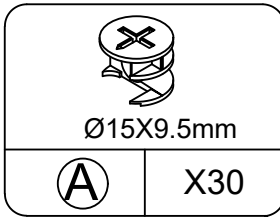


CAM LOCK
spare:3

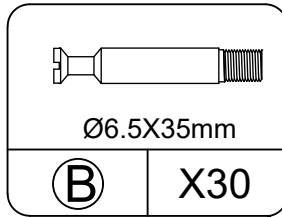


CAM BOLT
spare:3

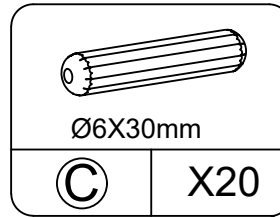


WOOD DOWEL
spare:2

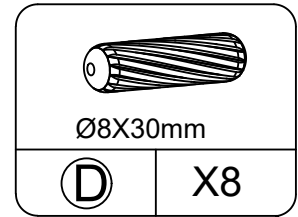


WOOD DOWEL
spare:1

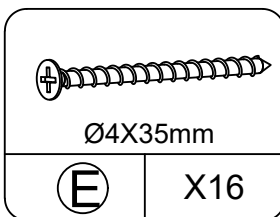


SCREW
spare:2

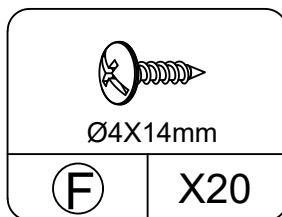


SCREW
spare:2

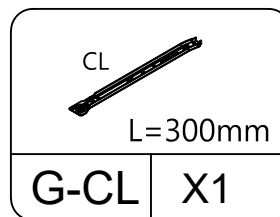


LEFT CABINET MEMBER

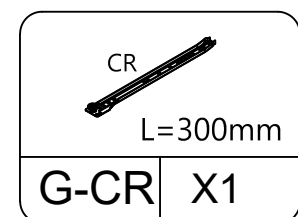


RIGHT CABINET MEMBER

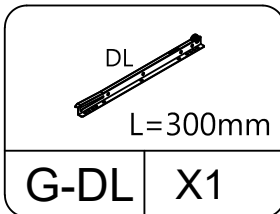


LEFT DRAWER RUNNER

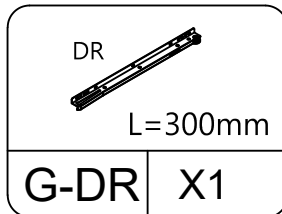


RIGHT DRAWER RUNNER

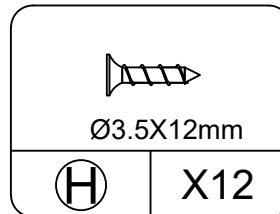


SCREW
spare:1

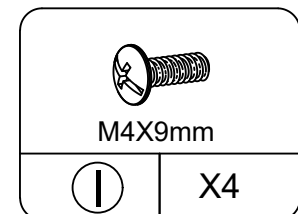


SCREW
spare:1

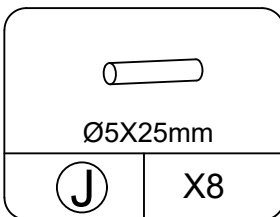


ADJUSTABLE SHELF PIN
spare:1

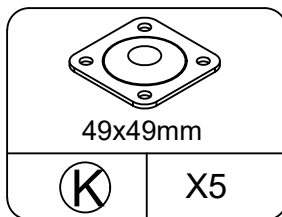


IRON SHEET

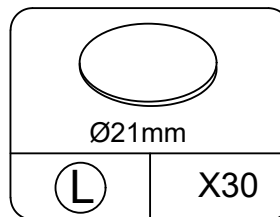


PERFECT STICKER
spare:3

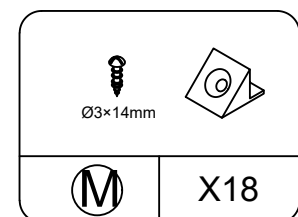


FASTENER
spare:2

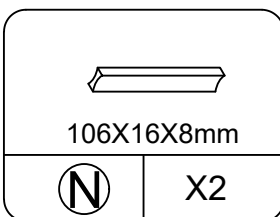


HANDLE

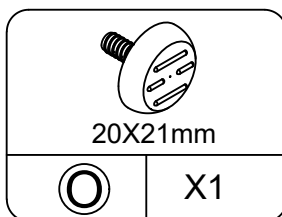

ADJUSTING NUT

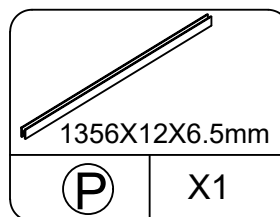


CLIP STRIP

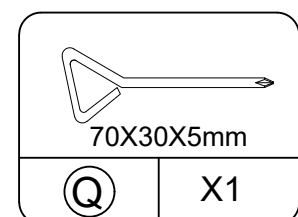

WRENCH

Part List

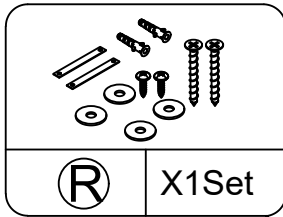


SCREW ANCHOR SET


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

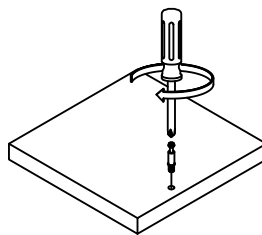

2

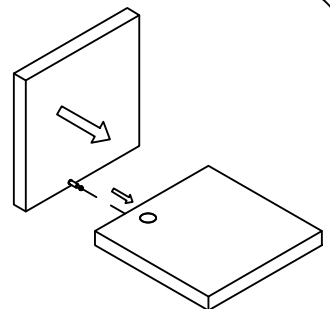


3

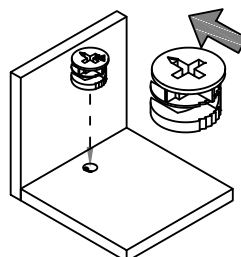


The opening must point toward the edge of the board



4

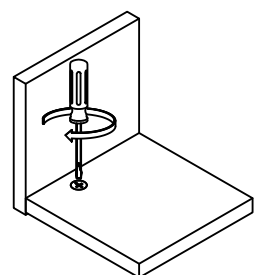







Board Identification

Not actual size





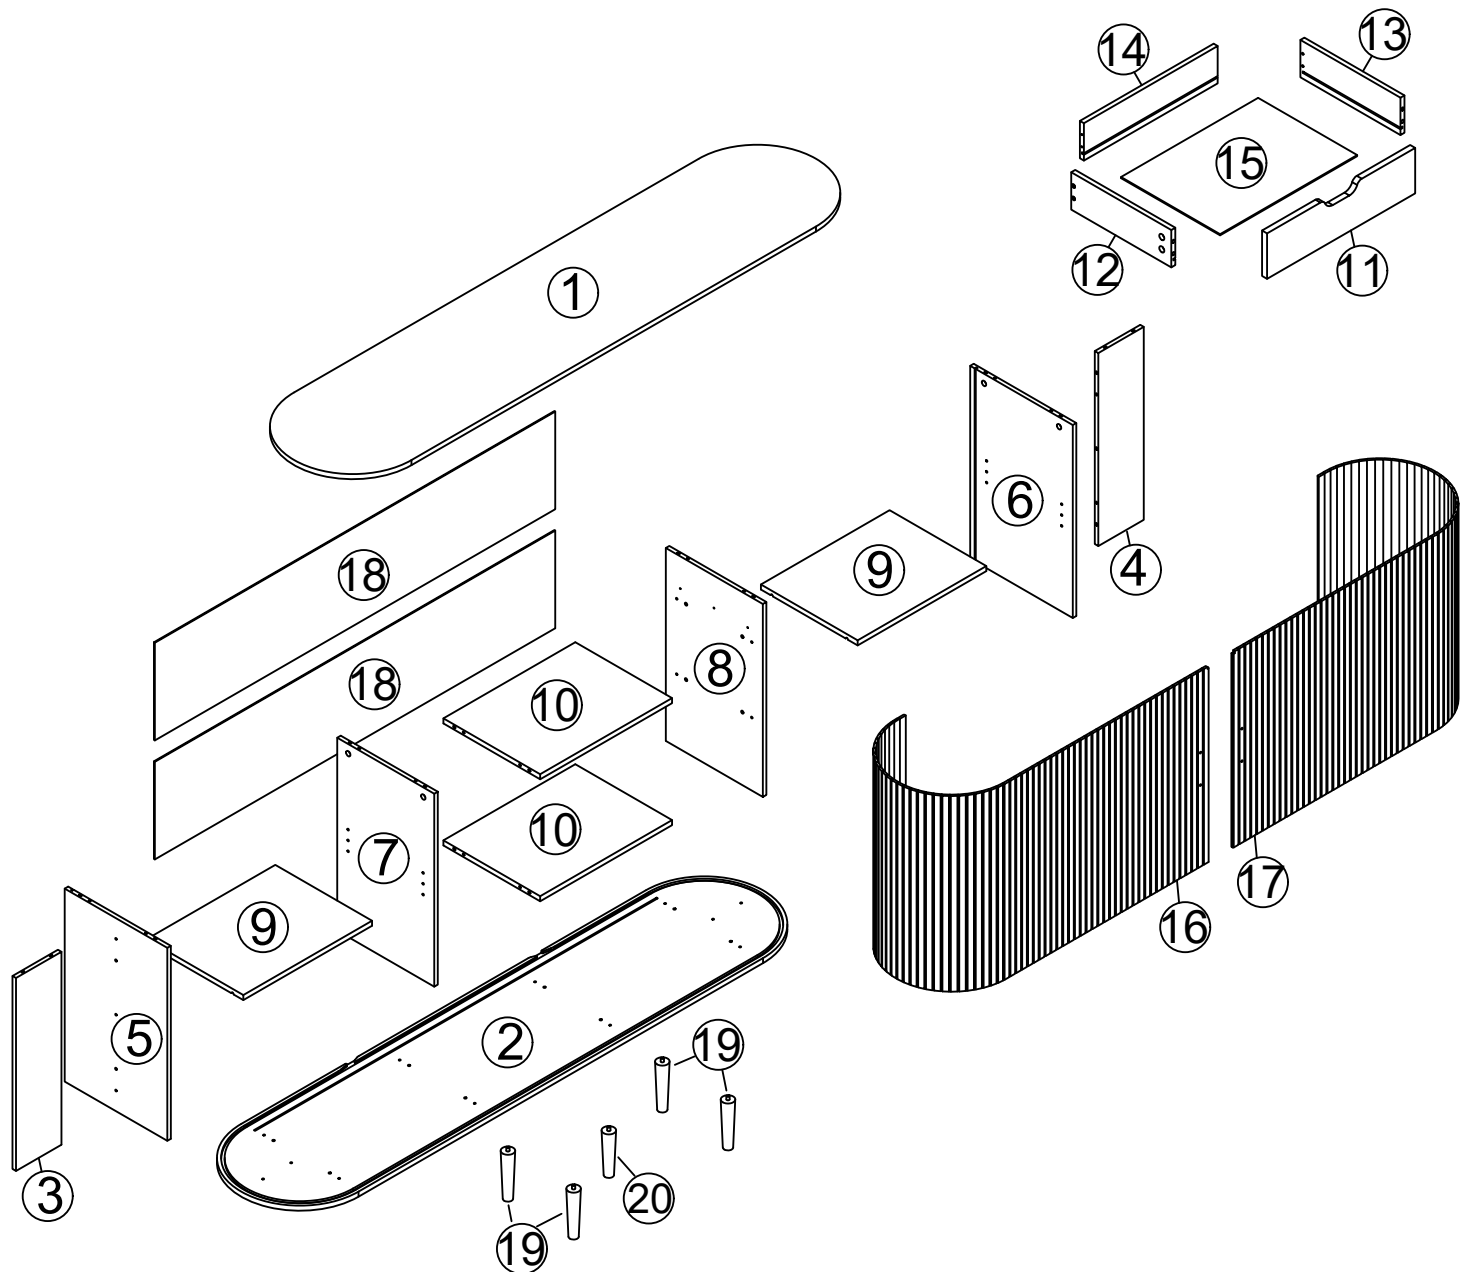


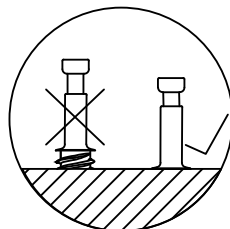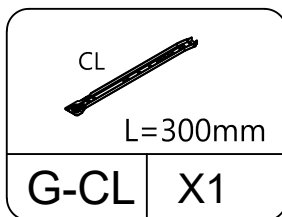


STEP2

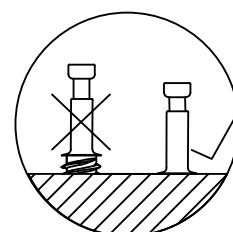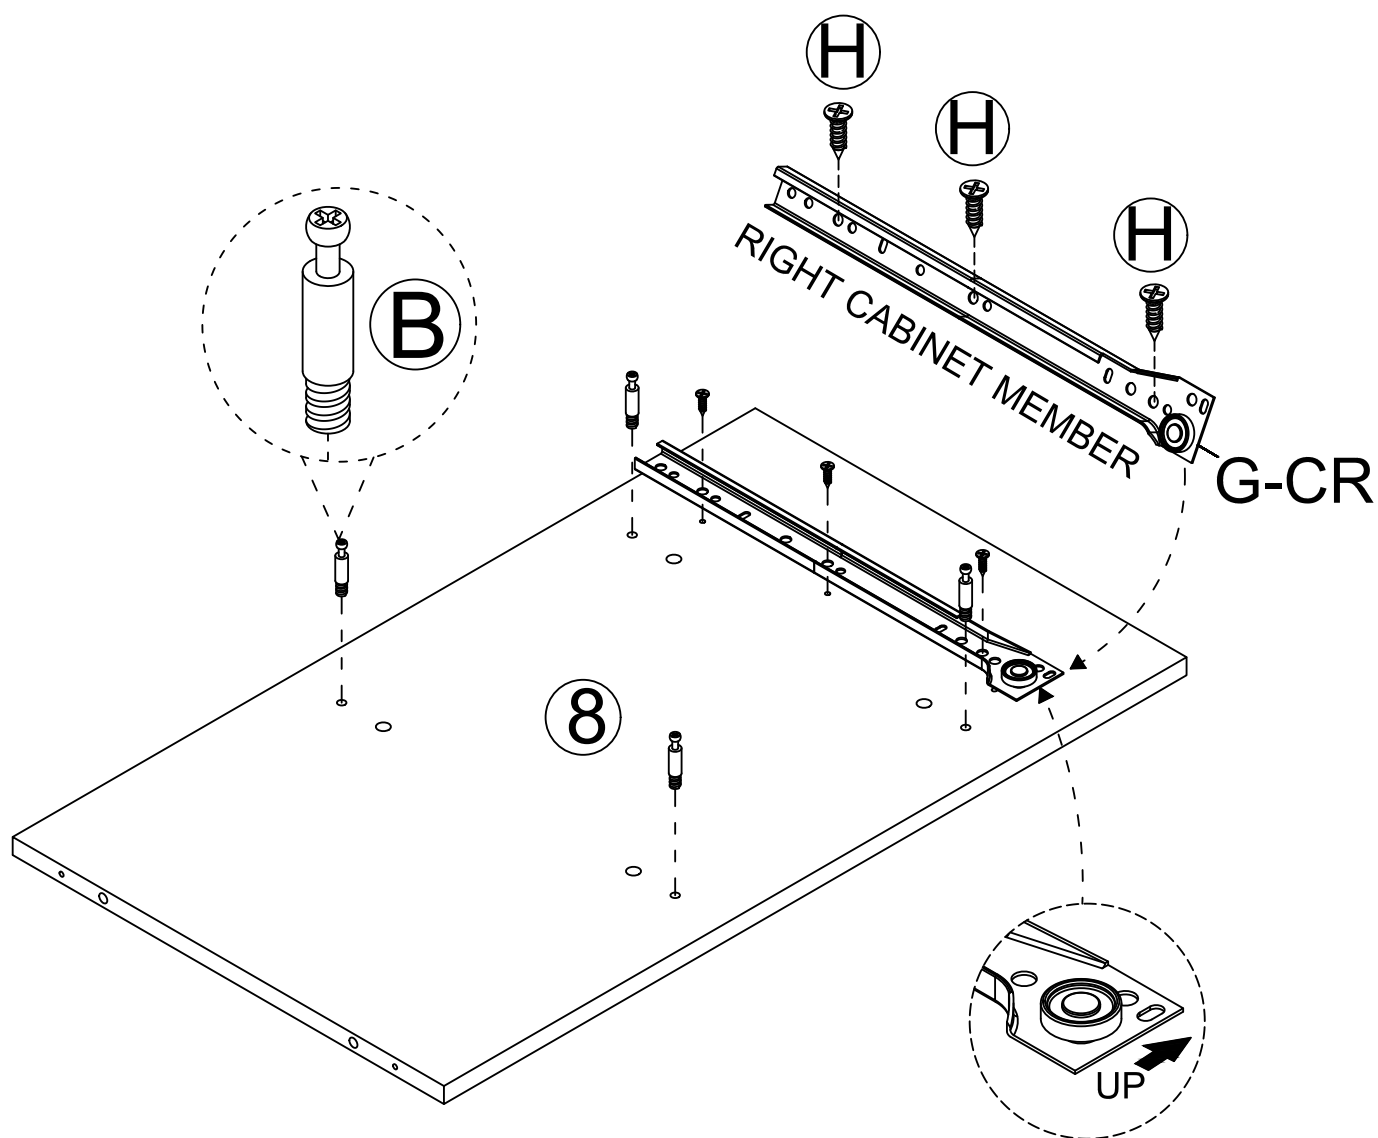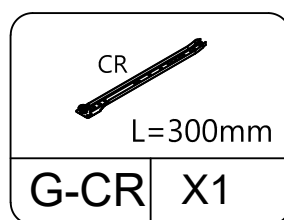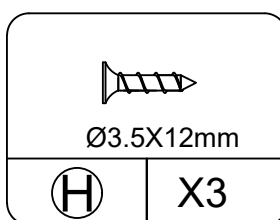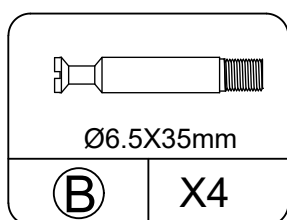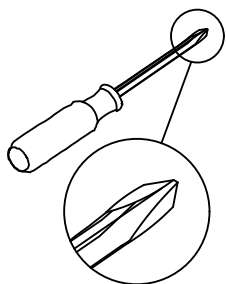

STEP3

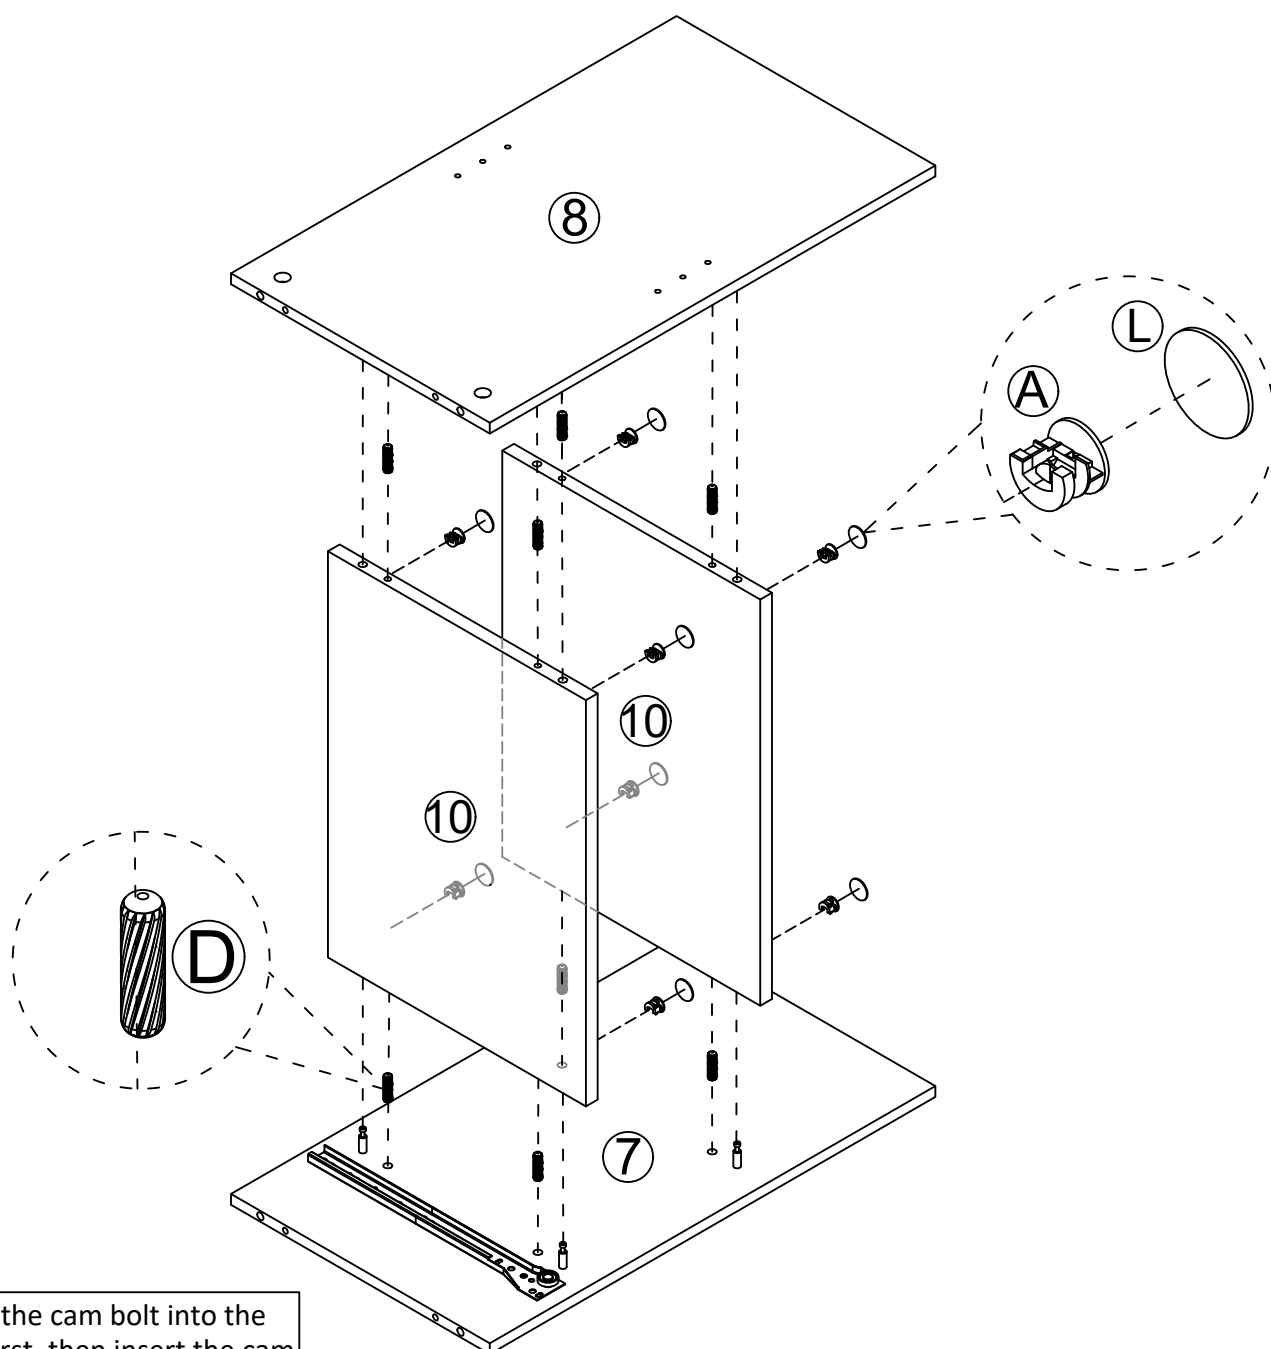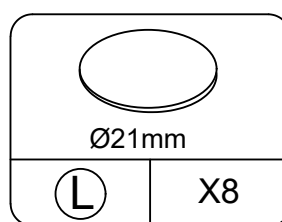
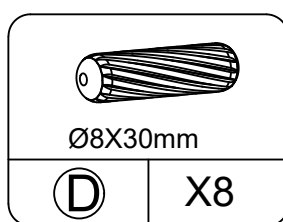
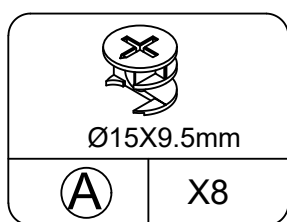
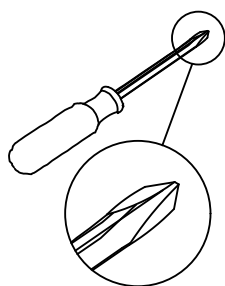


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


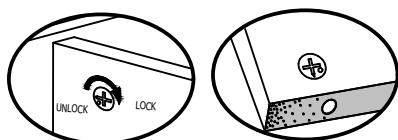


Proper orientation of CAM LOCK


STEP4

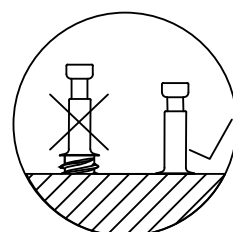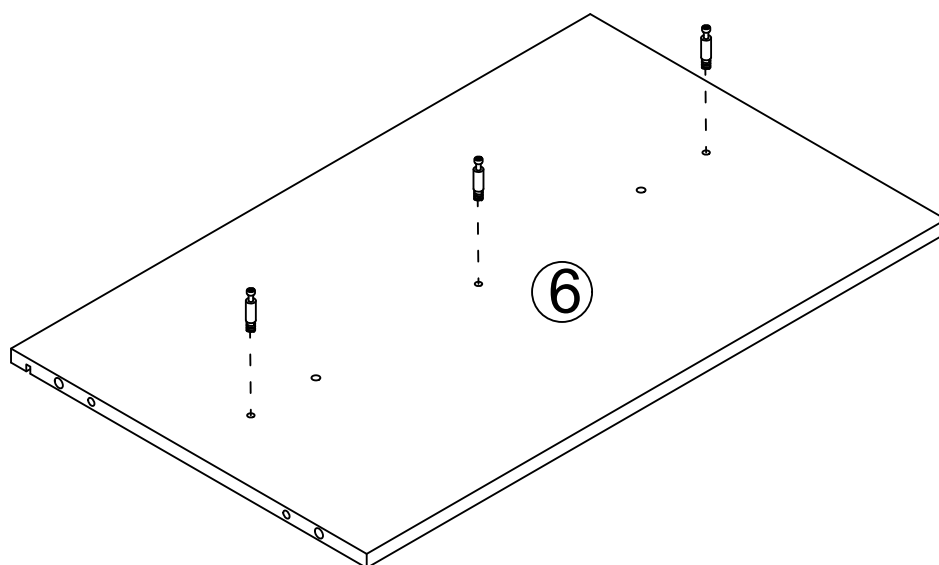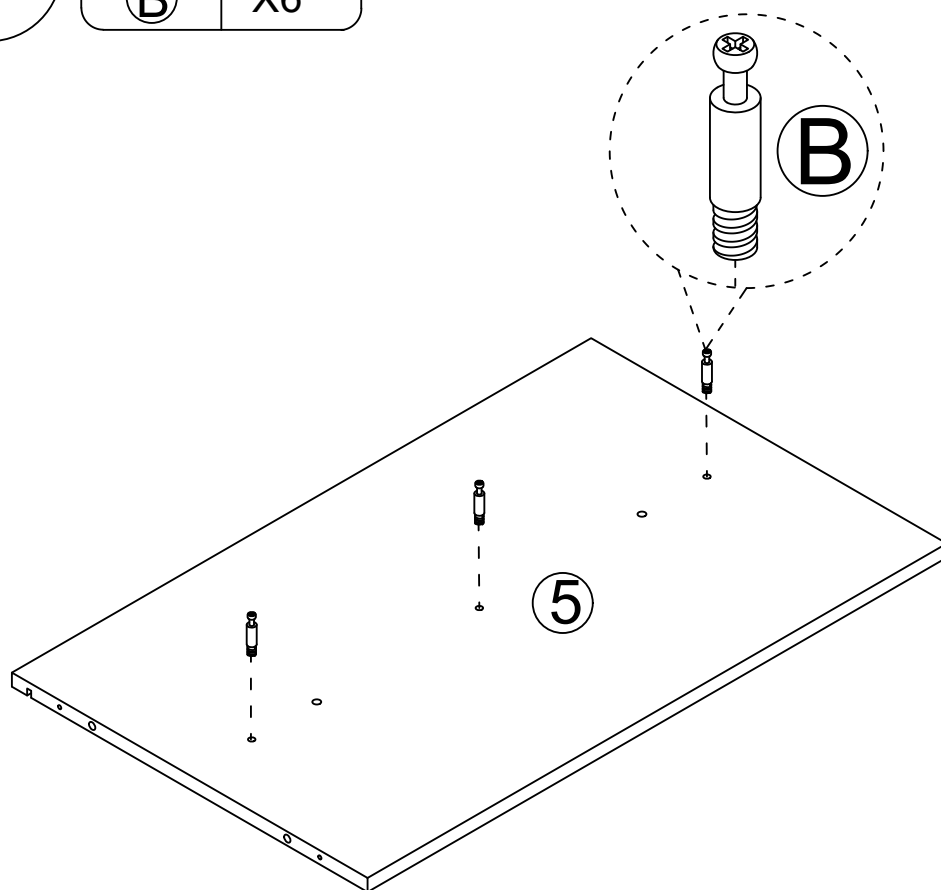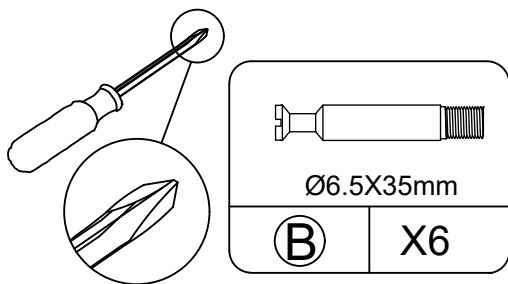

STEP5

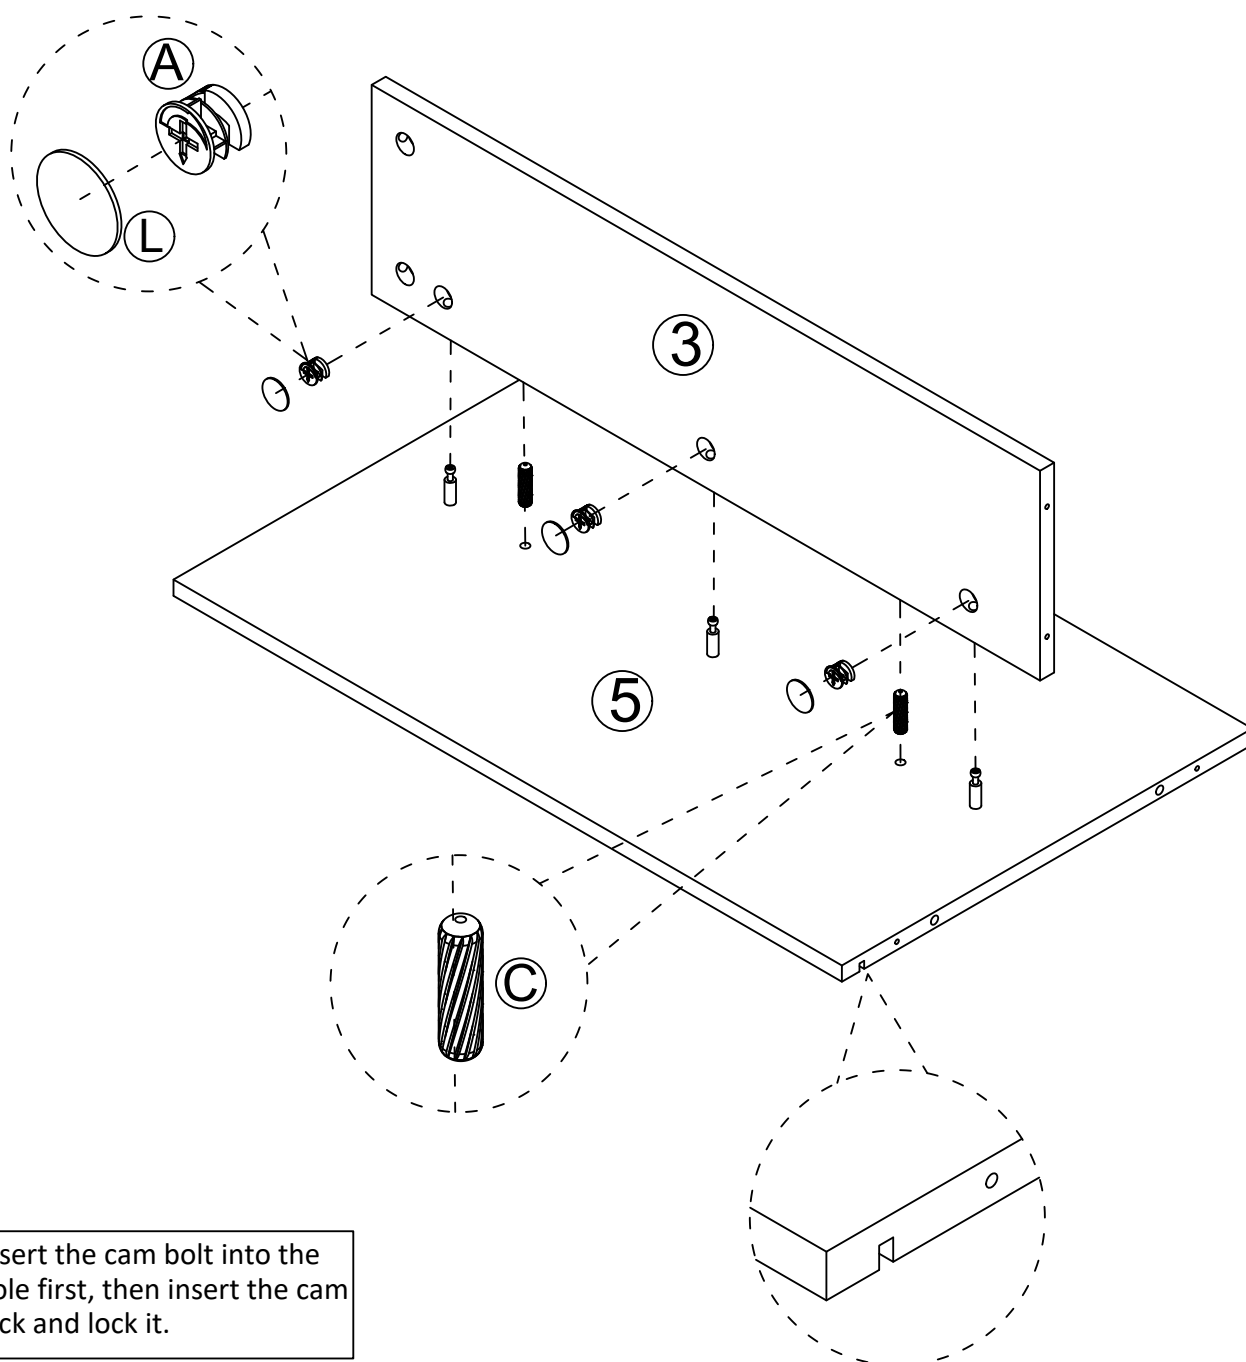
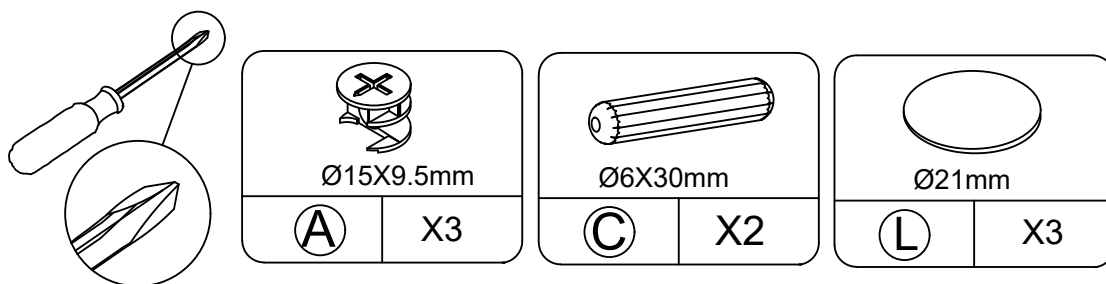


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

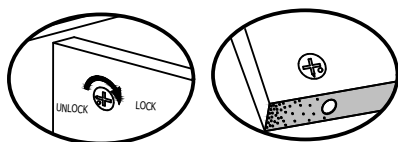


Proper orientation of CAM LOCK

STEP6


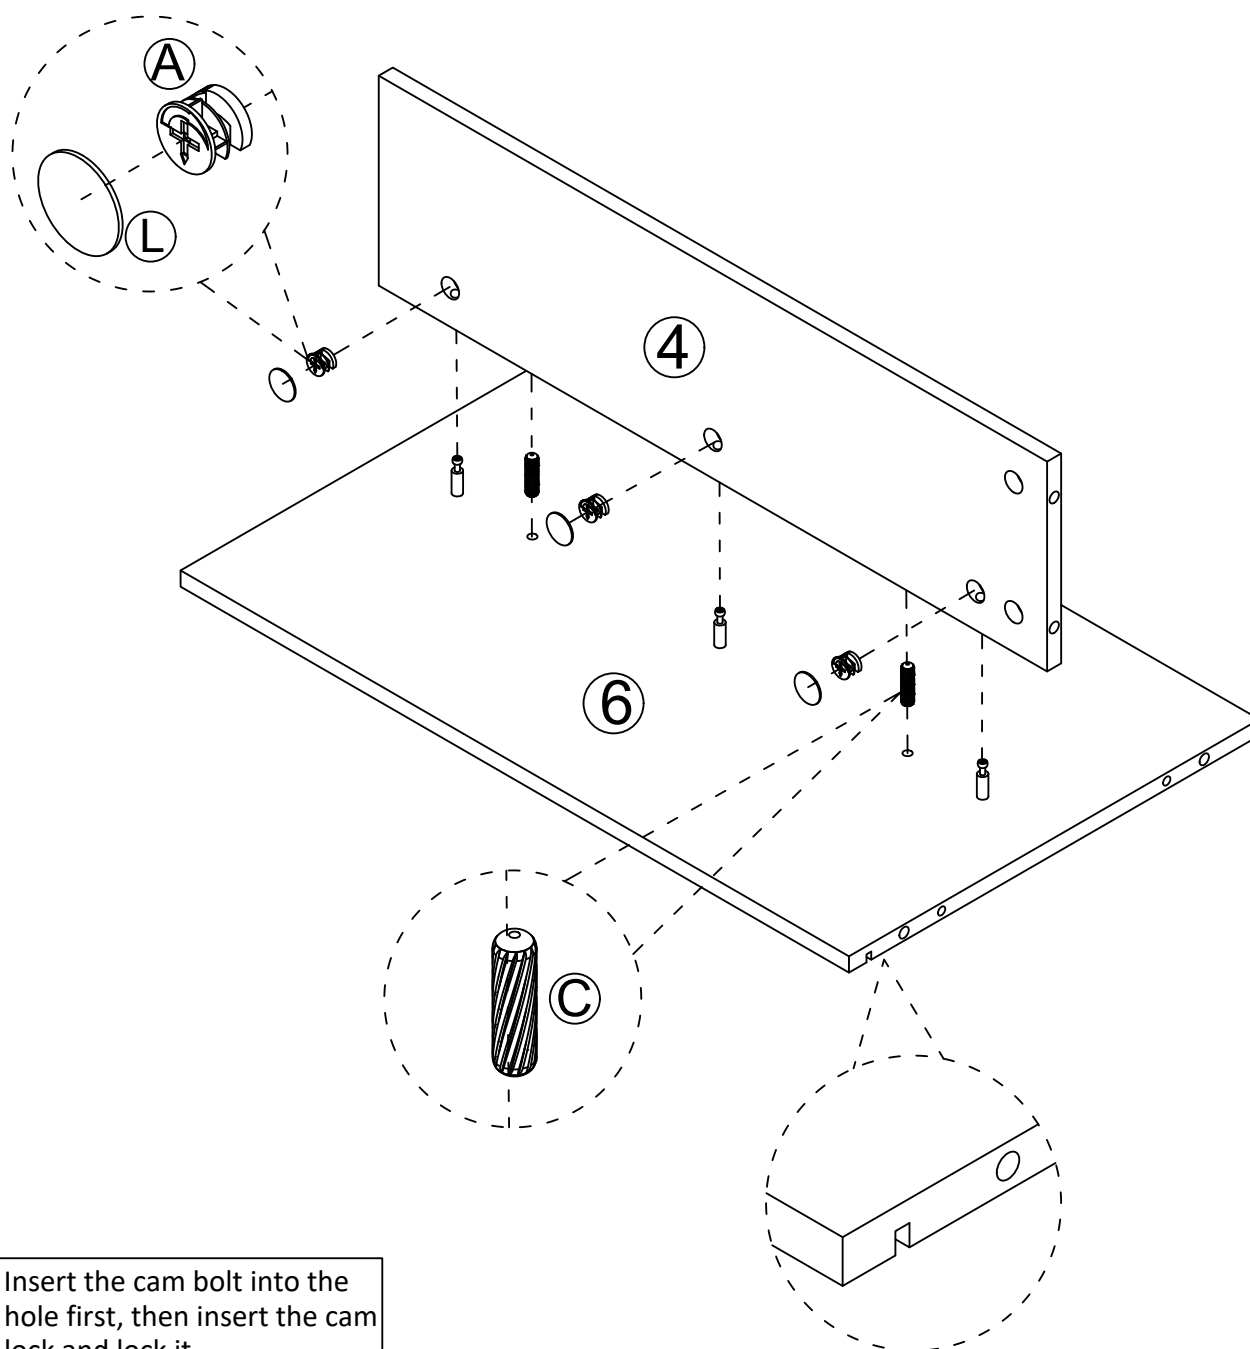
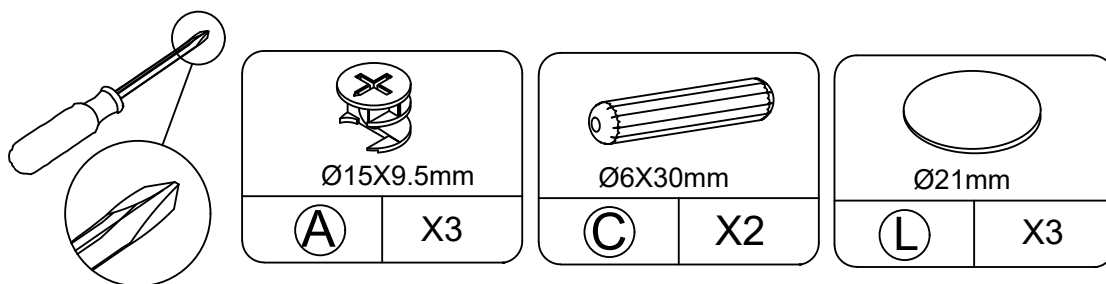


Insert the cam bolt into the hole first, then insert the cam lock and lock it.





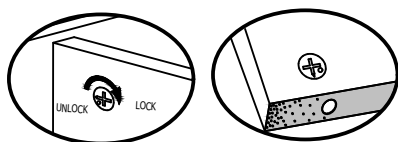


Proper orientation of CAM LOCK


STEP7

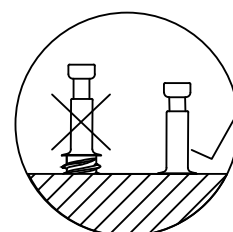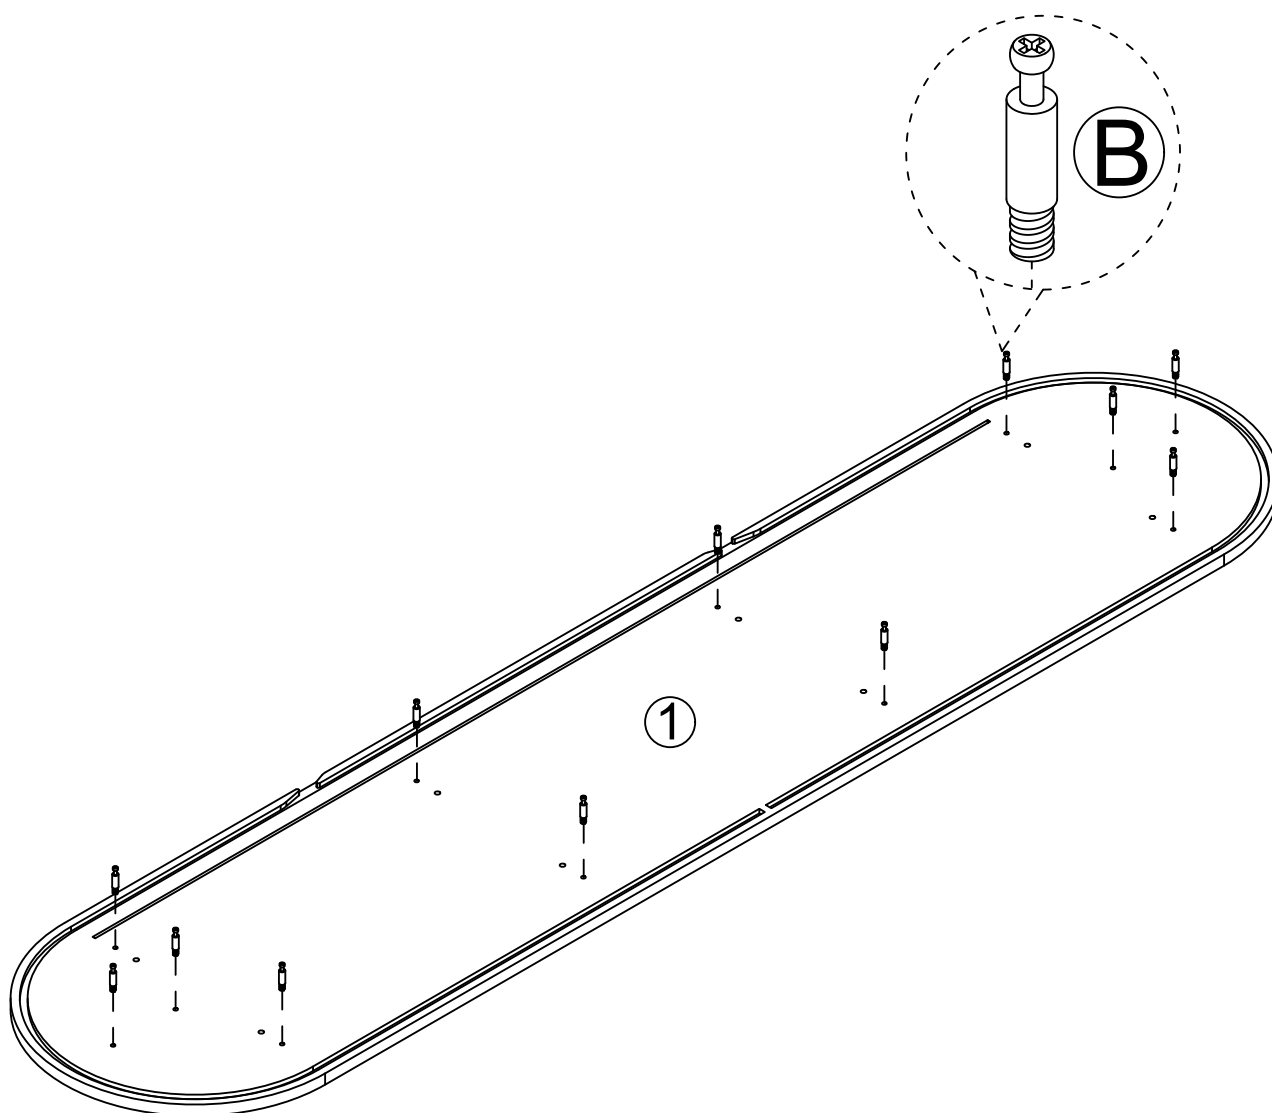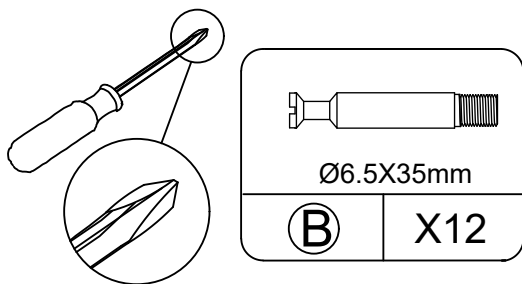

STEP8

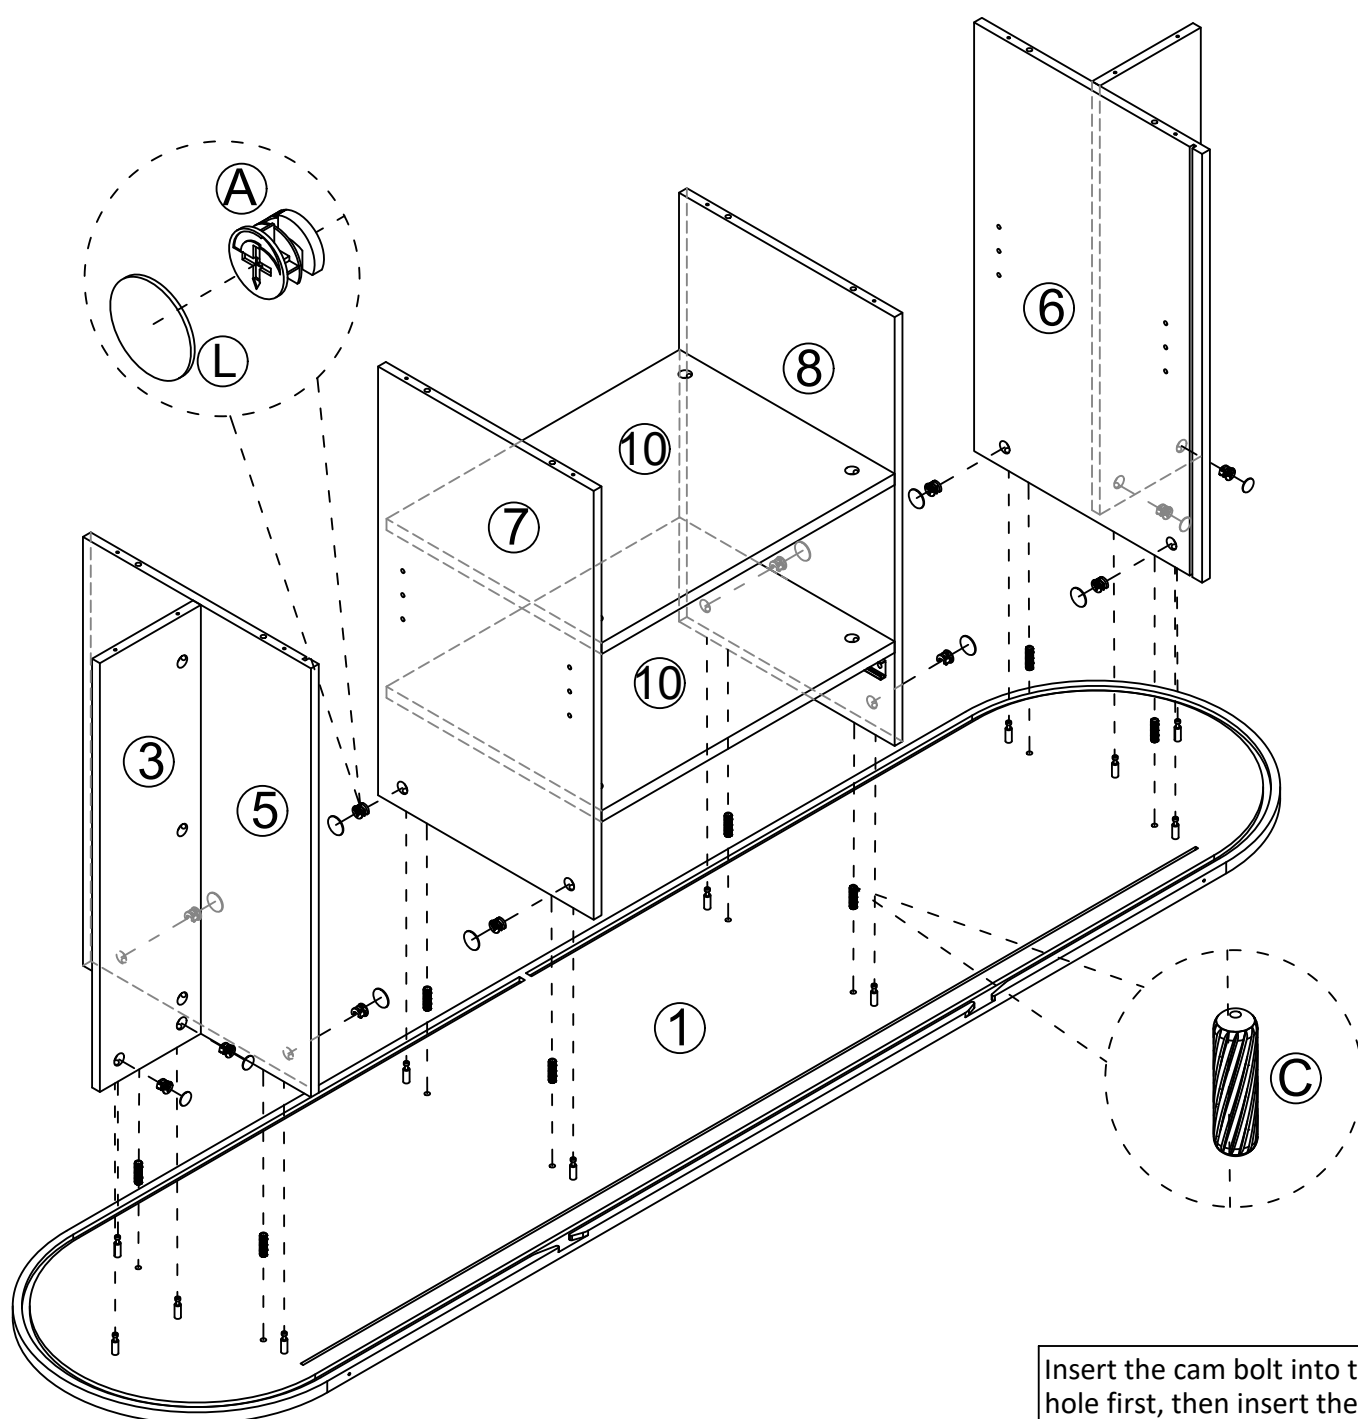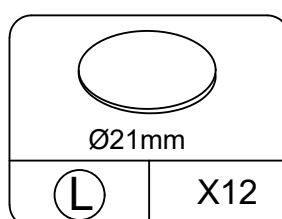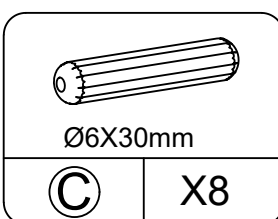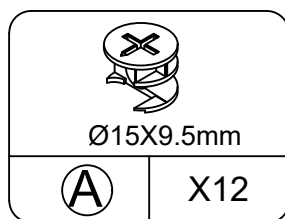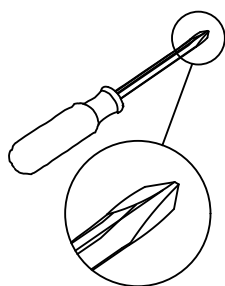


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


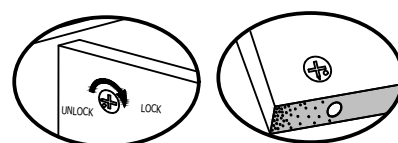


Proper orientation of CAM LOCK

STEP9

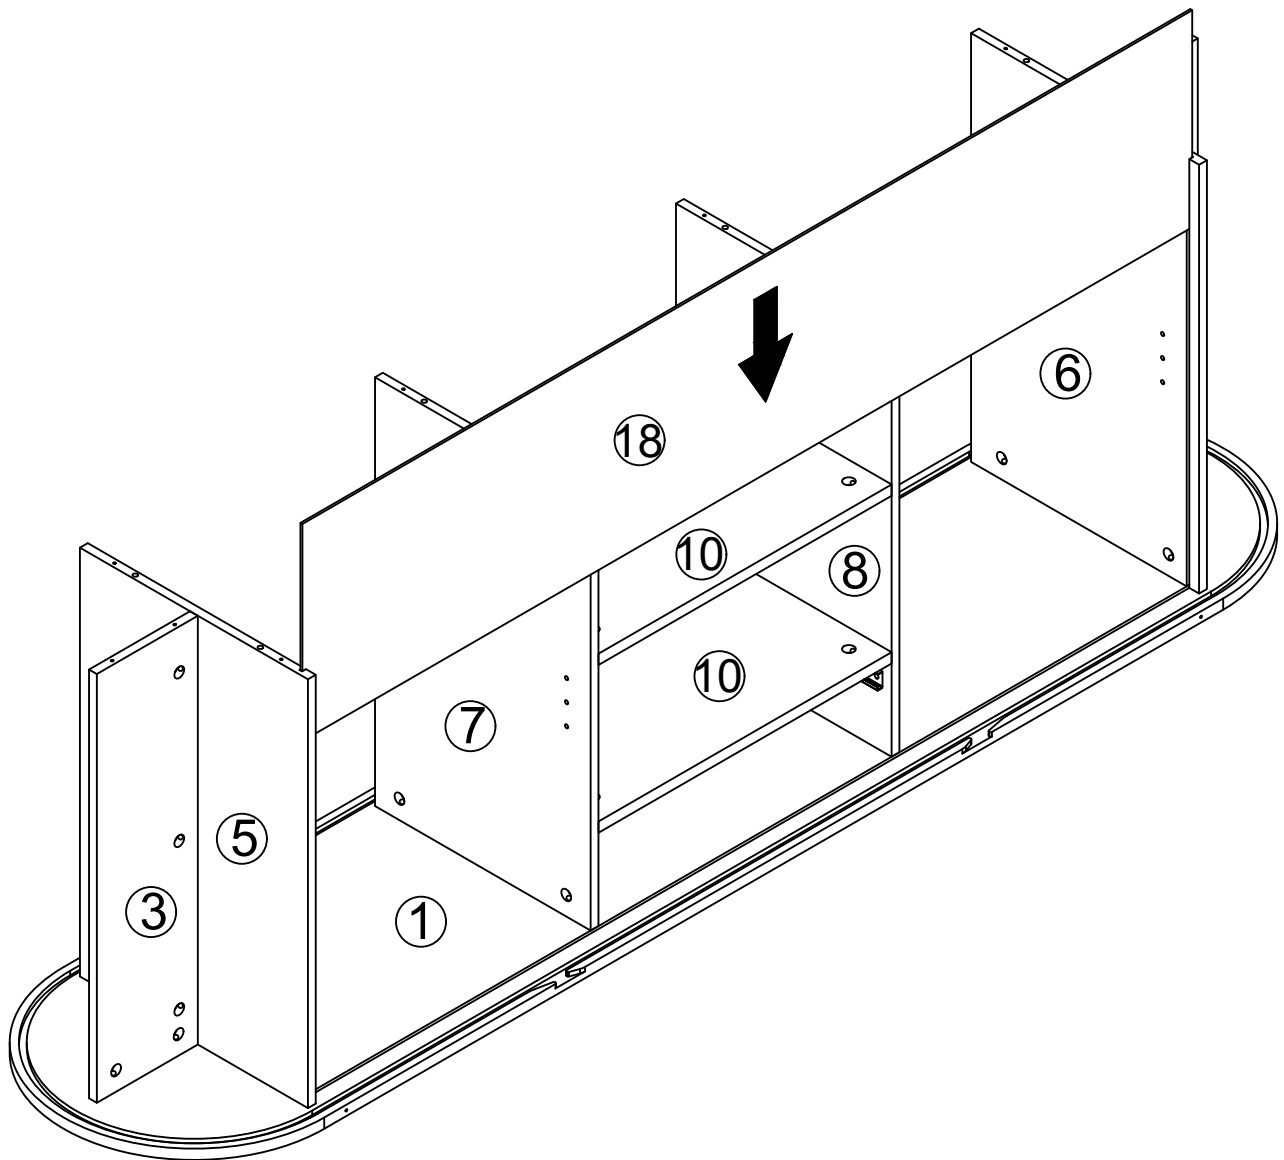


STEP10



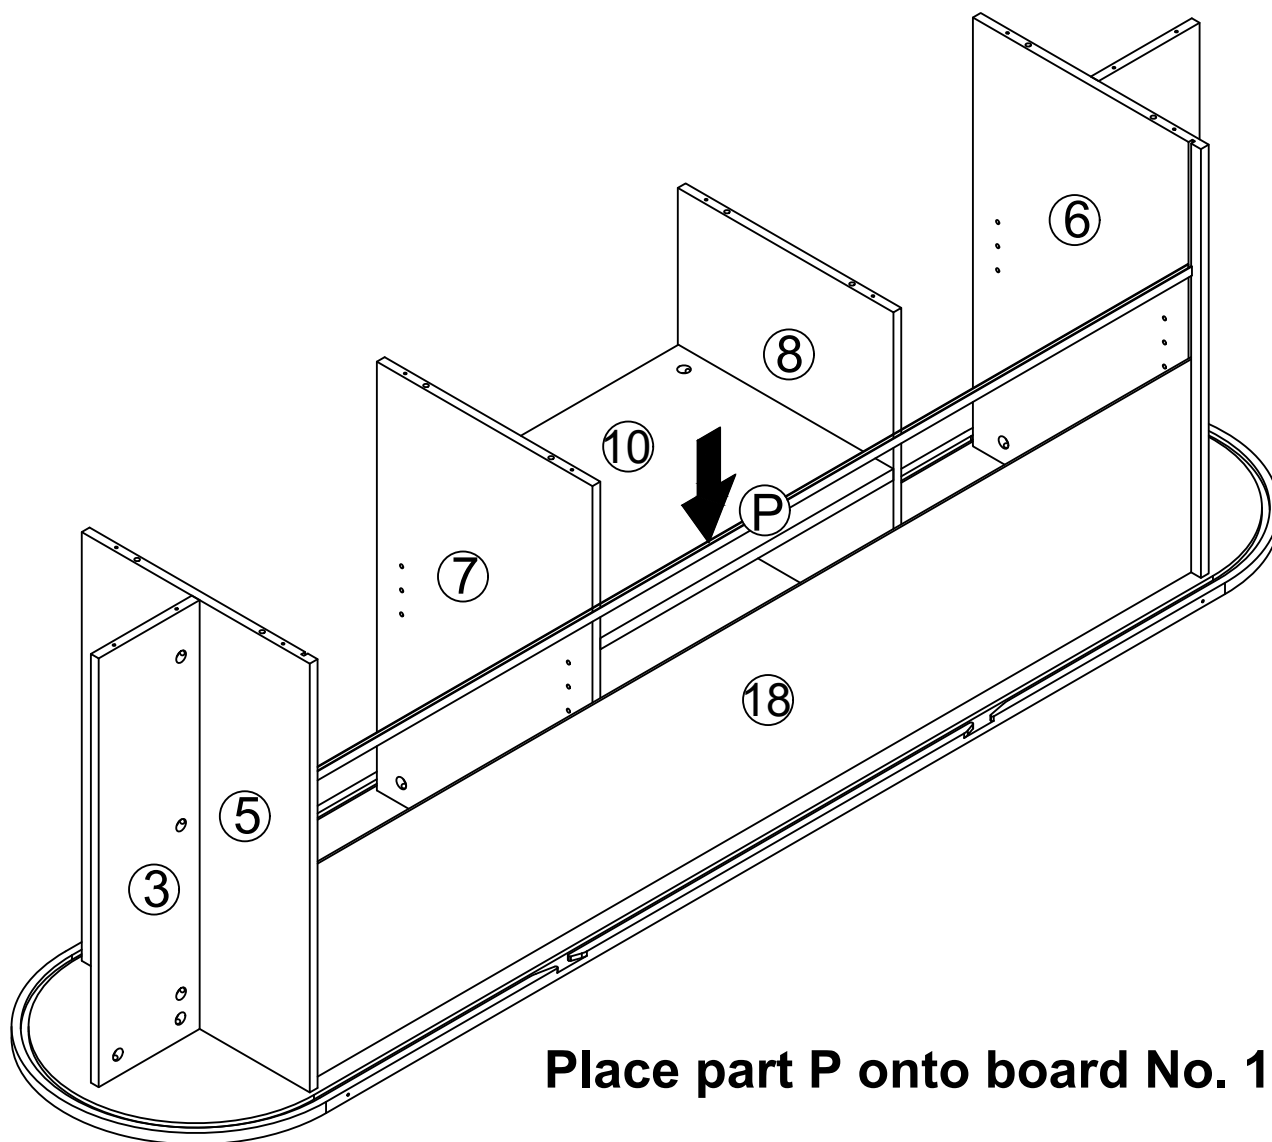
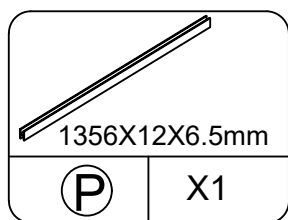


Place part P onto board No. 18.





STEP11

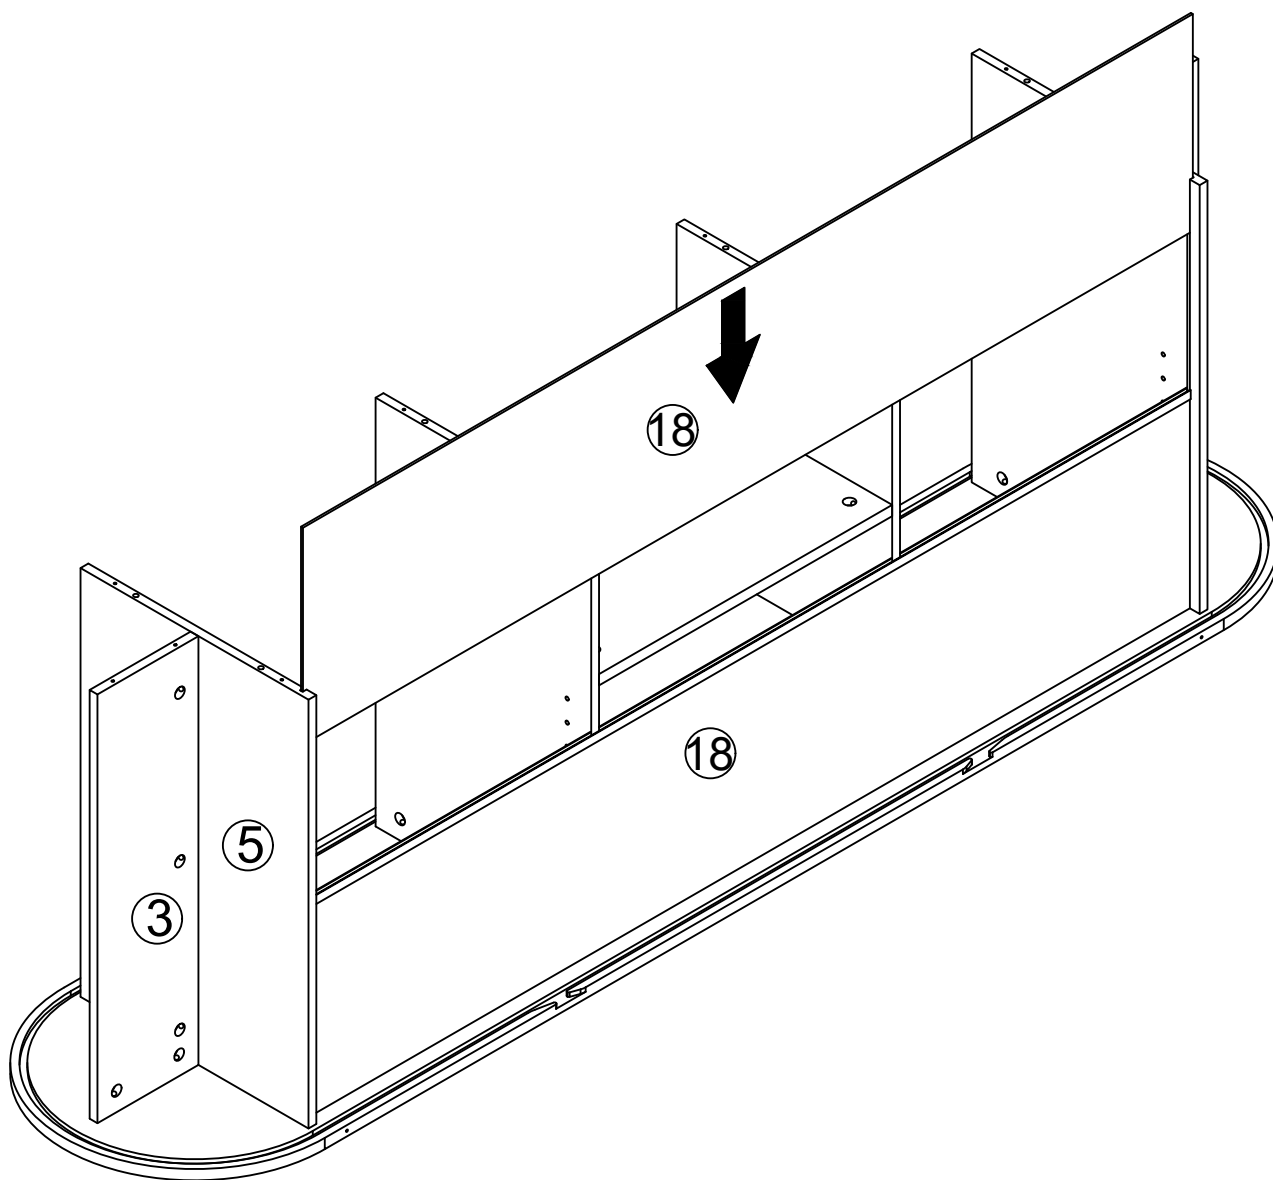



STEP12

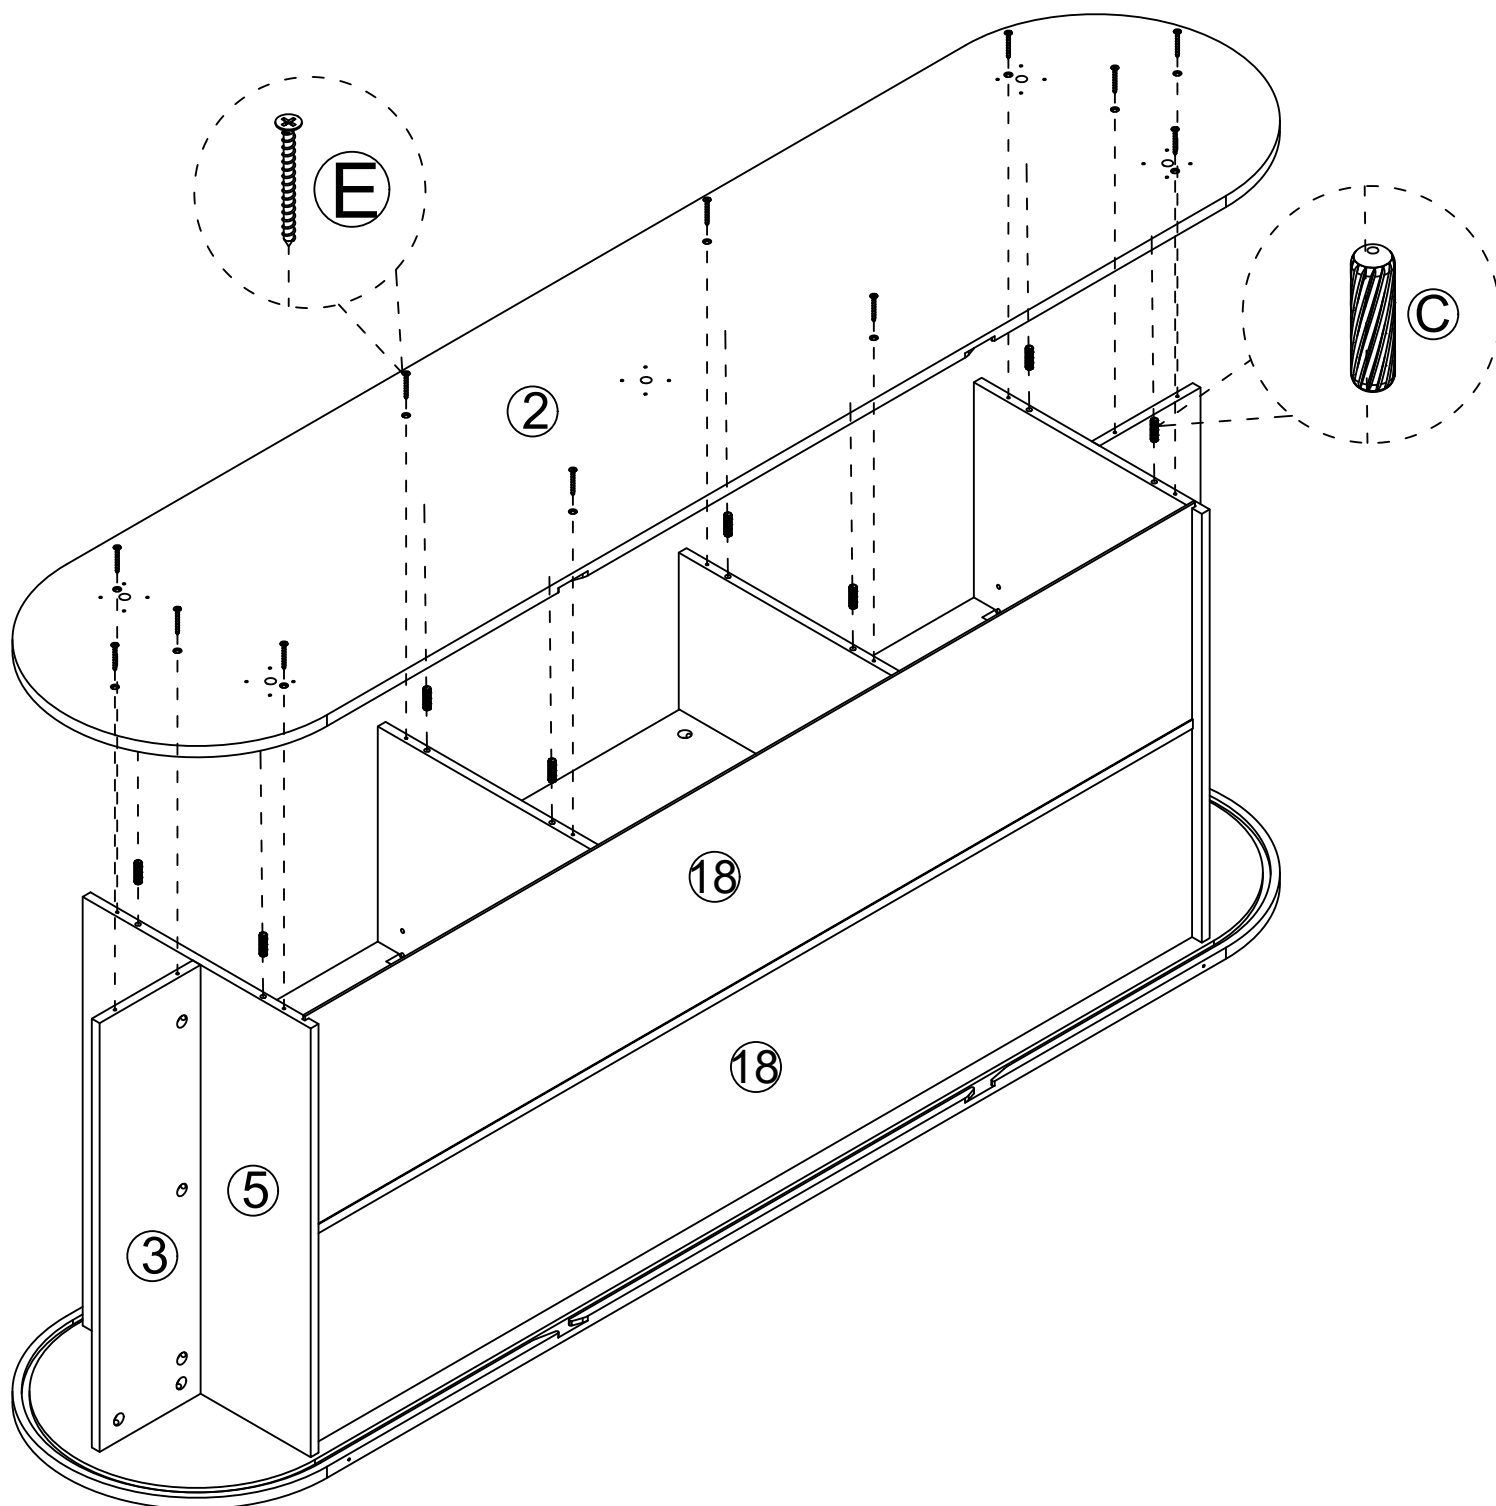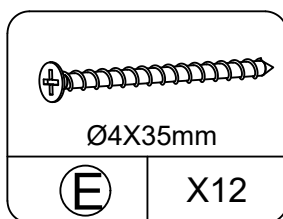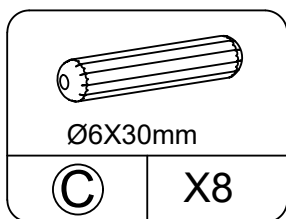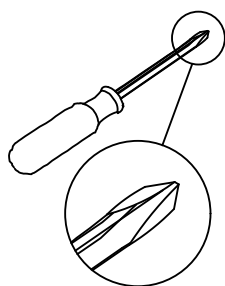

STEP13

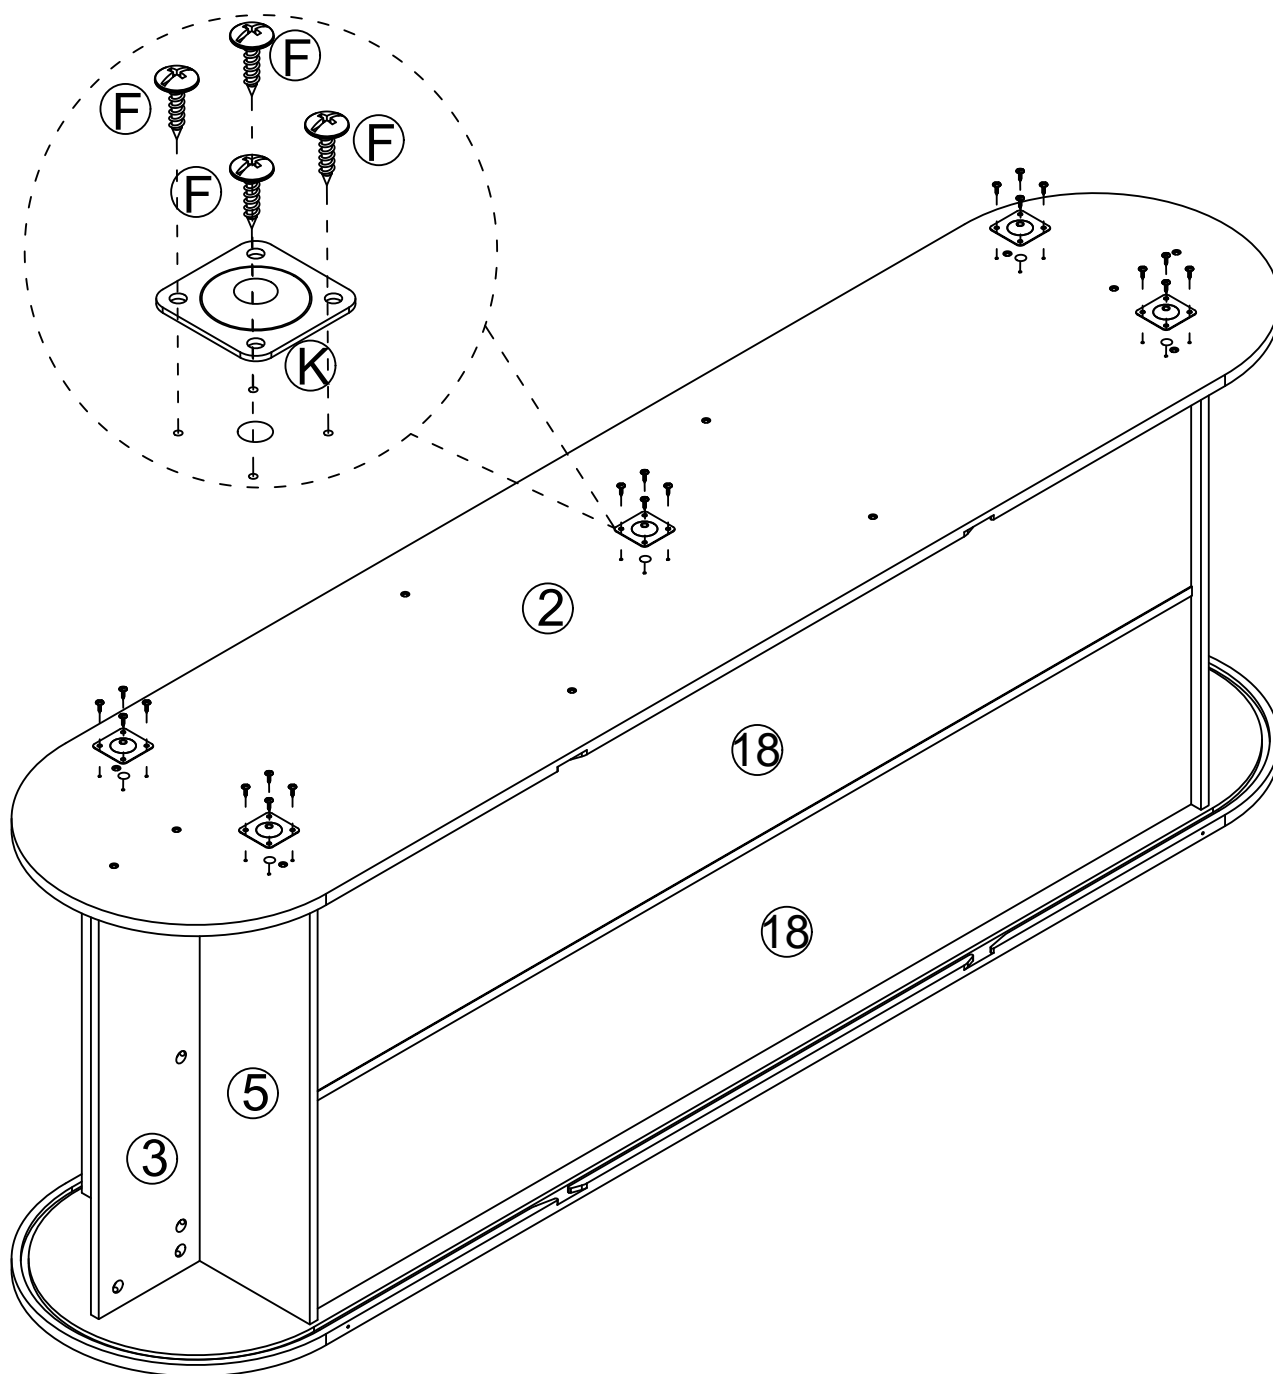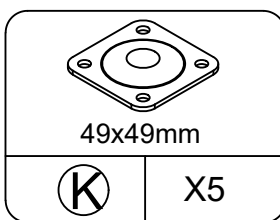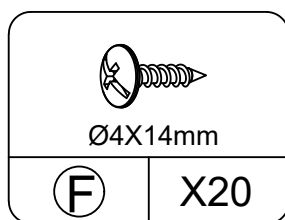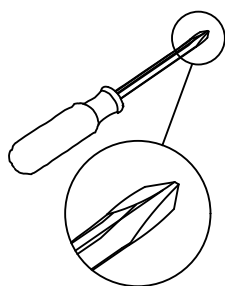



STEP14

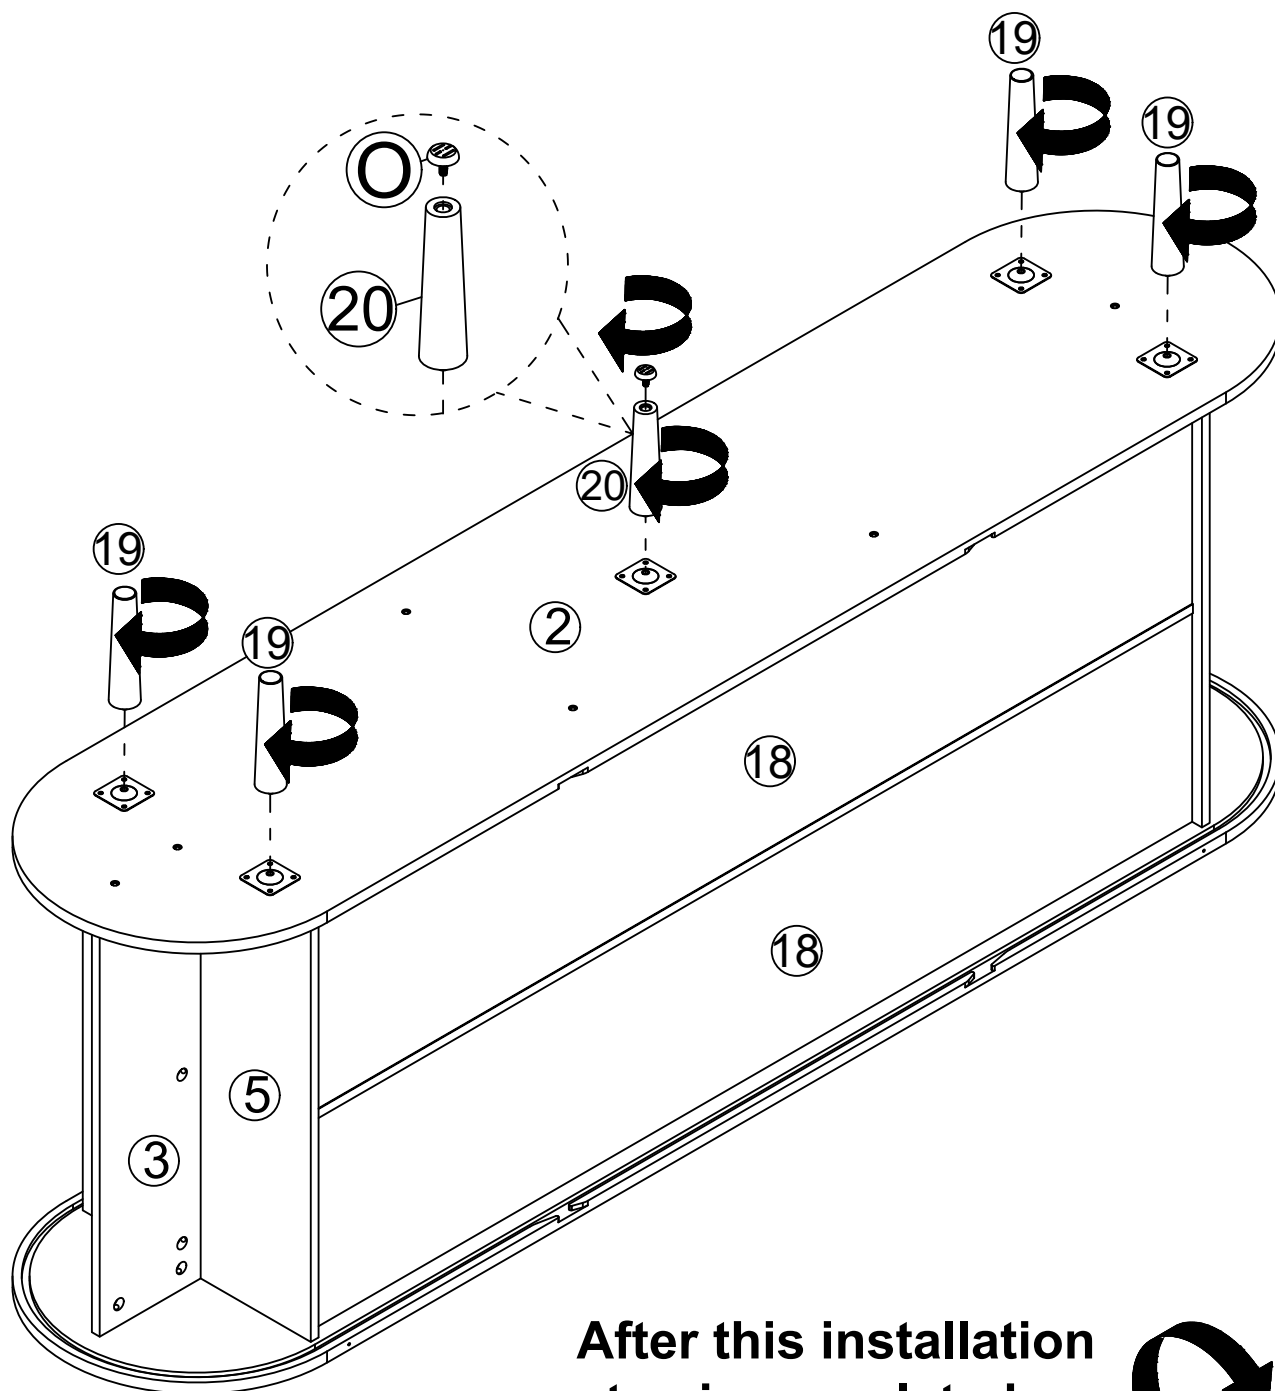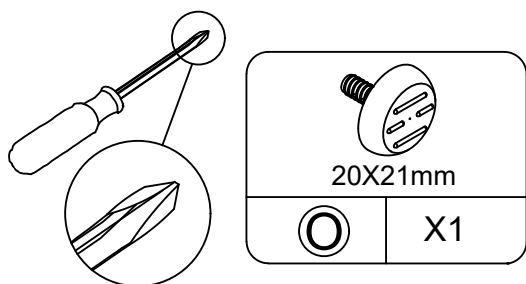


**After this installation
step is completed,
flip it over.**












STEP15

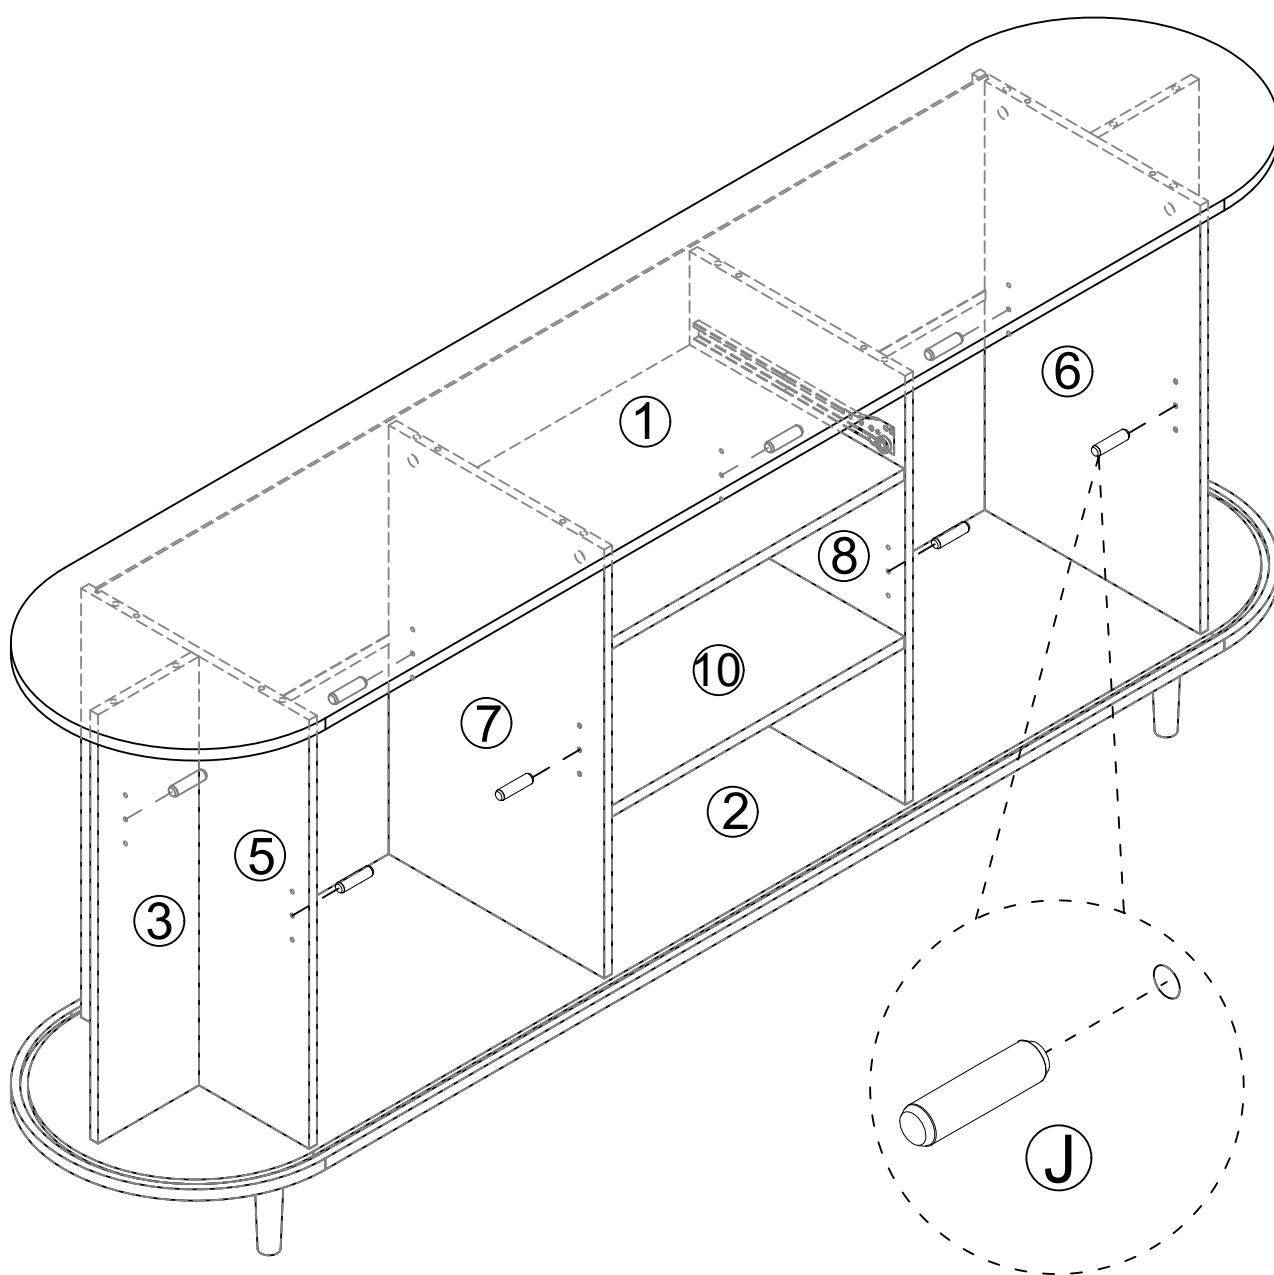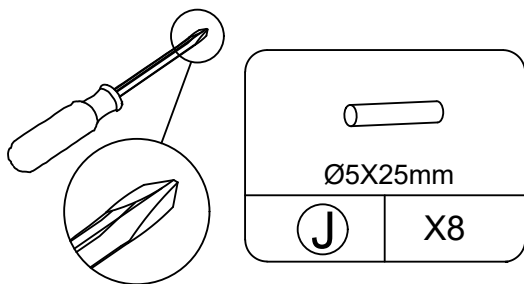



STEP16

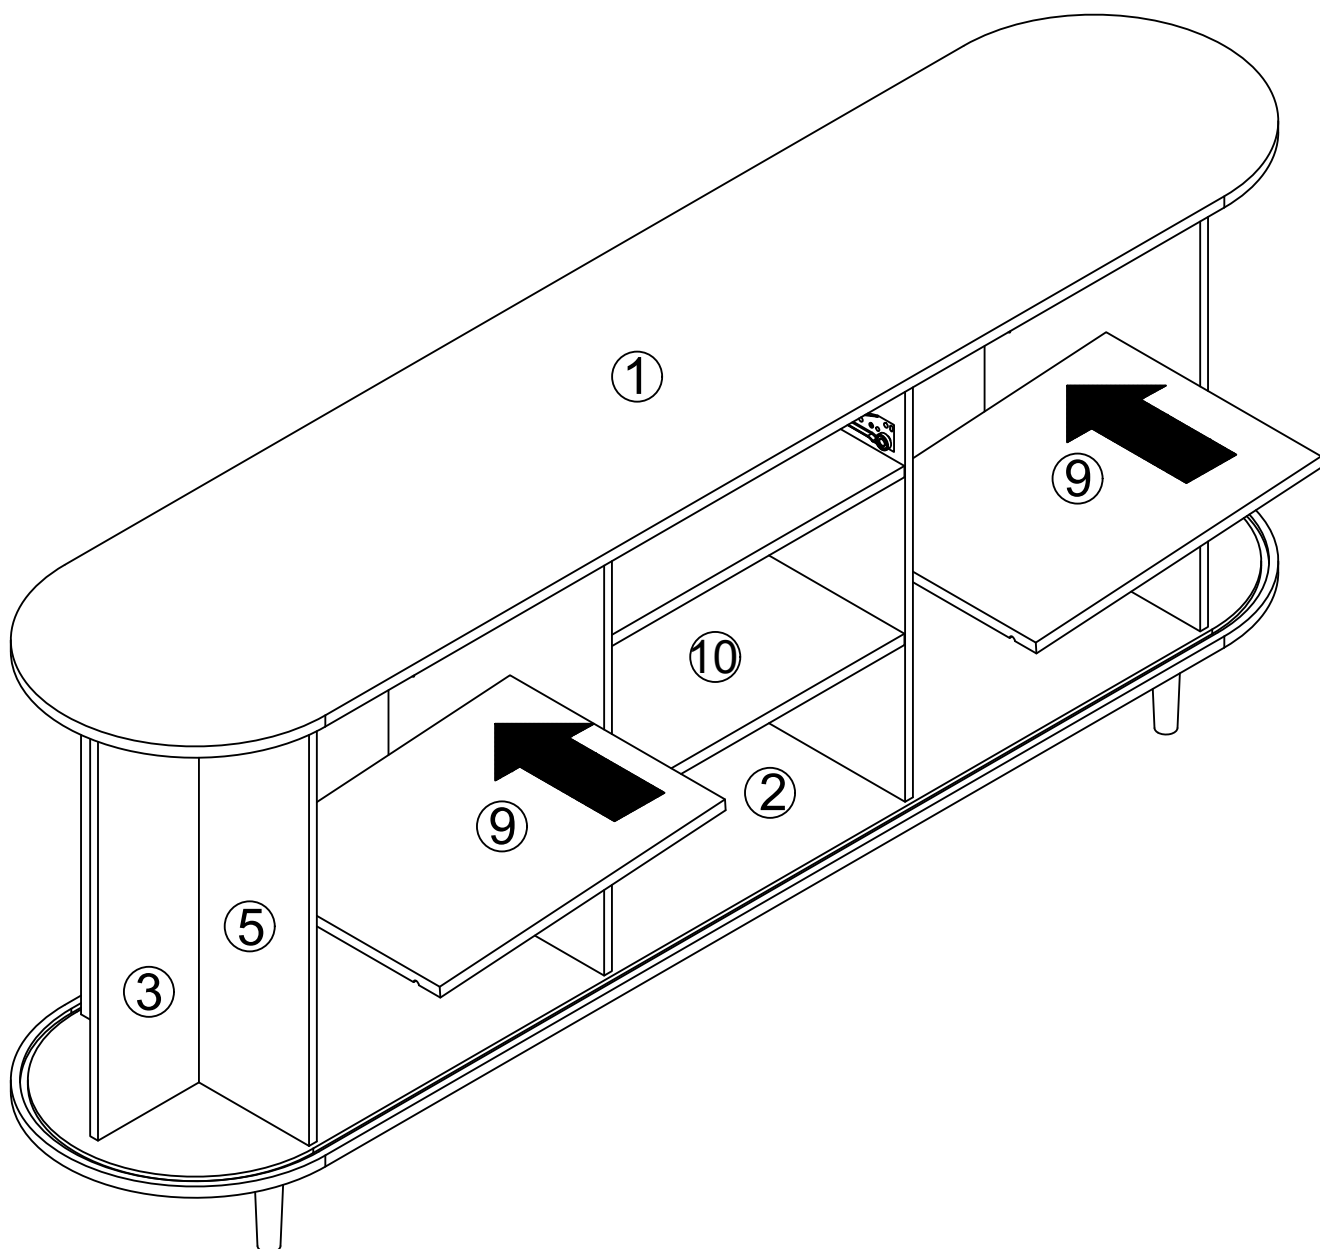

STEP17

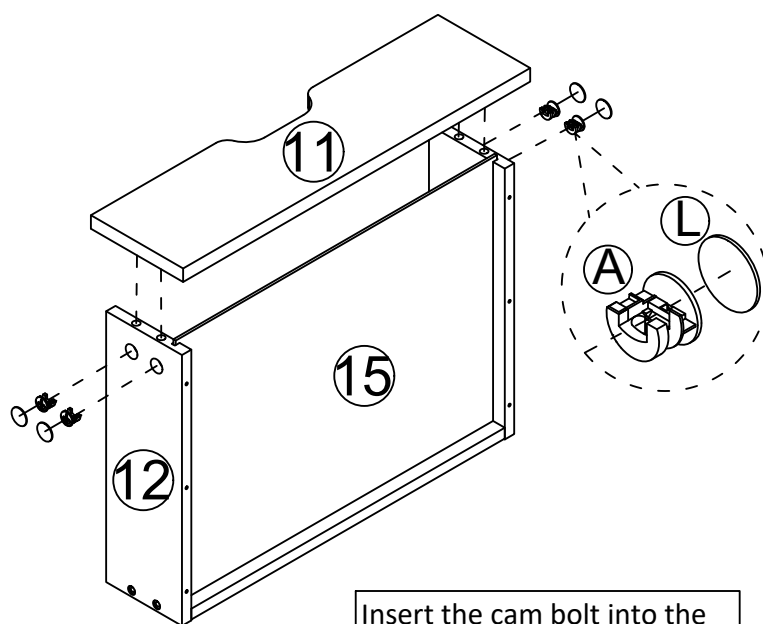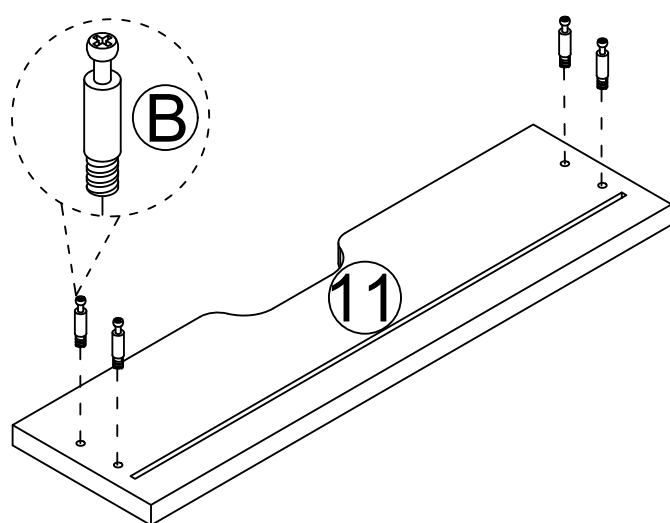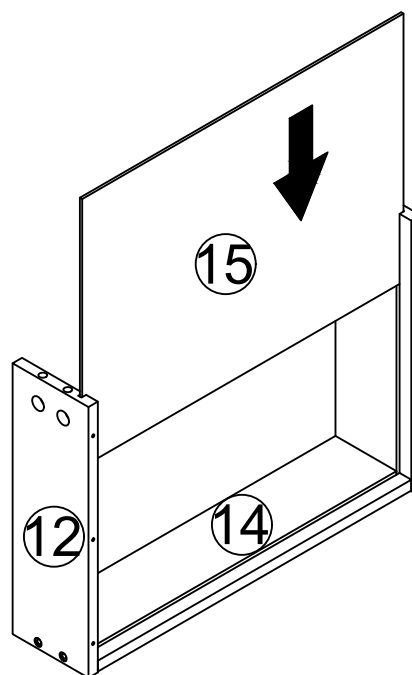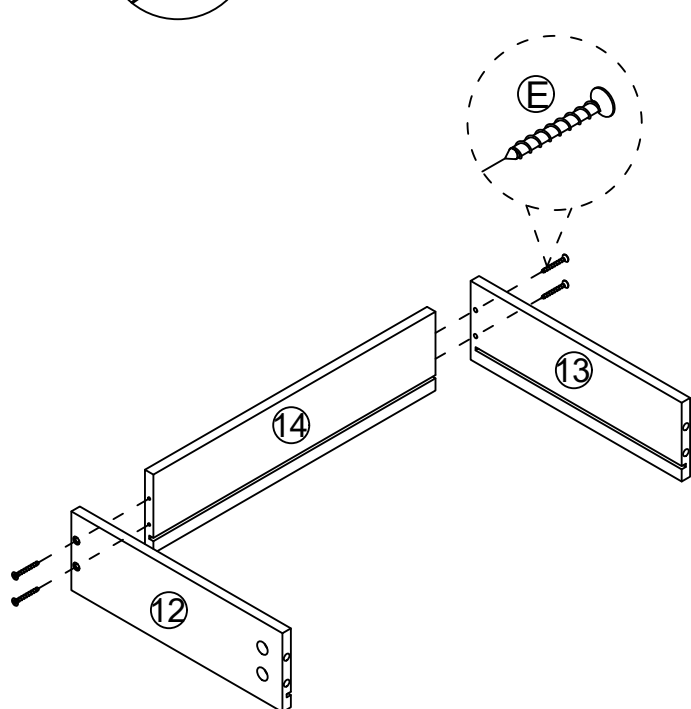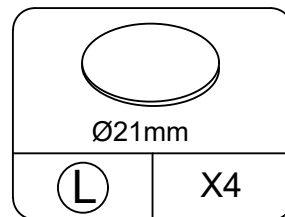
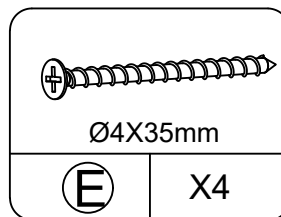
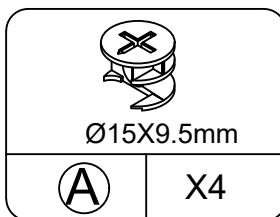
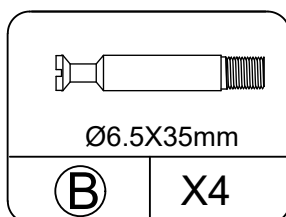
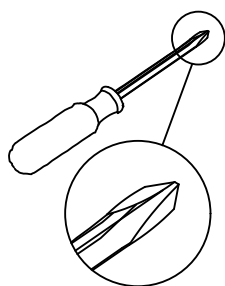


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

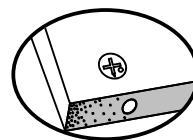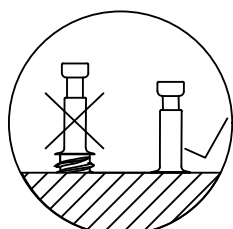


Proper orientation of CAM LOCK


STEP18

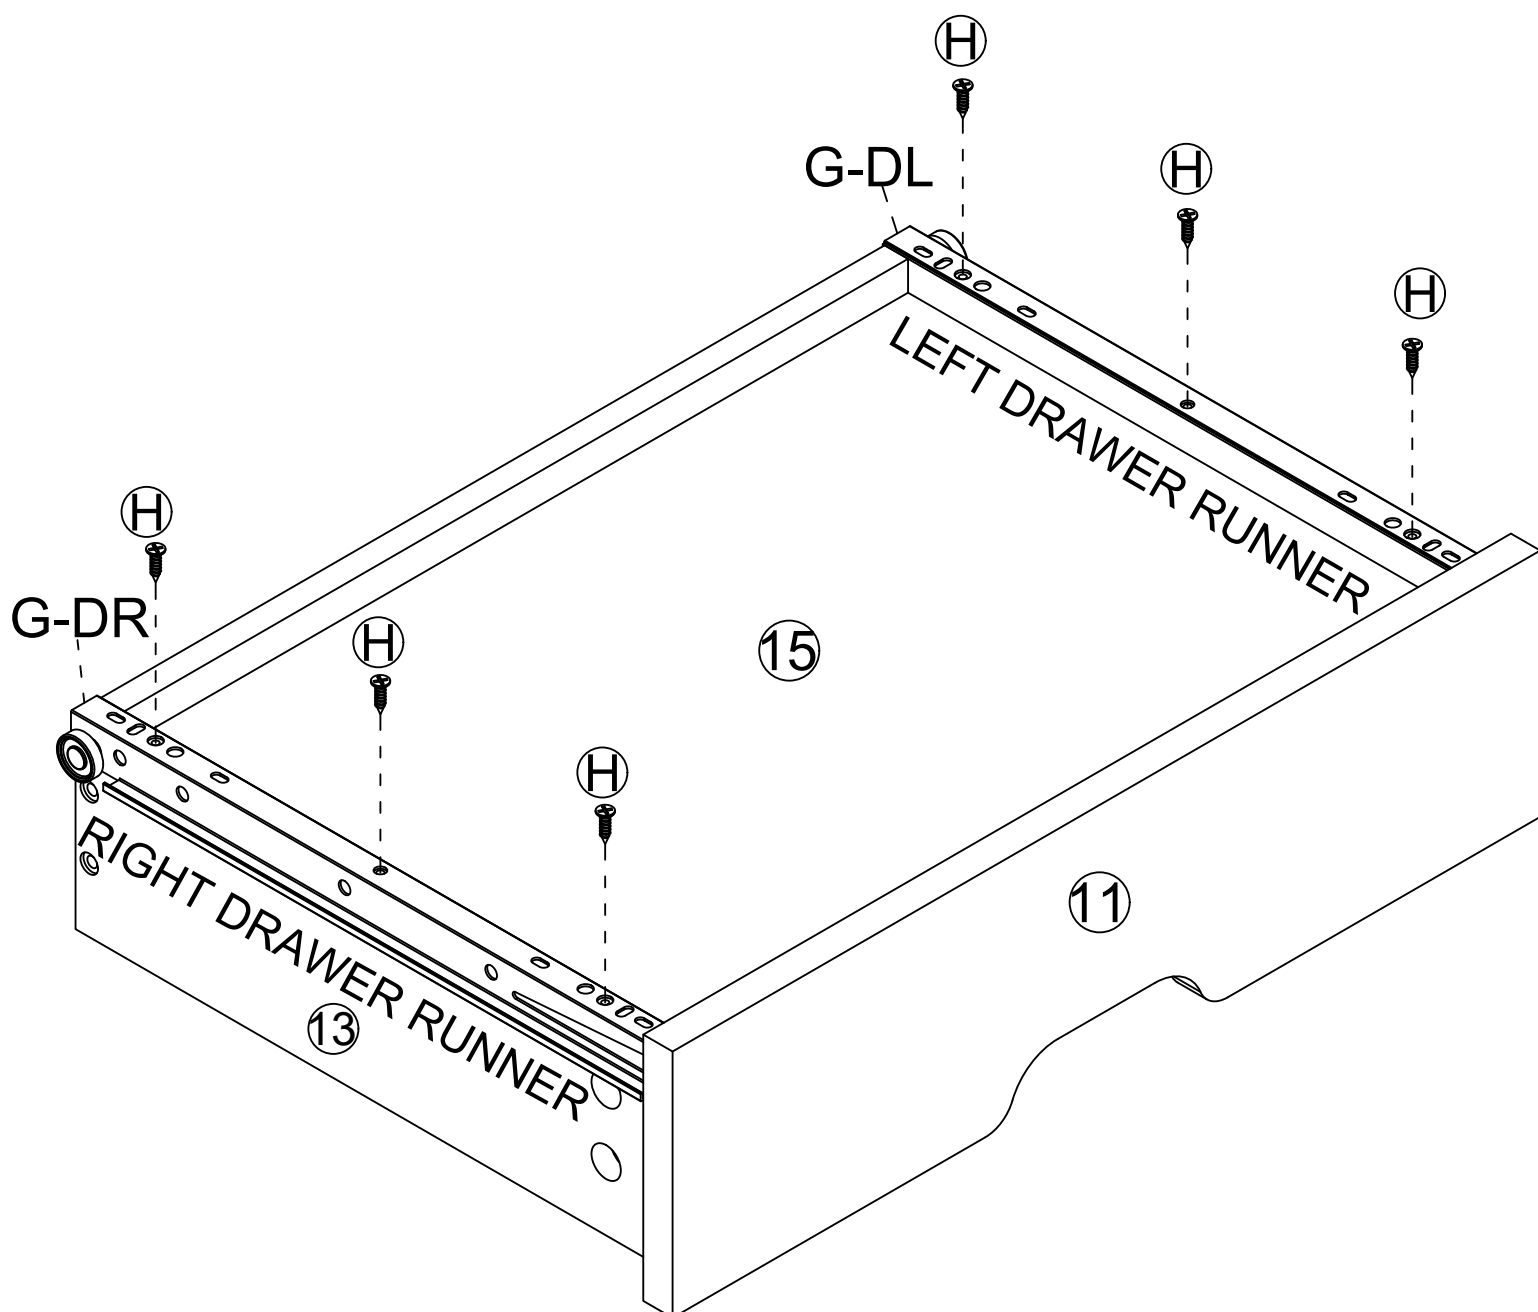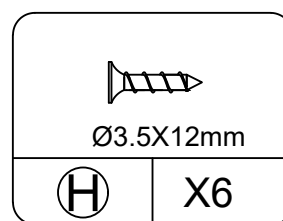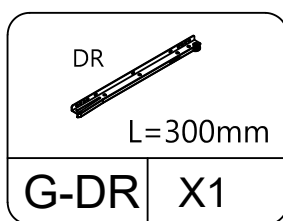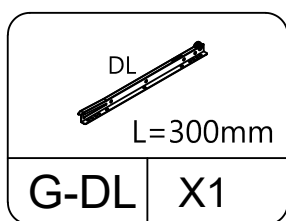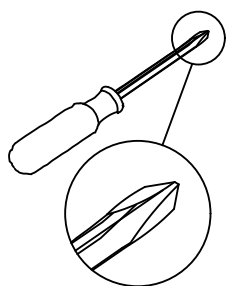

STEP19






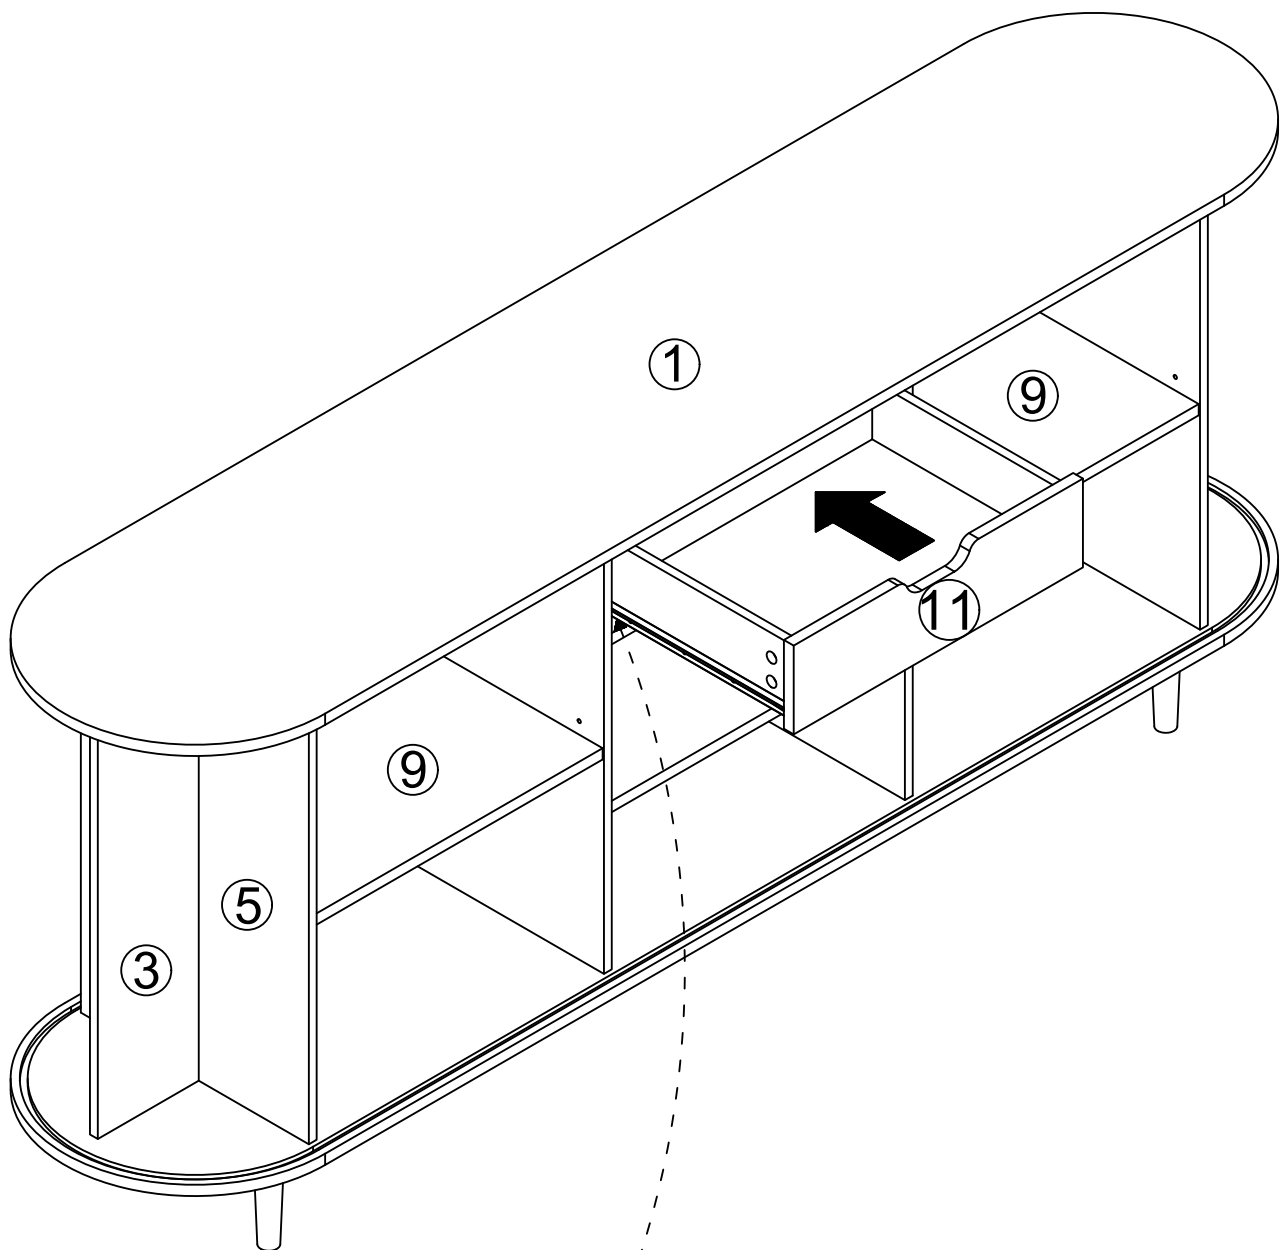


Cabinet Slide

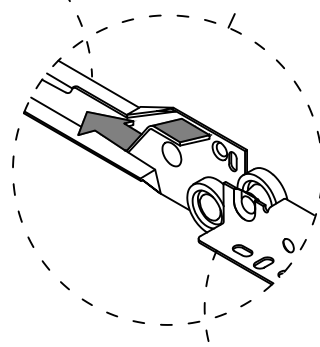


Drawer Slide


STEP20

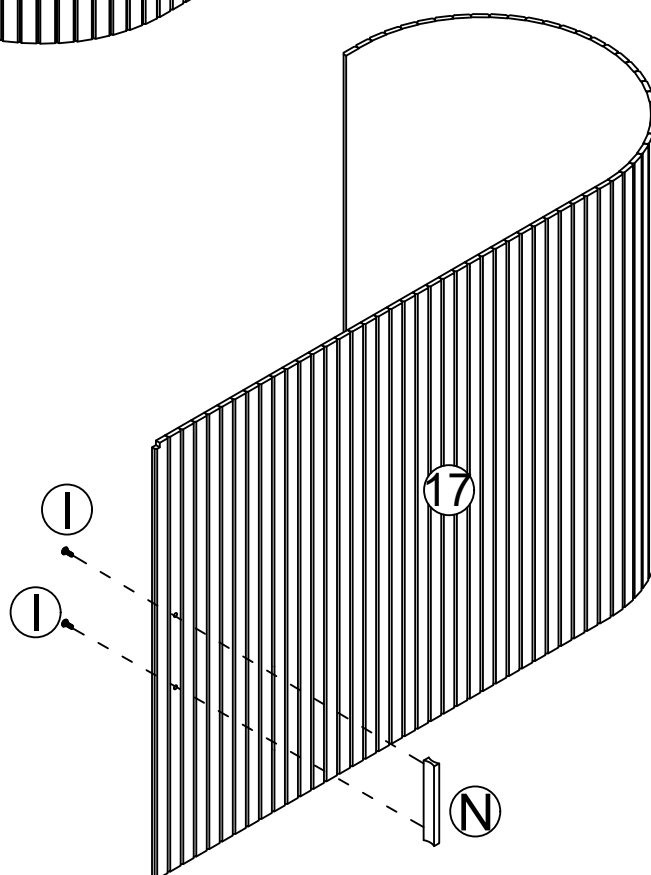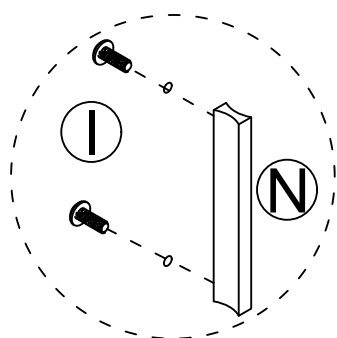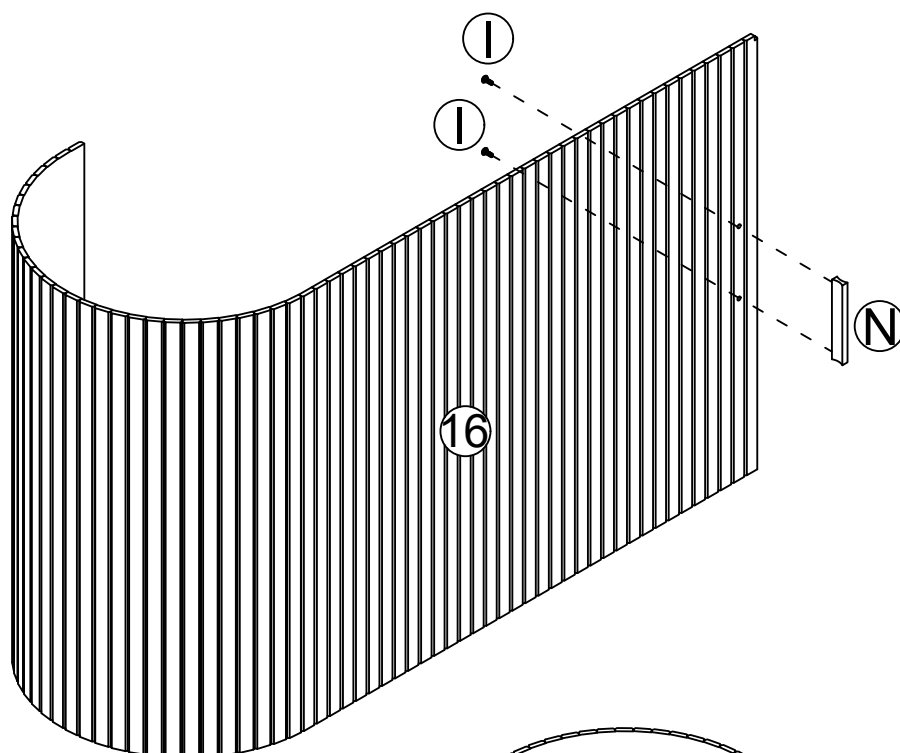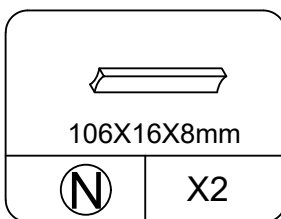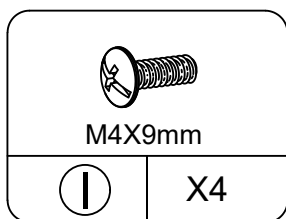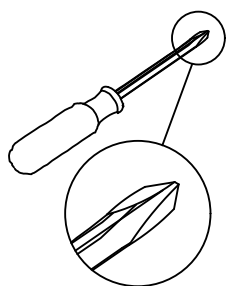


STEP21

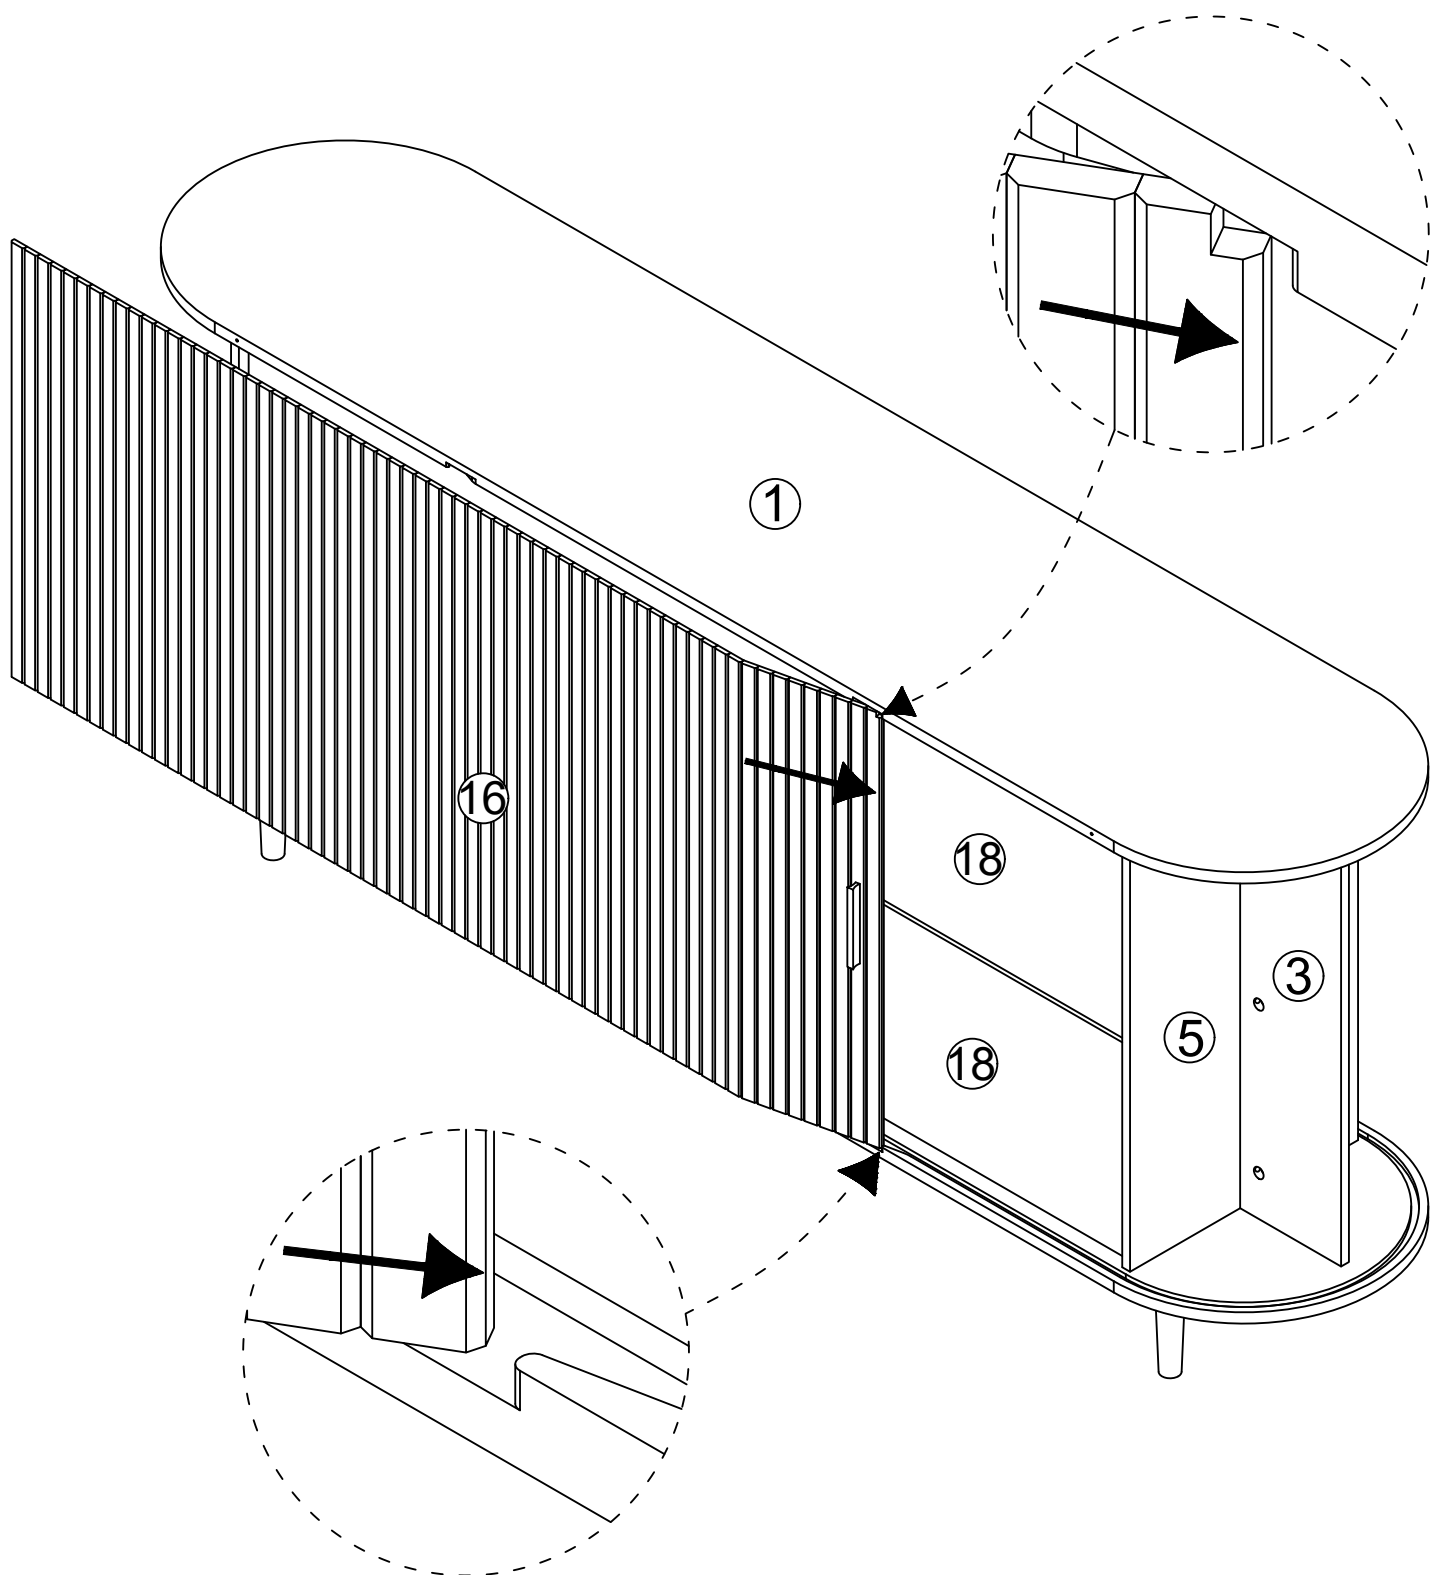


STEP22

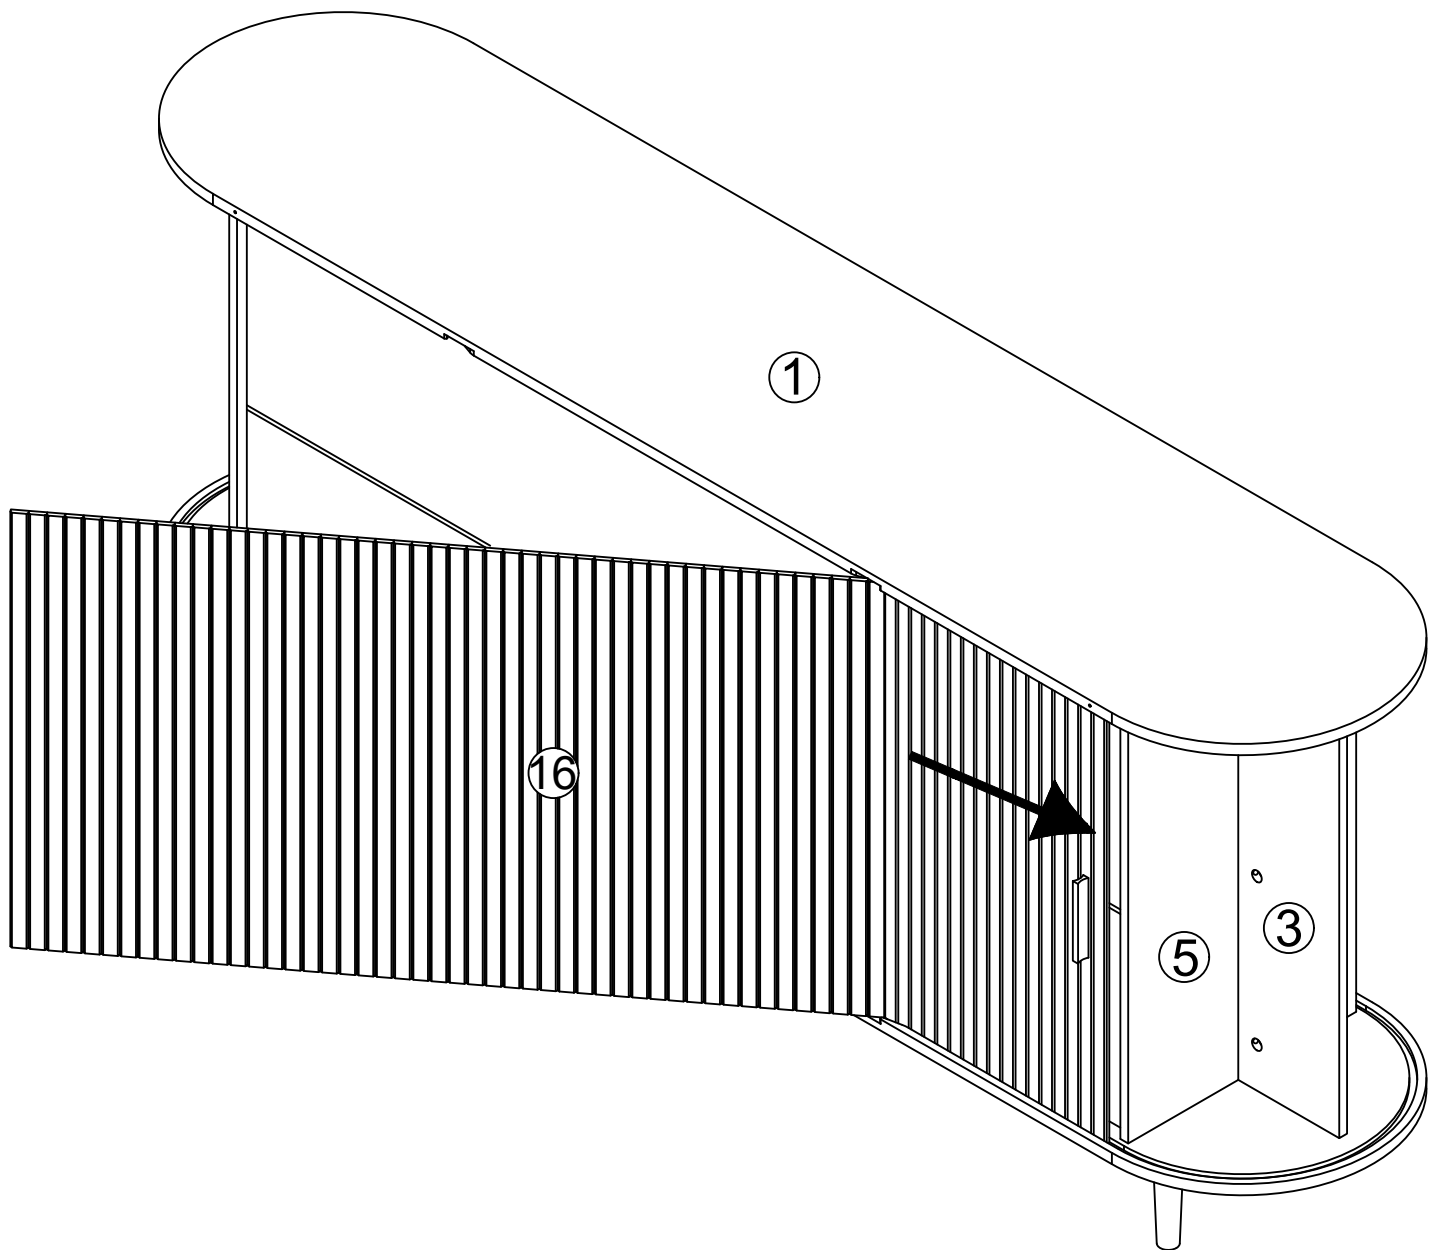







STEP23

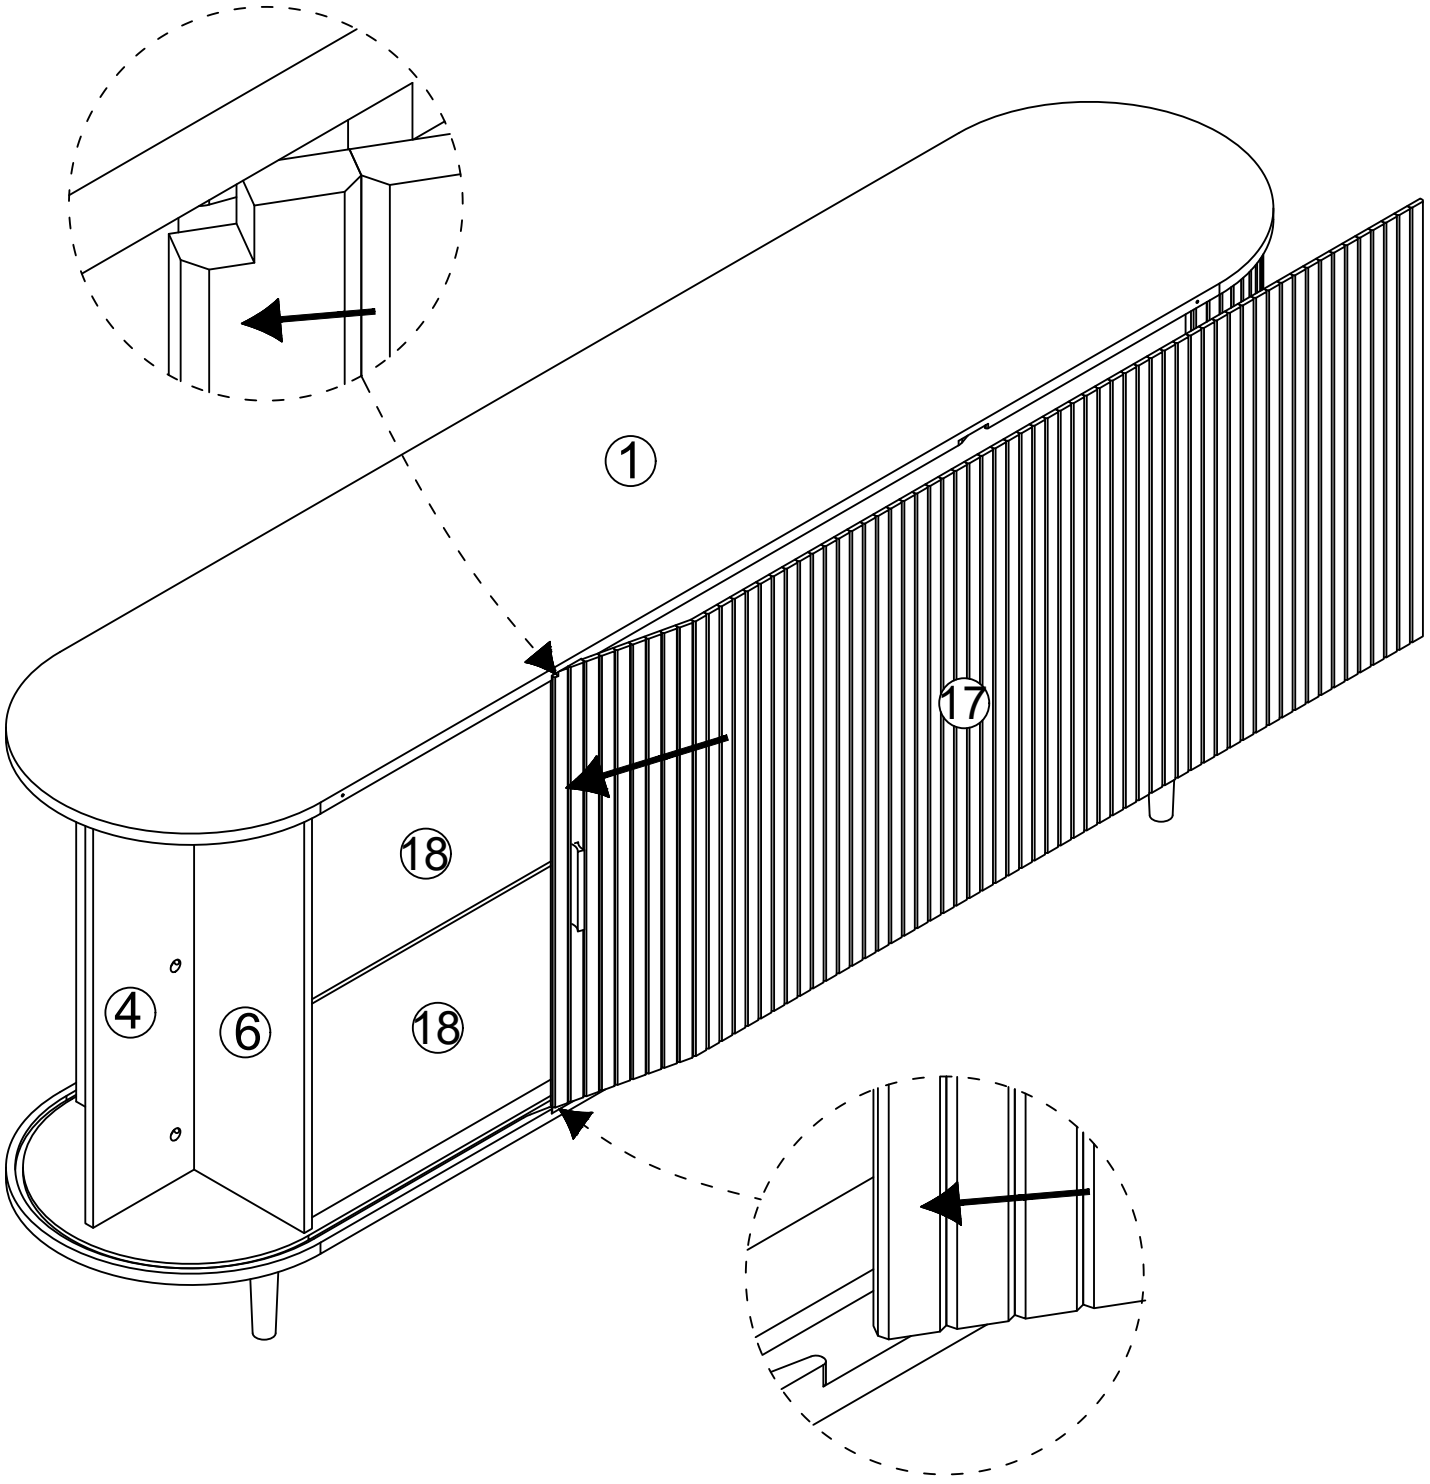

STEP24

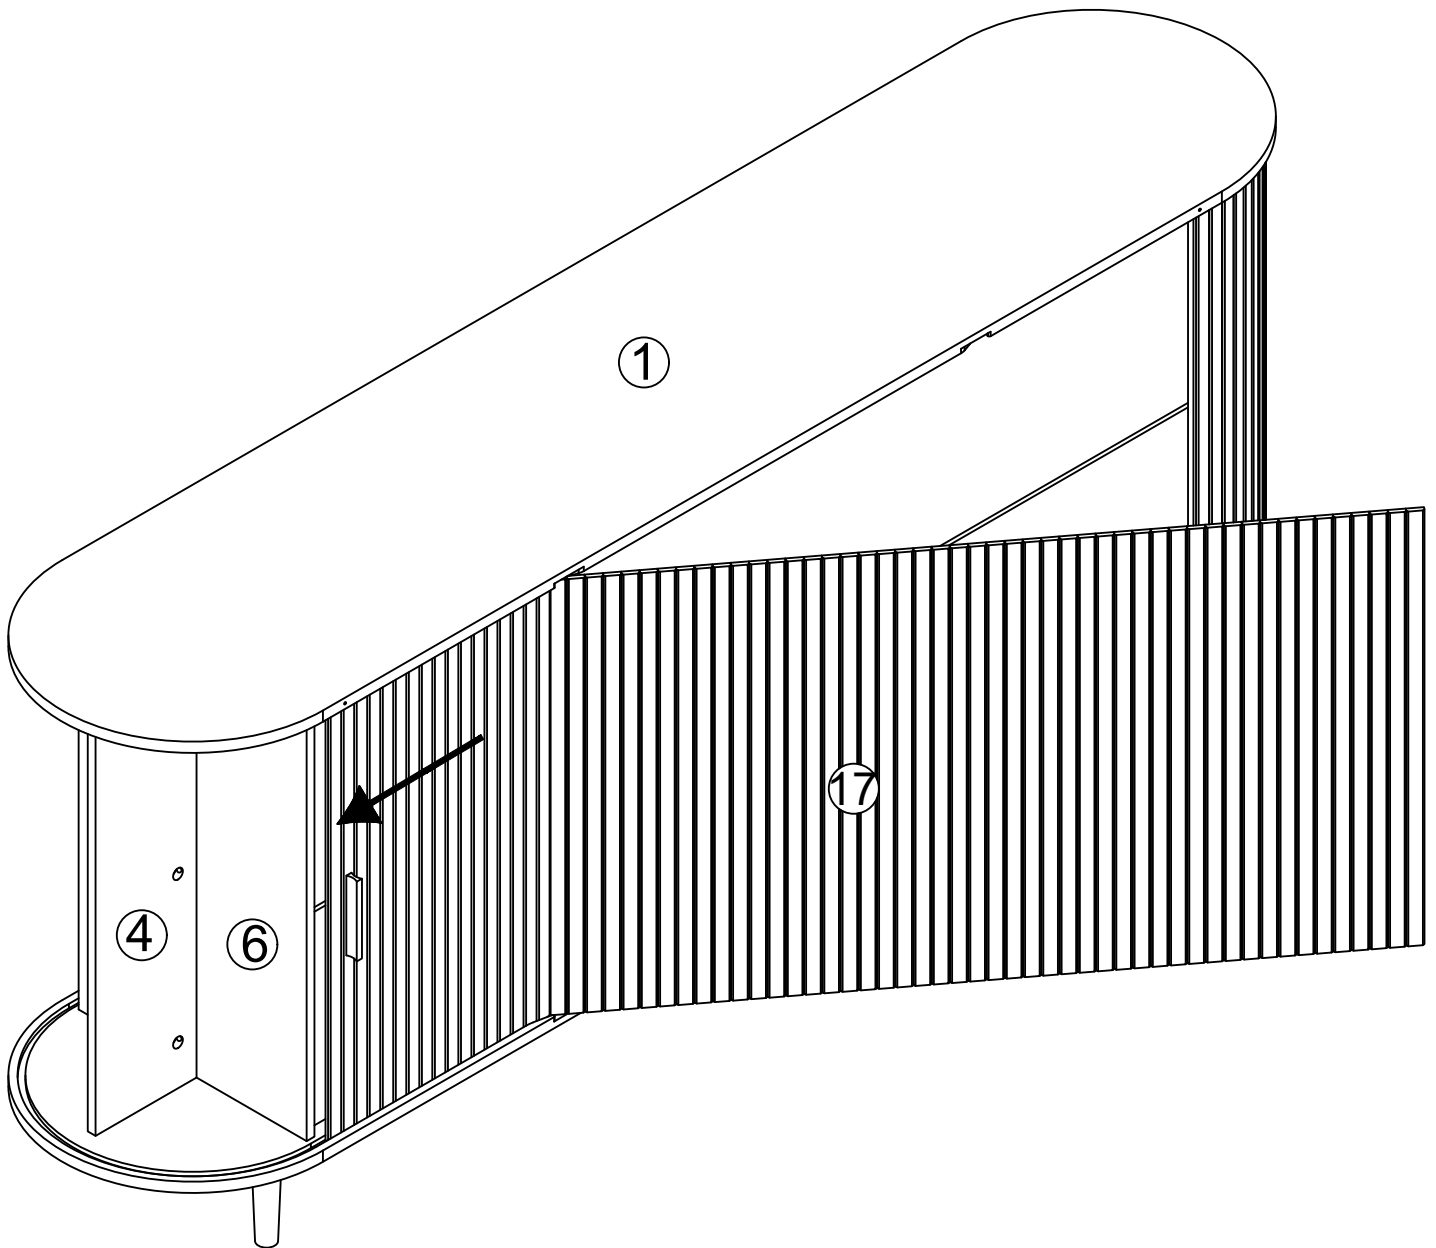


STEP25

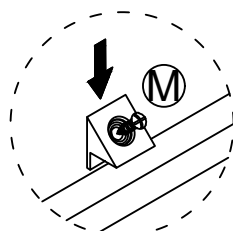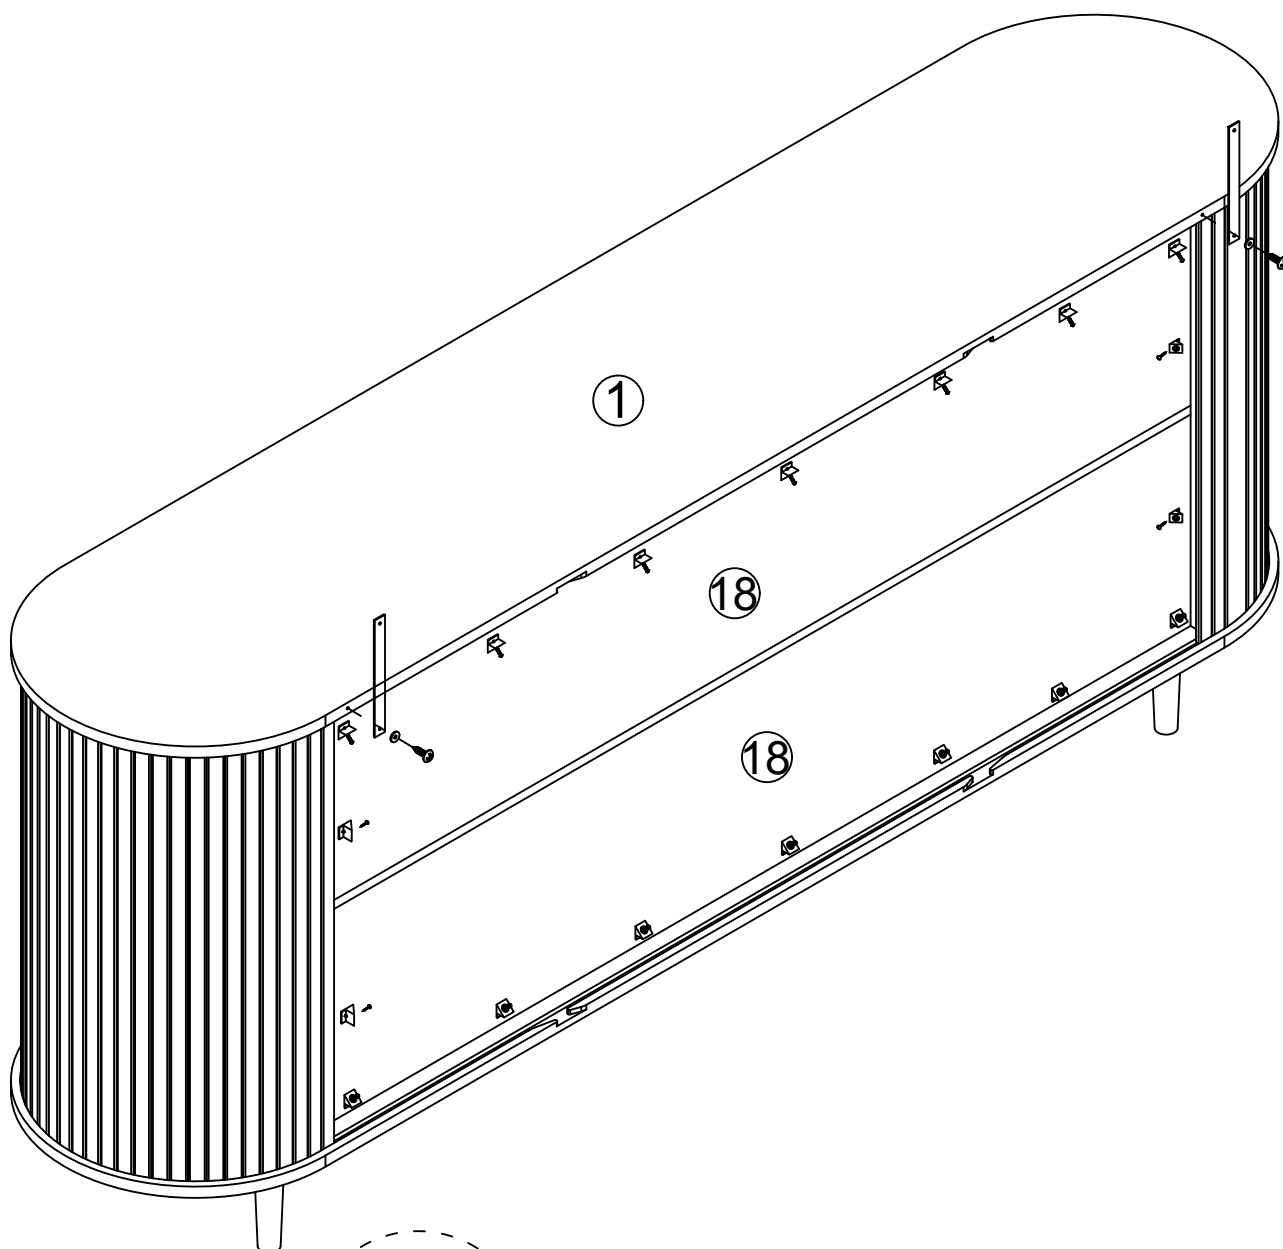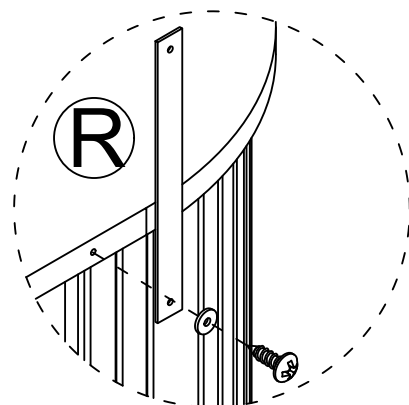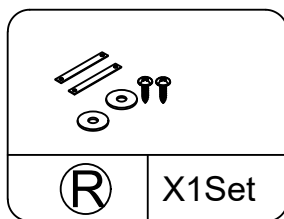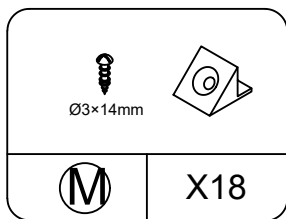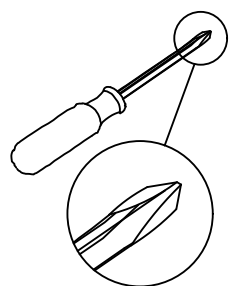


Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.


STEP26

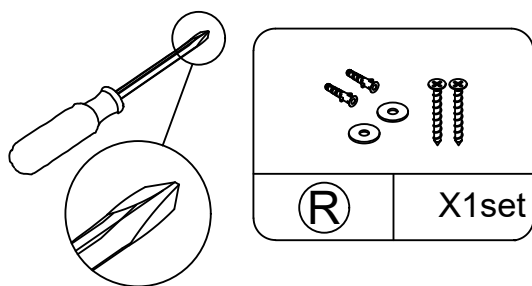


Install the tipping restraint hardware

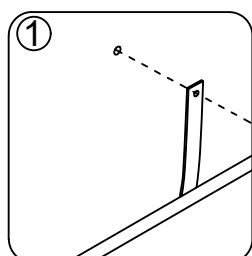


1. make mark on the wall

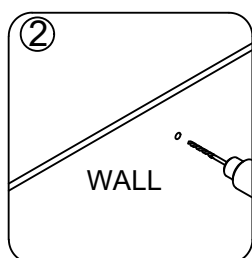

2. drill two Ø6 holes on the wall

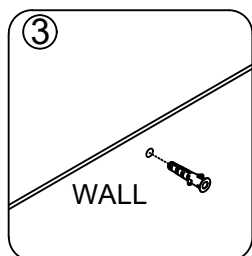

3. put two anchors in the holes

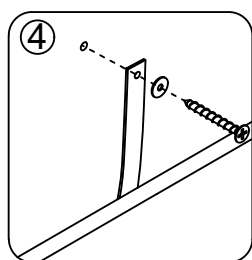

4. fix the device on the wall by the long screws

