


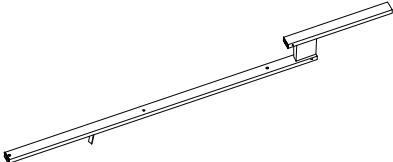
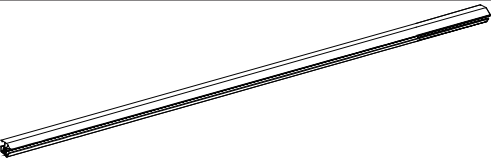

































"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"





















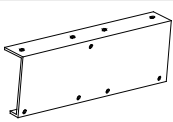





1. Two or more people are required for assembly.
2. A ladder and electric drill may be necessary.
3. Do not erect the structure in heavy winds or inclement weather.
4. Do not leave up this unit for extended periods of time, as it is not a permanent structure or designed to withstand sustained wind or rain. It is a temporary, portable shelter that shields you from sunlight and rain. The screens also block flying insects.
5. Do not use candles, matches, or any open flames near the tent.
6. To better align the screws for practical situations, do not fully tighten screws initially.
7. Professional installation is highly recommended.

Item no.	Reference Image	Qty.
<b>A</b>		X4
<b>B</b>		X4
<b>B1</b>		X4
<b>E1</b>		X4
<b>Ea</b>		X4
<b>Eb</b>		X4
<b>F1</b>		X8

Item no.	Reference Image	Qty.
<b>G1</b>		<b>X4</b>
<b>G3</b>		<b>X4</b>
<b>G5</b>		<b>X4</b>
<b>G6</b>		<b>X4</b>
<b>H</b>		<b>X4</b>
<b>H1</b>		<b>X4</b>
<b>J</b>		<b>X4</b>
<b>K</b>		<b>X4</b>
<b>K1</b>		<b>X4</b>
<b>L</b>		<b>X1</b>
<b>M</b>		<b>X1</b>
<b>N</b>		<b>X8</b>
<b>N1</b>		<b>X4</b>



Item no.	Reference Image	Qty.
N2		X4
P		X4
Q1		X4
Q2		X4
Q3		X4
Q4		X4
Q5		X4
Q6		X4
Q7		X4
Q8		X4
S		X4
Sa		X4
T		X4
T1		X4


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>U</b>		X112	<b>V1</b>		X2
<b>W</b>		X4	<b>V2</b>		X2
<b>W3</b>		X4	<b>W1</b>		X4
<b>Z</b>		X64	<b>Y</b>		X116
<b>1</b>	 M6X16mm	X144	<b>2</b>	 M6X23mm	X72
<b>3</b>	 M6X25mm	X10	<b>4</b>	 ST4.8X12mm	X16
<b>5</b>	 M6X10mm	X8	<b>6</b>	 M6X42mm	X4
<b>7</b>	 M6X47mm	X32	<b>8</b>		X16
<b>9</b>		X12	<b>10</b>		X1
<b>12</b>	 M5X12mm	X12	<b>13</b>		X1
<b>14</b>		X12	<b>15</b>		X1
<b>16</b>		X12	<b>17</b>		X4
<b>18</b>		X4	<b>Za</b>		X1

1

X4





Ⓐ 4pcs



Ⓙ 4pcs




① 12pcs

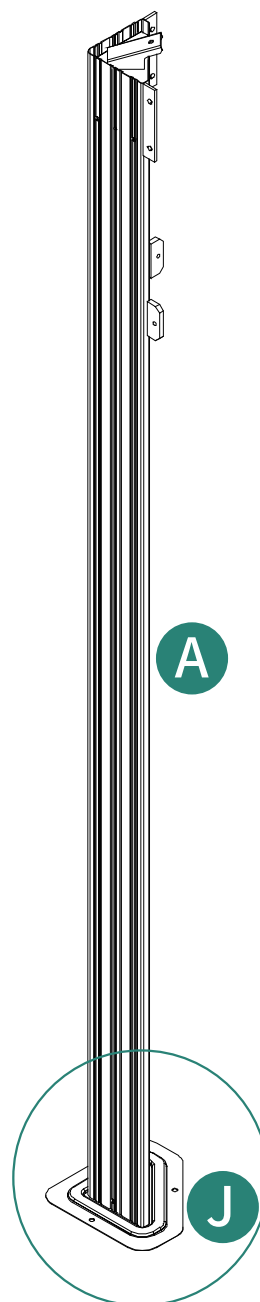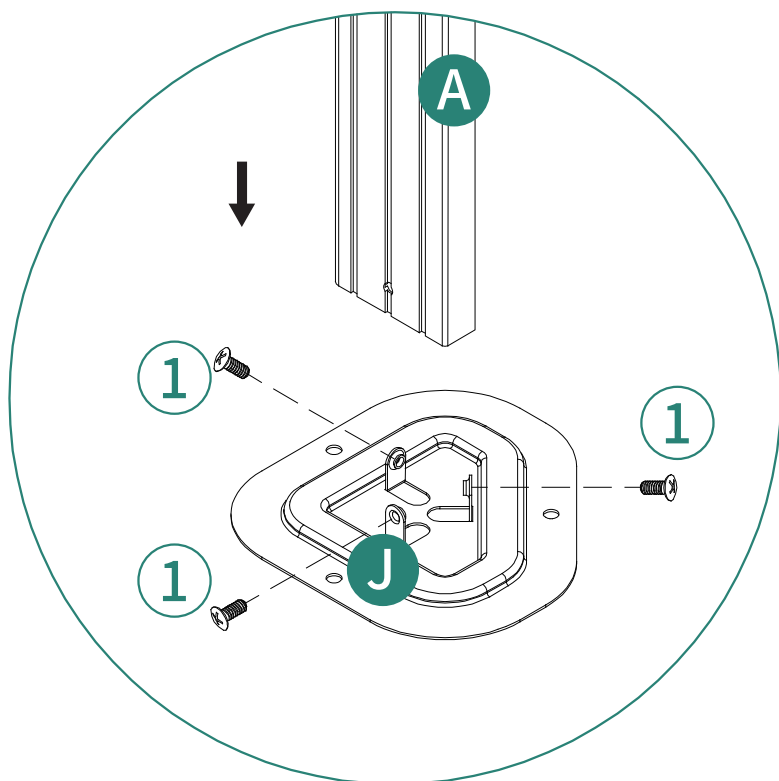

# 2


## X4



Ⓑ 4pcs



Ⓑ1 4pcs



Ⓟ 4pcs




Ⓢ 112pcs



① 32pcs




When connecting B and B1 via P, make sure that 1 holes on part P (as shown in the picture) should be facing upwards. Do not install it upside down.

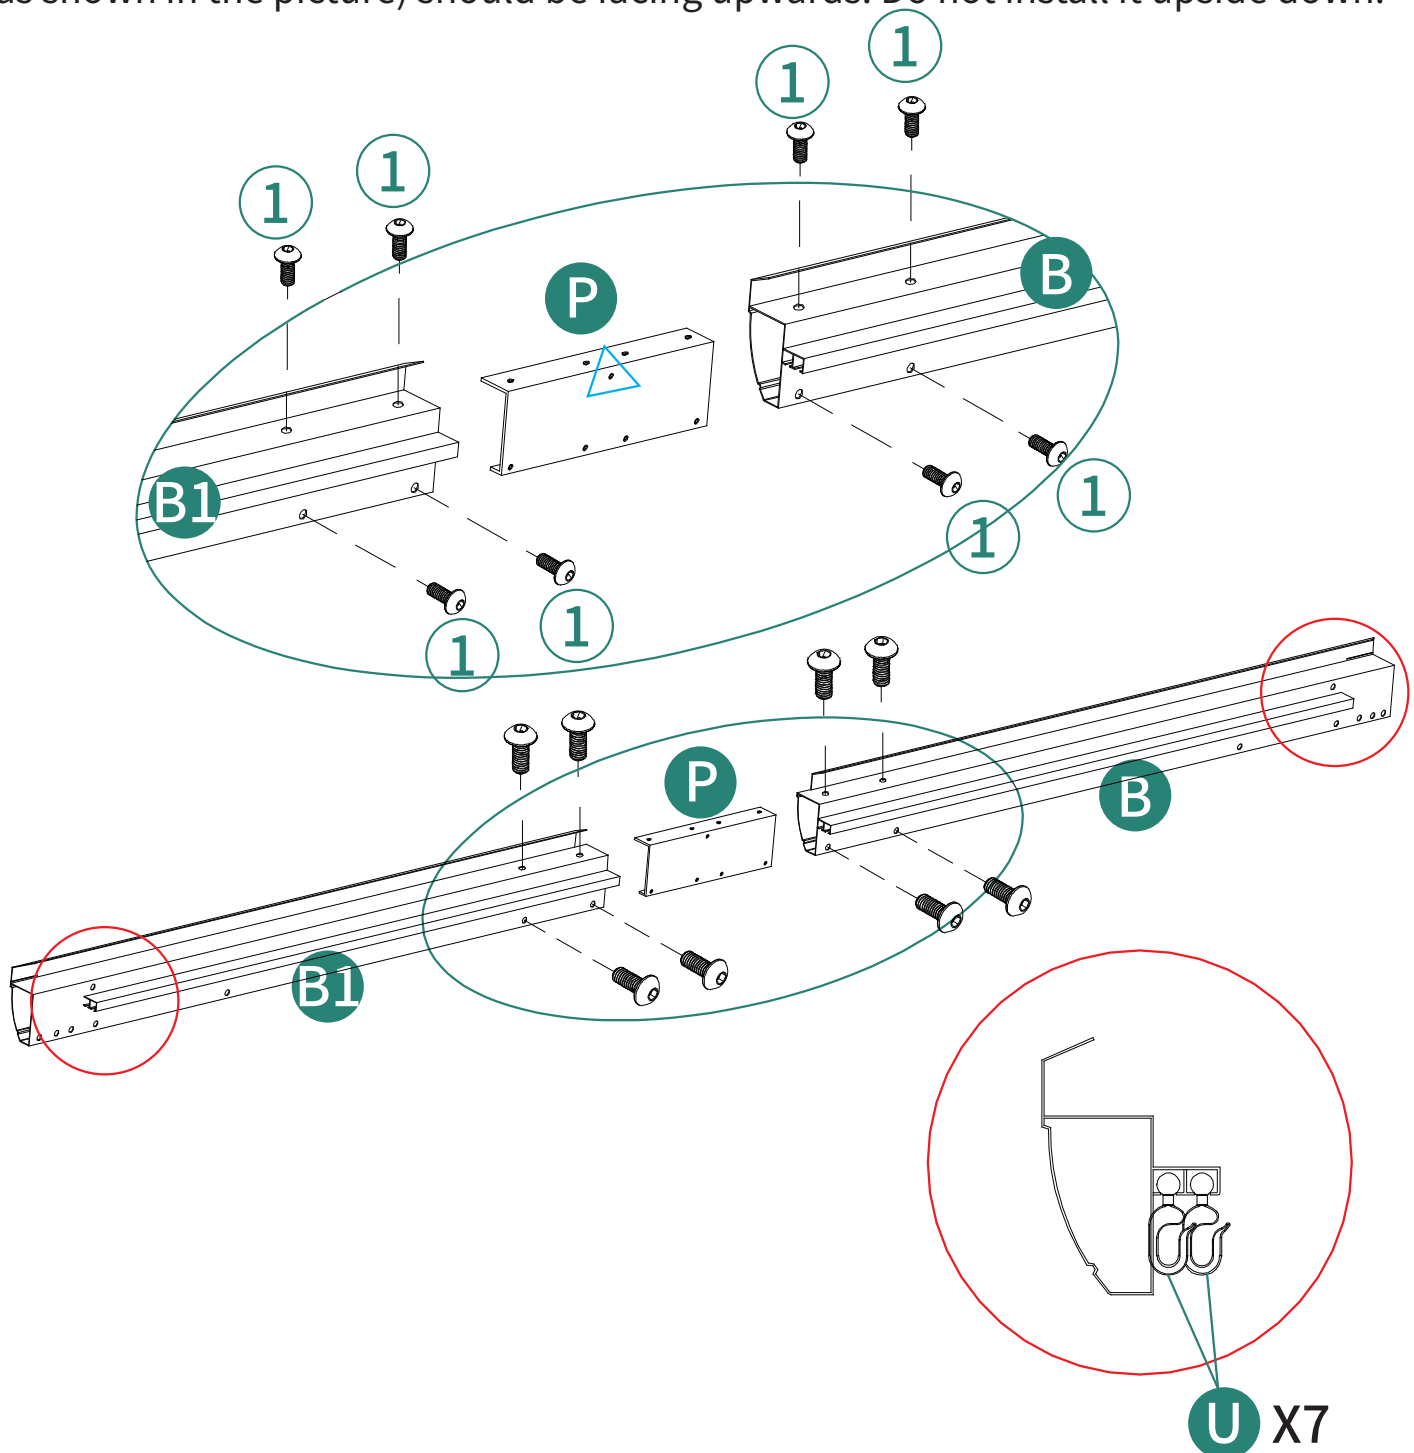

# 3




① 16pcs    ⑧ 16pcs

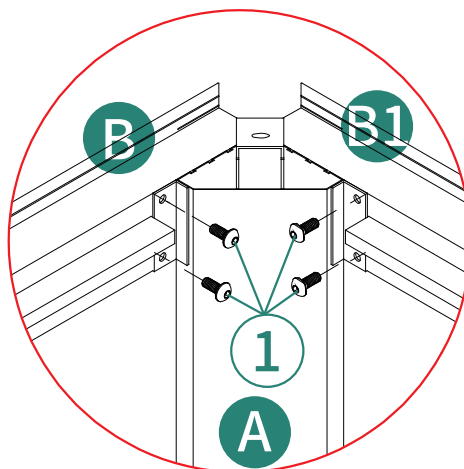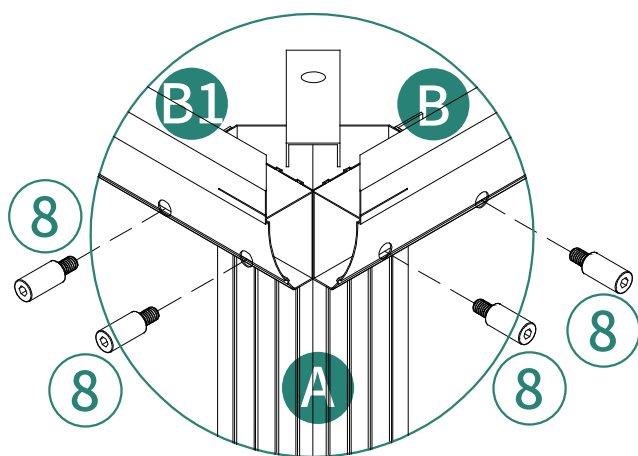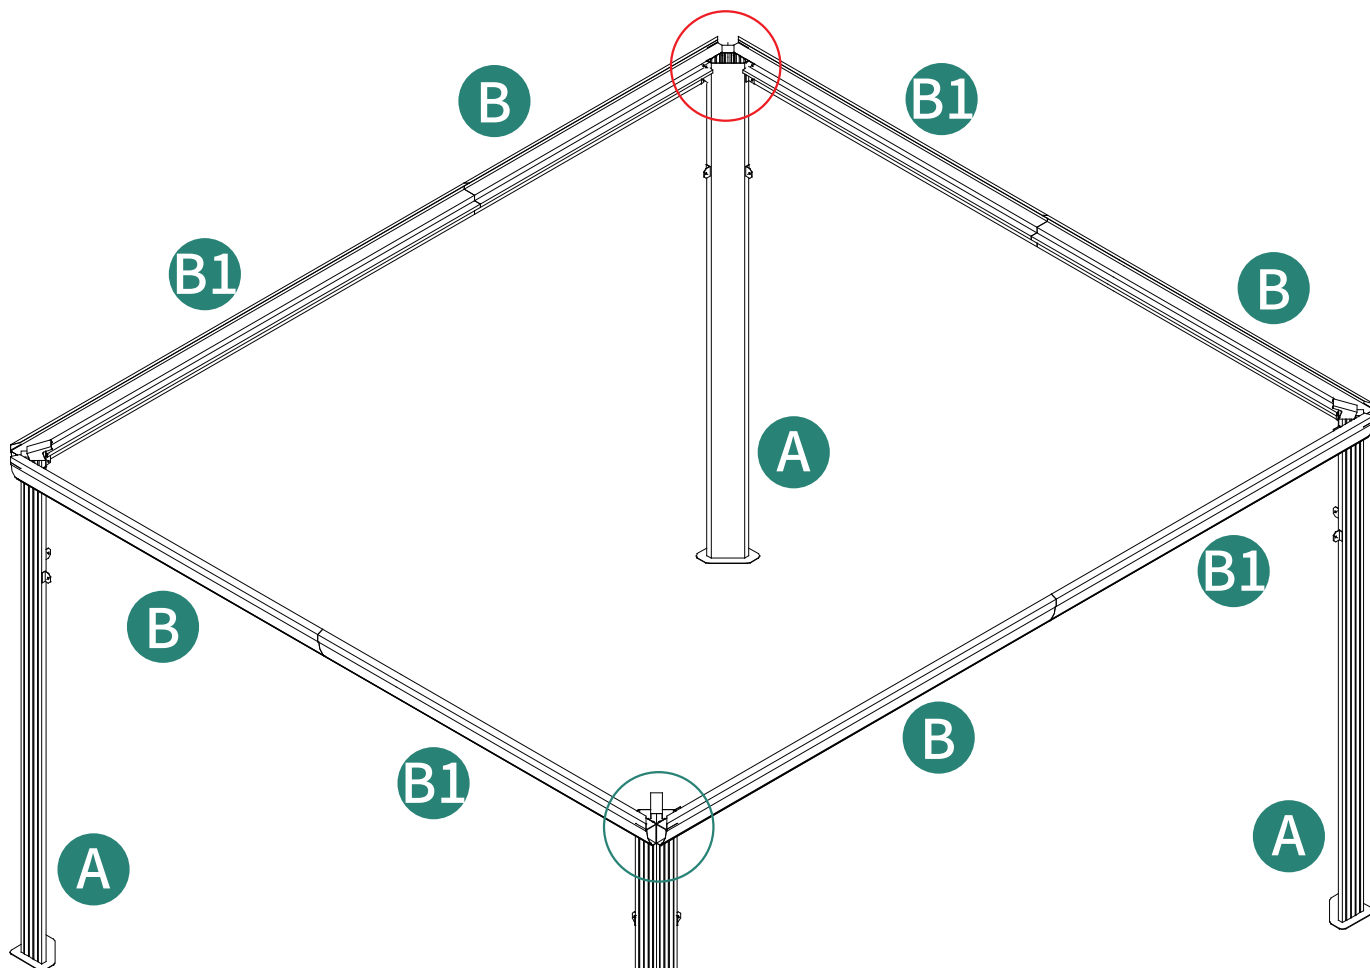

# 4




Ⓜ 4pcs




Ⓜ 4pcs




① 16pcs

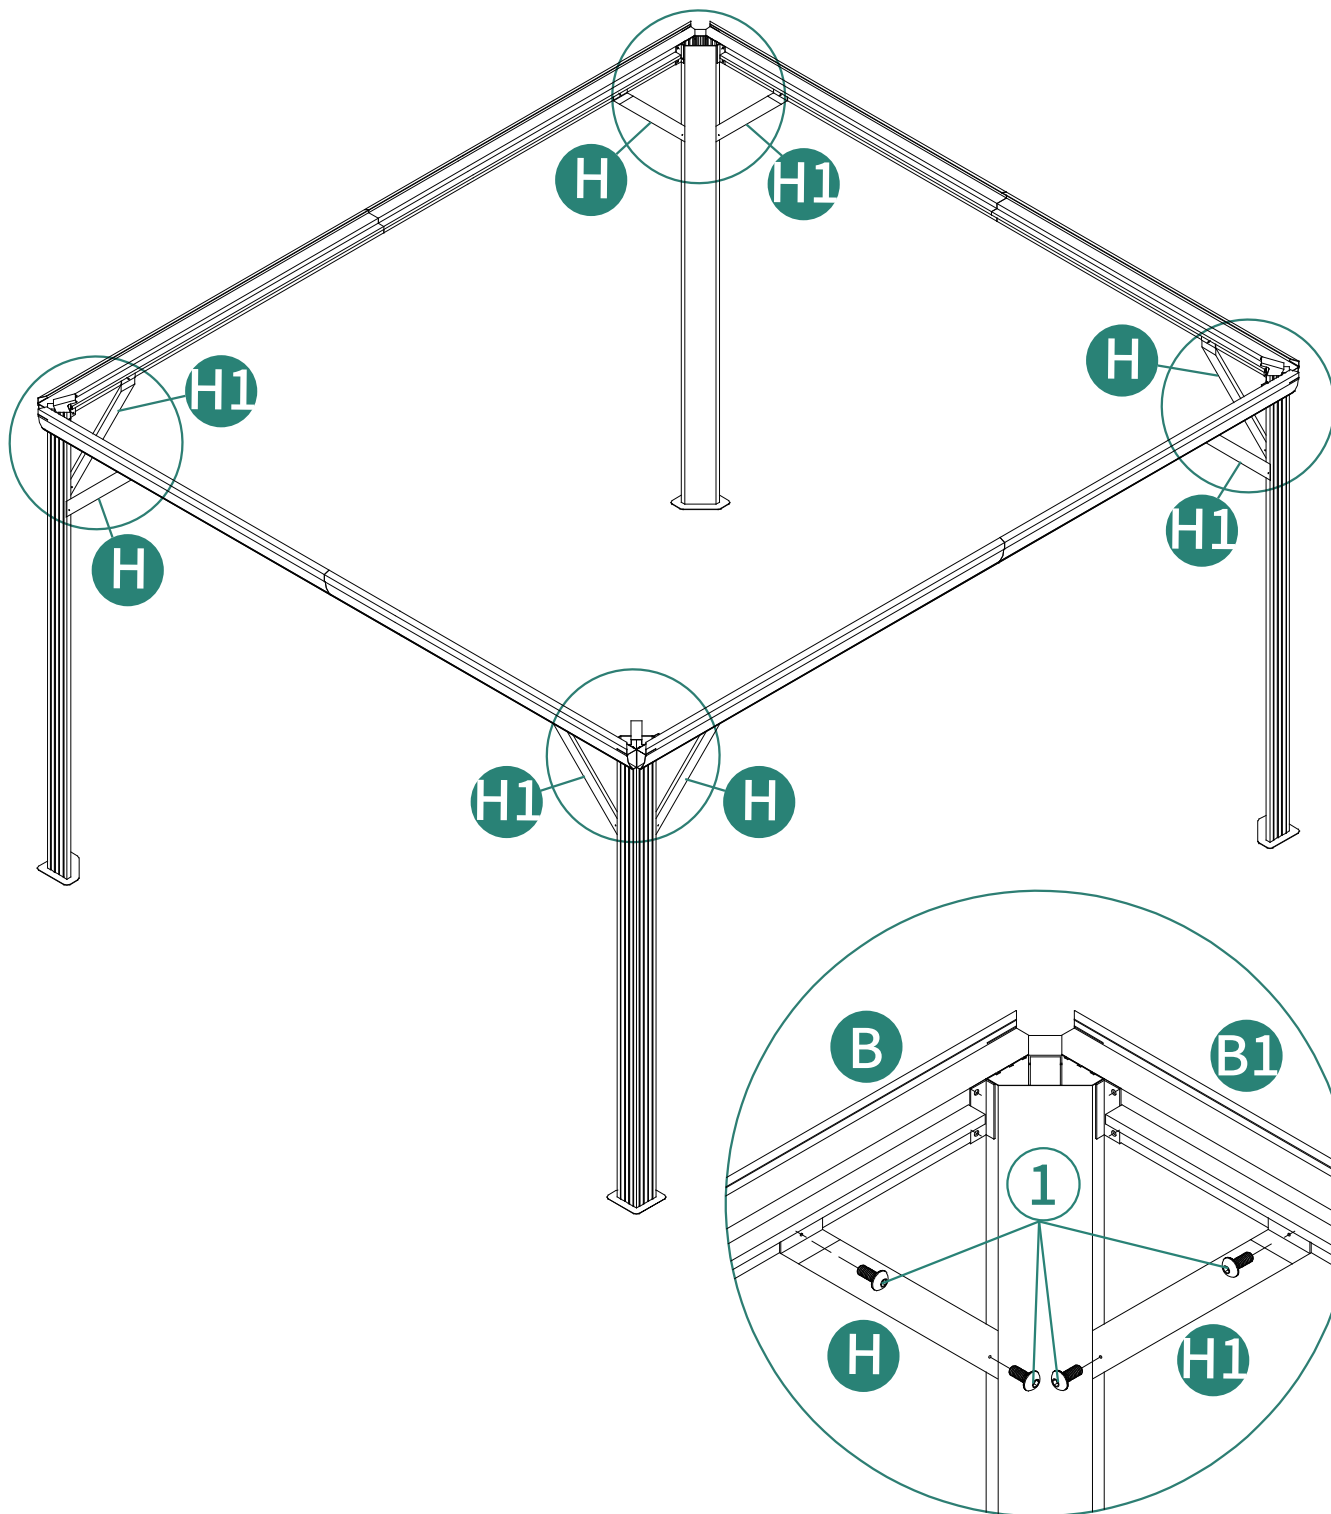

# 5



Ⓚ4pcs




Ⓚ14pcs



④16pcs



⑫4pcs

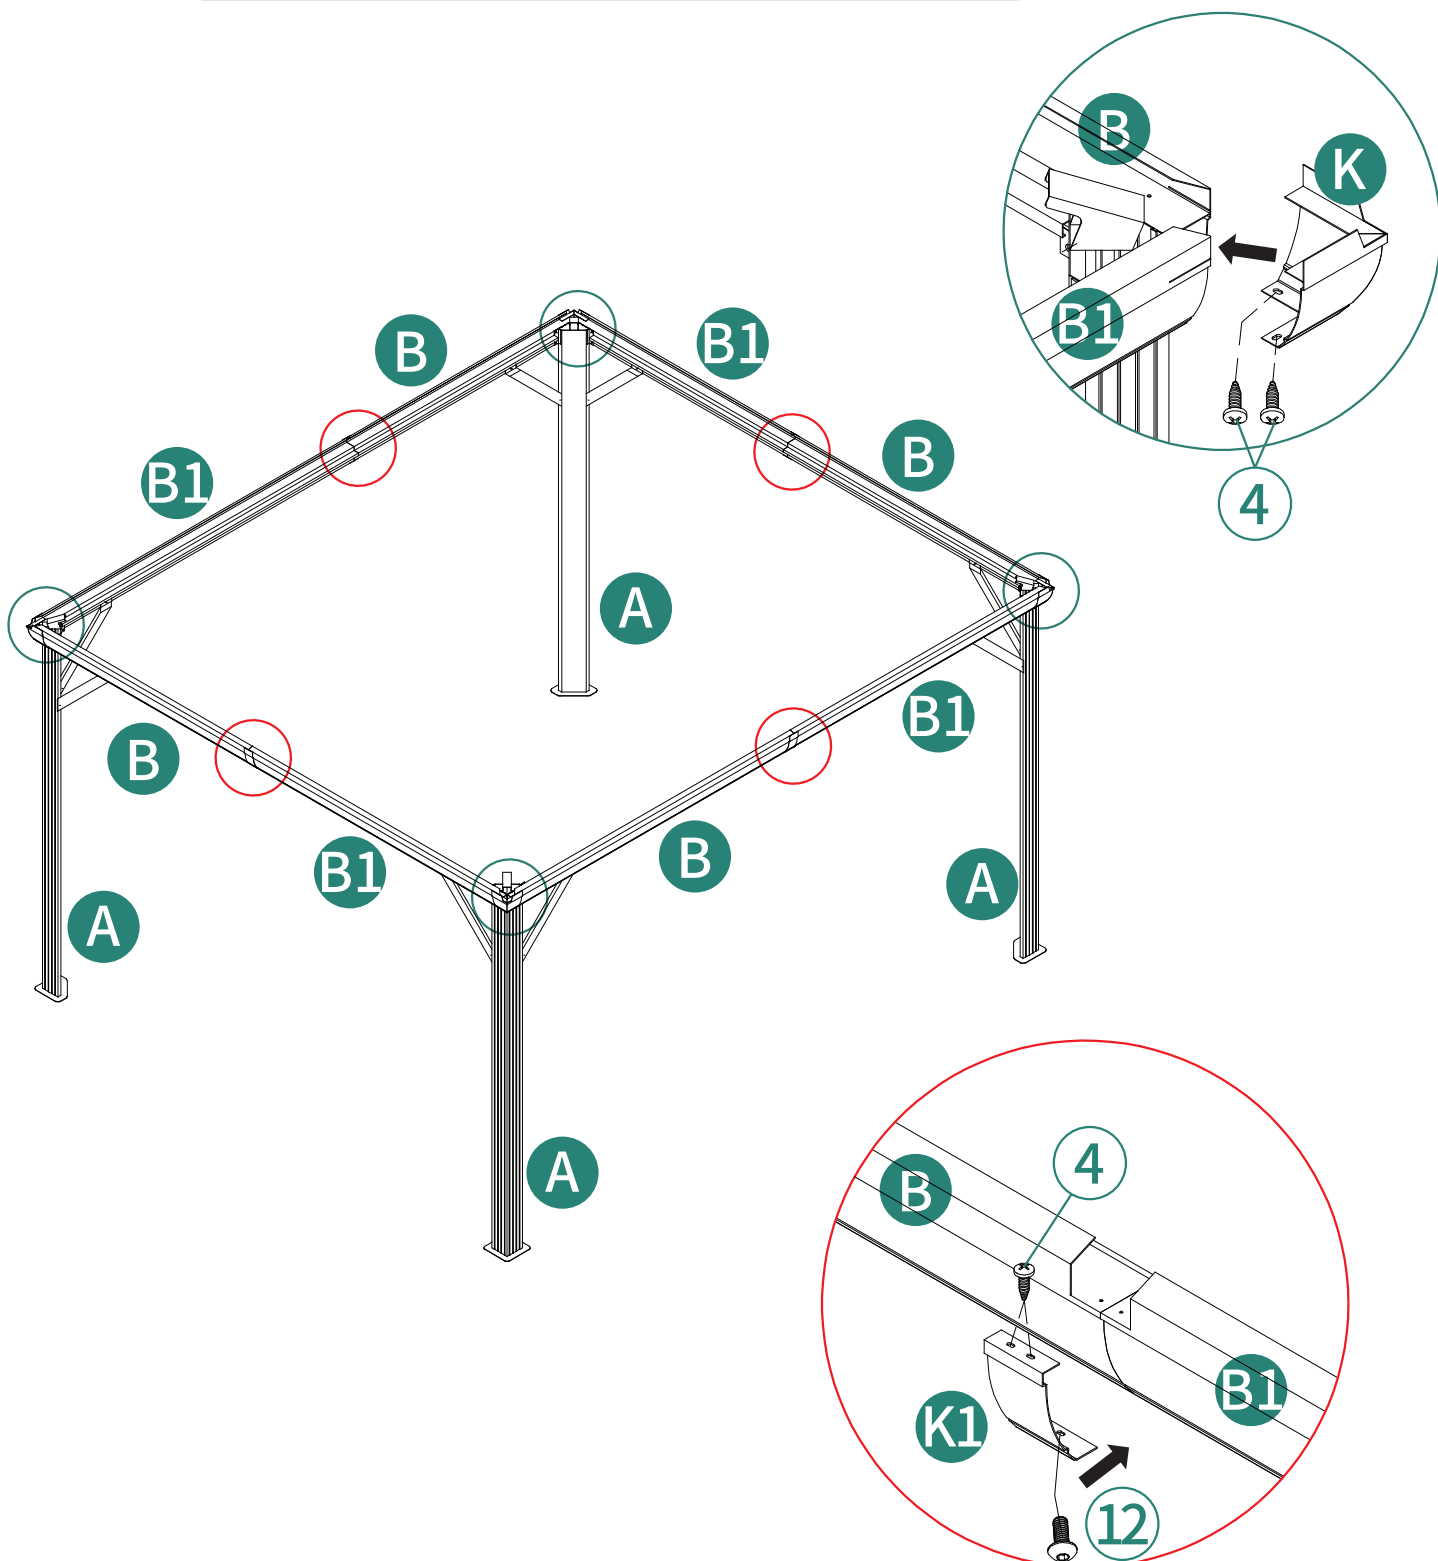

6

X4



①Ea 4pcs




①Eb 4pcs




①16 12pcs






①17 4pcs




①18 4pcs

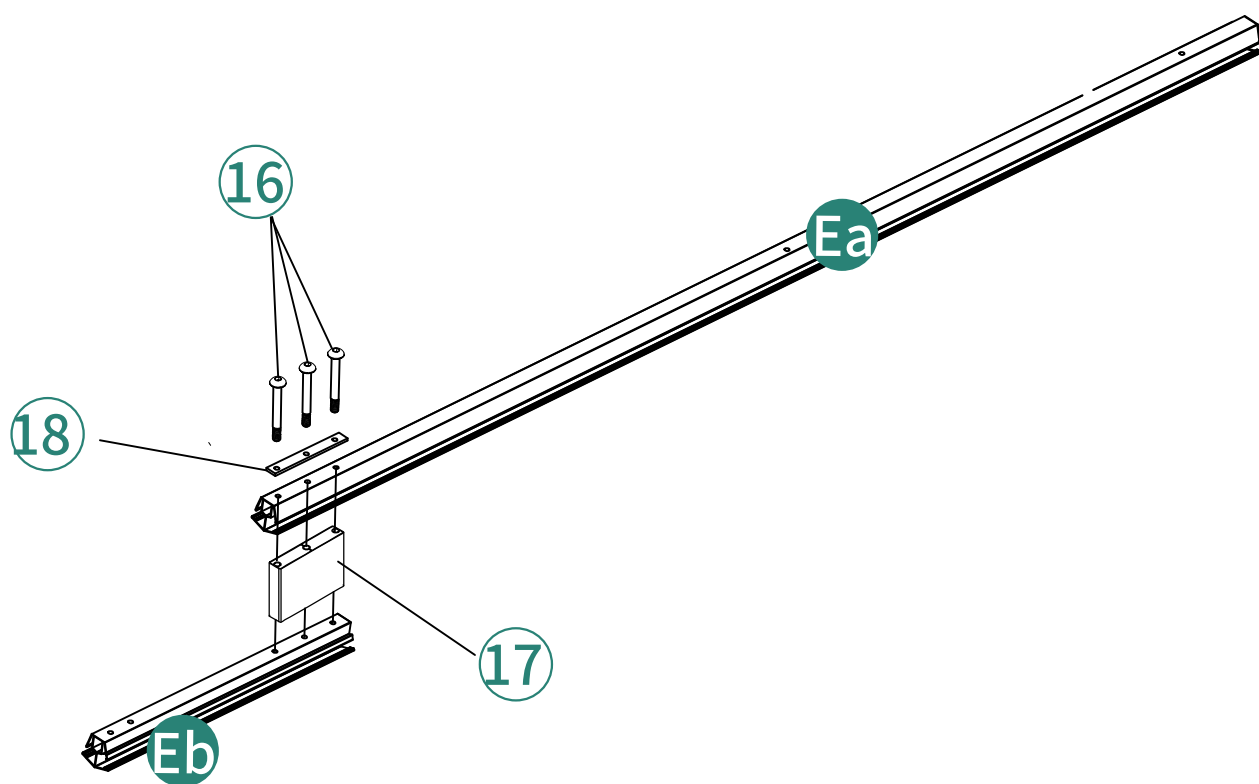




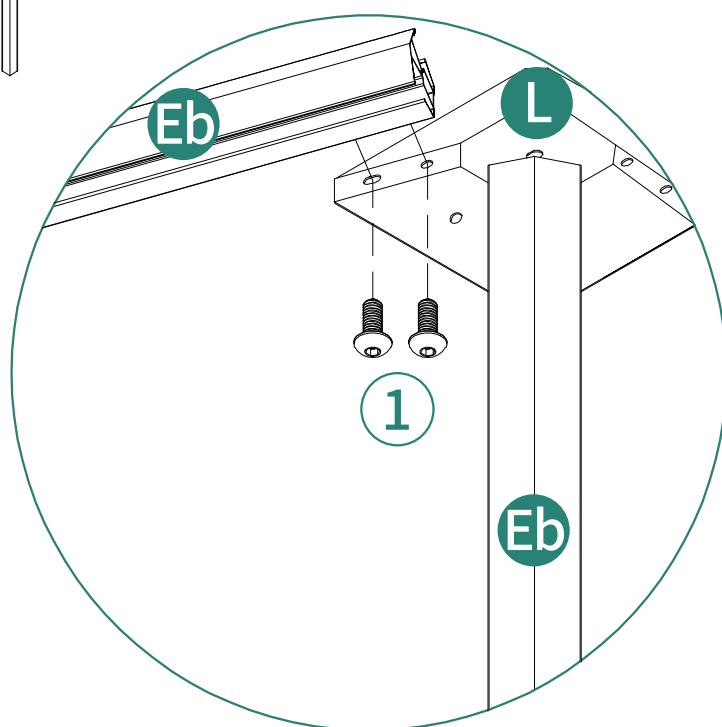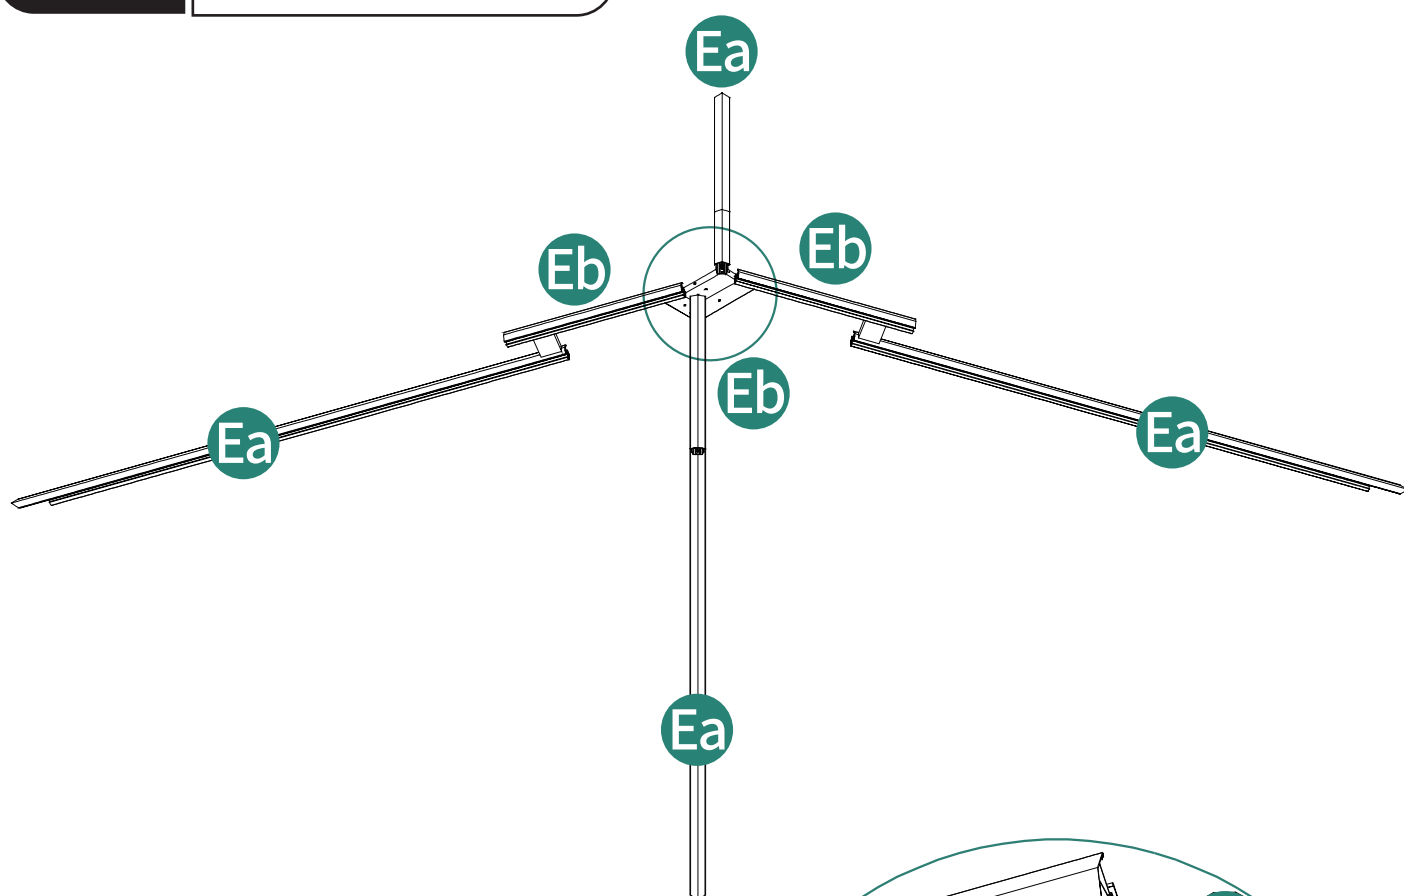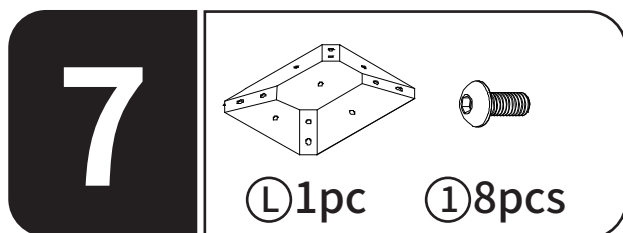


8


  
① 4pcs

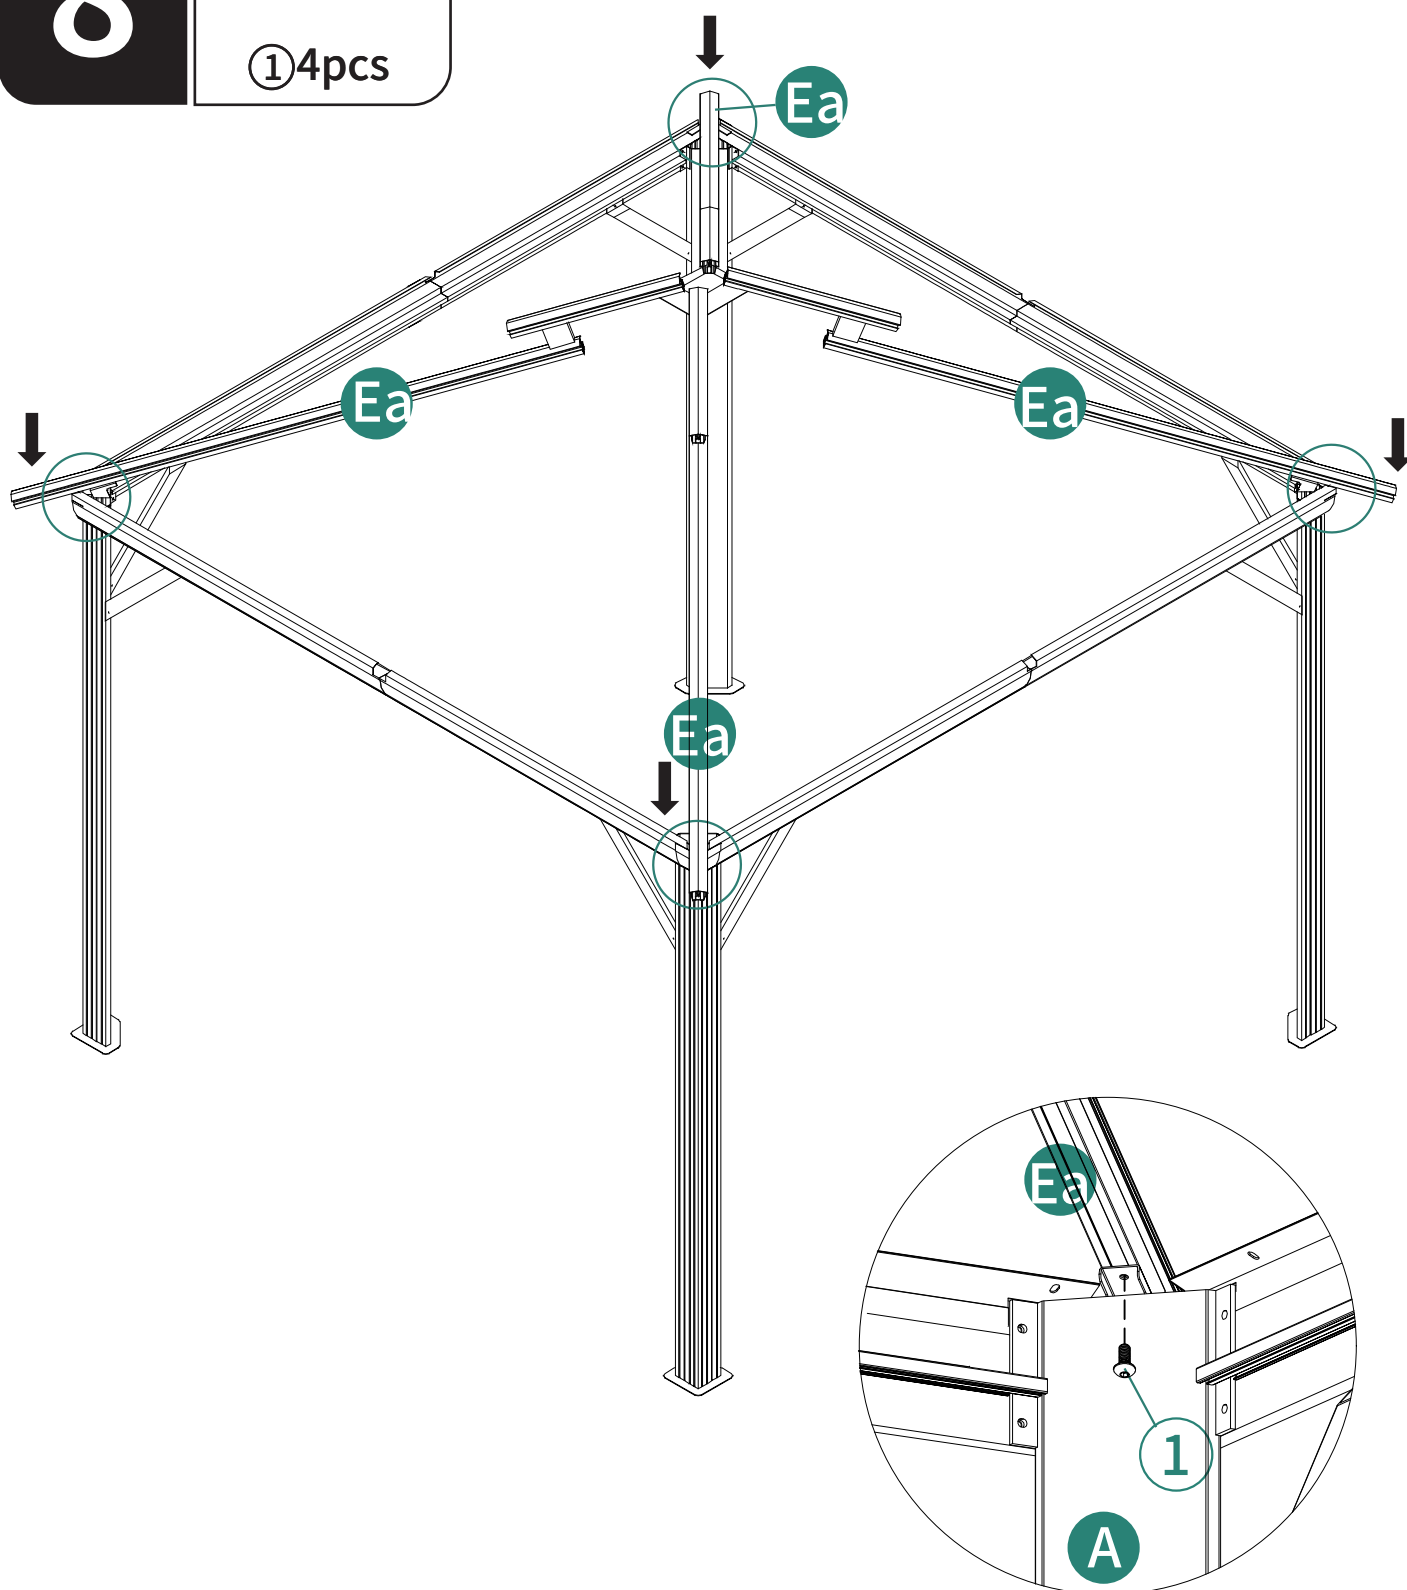

# 9

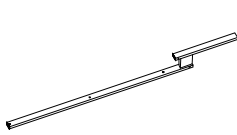

E1 4pcs






W3 4pcs




1 8pcs



12 8pcs

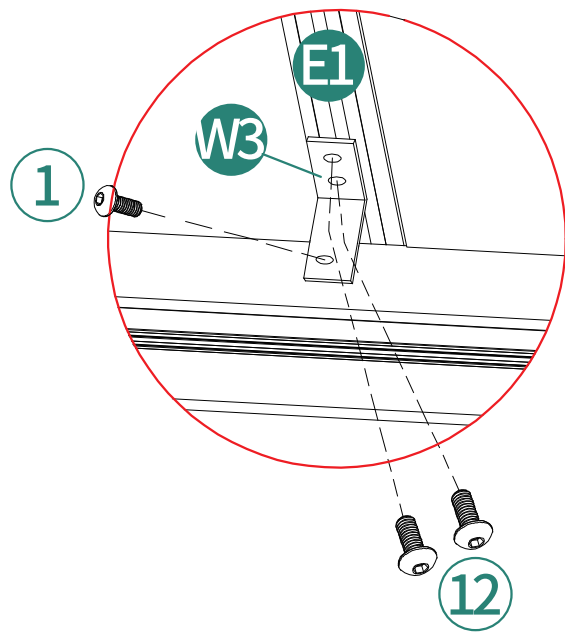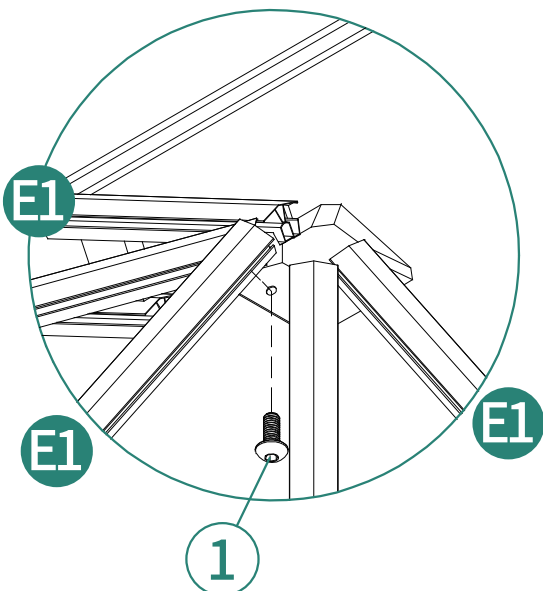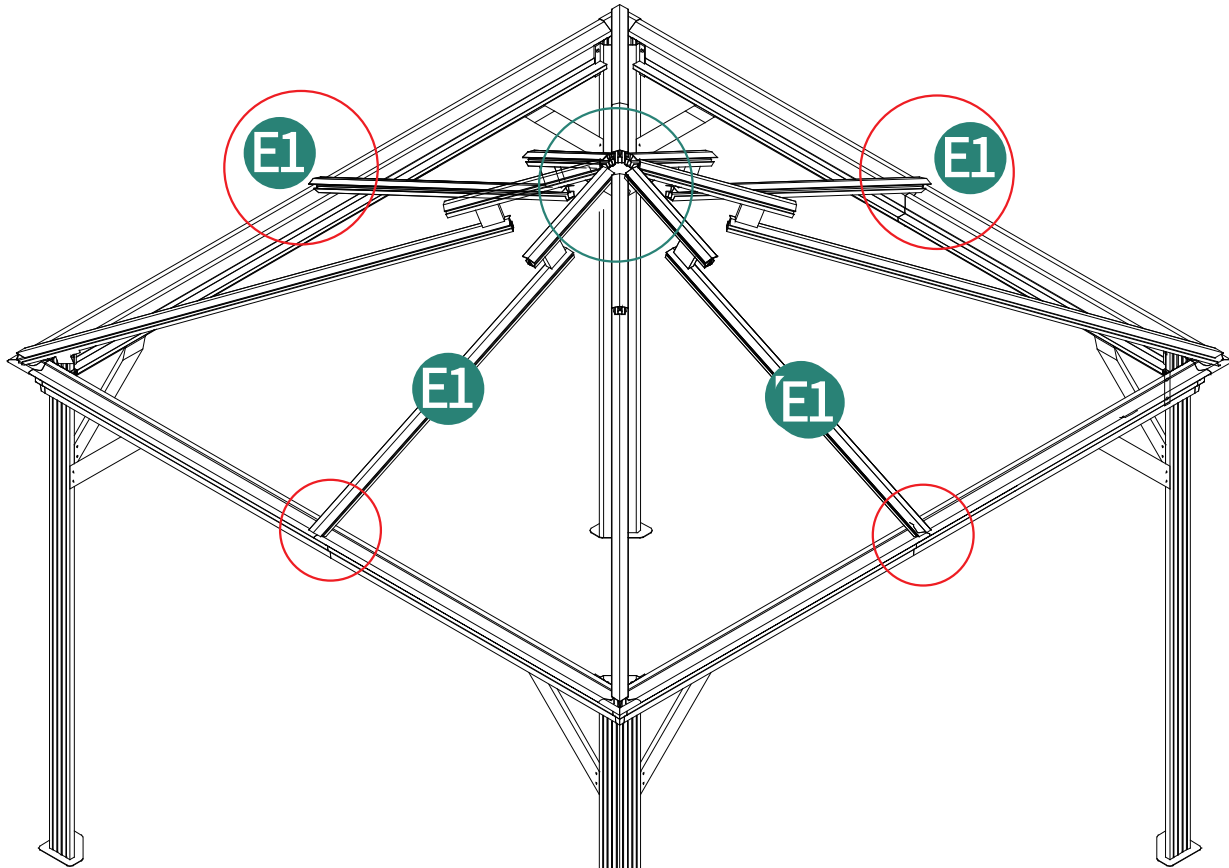

# 10




(M) 1pc





(3) 2pcs




(Za) 1pc

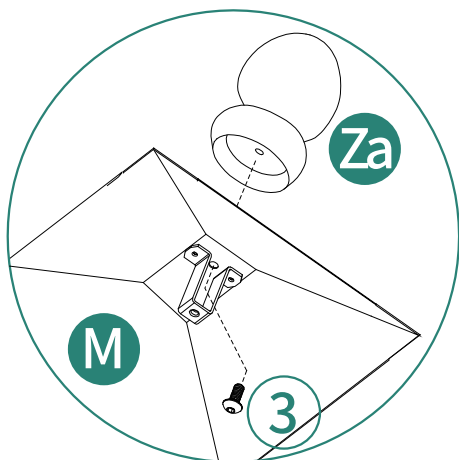




1

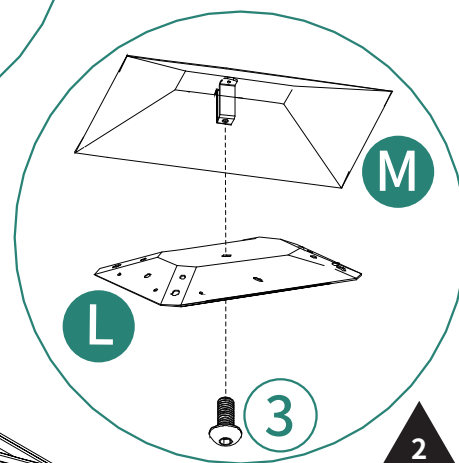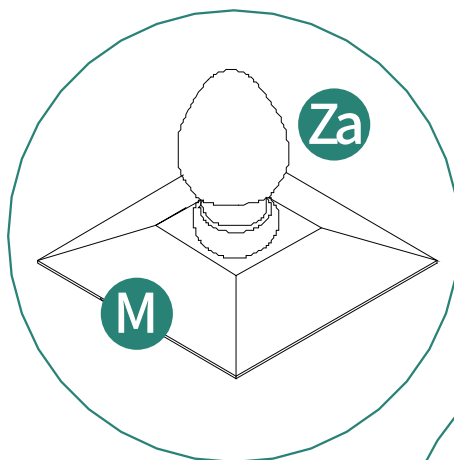


2

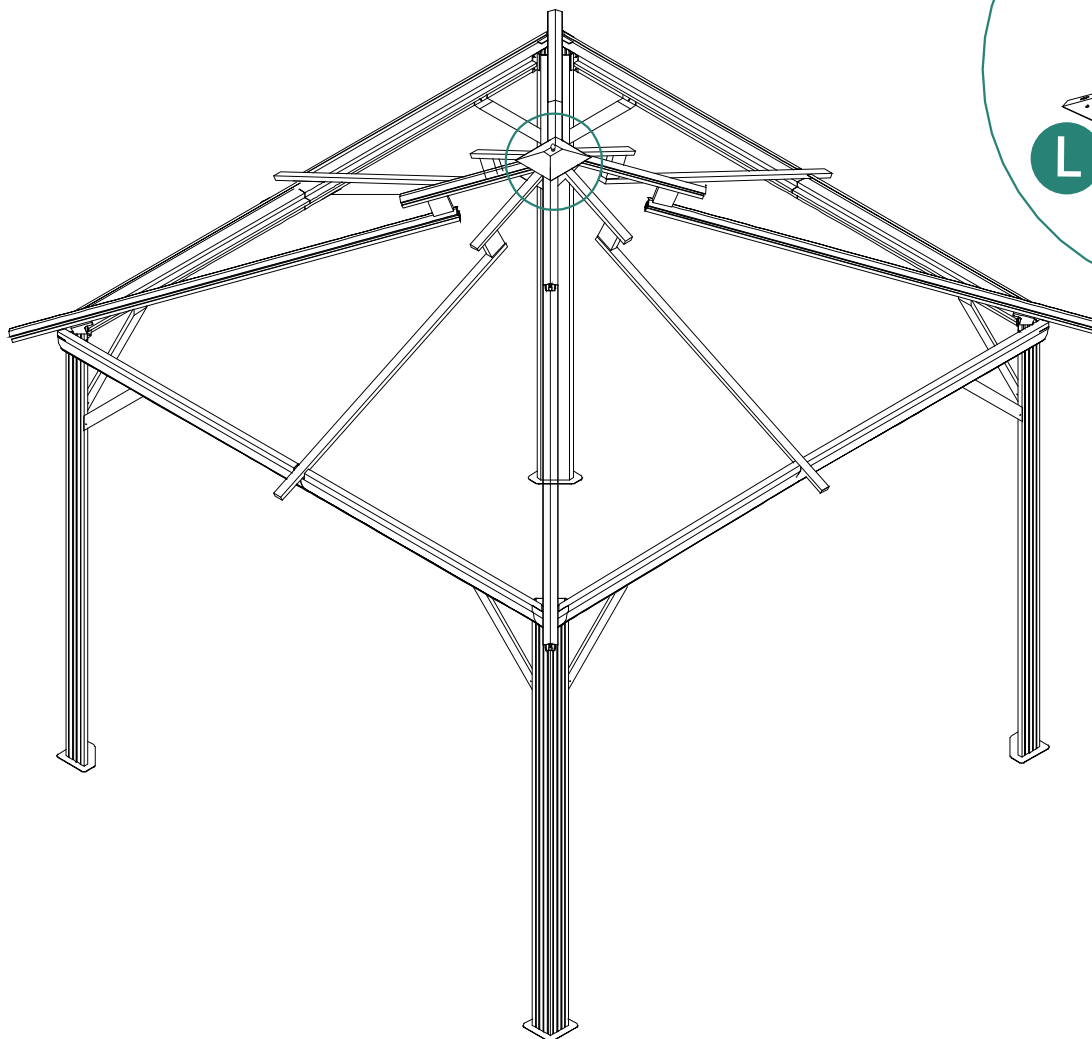


# 11

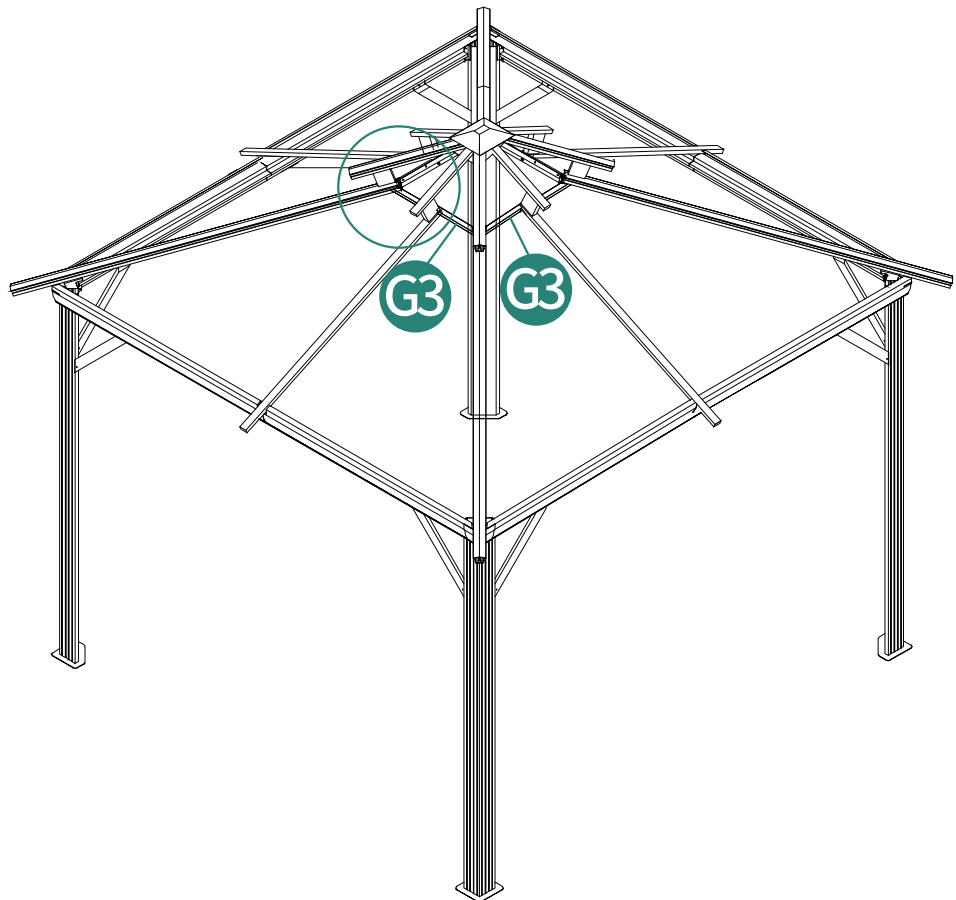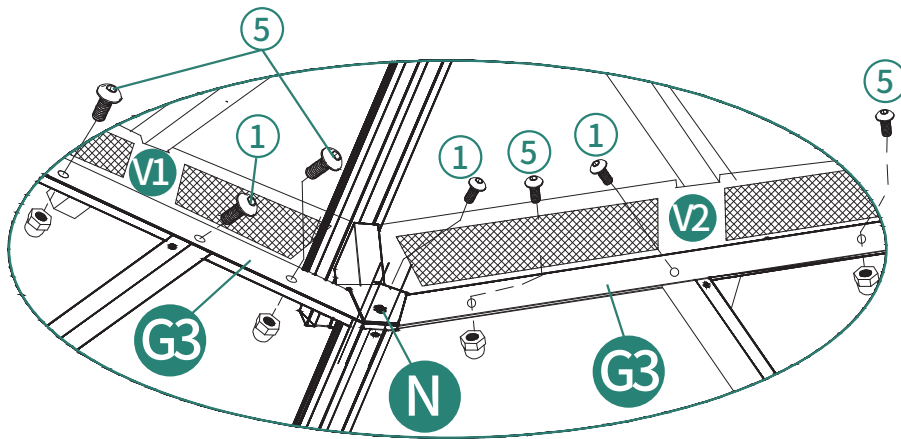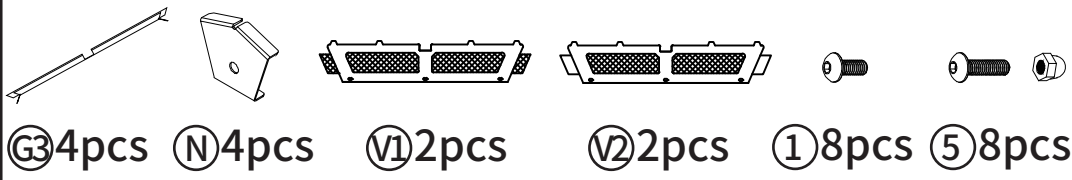




# 12




Ⓢ4pcs



Ⓢa4pcs

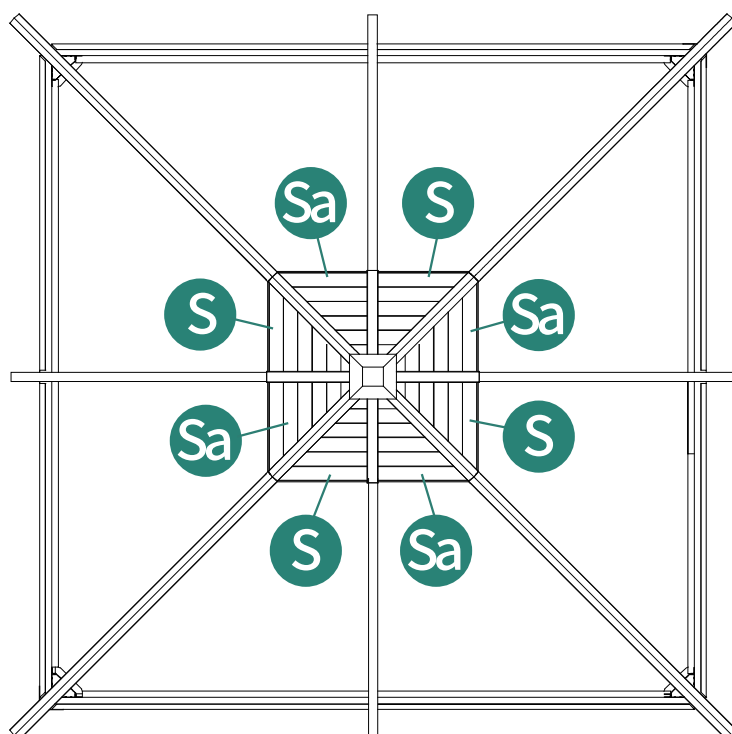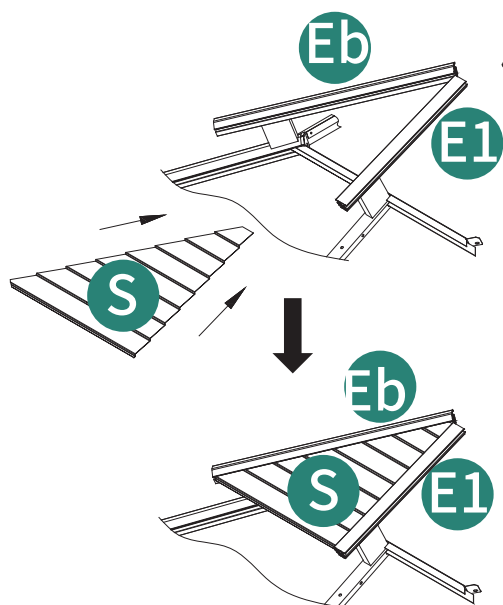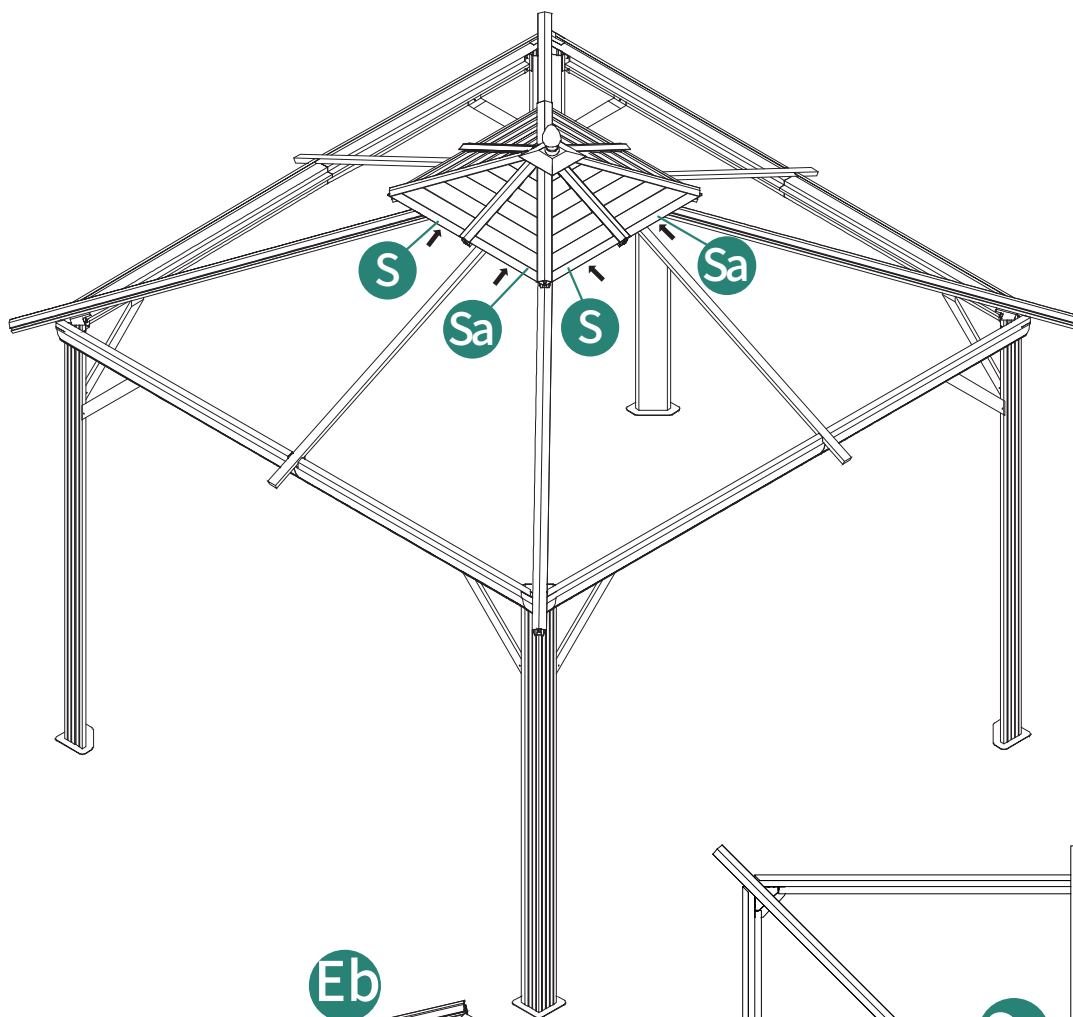

# 13







G14pcs



N24pcs





18pcs

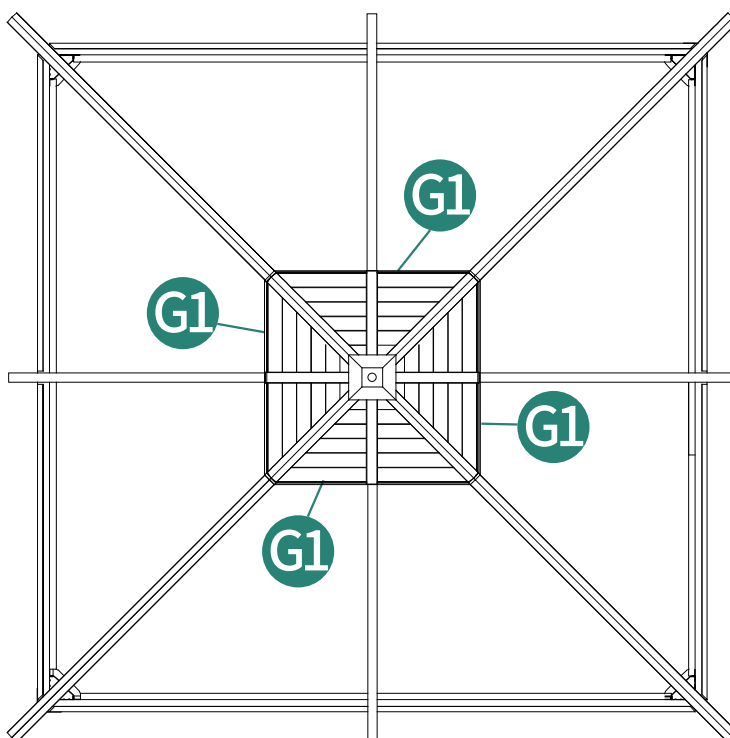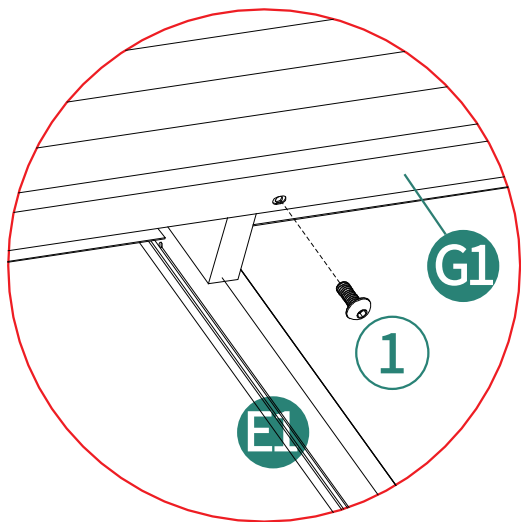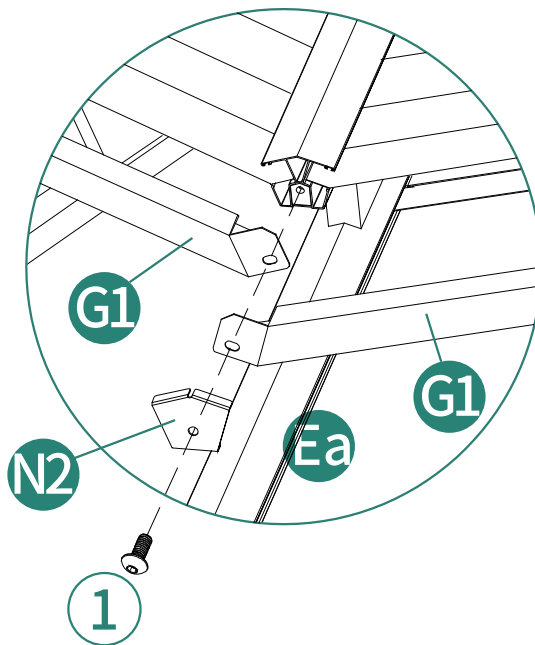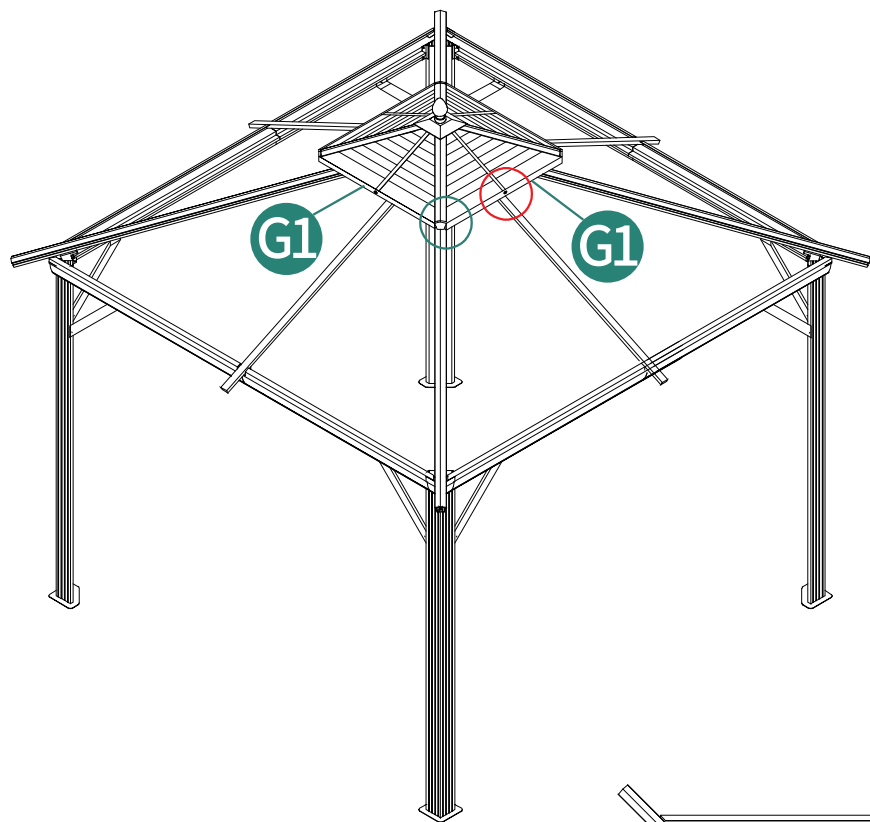


# 14

## X4

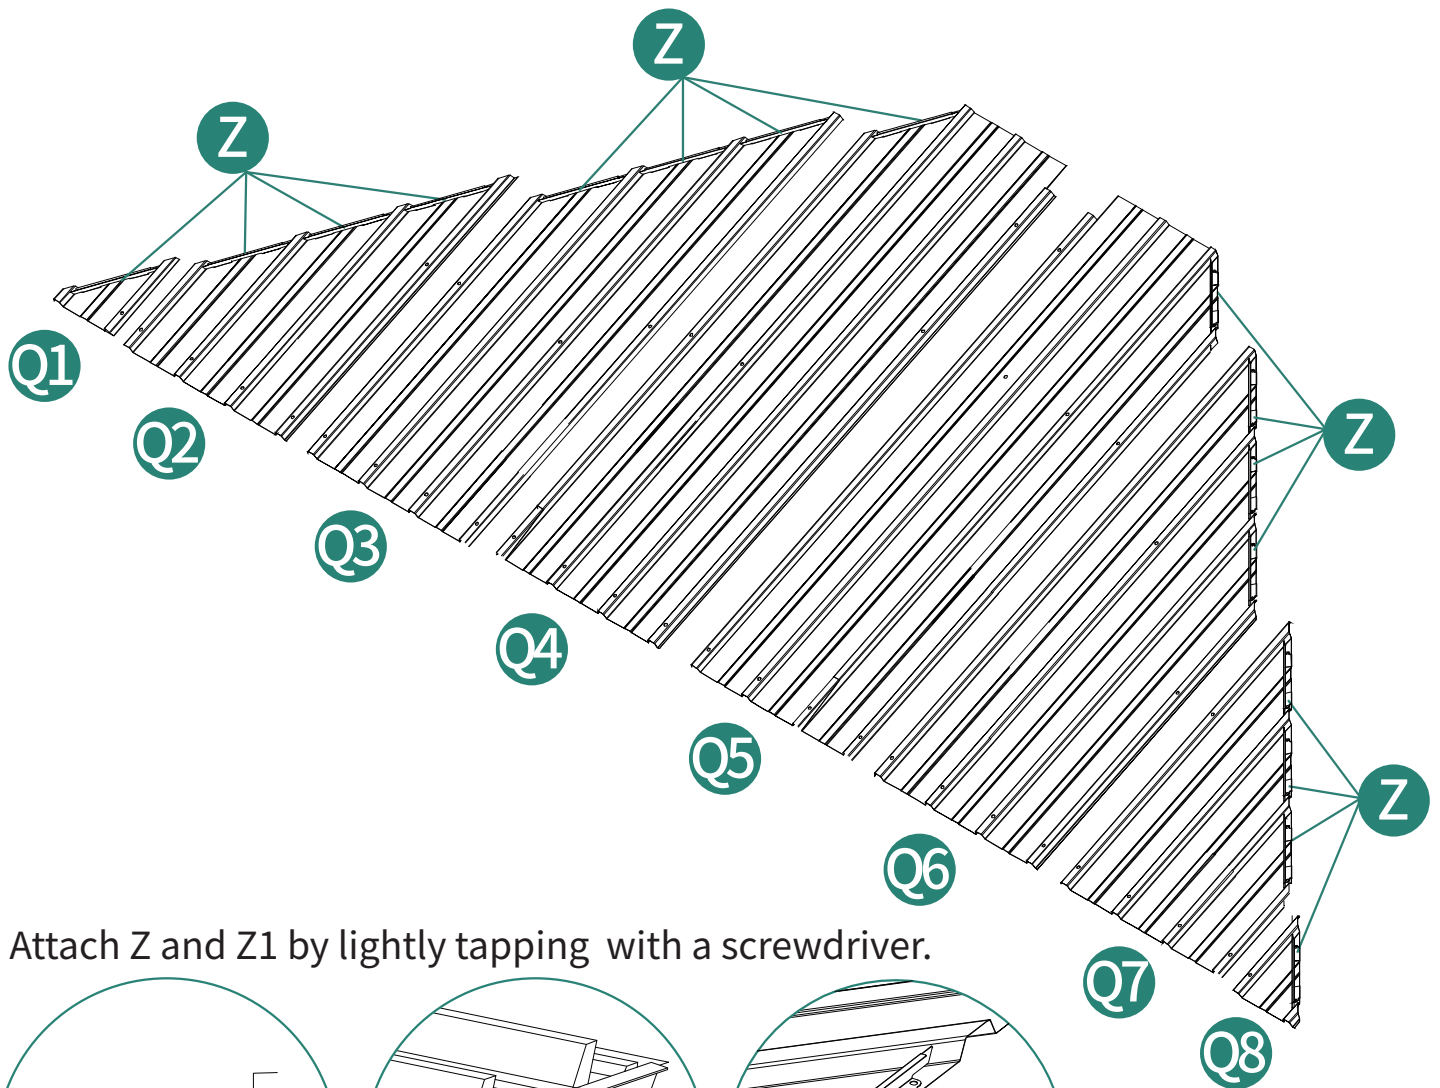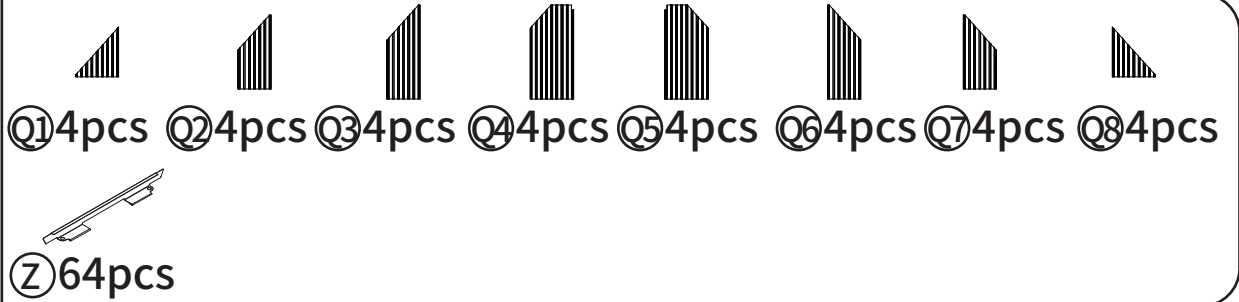


Attach Z and Z1 by lightly tapping with a screwdriver.

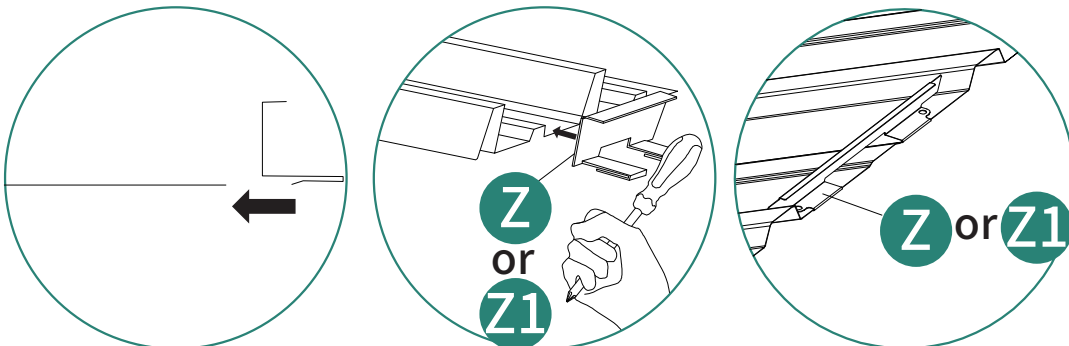





# 15



F1 8pcs







W 4pcs




W1 4pcs




1 24pcs

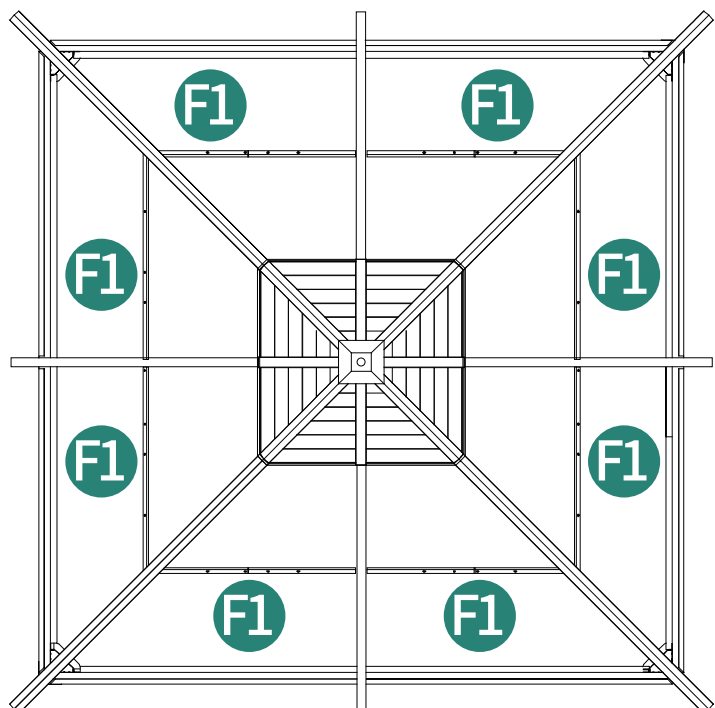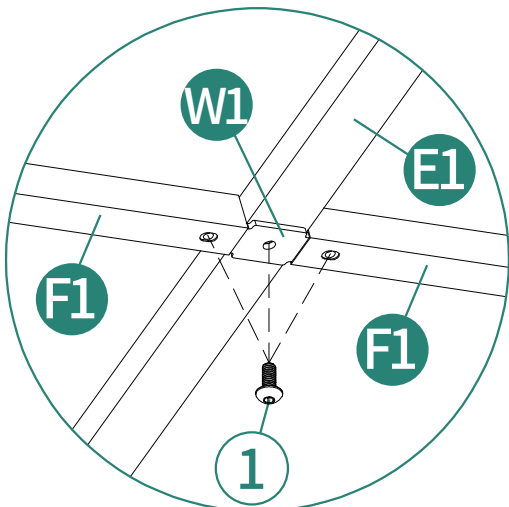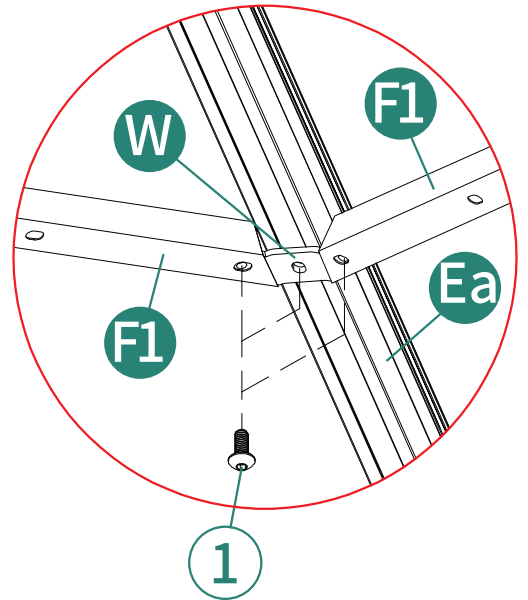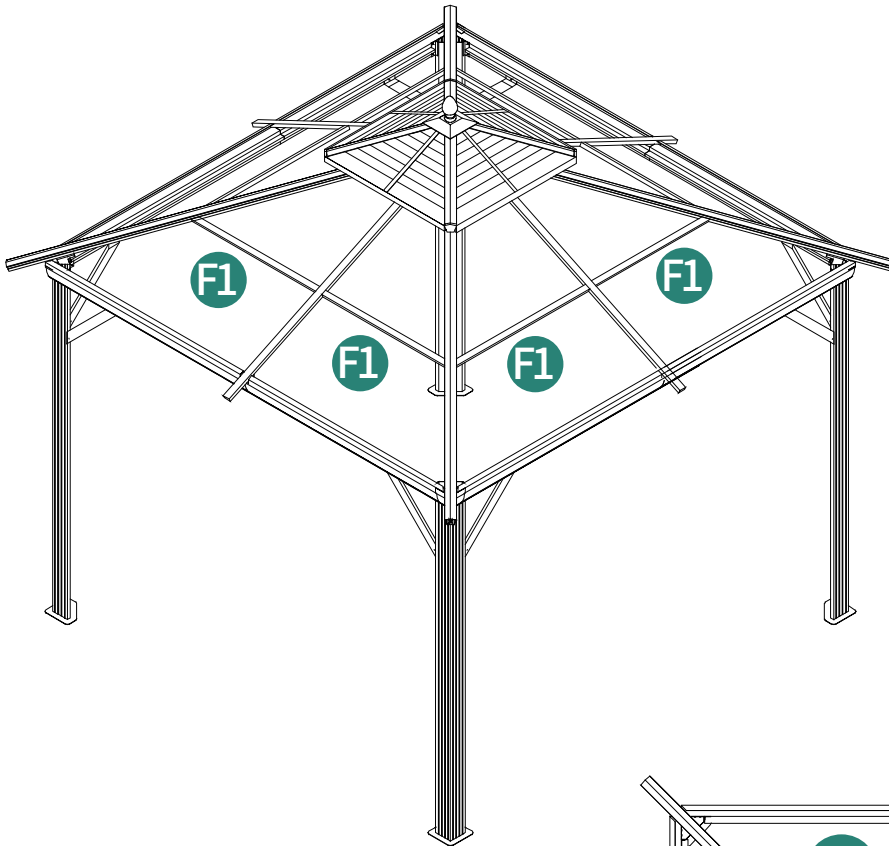

# 16

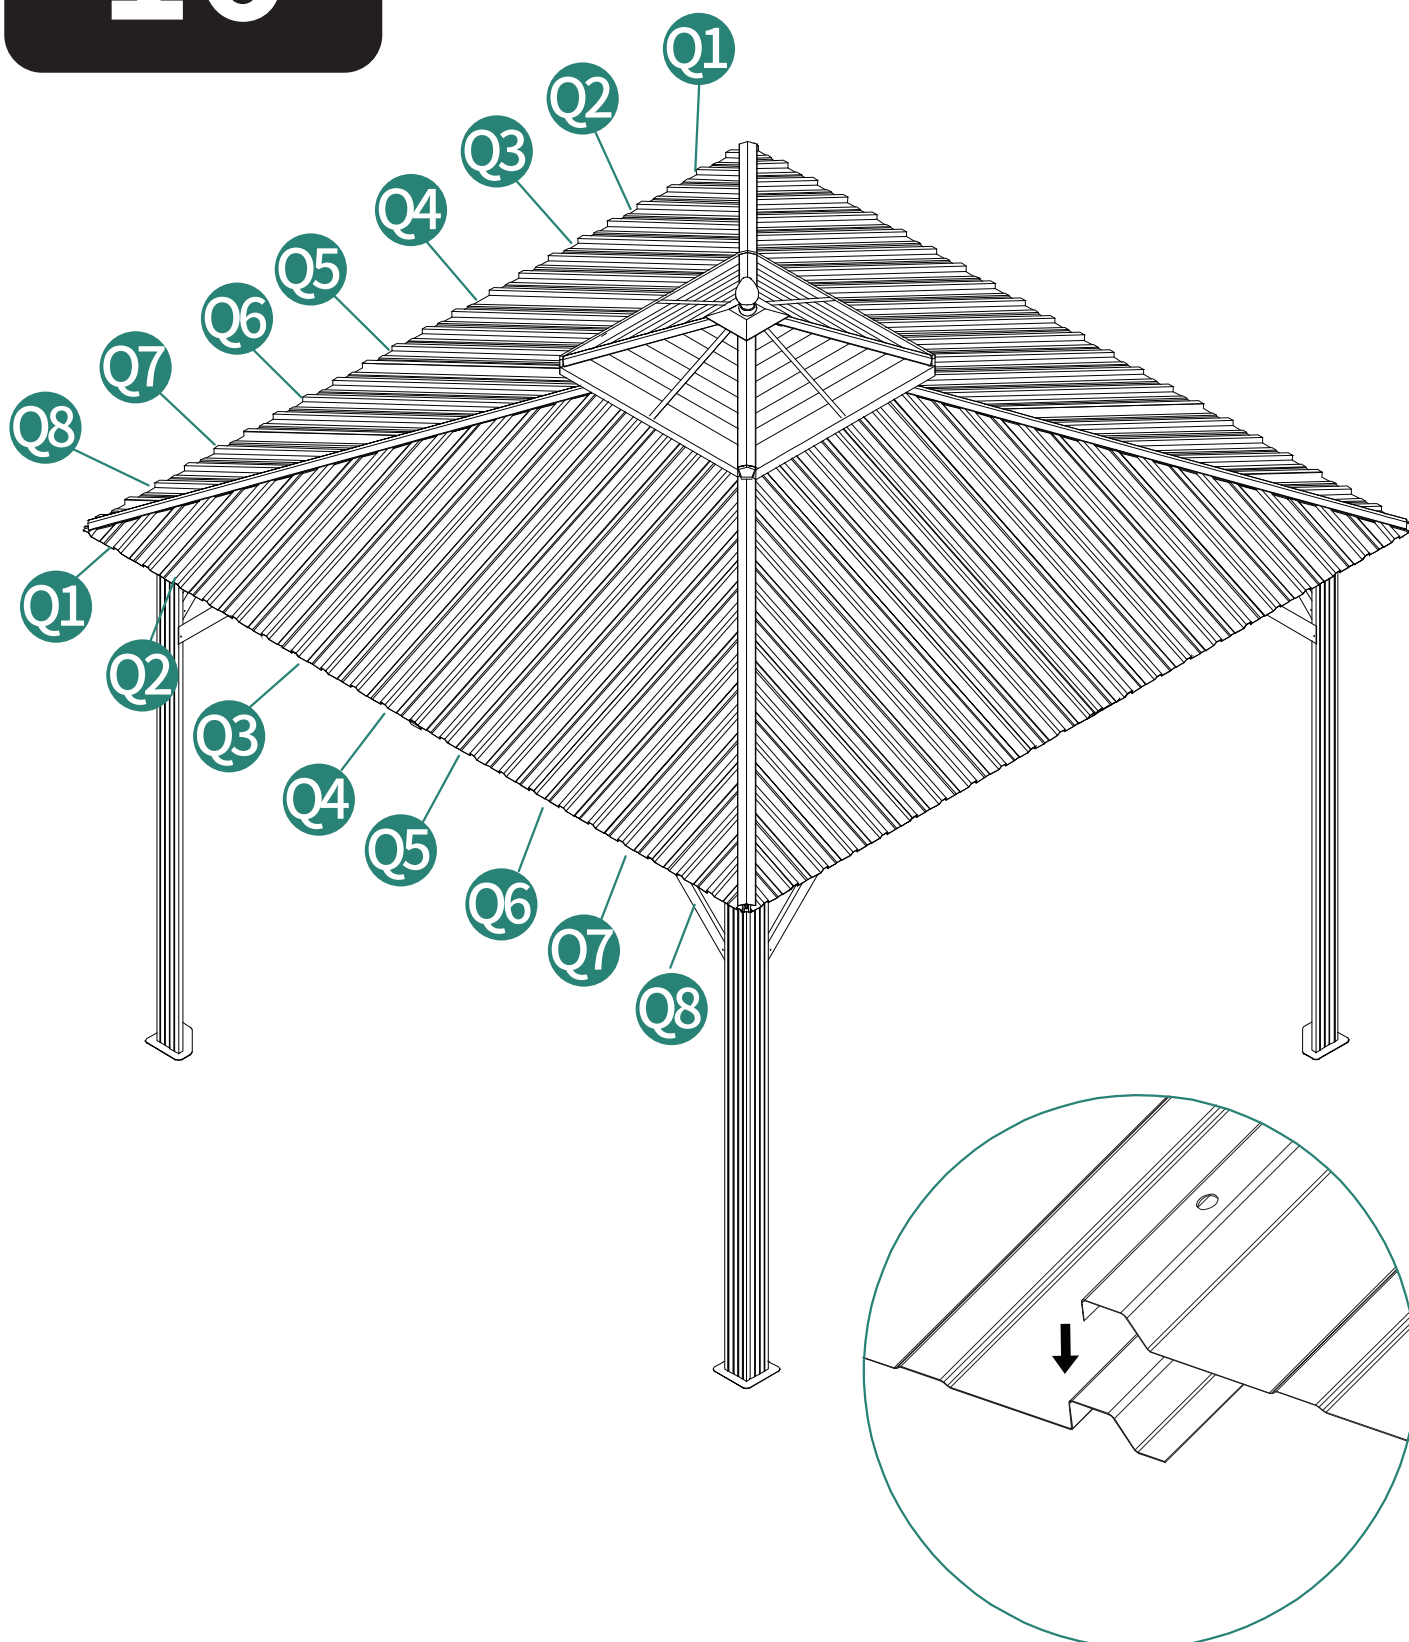

17

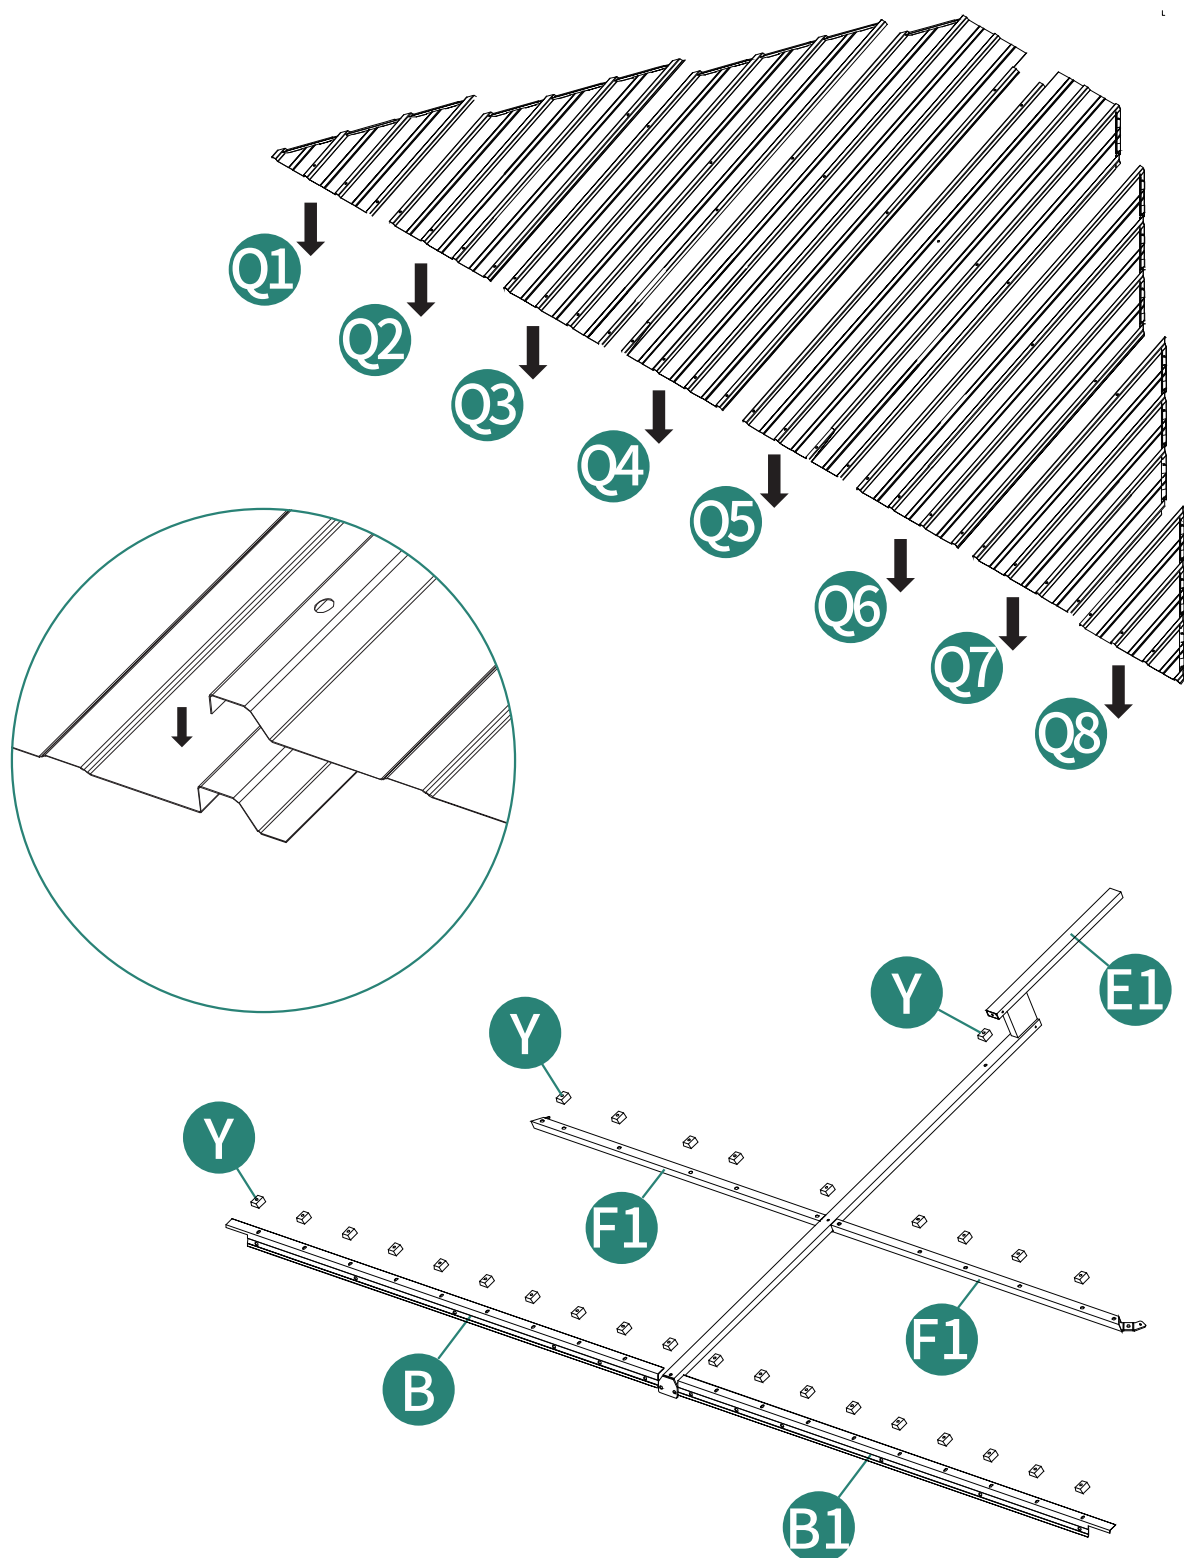

# 18



① 116pcs



② 72pcs




③ 8pcs



④ 4pcs







⑤ 32pcs

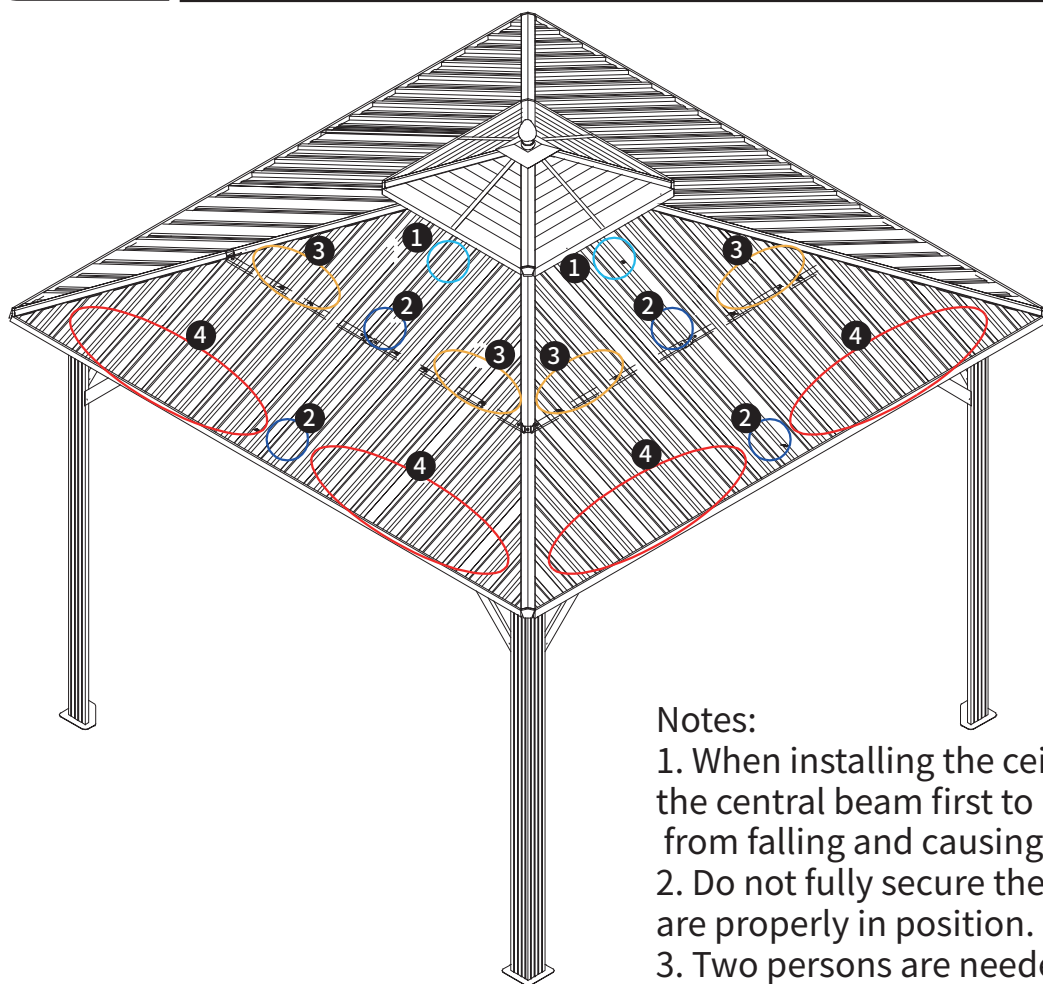


## Notes:

1. When installing the ceiling, fix the screws on the central beam first to prevent the iron sheet from falling and causing injury.
2. Do not fully secure the screw until all screws are properly in position.
3. Two persons are needed when installing Part Y. One should secure Part Y's position from inside the gazebo, while the other inserts screws into Part Y from outside the gazebo.

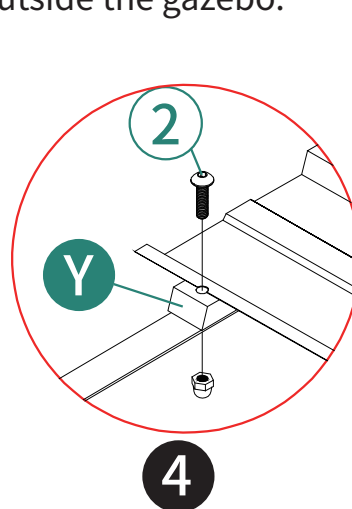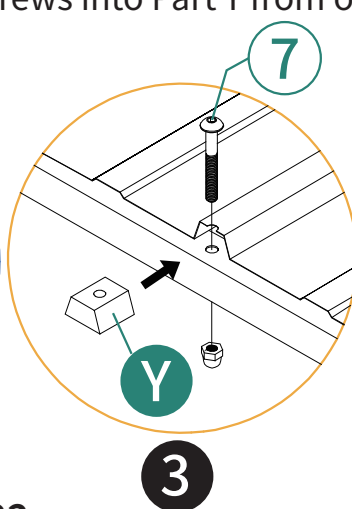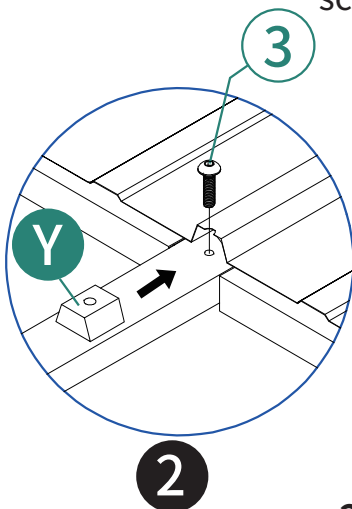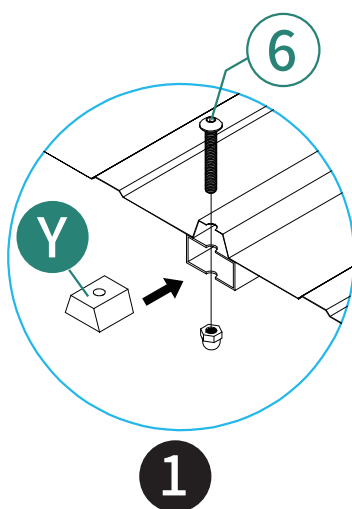


# 19

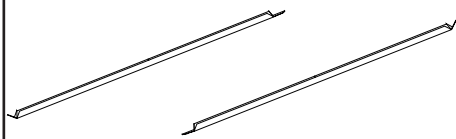

G5 4pcs



G6 4pcs







N 4pcs



N1 4pcs







1 8pcs

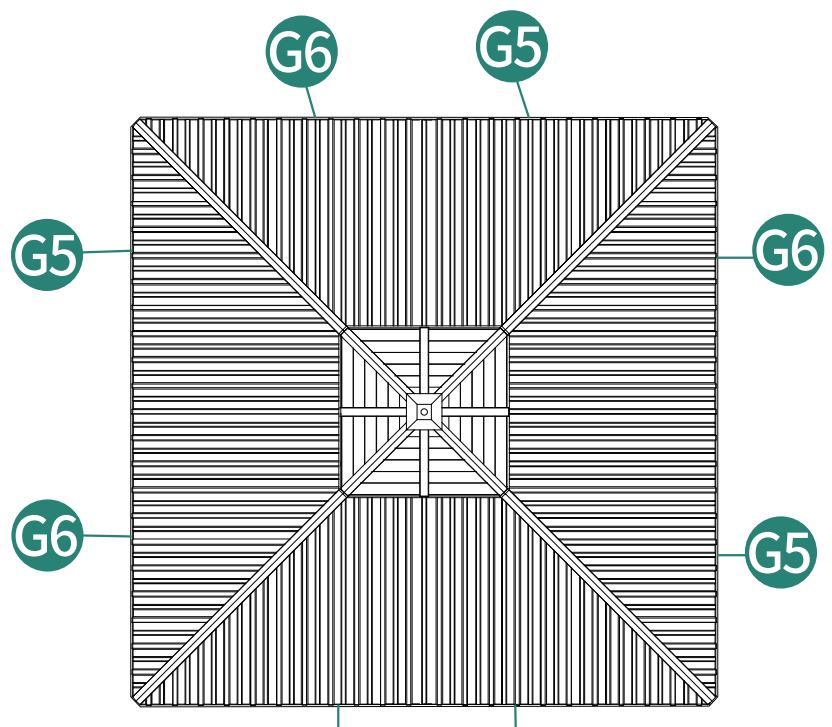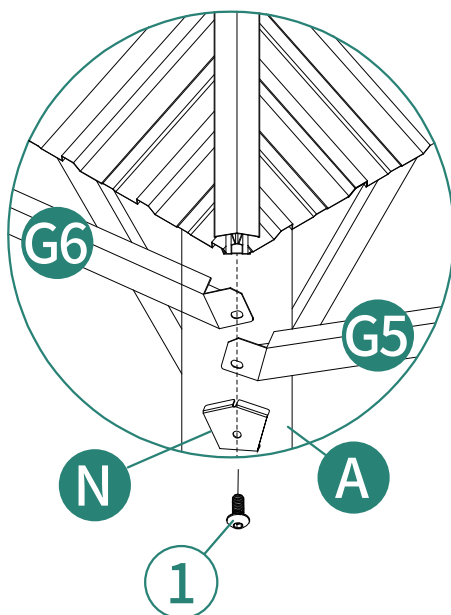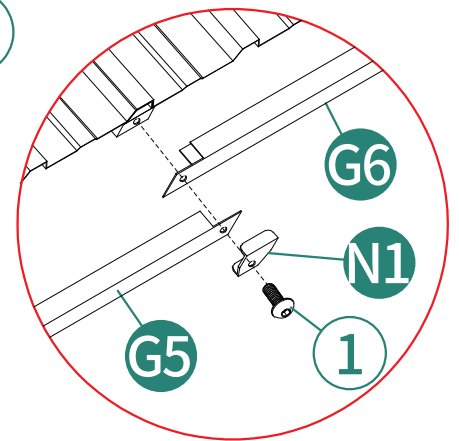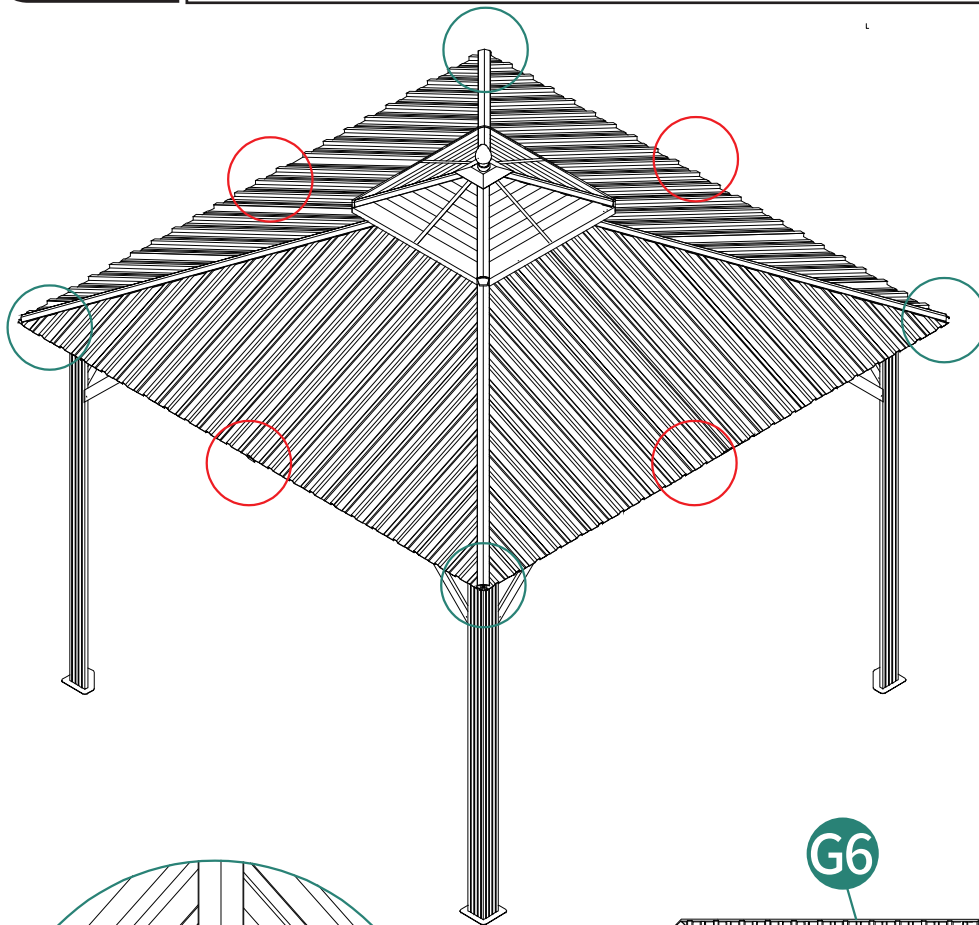




# 20



Ⓣ4pcs

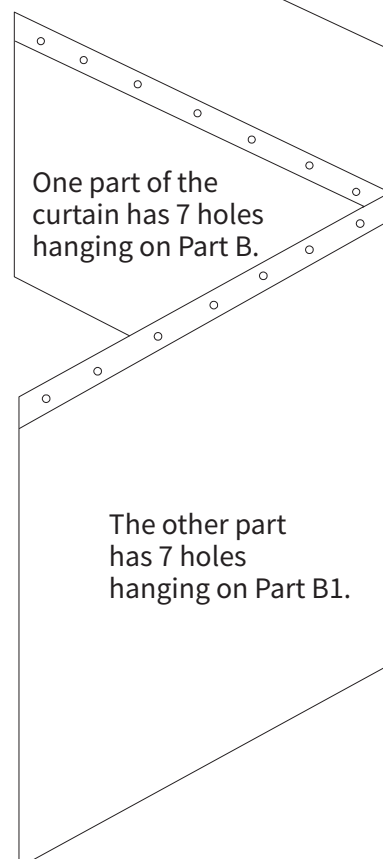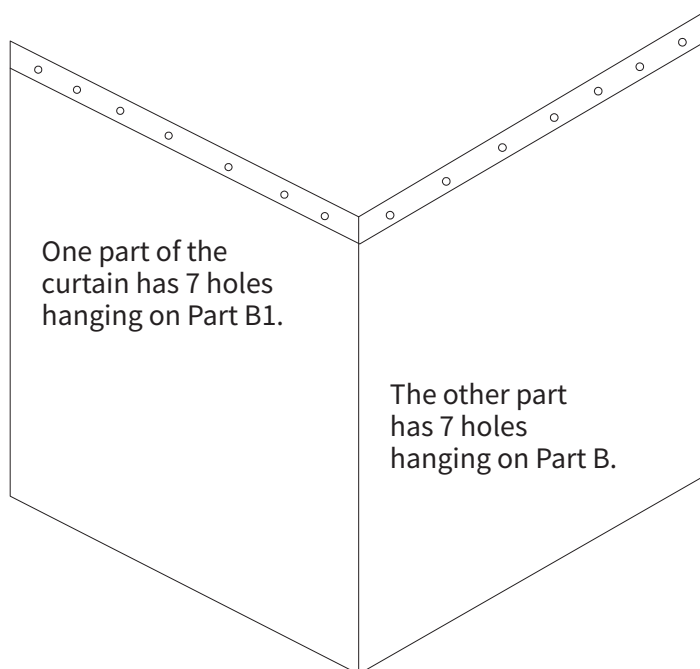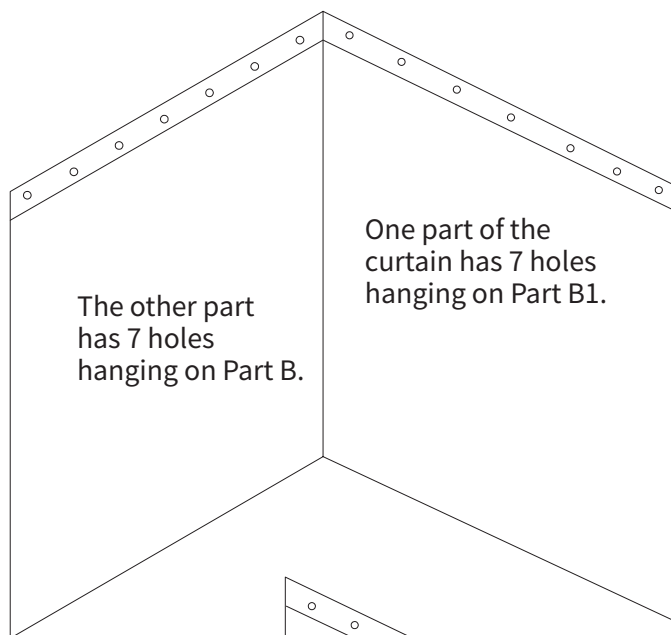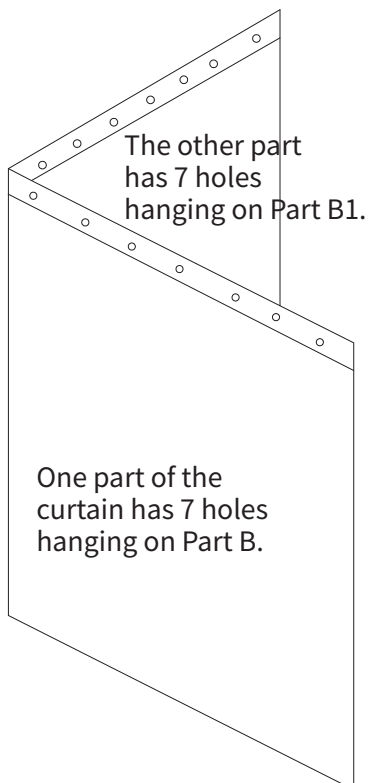


# 21

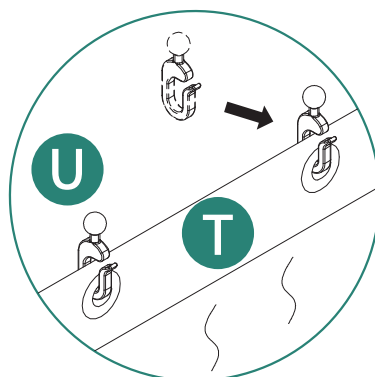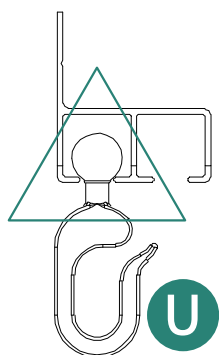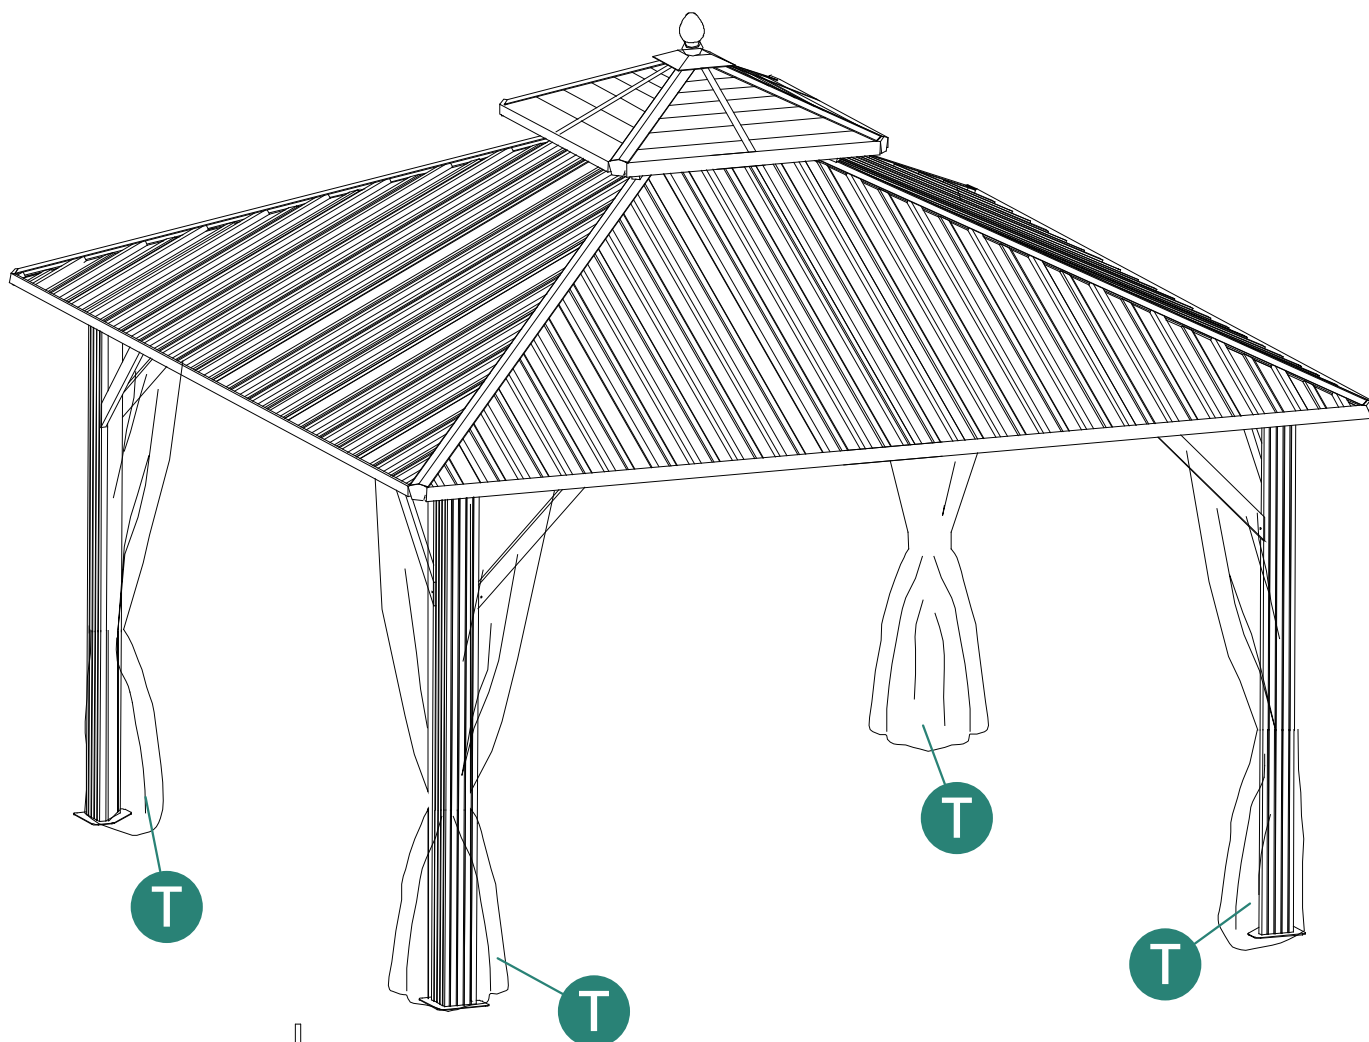





Pay attention to the sidewall curtain's installation position.



# 22




T14pcs

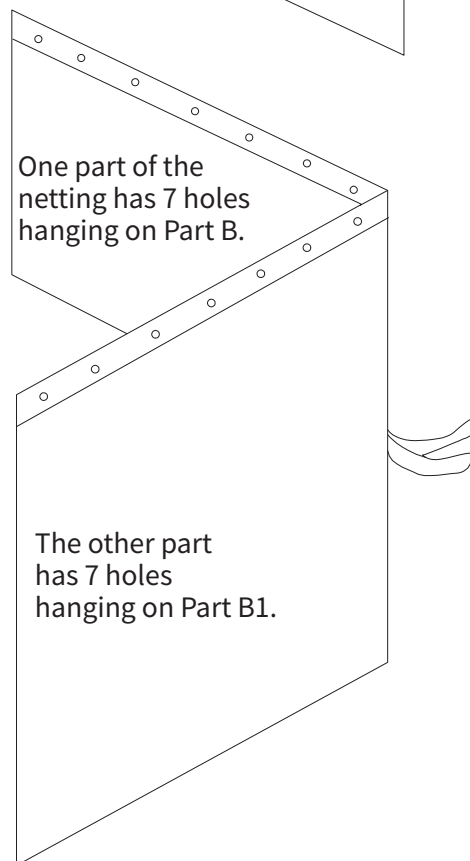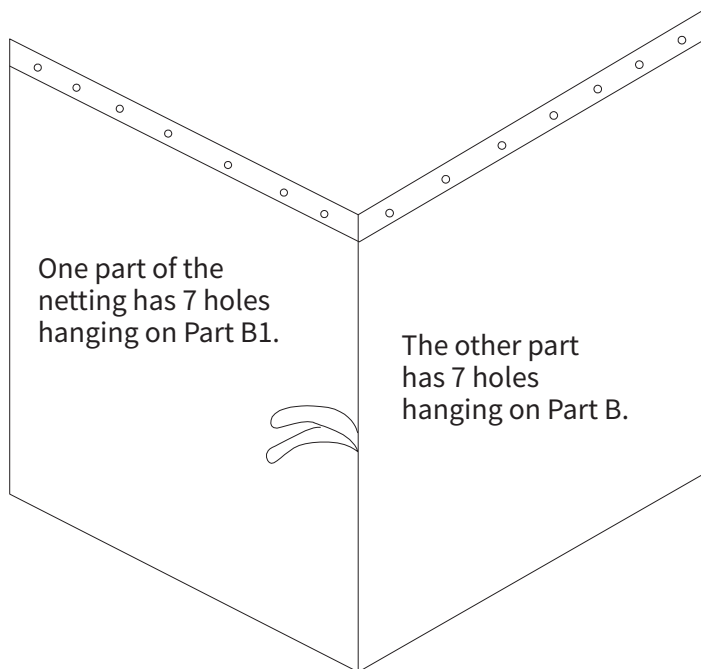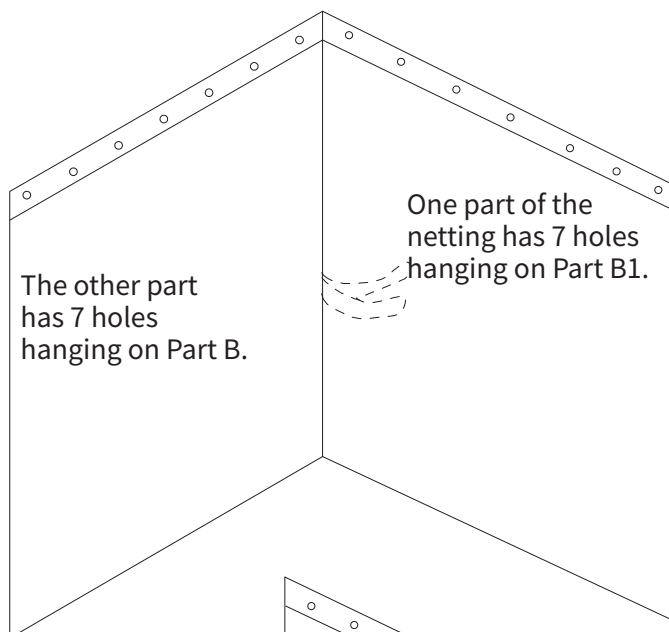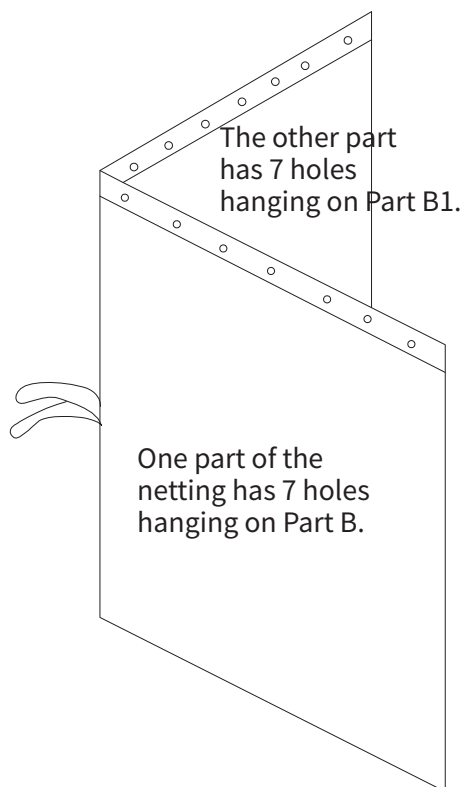




# 23

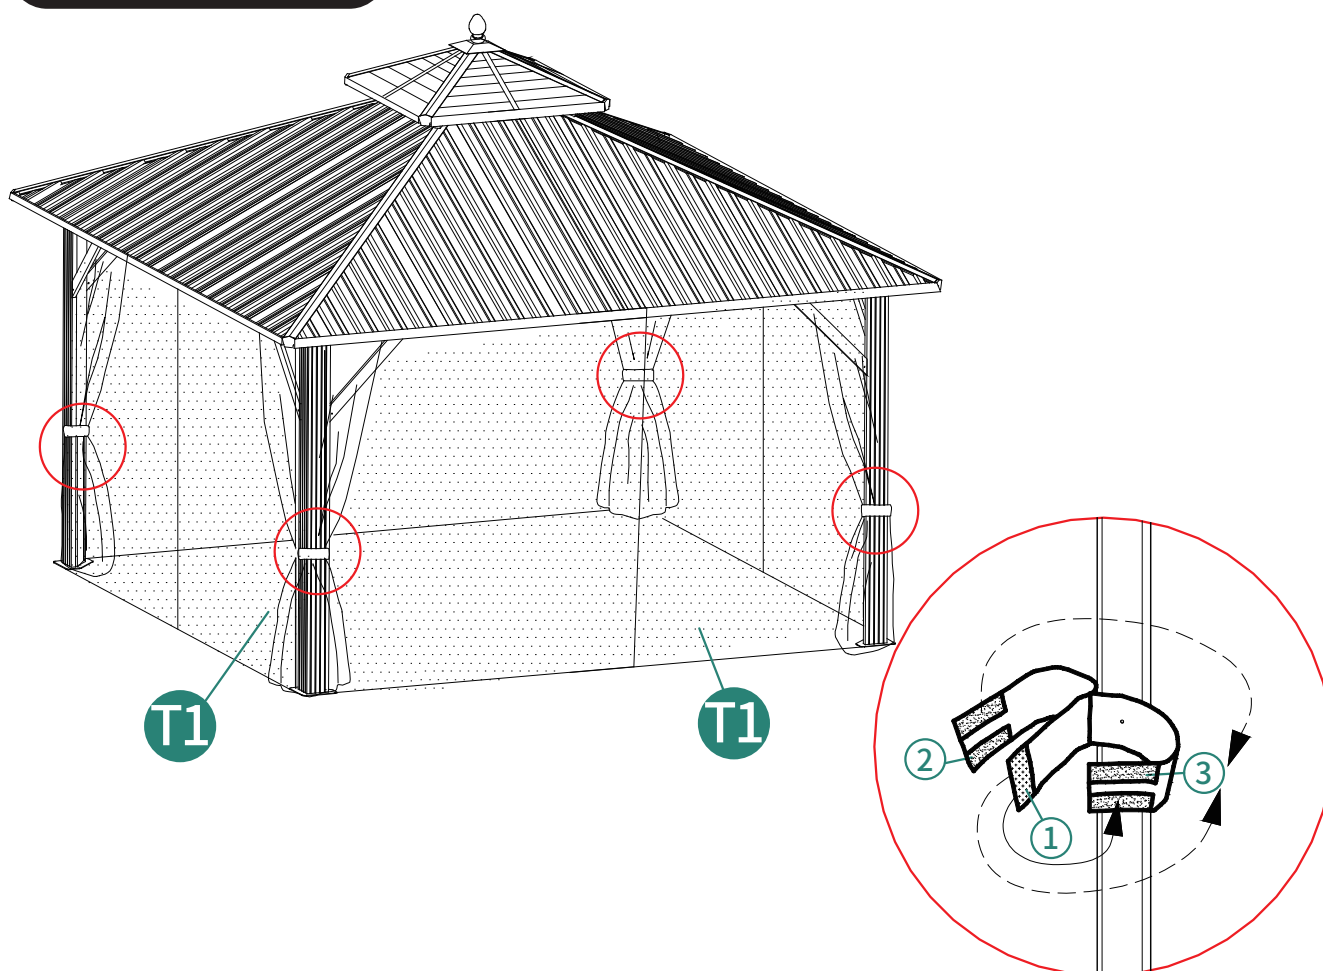

Note:  
 Attach 1 to 2 to secure parts T1 and T (curtains) together.  
 Attach 1 to 3 to secure the back curtain (T).  
 Attach 1 to 3 to secure the front curtain (T1).

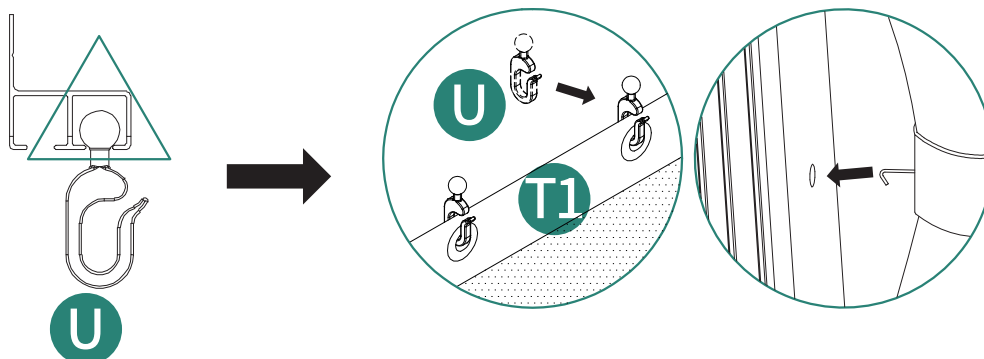


Pay attention to the sidewall netting's installation position.

Hang the hook attached to the netting on Part A.


# 24



⑨ 12pcs




⑩ 12pcs


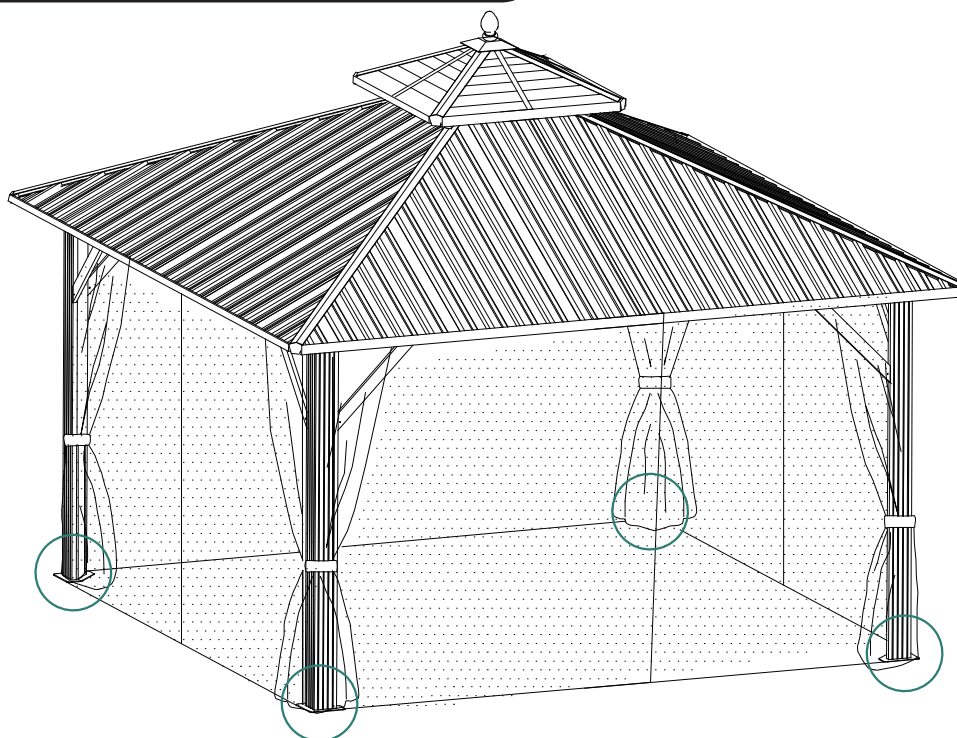


To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed, strong winds may topple the gazebo.**

Expansion screws are essential for stability on cement surfaces, and ground nails are for grassy surfaces. All are included in the accessories package.

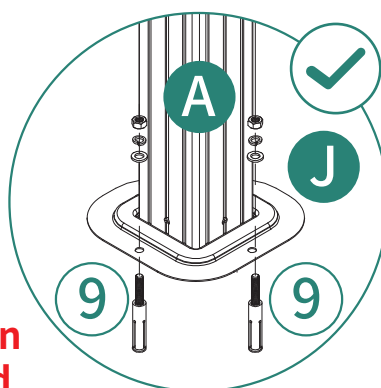

Cement surfaces

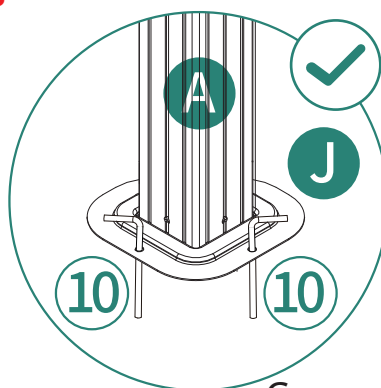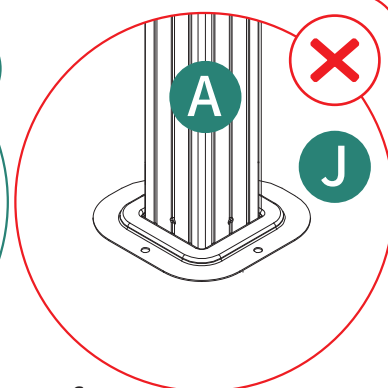

Grassy surfaces

