


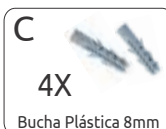
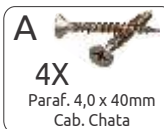


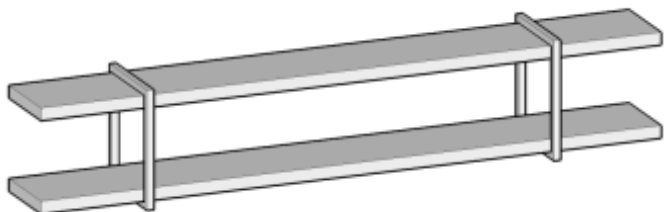


*OBS.: Verifique com atenção as dimensões das prateleiras.*

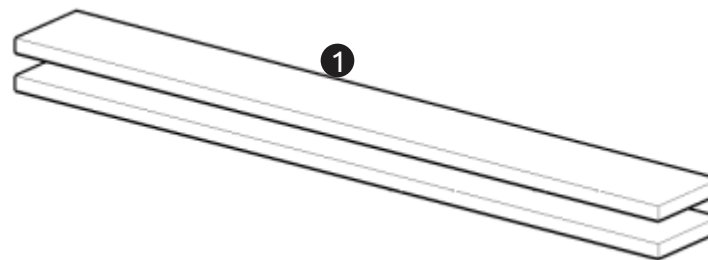

Utilizar os parafusos 4,0 x 40mm (A) e buchas para fixar o conjunto DIRETAMENTE NA PAREDE.  
Para furar a parede utilizar Broca de 8mm de diâmetro.

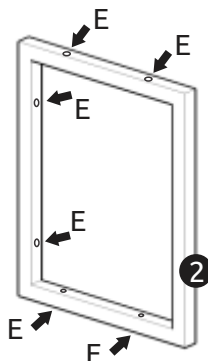

**POSIÇÃO FIXAÇÃO  
DO REQUADRO NO PAINEL**

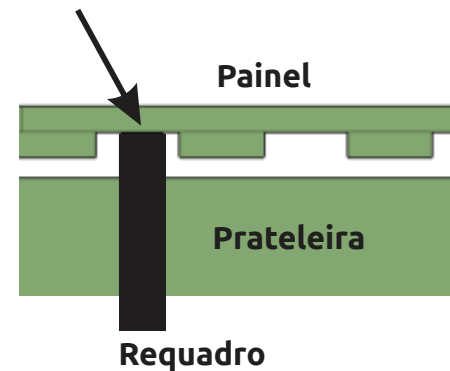

mínimo **20cm**



mínimo **30cm**



mínimo **40cm**




mínimo **50cm**




**F912 - Conjunto Prateleiras Smart 220cm**

Ítem	Código	Descrição	Qtde.
1	I-PRA0188	SHELF SMART 2180X220X36MM	2
2	-	SMART FRAME 332X264X20MM	2

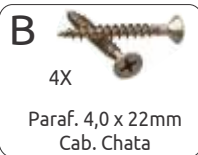



\* UTILIZAR OS PARAFUSOS 3,5 X 14MM (D) PARA FIXAR AS PRATELEIRAS NO REQUADRO METÁLICO.

\* UTILIZAR OS PARAFUSOS 4,0 X 22MM (B) PARA FIXAR O CONJUNTO NO PAINEL RIPADO..





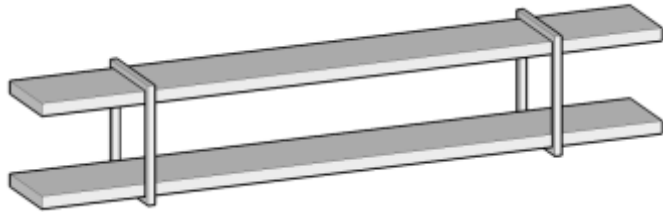


USE THE 4.0 X 40 MM SCREWS (A) AND WALLPLATES TO FIX THE ASSEMBLY DIRECTLY TO THE WALL. Use an 8 mm diameter drill bit to drill into the wall.

NOTE: Carefully check the dimensions of the shelves.

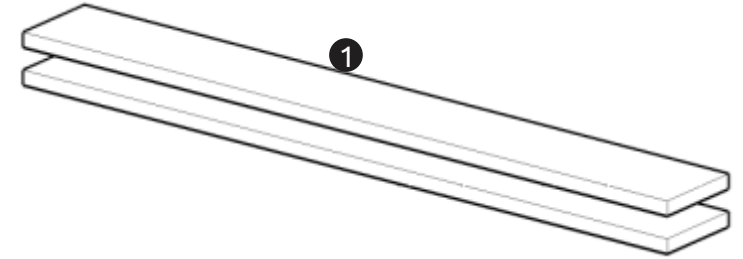
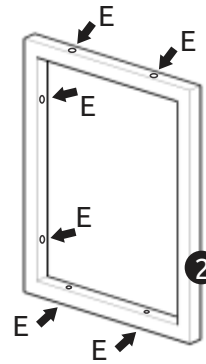


**FIXED POSITION**  
of the box to the pannel

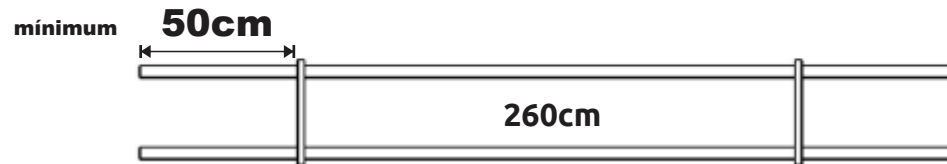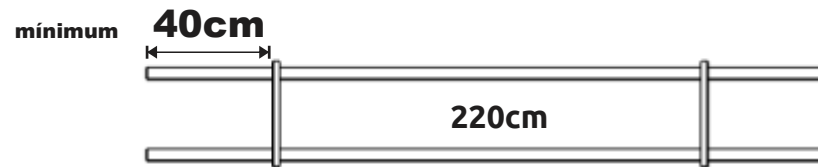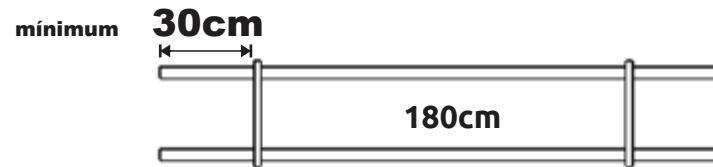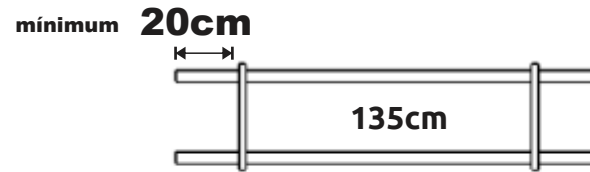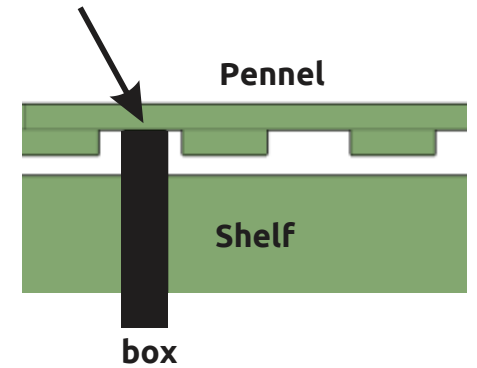

**F912 - Conjunto Prateleiras Smart 220cm**

Ítem	Código	Description	Qtde.
1	I-PRA0188	SHELF SMART 2180X220X36MM	2
2	-	SMART FRAME 332X264X20MM	2

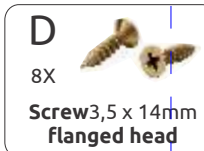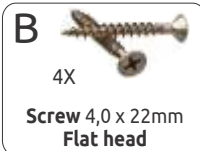

\* USE THE 3.5 X 14 MM SCREWS (D) TO ATTACH THE SHELVES TO THE METAL FRAME.  
\* USE THE 4.0 X 22 MM SCREWS (B) TO ATTACH THE ASSEMBLY TO THE REMOVED PANNEL.