



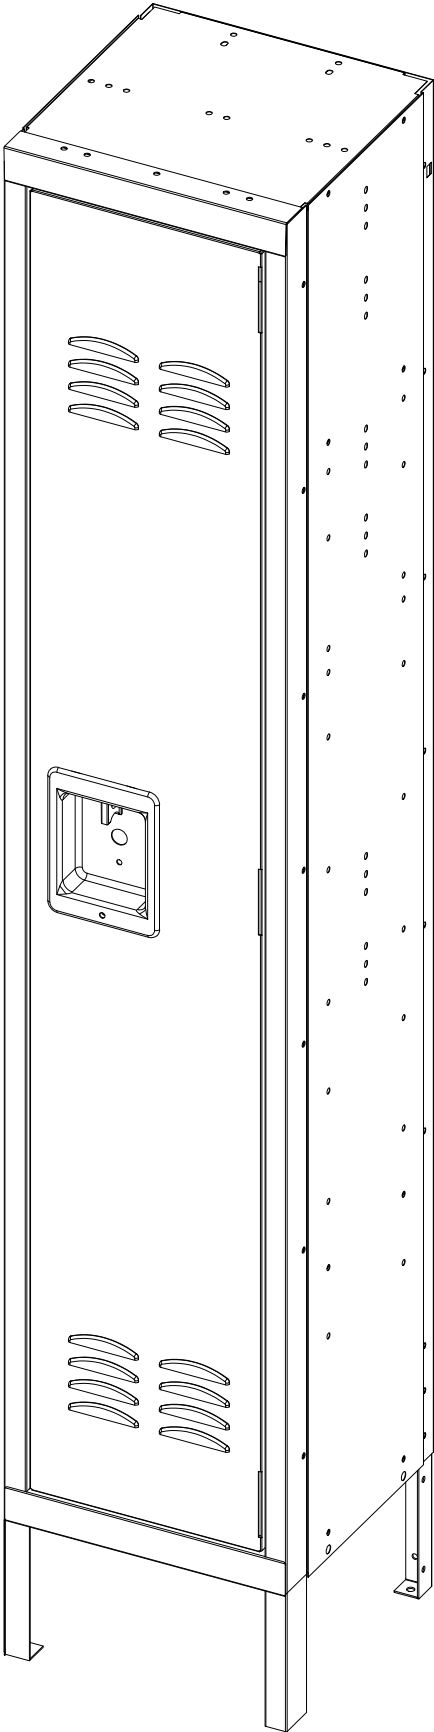


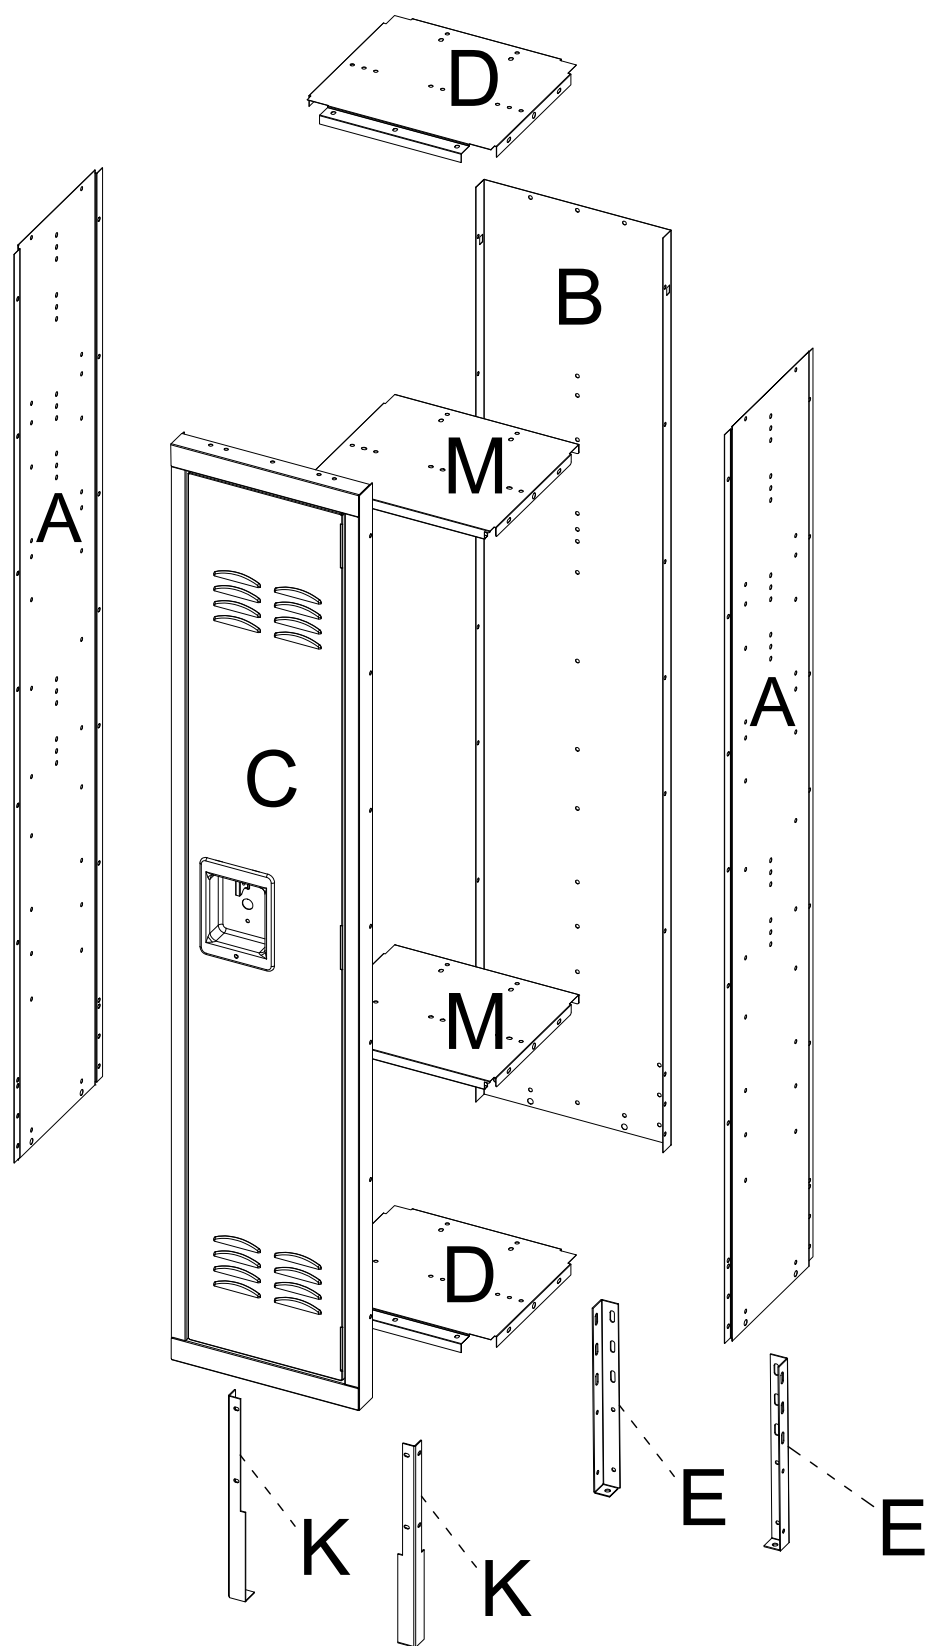


F  ×3 standby application	H  ×80	I  ×80
	J  ×1	G  ×2

Instructions for the use of holes in part A

Please read this illustration carefully before assembling the locker

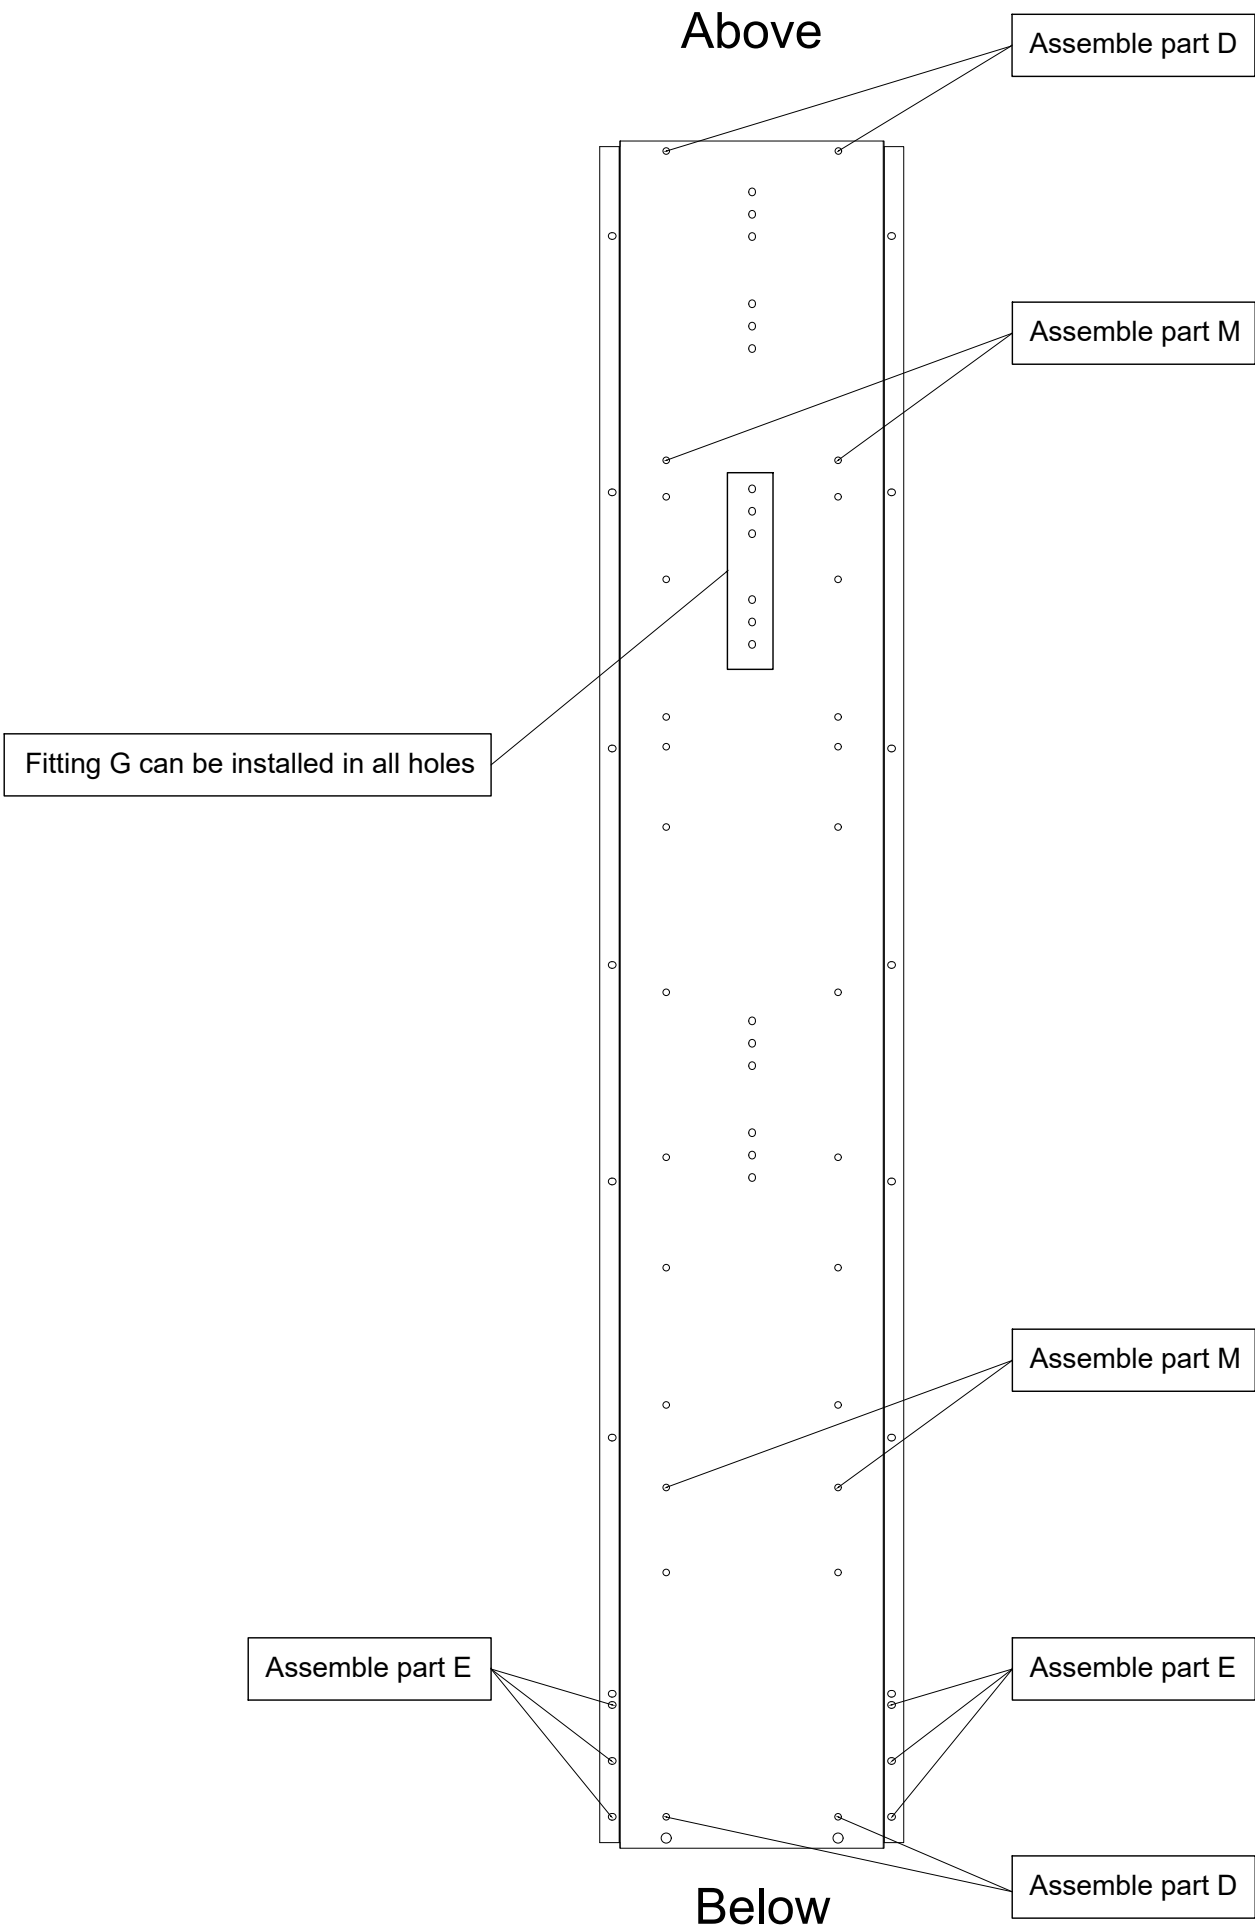


1

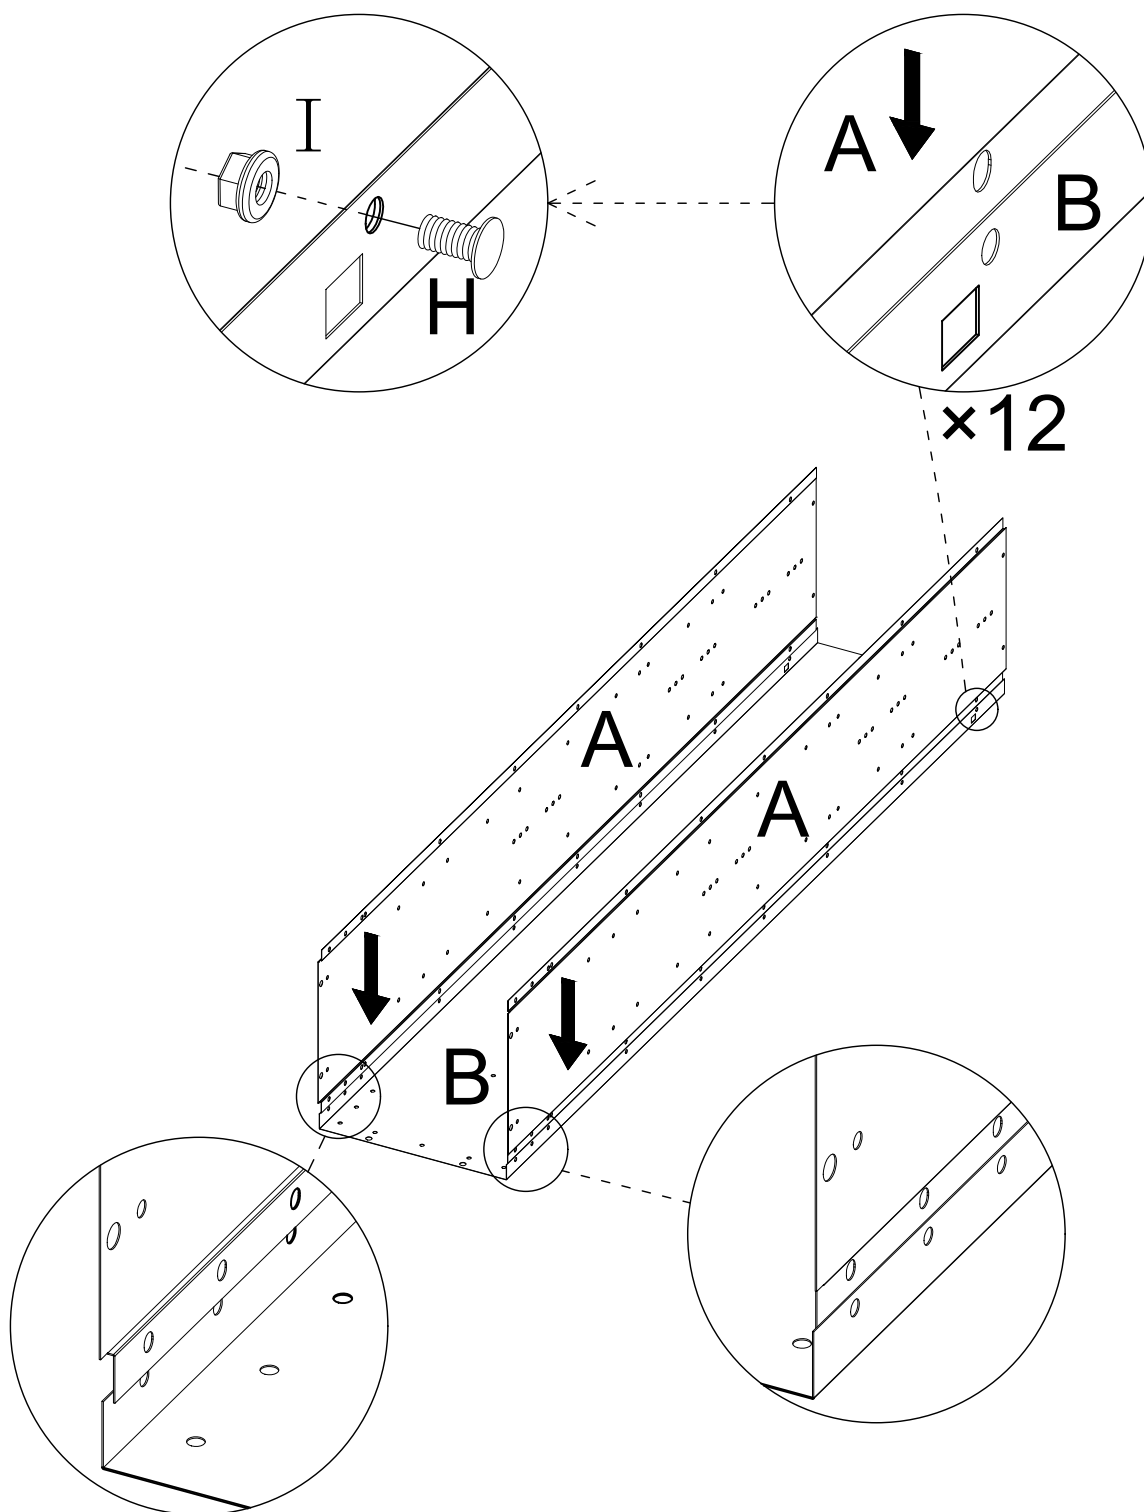

Overlap the two side walls with the vertical part of the back wall and secure them with six bolts and nuts on each side.

H×12	I×12
------	------


2

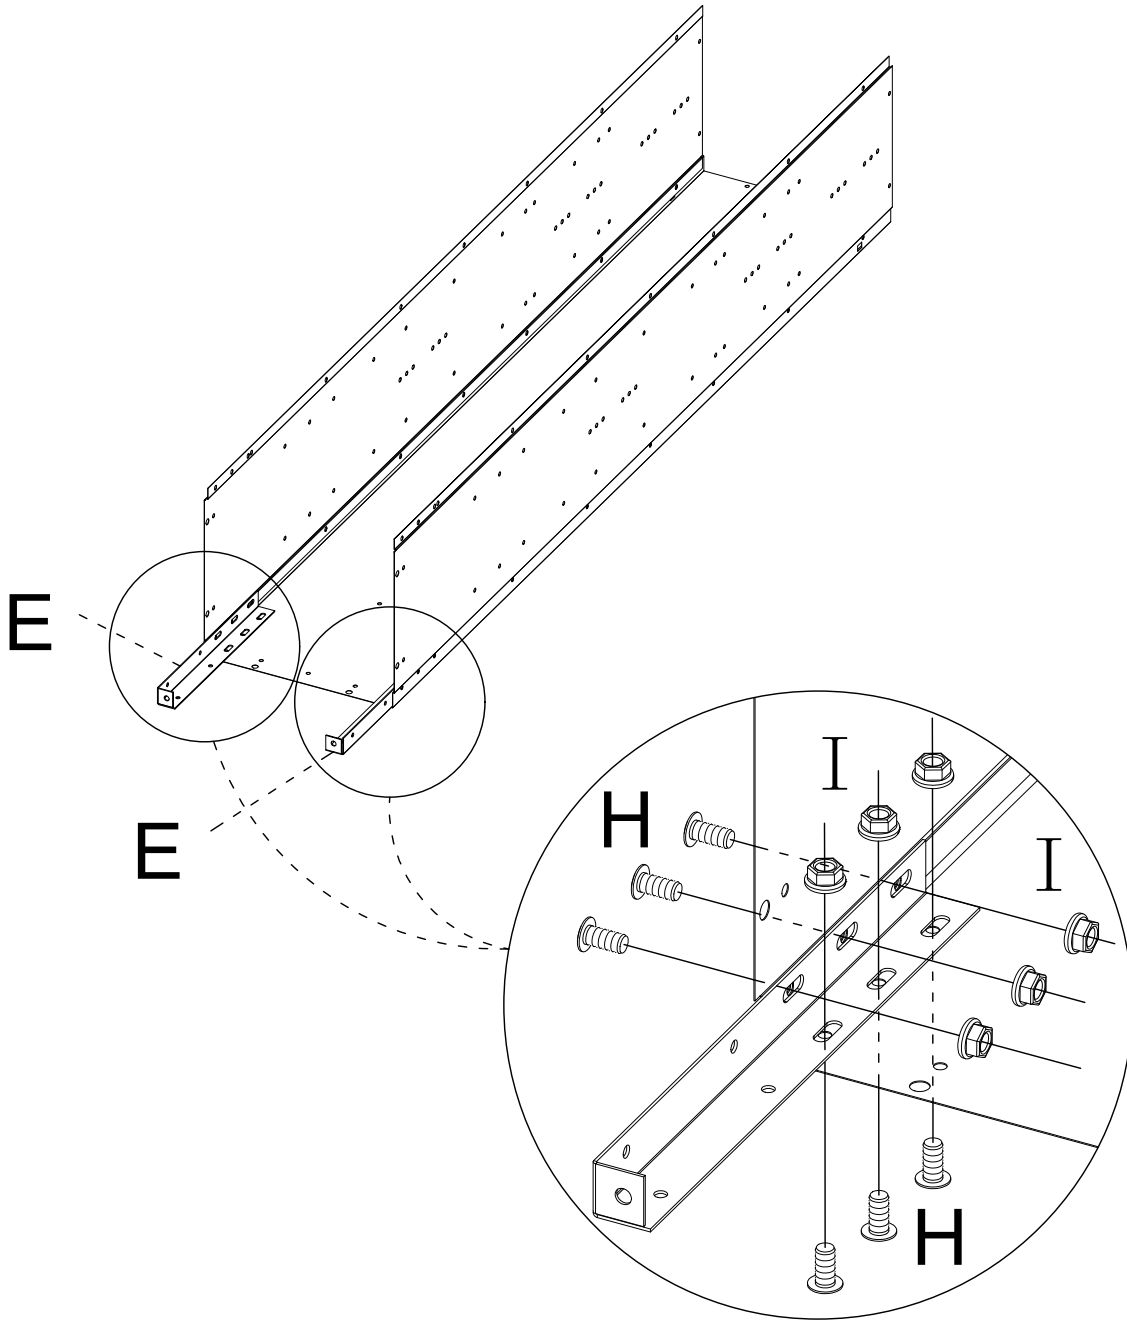

Attach the two legs, using six bolts and nuts to secure each leg, taking care to push the leg to the top of the hole to keep it aligned with the front leg.

H×12	I×12
------	------


3

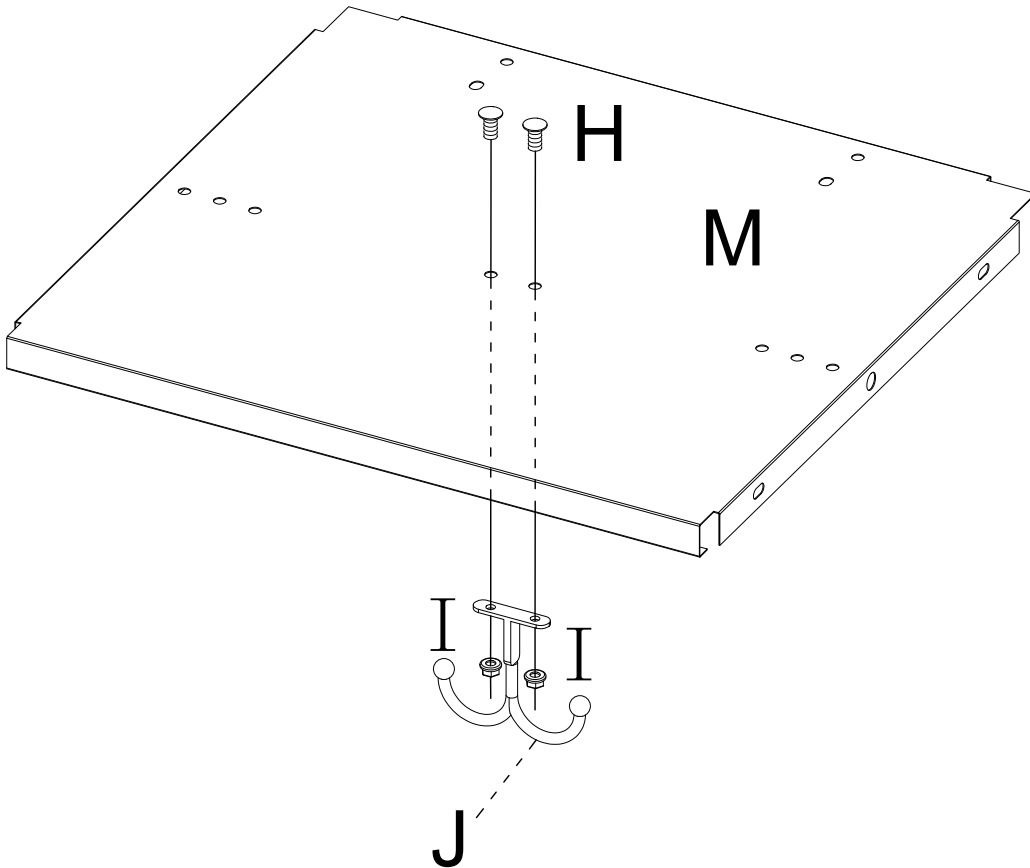

Fix hook J*1 to parts M with bolts H*2 and I*2 nuts(Fix hooks on 1 part M only)

H x2	I x2	J x1
------	------	------


4

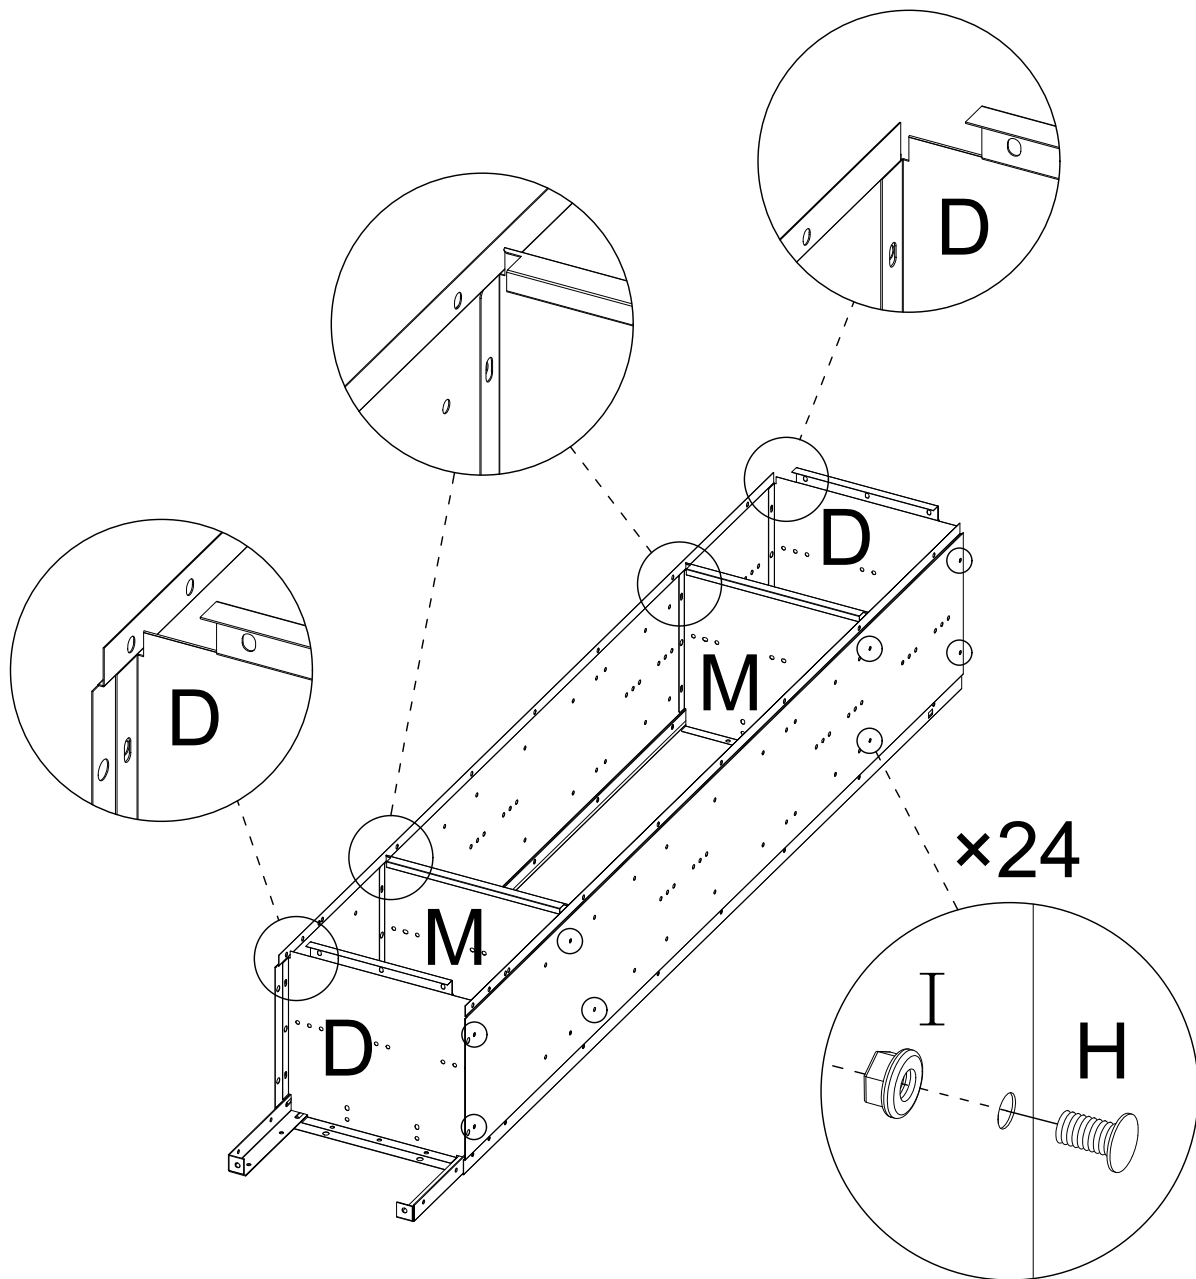

Assemble 2 Parts D, 2 Parts M, back plate B and side plate A with H*24 bolts and I*24 nuts (Install the hook installed part M on the upper part of the cabinet)


H×24	I ×24
------	-------

5

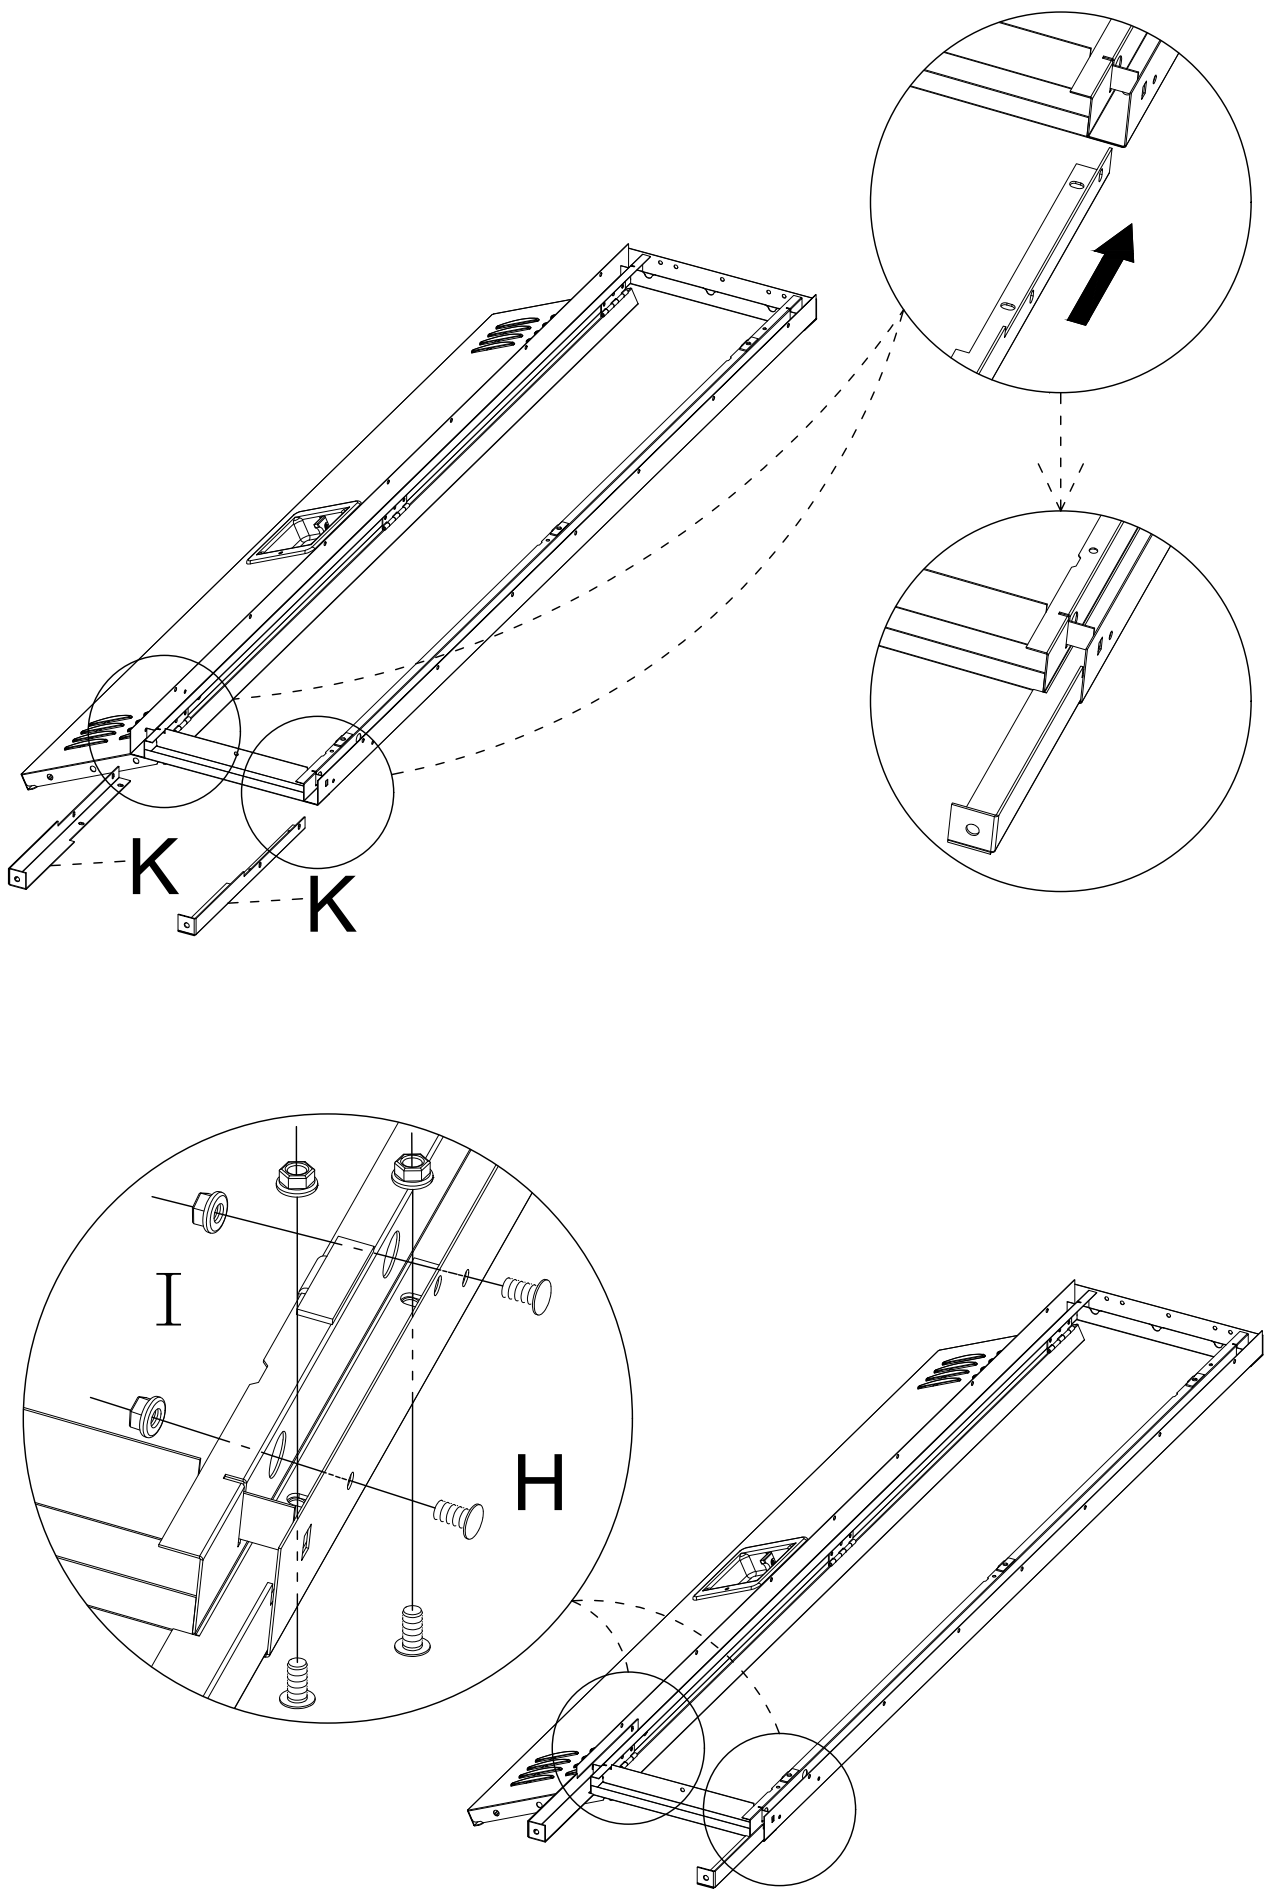

H x8	I x8
------	------

6

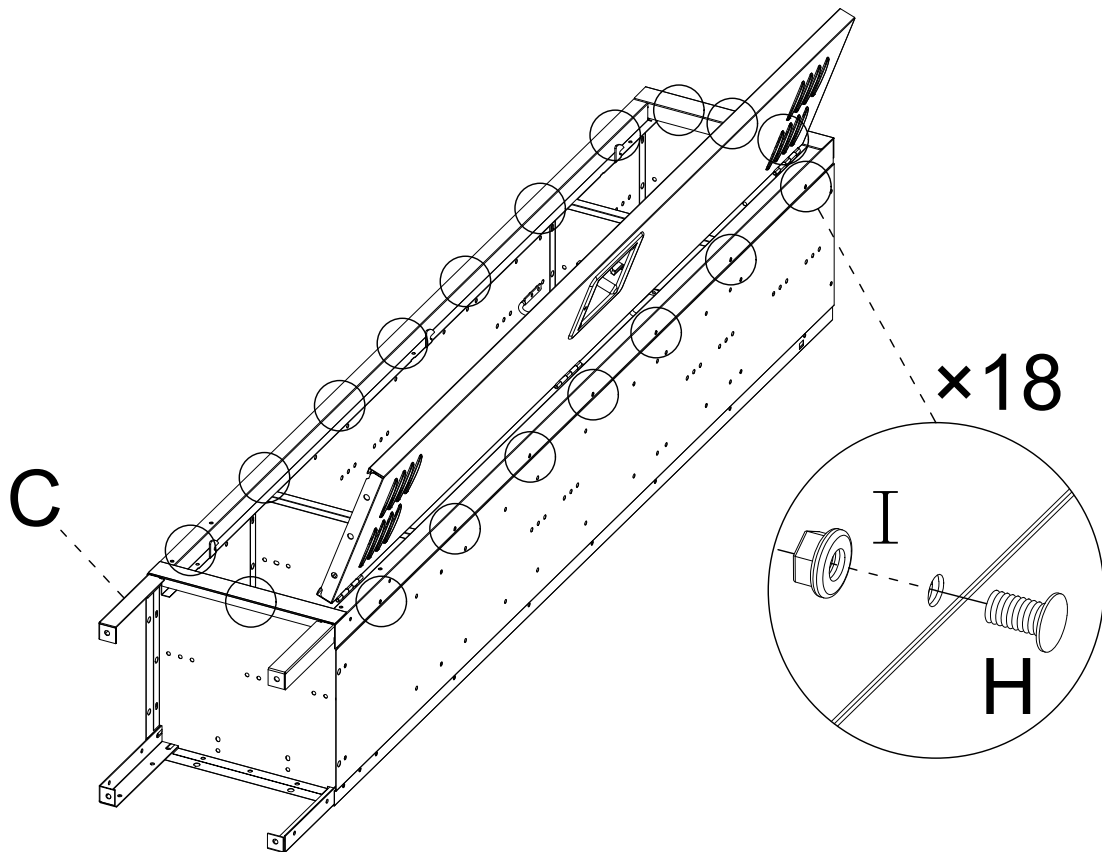


Snap on the door panel and install the nuts from the inside.

H×18	I×18
------	------

7

If the lock is broken
here, replace it with F.

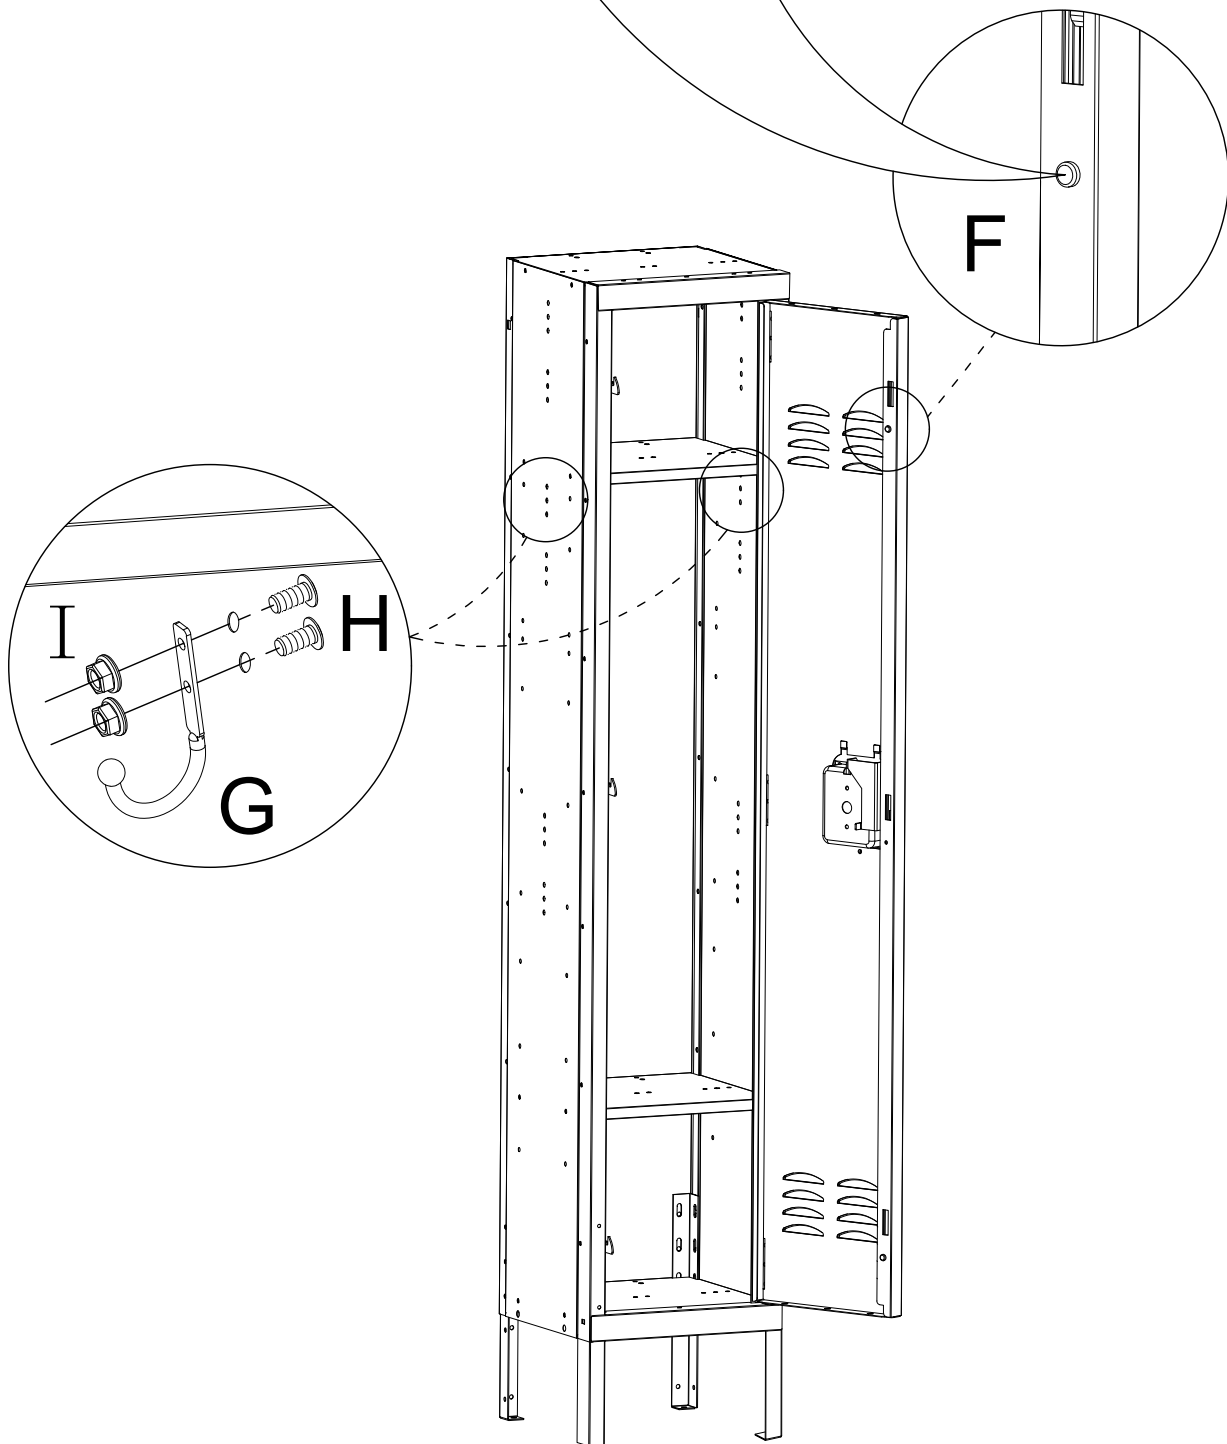

H ×4	I ×4	G ×2
------	------	------

