


RPCQUBD


Assembly Instructions

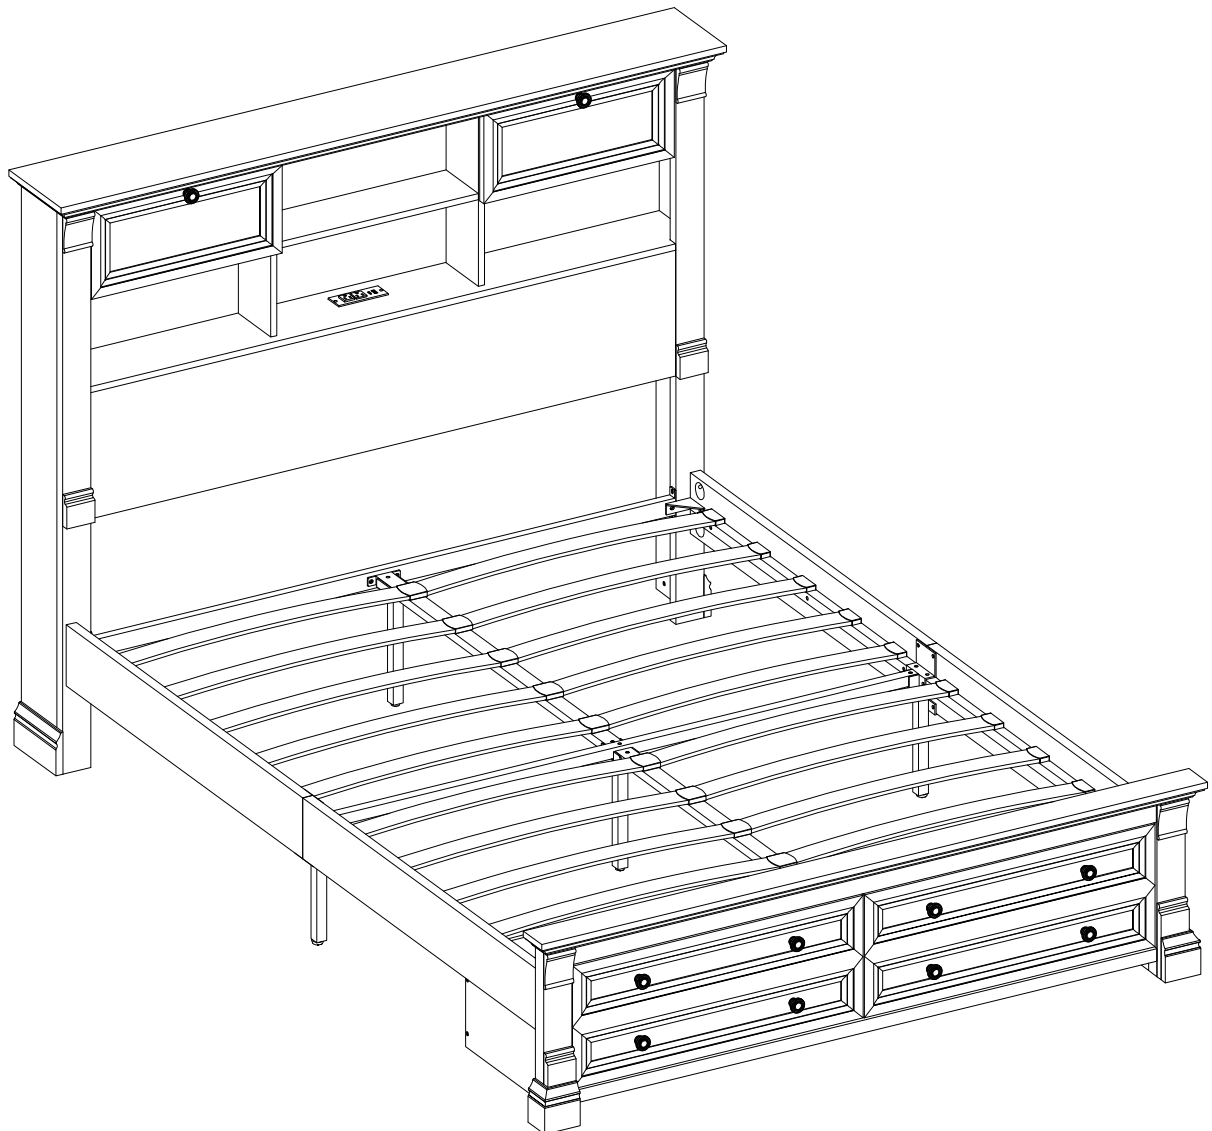


Date 2025-4-8 Rev.01-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

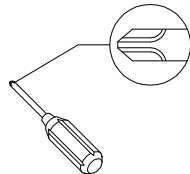

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

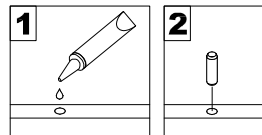


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

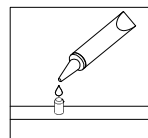


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

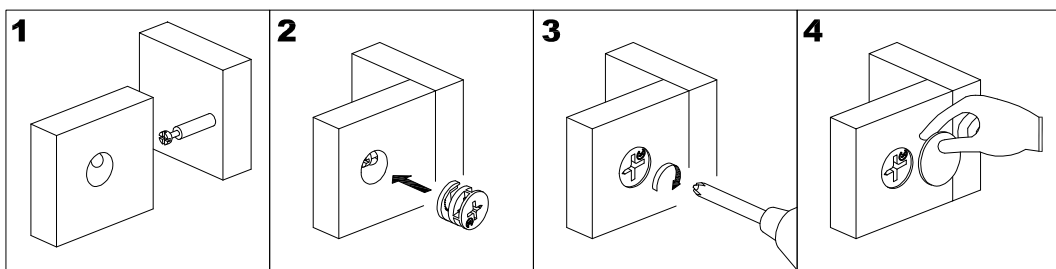



- VII. Power tools should not be used to assemble this product .

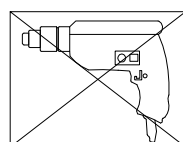


Parts List

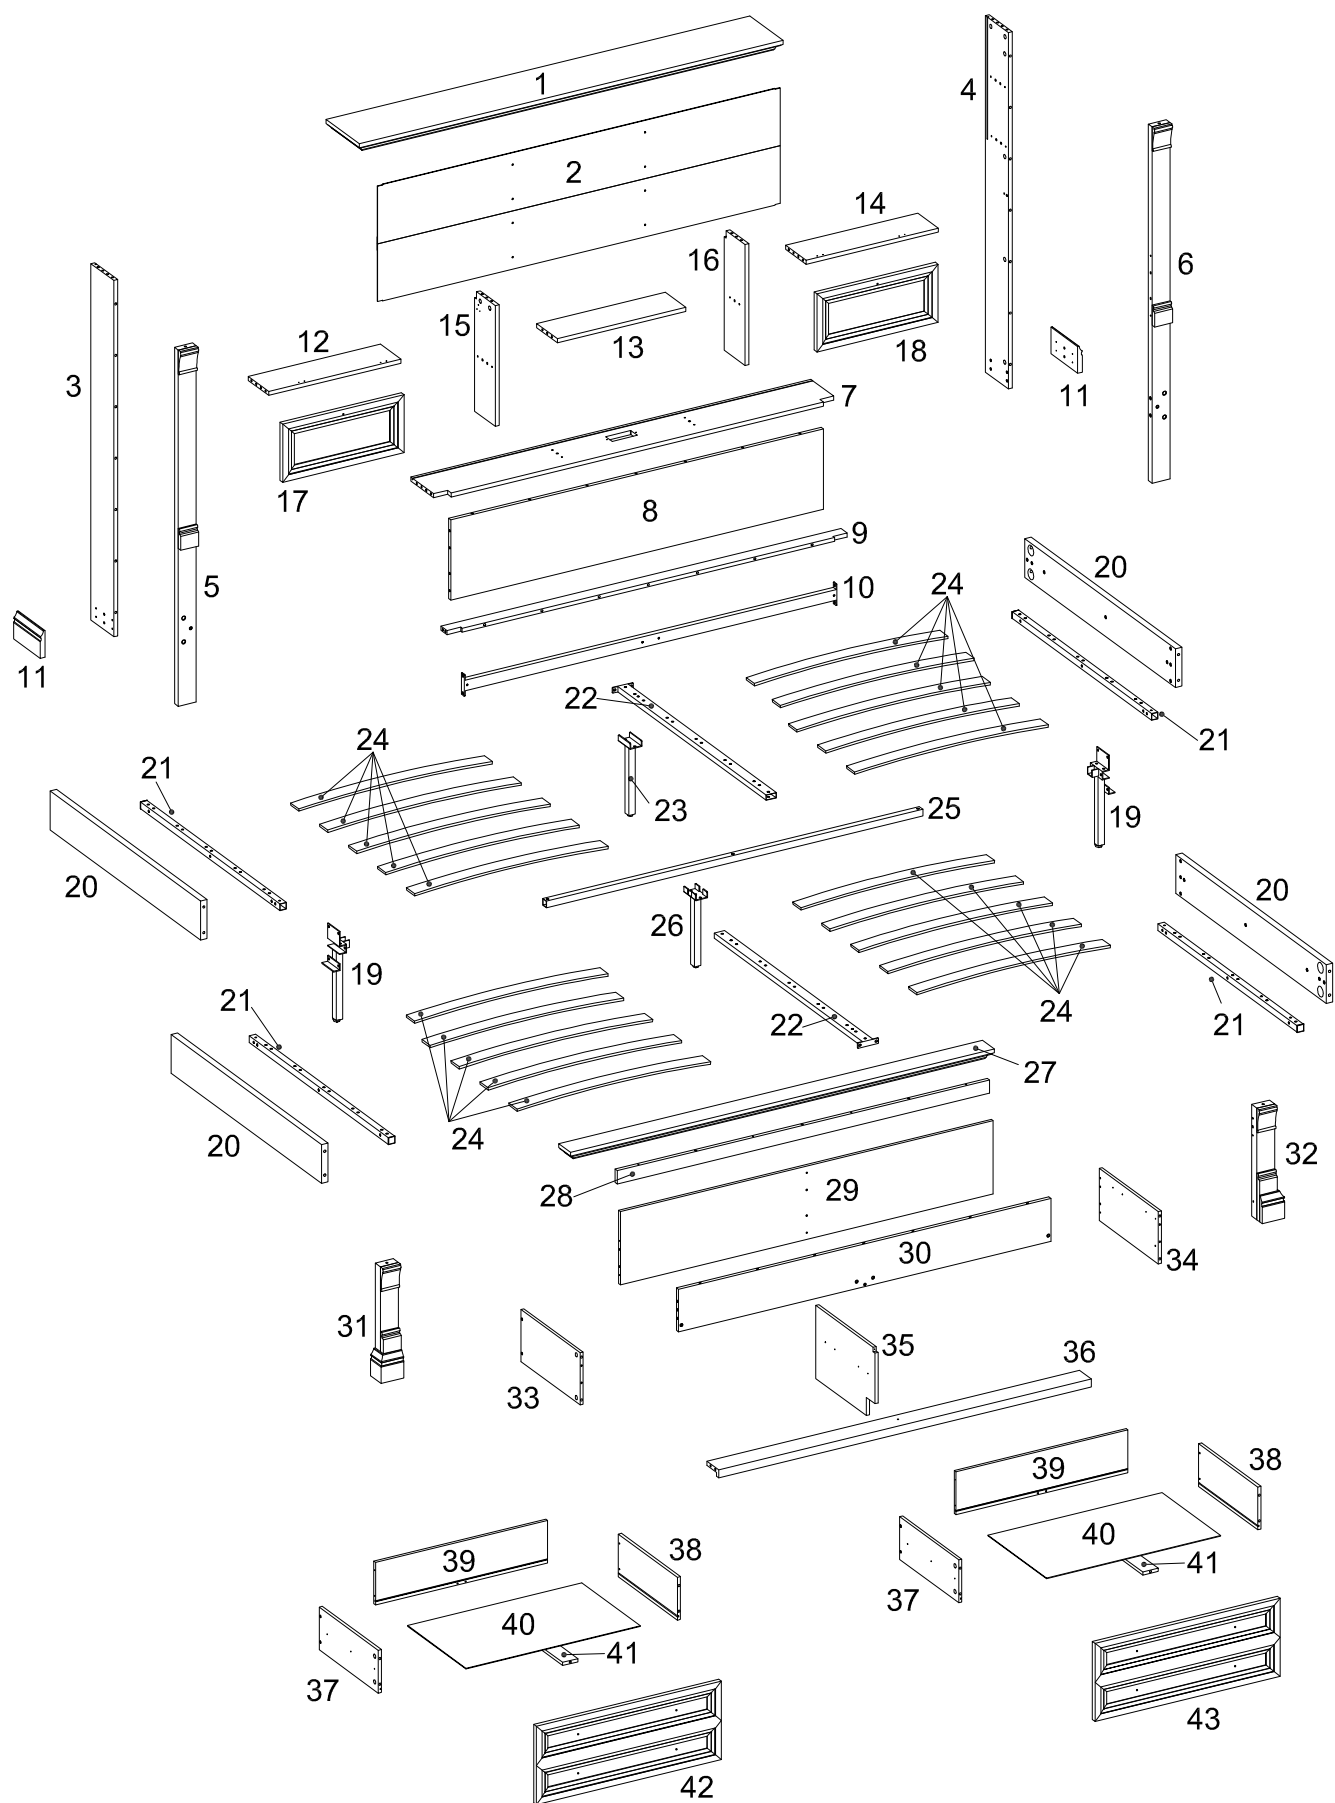





Hardware List


A		Ø8x30mm	Long dowel	52 pcs
B		Ø6x32mm	Cam bolt	76 pcs
C		Ø15x11mm	Large Cam lock	62 pcs
D		Ø30mm	Cam cover	76 pcs
E		Ø15x9.5mm	Small cam lock	14 pcs
F		Ø8x20mm	Medium dowel	4 pcs
G			Glue Tube	2 pcs
H		Ø6x16mm	Bolt	36 pcs
J		Ø6x30mm	Bolt	7 pcs
K		Ø6x40mm	Bolt	16 pcs
L		M 4	Allen wrench	2 pcs
M		Ø8x60mm	Bolt	8 pcs
N			Washer	8 pcs
P			Nut	8 pcs
Q			Spanner wrench	1 pc
R		Ø4x25mm	Screw	8 pcs
S		Ø4x44mm	Screw	28 pcs
T			Plastic wedge	14 pcs
U		Ø3x17mm	Flat-head screw	14 pcs

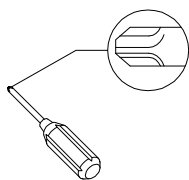

Philips head screwdriver required for assembly
(not included)


Hardware List

V		Ø38mm	Plastic cap	8 pcs
W			Single end plastic parts	20 pcs
X			Double-ended plastic parts	10 pcs
Y			Triangular iron sheet	4 pcs
Z		Ø4x12mm	Handle bolt	8 pcs
AA		Ø4x25mm	Handle bolt	2 pcs
BB			Handle	10 pcs
CC		Ø3.5x12mm	Screw	32 pcs
DD		16"	Drawer slider	2 sets
EE		Ø6x30mm	Small Dowel	10 pcs
FF		Ø3.5x15mm	Screw	8 pcs
GG		Ø35mm	Hinge	4 pcs
HH		Ø3.5x14mm	Screw	30 pcs
JJ			Magnetic catch	2 pcs
KK			Metal piece	2 pcs
LL				2 pcs
MM				2 pcs
NN				2 pcs
PP			USB Interface	1 pc

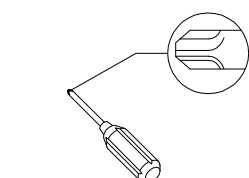


Philips head screwdriver required for assembly
(not included)


Step 1

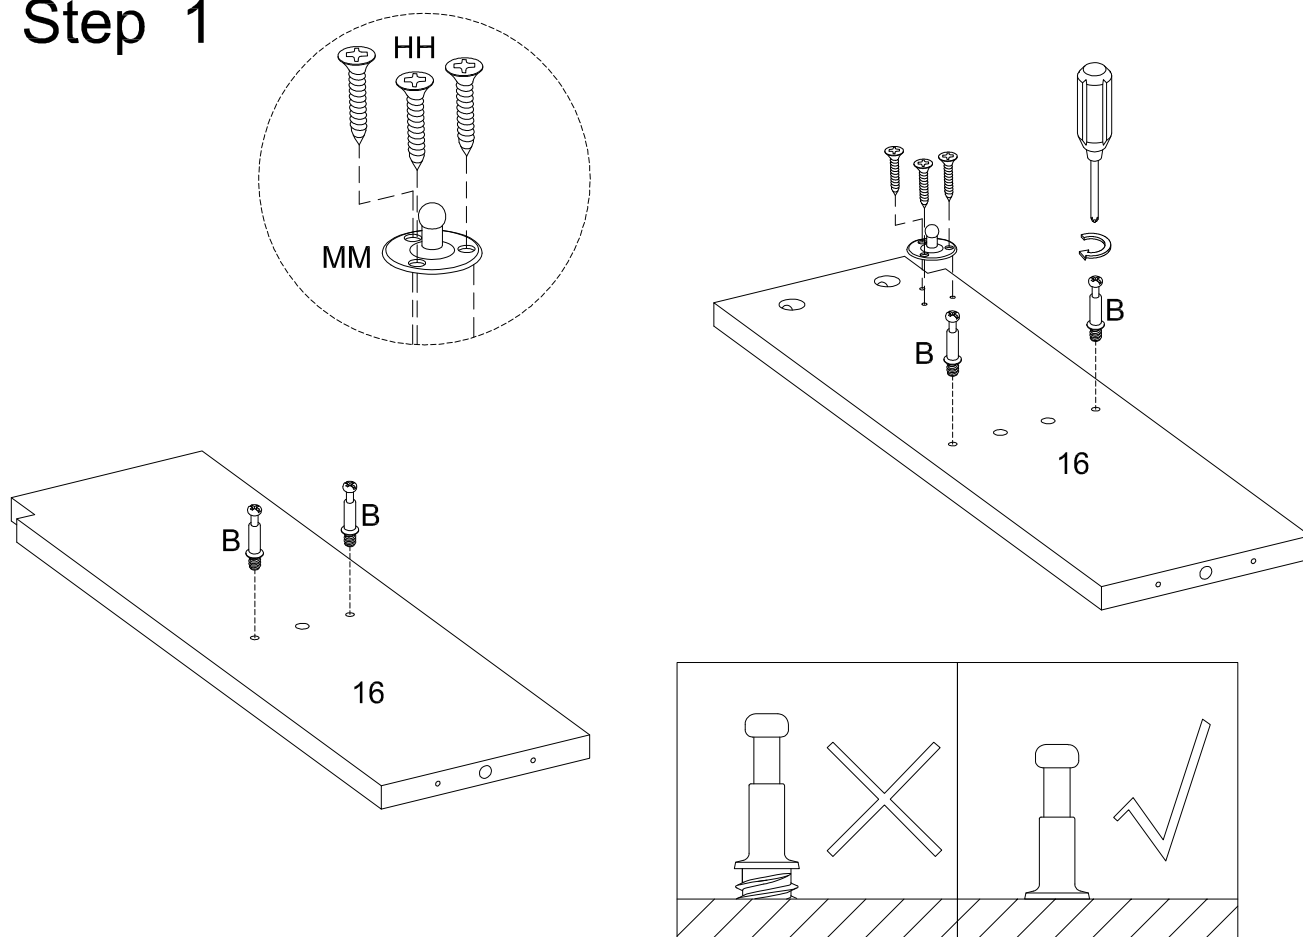


Step 2

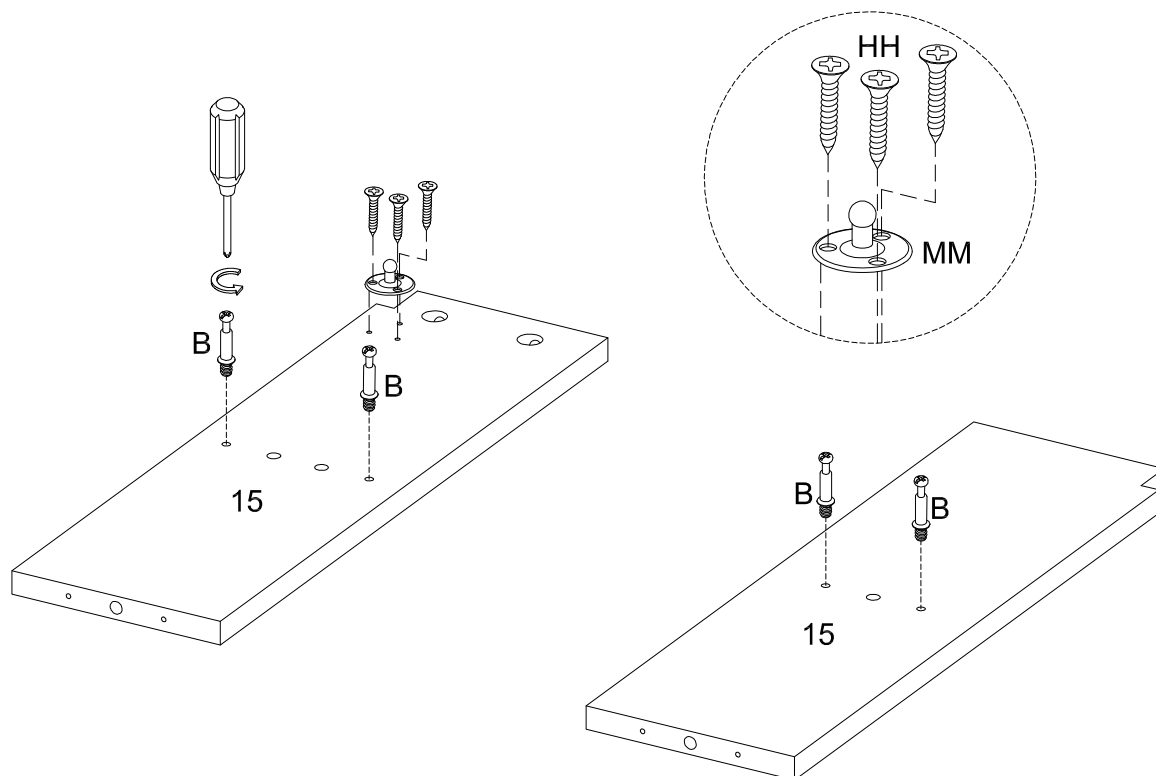


Step 3

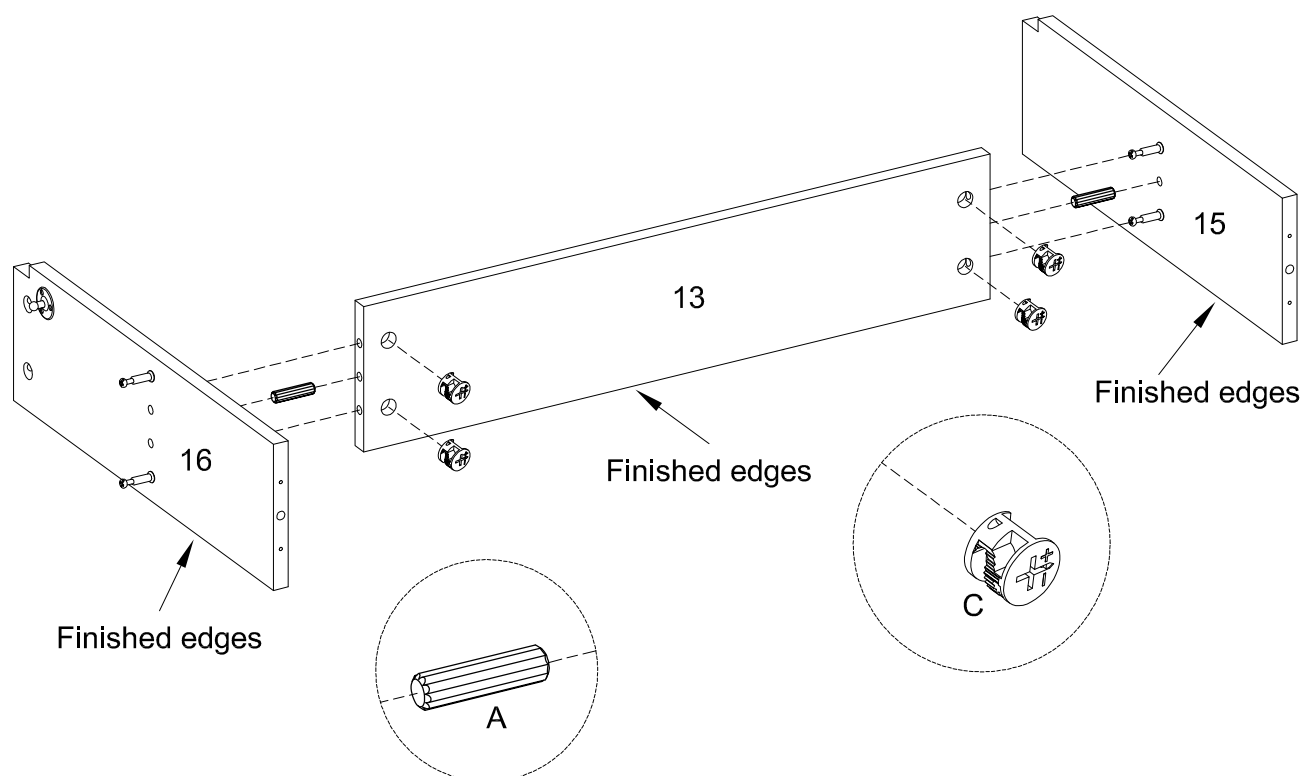


Step 4

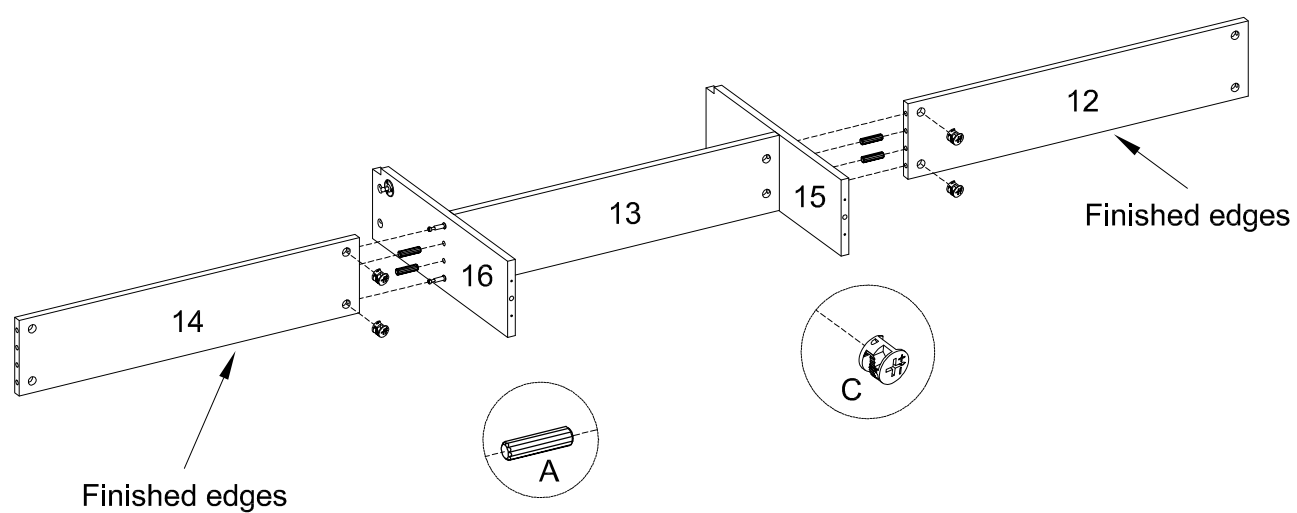



Step 5

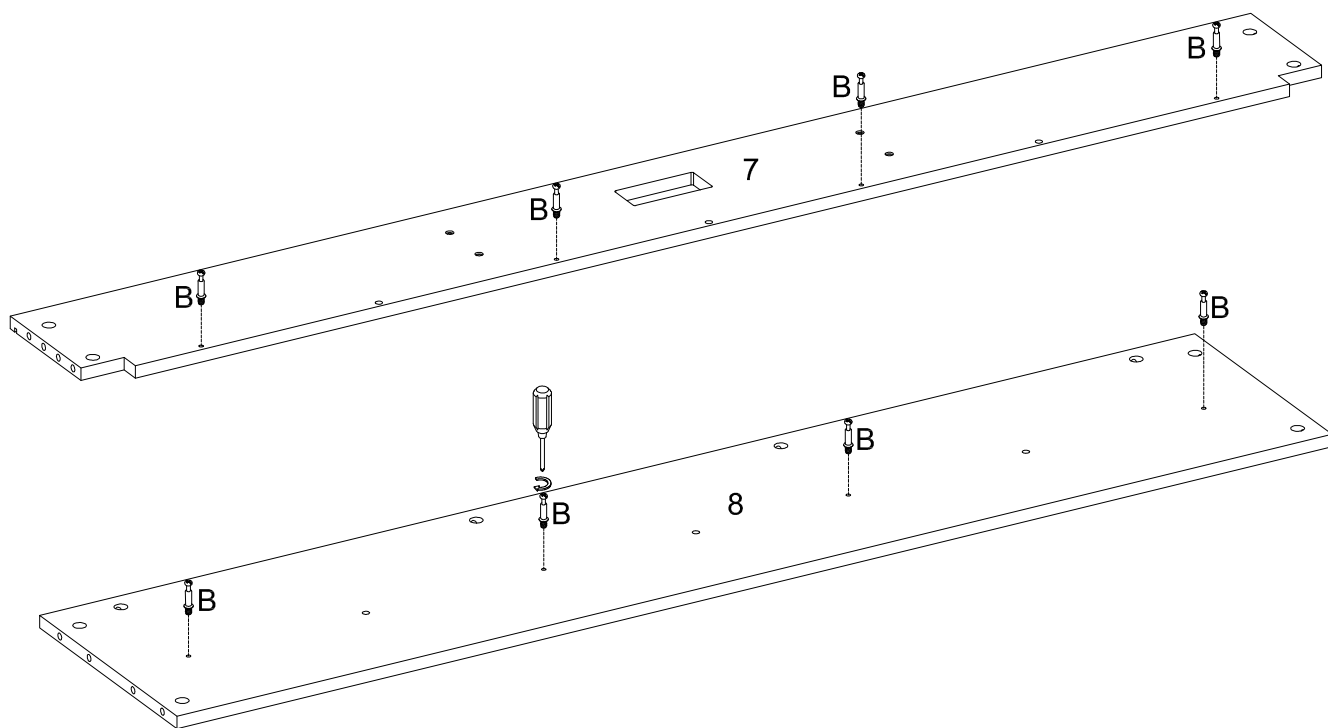



Step 6

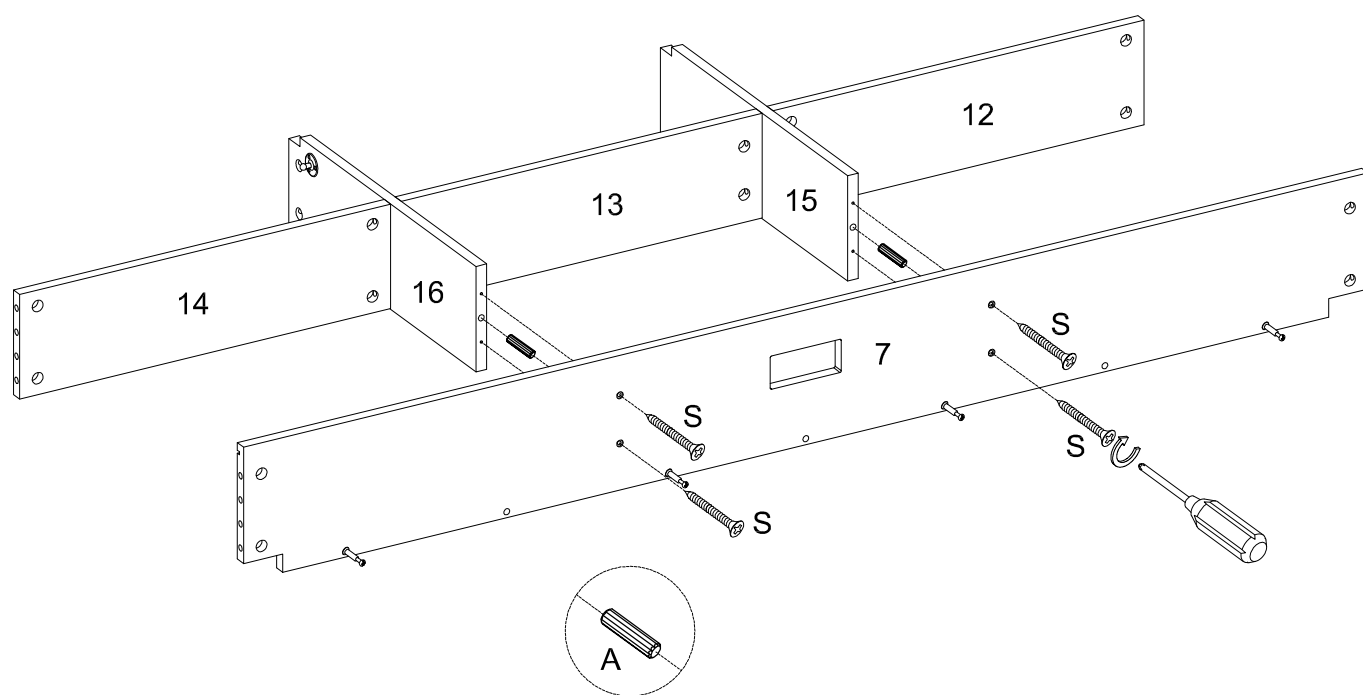


Step 7

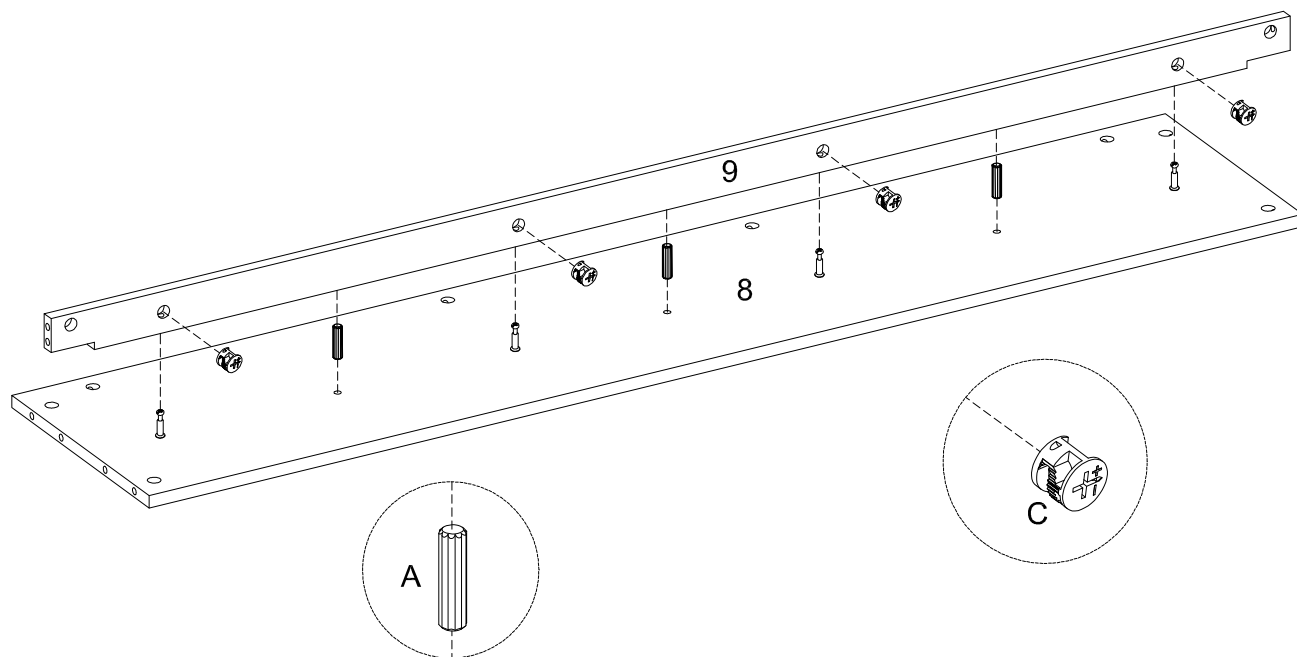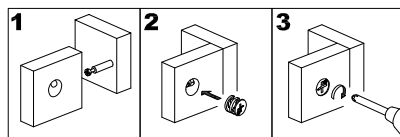


Step 8

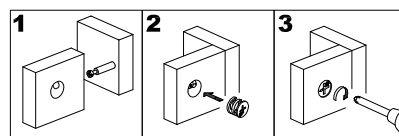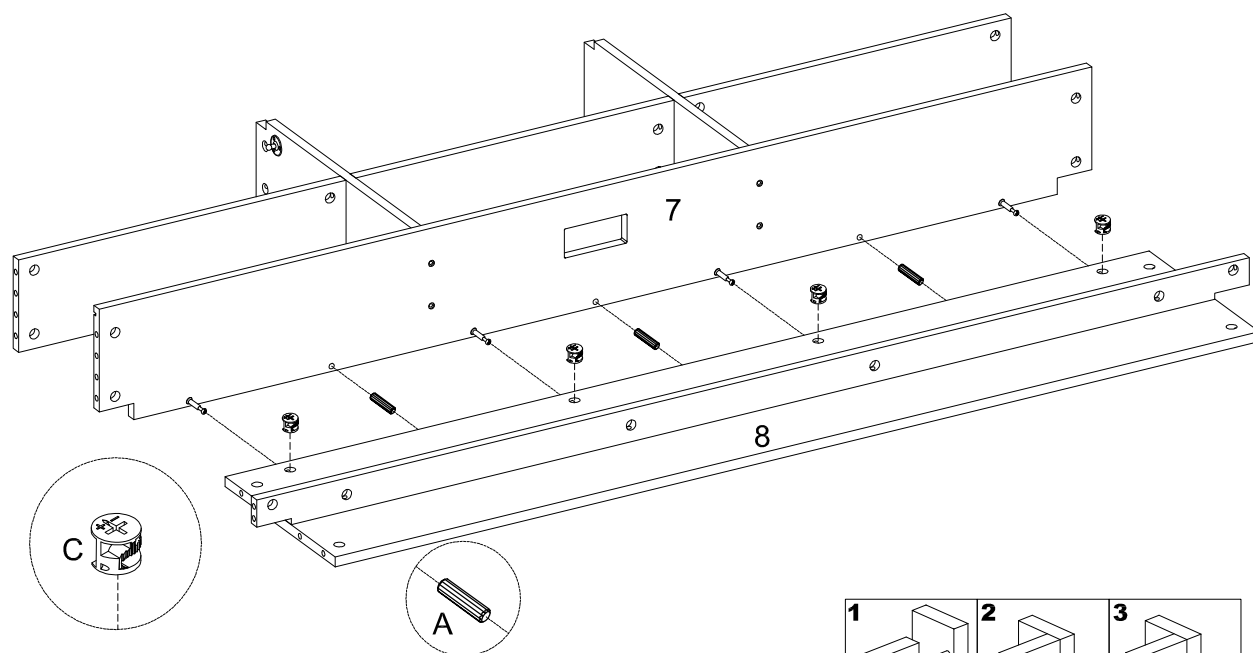


Step 9

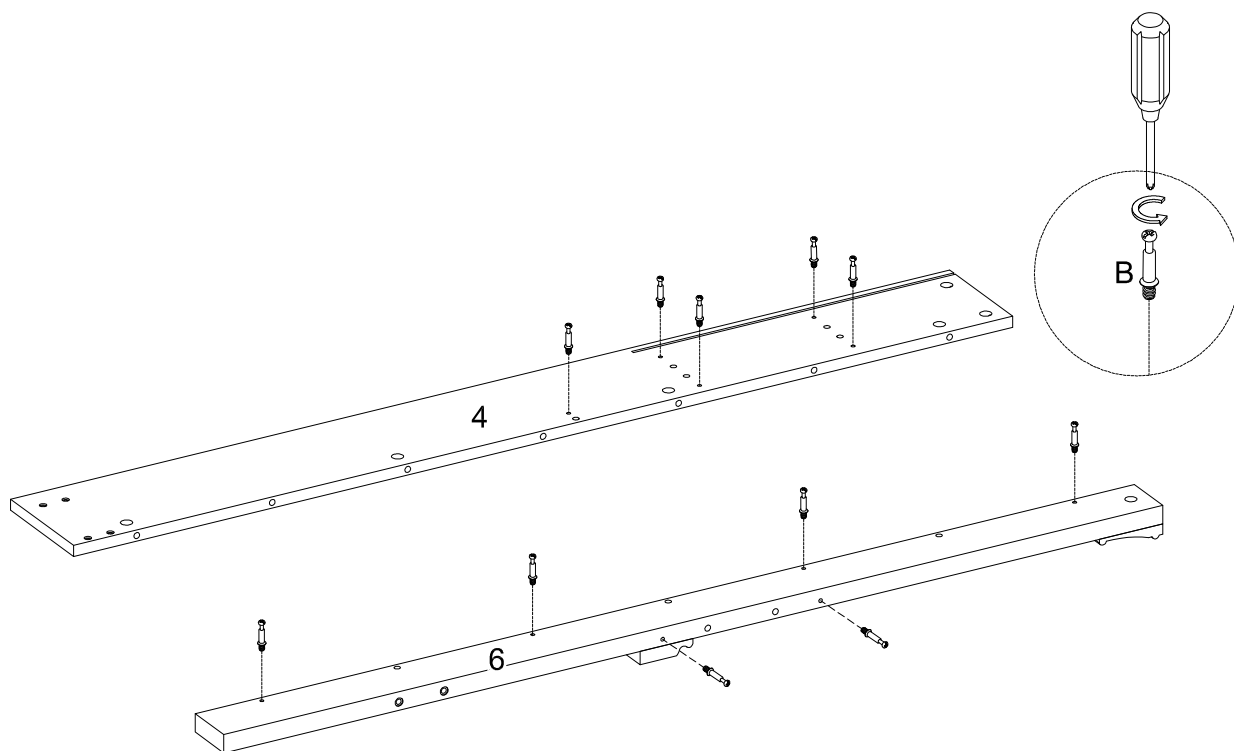


Step 10

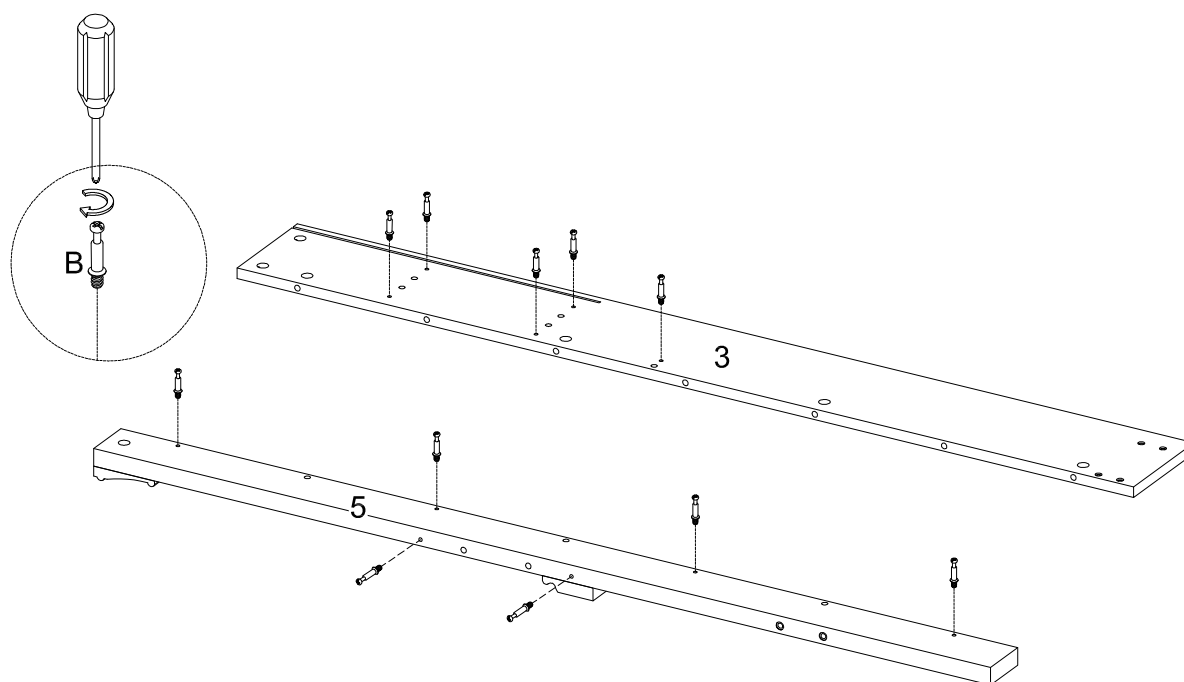


Step 11

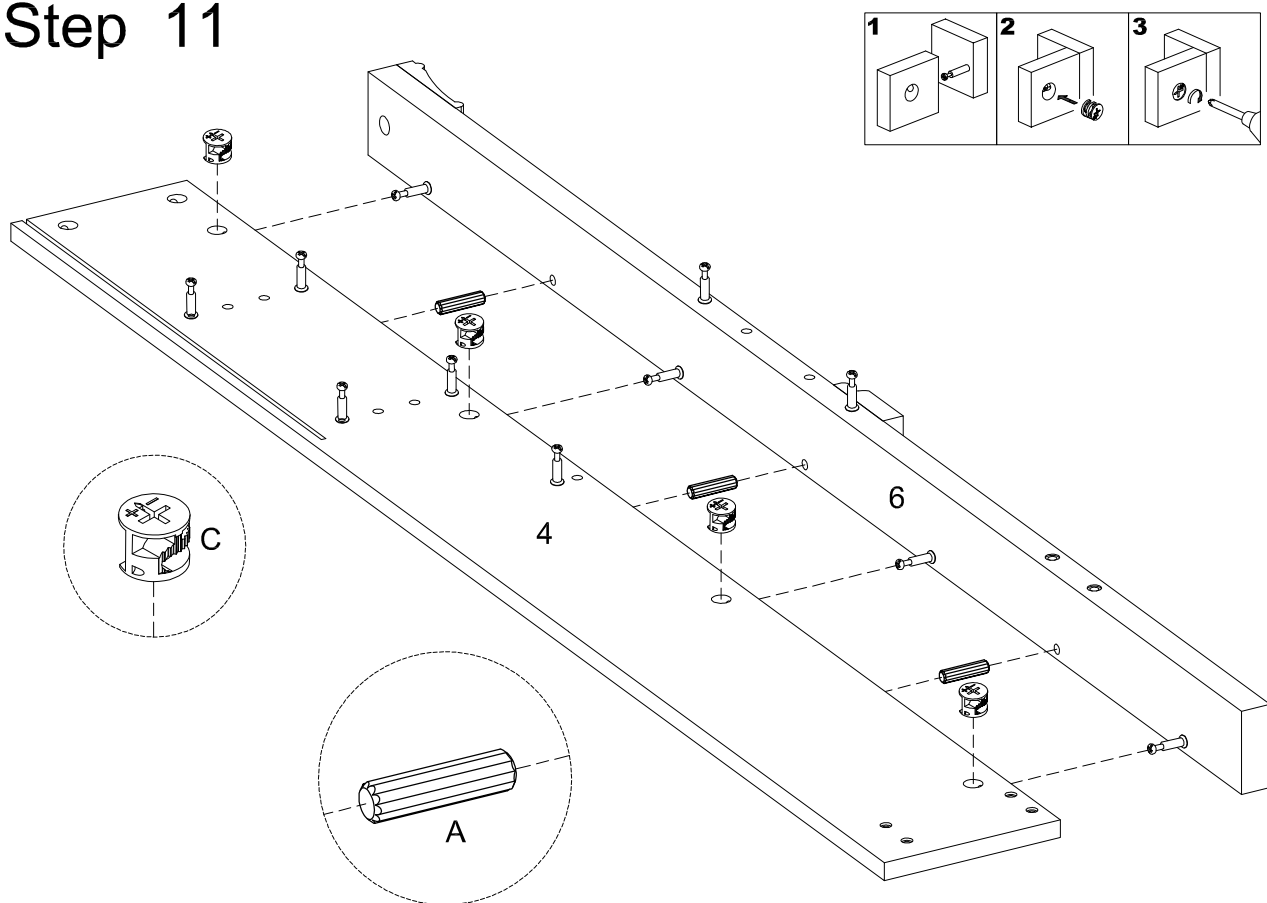


Step 12

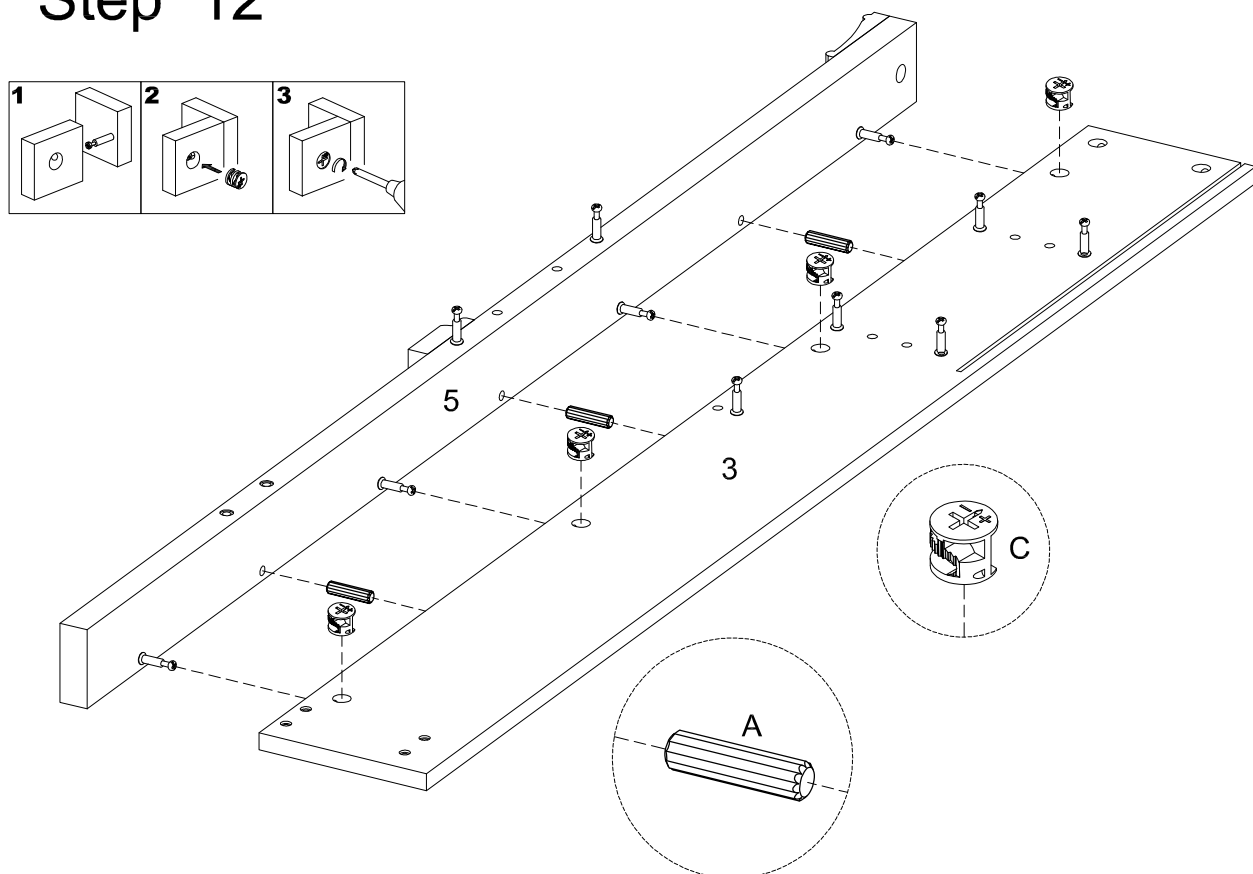


Step 13

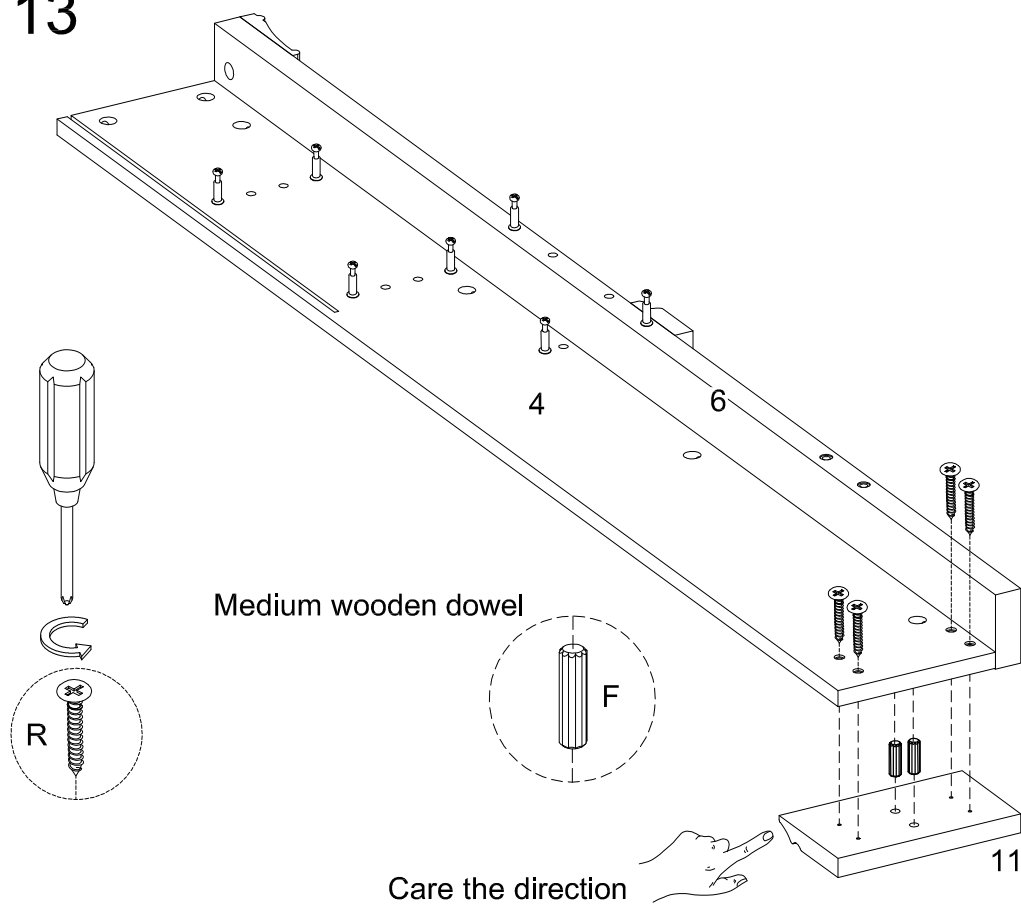


Step 14

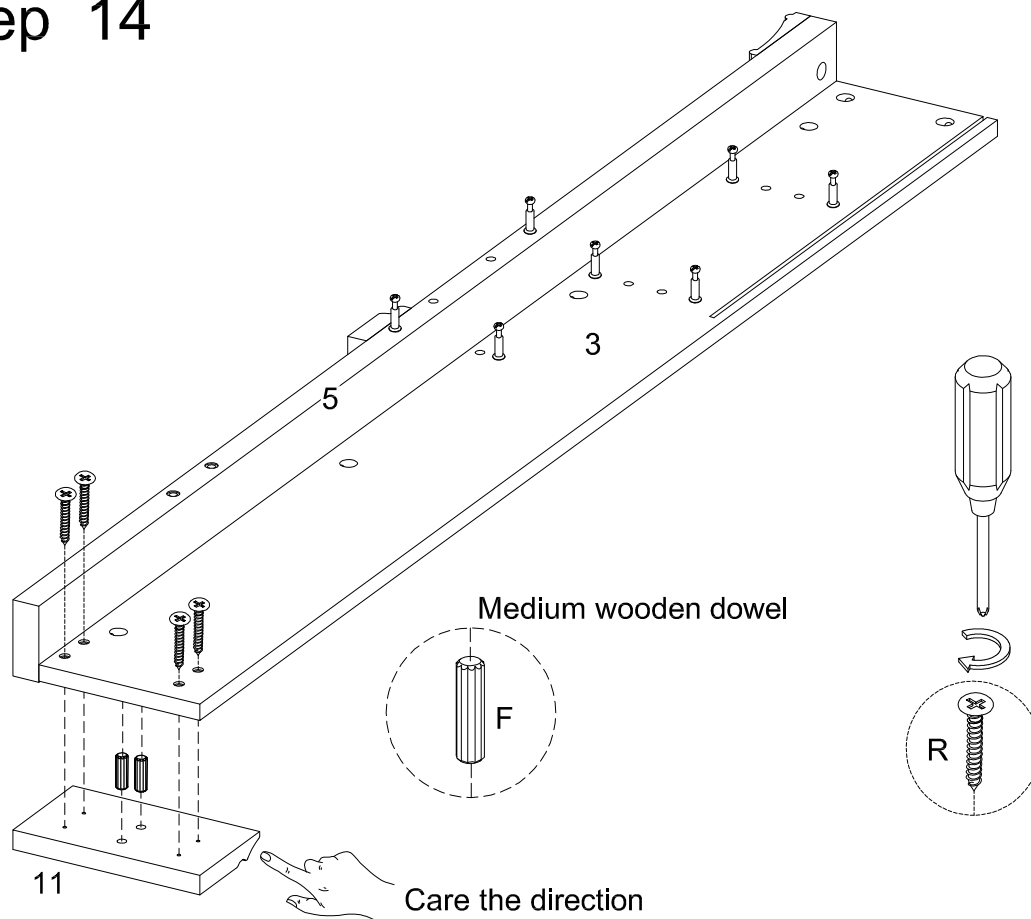


Step 15

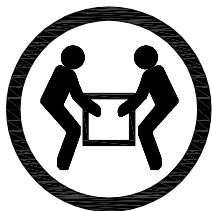


CAUTION: Heavy! You may need assistance with this step.

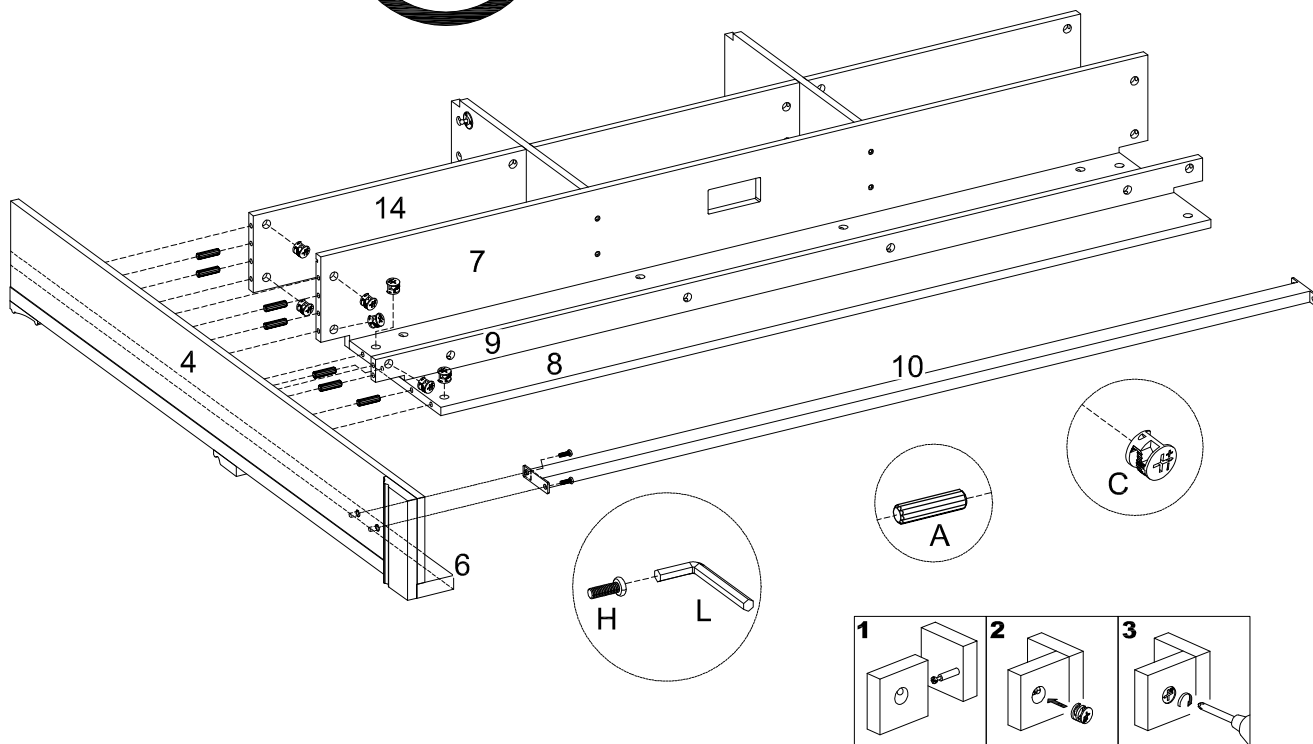


Step 16

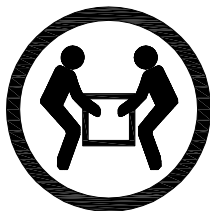


CAUTION: Heavy! You may need assistance with this step.

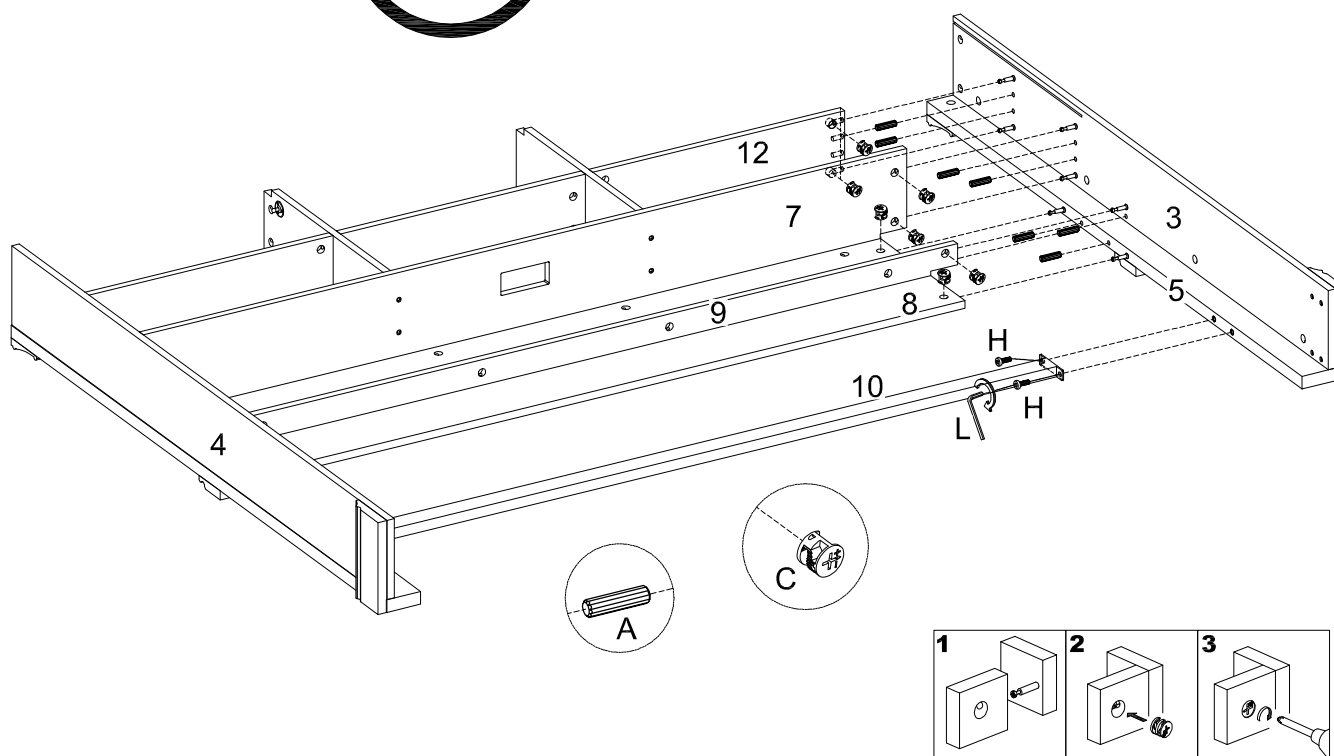



Step 17

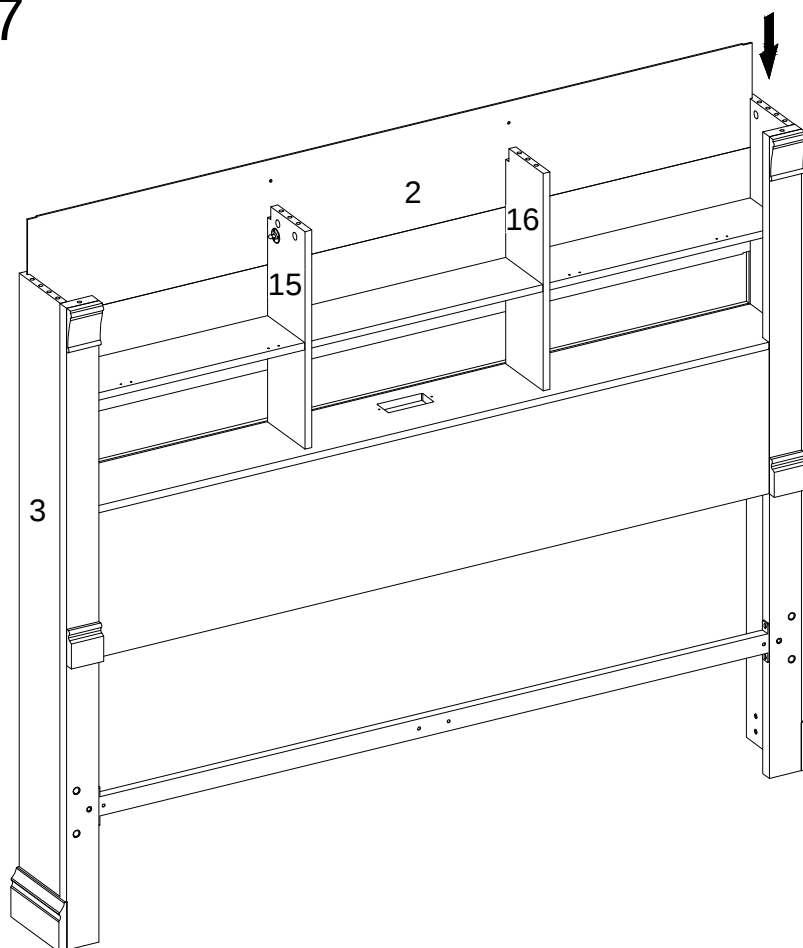


Step 18

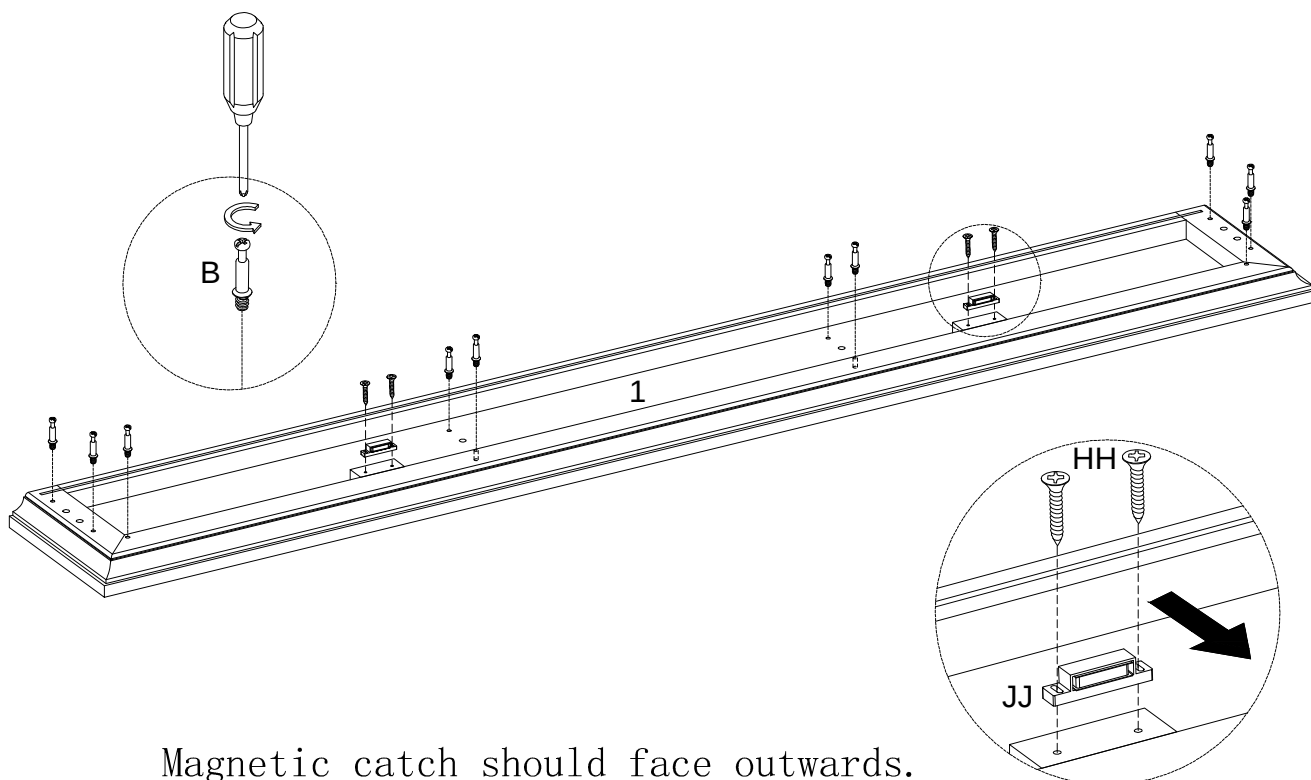


Step 19

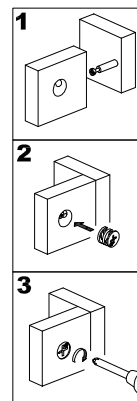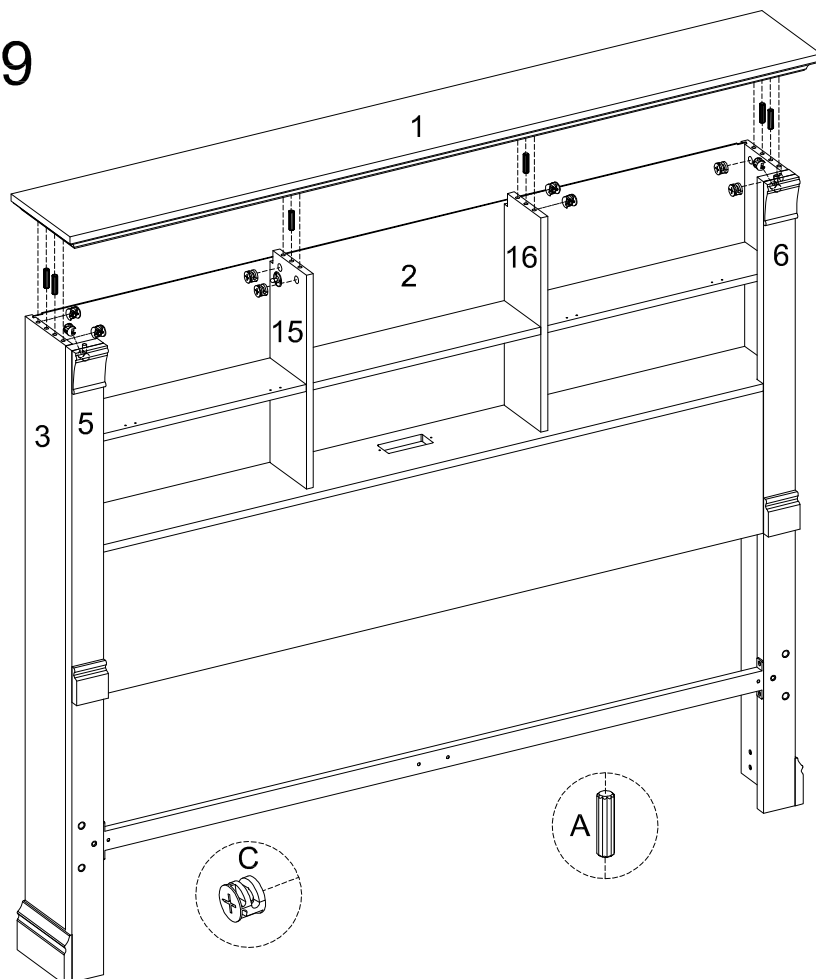


Step 20

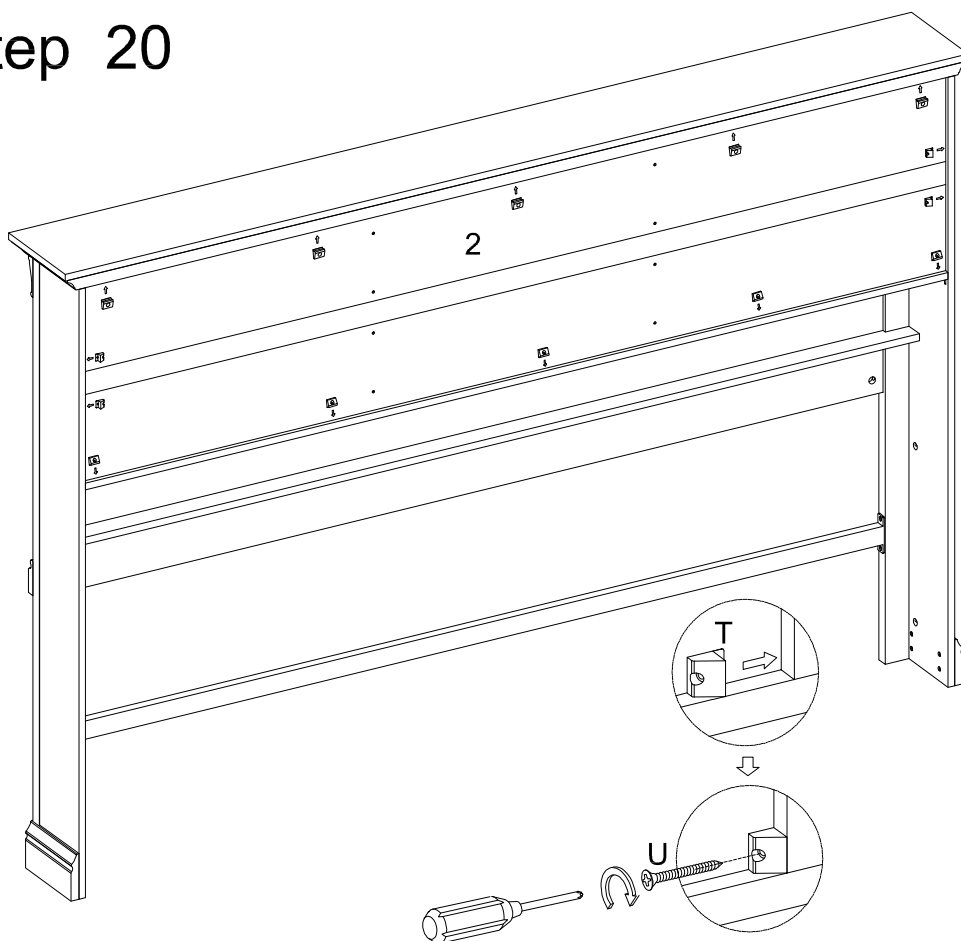


Step 21

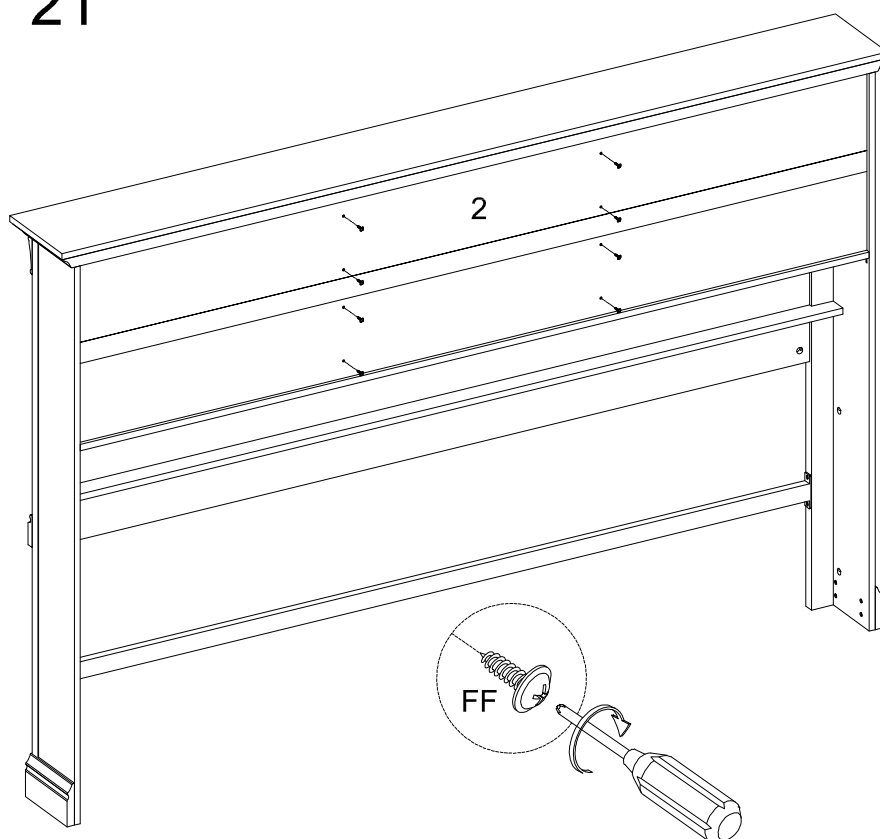


Step 22

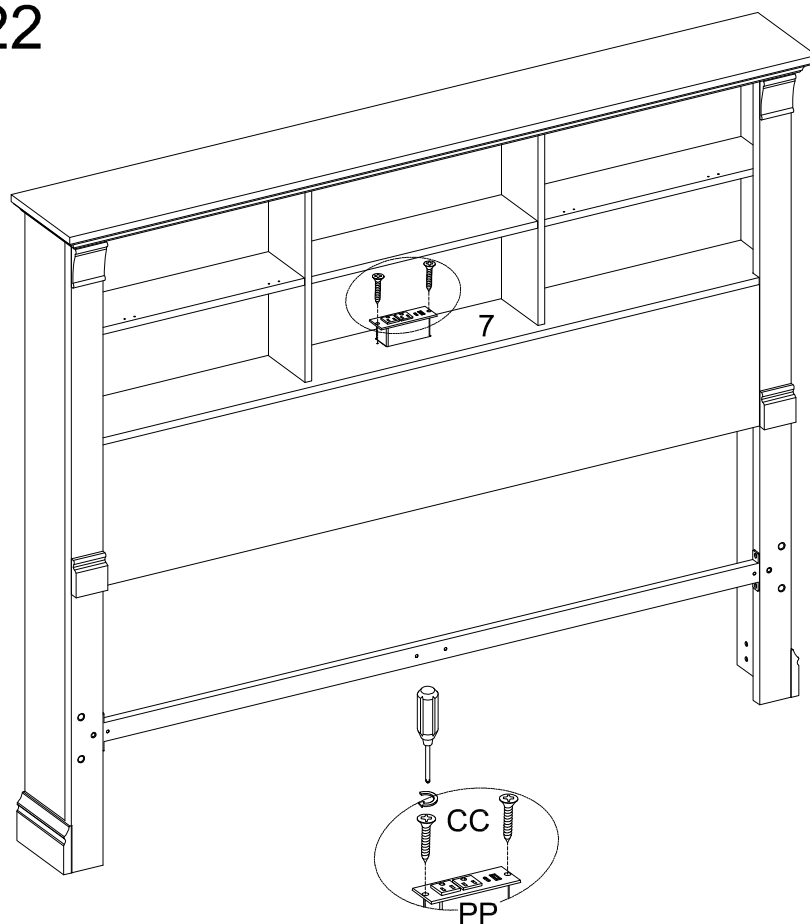


Step 23

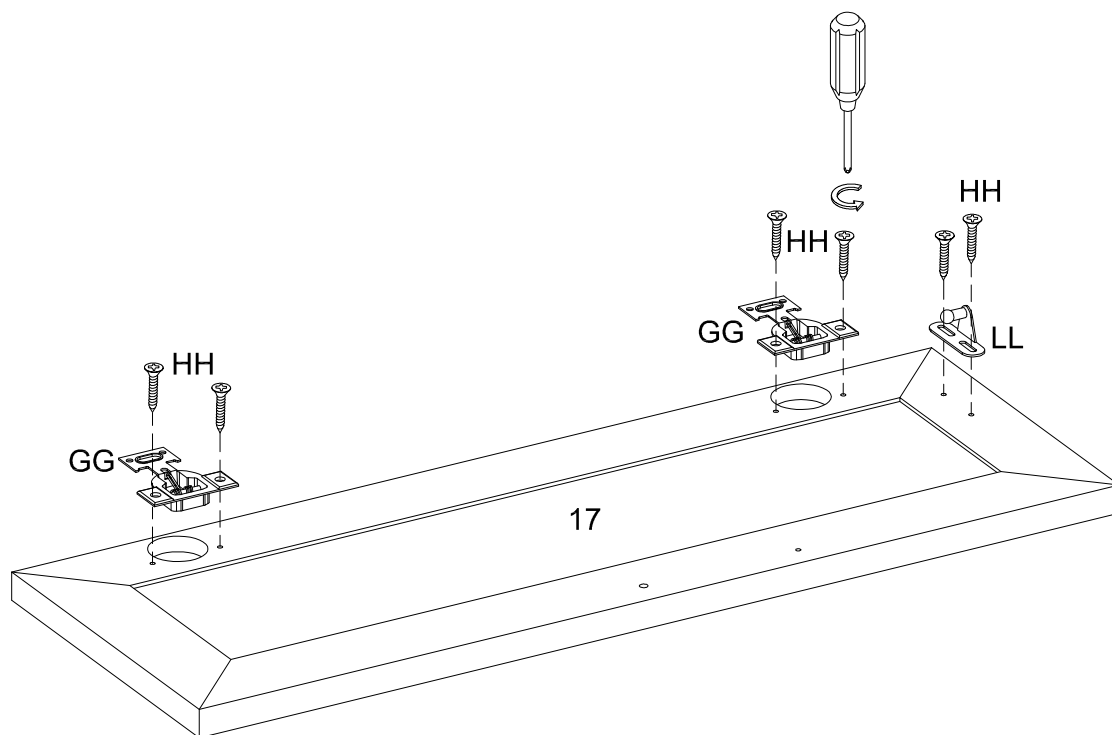


Step 24

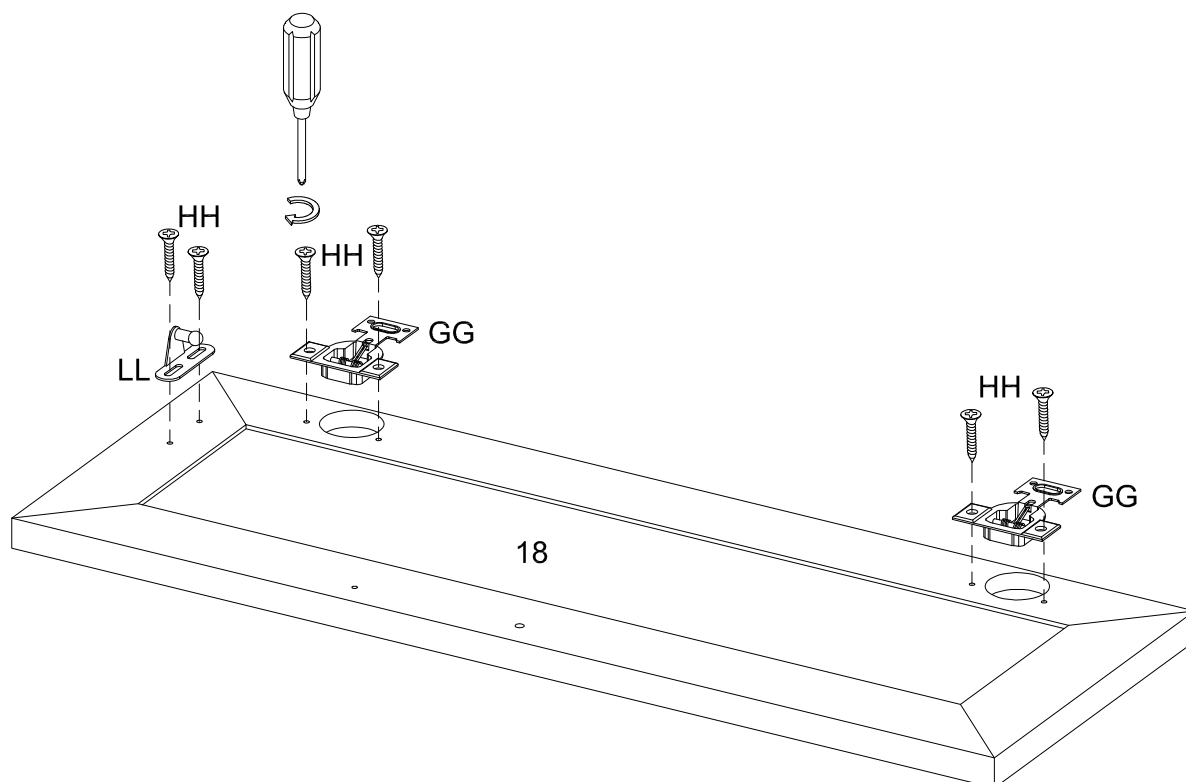


Step 25

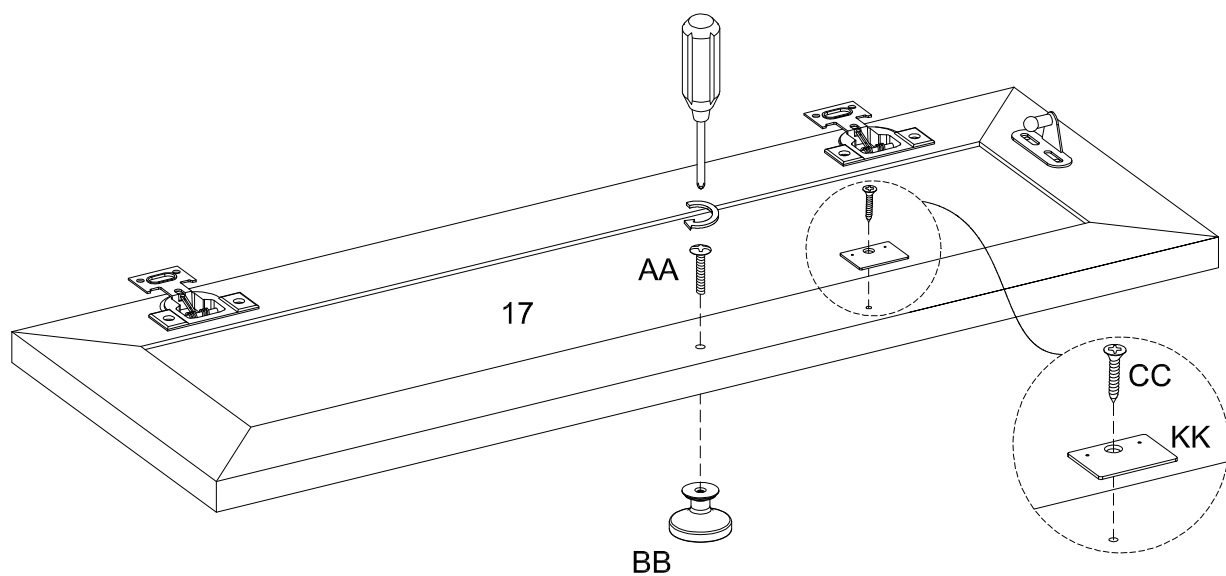



Step 26

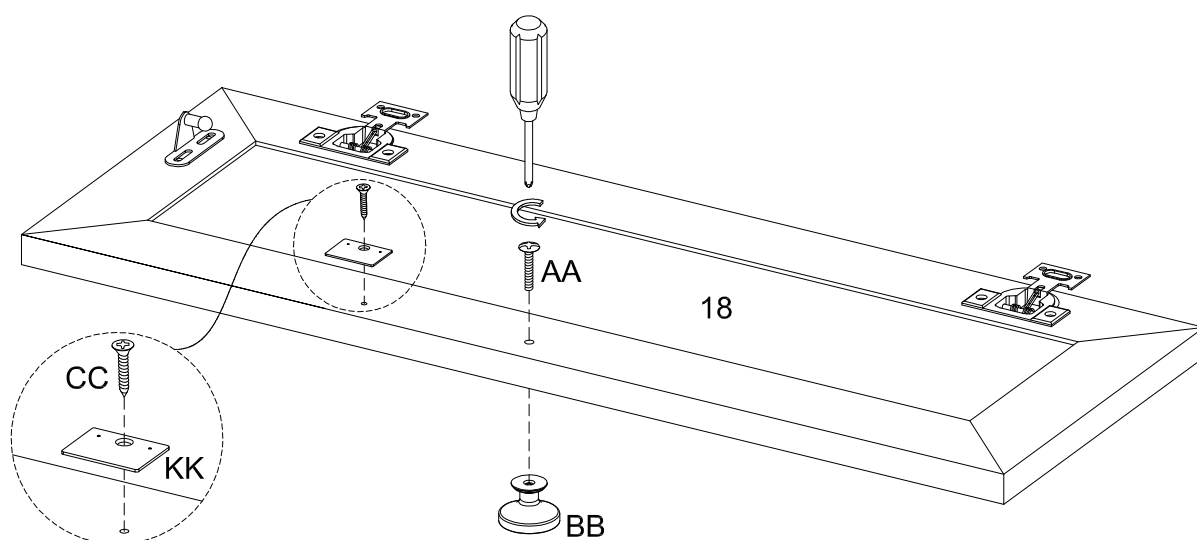


Step 27

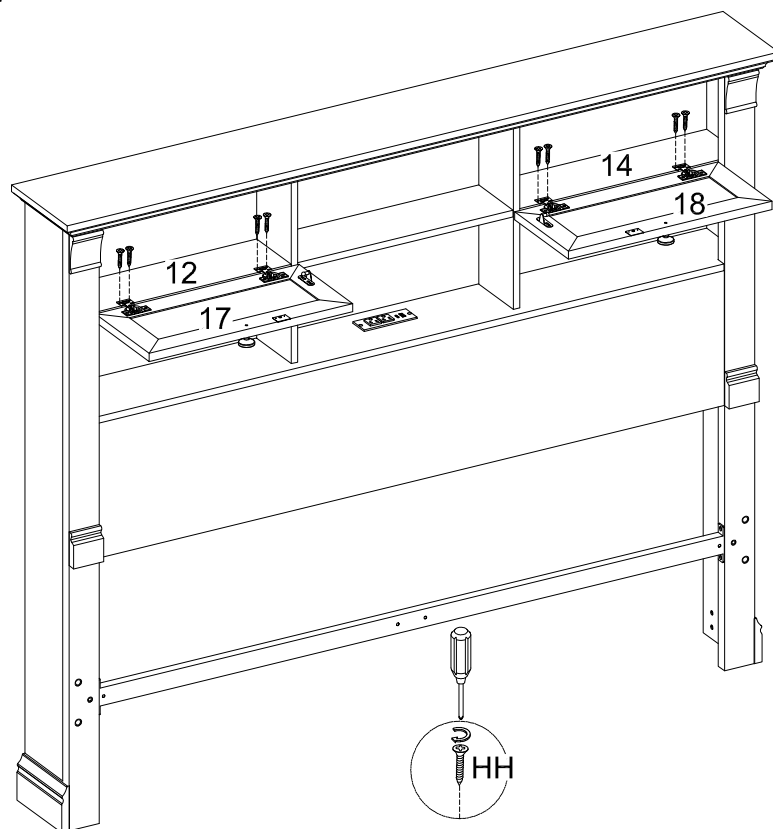


Step 28

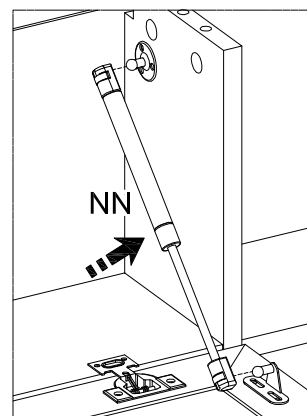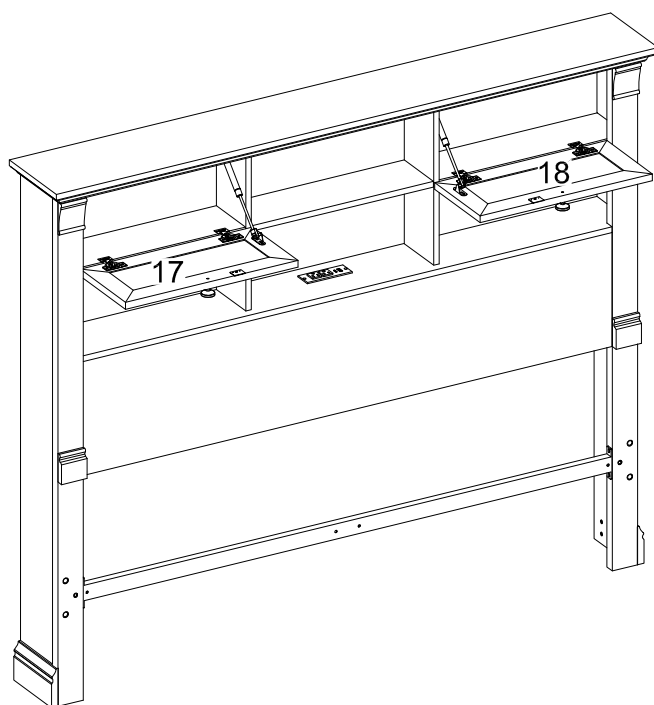


Step 29

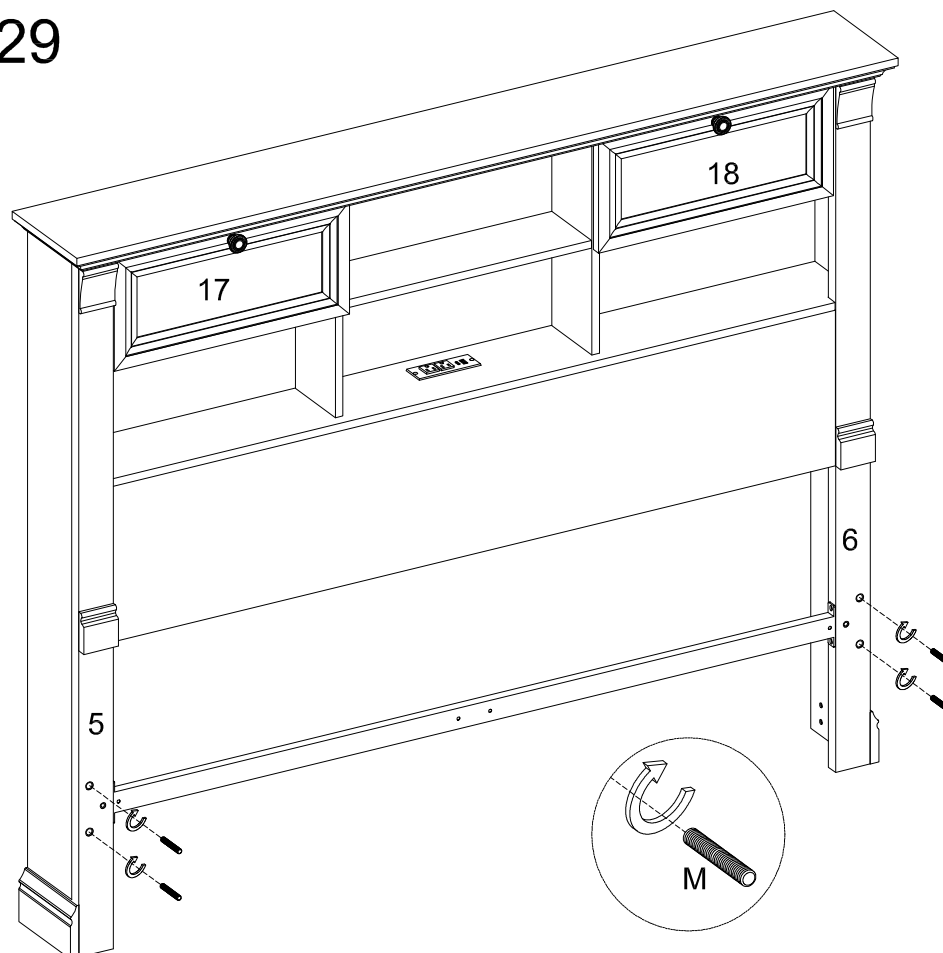


Step 30

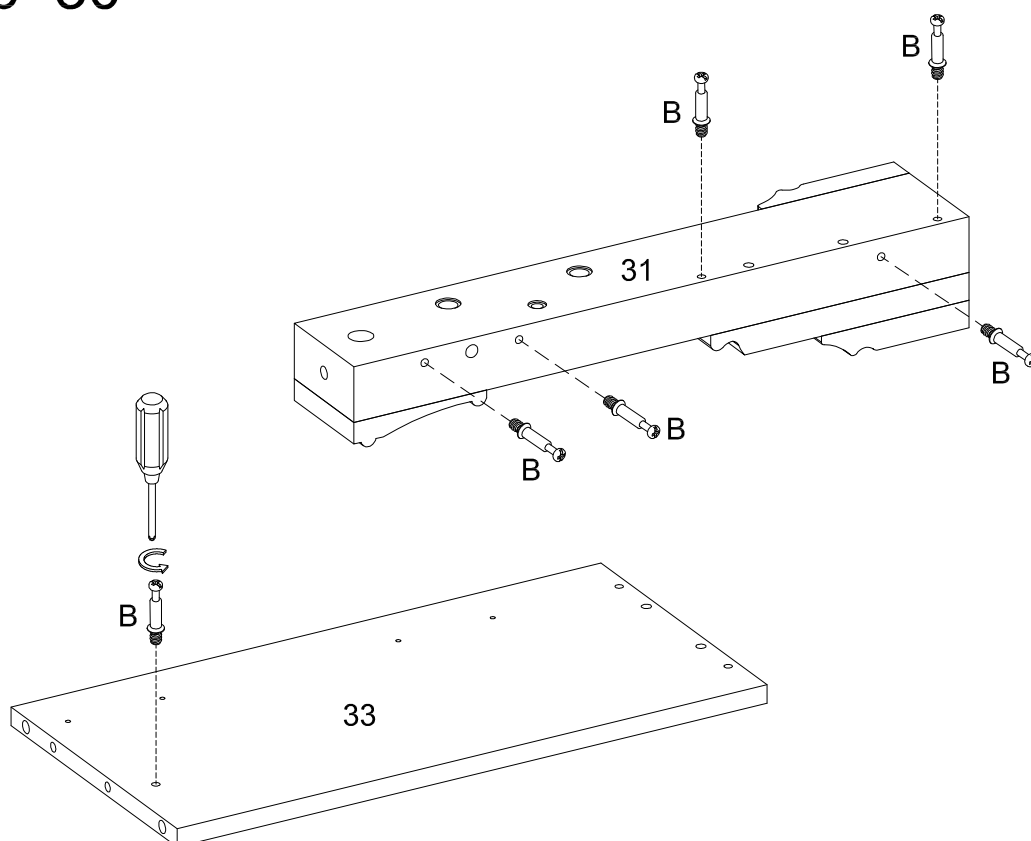


Step 31

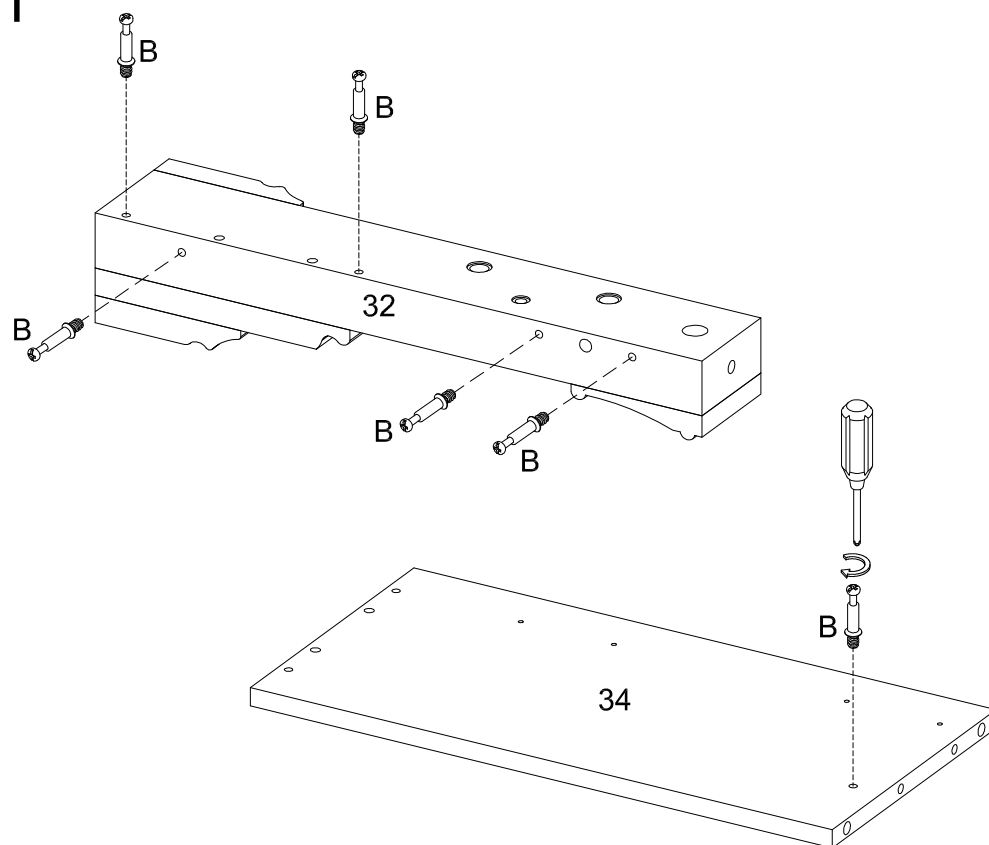


Step 32

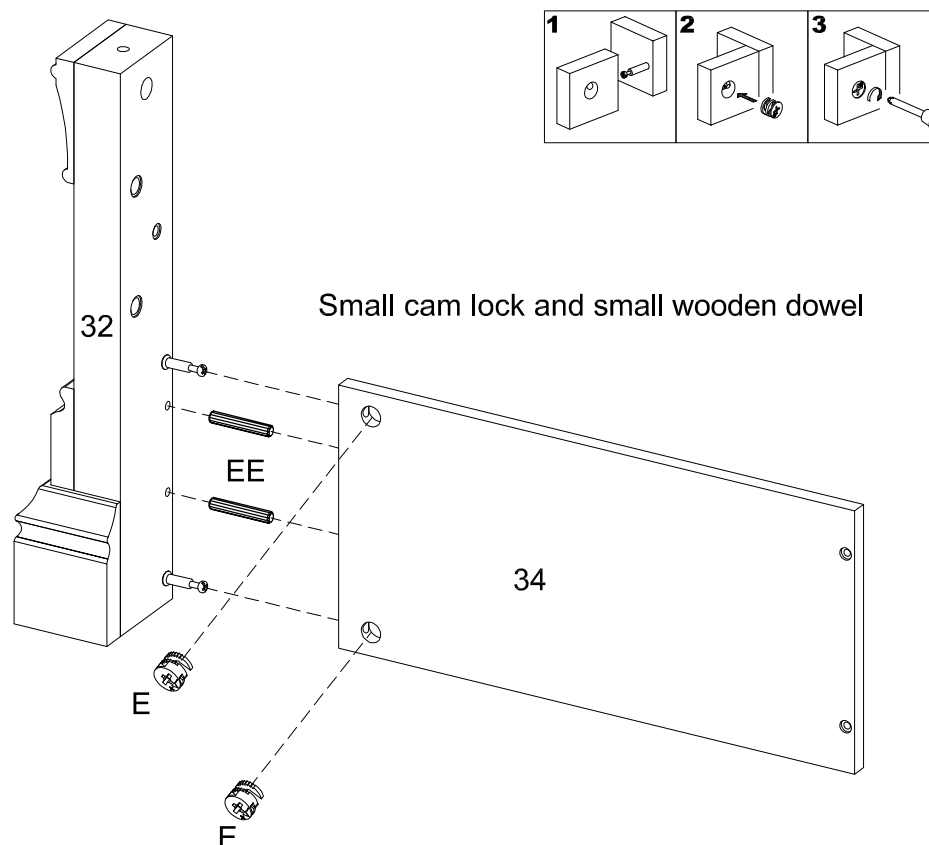


Step 33

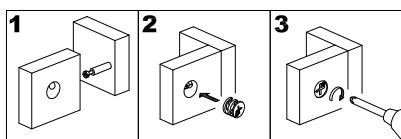


Small cam lock and small wooden dowel

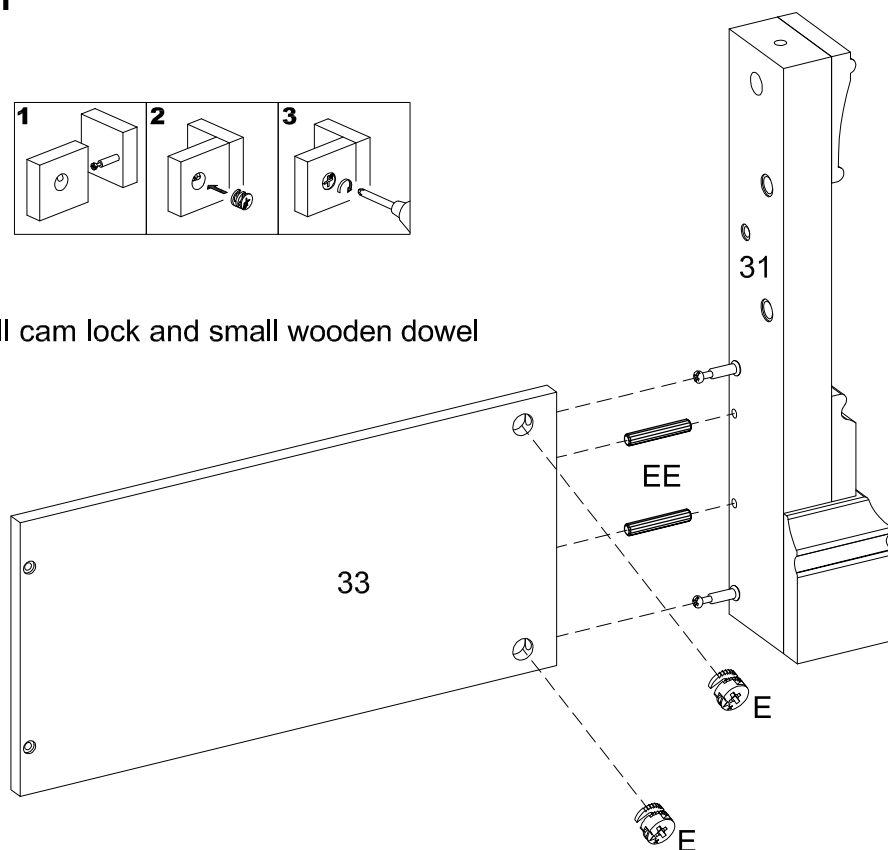


Step 34

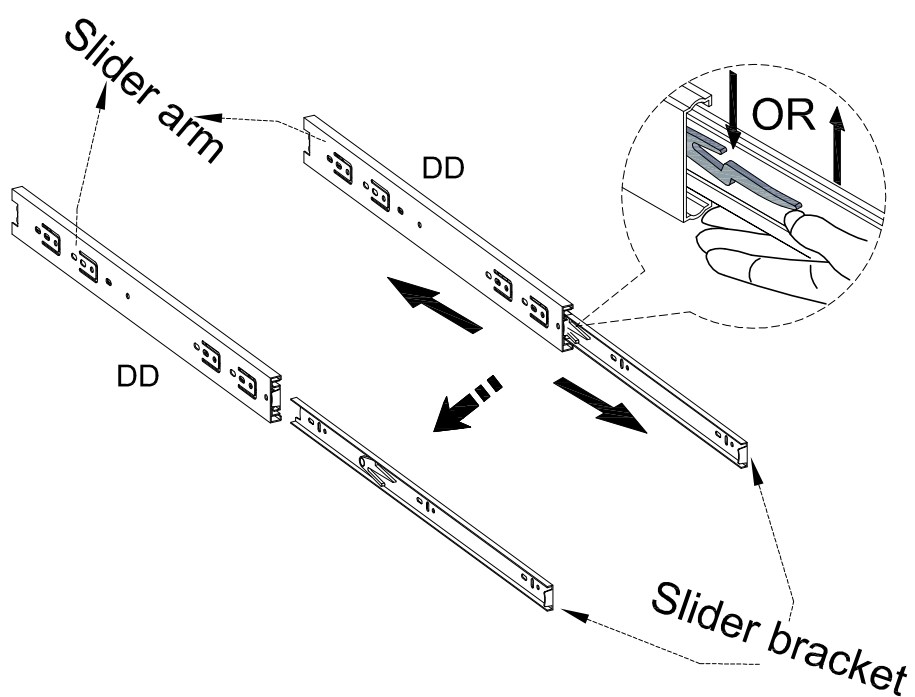



Step 35

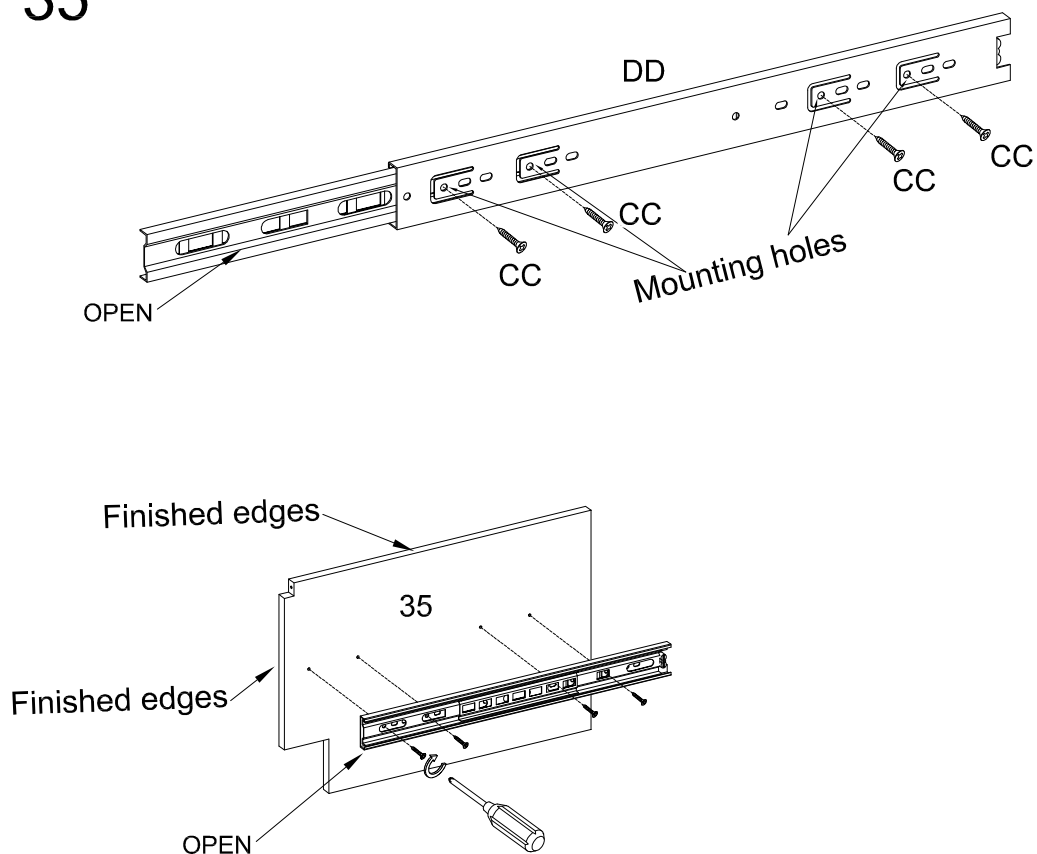



Step 36

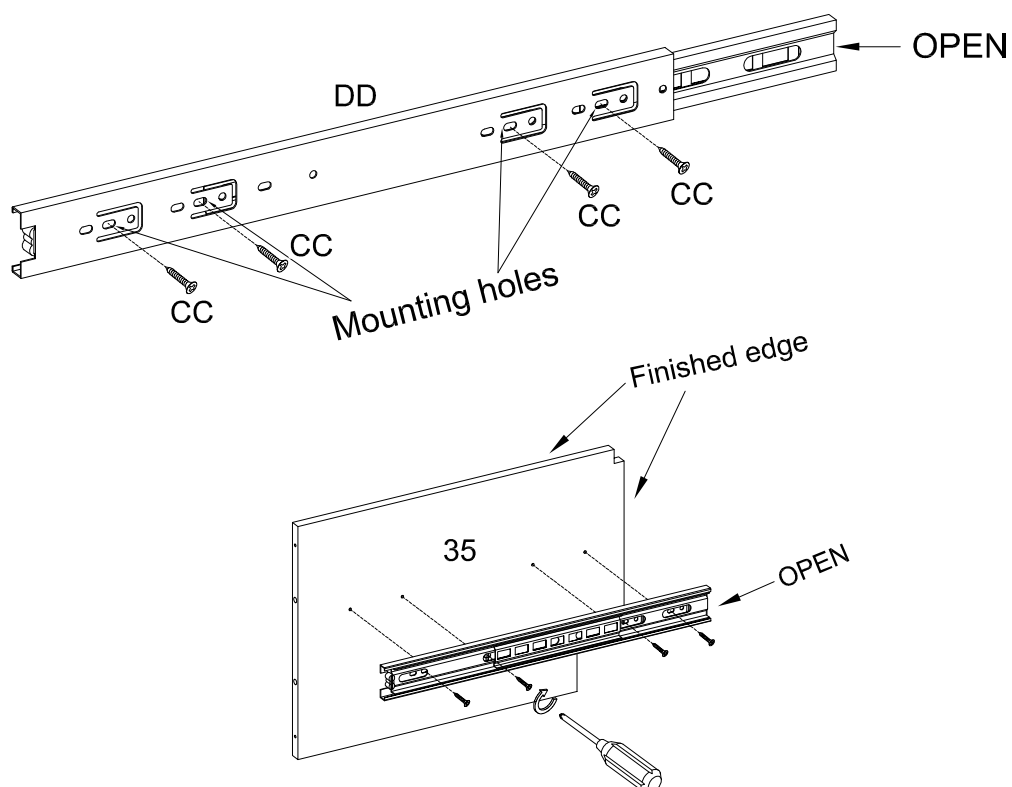


Step 37

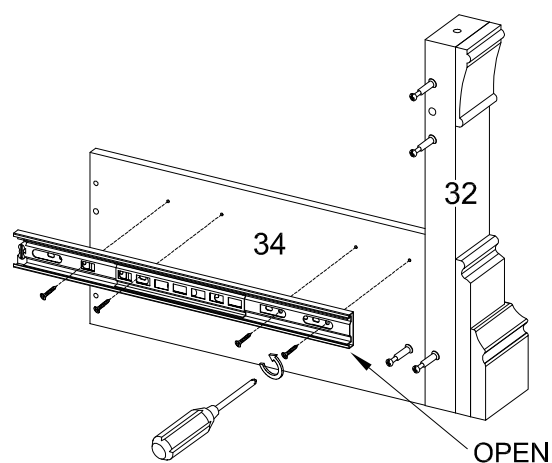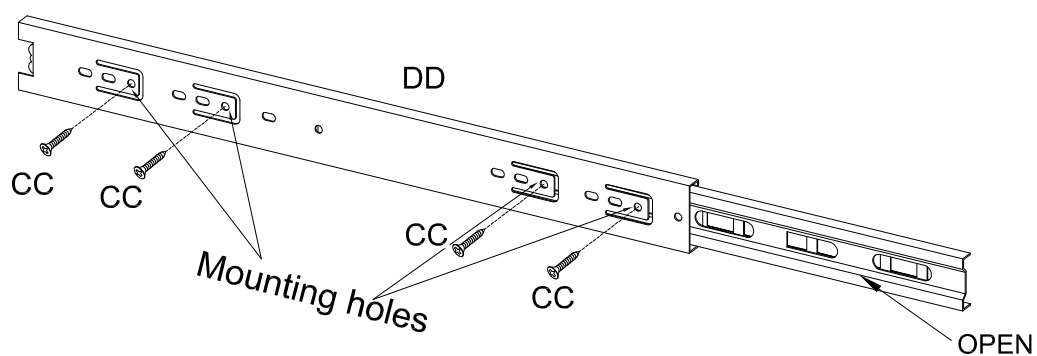


Step 38

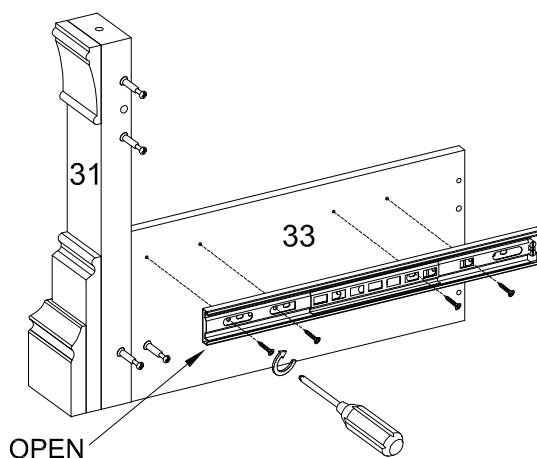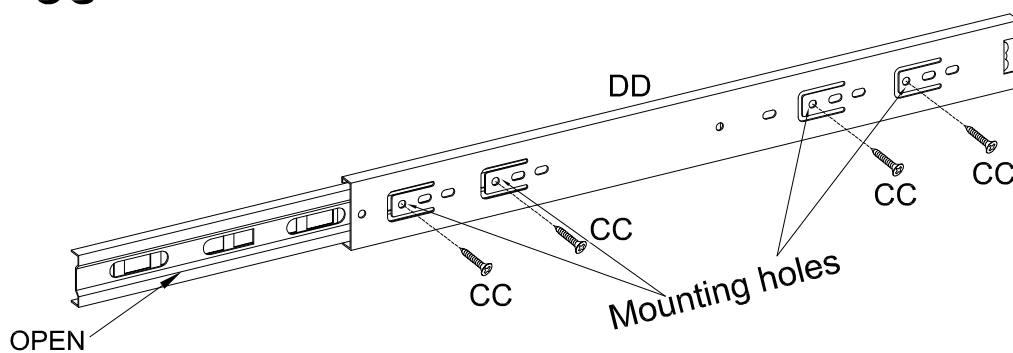


Step 39

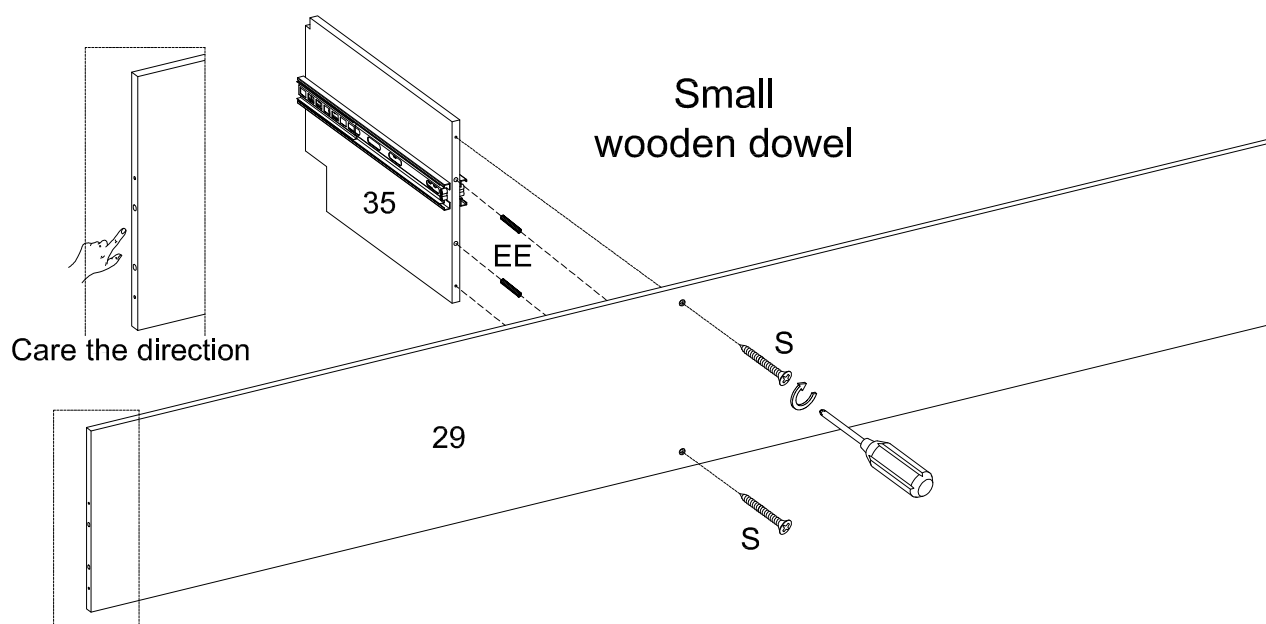


Step 40

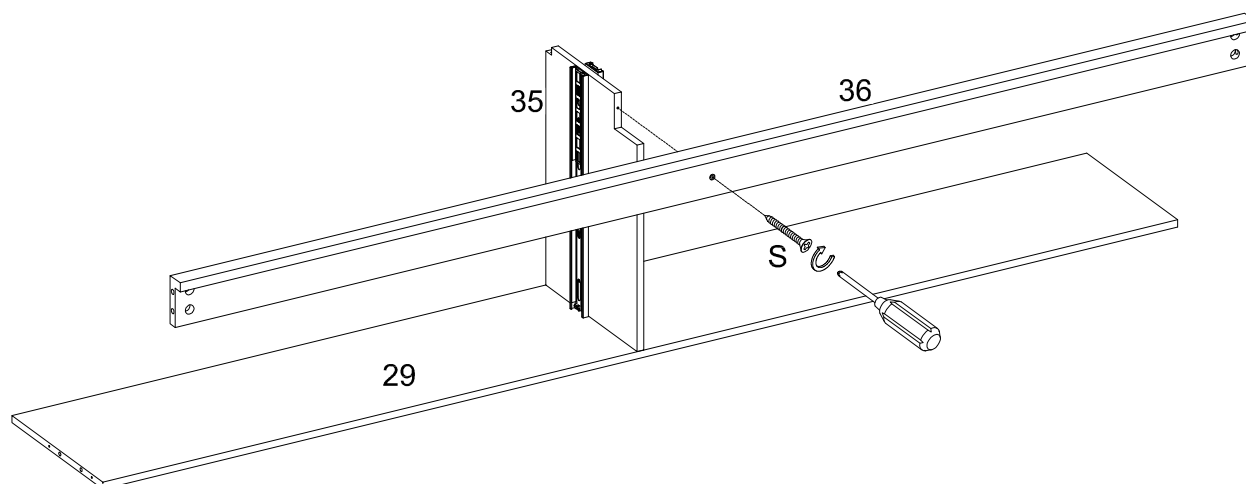

Step 41


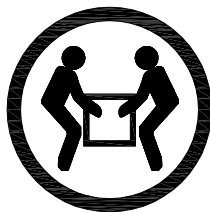


CAUTION: Heavy! You may need assistance with this step.

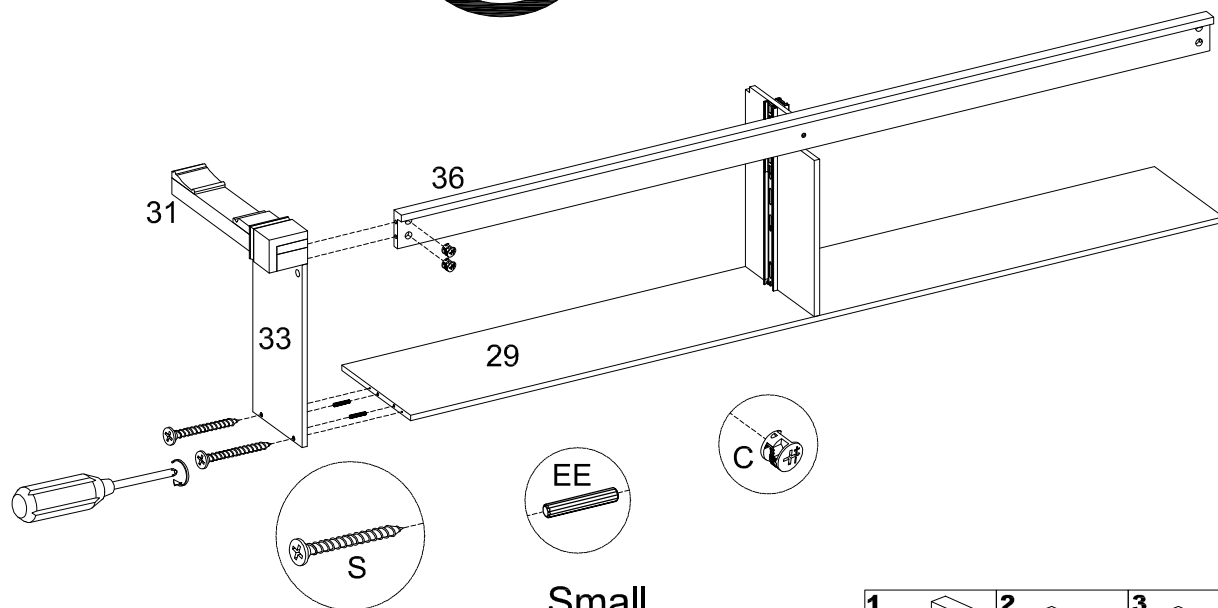


Small
wooden dowel



Step 42

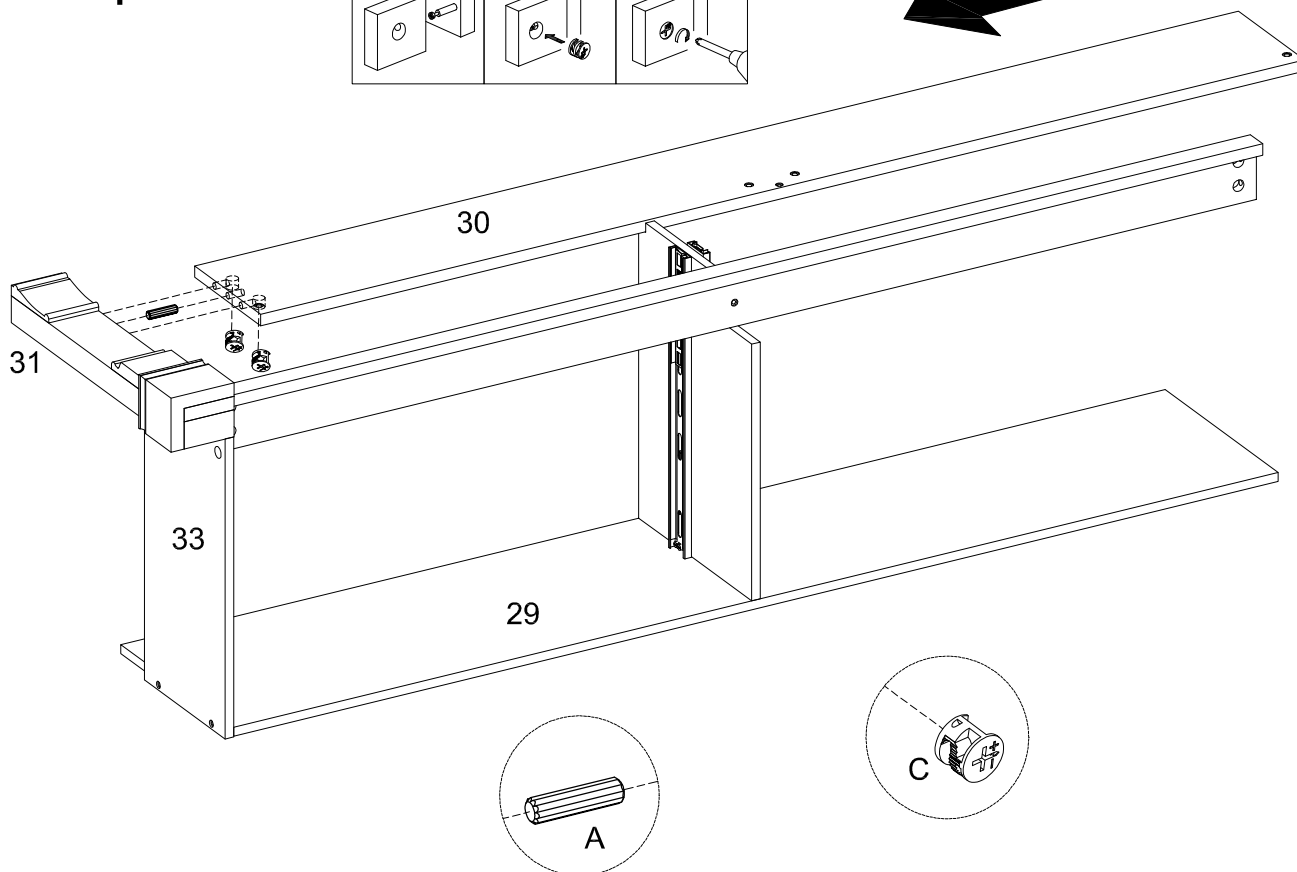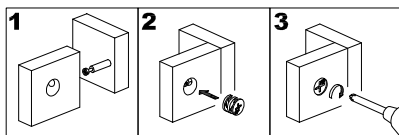


Step 43

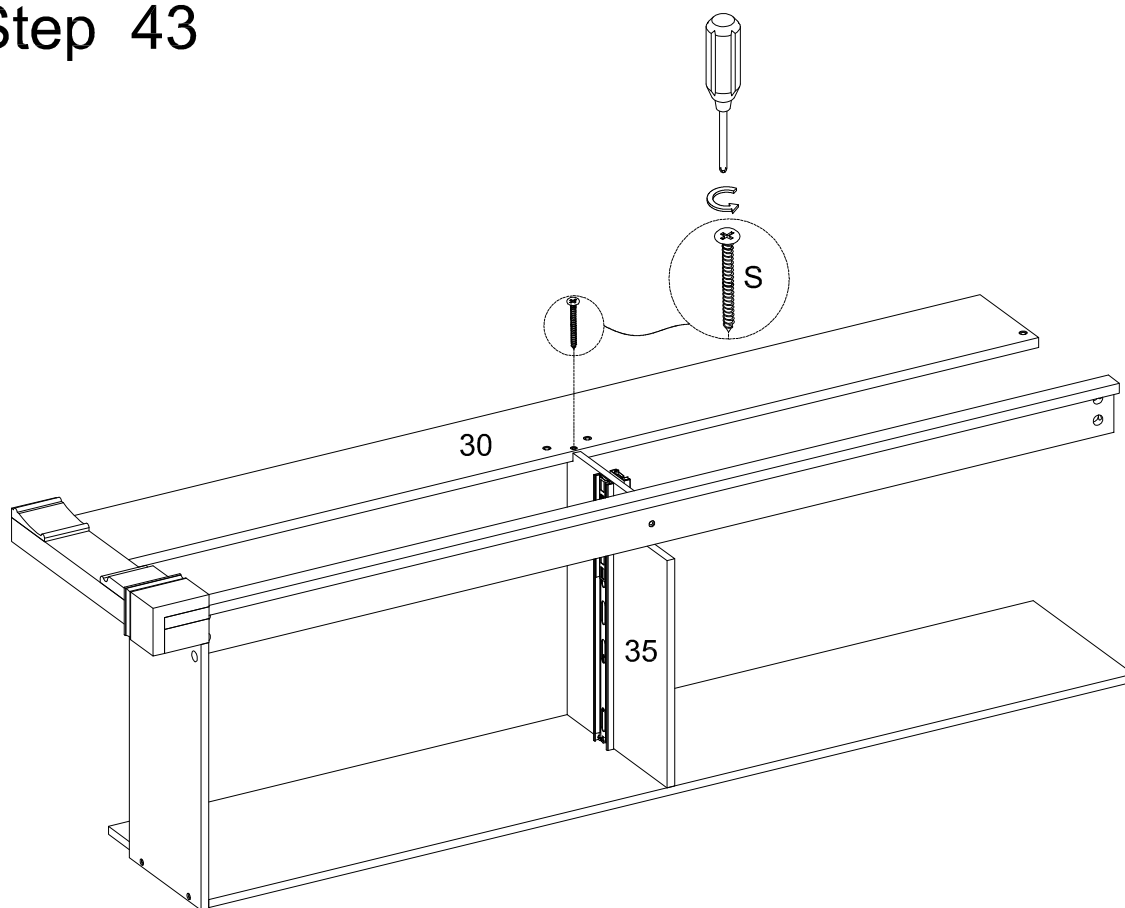



Step 44

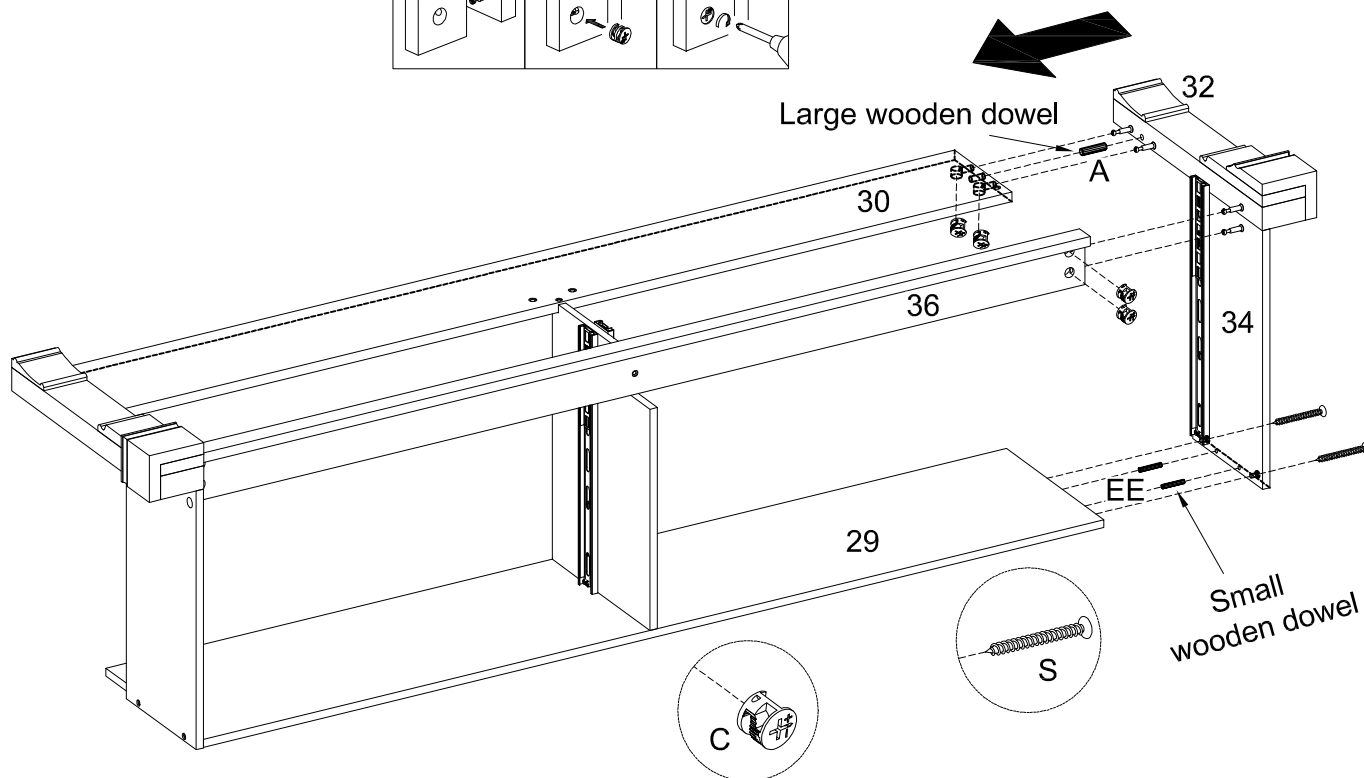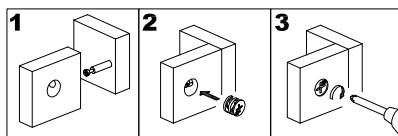


Step 45

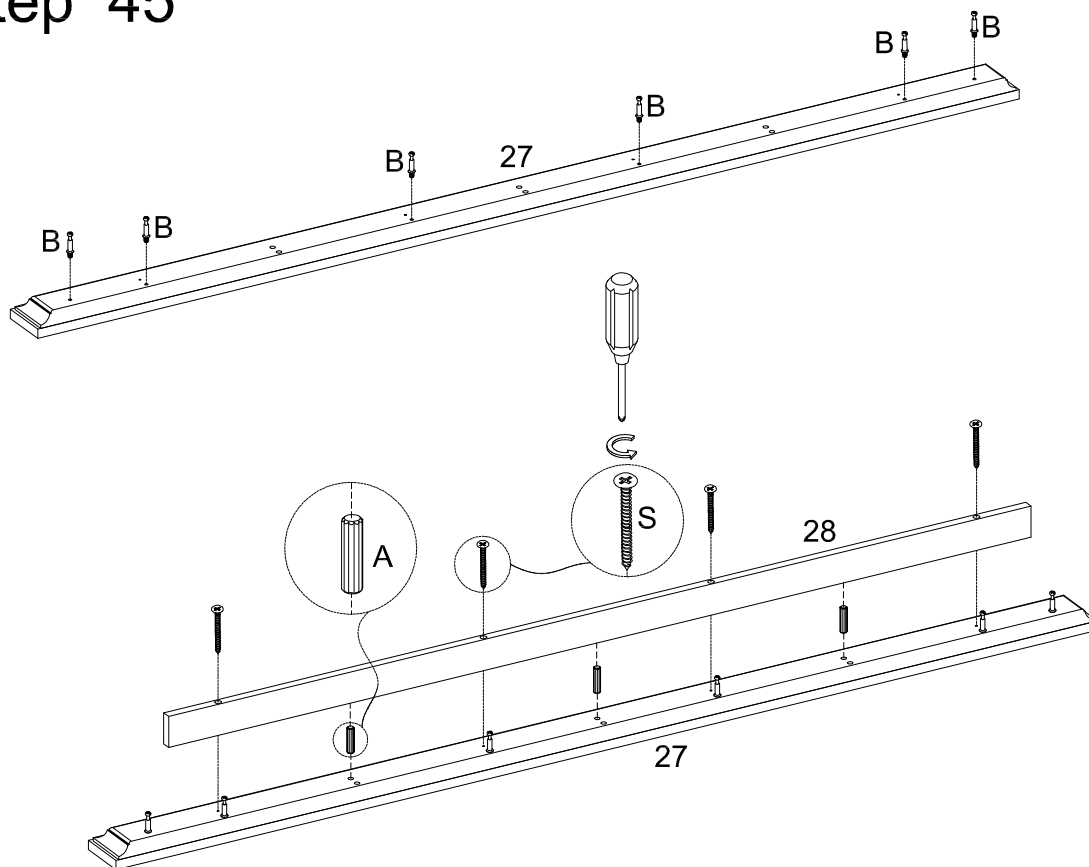


Step 46

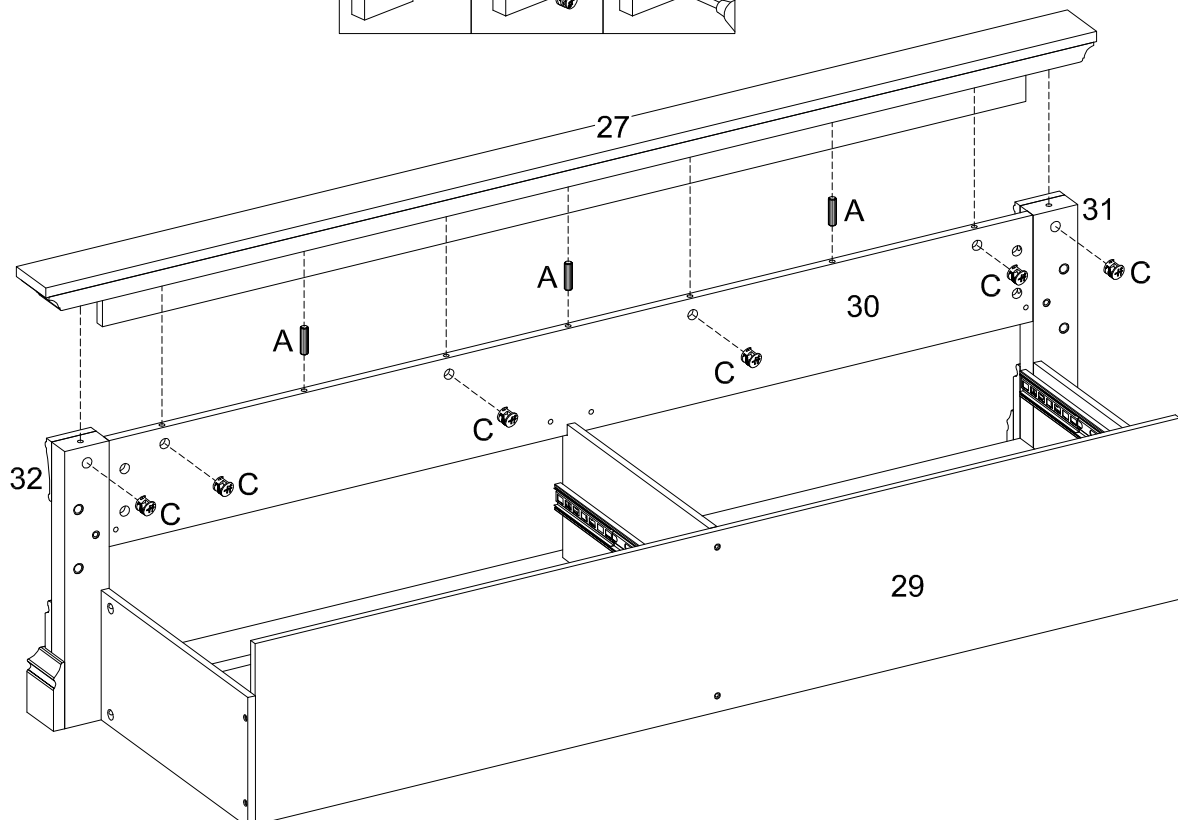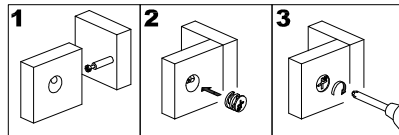


Step 47

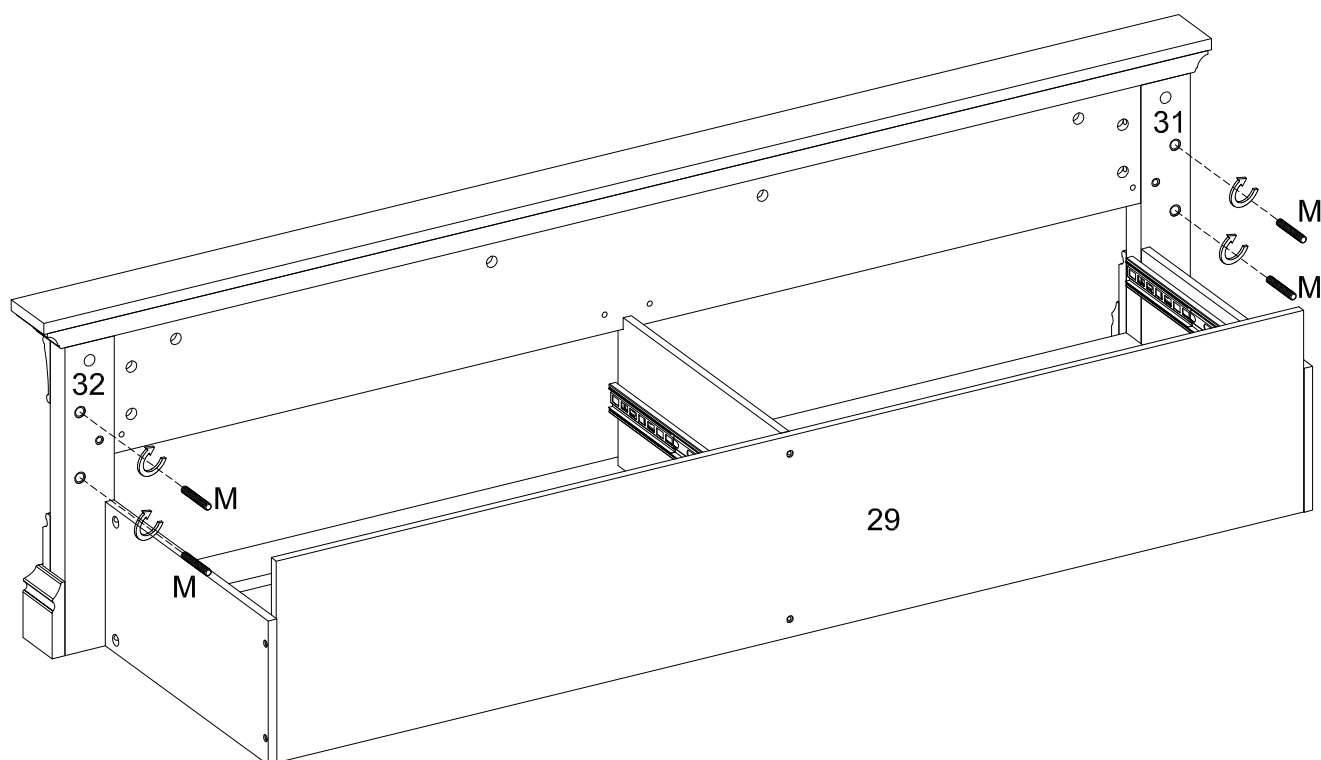


Step 48

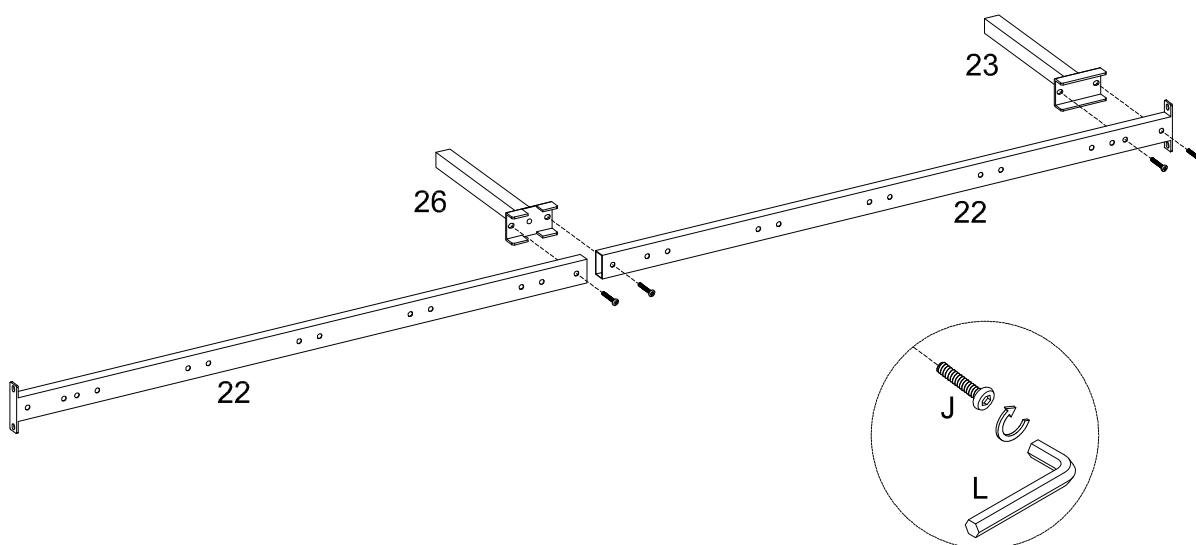

Step 49

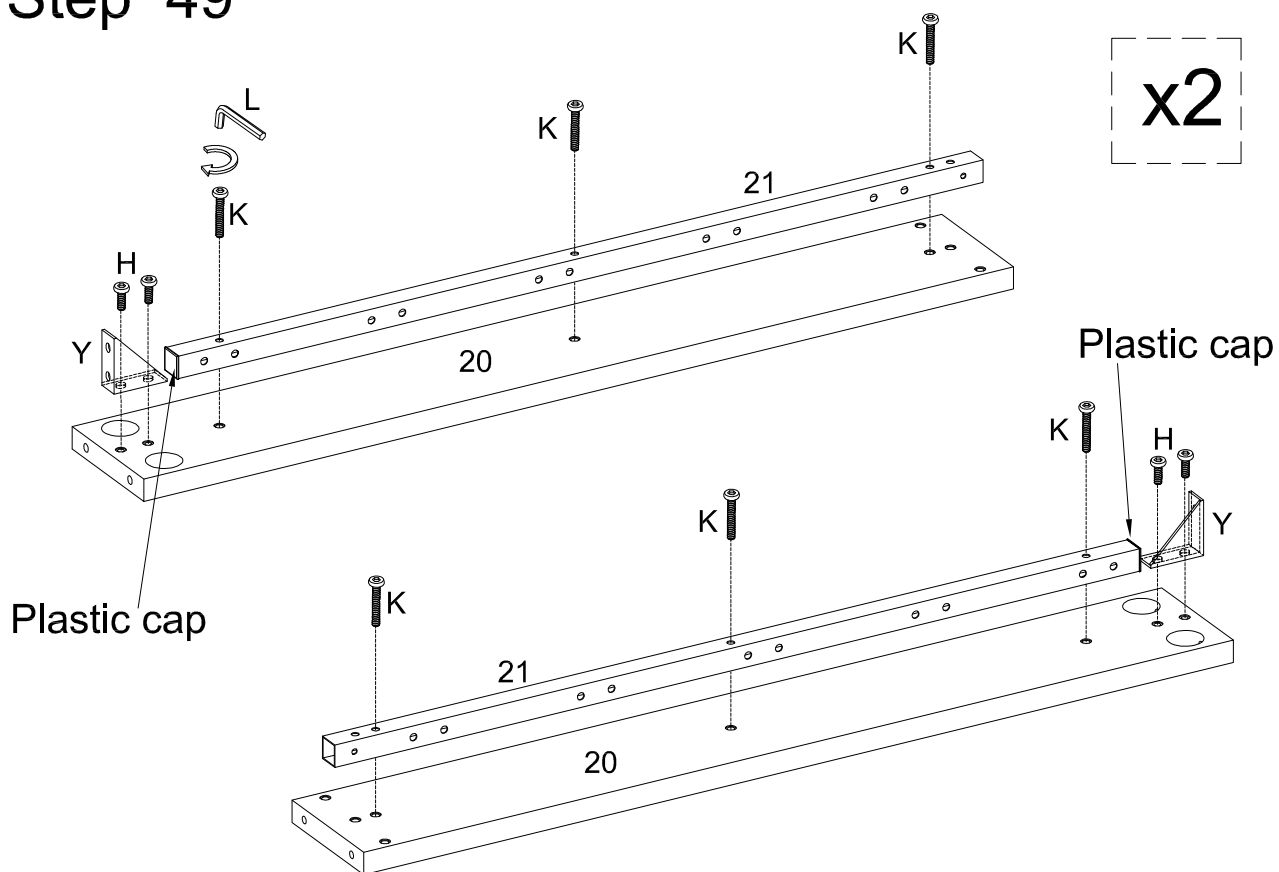


Step 50

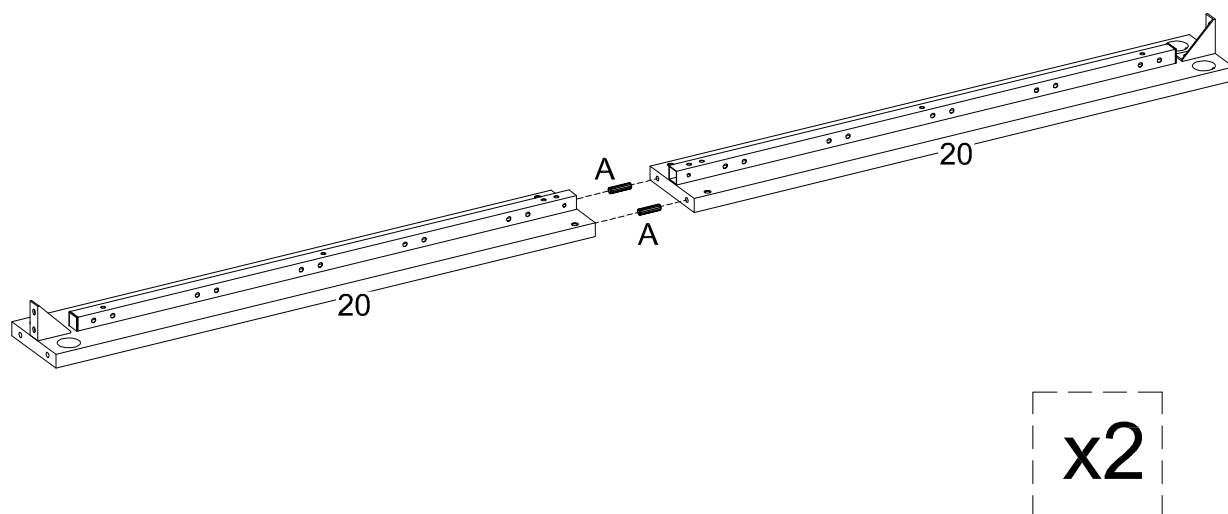


Step 51

x2


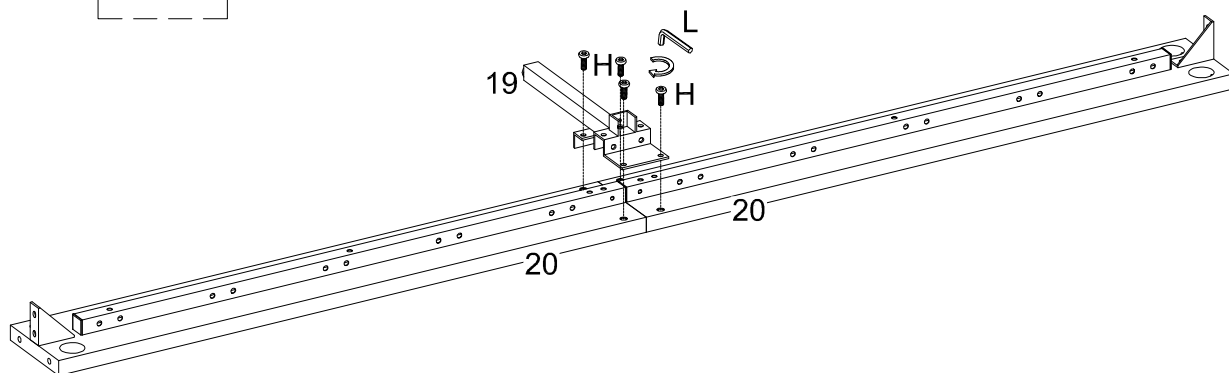


Step 52

x2

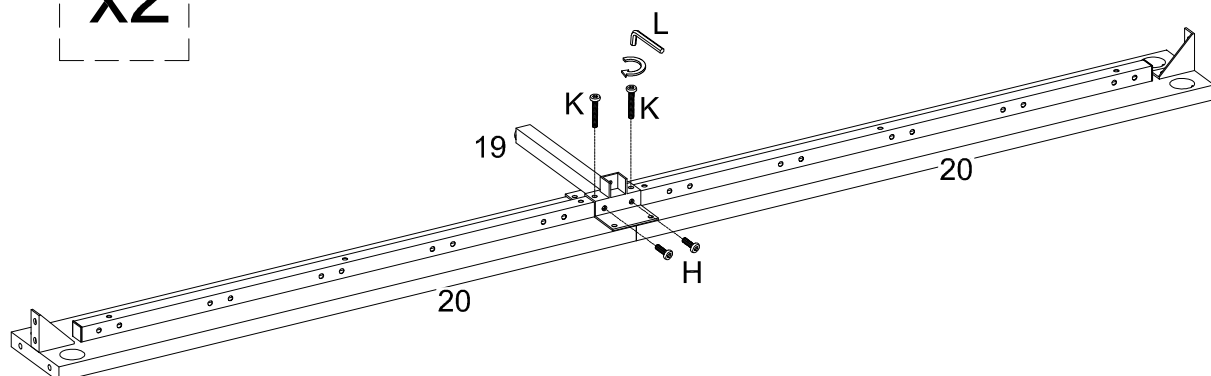


Step 53

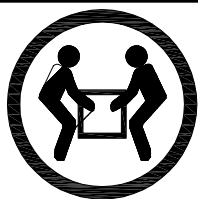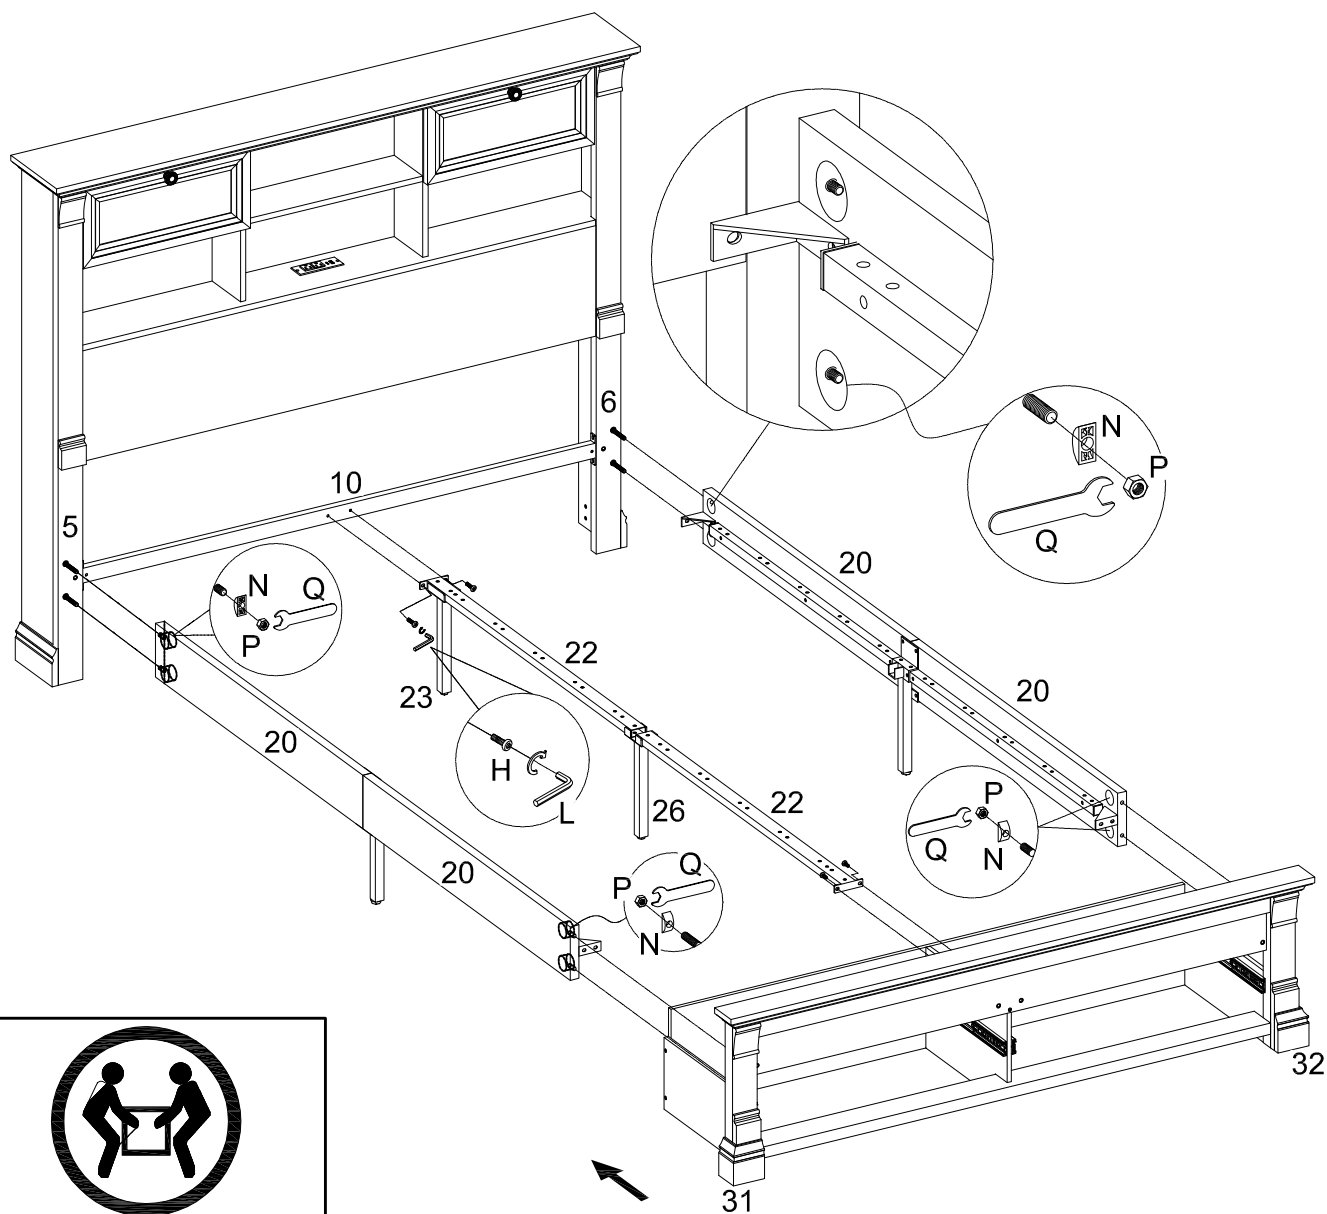


CAUTION: Heavy! You may need assistance with this step.


Step 54

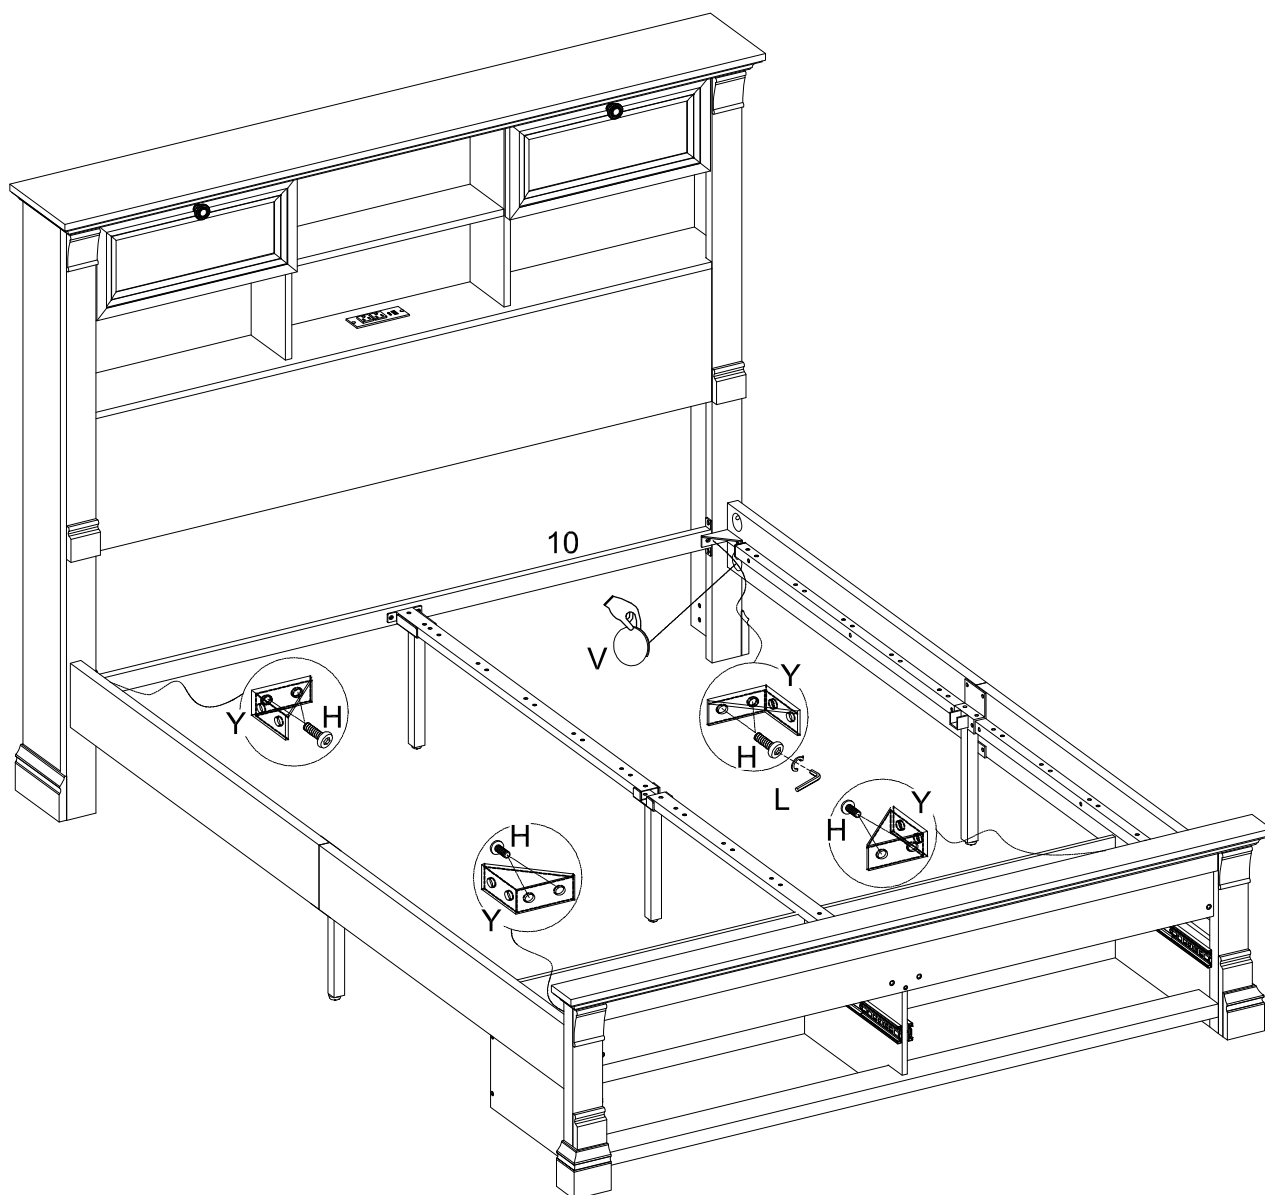


Step 55

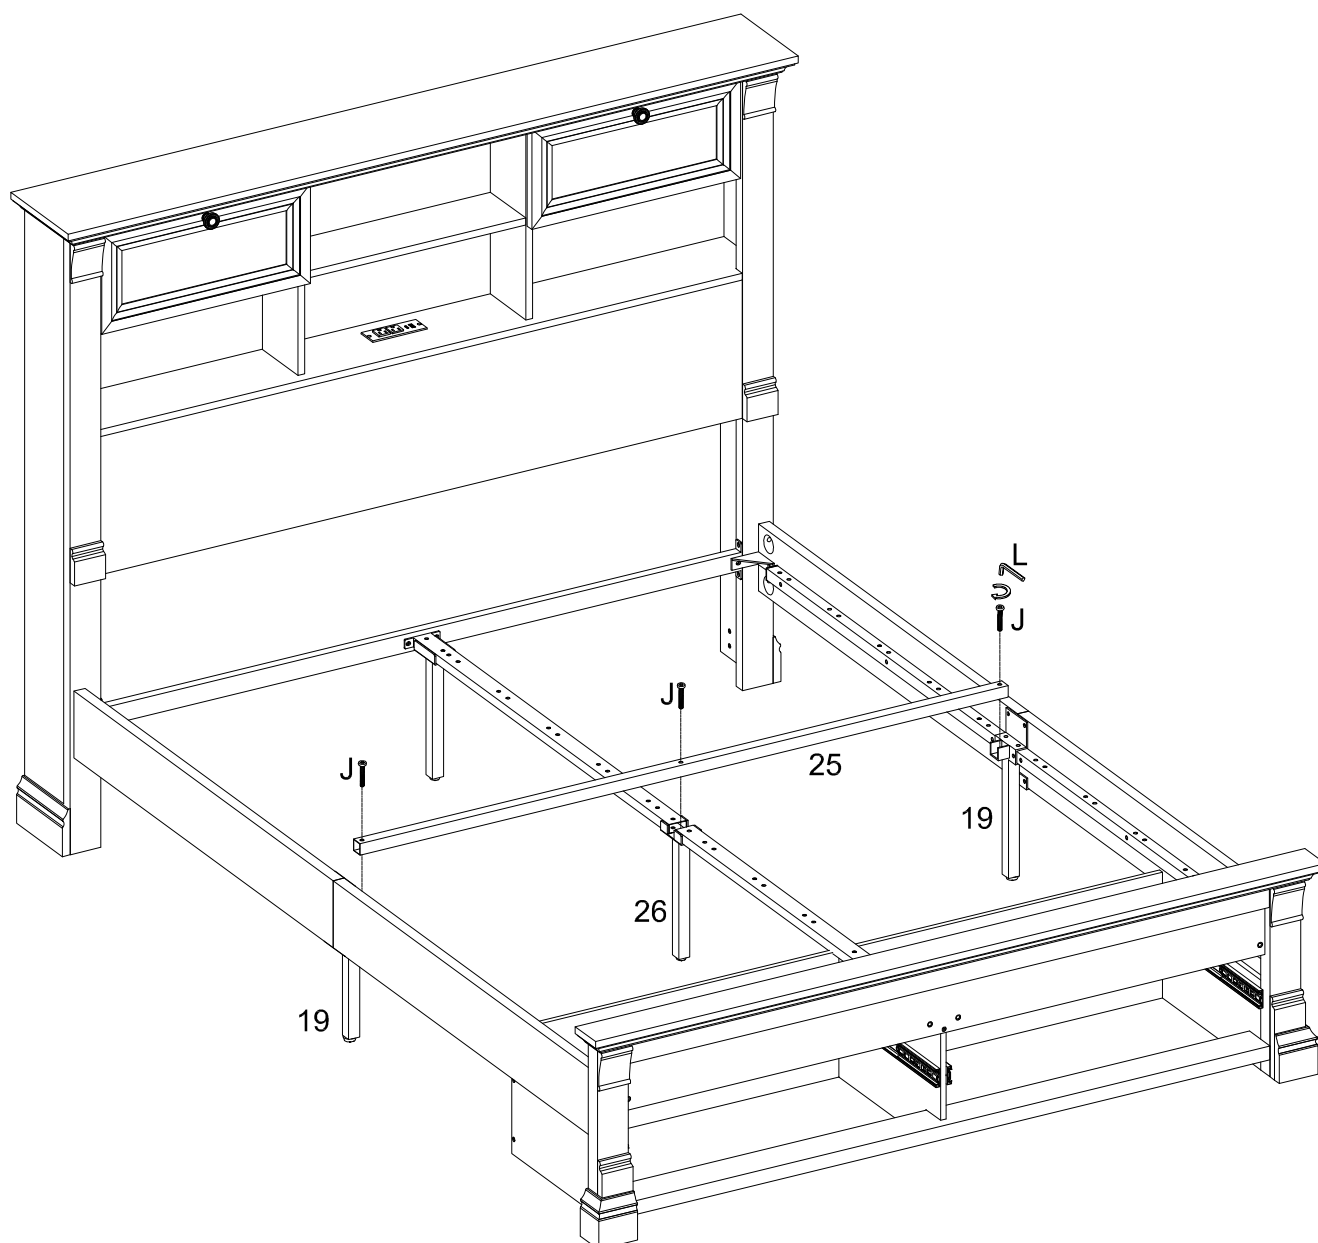


Step 56

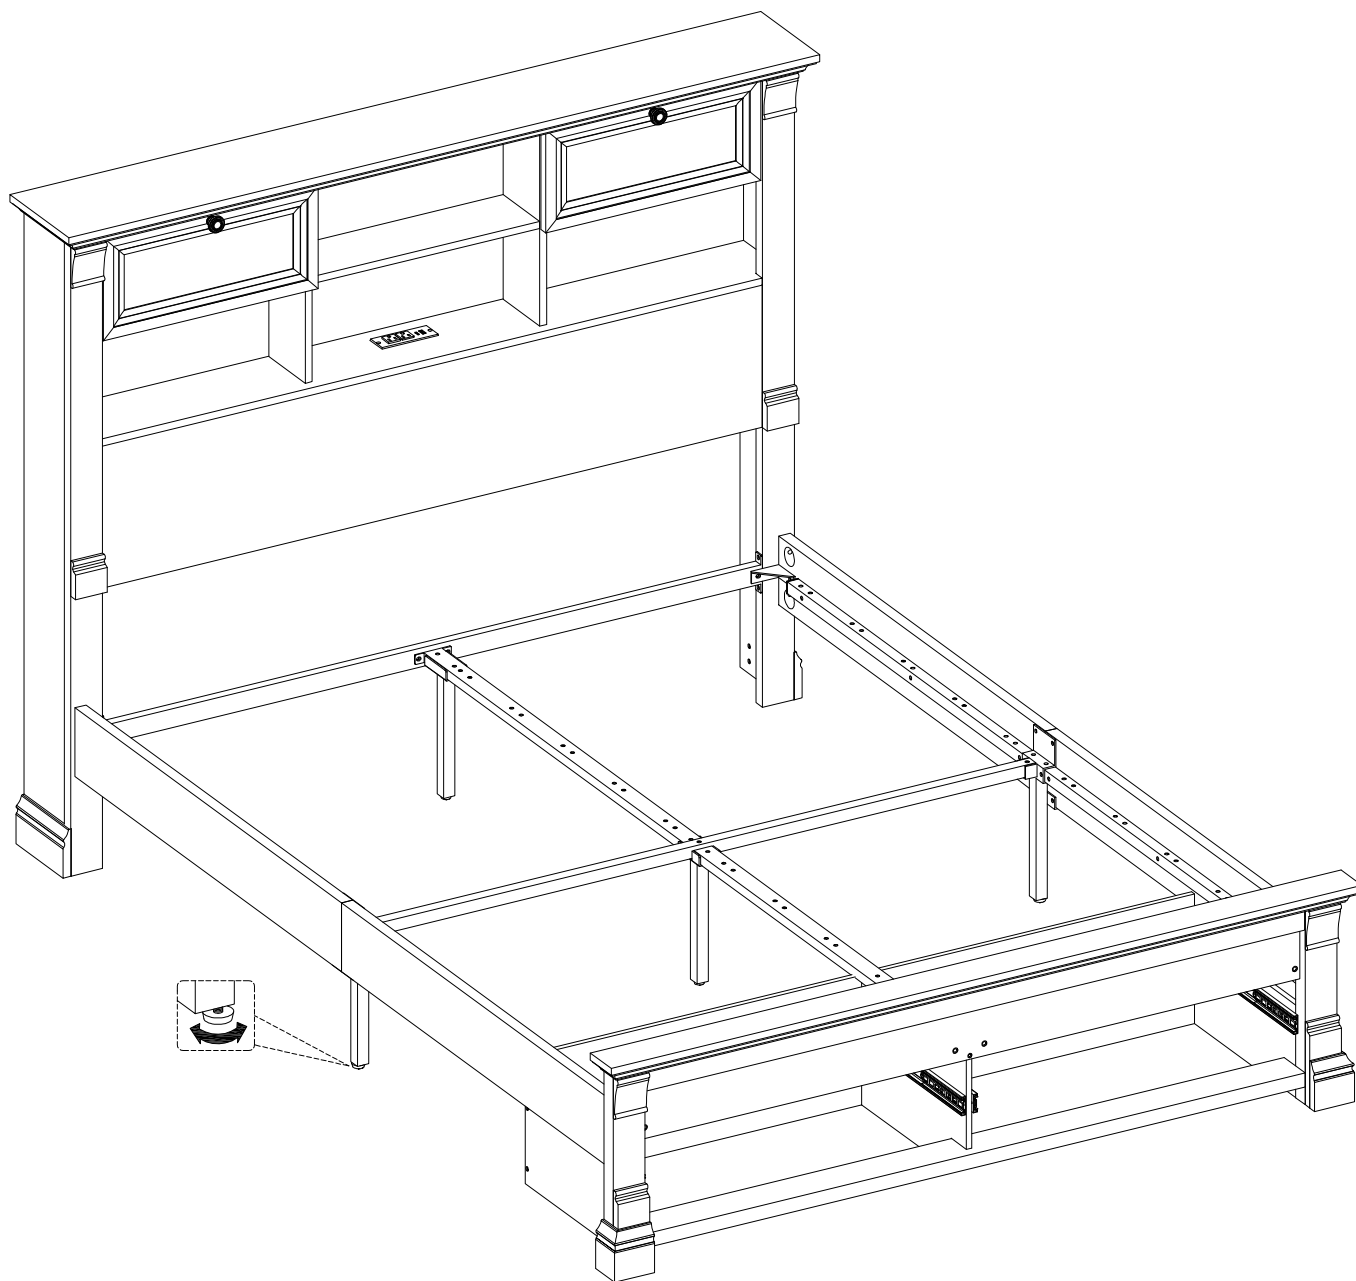



Step 57

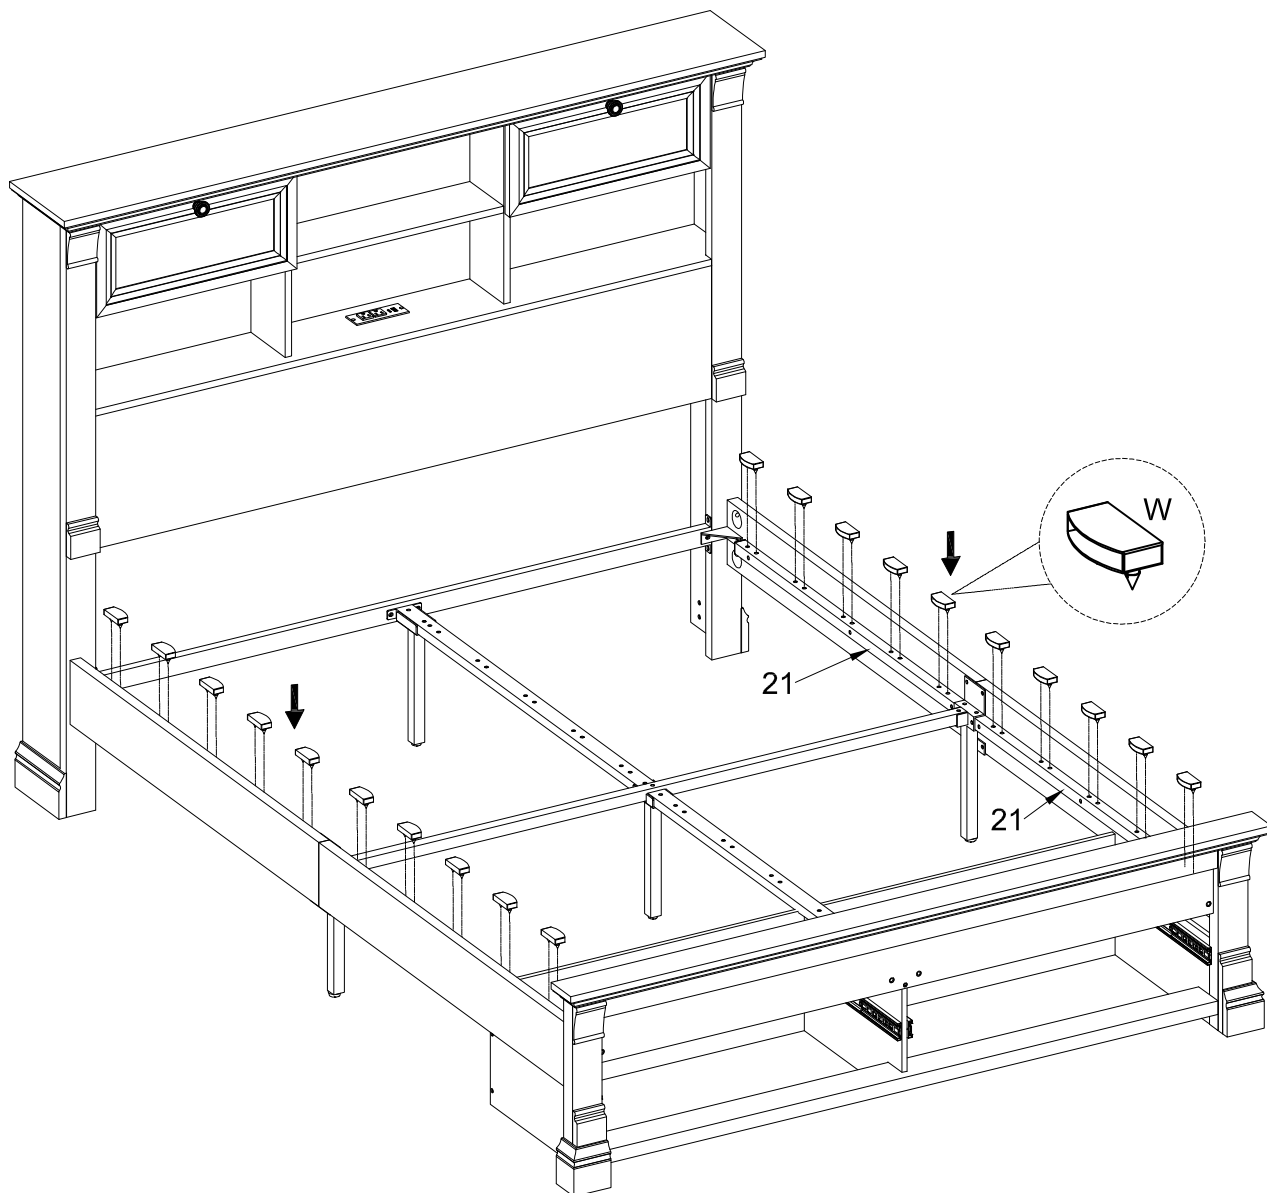

Step 58

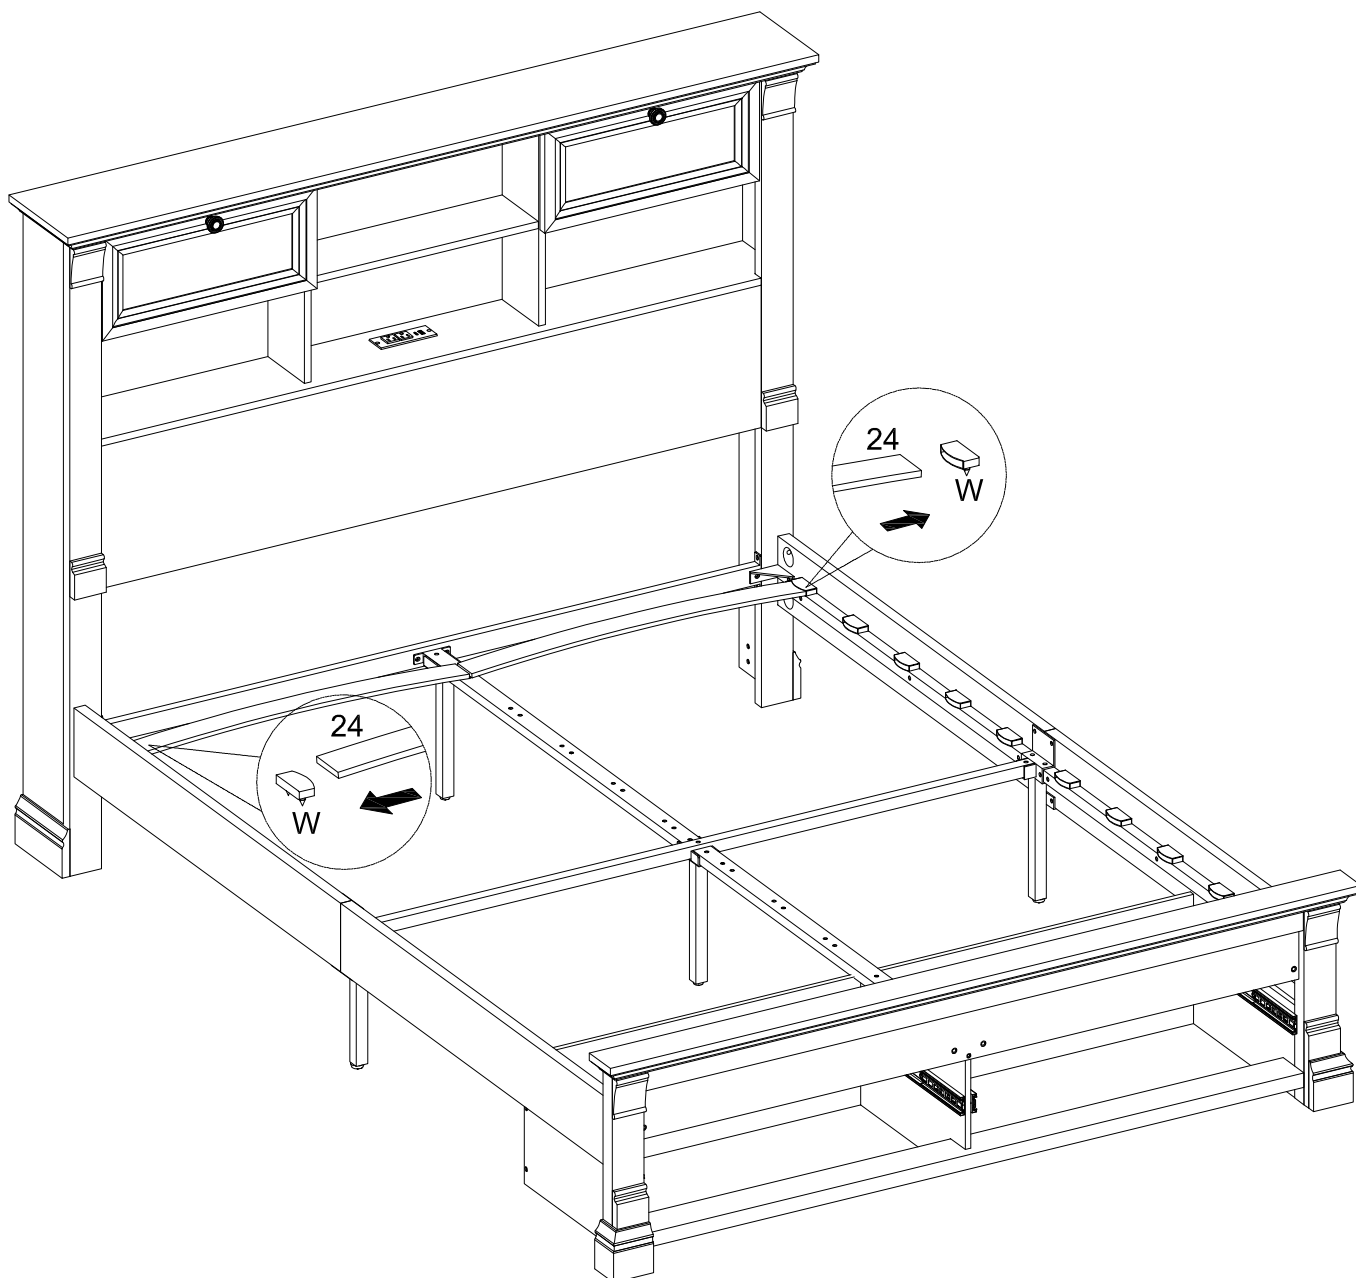


Step 59

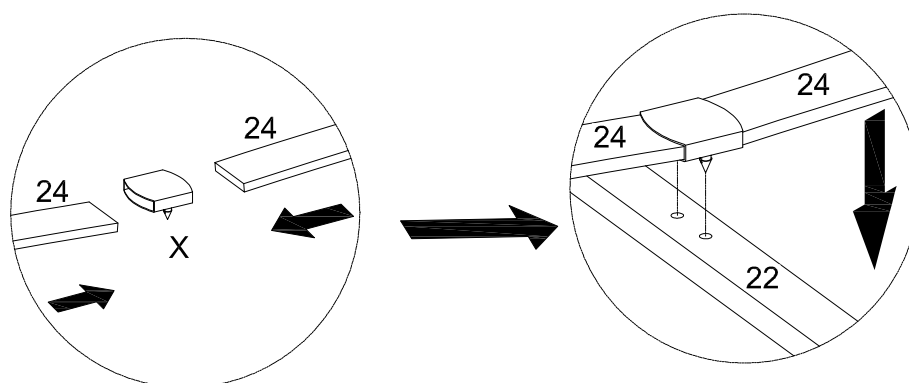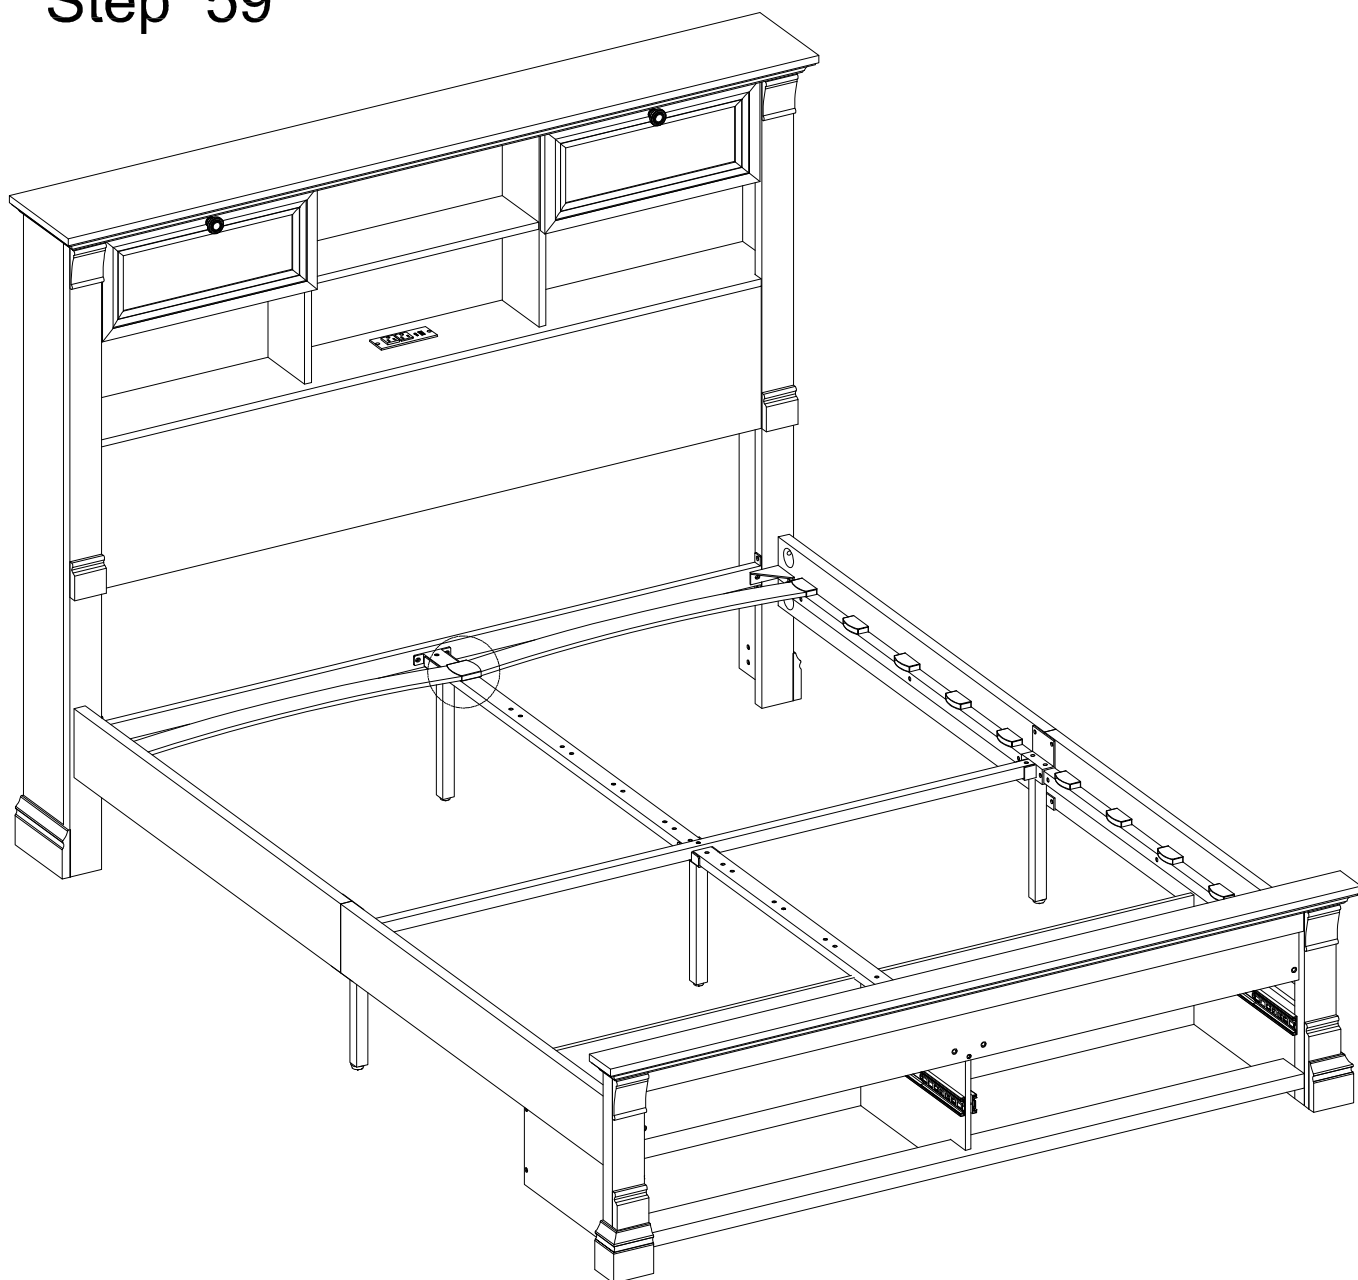

Note: repeat the step 58&59, make sure all wood slats of part 24 are installed.


Step 60

x2

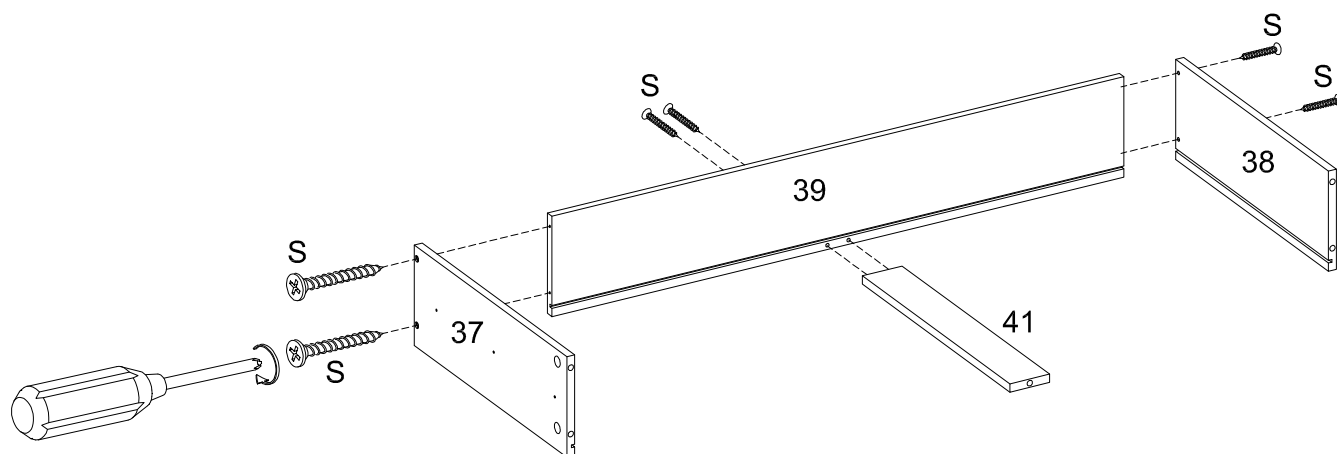


Step 61


x2

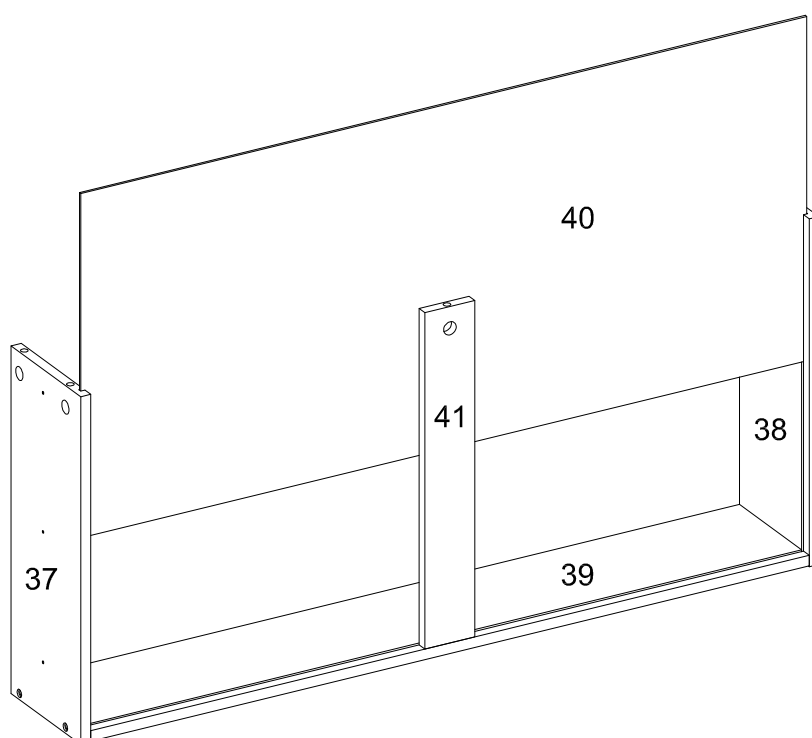


Step 62

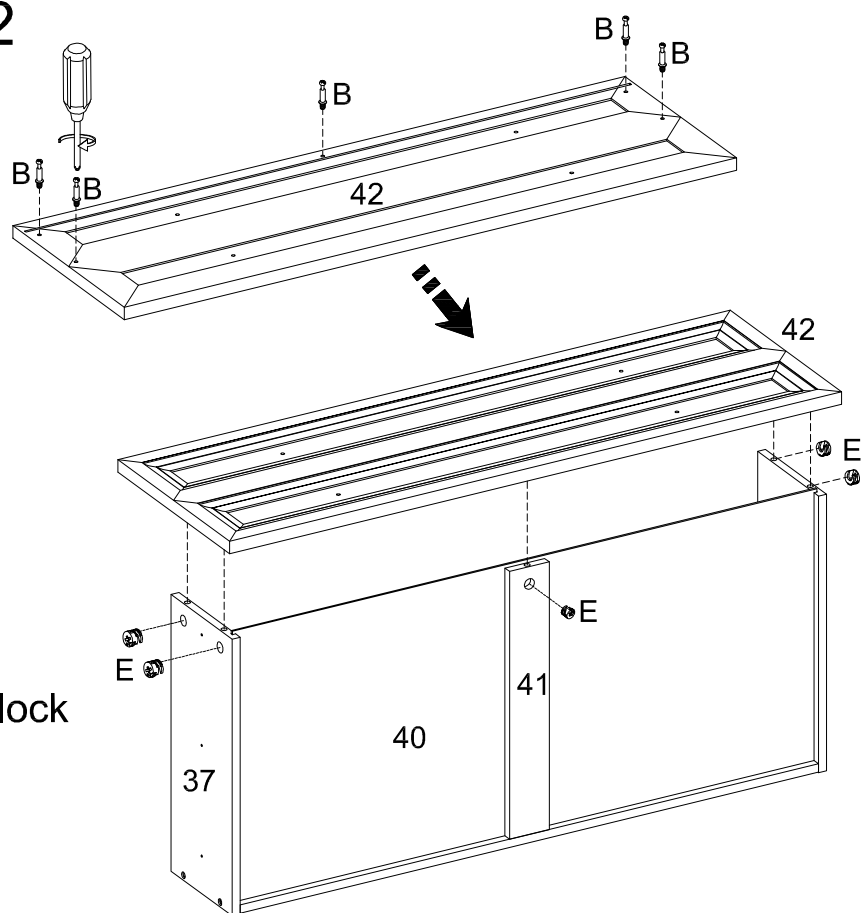


Small cam lock

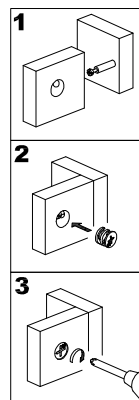


Step 63

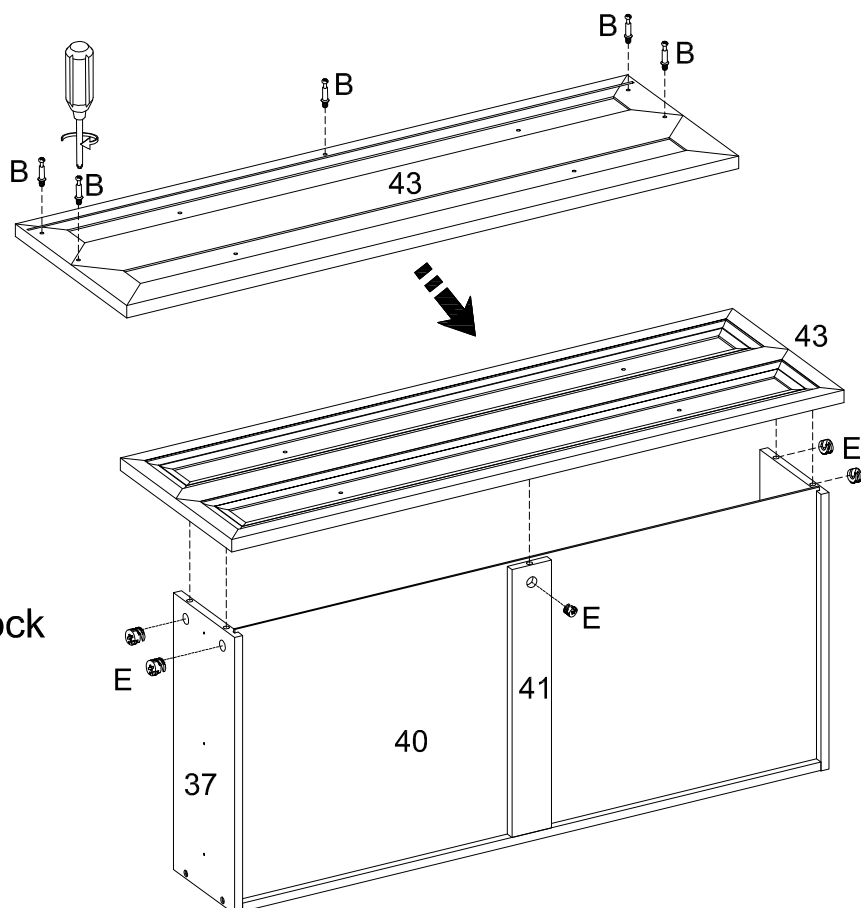


Small cam lock

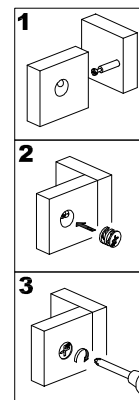


Step 64

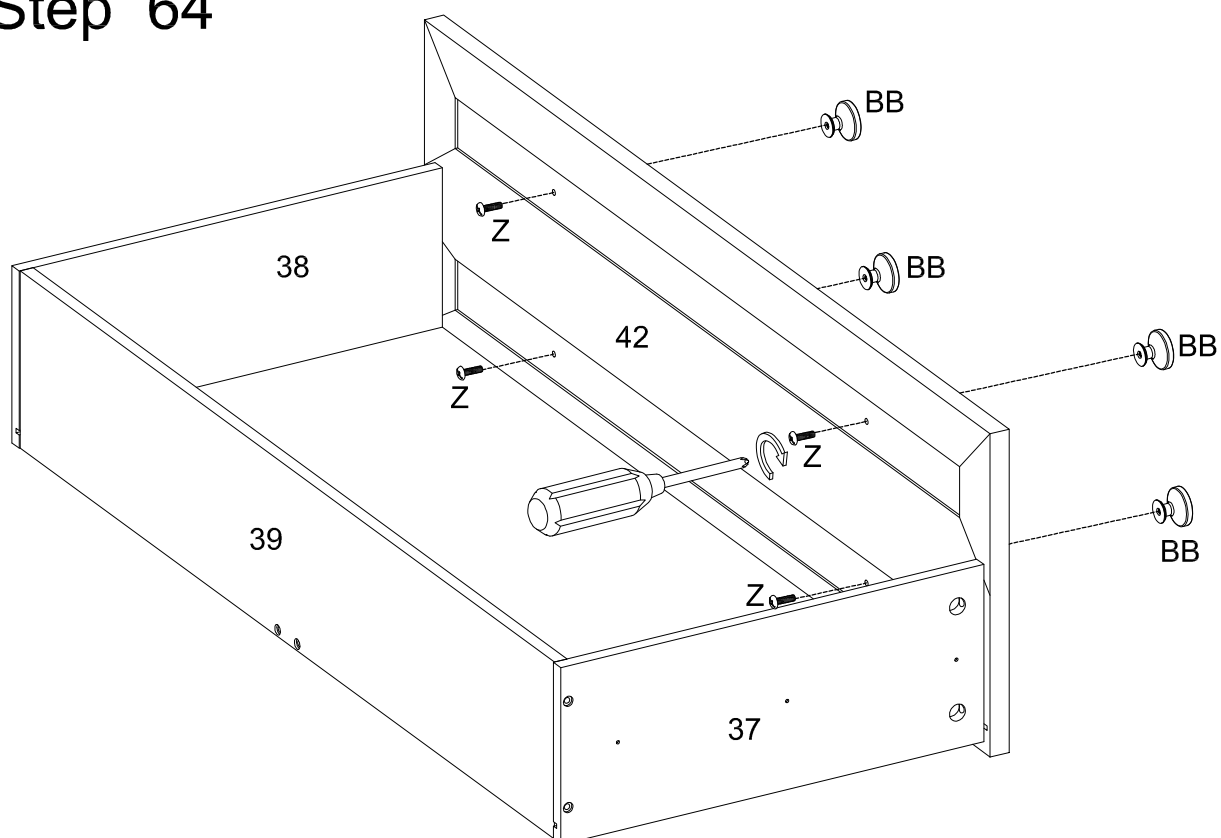


Step 65

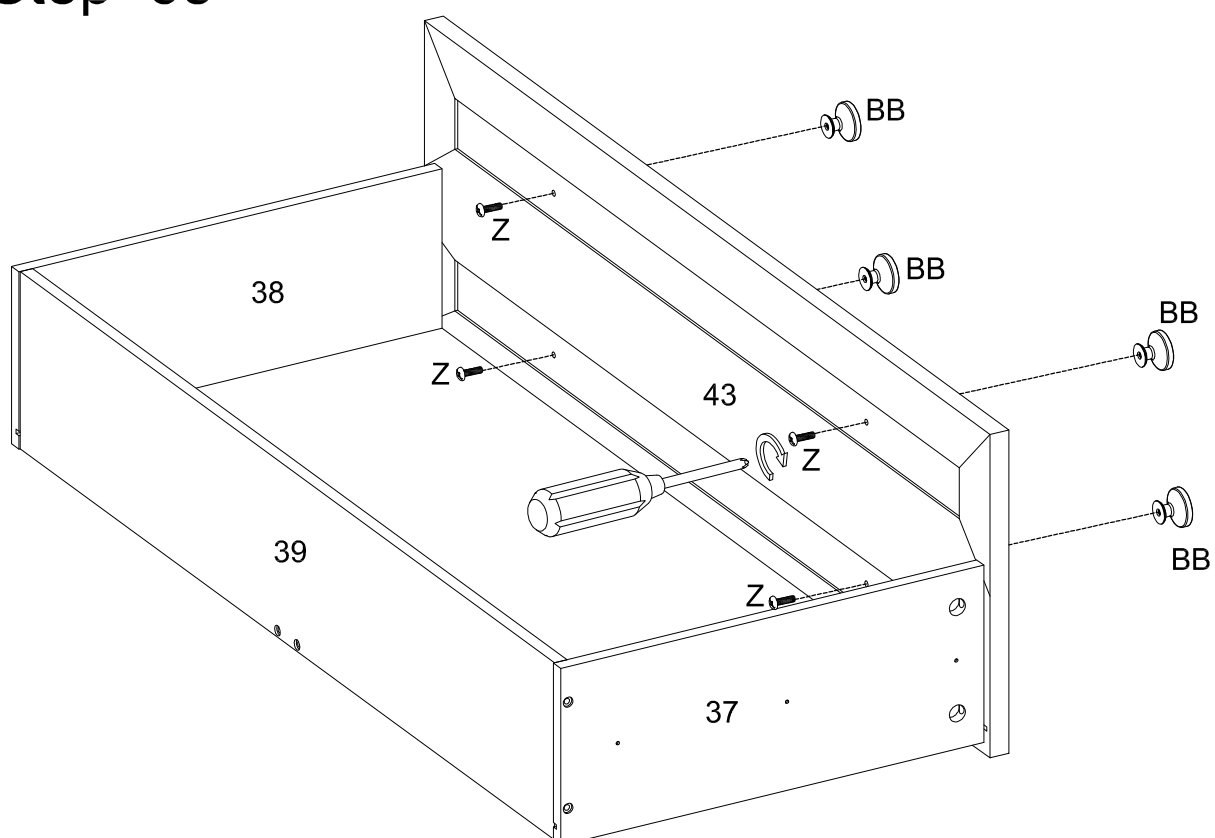


Step 66

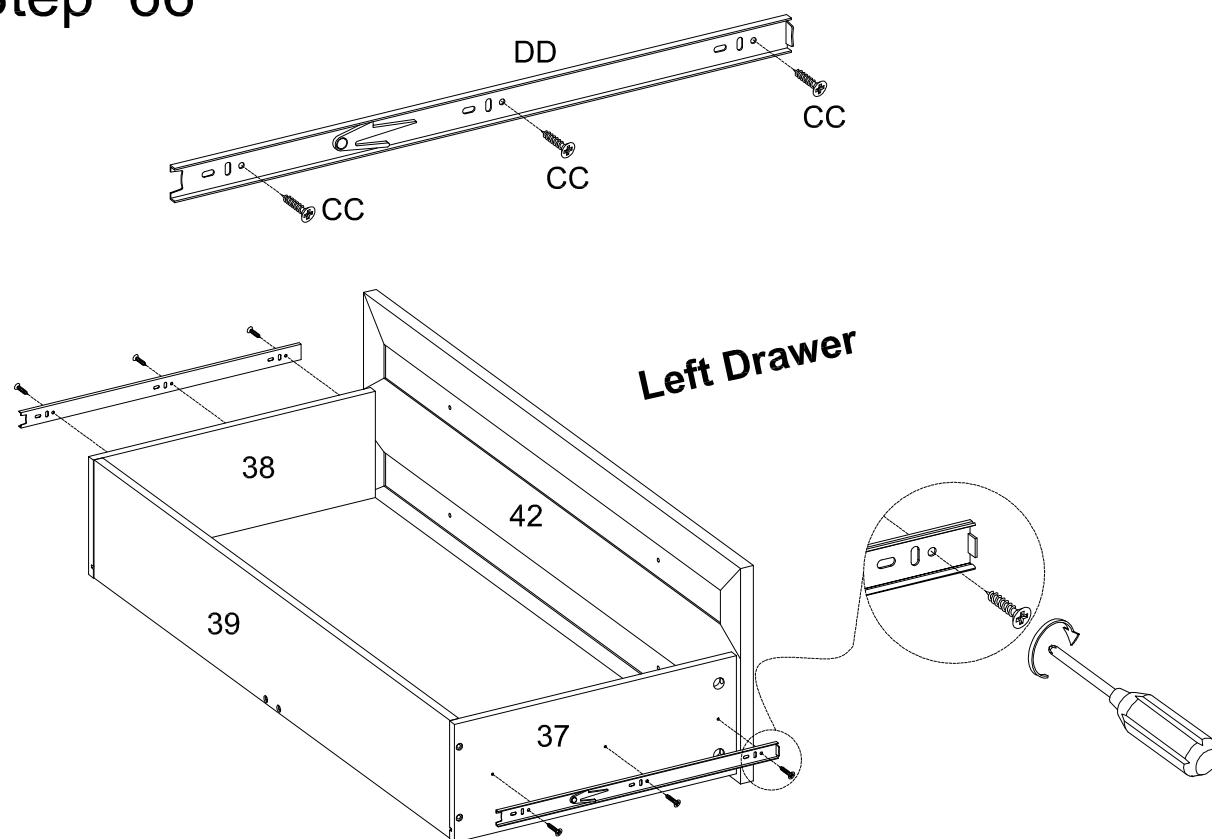



Step 67

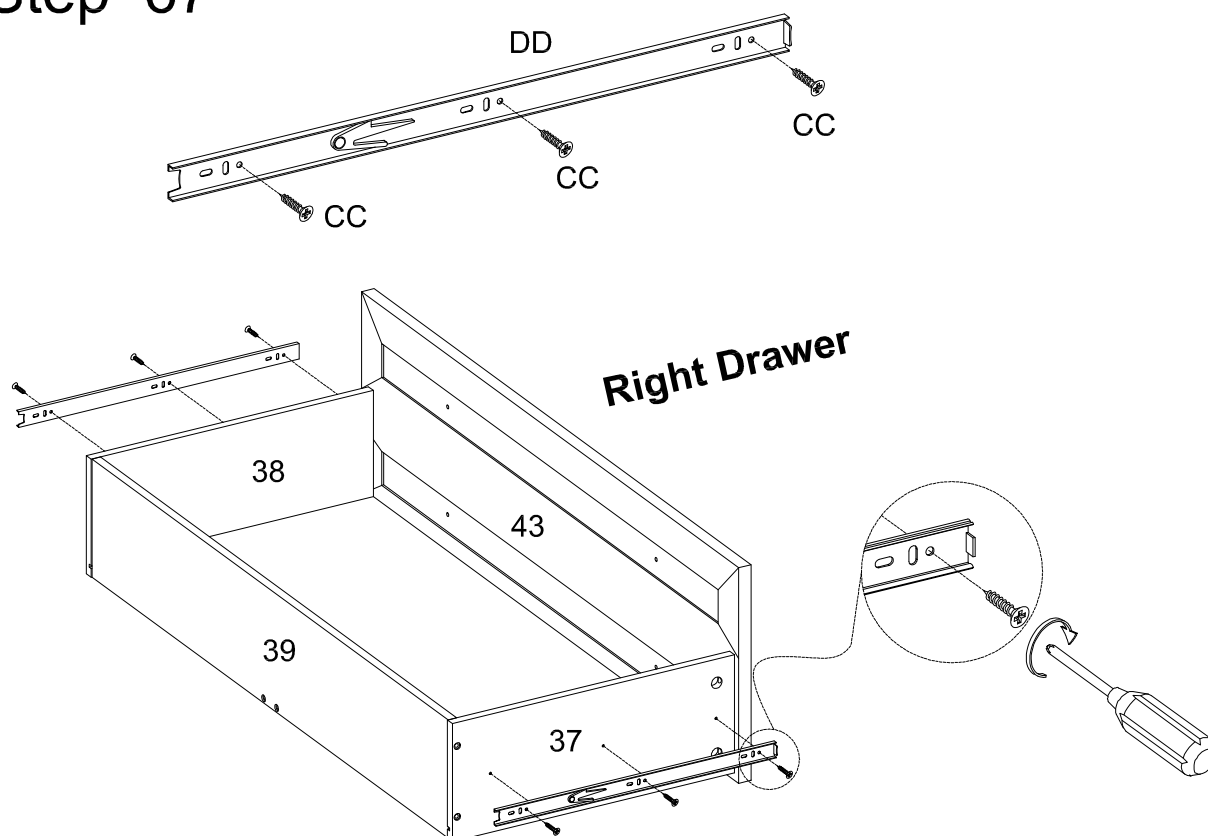


Step 68

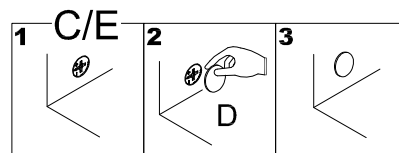

Stick stickers(D) on cam locks(C,E)

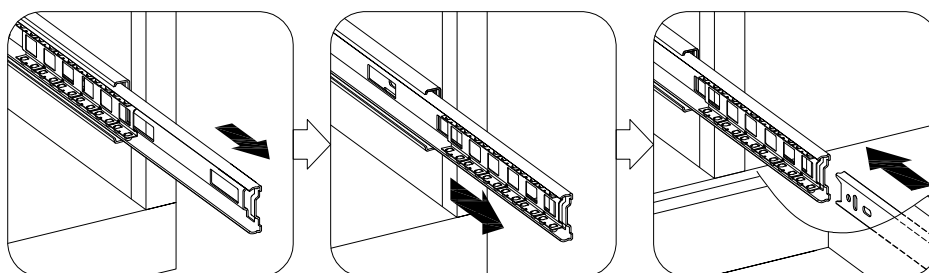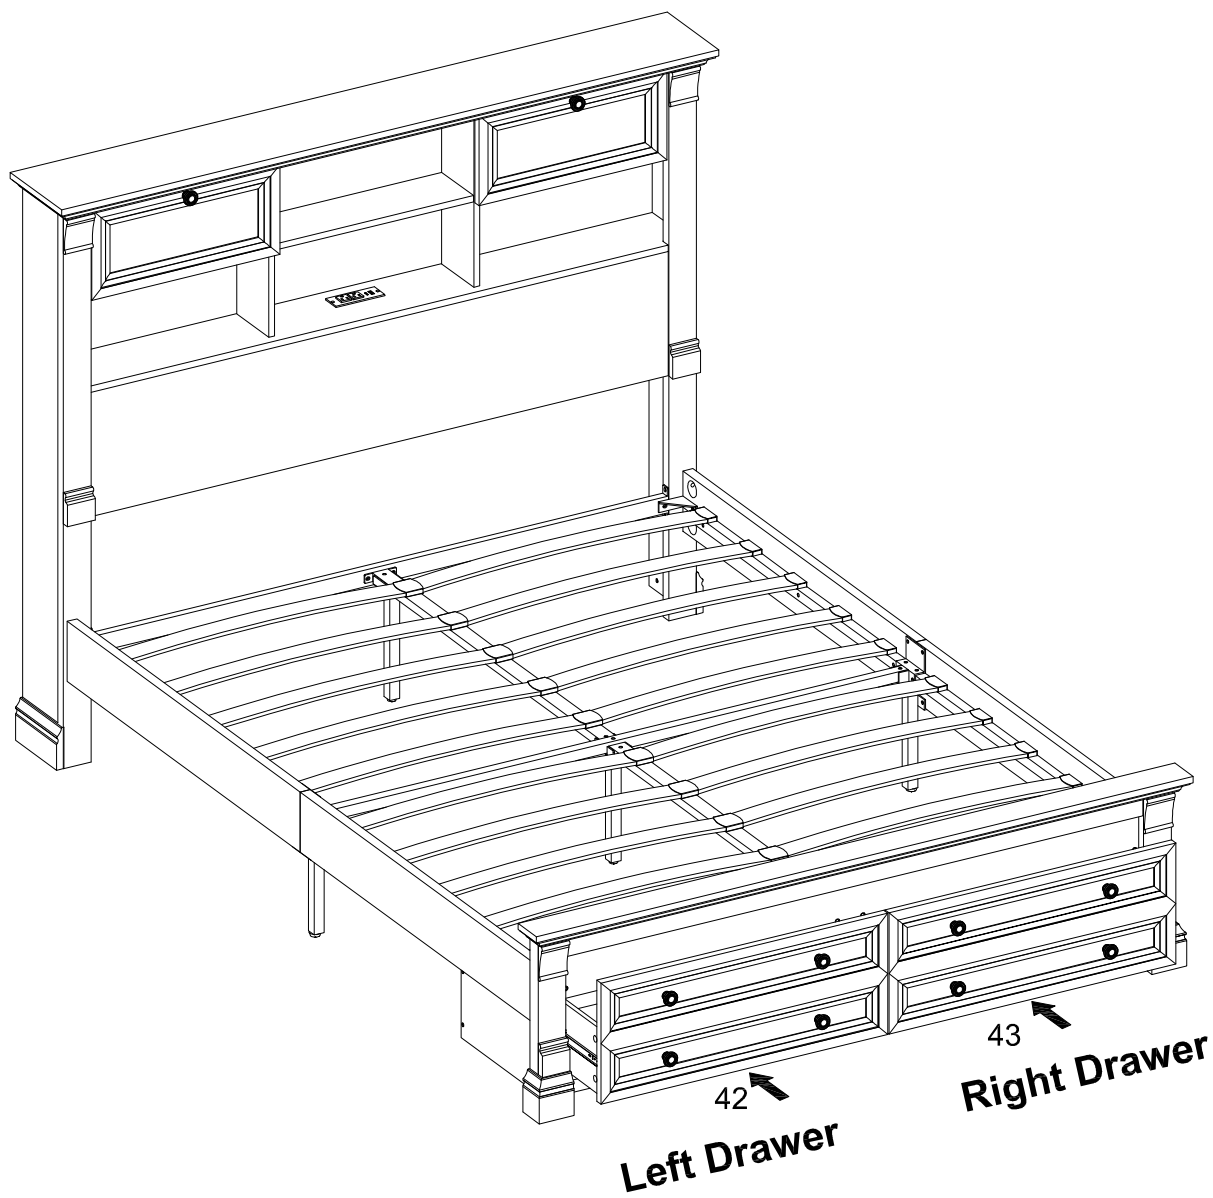

Step 69

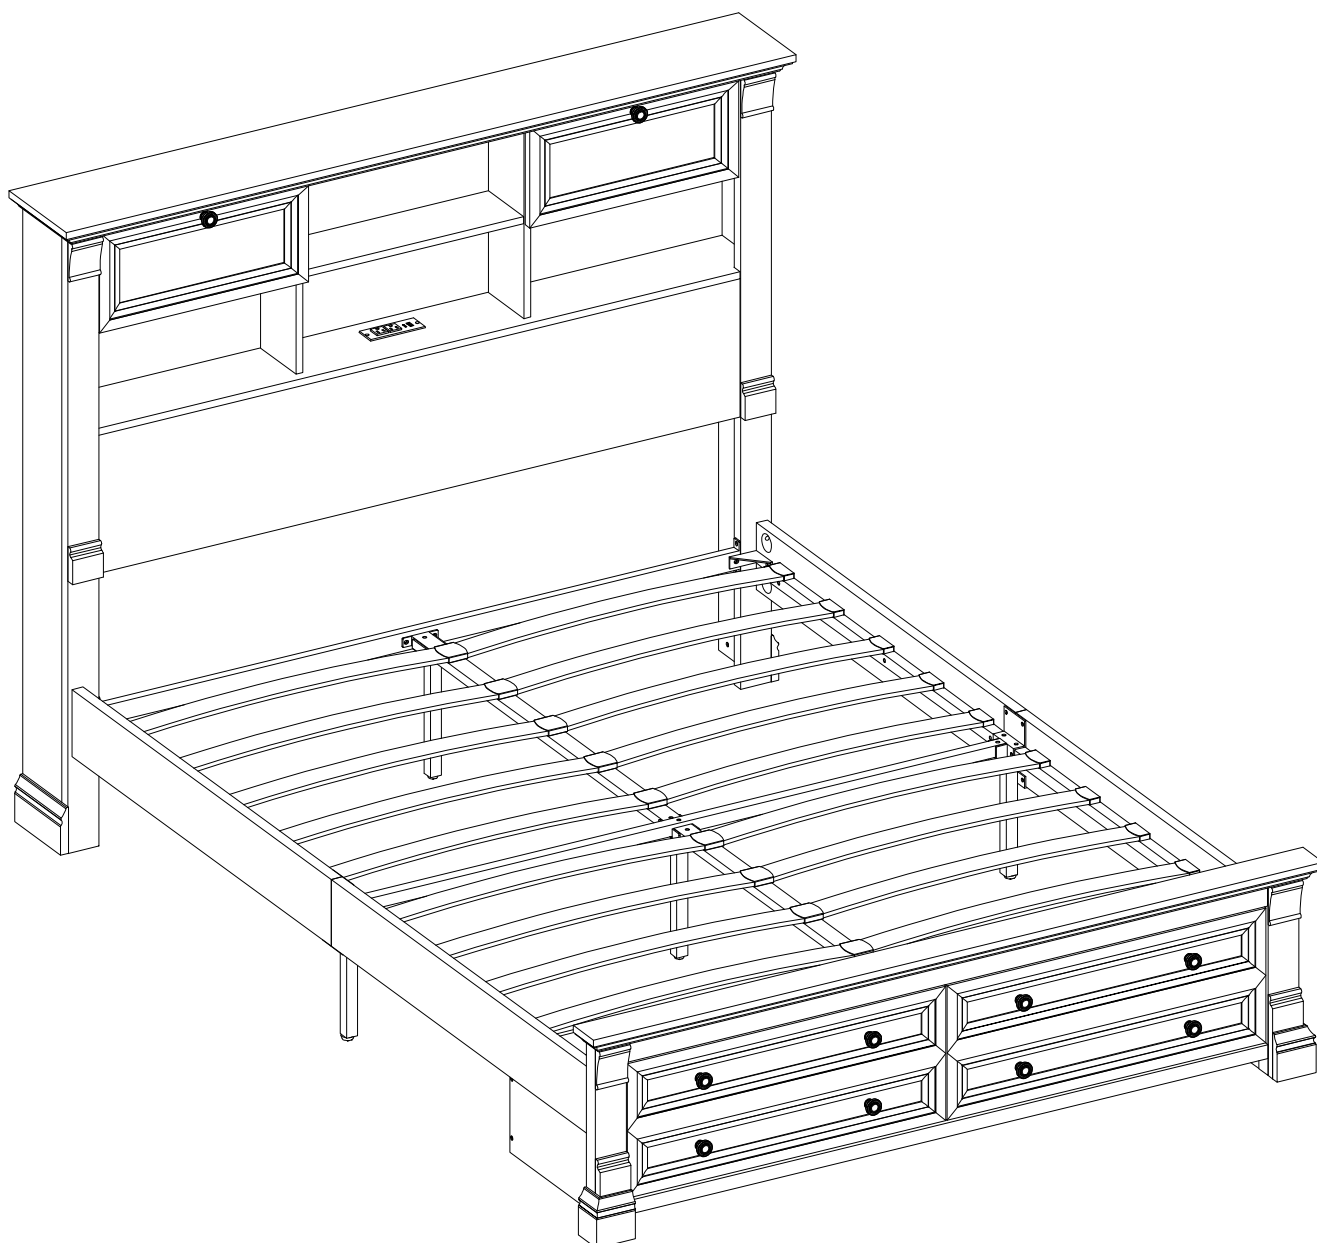

Final Assembly