


- Step 4
- Secure center support rail (4) to headboard (1) and footboard panel (2).
 - Remove screw (11) from headboard (1) and footboard panel (2) with Allen wrench (16).
 - Align holes on center support Rail (4) bracket with holes on headboard (1) and footboard panel (2). SEE FIGURE 4
 - Insert screw (11) on center support rail (4) metal bracket and screw into holes on headboard (1) and footboard panel (2). SEE FIGURE 4
 - Tighten screw (11) securely with Allen wrench (16).

- Step 5
- Insert double end cap (12) through center support rail (4) by pressing down into pilot holes in rail. SEE FIGURE 5

- Step 6
- Insert wood slats (13) in double end caps (12). SEE FIGURE 5

- Step 7
- Insert end caps (14) on slats (13). SEE FIGURE 5

- Step 8
- Insert single end caps (14) in pilot holes in wood side rail (3). SEE FIGURE 5

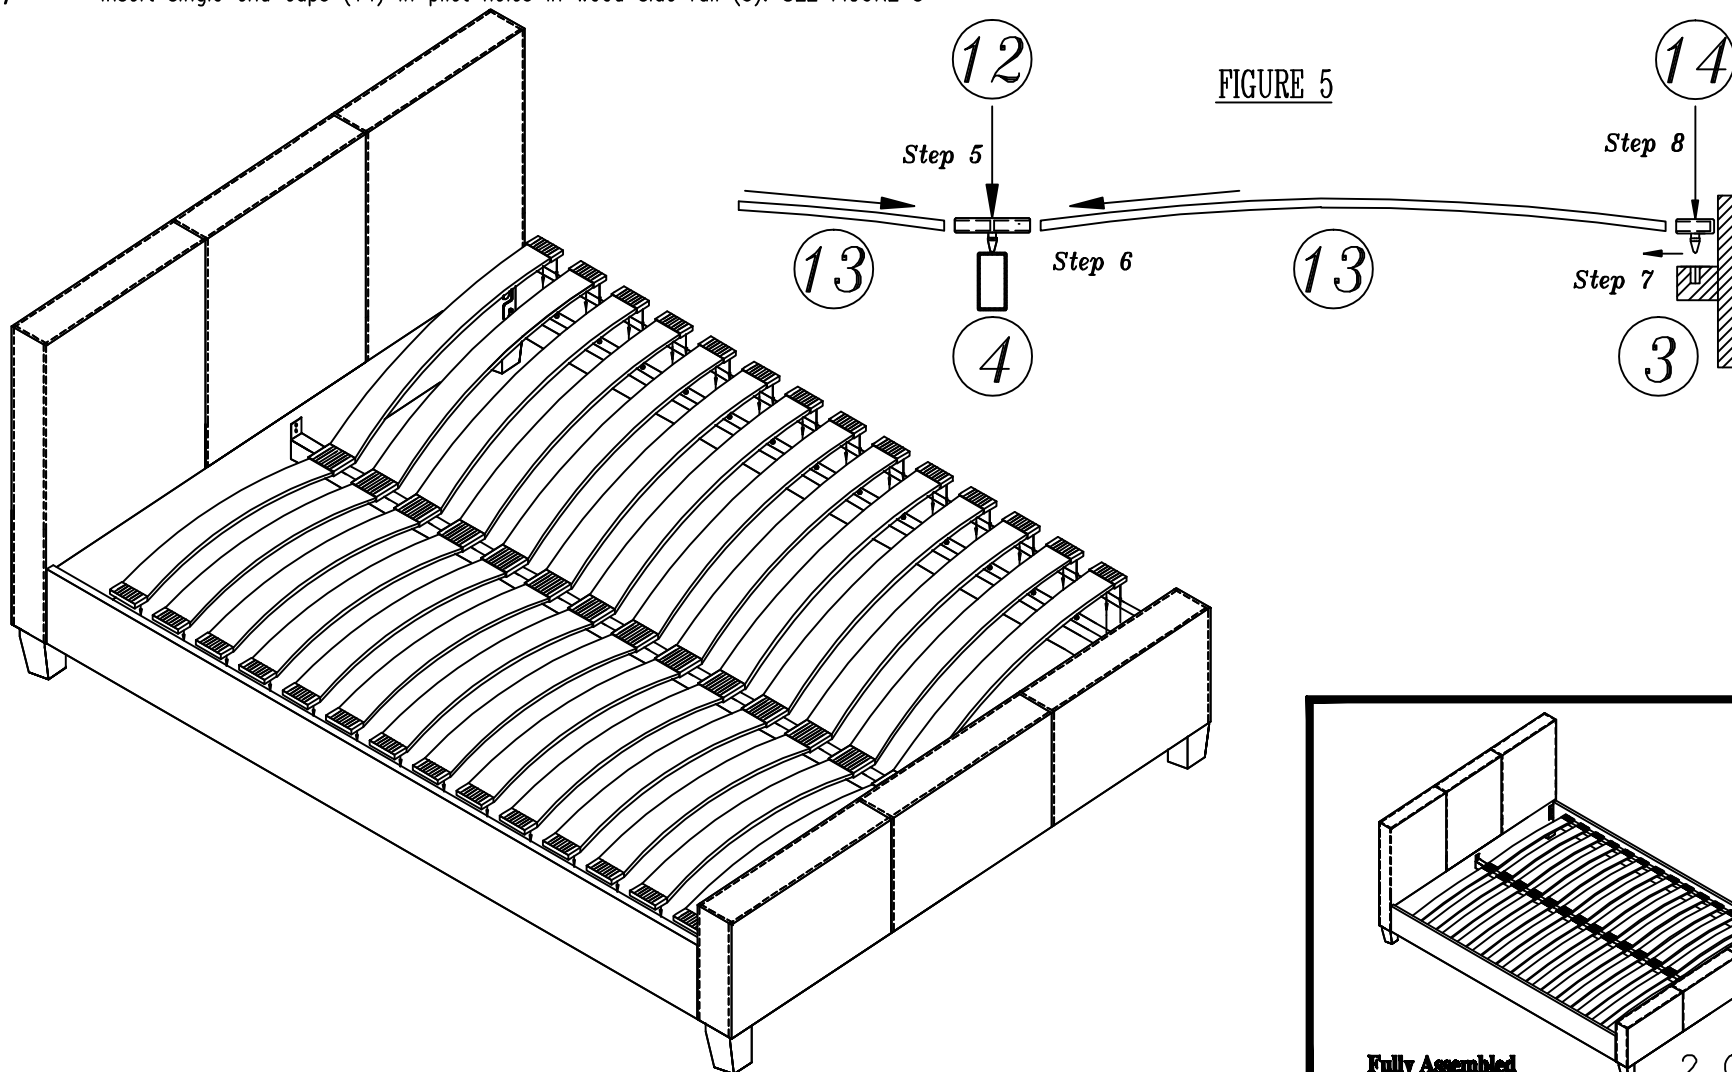

Fully Assembled

2 OF 2