


CHICKEN RUN COOP




(26.2' L x 9.8' W x 6.4' H)








Instruction Manual



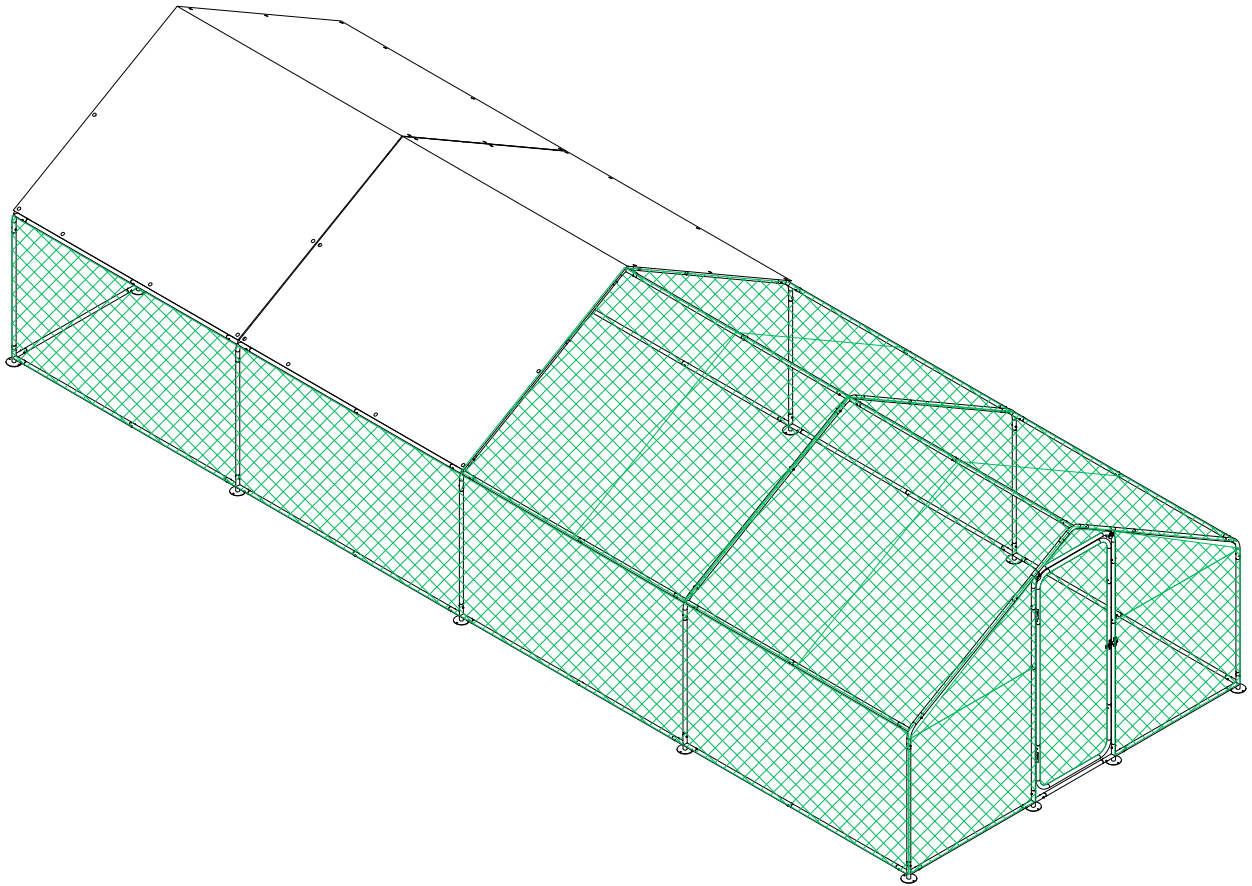


PARTS LIST

- Carefully remove all the parts from the carton and Make sure all accessories are complete.
- Carefully and strictly According these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled.

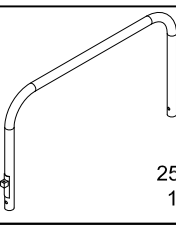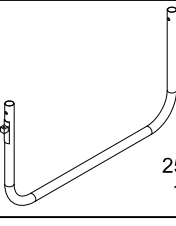①  37.4in 10pcs	②  39.8in 36pcs	③  24.4in 2pcs	④  34.6in 21pcs	⑤  20.5in 11pcs	⑥  20.5in 1pc	⑦  39.8in 1pc	⑧  39.8in 1pc	⑨  29.2in 1pc	⑩  39.8in 1pc	⑪  25.5in 1pc	⑫  25.5in 1pc
---	---	--	---	---	---	---	---	--	---	---	---

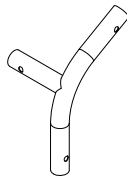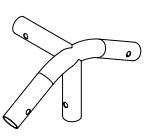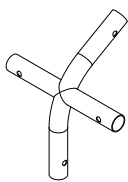A  4 PCS	B  2 PCS	C  8 PCS	D  5 PCS	E  1 PC	F  1 PC	G  9 PCS
--	---	---	--	---	--	--



H  Stake 14PCS  U clips 2PCS		I  Electro hex 39.37*2204.72in 1PC	J  Cable tie 550PCS	K  Oxford cover 79*126in 2PCS	L  Rubber rope 28PCS
M6 screws 4PCS 	M6 screw nuts 4PCS 	M  M5 screws 1PC	N  Roller 2PCS	O  Screwdriver  Wrench	

CHICKEN RUN COOP ASSEMBLY

STEP 1



NOTE: Arrange the required accessories according to the serial number in the picture, First put ② & ④ connect together.

1. According the step diagram , connect ②&②/④ to A .
2. use ③ through F and then connect B.
3. use ② & ③/④ to connect C to both sides

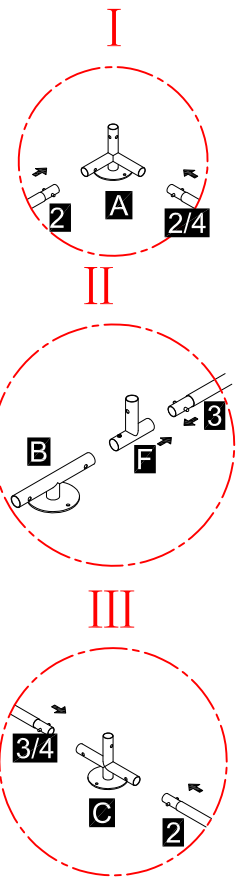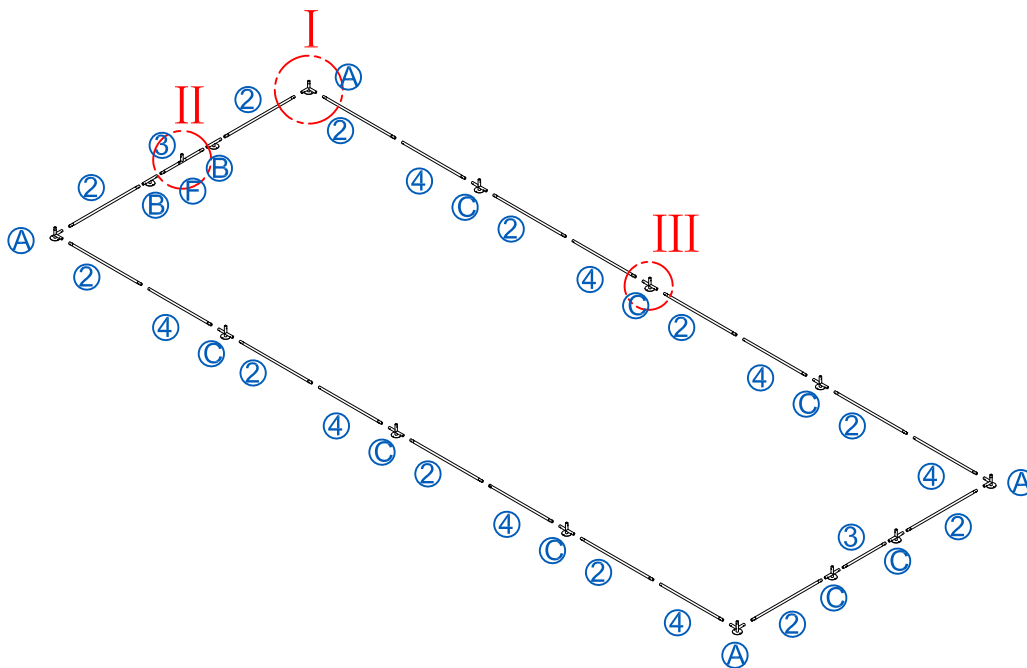

STEP 2


1. According the step diagram, Insert 4 pieces of ① into A
2. Insert 6 pieces of ① into C

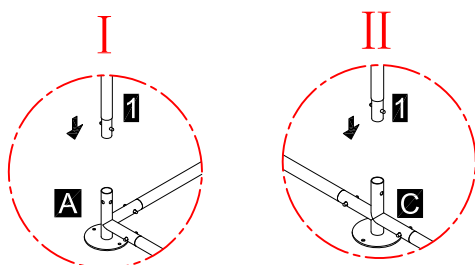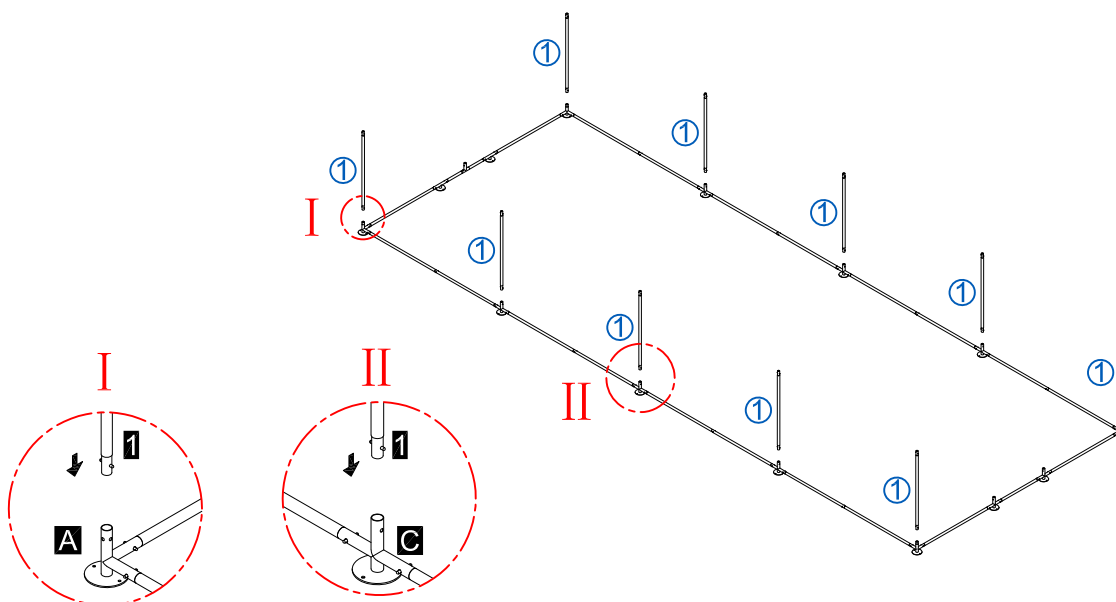

CHICKEN RUN COOP ASSEMBLY

STEP 3


1. Insert the 4 pieces of D and 6 pieces of G into ①, and connect ②&④ into D&G.
2. Insert two ⑤ into E respectively, and then use E to connect the two ⑤&④ at the top.
3. Insert ①&② into G respectively, and insert 2 pieces of ⑤ into G at the top.

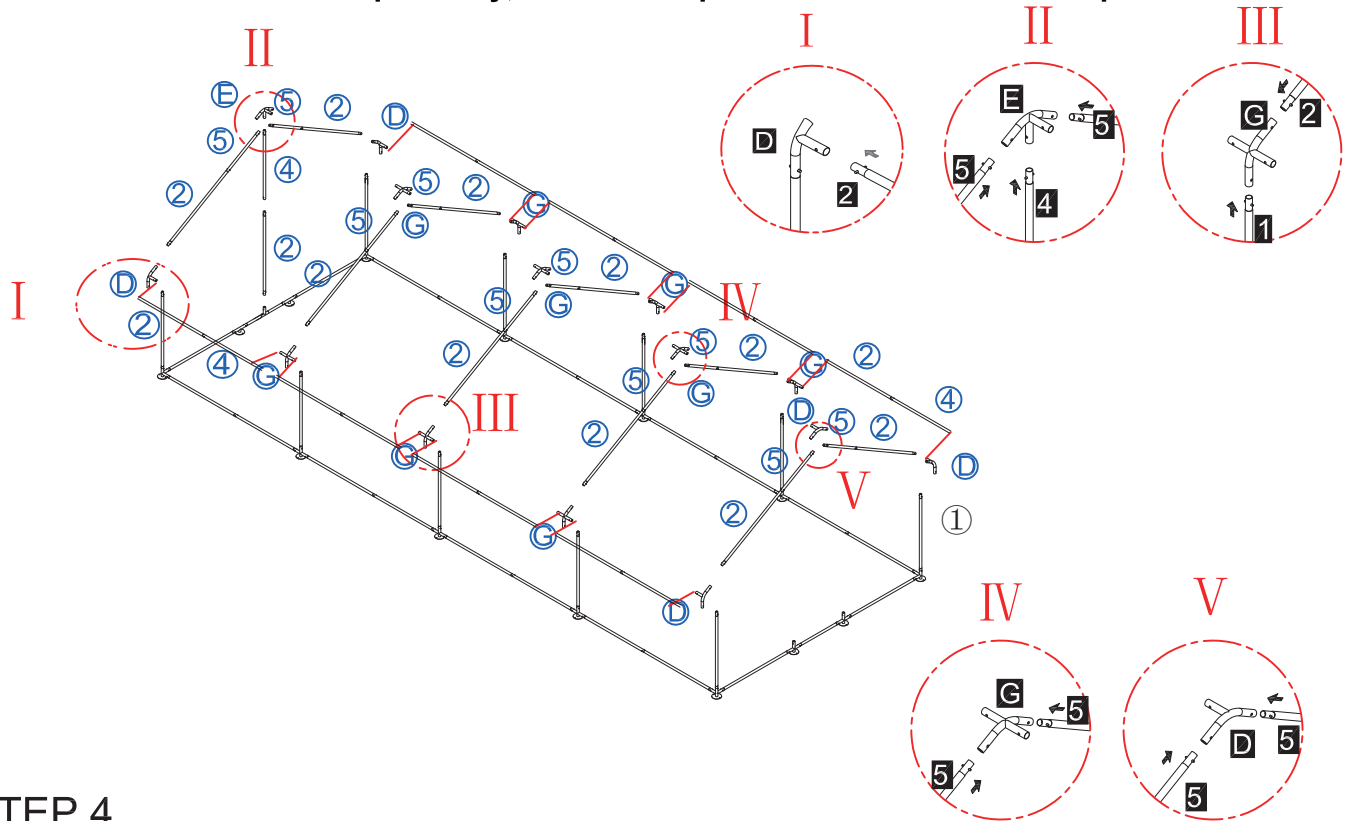

STEP 4

1. According the step diagram, Connect the ②&④ first; and then insert to D ,E and G respectively.
2. Adjust to the appropriate position and then secure F by screw.

Required Tools	
M	O
	
M5 screws 1PC	Screwdriver


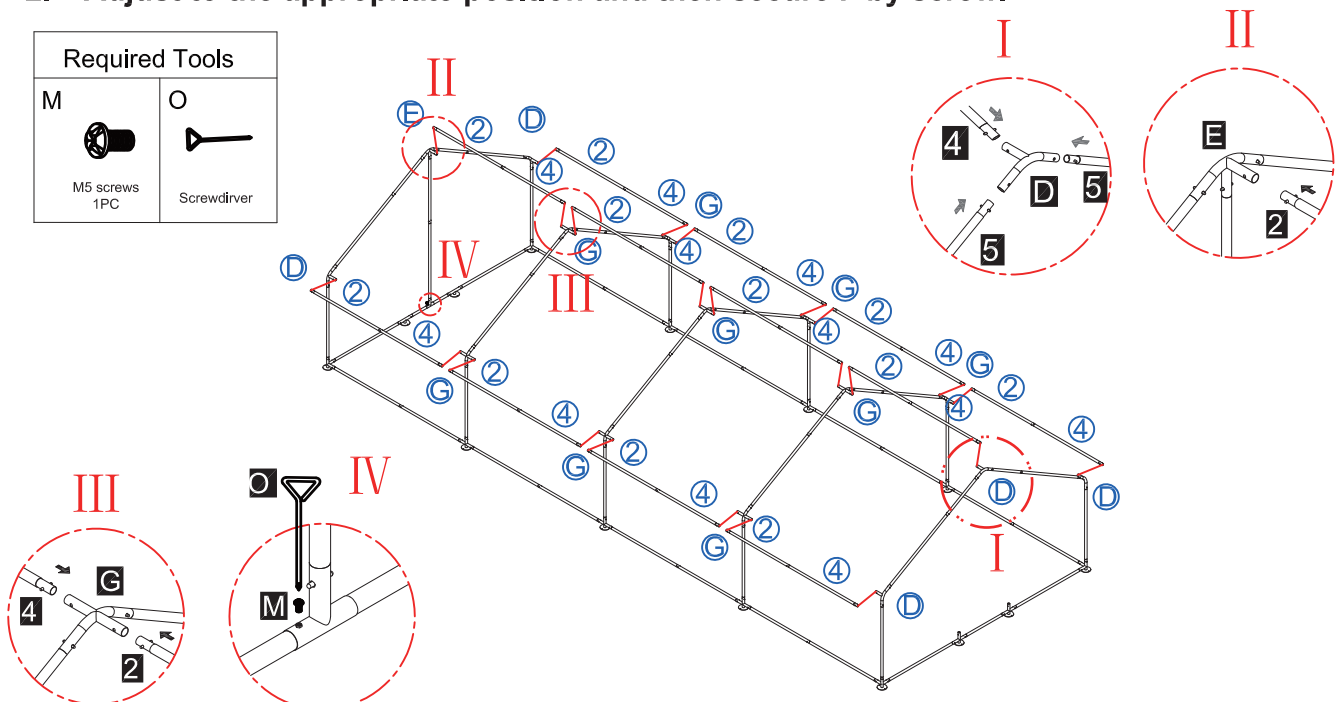


CHICKEN RUN COOP ASSEMBLY

STEP 5





1. According the step diagram,Insert the ⑦&⑧ into C respectively; and then insert ⑤, ⑥&⑨. Pay attention to the direction signs on the iron pipe.

Required Tools					
H		N		O	
					
U clips 2PCS	M6 screws 4PCS	M6 screw nuts 4PCS	Roller 2pcs	Screwdriver	Wrench

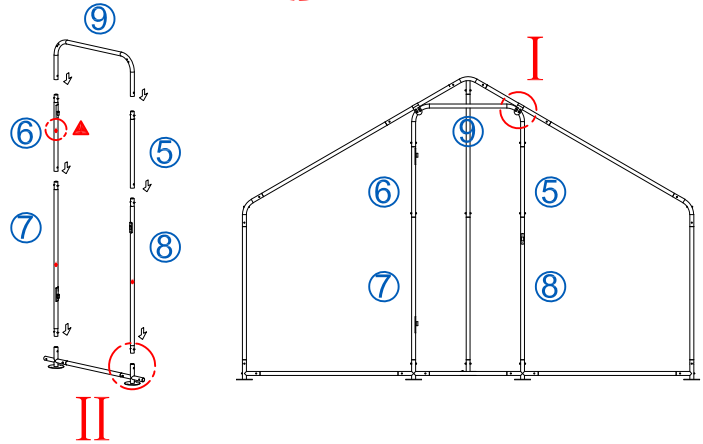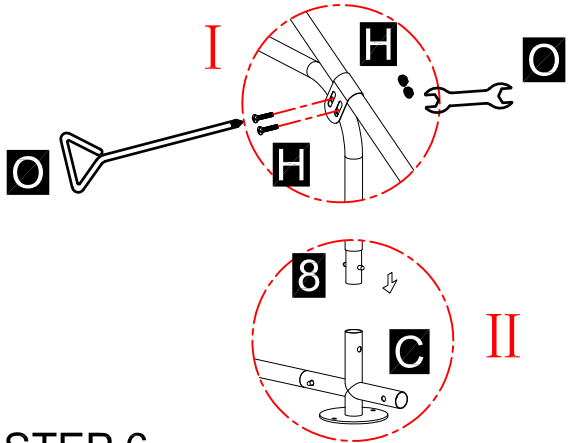

STEP 6

1. According the step diagram,connect the ②⑩⑪⑫.
2. Put the door frame into the hinge according the diagram.

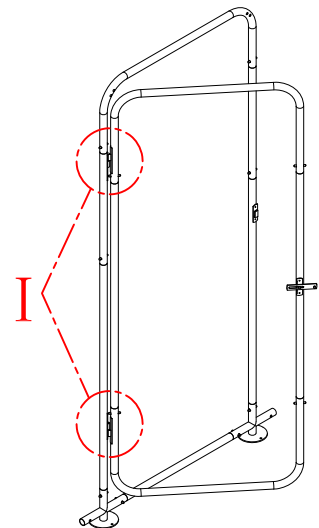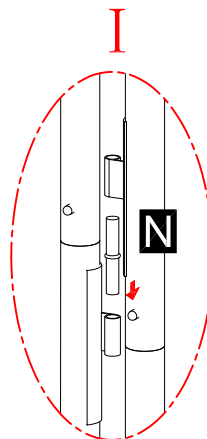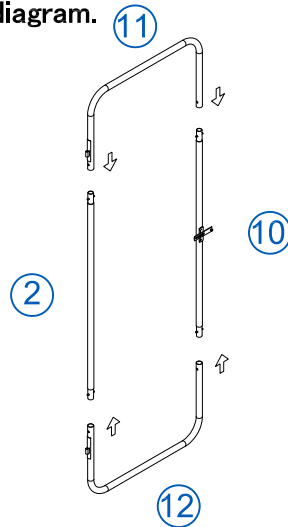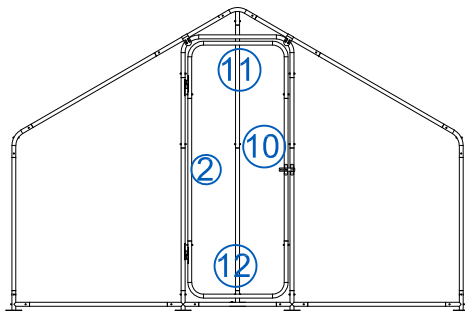


CHICKEN RUN COOP ASSEMBLY

STEP 7

1. Secure the base with ground stake
2. According the step diagram,cover the age frame with hexagonal wire mesh and carefully cut along the frame ,cut the hexagonal wire mesh shape.
3. Use cable ties to fix the hexagonal wire mesh.


Required Tools							
H		I		J			
	Stake		Electro hex		Cable tie	Scissor	Glove

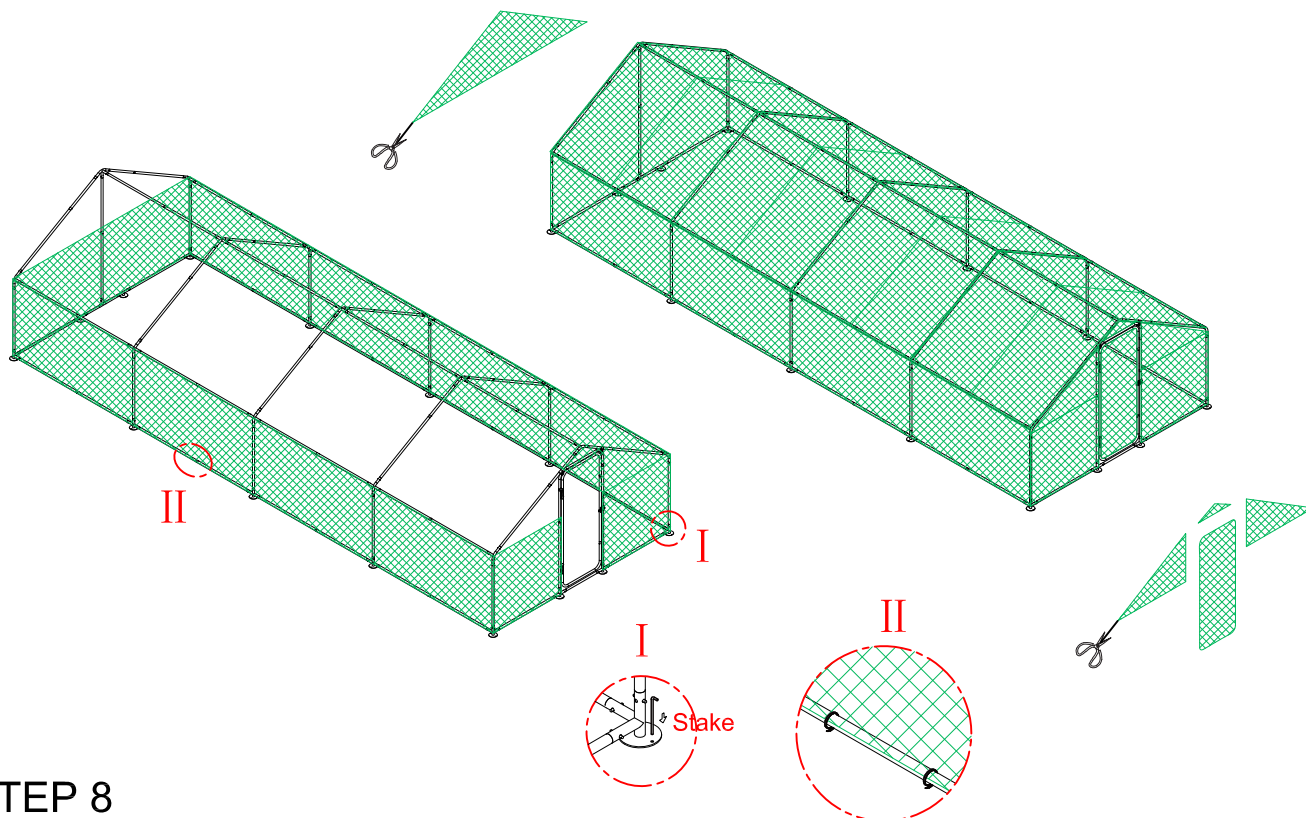

STEP 8

1. Use rubber rope to fix the oxford cloth.

Required Tools	
K	L
	
Oxford Cover	Rubber rope

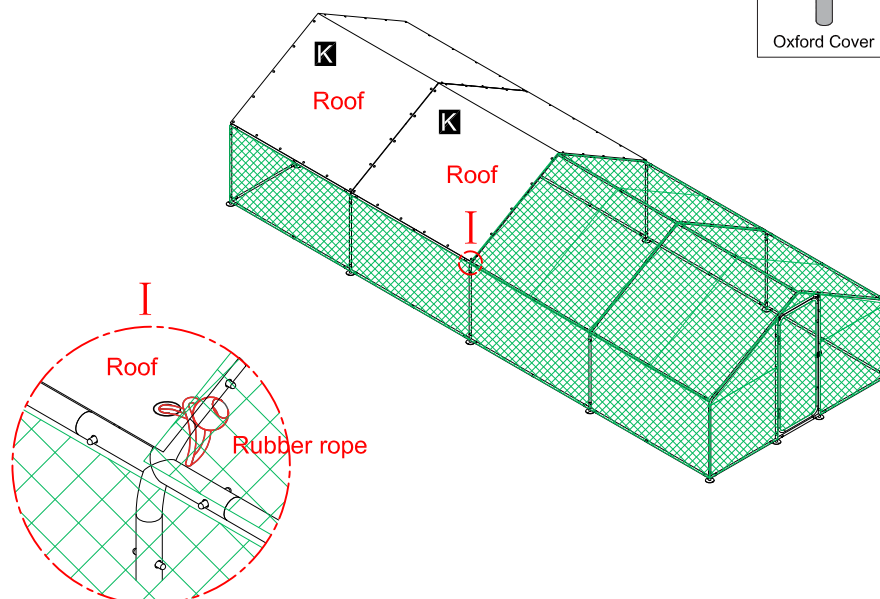

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners
- Keep dry and avoid damp environments.

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.