



Installation Manual

HD01P-36


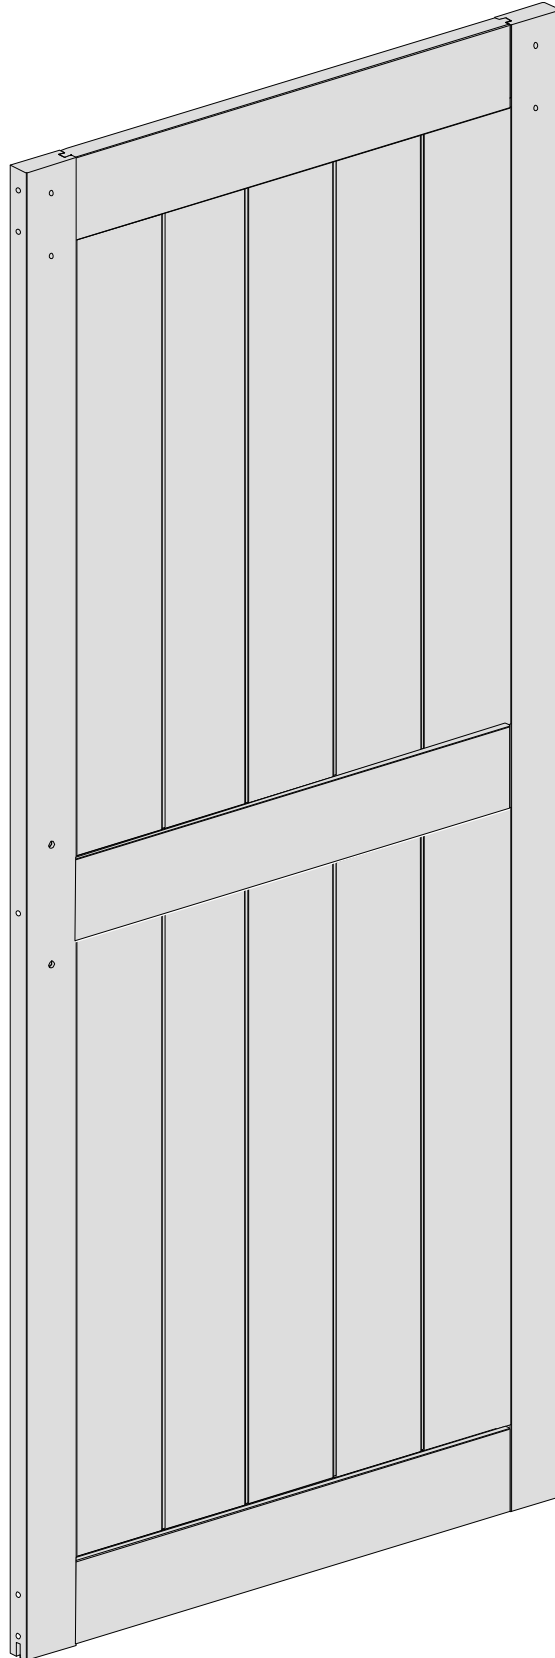


Components list

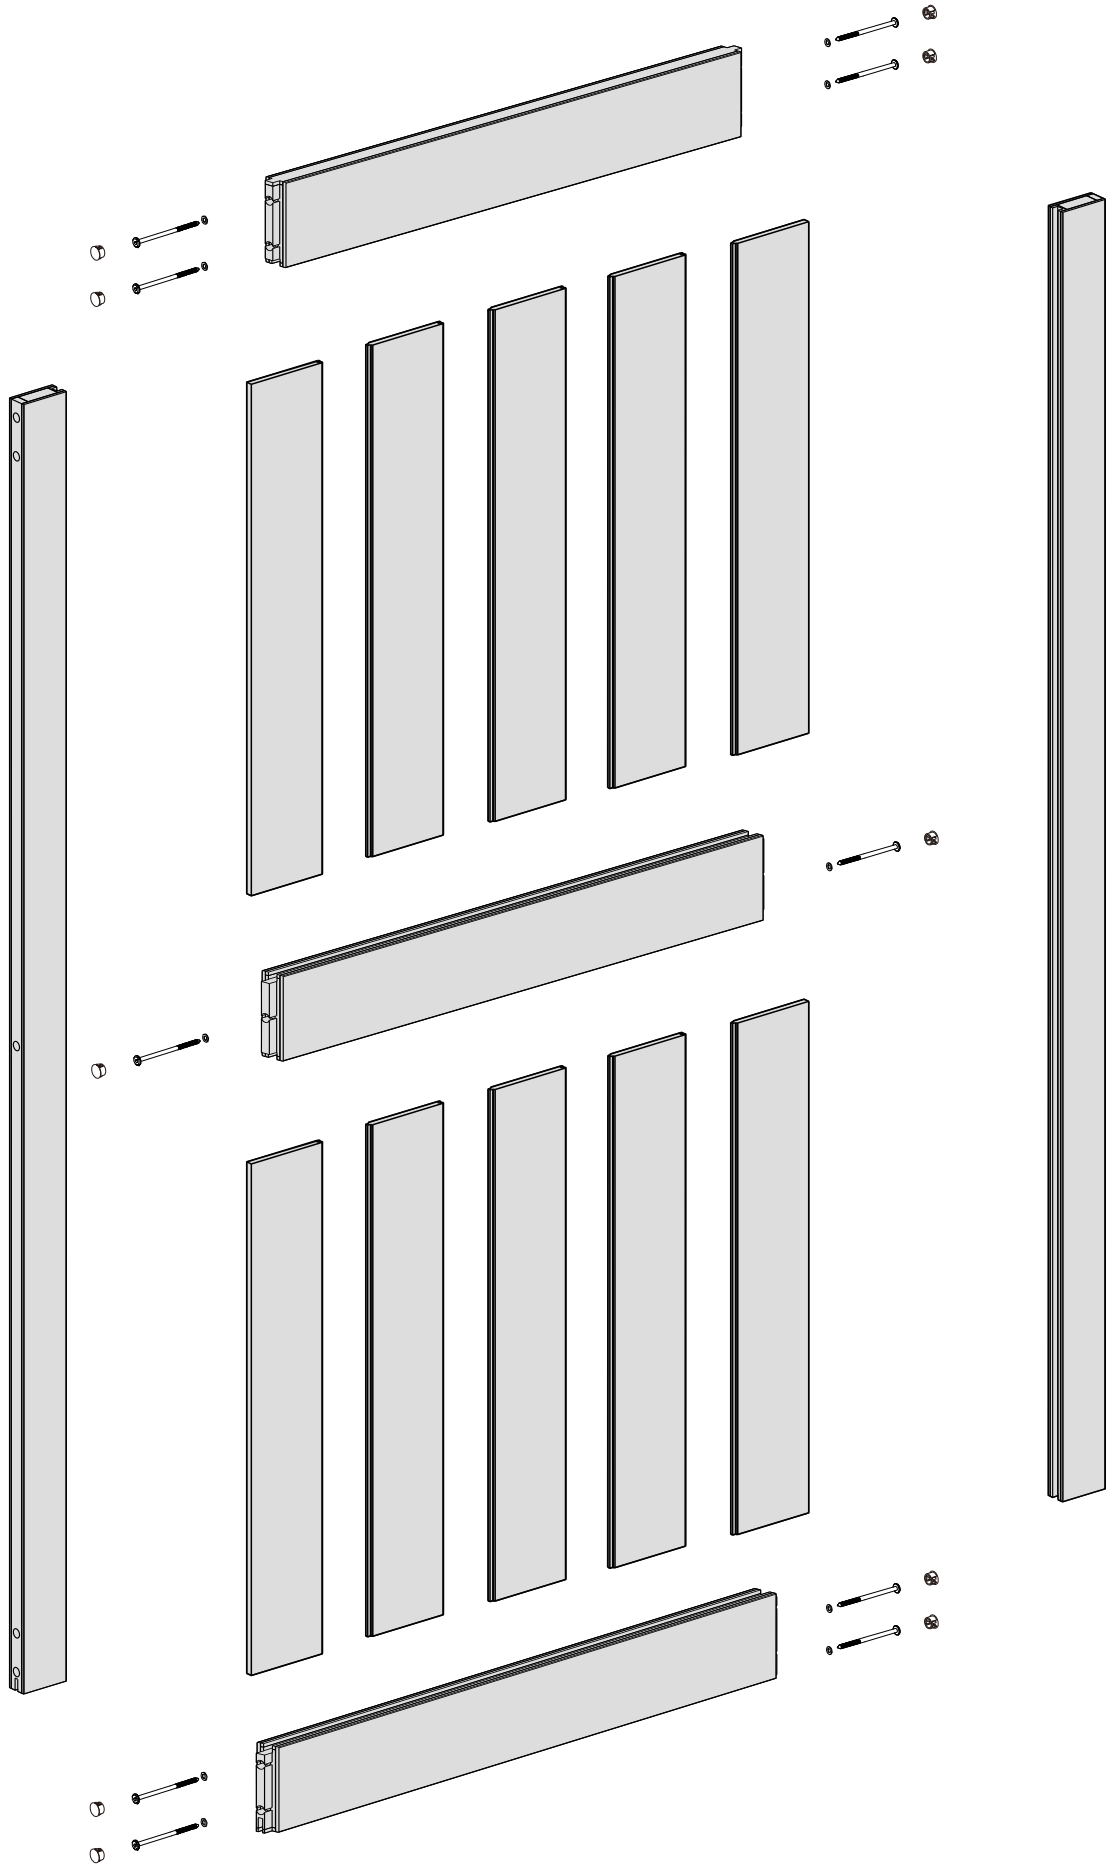

INSTRUCTIONS

Package List		
A1A2	Side Stile	*2
B1	Top Rail	*1
B2	Bottom Rail	*1
B3	Middle Rail	*1
C1	Left Side Slat	*2
C2	Middle Side Slat	*6
C3	Right Side Slat	*2
D	Carriage Bolt	*10
E	Plastic Cap	*10
F	Washer	*10
G	Gasket	*4
	Spanner	

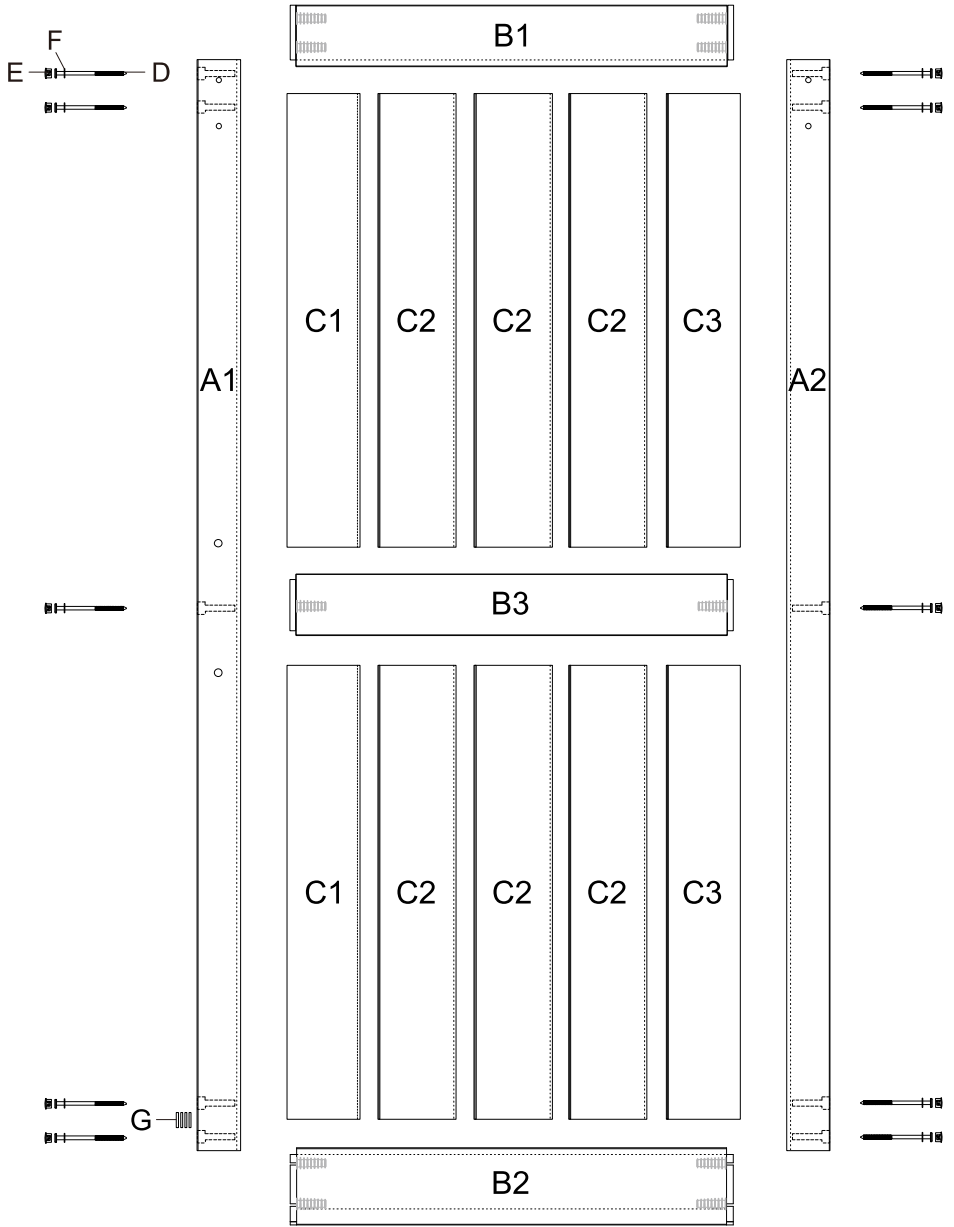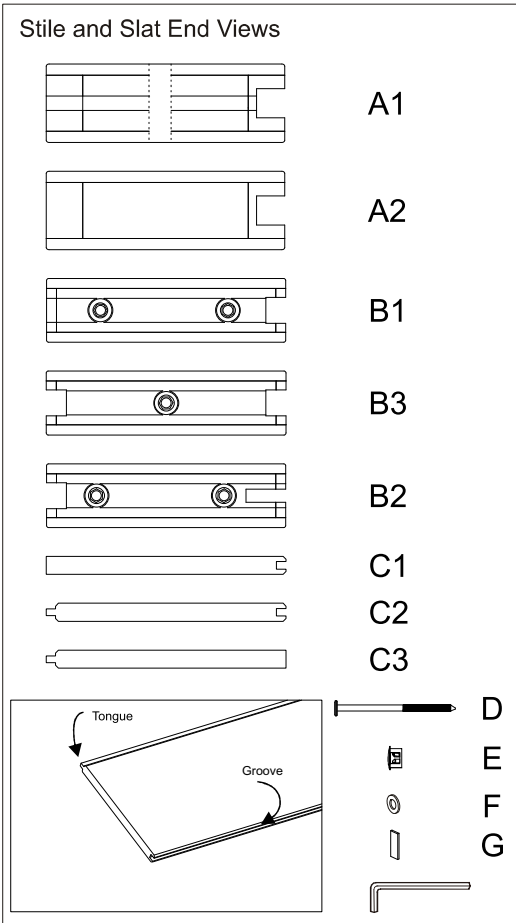


Note: Gasket(H) is spare. If the door core board is loose, add 4 gaskets in the groove at bottom of side stile.

To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

Step 1.

Lay out **Side Stile A1** on flat, clean surface. Make sure the groove side is to the inside.


Attach **B1 Top Rail**, **B2 Bottom Rail** and **B3 Middle Rail** to **Side Stile A1** by inserting the tongues into the groove of A1 and fasten with carriage bolts.

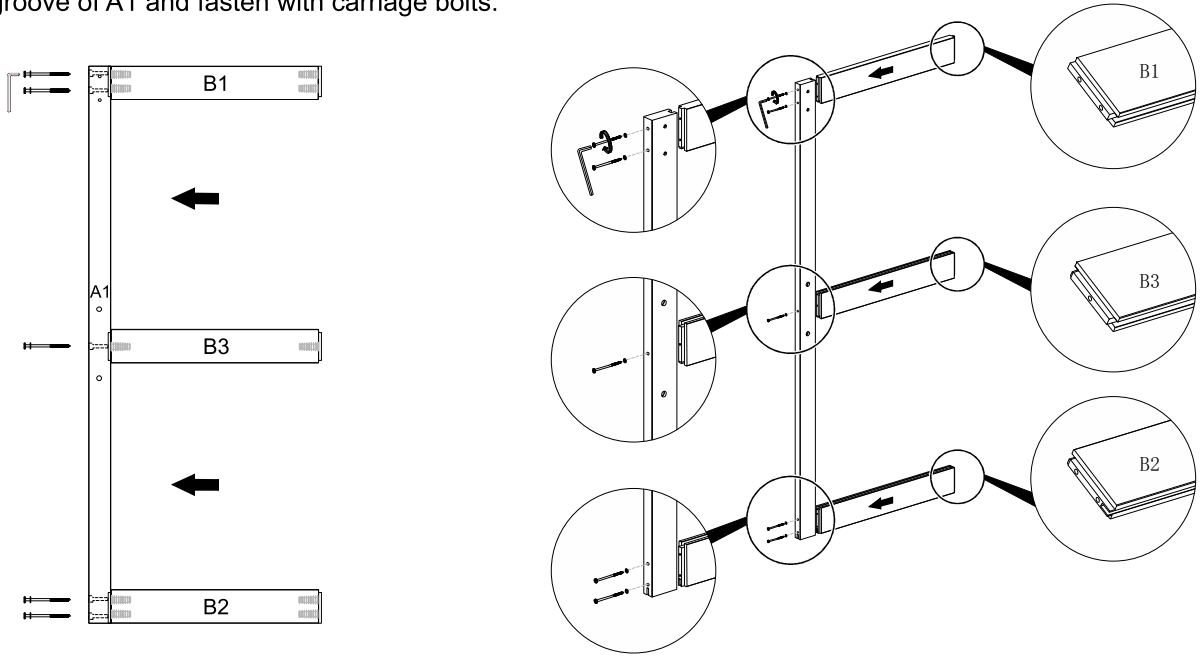

Step 2.


Assemble **C1 Left Side Slat**, **C2 Middle Side Slat**, **C3 Right Side Slat** as shown in figure.

Make sure C1 tongue facing inside C2 next to C1 with the tongue facing inside C3 next to the last C2 with flat side in side.

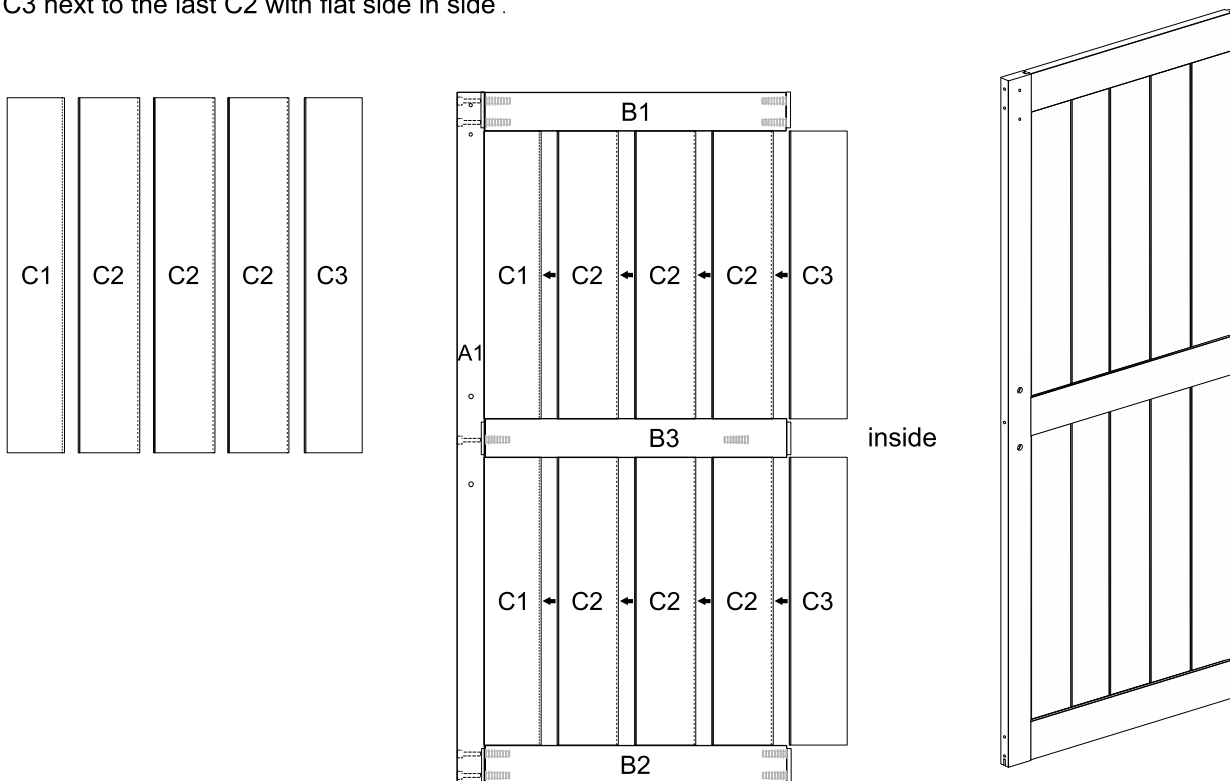

Step 3.

Place the other **Side Stile A2** beside the assembled **Rails** and **Side Slats** by inserting the rails' tongues to the groove of **A2** and fasten with carriage bolts

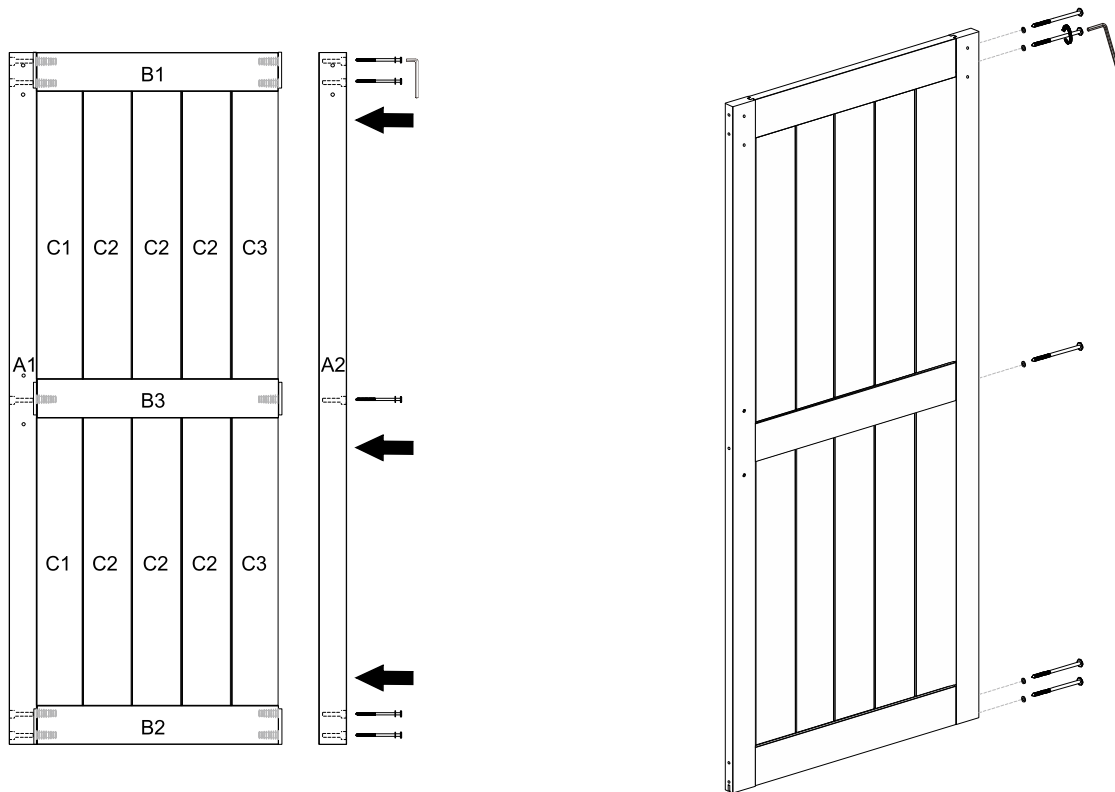

Step 4.

Make sure all bolts are tightened, place **E Plastic Caps** on top of the bolts and flush with Side Stile surface.

