

Installation & Assembly

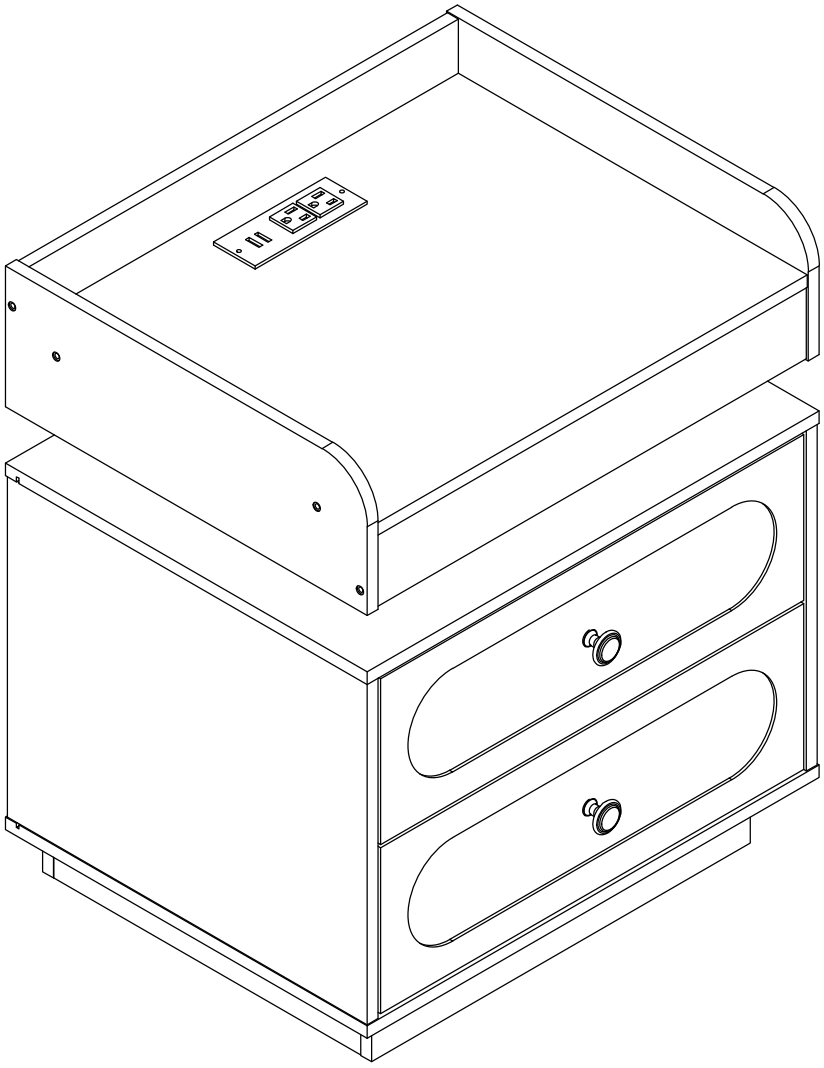

ASSEMBLY INSTRUCTIONS

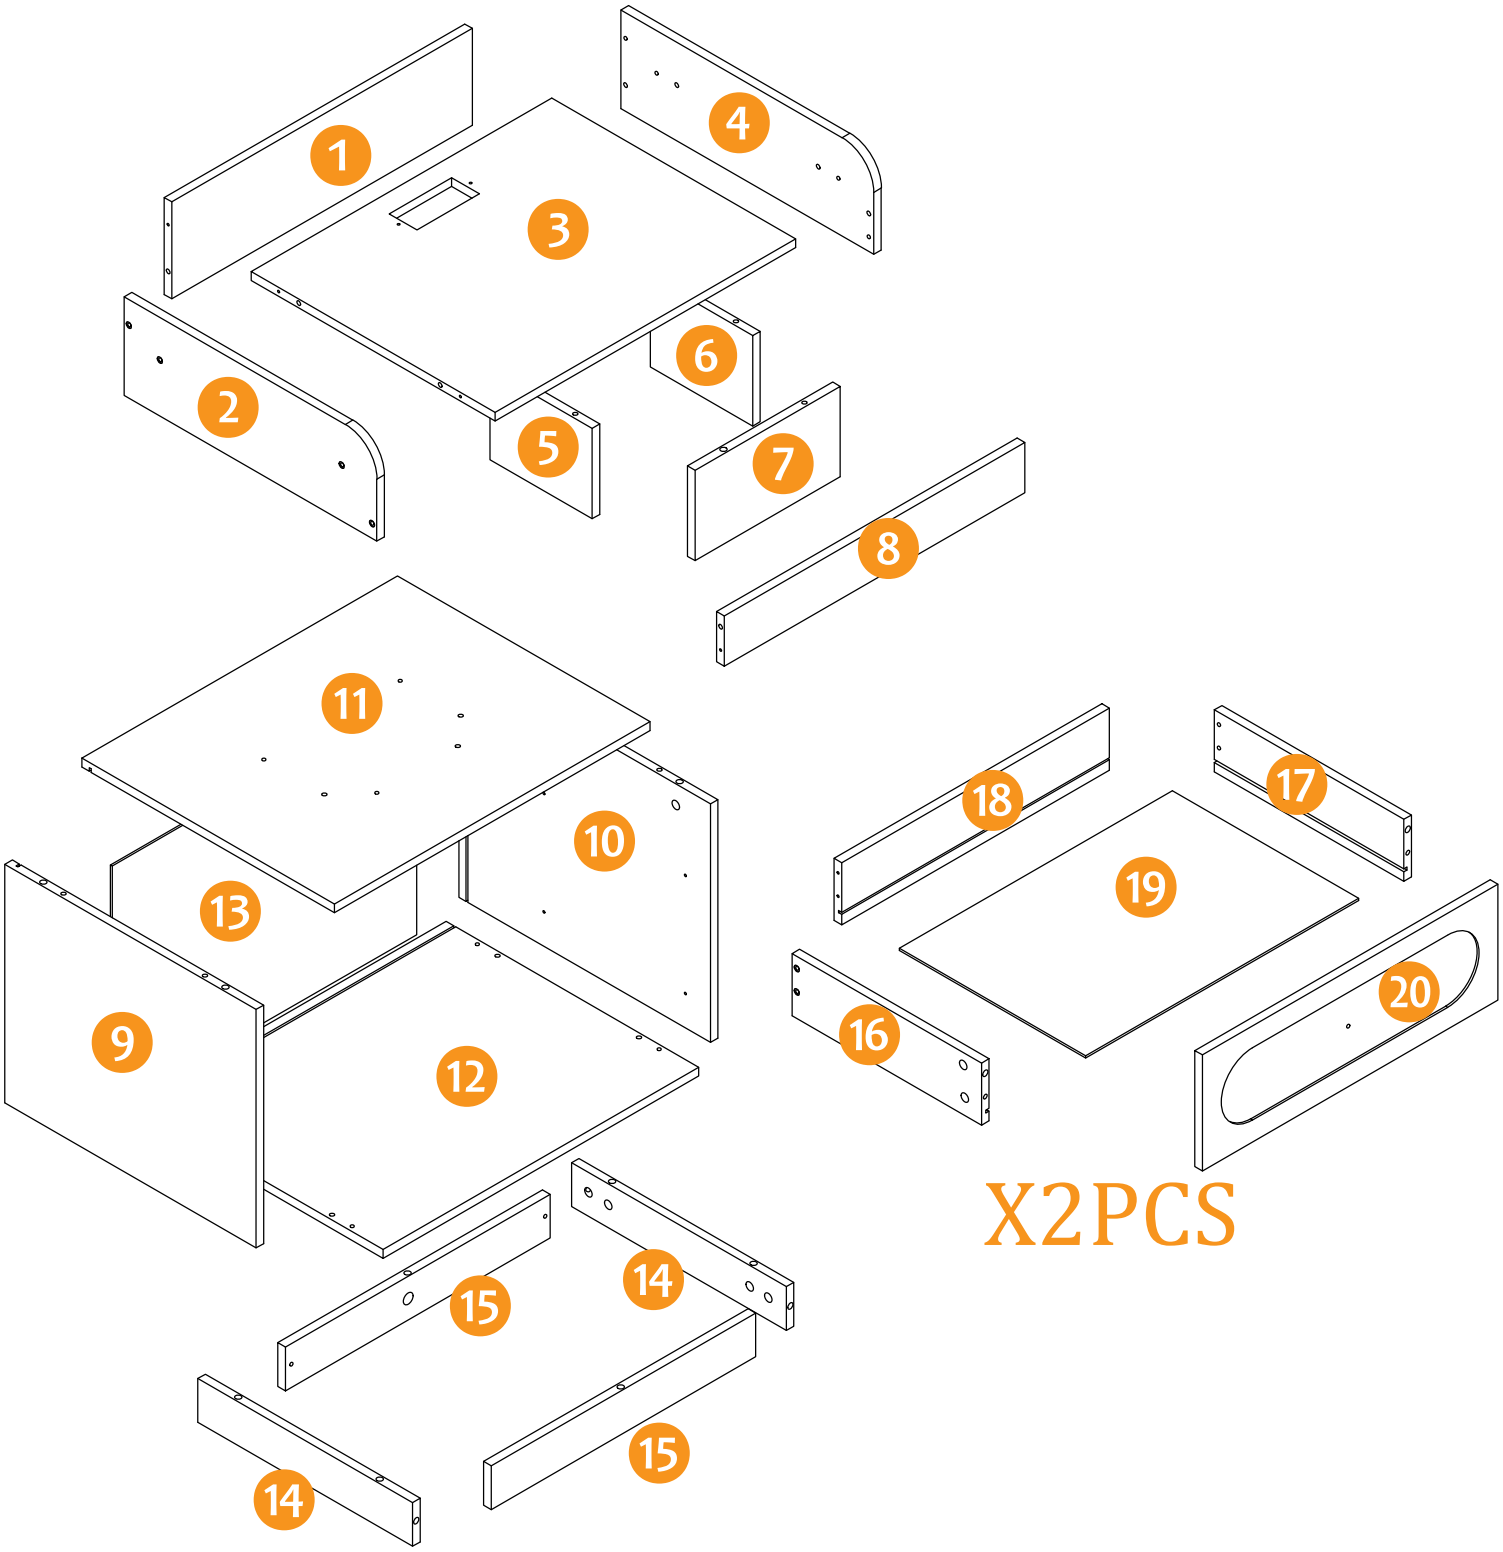

Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues

↓

Contact us with your problem,pic, number and qty to the "Contact seller" button in the detail page of your order

↓

Respond with 24 hours to solve issue

Before You Start

1.Read through each step carefully and follow the proper order


2.Separate and count all your parts and hardware


3.Give yourself enough room for the assembly process


4.Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw


Cam Lock Fastening System

This Cam Lock Fastening System willl be used throughout theassembly process




















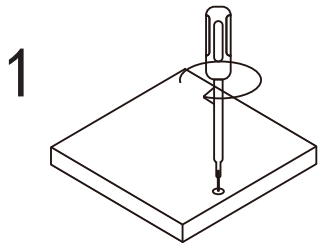


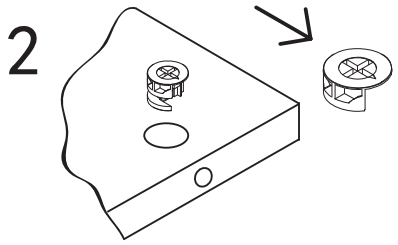

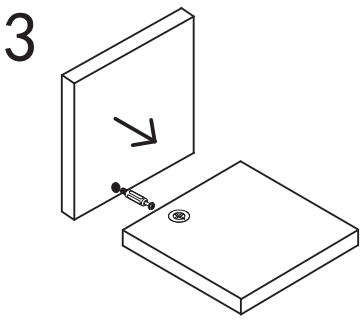

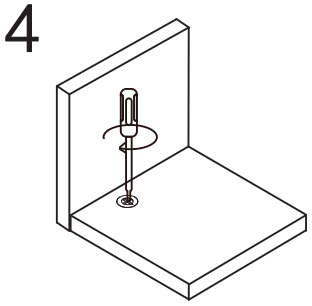


Parts List

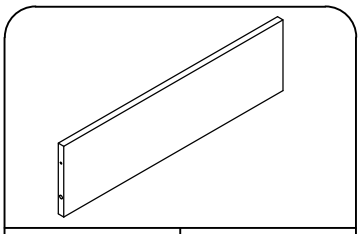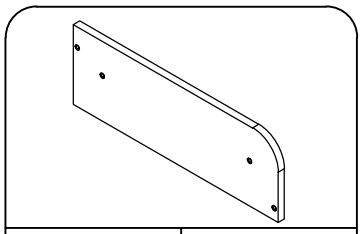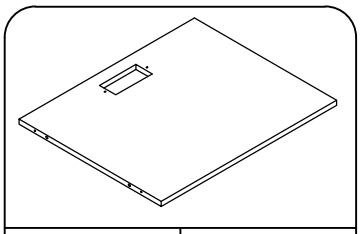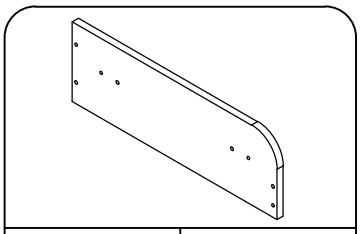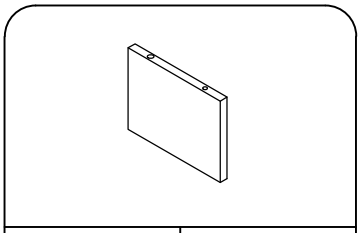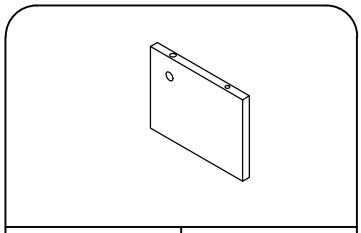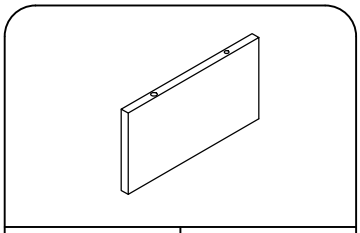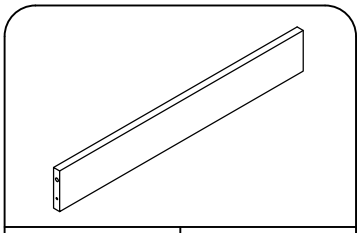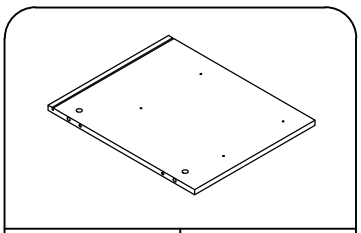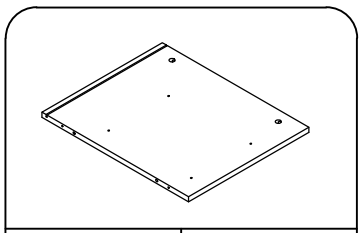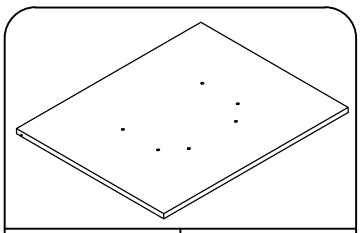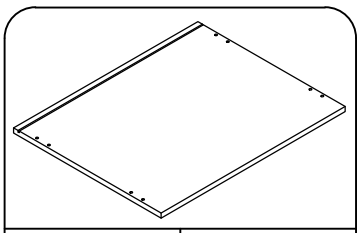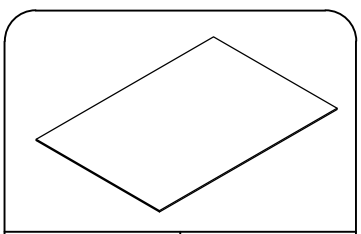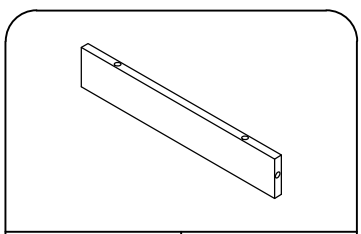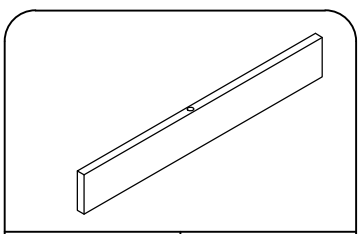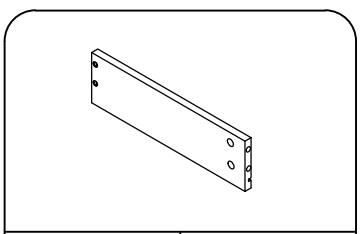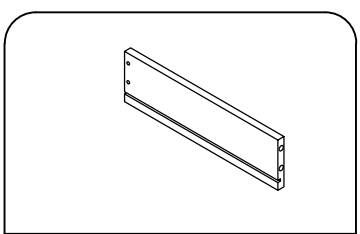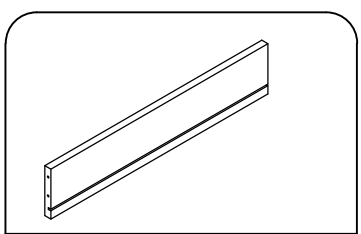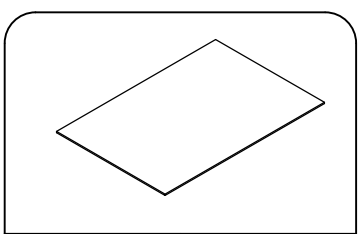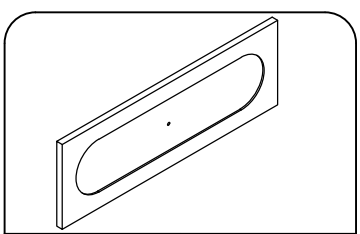			
1 1PC	2 1PC	3 1PC	4 1PC
			
5 1PC	6 1PC	7 1PC	8 1PC
			
9 1PC	10 1PC	11 1PC	12 1PC
			
13 1PC	14 2PCS	15 2PCS	16 2PCS
			
17 2PCS	18 2PCS	19 2PCS	20 2PCS

Hardware List

	
A	25PCS

 ϕ12	
B	25PCS


 Ø6*30mm	
C	22PCS


 Ø4*40mm	
D	23PCS


	
E	2PCS


 M4*16mm	
F	2PCS


 ϕ3*12mm	
G	16PCS

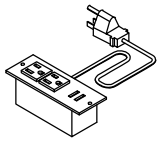
	
H	1PC

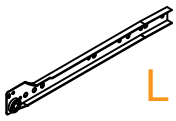 L	
I	2PCS

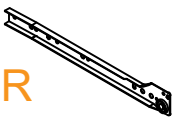 R	
J	2PCS

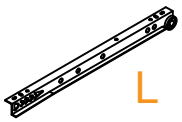 L	
K	2PCS

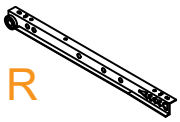
 R	
L	2PCS

	
M	4PCS



 ϕ3*14mm	
N	4PCS


 ϕ3*14mm	
O	2PCS


Hole Patch 	
P	8PCS

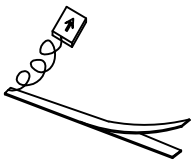
	
Q	1PC


STEP 1


	A	25PCS	ø3*12mm	G	8PCS		I	2PCS		J	2PCS

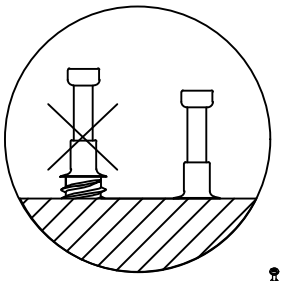


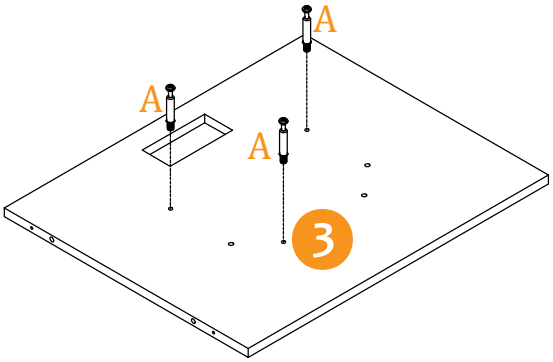


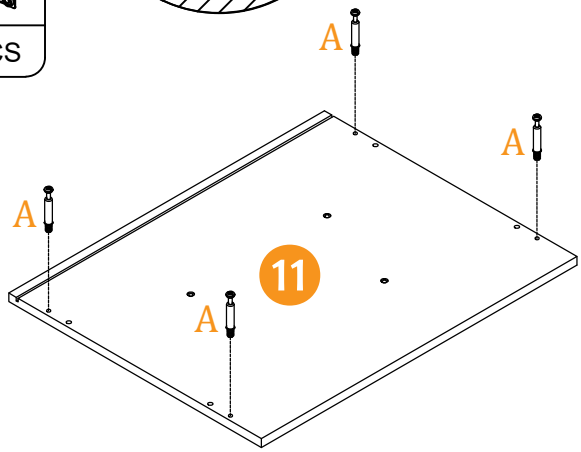


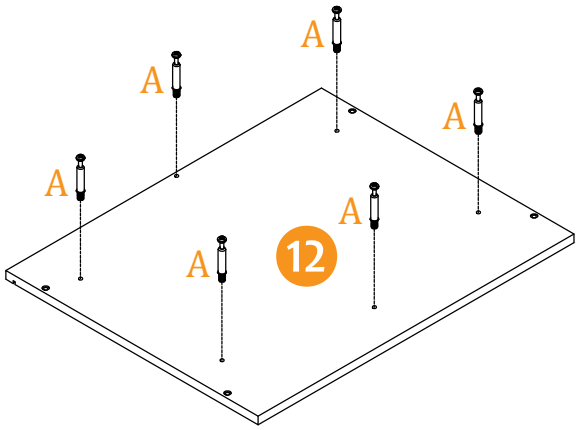


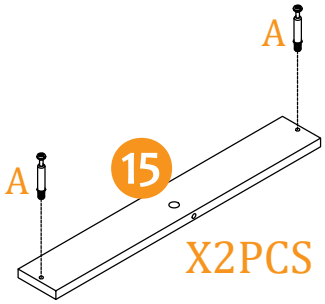

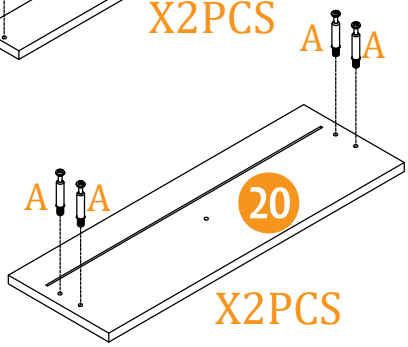


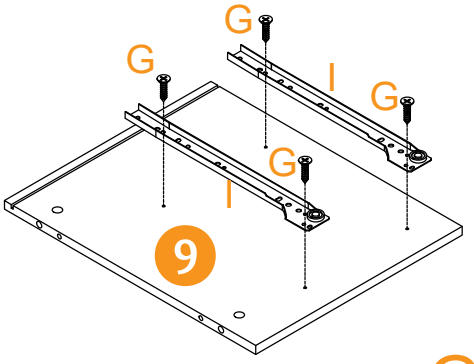

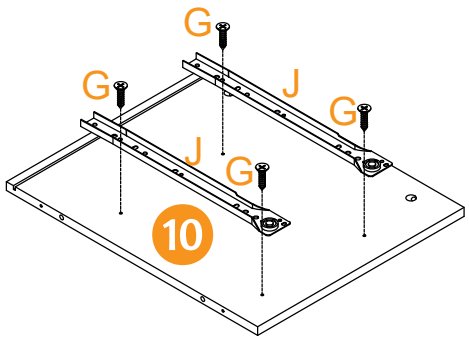

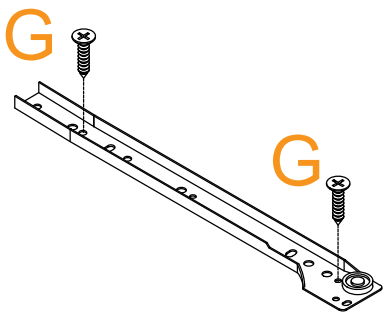


STEP 2



ϕ12	
B	3PCS




Ø6*30mm	
C	3PCS

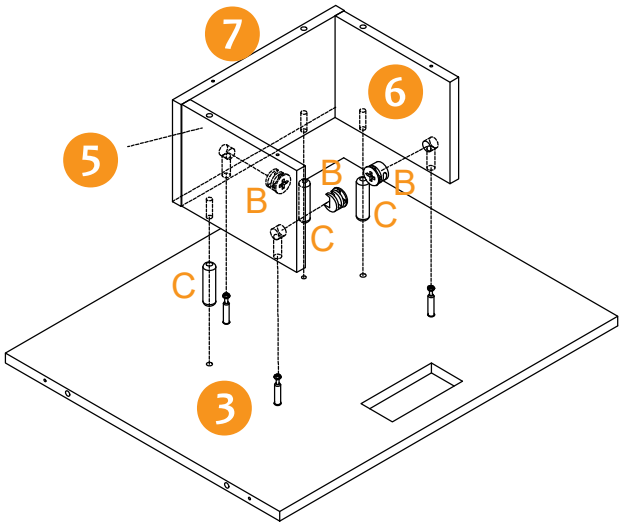


STEP3




ϕ12	
B	4PCS

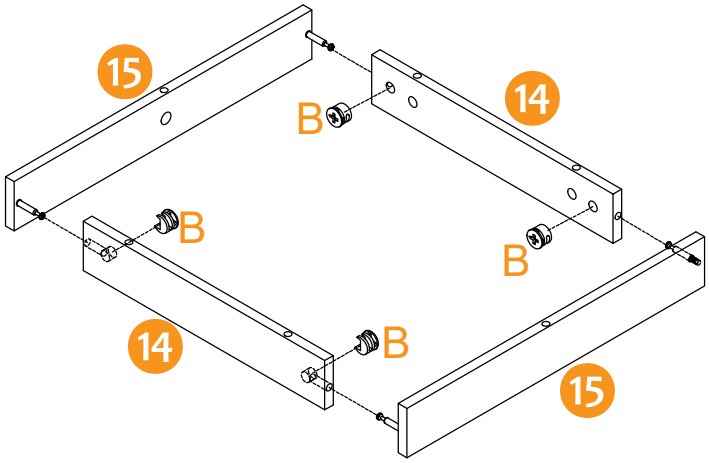


STEP 4




Ø6*30mm	
C	8PCS



Ø4*40mm	
D	8PCS

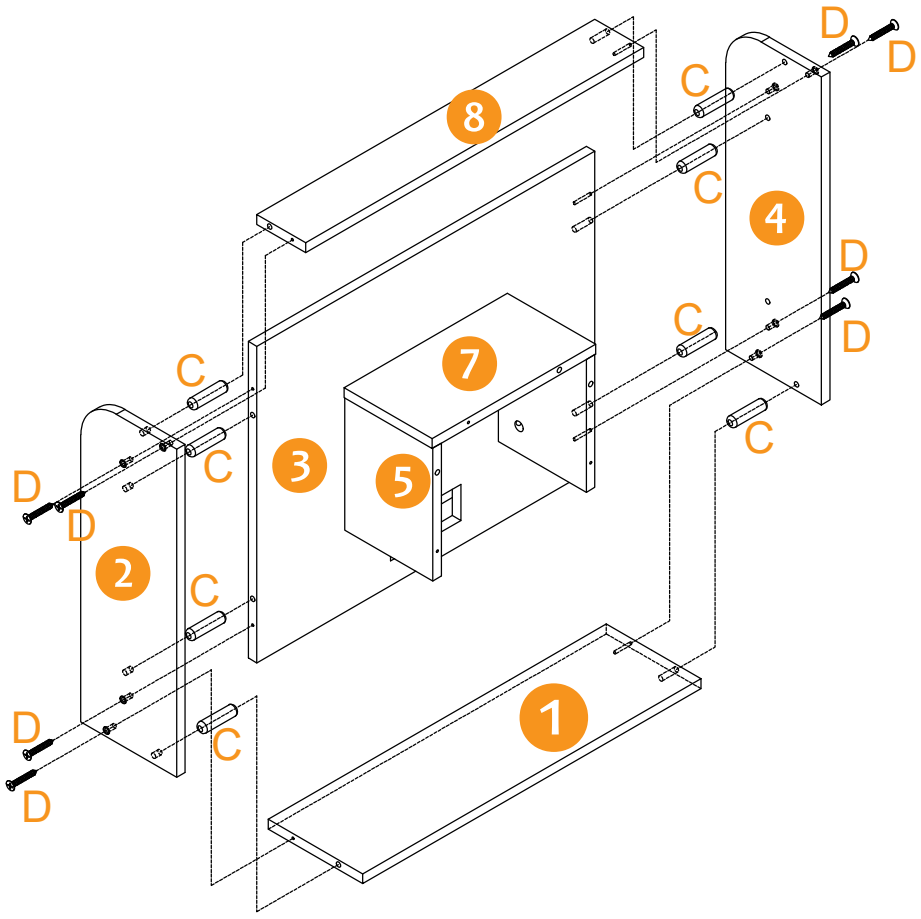


STEP 5

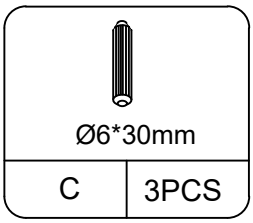


Ø6*30mm

C	3PCS

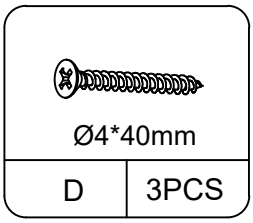


Ø4*40mm


D	3PCS

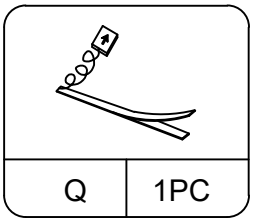

Q	1PC

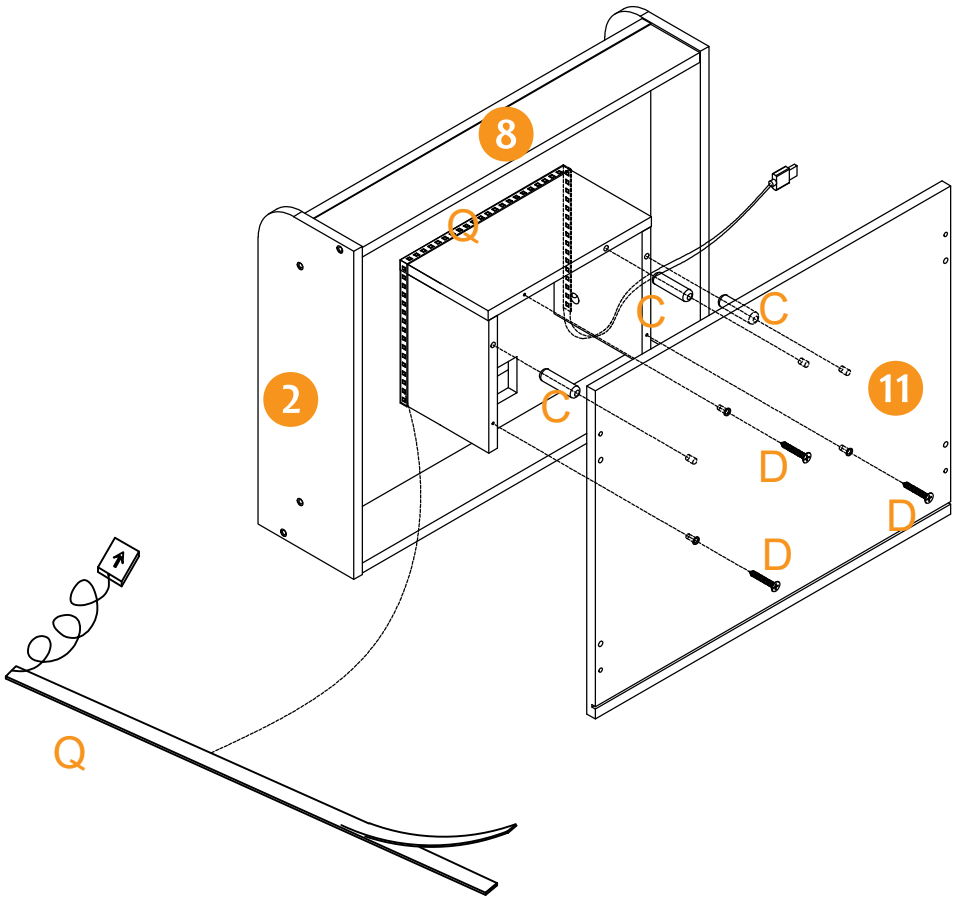


STEP 6

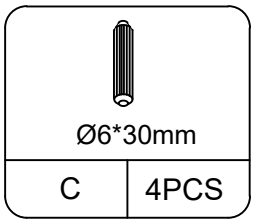


Ø6*30mm

C	4PCS

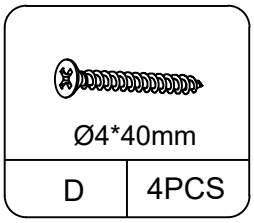


Ø4*40mm


D	4PCS

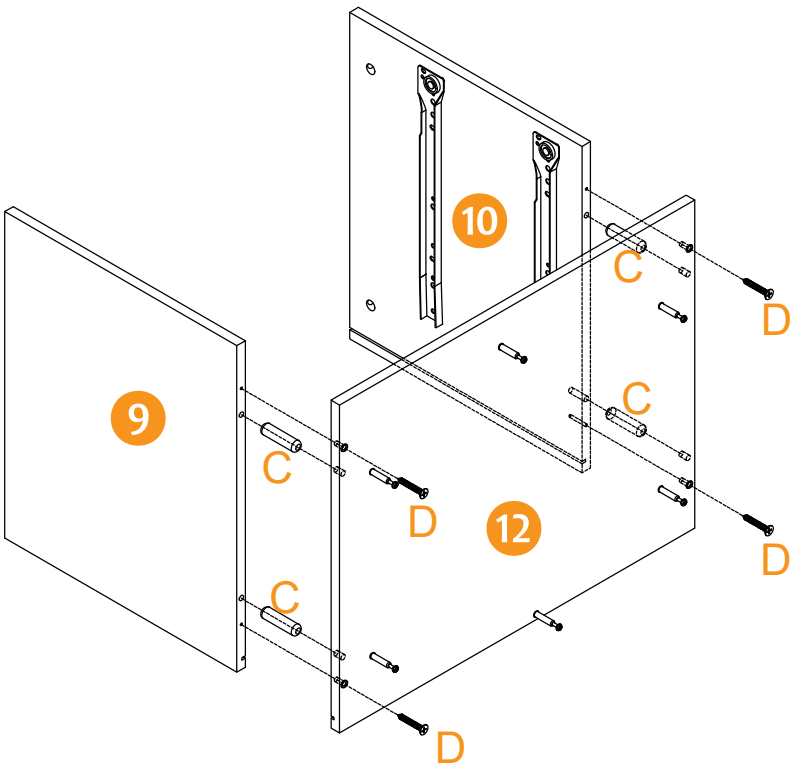


STEP 7

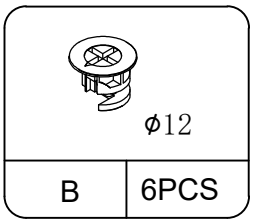

B	6PCS

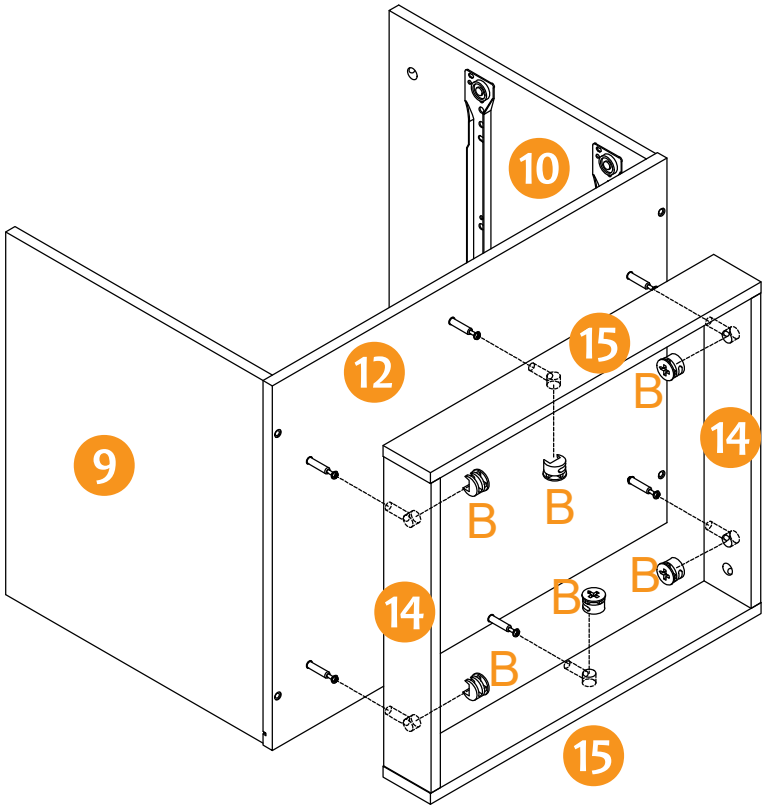

STEP 8

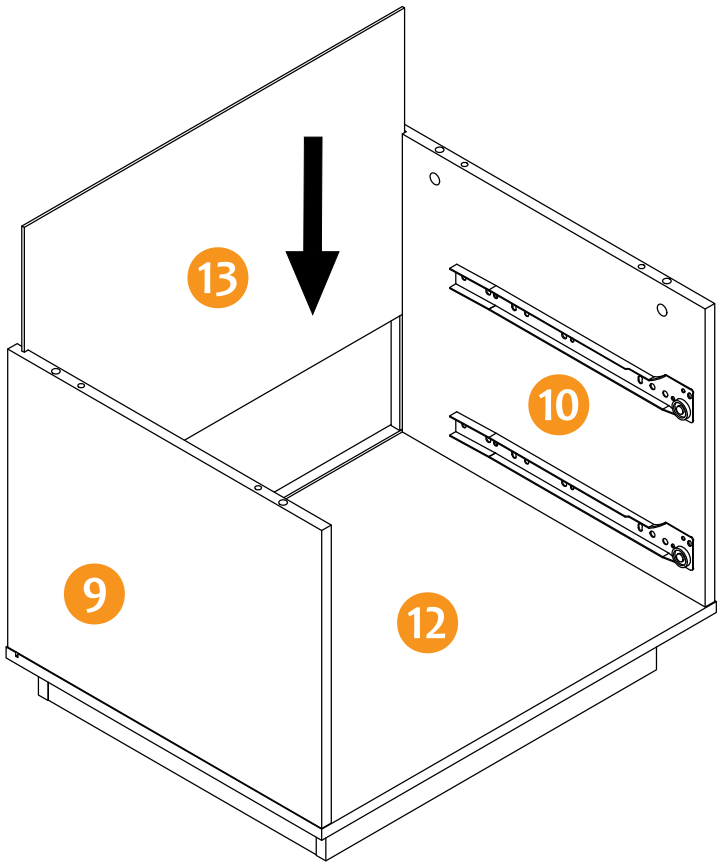

STEP 9




ϕ12

B	4PCS



Ø6*30mm

C	4PCS

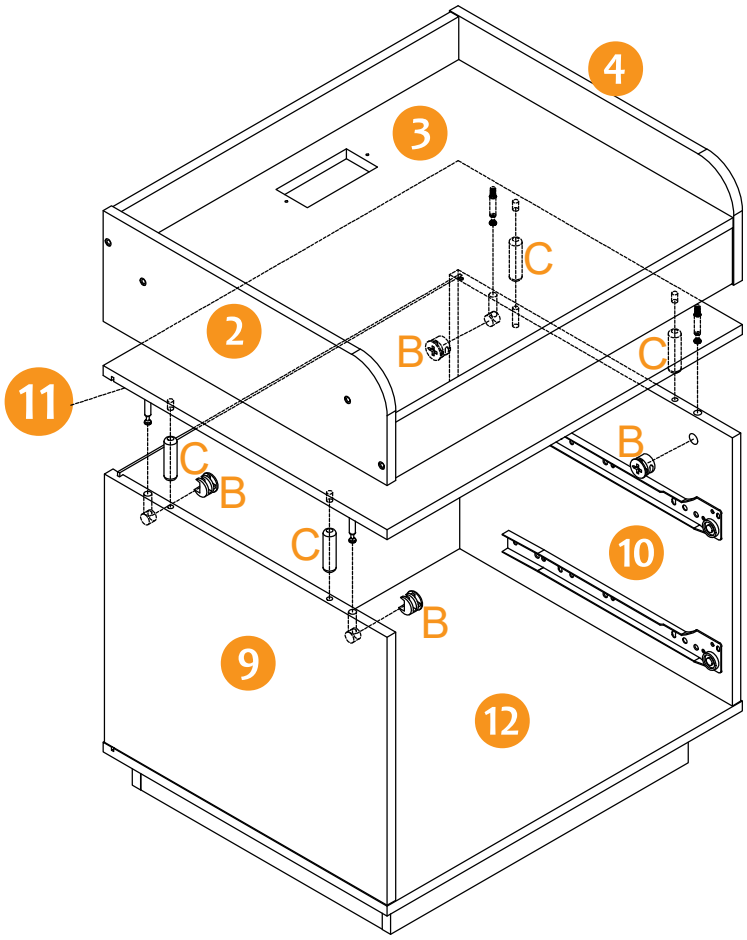


STEP 10




Ø4*40mm

D	8PCS

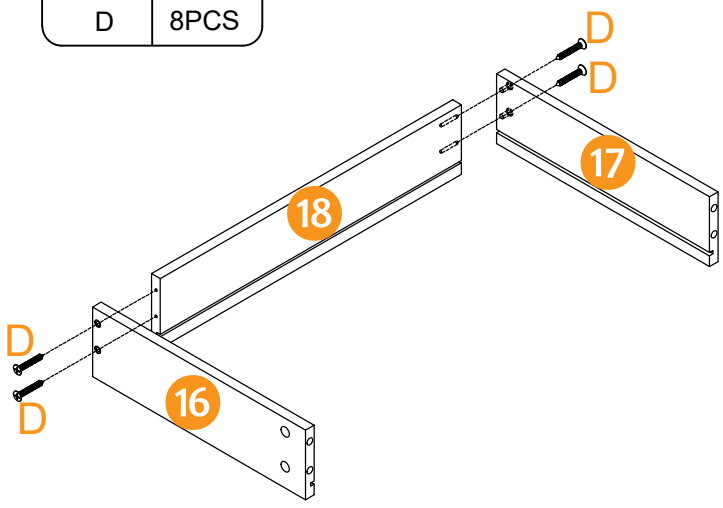

X2PCS

STEP 11

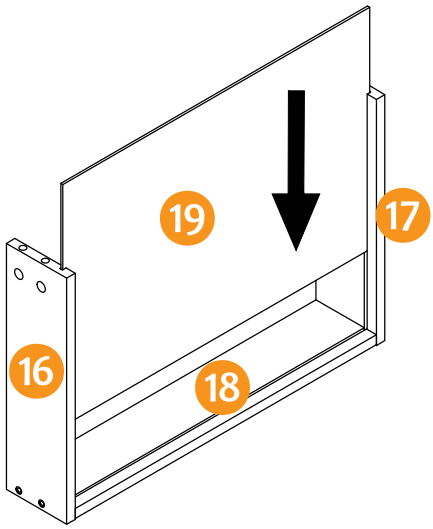

X2PCS

STEP 12




B	8PCS



E	2PCS



F	2PCS

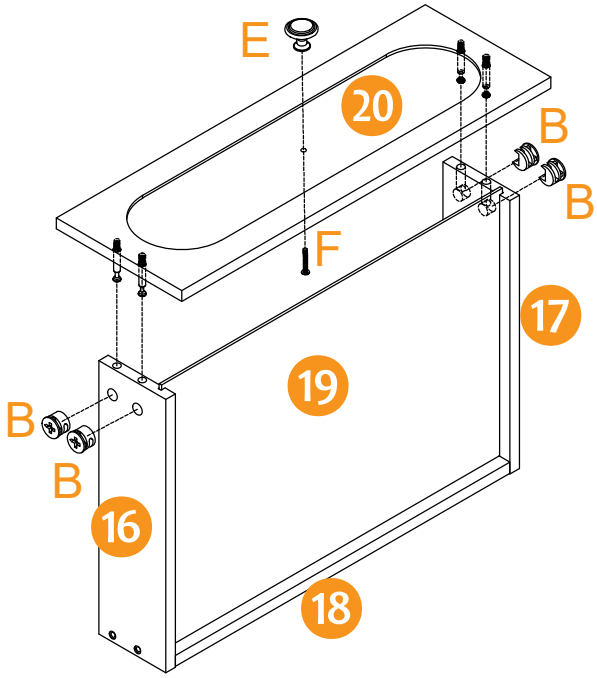

X2PCS

STEP 13




G	8PCS



K	2PCS



L	2PCS

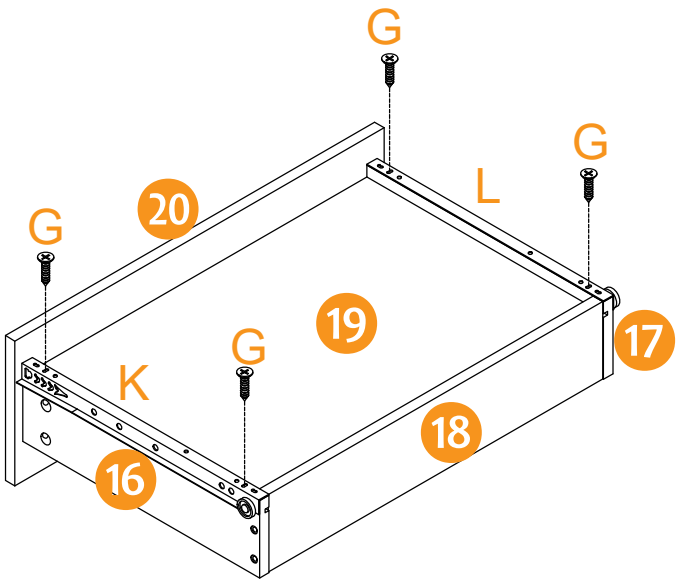


X2PCS

STEP 14

M	4PCS

ϕ3*14mm	
N	4PCS

H	1PC

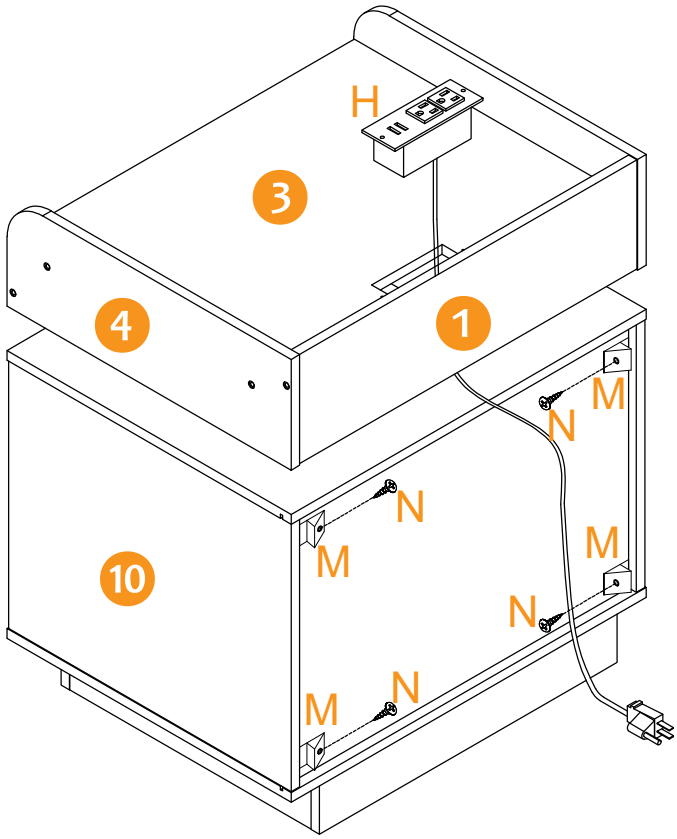

STEP 15

ϕ3*14mm	
O	2PCS

Hole Patch	
P	8PCS

