

Assembly Instructions

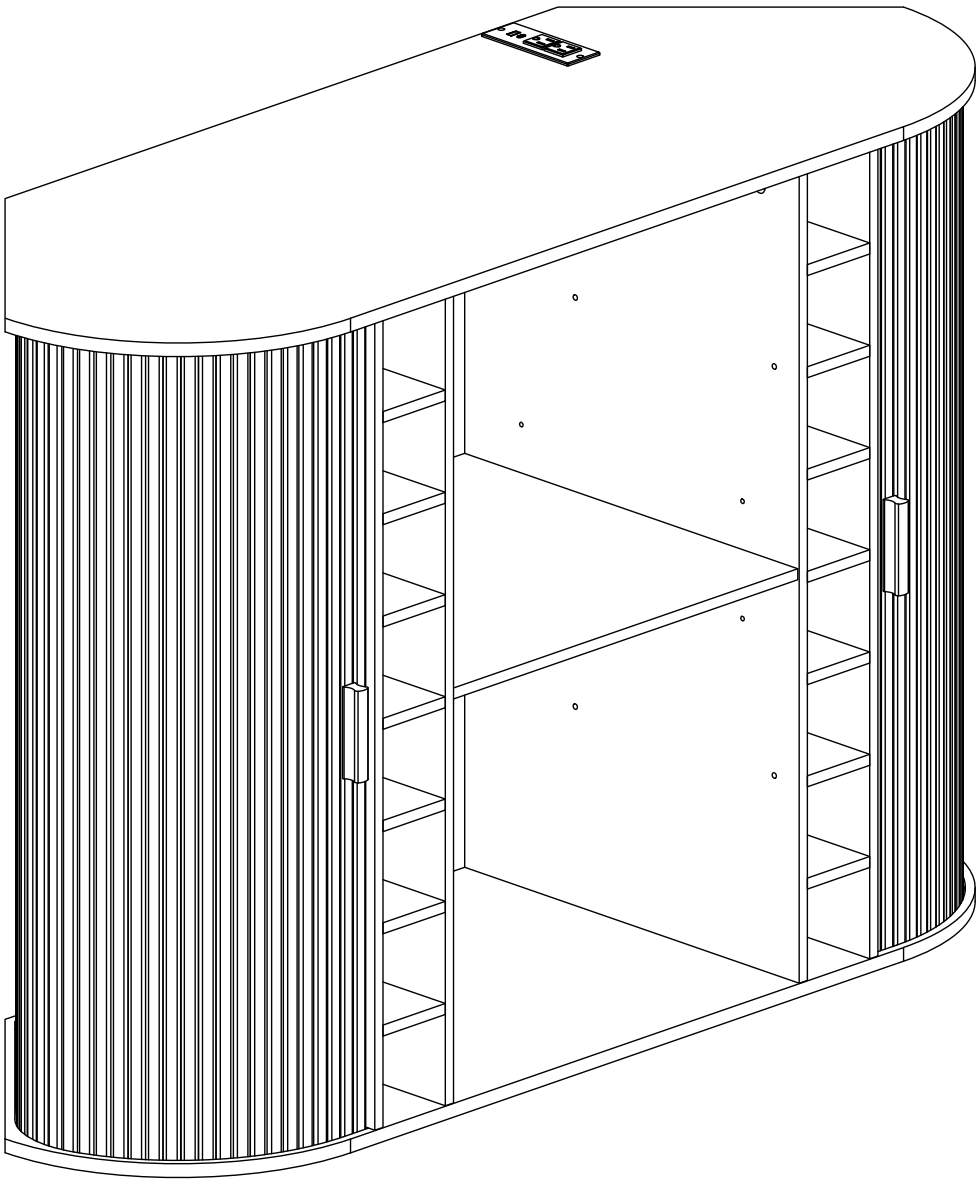


Before Assembly
Tips Before Your Start:
Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

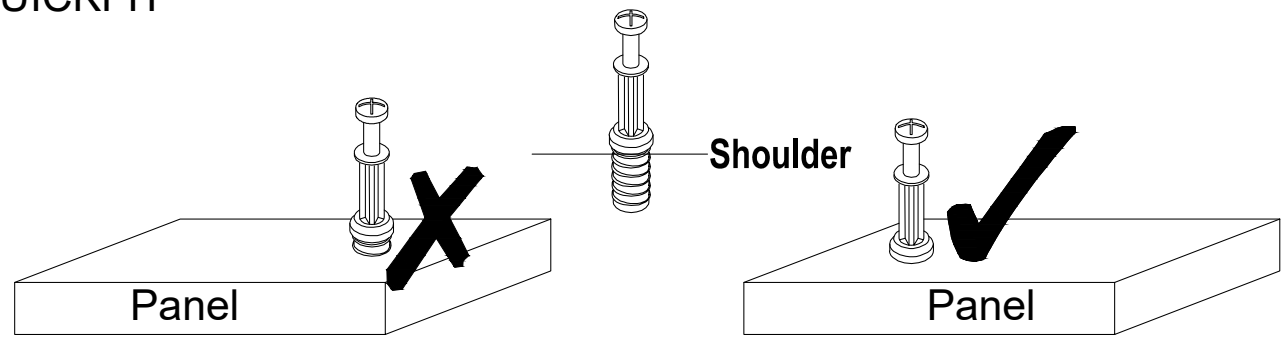

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

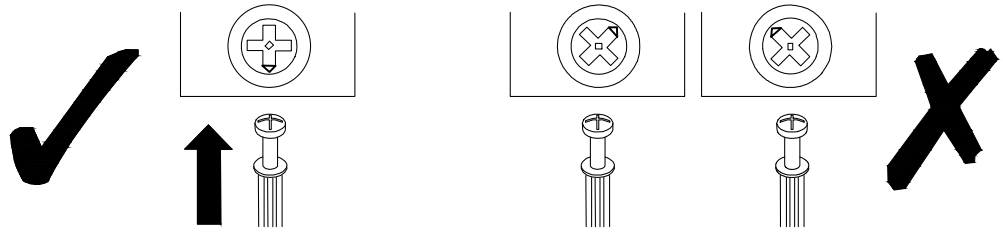


CORRECT WRONG

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT


















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

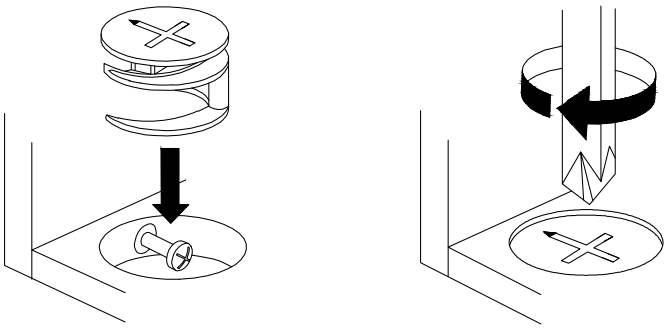


Tum cam lock clockwise to tighten.


Part List

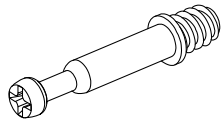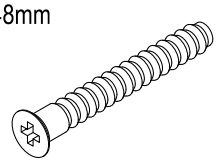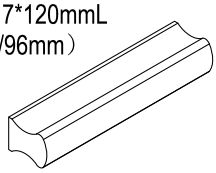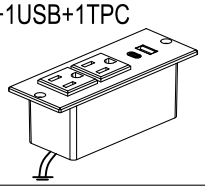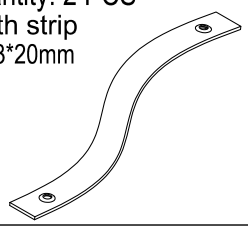No. A Quantity: 12+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 12+1 PCS Cam ø15x9.5mm 	No. C Quantity: 12+1 PCS Sticker ø20mm 	No. D Quantity: 88+3 PCS Dowel ø6x30mm 
No. E Quantity: 6+1 PCS Screw ø3.5x12mm 	No. F Quantity: 8+1 PCS Screw ø3x16mm 	No. G Quantity: 4+1 PCS Bolt M4x12mm 	No. H Quantity: 44+2 PCS Screw ø5x48mm 
No. I Quantity: 4 PCS ø5x16mm 	No. J Quantity: 8 PCS plastic buckle 15*15*10mm 	No. K Quantity: 2 PCS Handle 23*17*120mmL （M4/96mm） 	No. L Quantity: 6+1 PCS Foot Pad 35x35mm 
No. M Quantity: 1 PC Socket 2AC+1USB+1TPC 	TOOL Quantity: 1 PC spanner 4MM 		
No. N Quantity: 2 PCS plastic plug Ø8*40 	No. O Quantity: 2 PCS Screw Ø4*38 	No. P Quantity: 2 PCS Screw ø4x16mm 	No. Q Quantity: 2 PCS Cloth strip L193*20mm 


Product structure

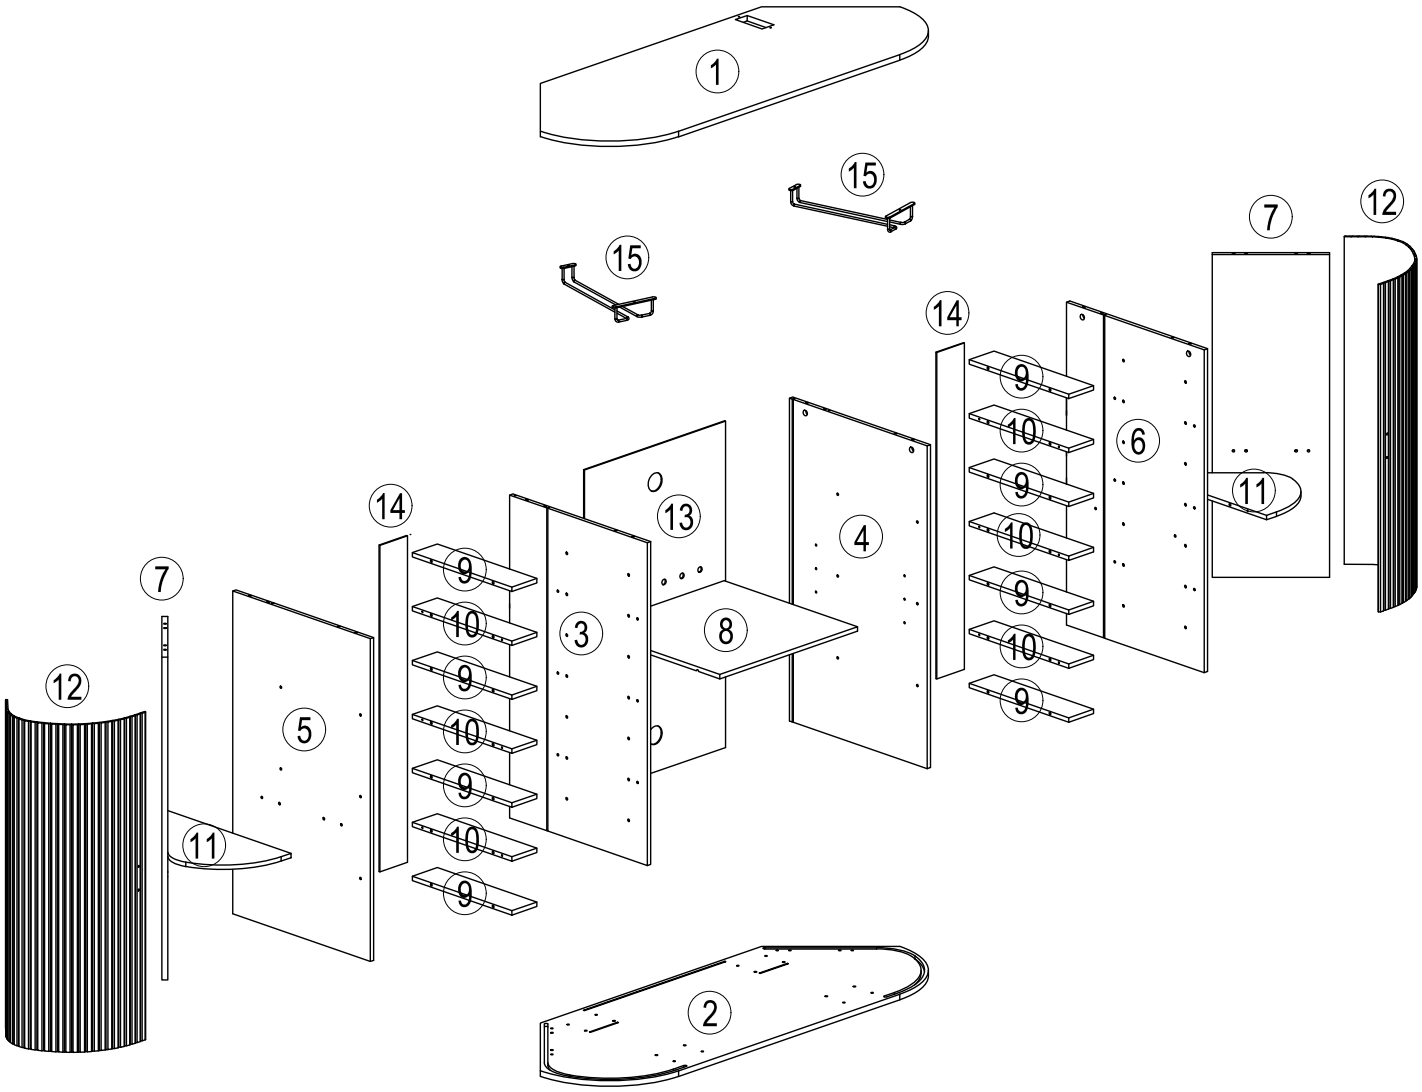


STEP 1

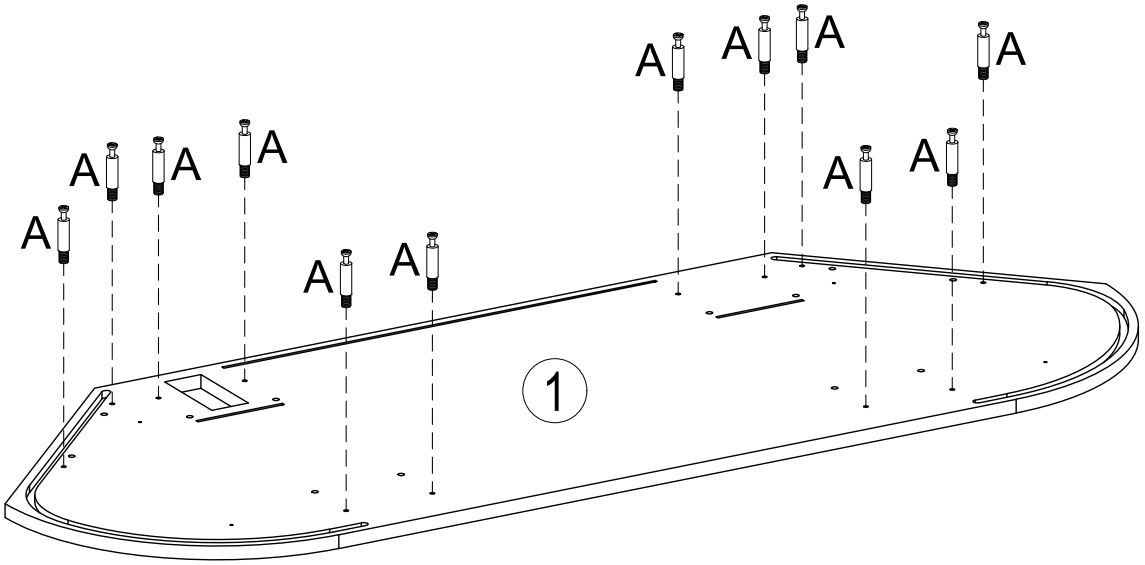


No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm




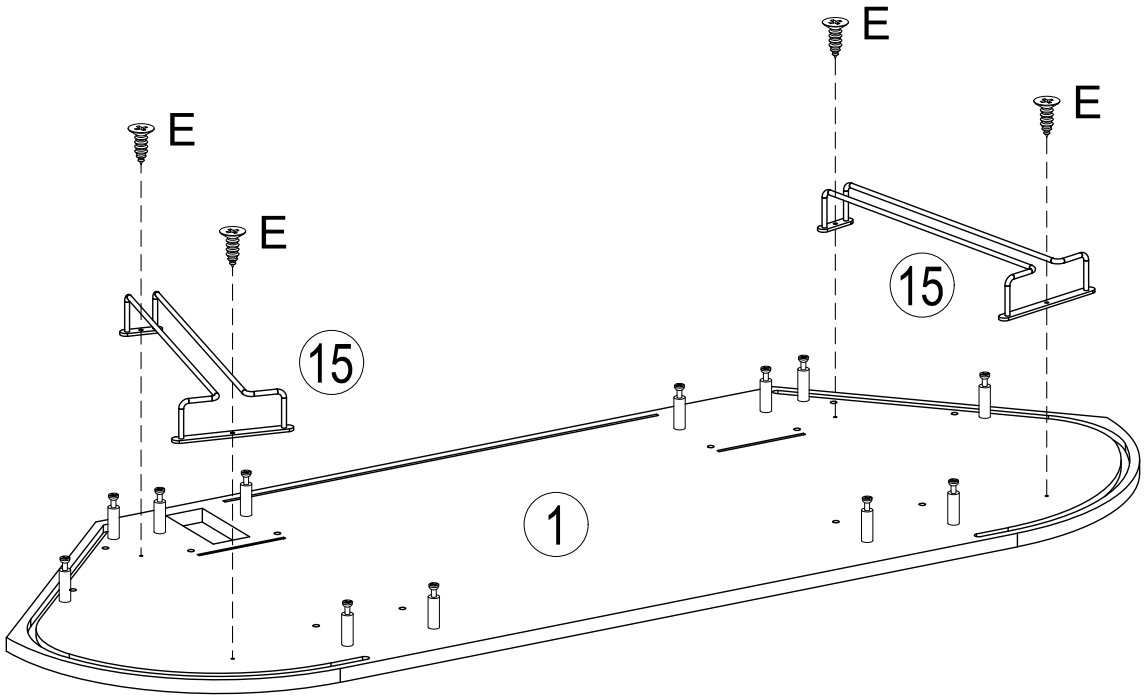

No. E
Quantity: 4 PCS
Screw
ø3.5x12mm




STEP 2

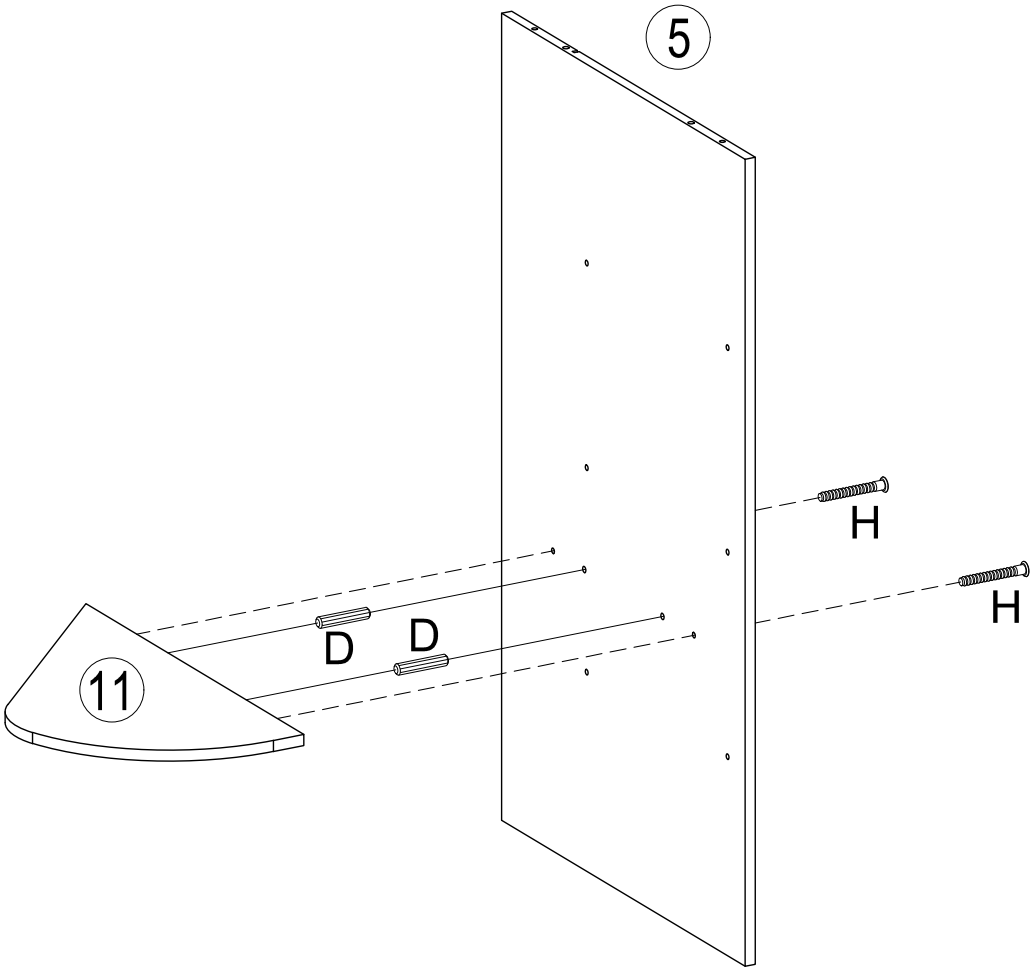


No. D	No. H
Quantity: 2 PCS Dowel ø6x30mm	Quantity: 2 PCS Screw ø5x48mm

STEP 3

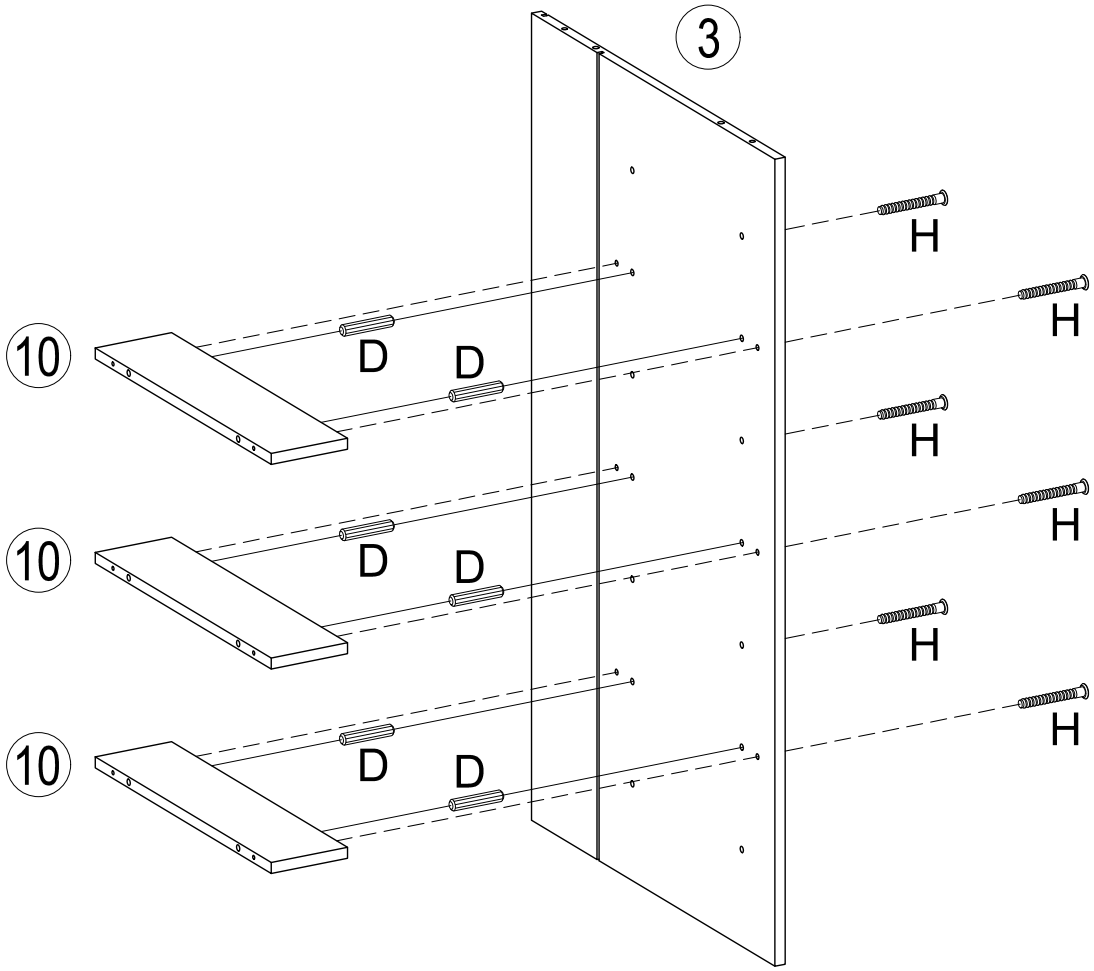


No. D	No. H
Quantity: 6 PCS Dowel ø6x30mm	Quantity: 6 PCS Screw ø5x48mm


STEP 4

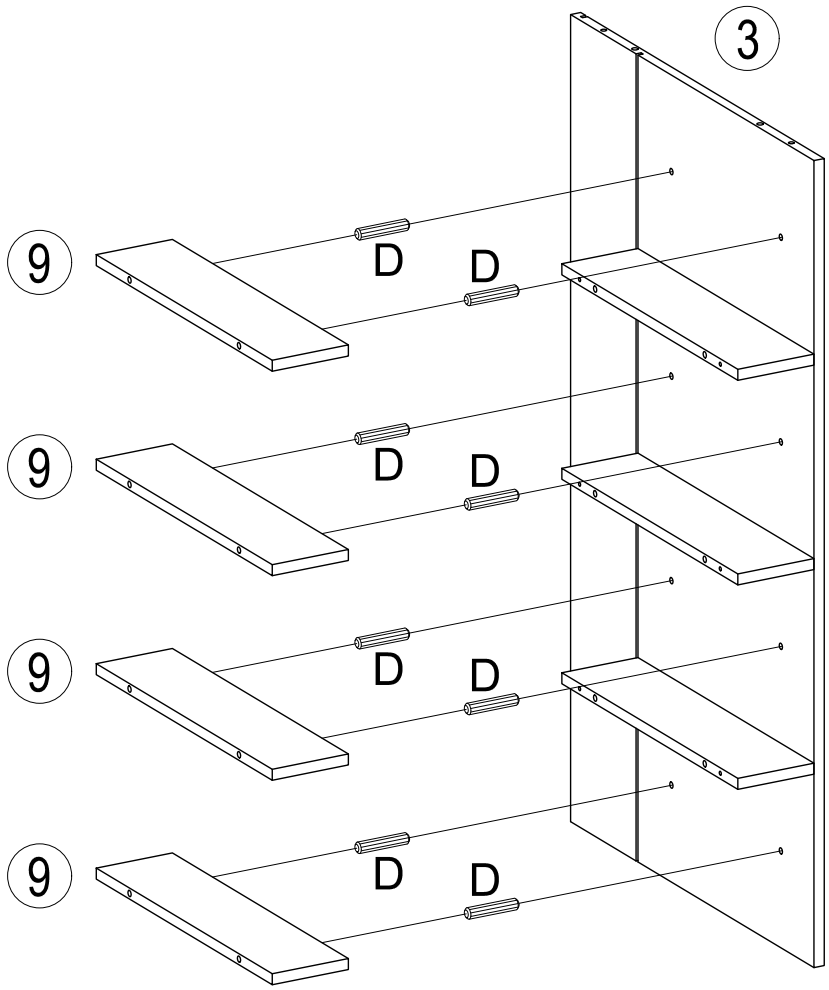


No. D
Quantity: 8 PCS
Dowel
ø6x30mm




STEP 5

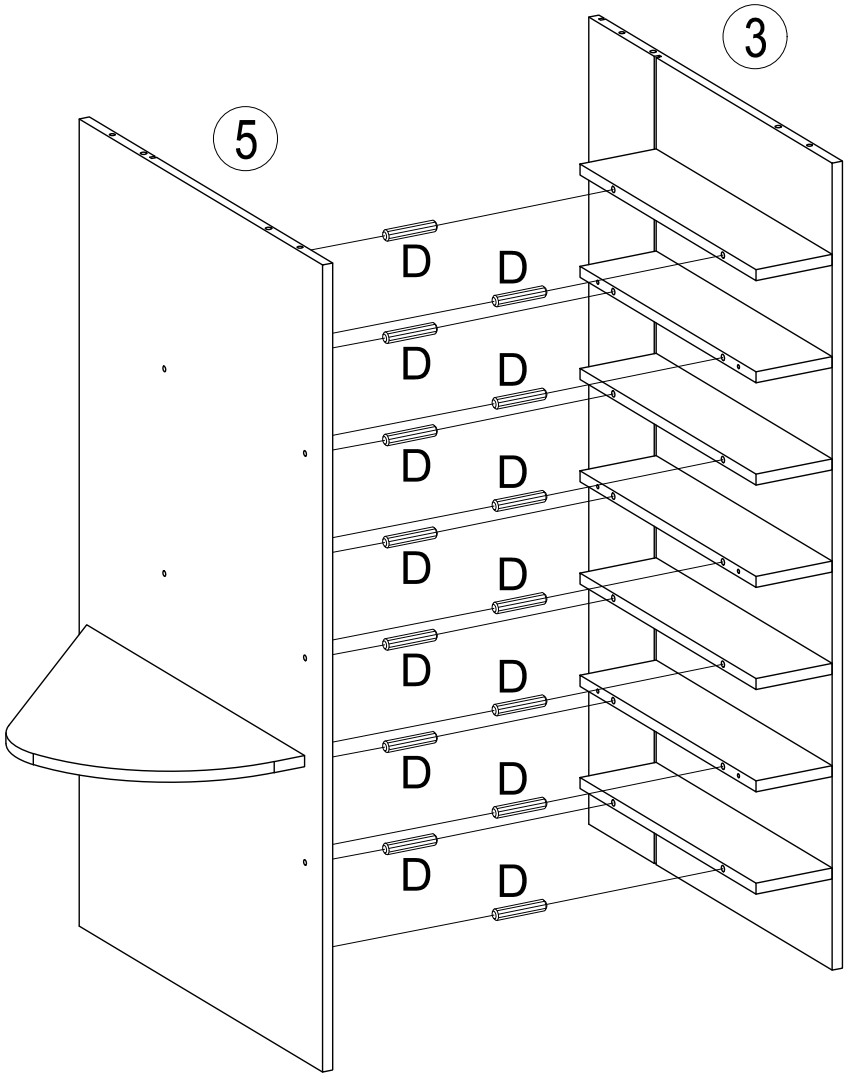


No. D
Quantity: 14 PCS
Dowel
ø6x30mm




STEP 6

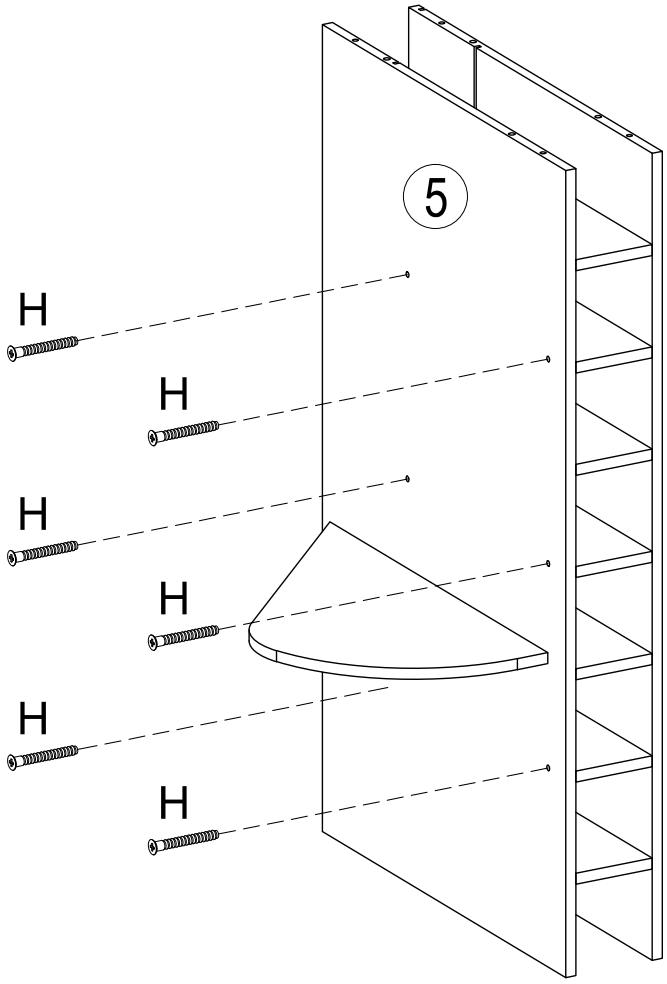

No. H
Quantity: 6 PCS
Screw
ø5x48mm

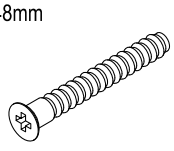


STEP 7

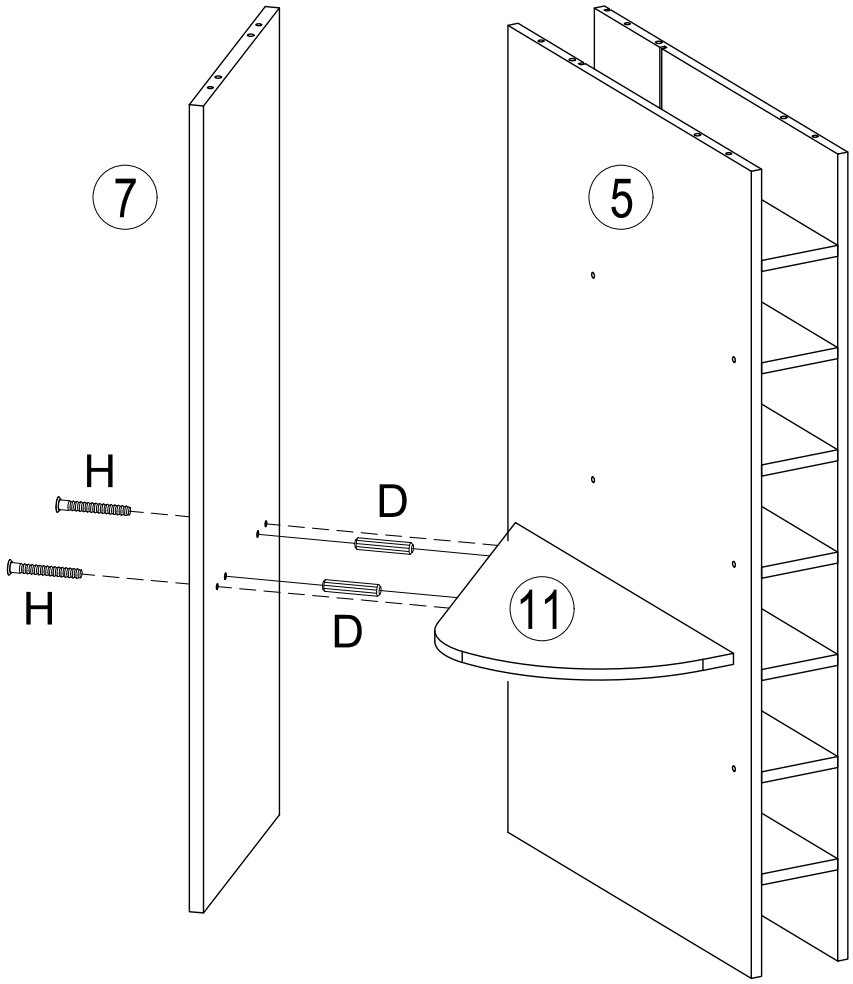


No. D	No. H
Quantity: 2 PCS Dowel ø6x30mm	Quantity: 2 PCS Screw ø5x48mm

STEP 8

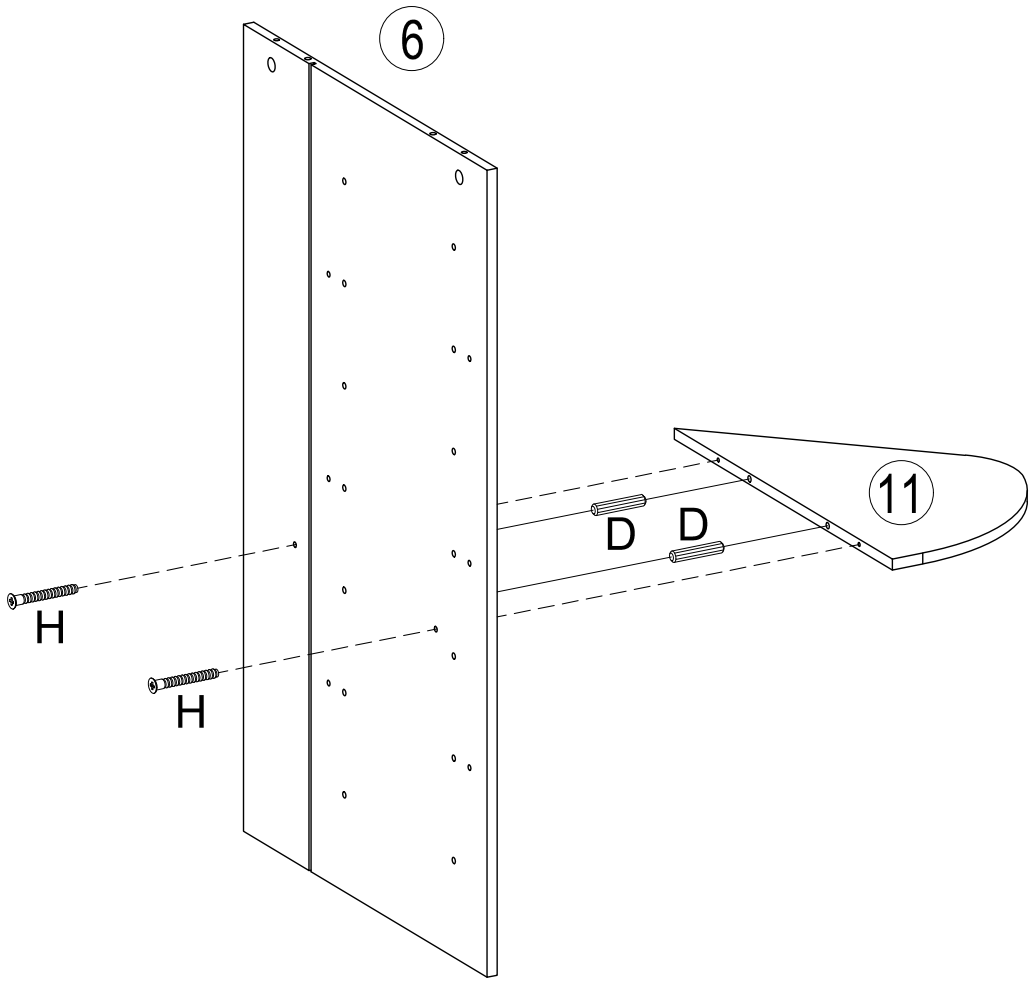


No. D	No. H
Quantity: 2 PCS Dowel ø6x30mm	Quantity: 2 PCS Screw ø5x48mm

STEP 9

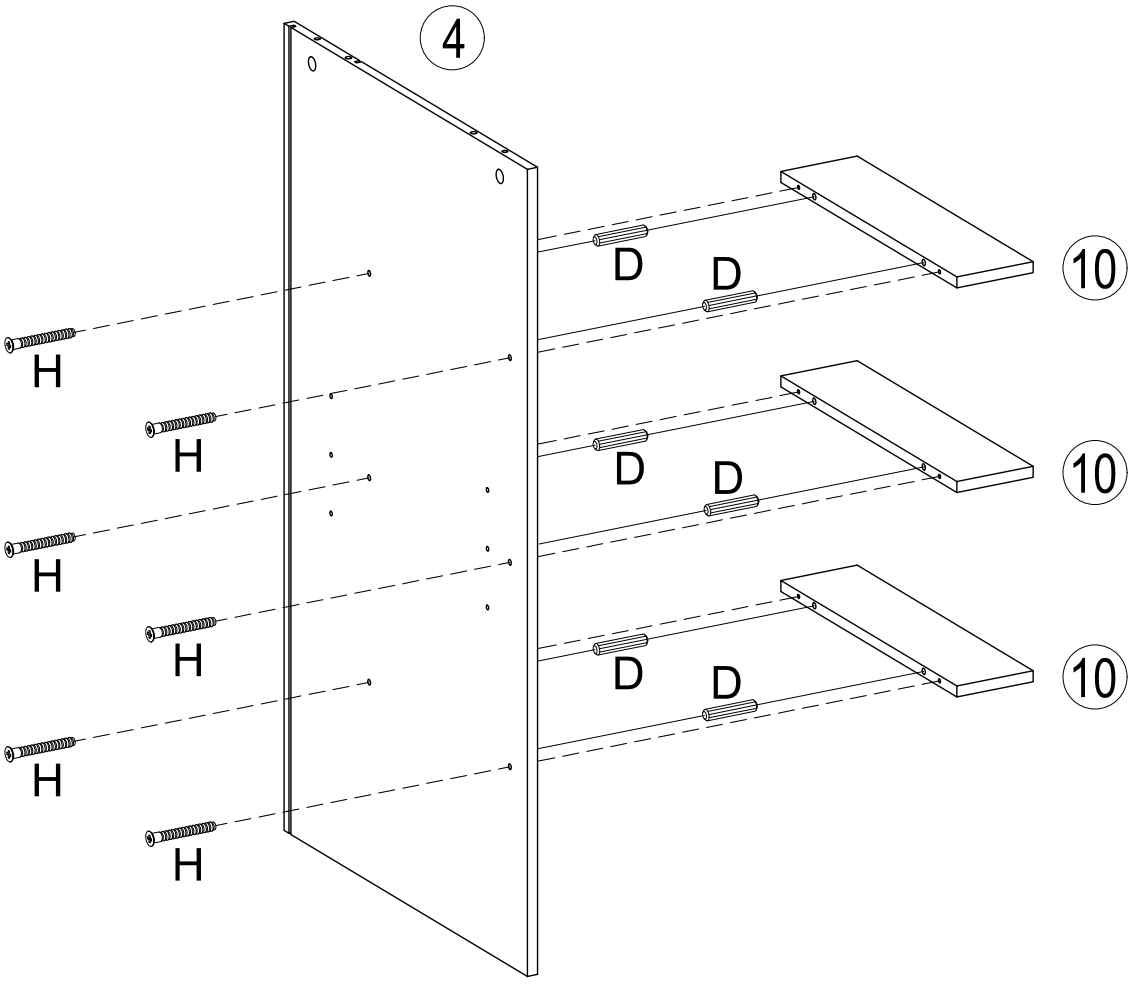


No. D	No. H
Quantity: 6 PCS Dowel ø6x30mm	Quantity: 6 PCS Screw ø5x48mm


STEP 10

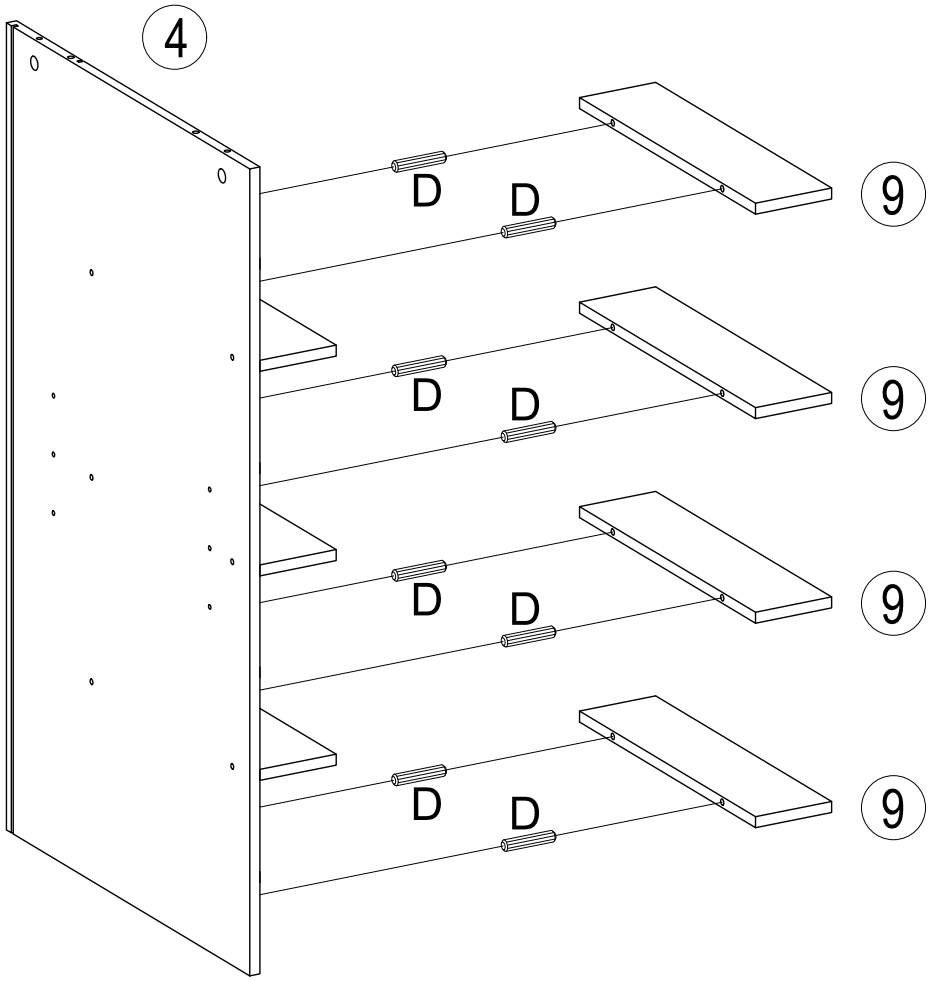


No. D
Quantity: 8 PCS
Dowel
ø6x30mm




STEP 11

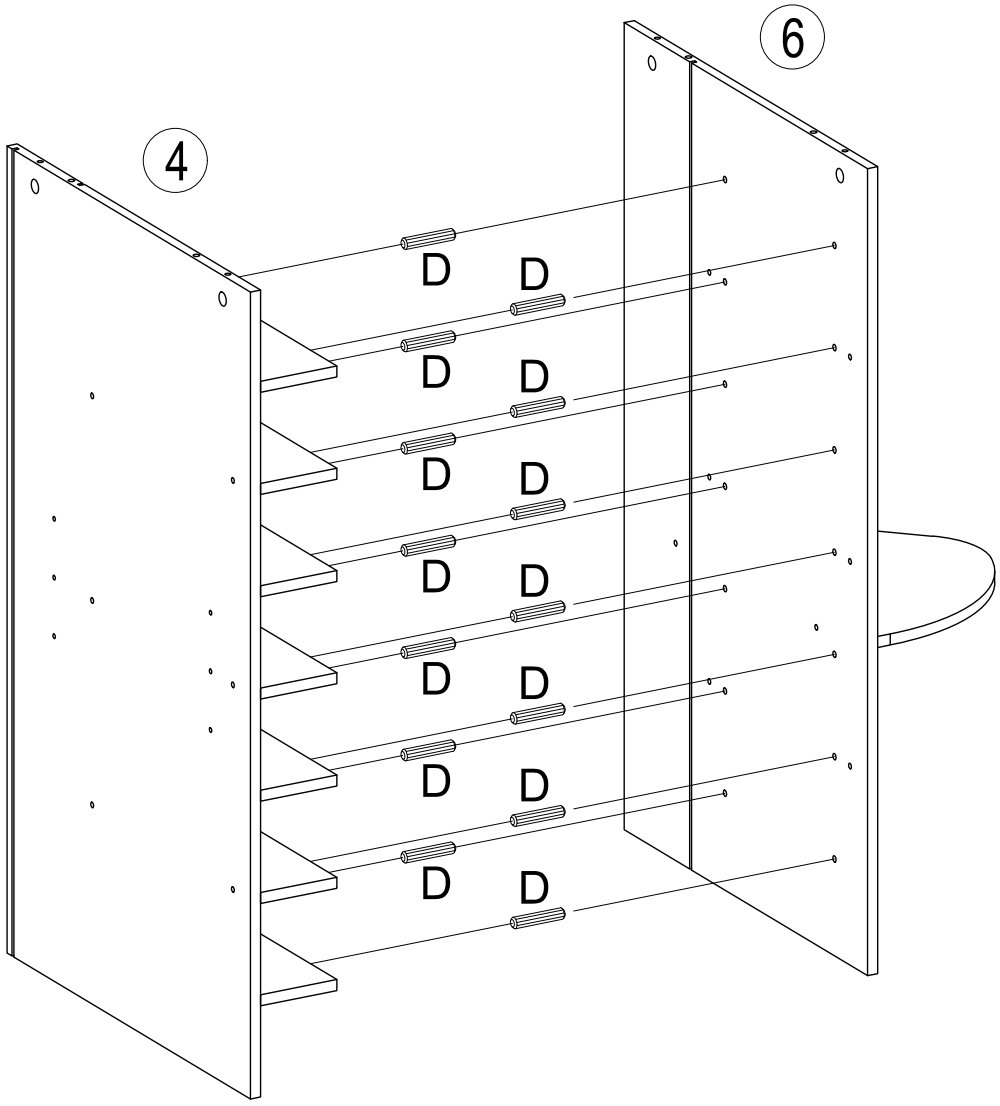


No. D
Quantity: 14 PCS
Dowel
ø6x30mm




STEP 12

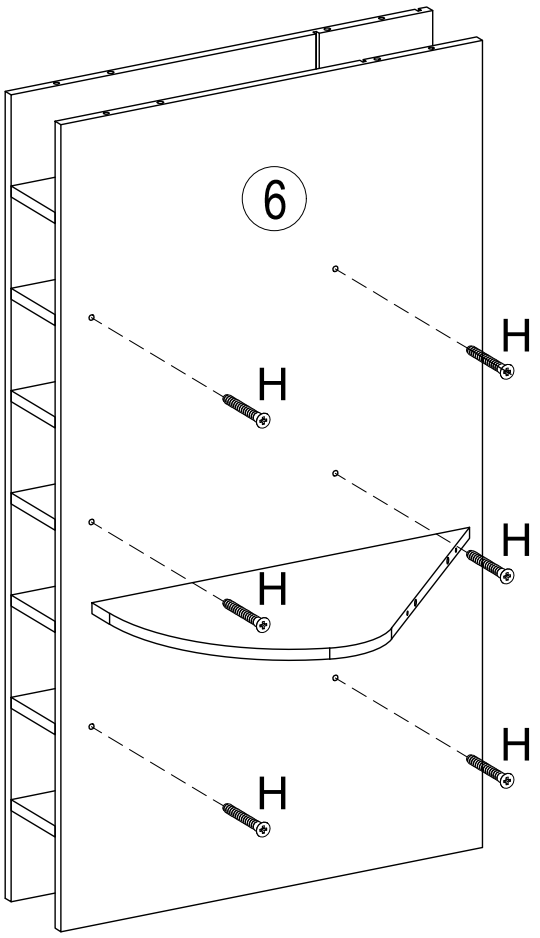

No. H
Quantity: 6 PCS
Screw
ø5x48mm

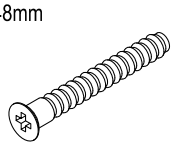


STEP 13

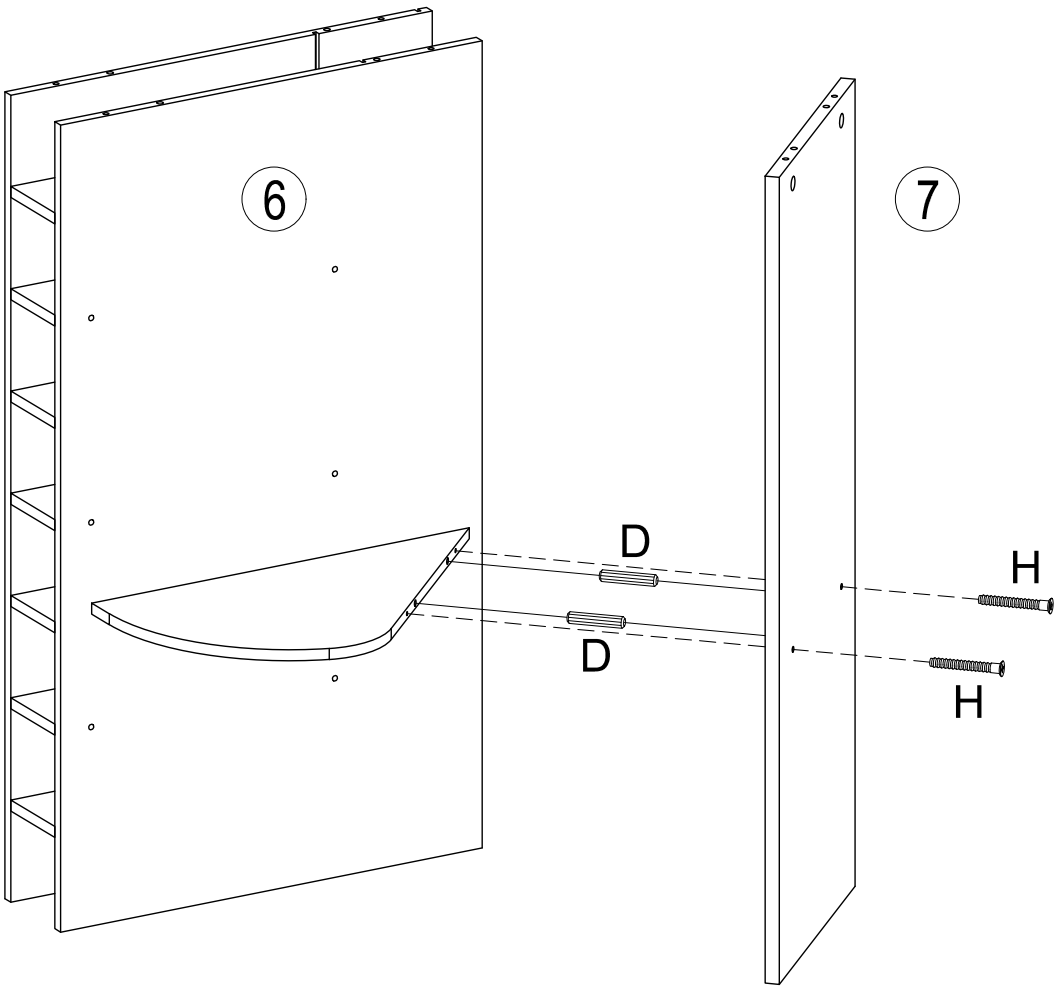


No. D	No. H
Quantity: 2 PCS Dowel ø6x30mm	Quantity: 2 PCS Screw ø5x48mm

STEP 14

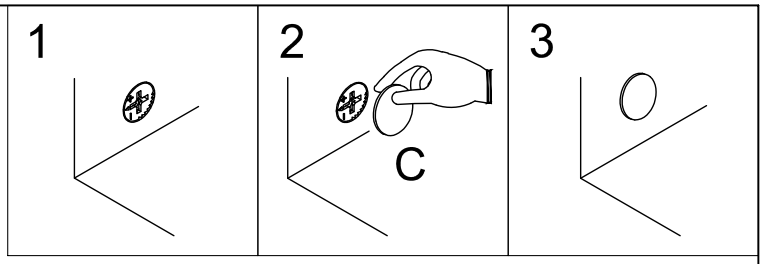


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

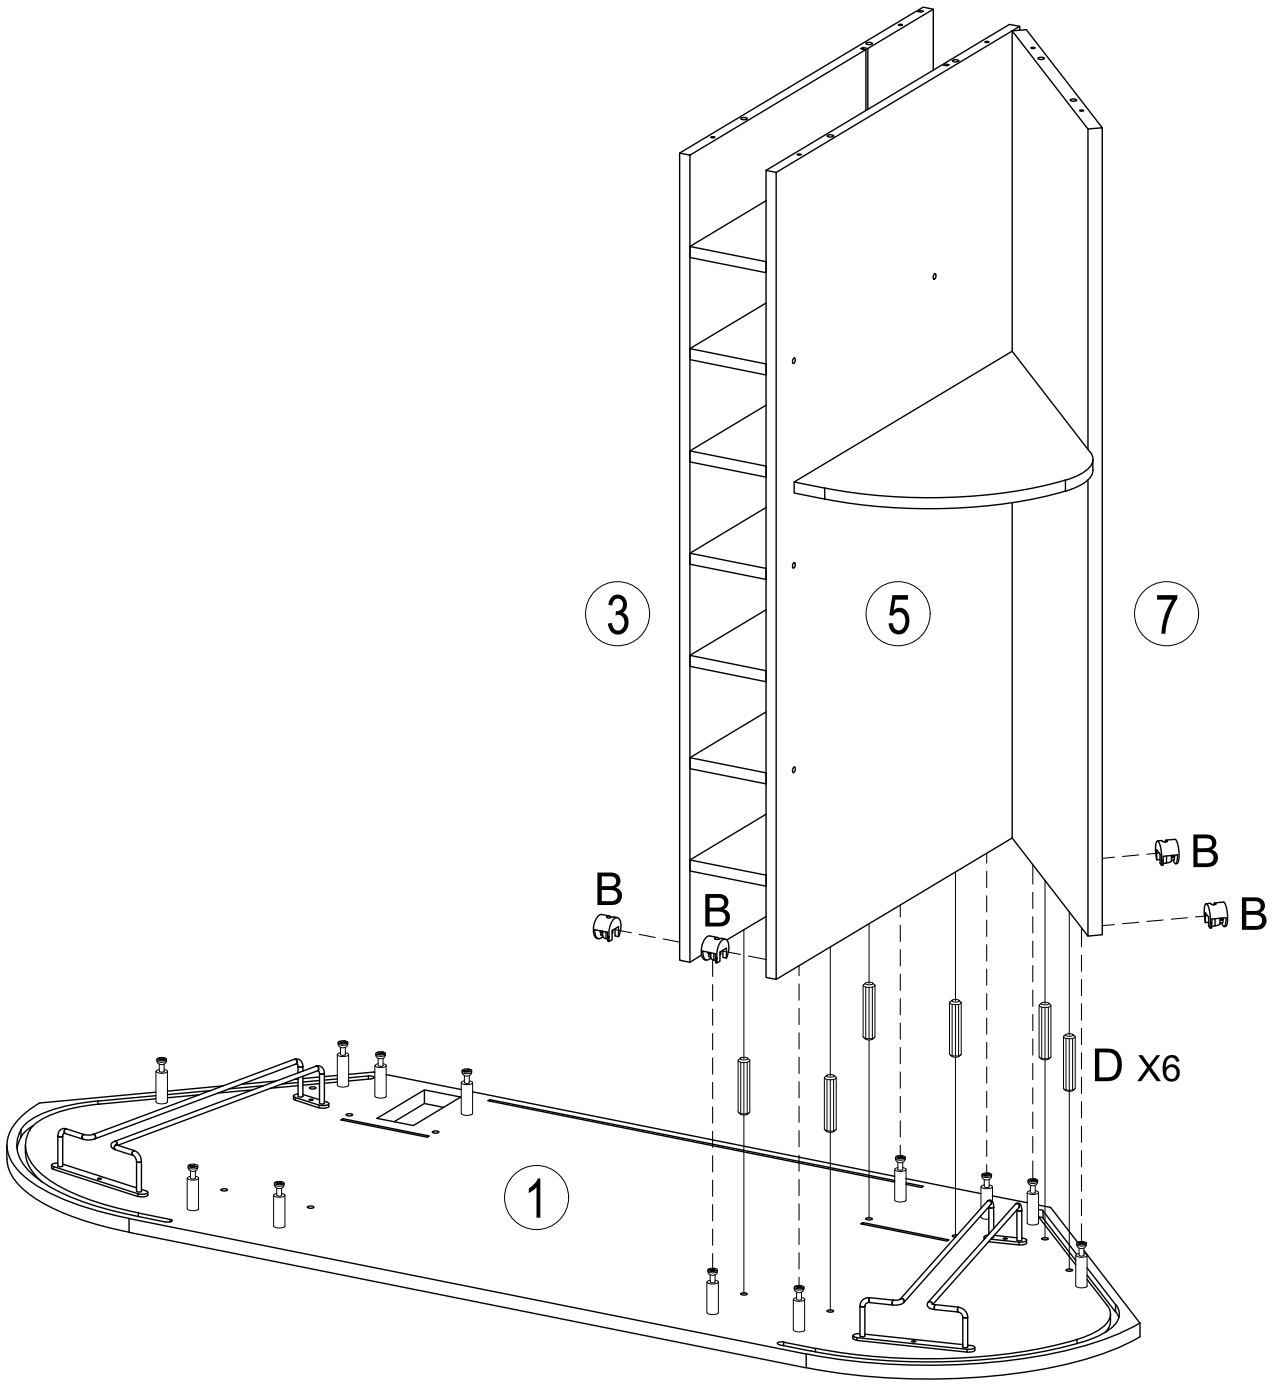


No. B	No. C	No. D
Quantity: 6 PCS Cam ø15x9.5mm	Quantity: 6 PCS Sticker ø20mm	Quantity: 6 PCS Dowel ø6x30mm

STEP 15

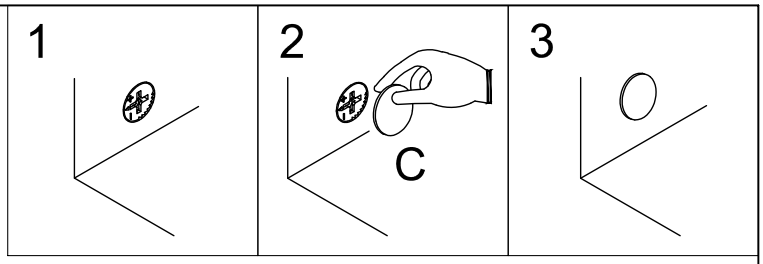


C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

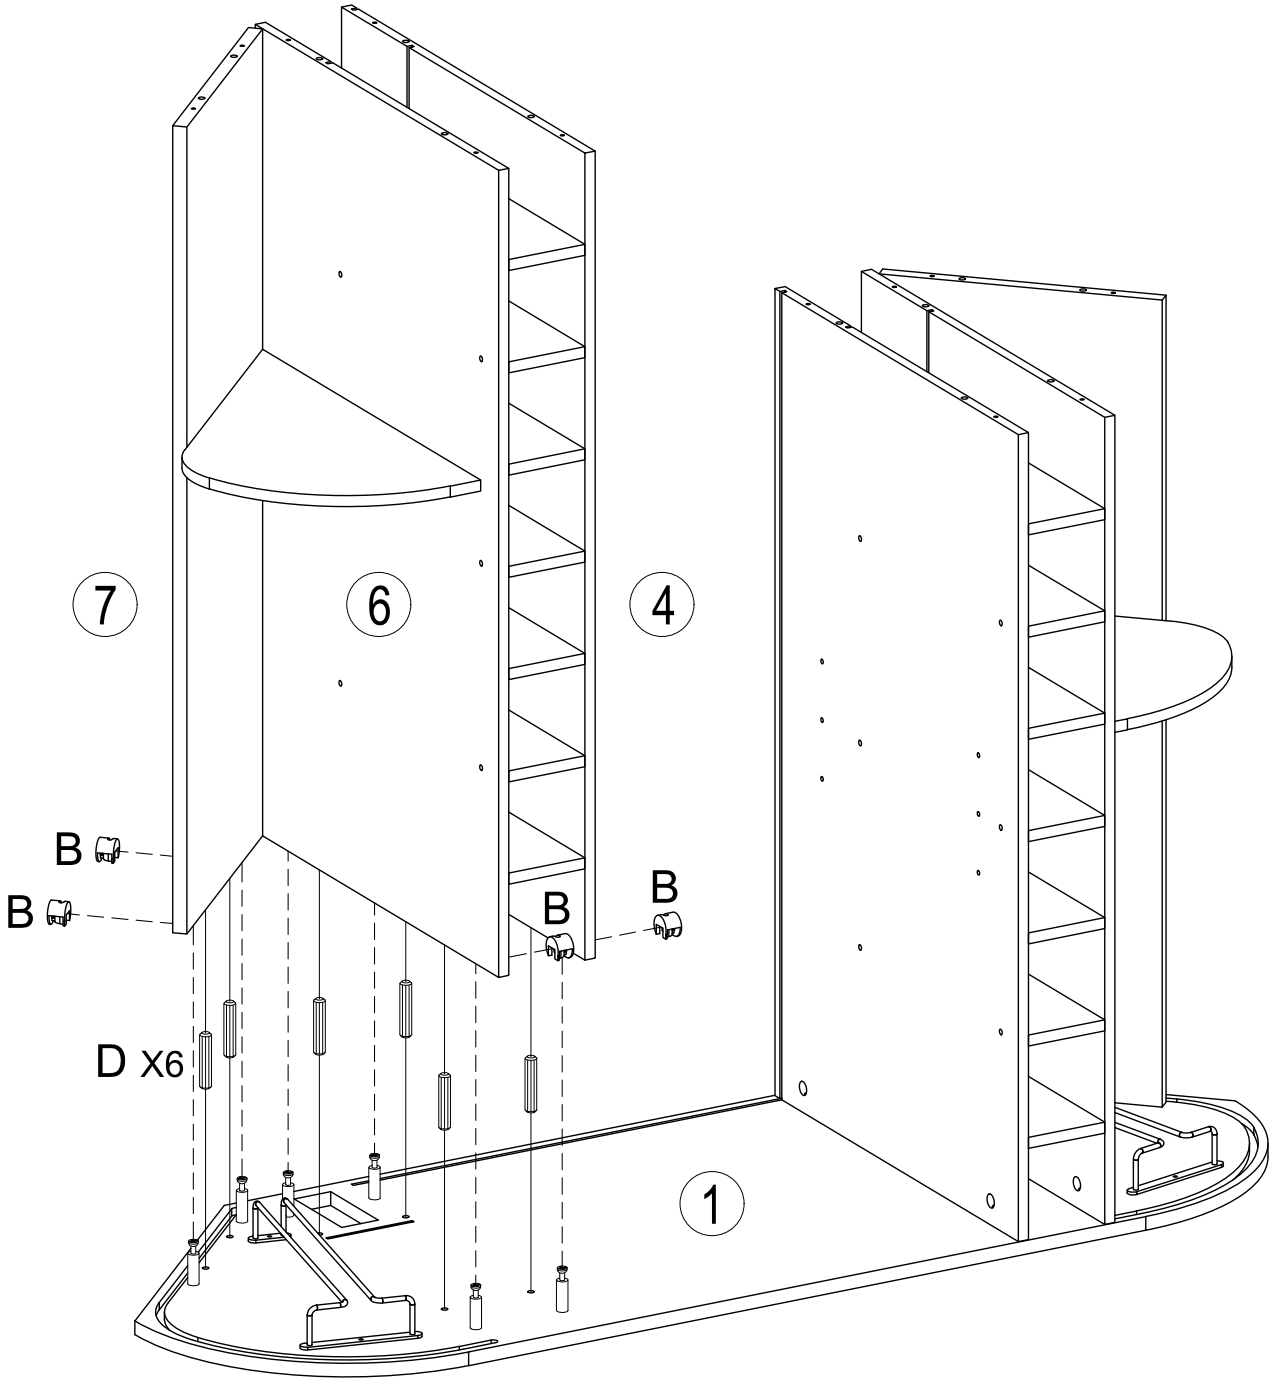


No. B	No. C	No. D
Quantity: 6 PCS Cam ø15x9.5mm	Quantity: 6 PCS Sticker ø20mm	Quantity: 6 PCS Dowel ø6x30mm


STEP 16

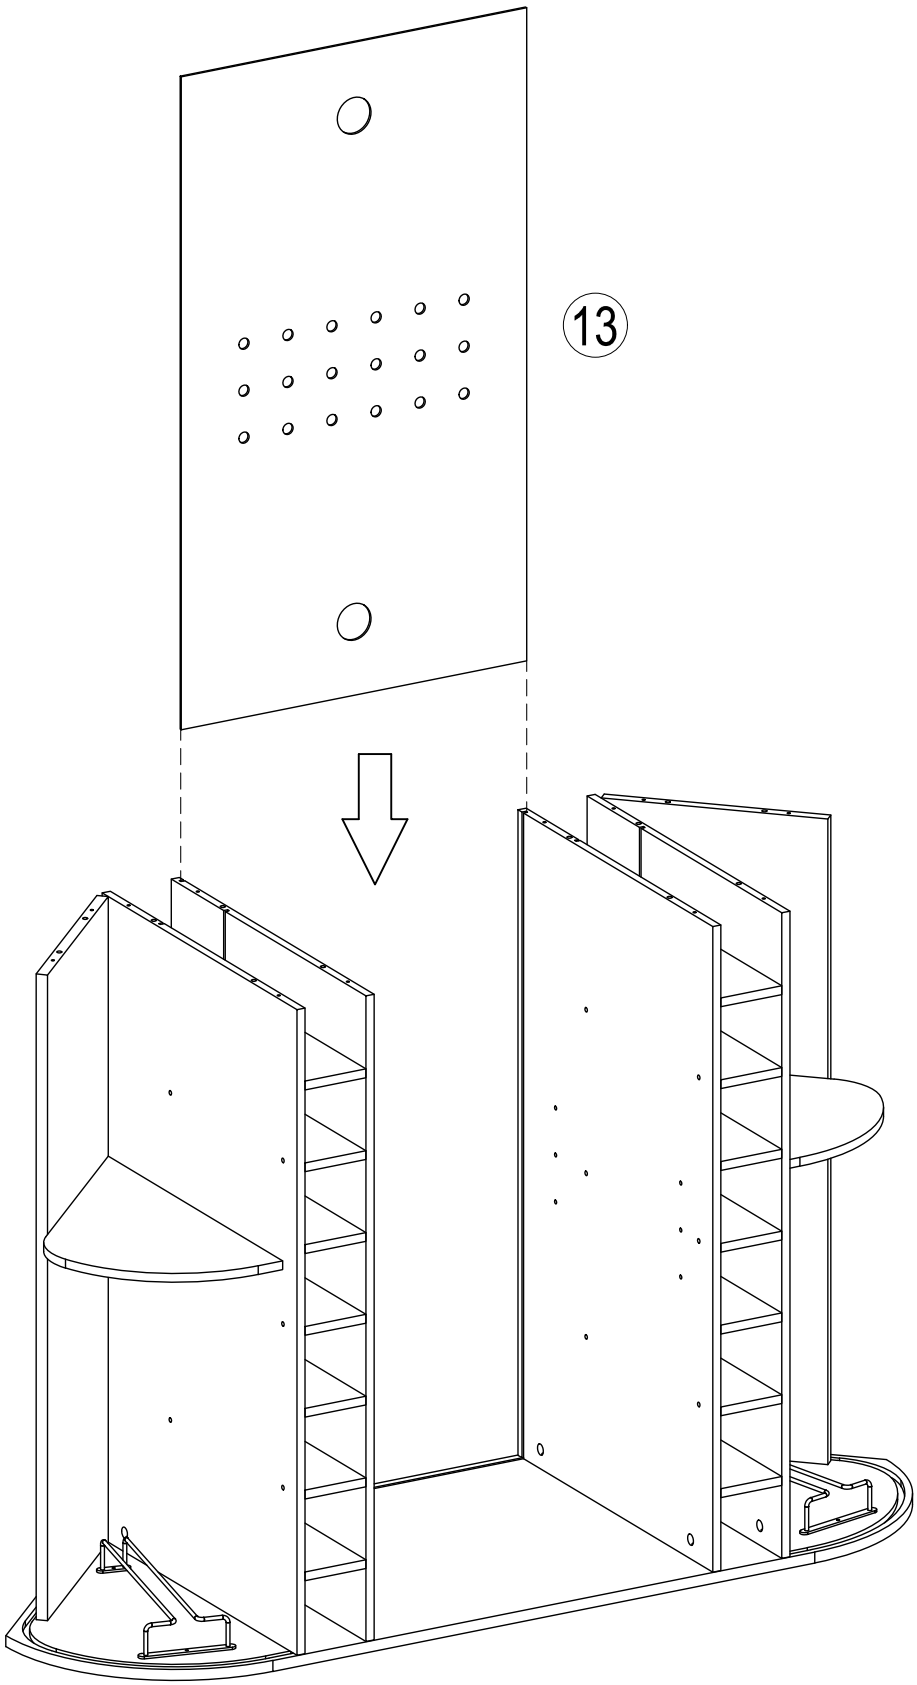

STEP 17

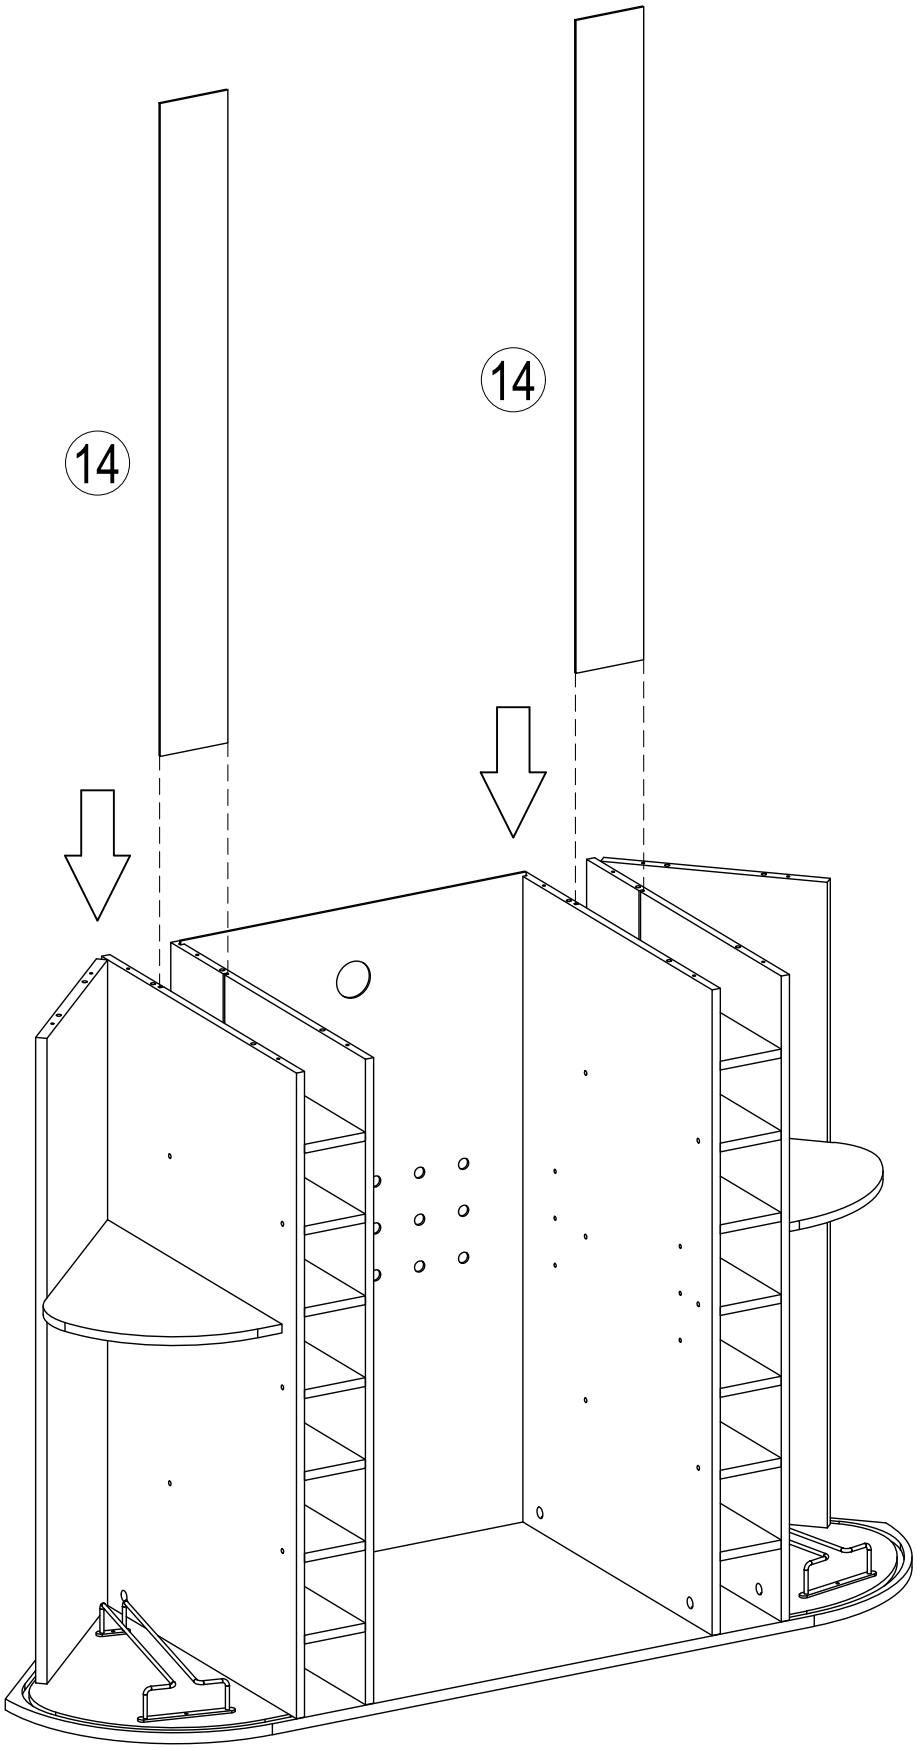


STEP 18

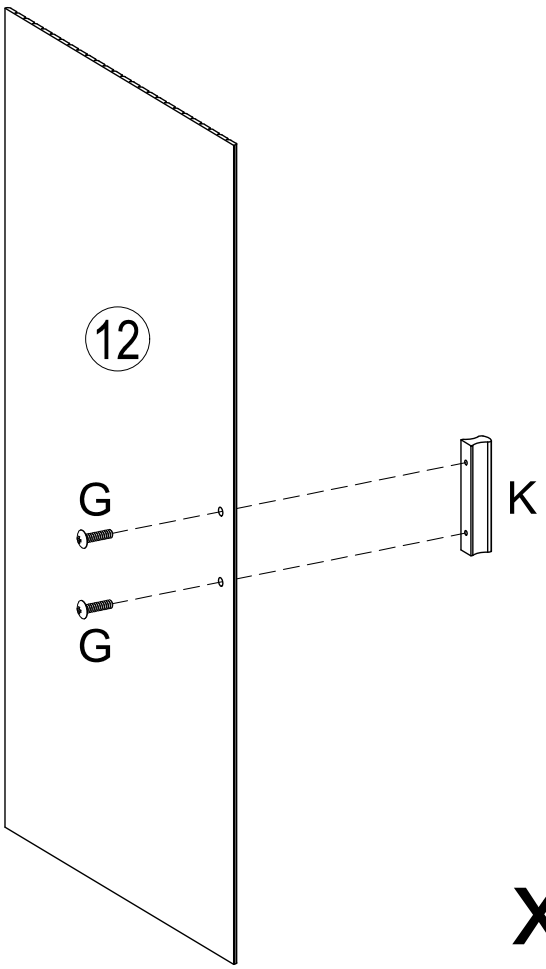


x2

No. G	No. K
Quantity: 4 PCS Bolt M4x12mm	Quantity: 2 PCS Handle 23*17*100mmL （M4/96mm）

STEP 19

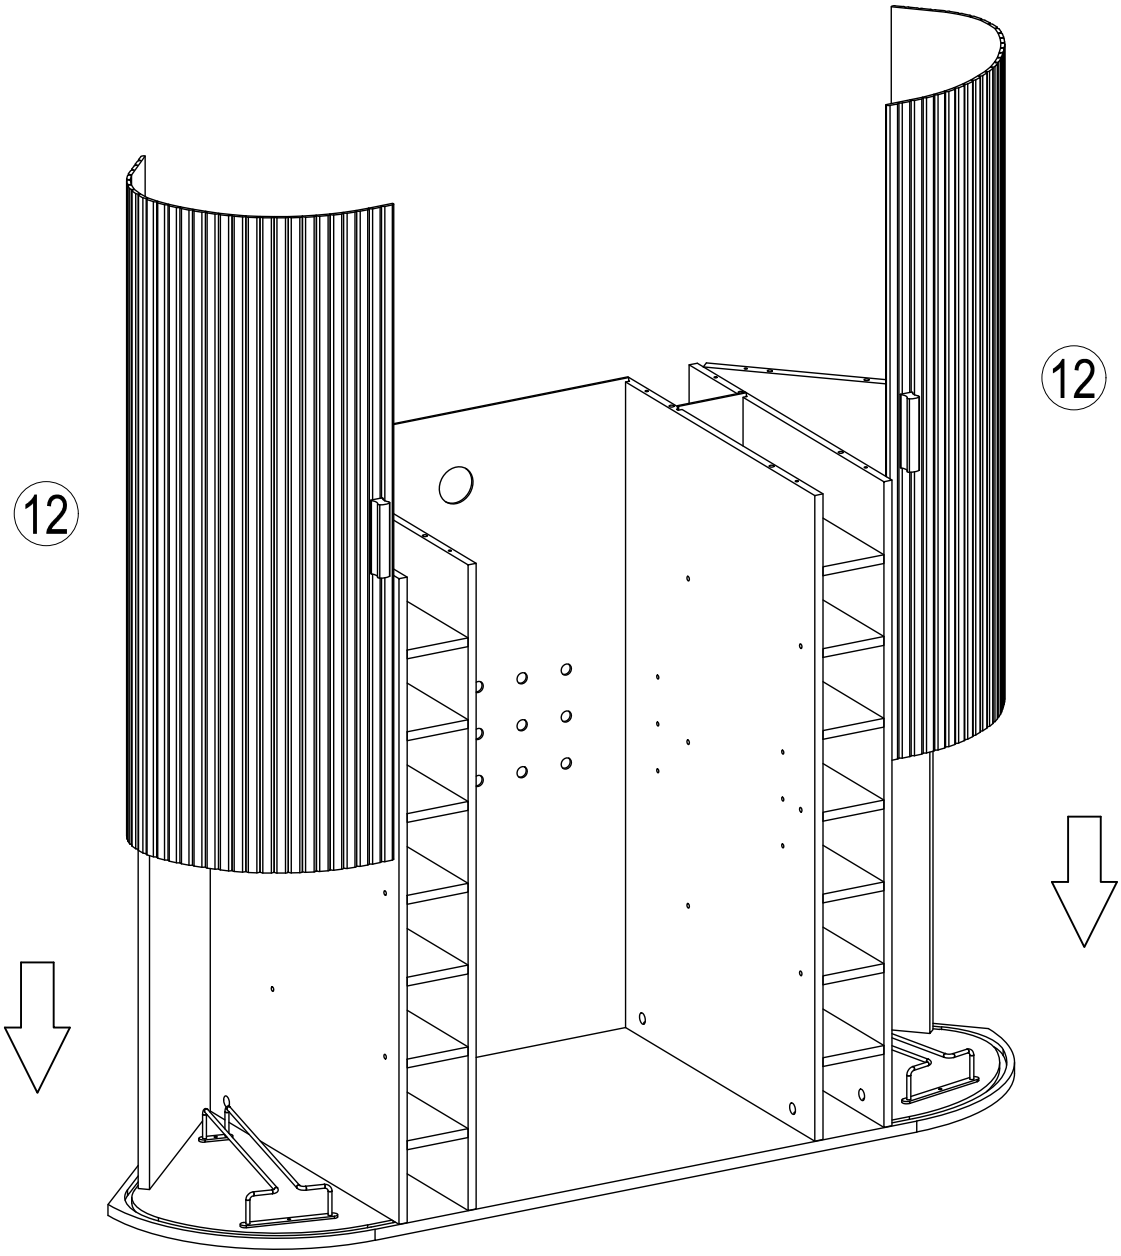


STEP 20

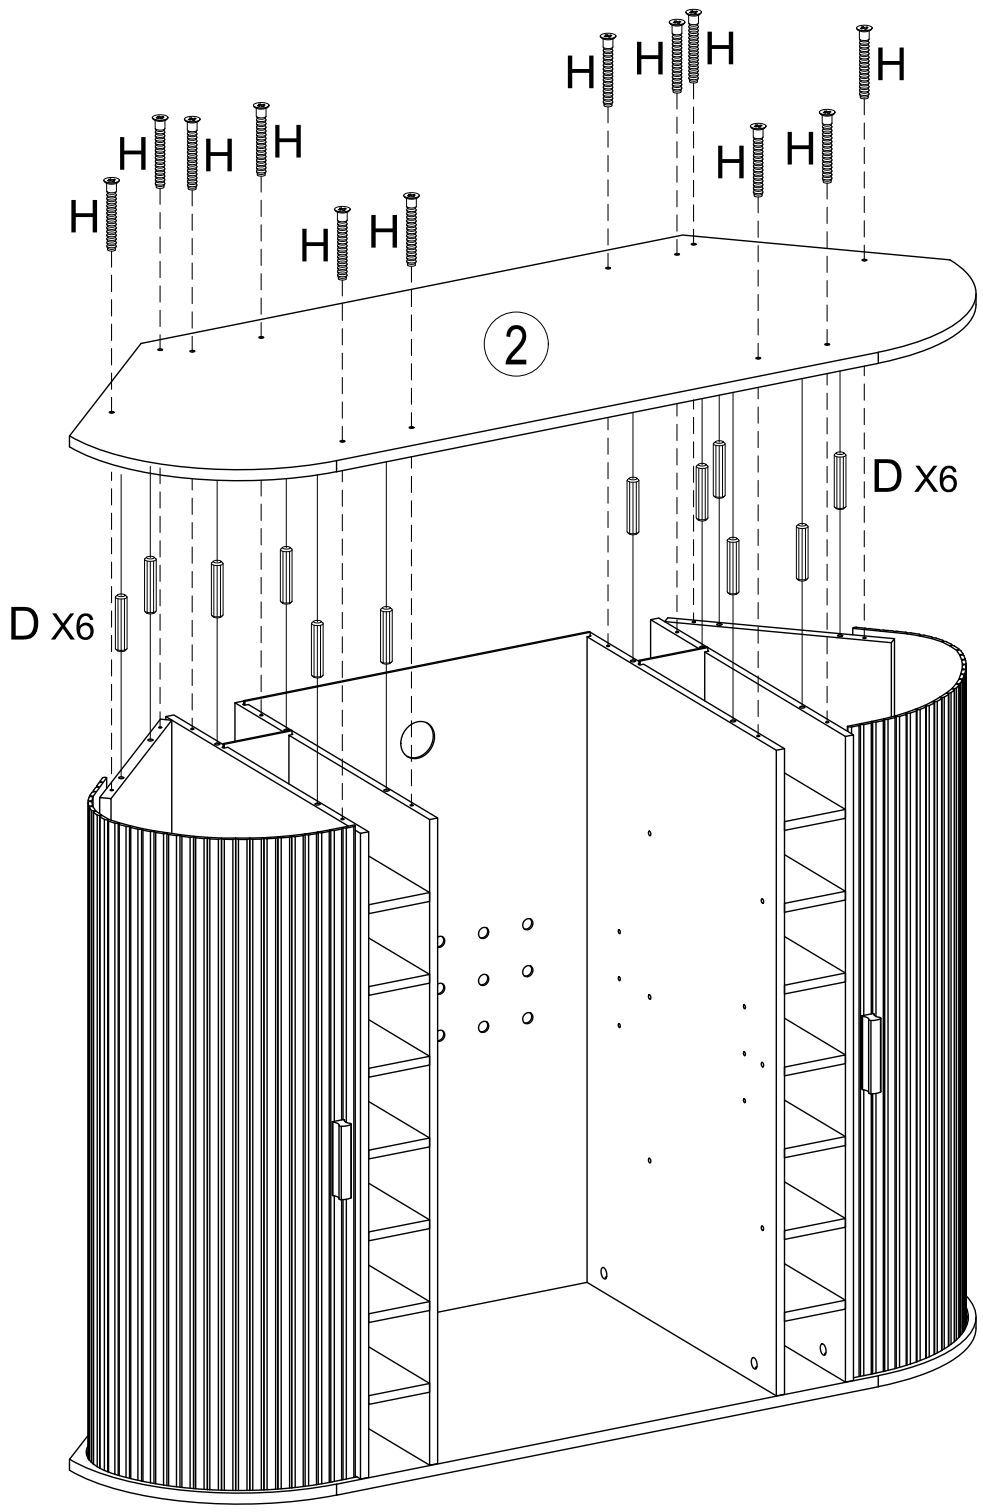


No. D	No. H
Quantity: 12 PCS Dowel ø6x30mm	Quantity: 12 PCS Screw ø5x48mm


STEP 21

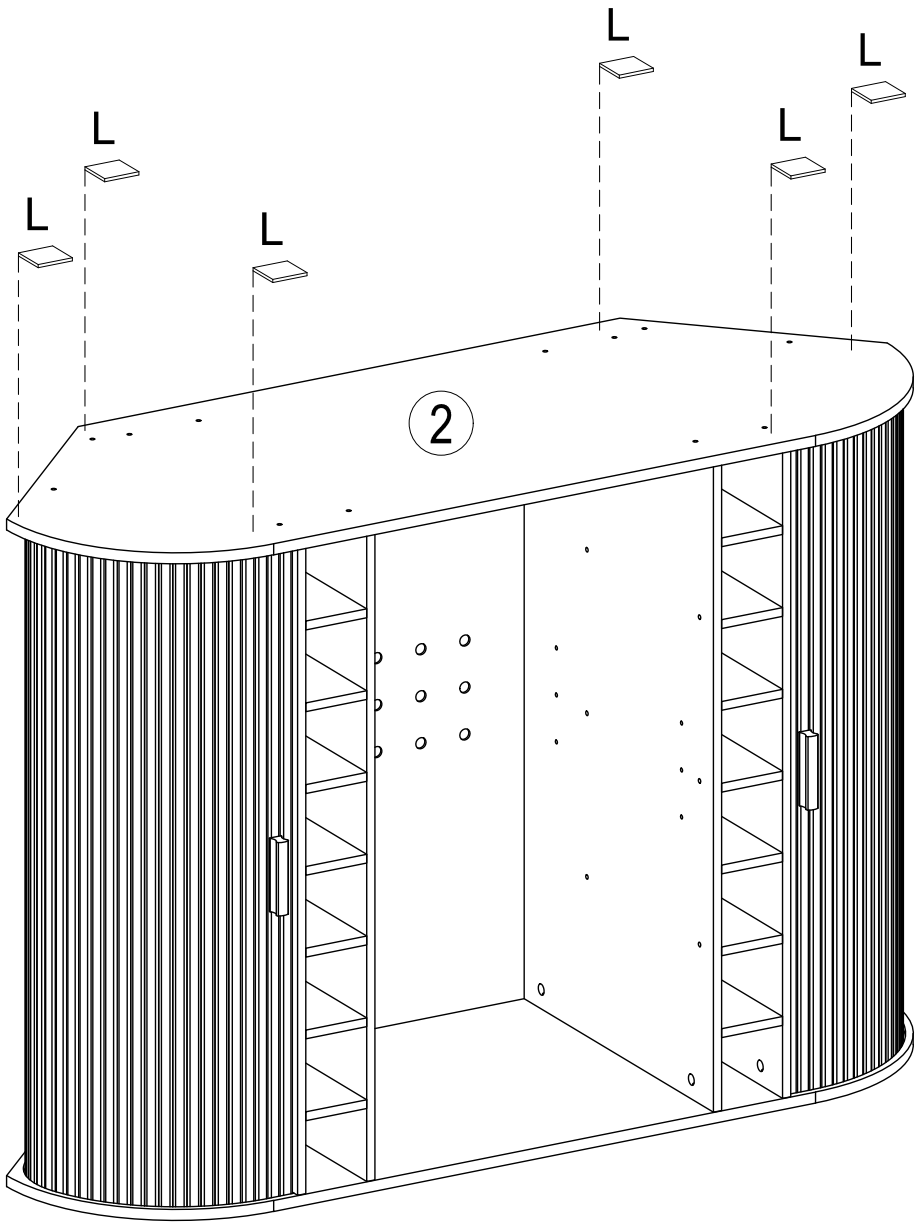


No. L
Quantity: 6 PCS
foot pad
35*35mm



STEP 22

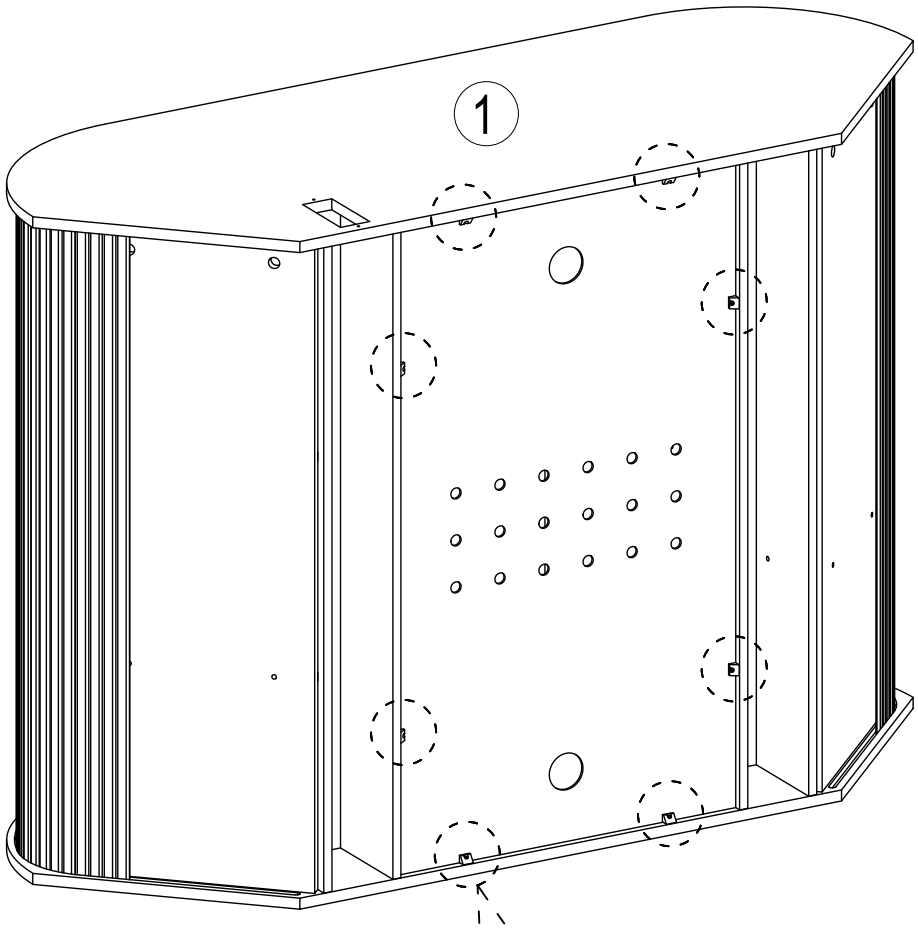


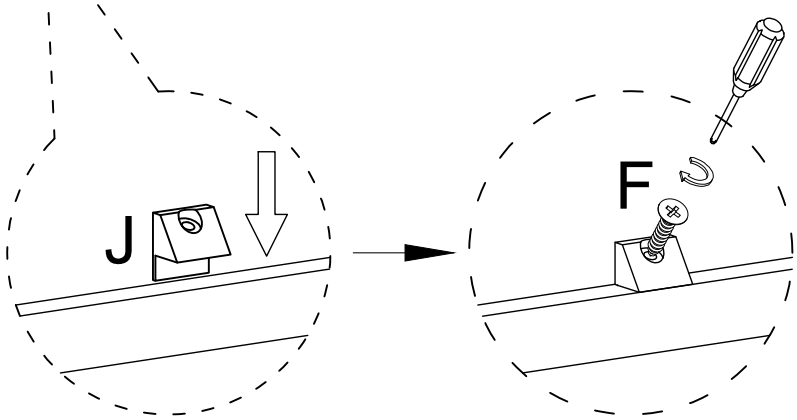


x8 x8


No. F	No. J
Quantity: 8 PCS Screw ø3x16mm	Quantity: 8 PCS plastic buckle 15*15*10

STEP 23

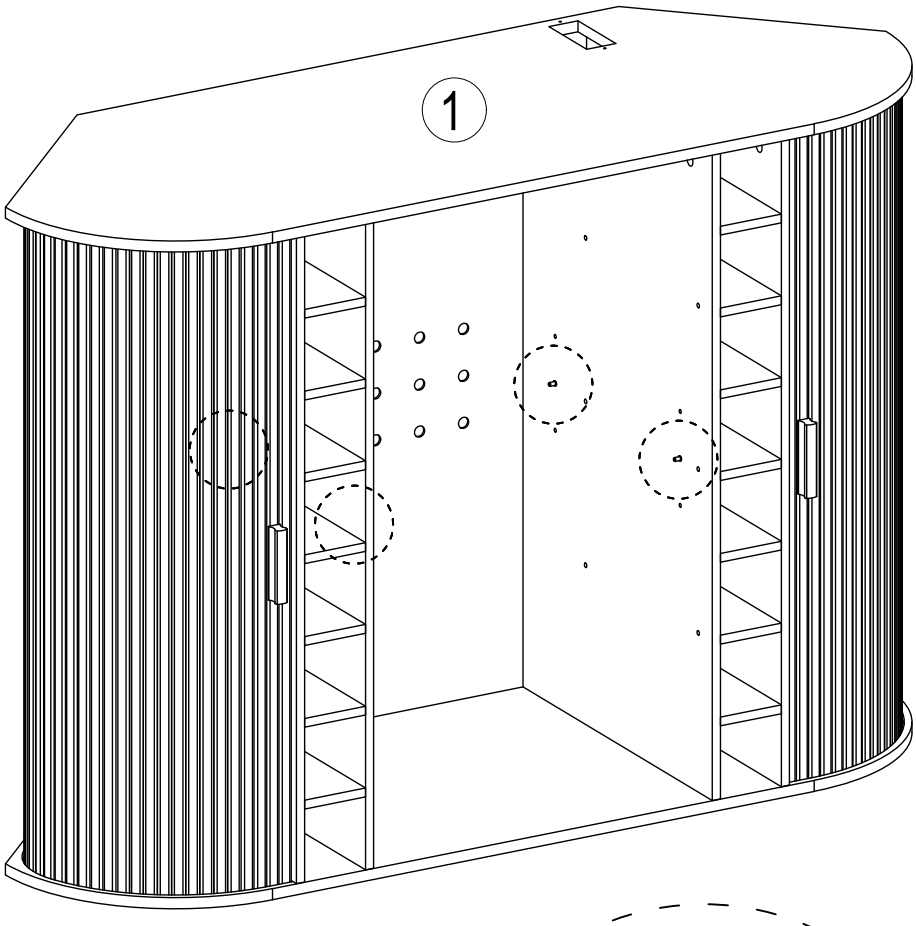


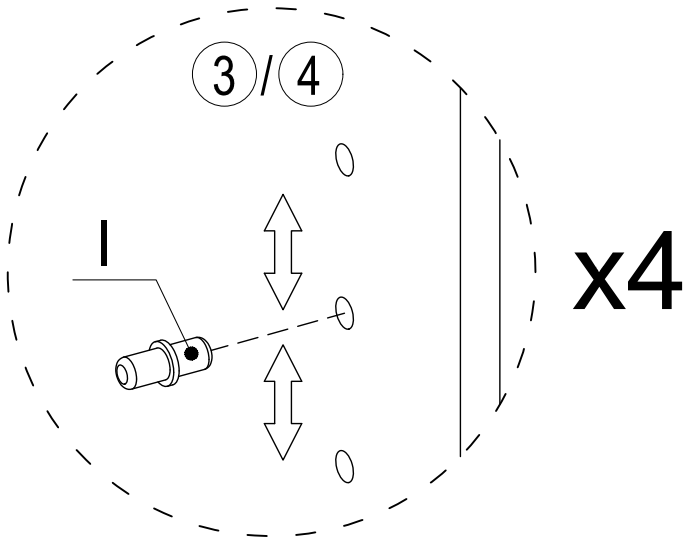


No. I
Quantity: 4 PCS
ø5x16mm




STEP 24

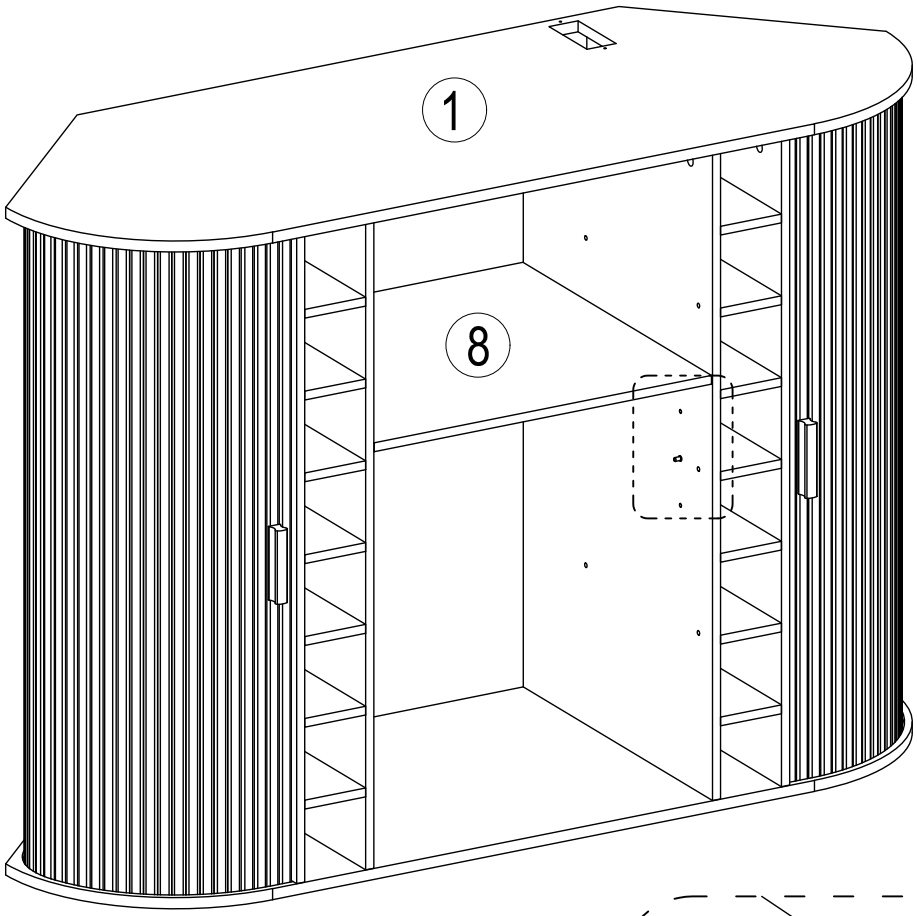

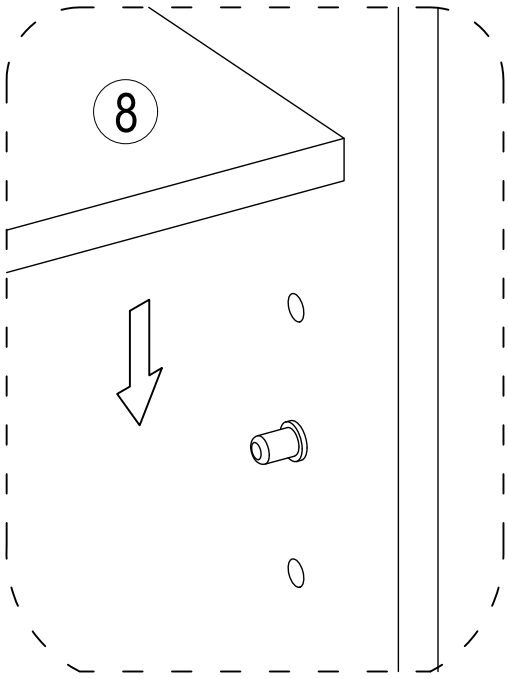


STEP 25

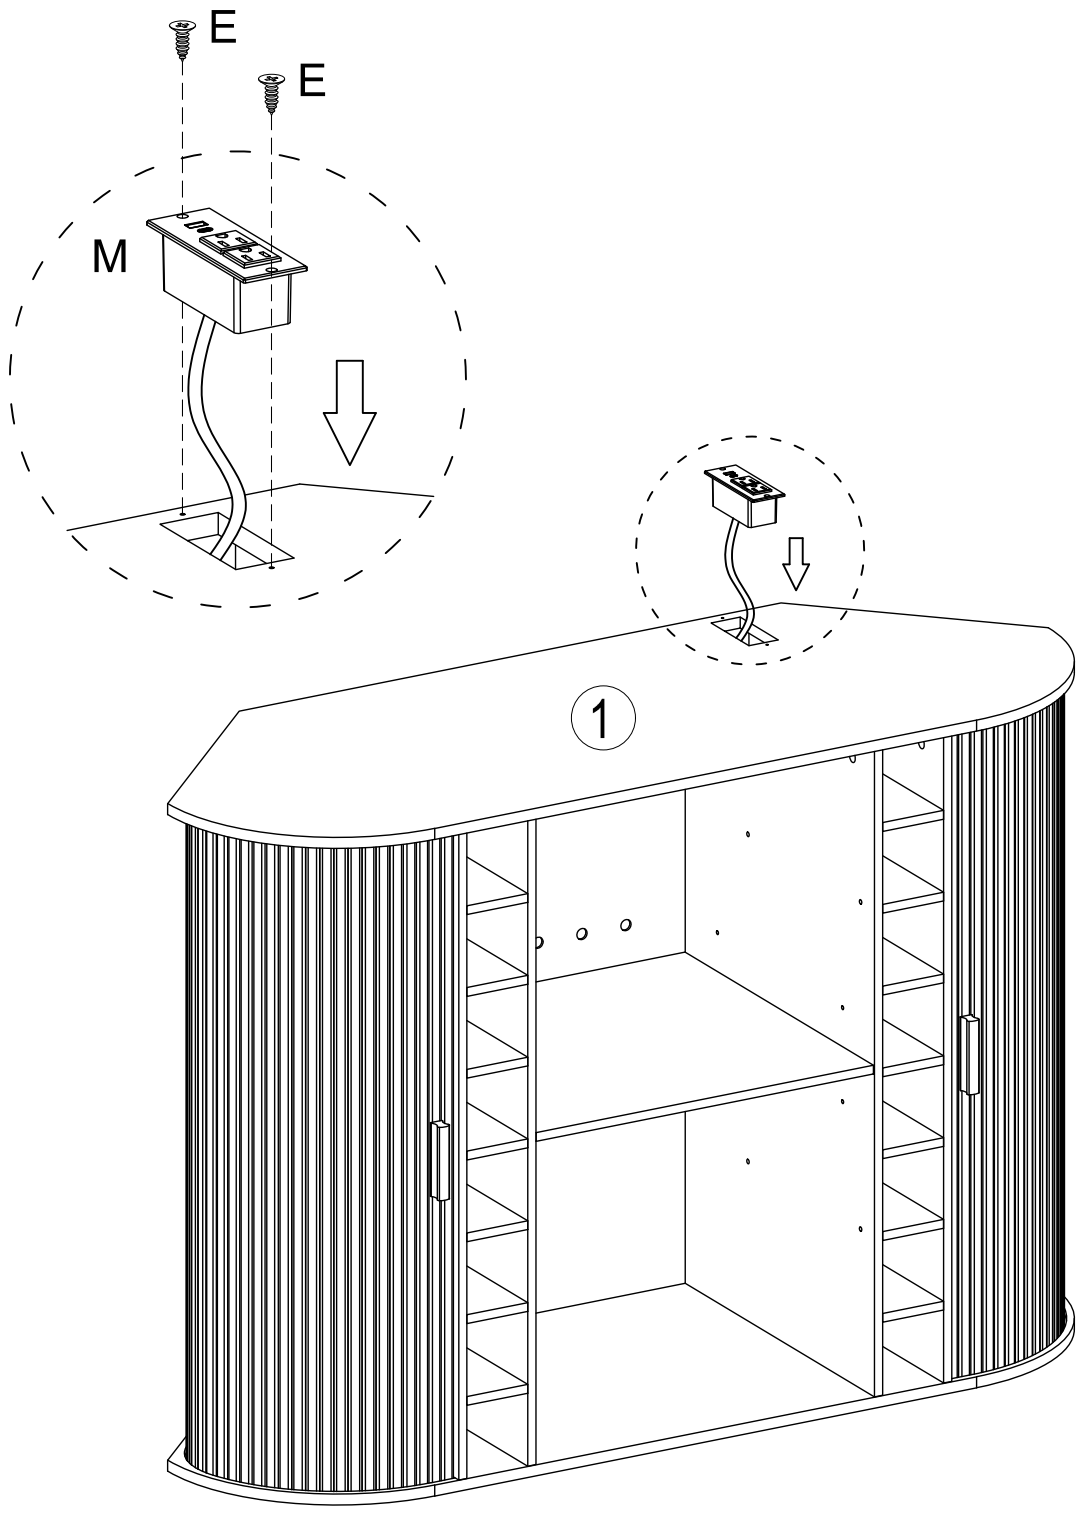



No. E	No. M
Quantity: 2 PCS Screw ø3.5x12mm	Quantity: 1 PCS Socket 129*47（2AC+1USB+1TPC）

STEP 26

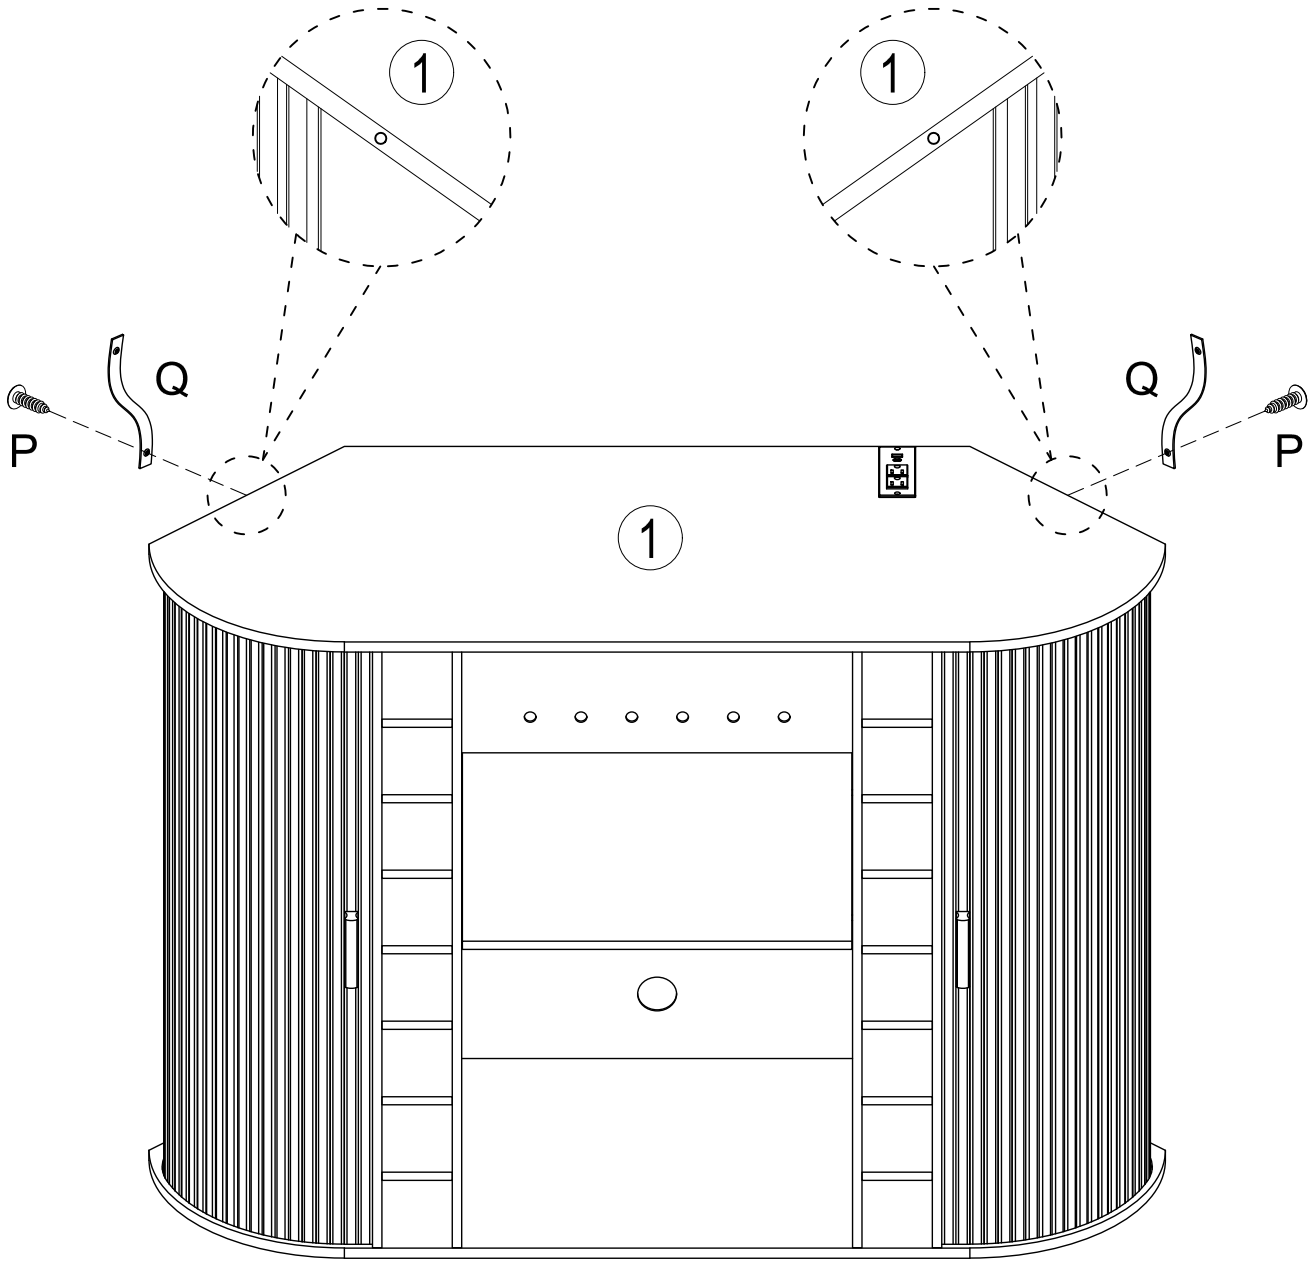



No. P	No. Q
Quantity: 2 PCS Screw ø4x16mm	Quantity: 2 PCS Cloth strip L193*20mm




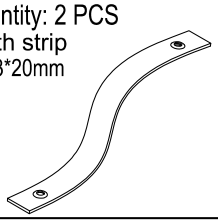

STEP 27

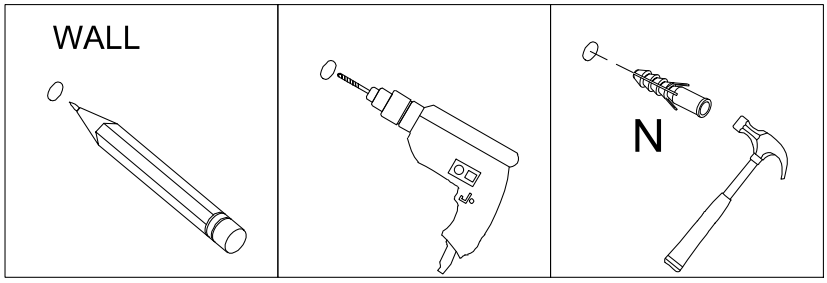

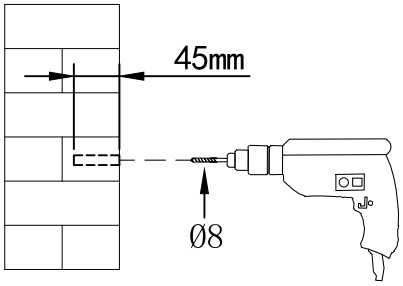

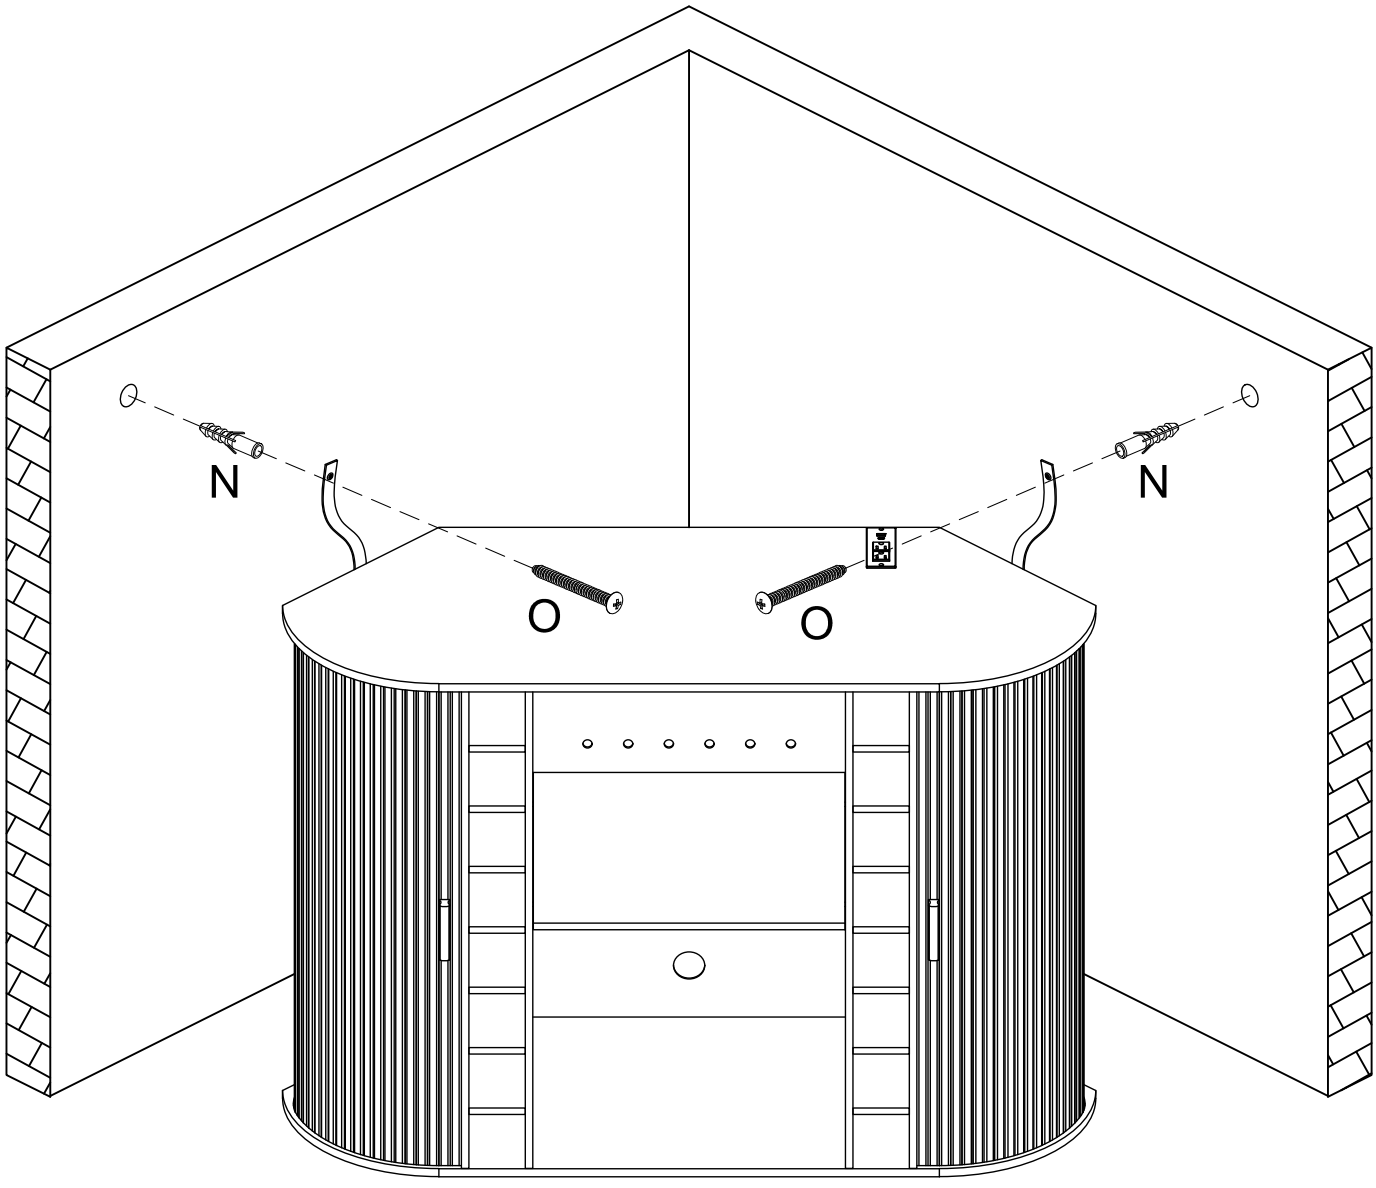

No. N	No. O
Quantity: 2 PCS plastic plug Ø8*40	Quantity: 2 PCS Screw Ø4*38
