
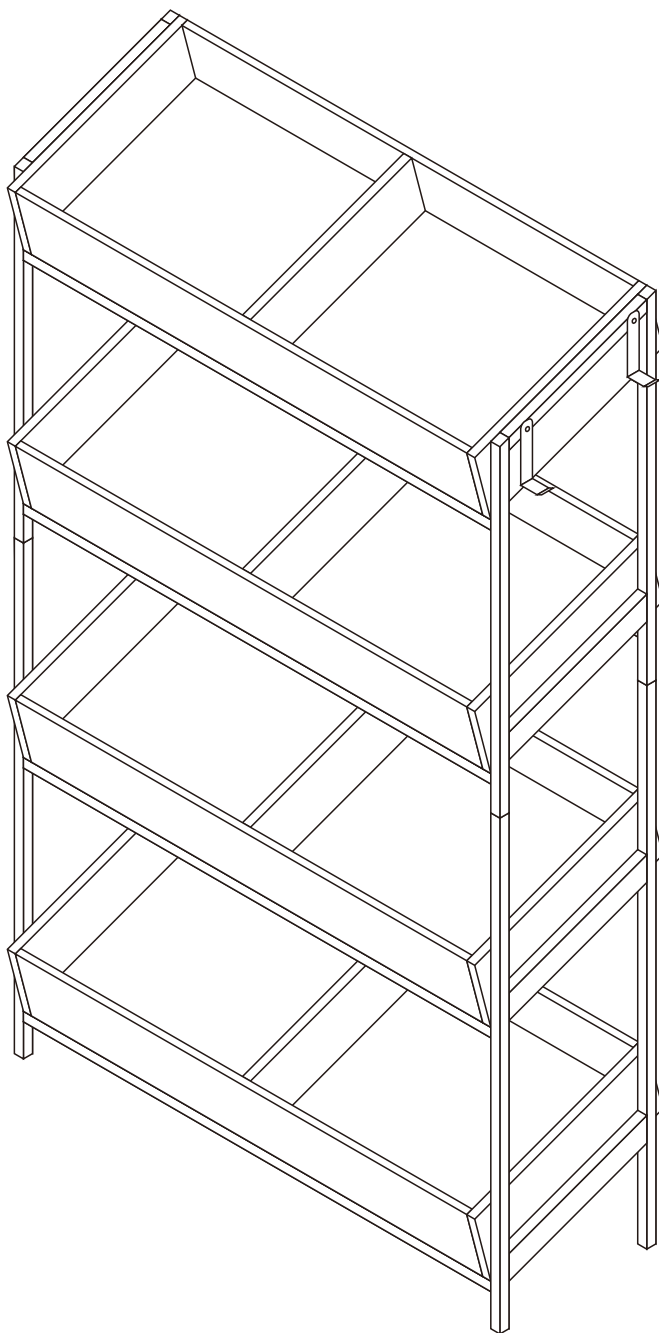
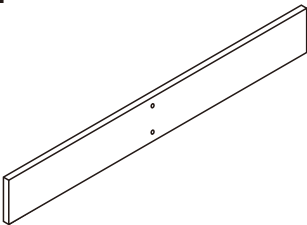
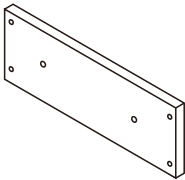
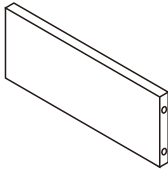
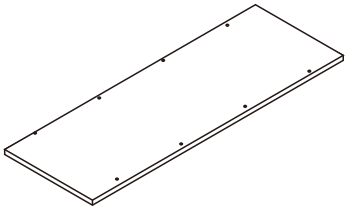
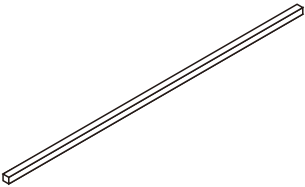
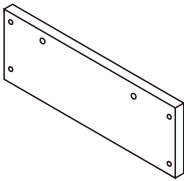







Installation instructions



1 	2 	3 	4 
x8	x6	x4	x4
5 	6 	7 	8 
x8	x2	x1	x1
9 	10 		
x1	x1		

A  M6x15mm x16	B  x32	C  x64	D  M8x40mm x16	E  M6x30mm x16	F  x16
G  x4	H  x2	J  x4			

01

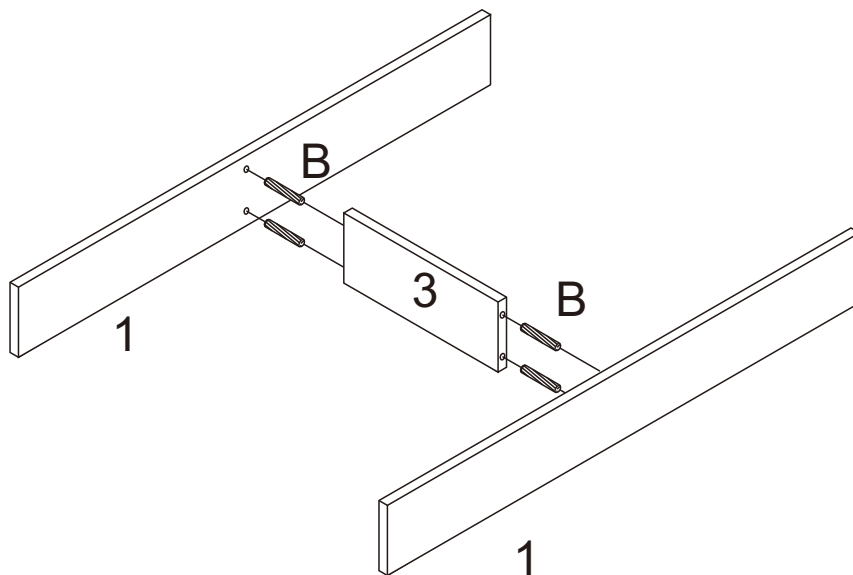


B



x4

02

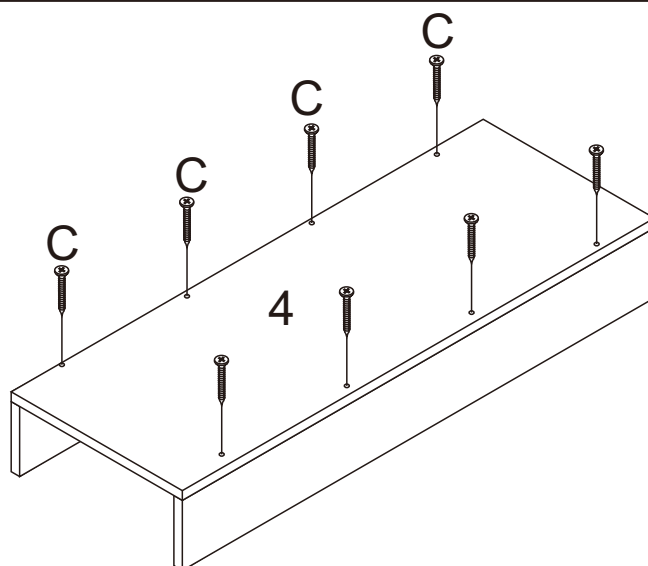


C



x8

03

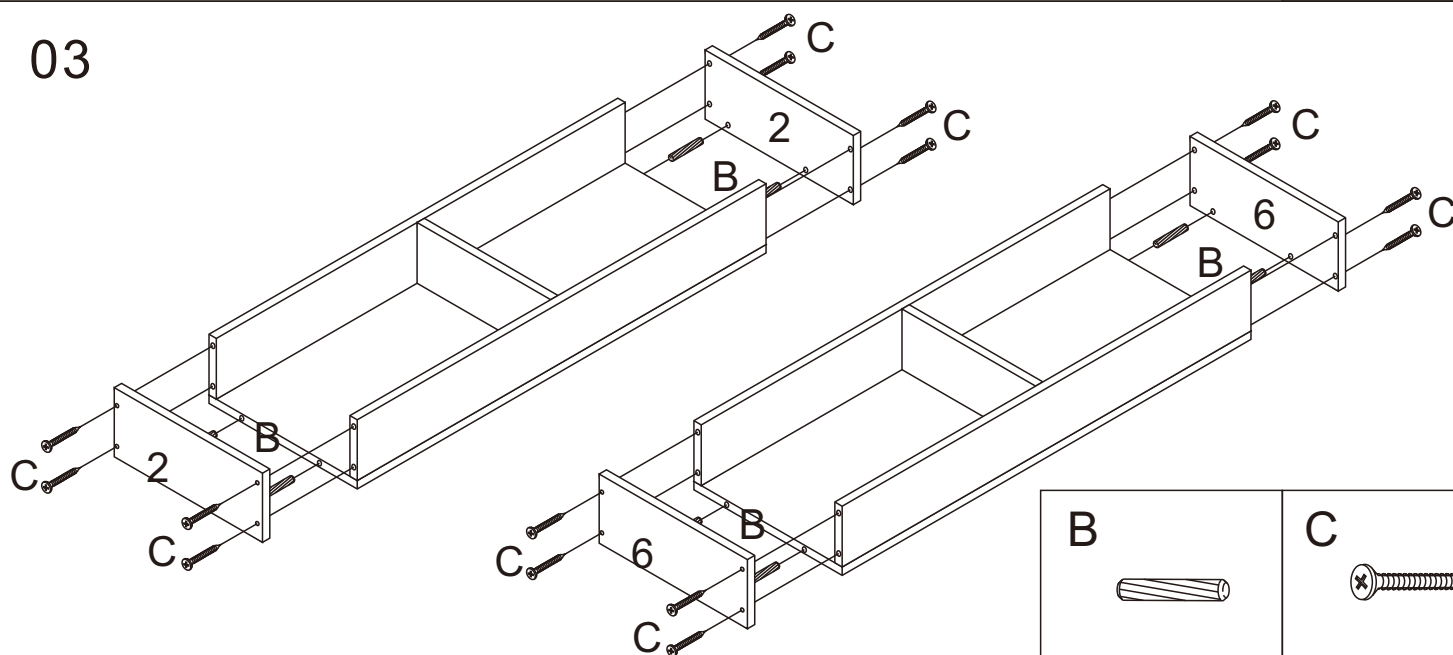

B




x4

C




x8


04

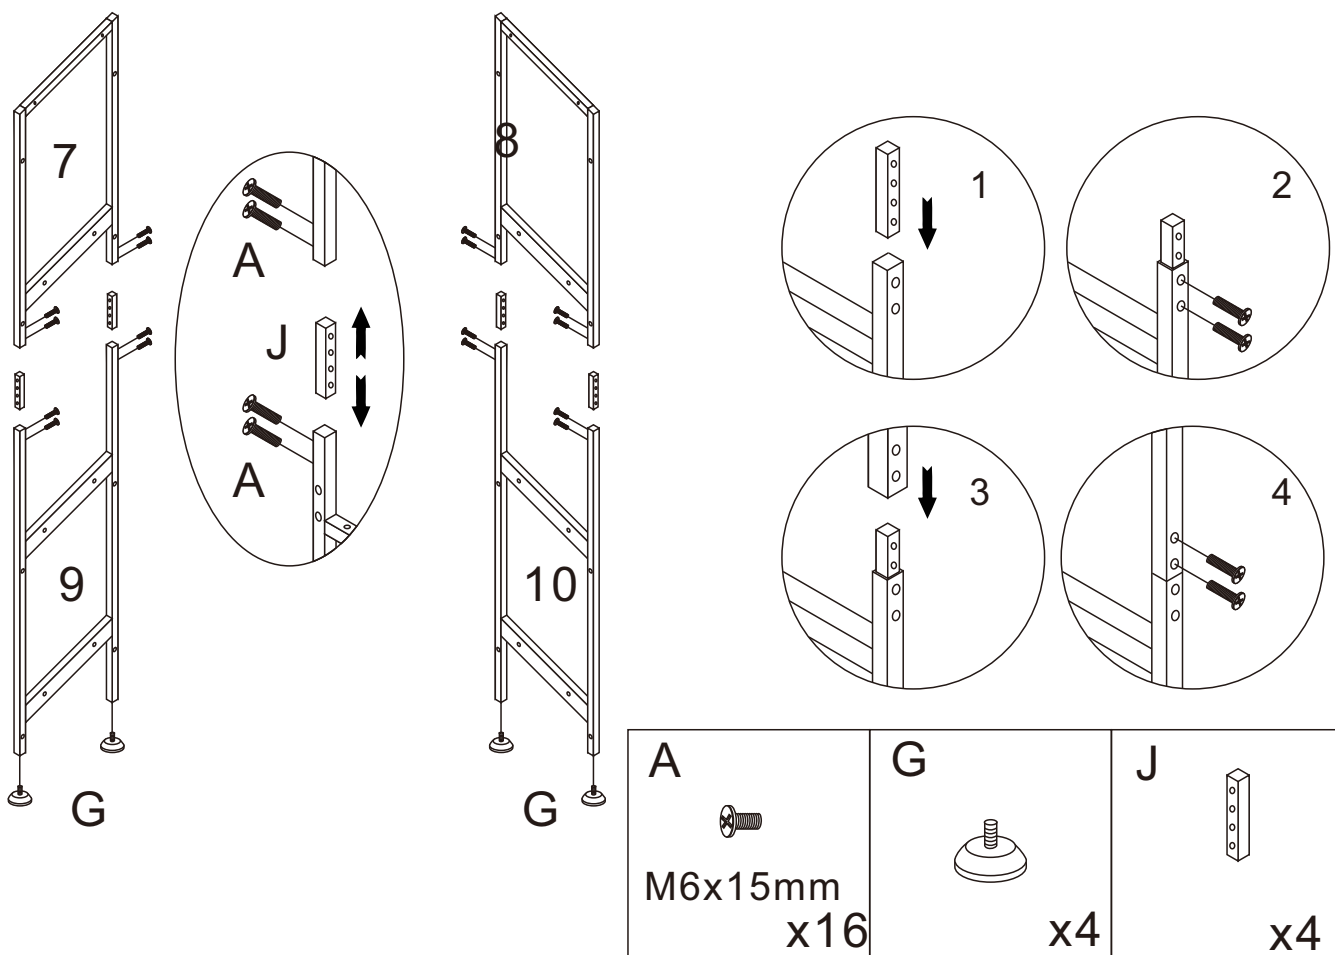

05

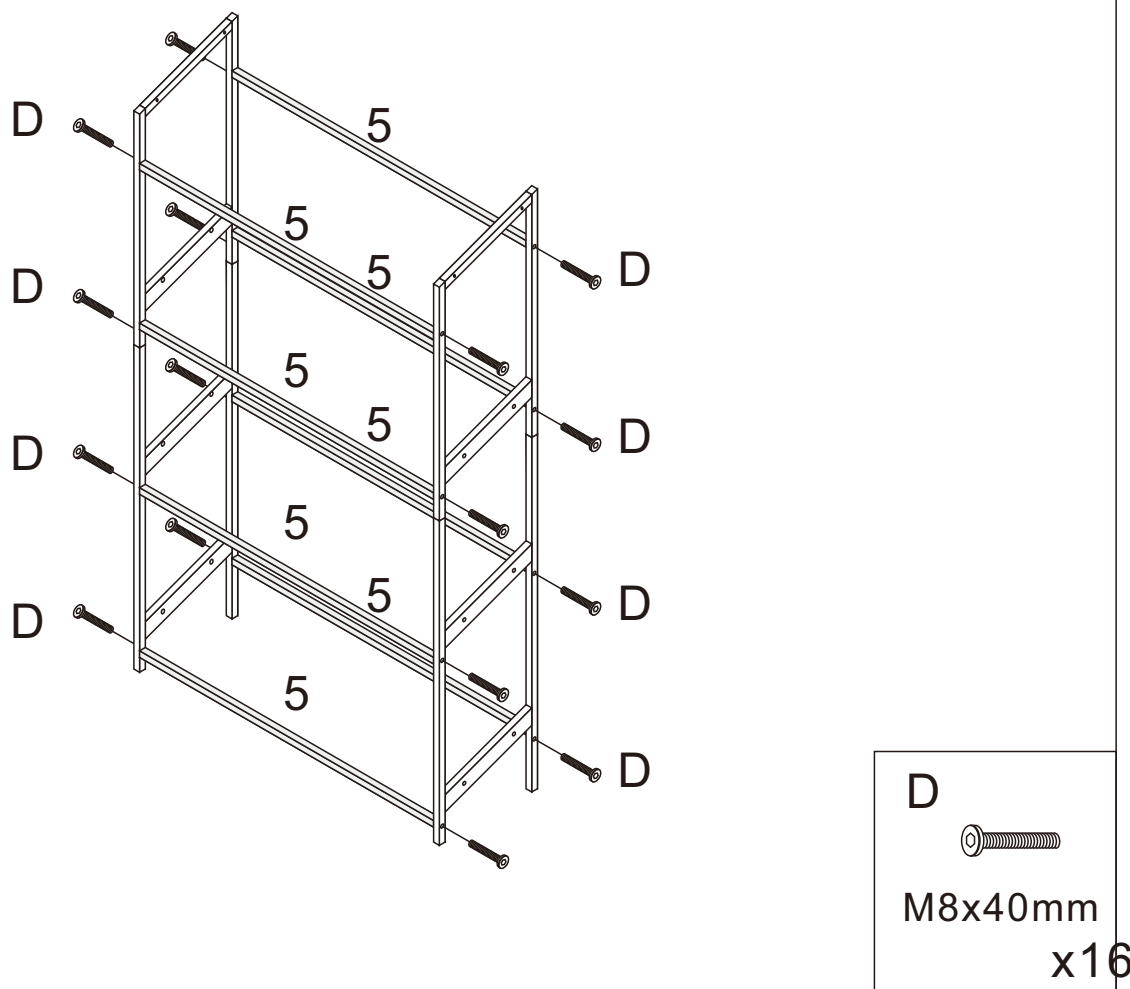

06

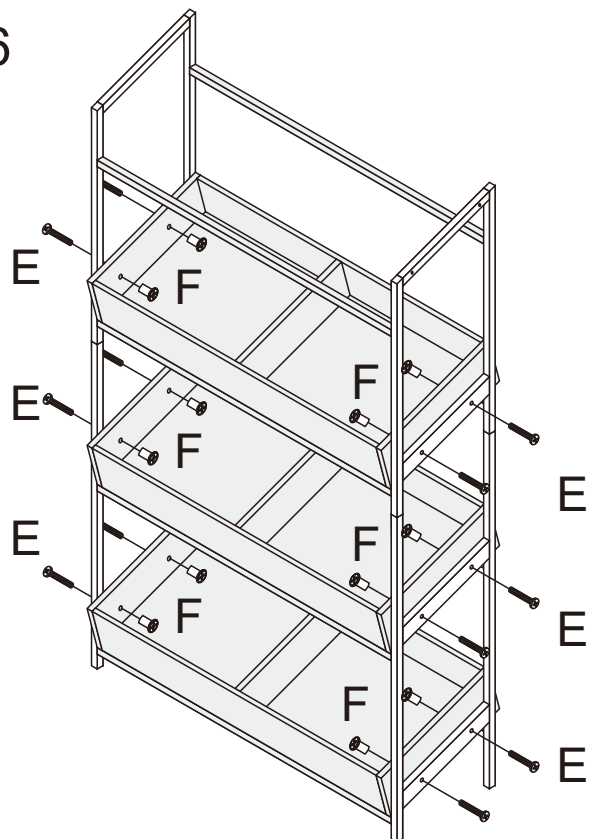

E




M6x30mm
x12

F



x12

07

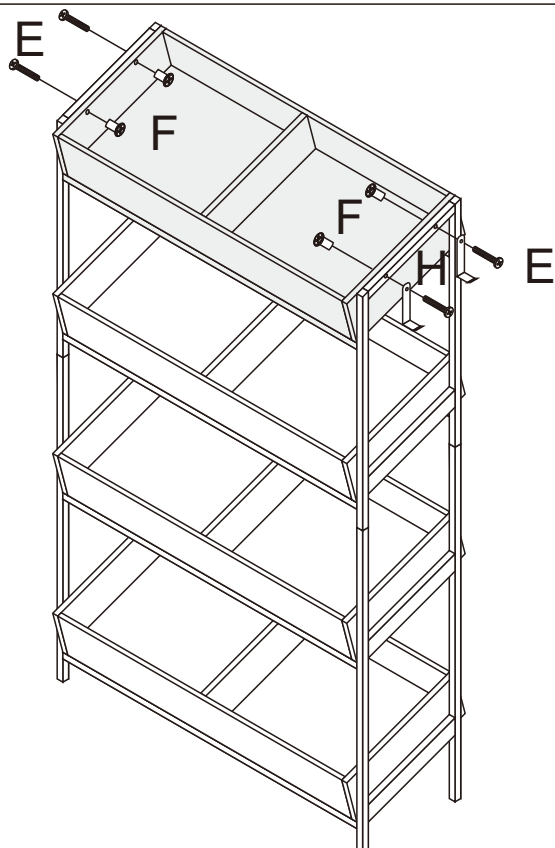

E




M6x30mm
x4

F




x4

H



x2

08

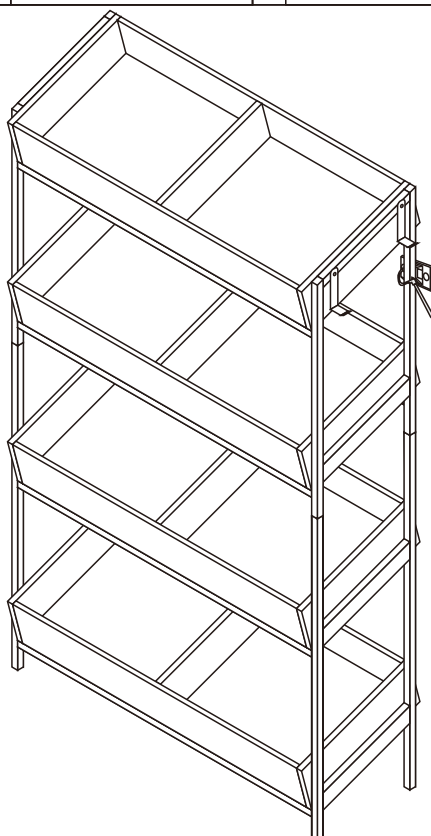


Assembly Instructions



Plastic anchor
M4x30
4pcs



Nylon Strap
M8x250
2pcs




Plastic connectors
2pcs




M4x40
4pcs


Step 1

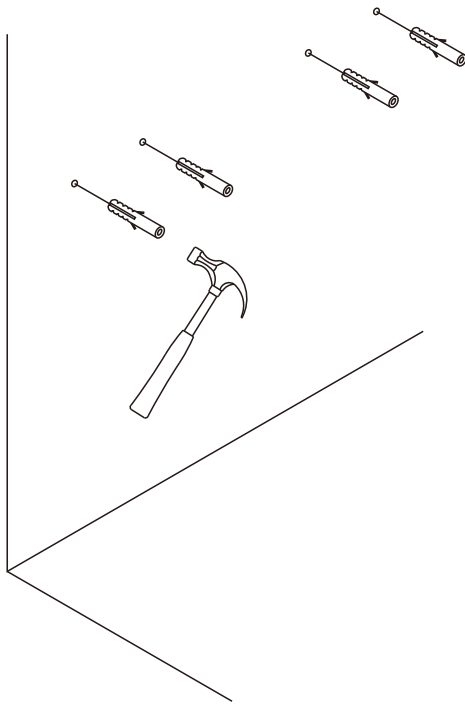

Step 2

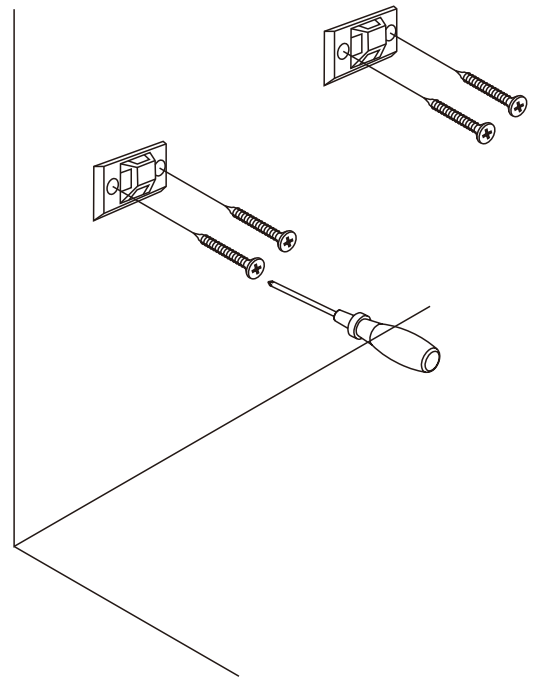

Step 3

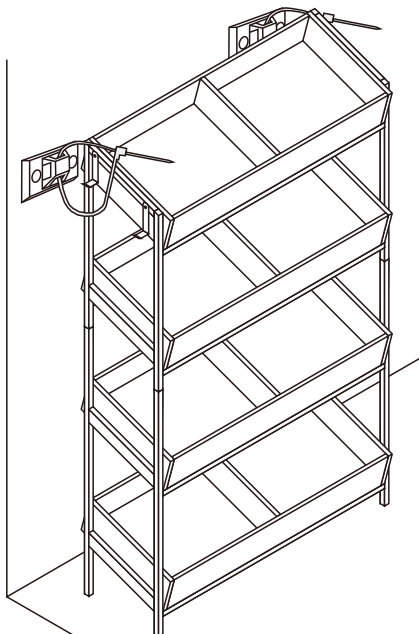

Step 4

