


Assembly Instructions

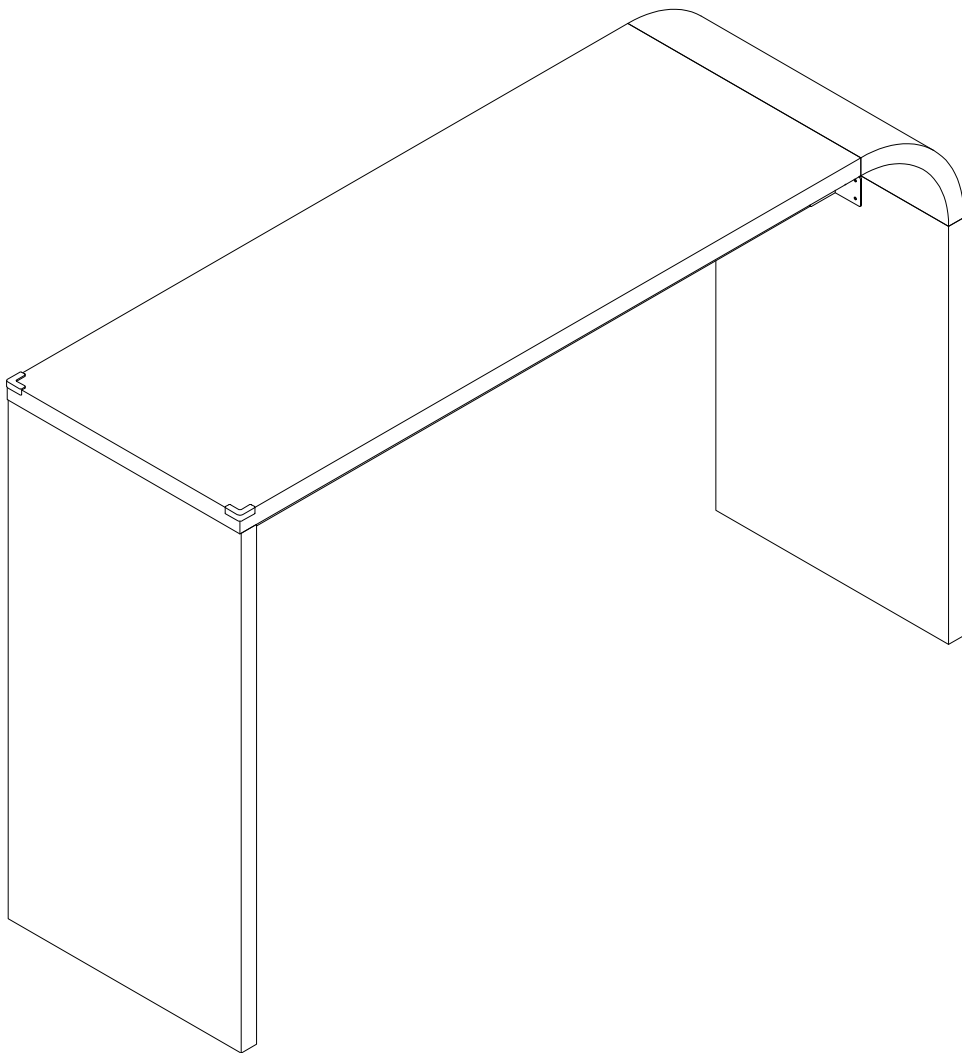

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

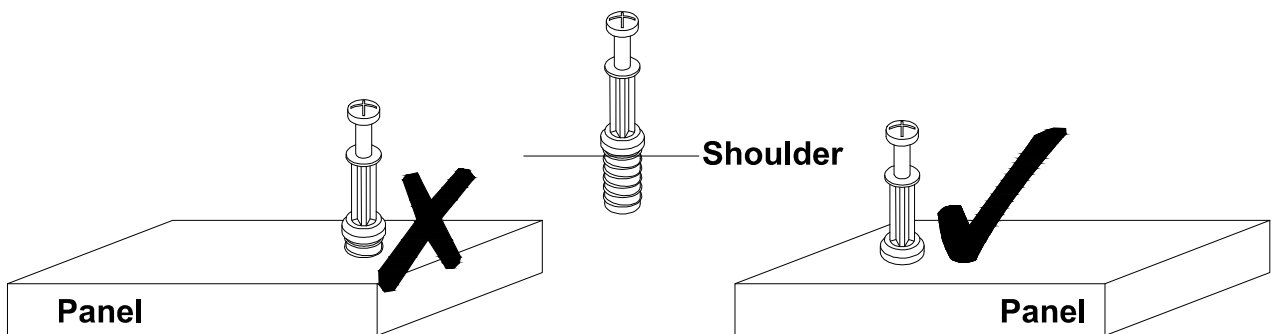


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

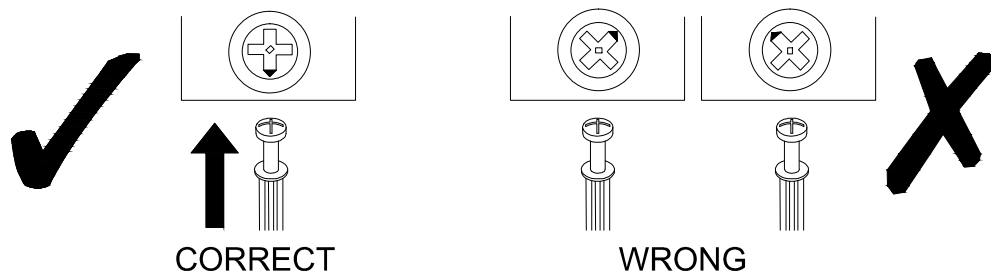


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

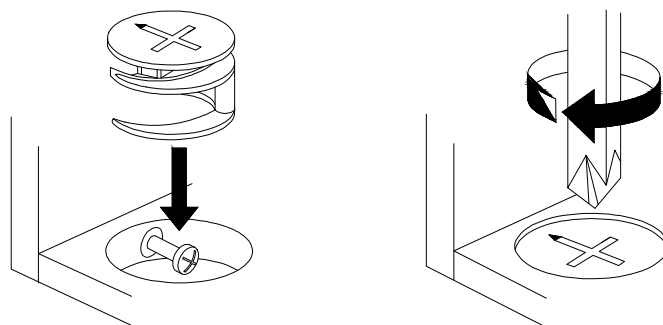

Turn cam lock clockwise to tighten.

Product structure









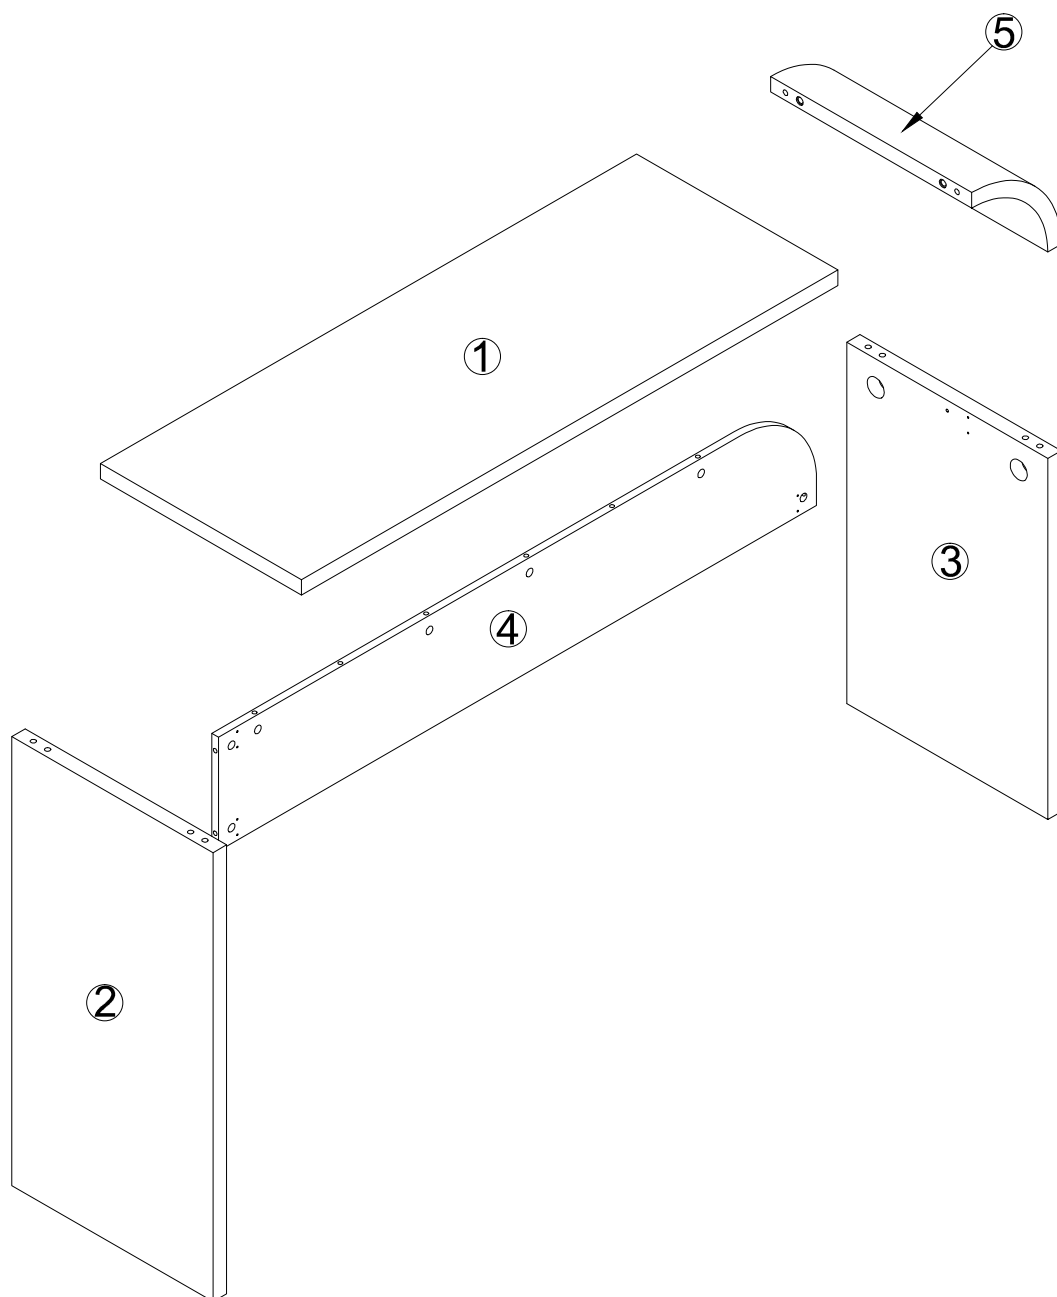


“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List




“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A Quantity: 7 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity: 7 Pcs Cam Ø15 	No. C Quantity: 7 Pcs Sticker Ø20 	No. D Quantity: 2 Pcs Dowel 8*30mm 
No. E Quantity: 6 Pcs Dowel 10*40mm 	No. F Quantity: 6 Pcs Full tooth screw M8*70mm 	No. G Quantity: 6 Pcs Gasket 29*15*7 	No. H Quantity: 6 Pcs Hex nut M8 
No. I Quantity: 4 Pcs Foot Pad Ø15 	No. J Quantity: 1 Pc Wrench 	No. K Quantity: 3 Pcs L Shape Part 	No. L Quantity: 12 Pcs Screw M3.5*14mm 
No. M Quantity: 2 Pcs Corner Protecto 30*30*8 	No. N Quantity: 6 Pcs Hole Cover Ø42*9 		

STEP 1

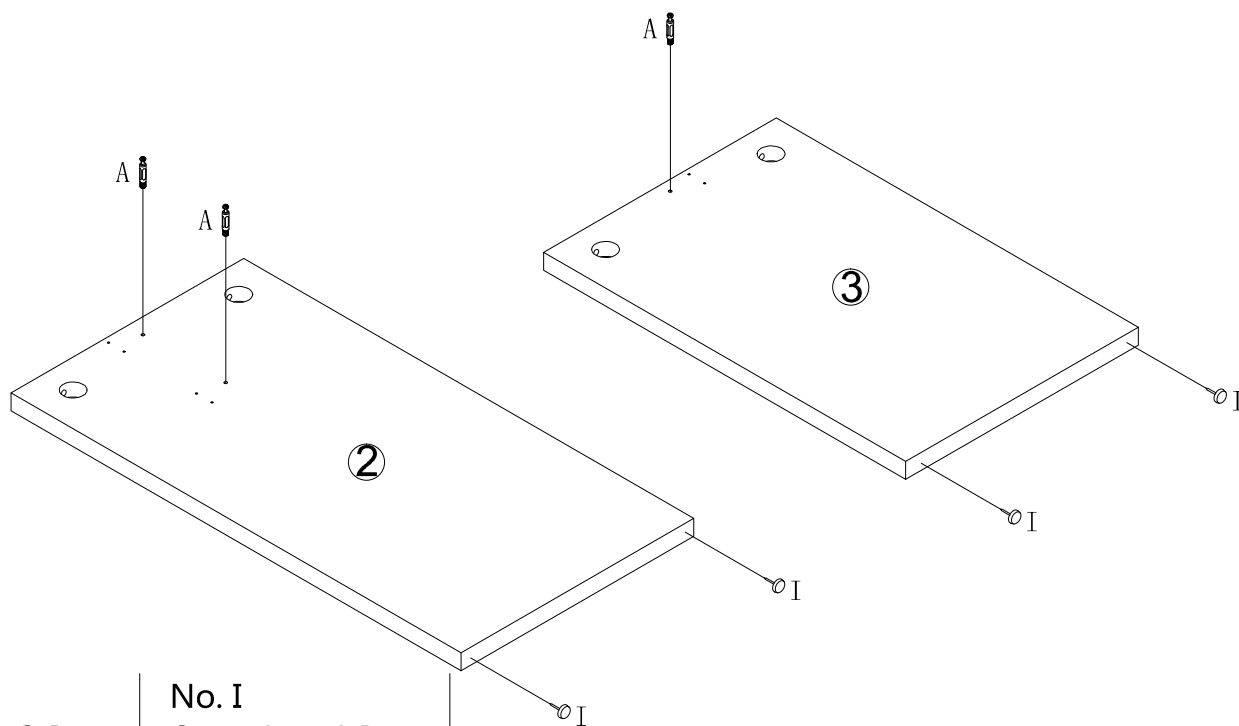


No. A
Quantity: 3 Pcs
8*28 mm



No. I
Quantity: 4 Pcs
Ø15




STEP 2

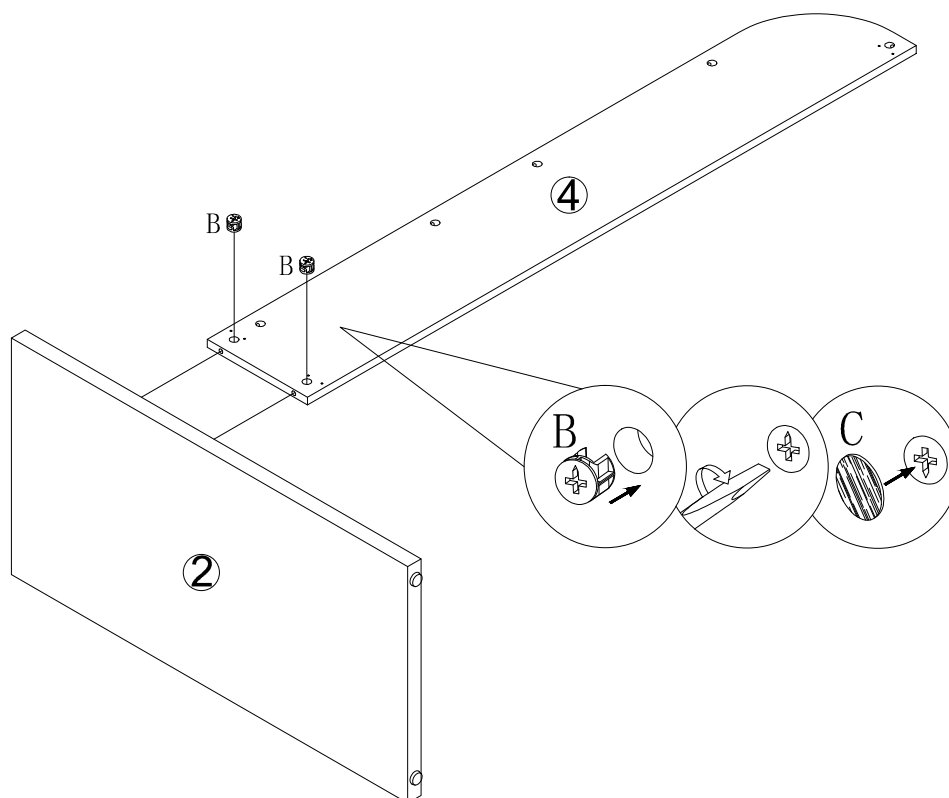

No. B
Quantity: 2 Pcs
Ø15




STEP 3

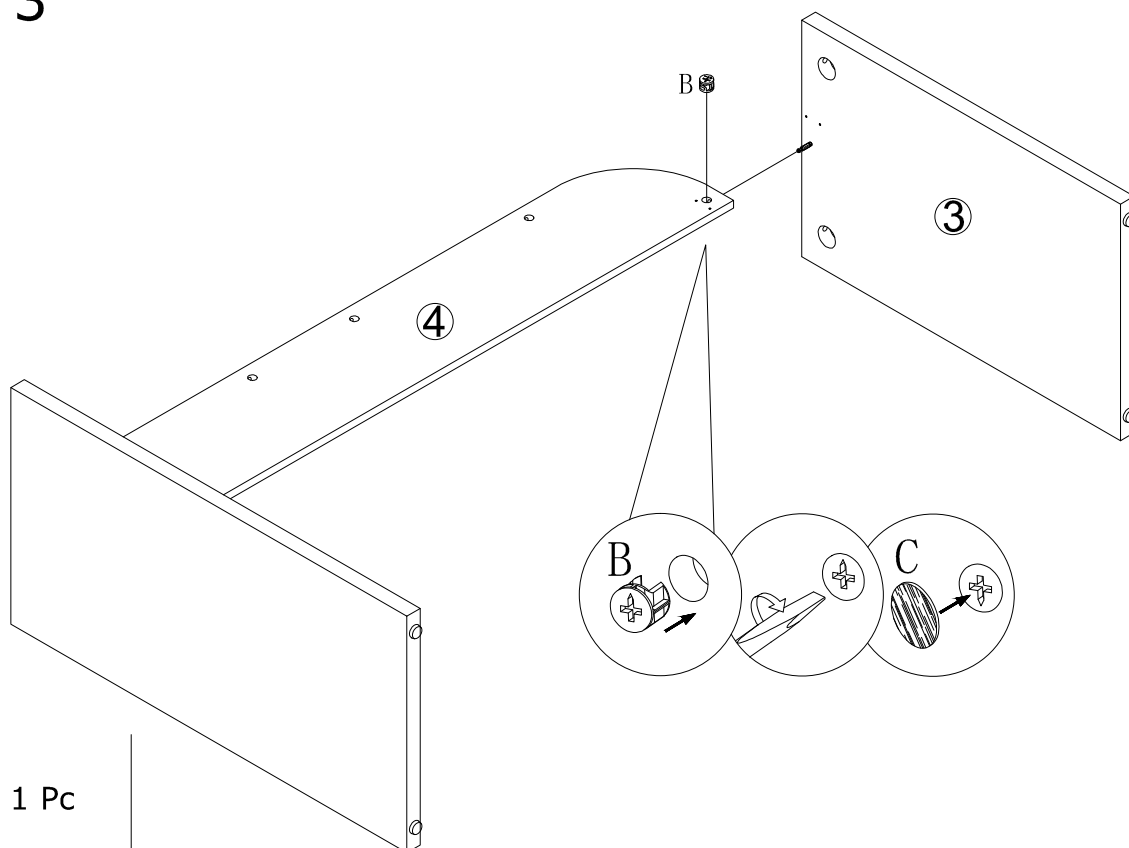


No. B
Quantity: 1 Pc
Ø15




STEP 4

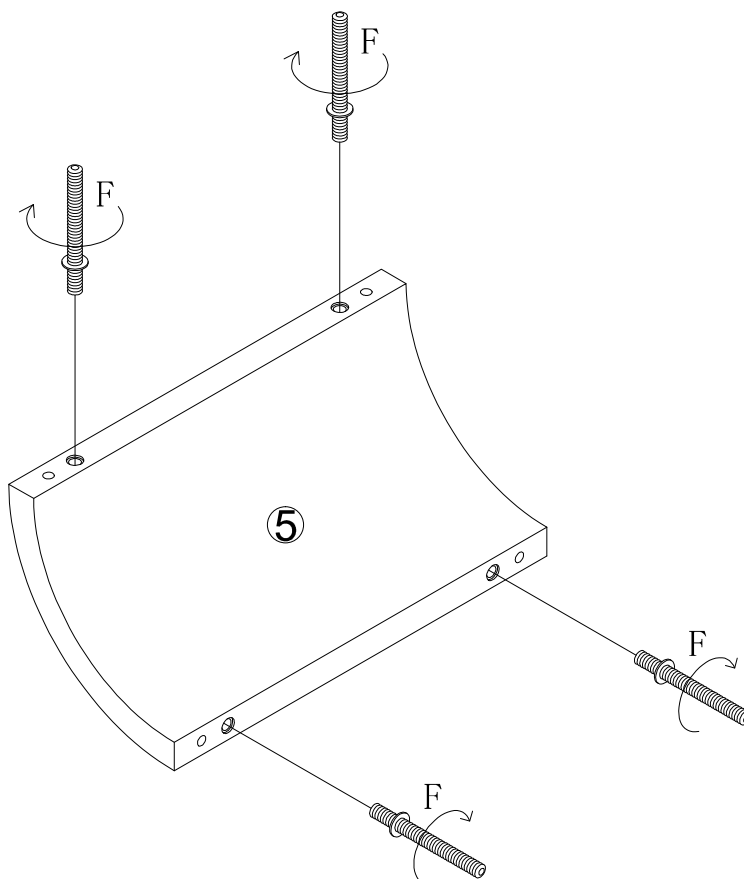


No. F
Quantity: 4 Pcs
M8*70mm



STEP 5

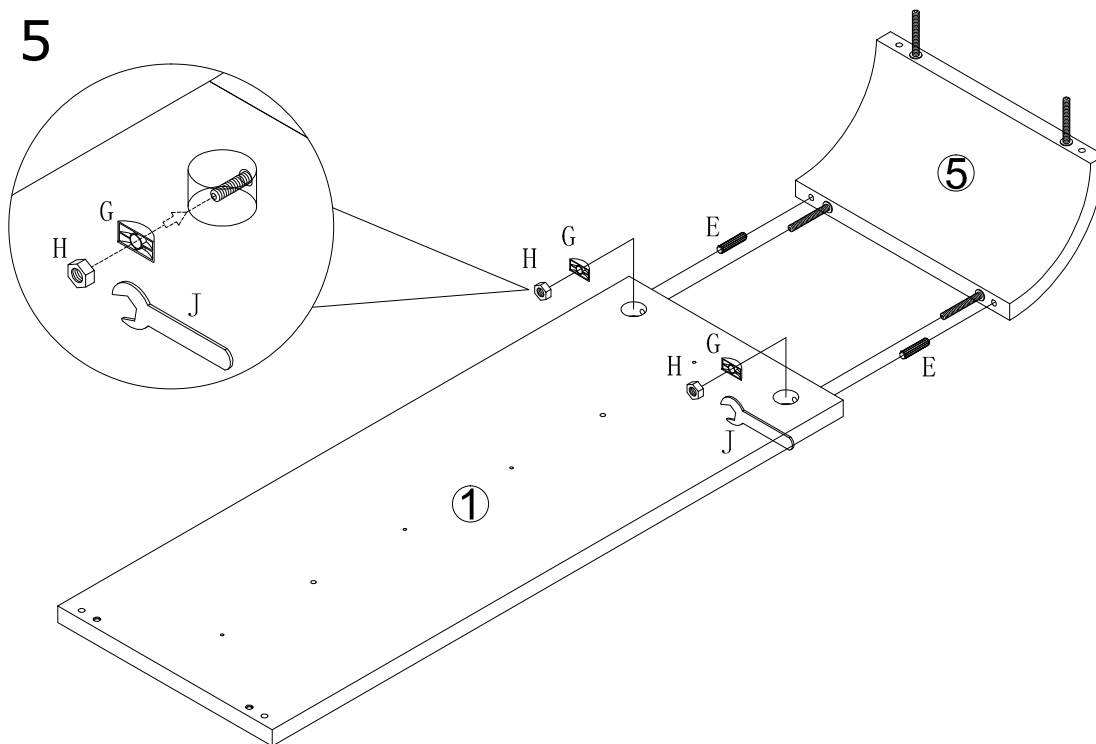

No. E
Quantity: 2 Pcs
10*40mm




No. G
Quantity: 2 Pcs
29*15*7




No. H
Quantity: 2 Pcs
M8




No. J
Quantity: 1 Pc




STEP 6

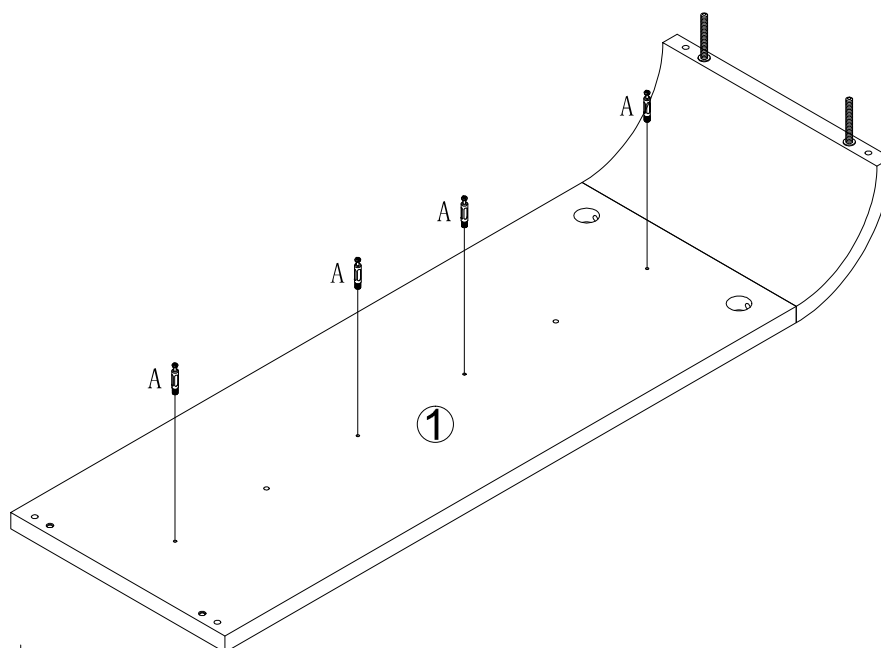


No. A
Quantity: 4 Pcs
8*28 mm



STEP 7

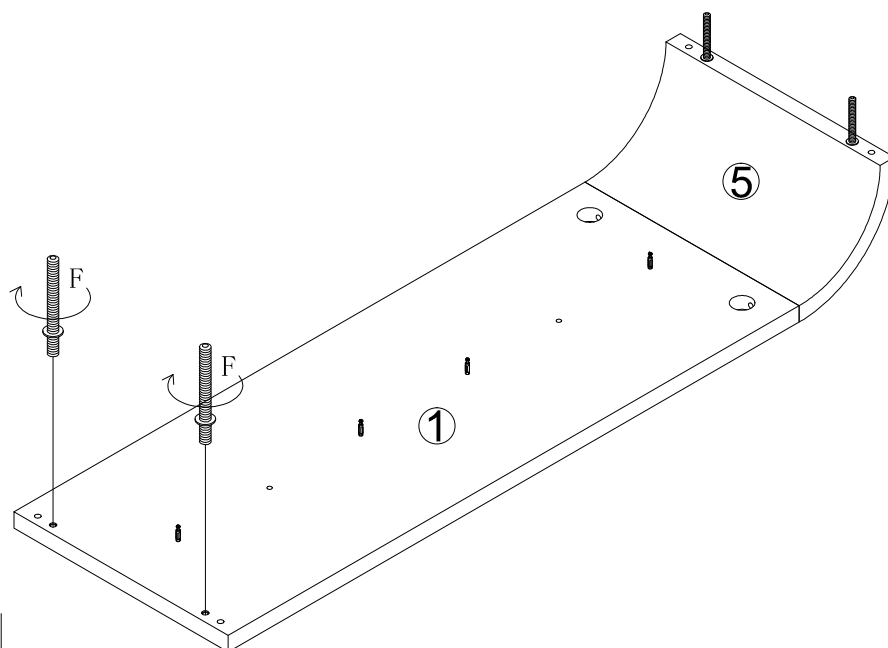

No. F
Quantity: 2 Pcs
M8*70mm



STEP 8




Please note the difference between numbers D and E, as two types of wooden dowels are used.



No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
8*30mm




No. E
Quantity: 4 Pcs
10*40mm

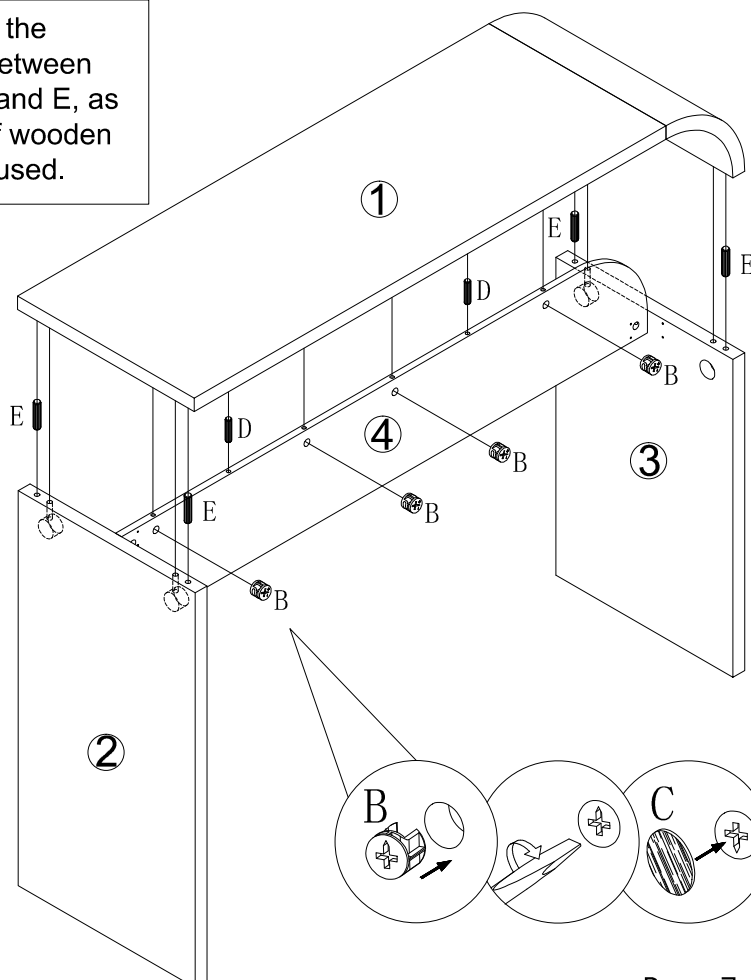

STEP 9



No. G
Quantity: 4 Pcs
29*15*7



No. H
Quantity: 4 Pcs
M8




No. J
Quantity: 1 Pc

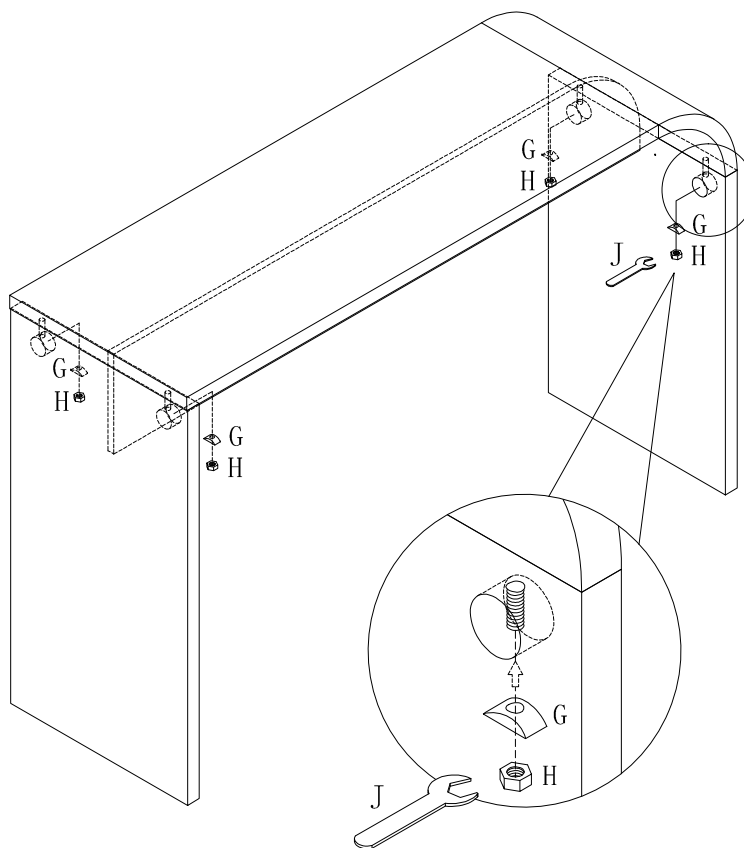


STEP 10

No. K
Quantity: 1 Pc




No. L
Quantity: 4 Pcs
M3.5*14mm

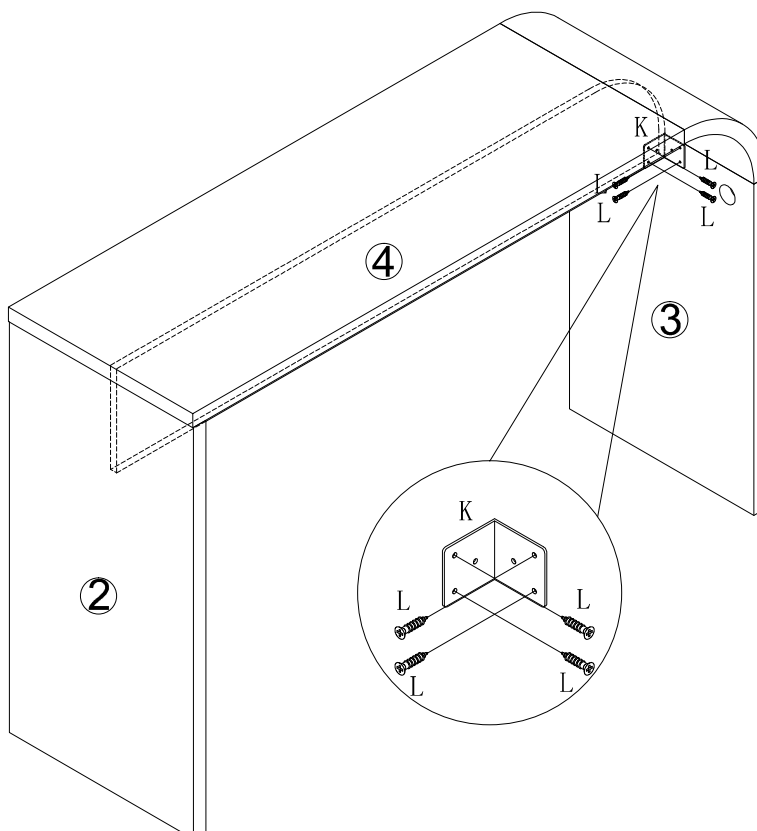


STEP 11

No. K
Quantity: 2 Pcs



No. L
Quantity: 8 Pcs
M3.5*14mm

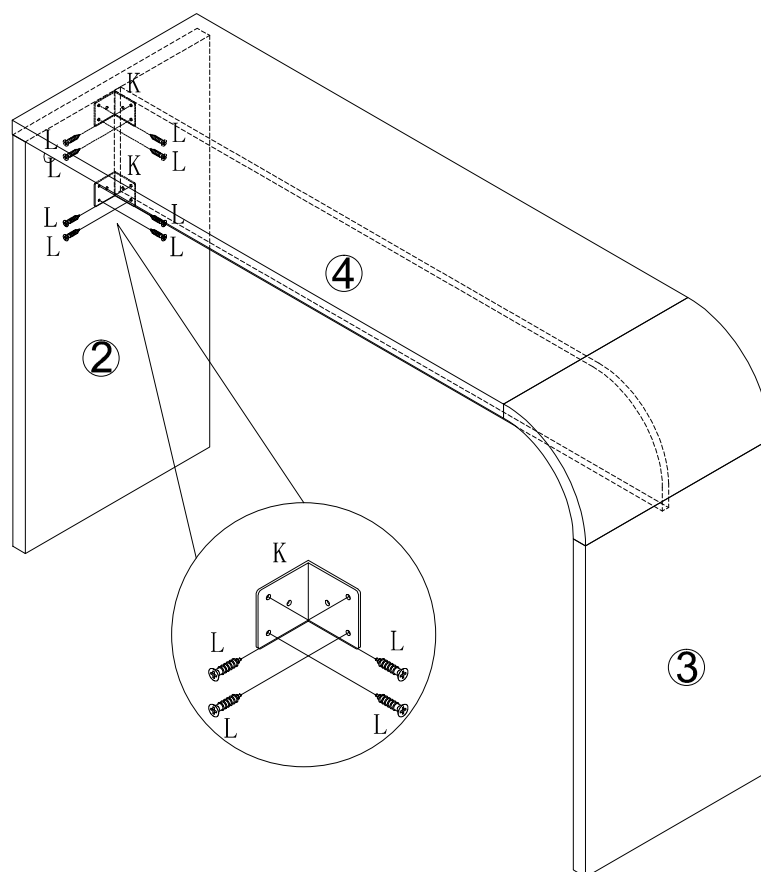

STEP 12

No. M
Quantity: 2 Pcs
30*30*8



No. N
Quantity: 6 Pcs
Ø42*9

