



GOOD DIRECTIONS, INC.


ASSEMBLY INSTRUCTIONS

CUPOLA MOUNT INSTALLATION – COTTAGE SIZE WEATHERVANES

1. ASSEMBLING TWO PART ROD




APPLY A LINE OF LOCTITE® (supplied) ACROSS THE THREADS. (This small amount is all that's needed)

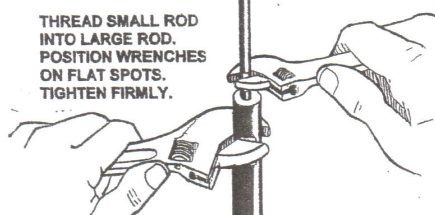

THREAD SMALL ROD INTO LARGE ROD. POSITION WRENCHES ON FLAT SPOTS. TIGHTEN FIRMLY.

TIP: You may save the remaining LOCTITE® for other uses. Simply reverse the cap for storage

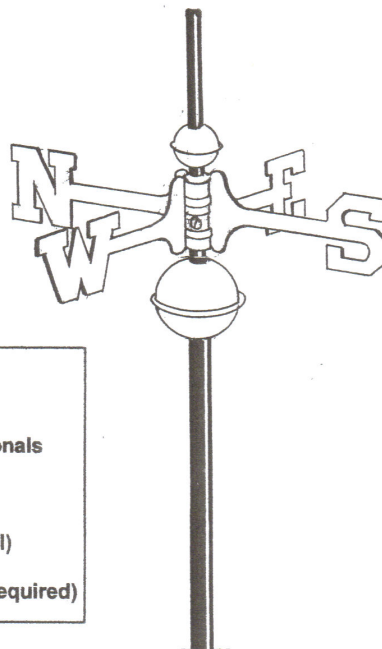

YOUR PACKAGE INCLUDES


- 1 Weathervane Figure
- 1 Set of Brass Directionals
- 1 Small Steel Rod
- 1 Large Steel Rod
- 1 Set of Copper Balls (one large, one small)
- 1 Tube of Loctite®
- 1 Retaining Hook (if required)

2.




SLIDE LARGE BALL DOWN TO JUNCTION OF THE LARGE AND SMALL ROD.

4. SLIDE SMALL BALL ON RODREST ON DIRECTIONALS

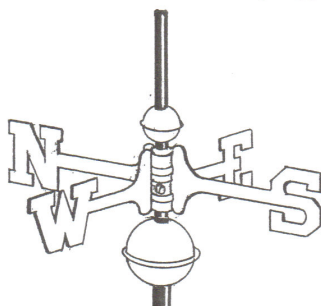

3. INTERLOCK DIRECTIONALS... SLIDE ON ROD

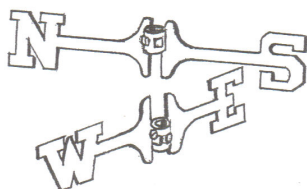


West goes left of North

5. Slide weathervane onto rod.




Slide weathervane and retaining hook* onto rod simultaneously.

Tighten set screw.



*Retaining hook included with and required for 3-dimension figures only.

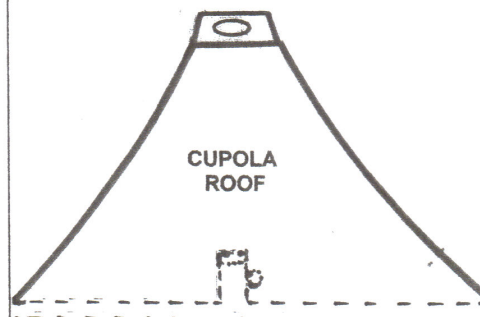

CUPOLA ROOF

GOOD DIRECTIONS CUPOLAS ARE "WEATHERVANE READY" WITH INTERNAL MOUNTING BRACKET INSIDE ROOF.

THE WEATHERVANE ROD IS SECURED IN ROOF SECTION BEFORE THE FINAL ASSEMBLY OF CUPOLA.