


Wooden Arbor Assembly Instruction

Note:


Don't tighten all the screws until the last step. That will simplify your assembly.

To improve efficiency and secure each joint quickly, you can try to look for a partner holding the arch. For your convenience, we suggest to prepare an electric drill.

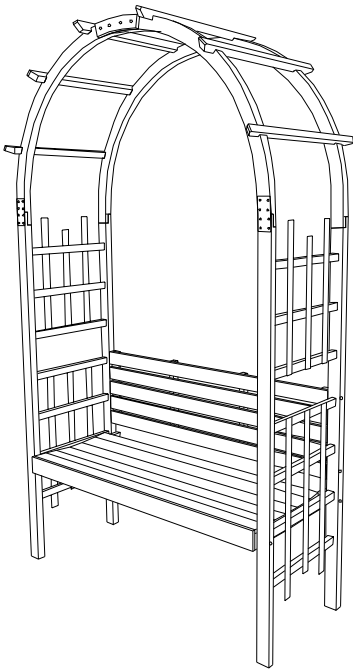


A (2pcs)		B (2pcs)		C (2pcs)		D (2pcs)		E (6pcs)	
F (1pc)		G (1pc)		H (32pcs)		I (12pcs)			
				4X25mm		4X30mm			
J (20pcs)		K (4sets)		L (4sets)		M (4pcs)		TOOLS & MATERIALS NEEDED	
4X40mm		6X80mm		8X80mm				M14	
								M10	

1

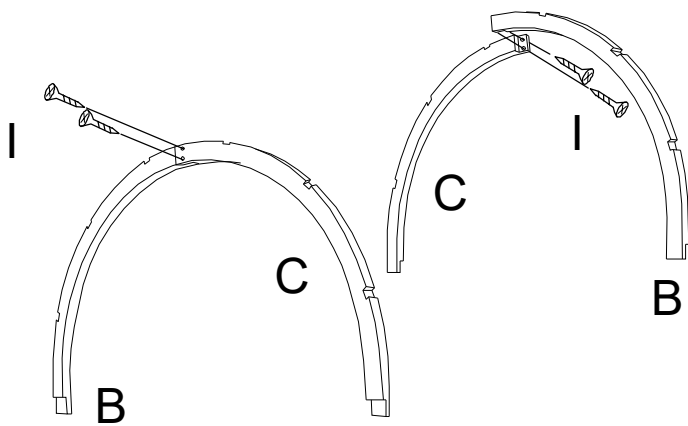


B=2PCS
C=2PCS
I=4PCS

2

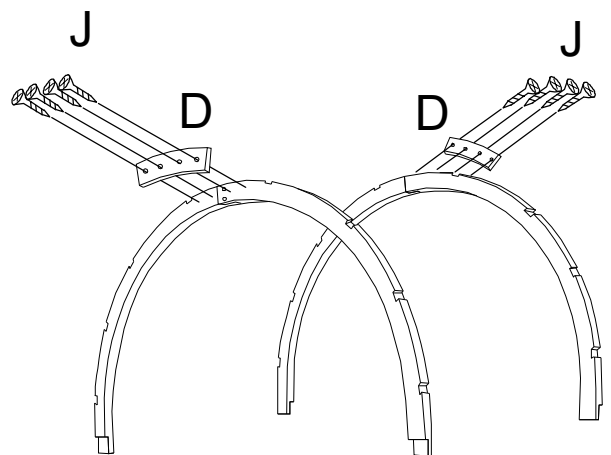


D=2PCS
J=8PCS

3

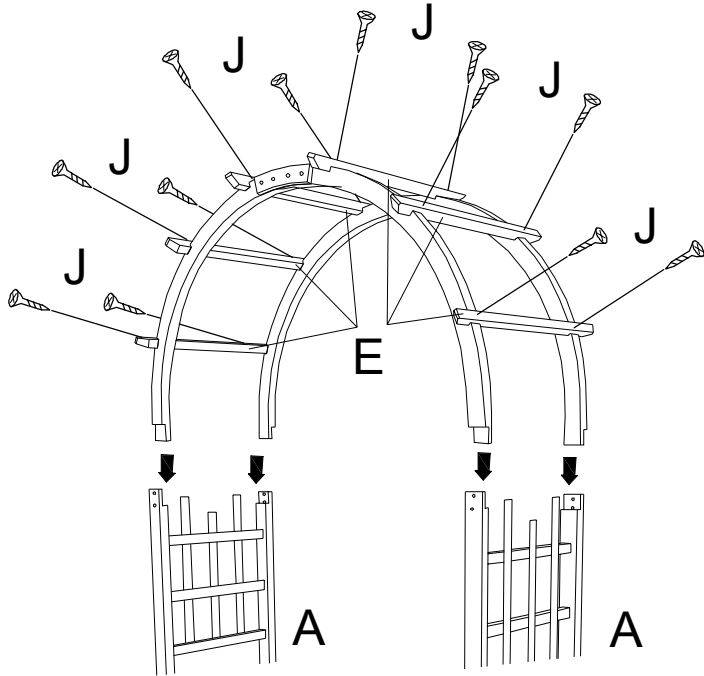


A=2PCS
E=6PCS
J=12PCS

4

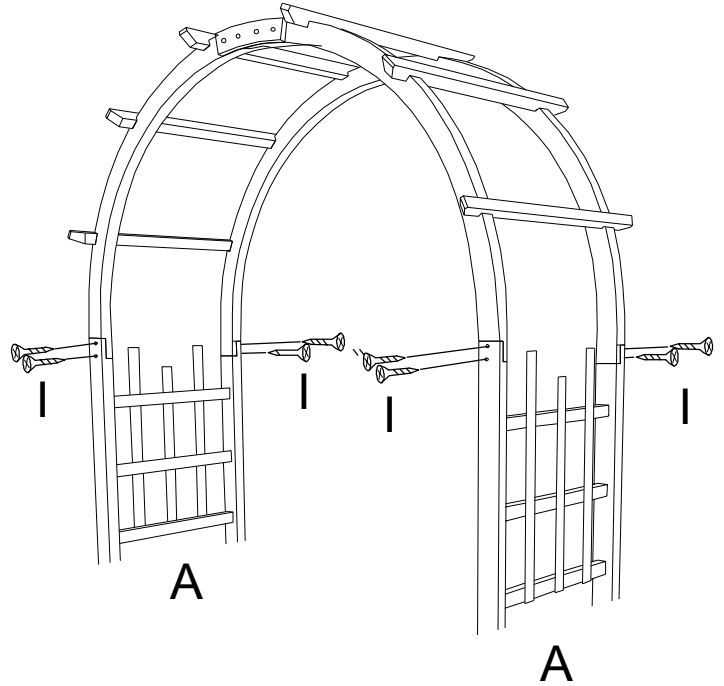


I=8PCS

5

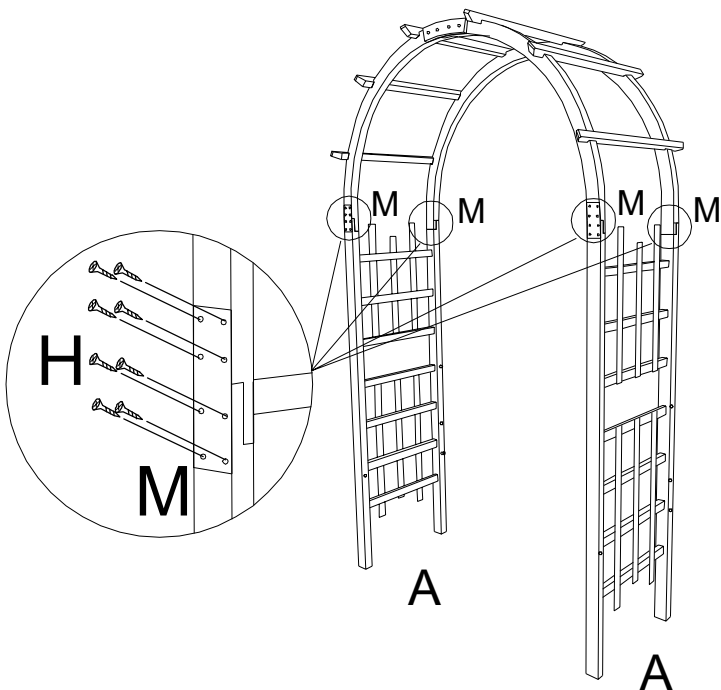

M=4PCS
H=32PCS

6

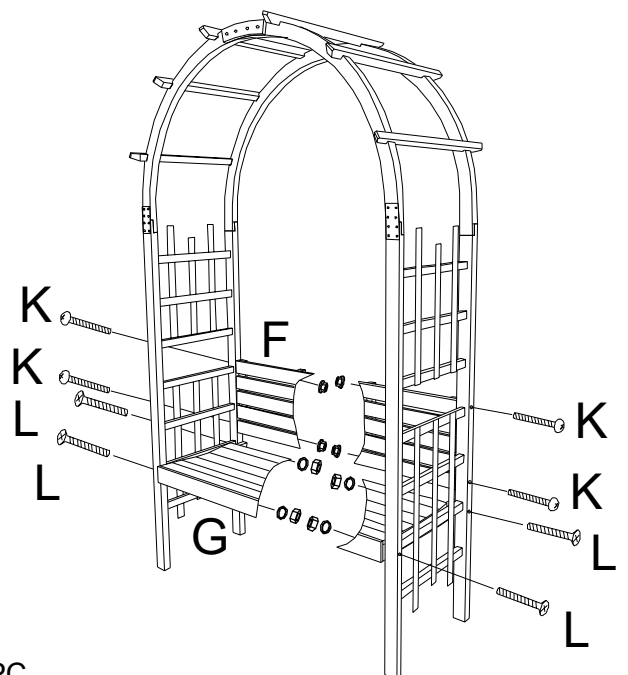

F=1PC
G=1PC
K=4SETS
L=4SETS