


PARQUET CONSOLE TABLE

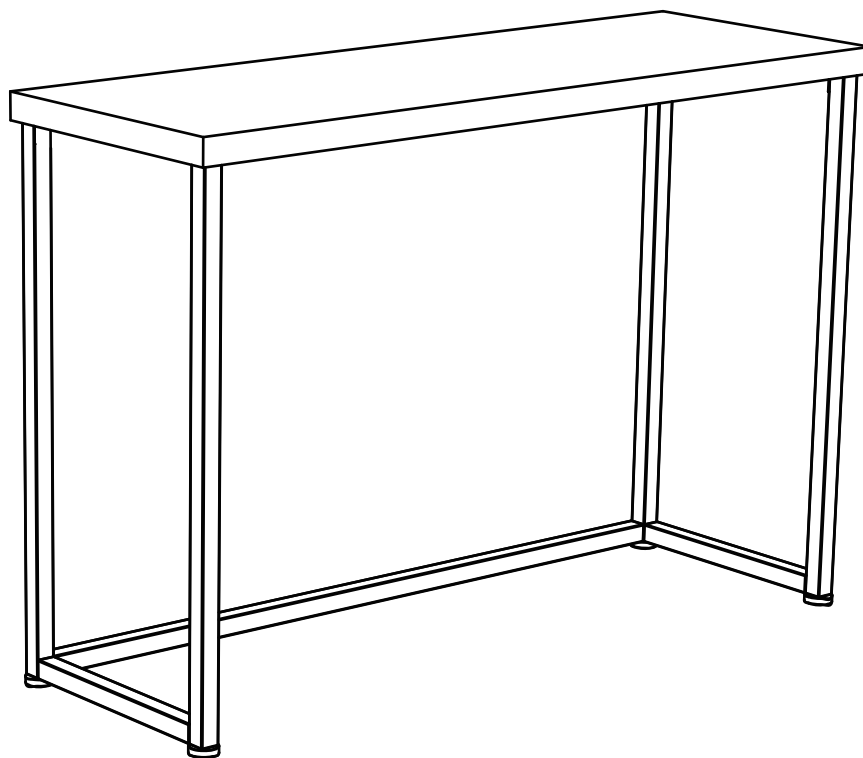





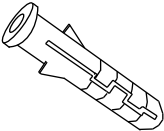
ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .



Please do not return to the store
Broken or missing parts?
Need help with assembly?

Hardware List

A 	B 	C 	D 
Bolt (8pcs)	Allen wrench (1pc)	Cabletie (2pcs)	Eyelet screw (2pcs)
E 			
Anchor (2pcs)			


Panel List

①




Top panel (1pc)

②

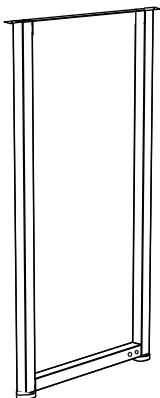

Left side frame (1pc)

③

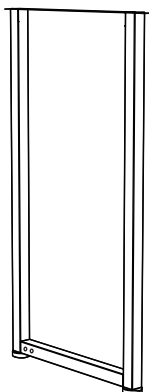

Right side frame (1pc)



④



Bottom frame (1pc)

Step 1

1. Connect left side frame (2) and right side frame (3) to bottom frame (4) as shown using bolts (A) and allen wrench (B) .


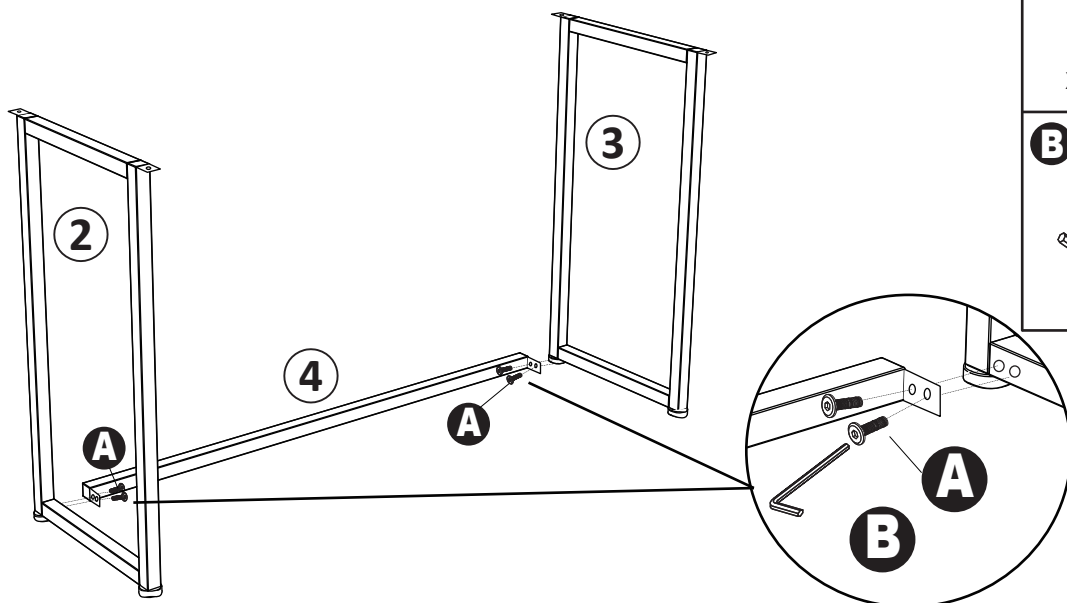


Step 2

Assemble face down on carpet or soft surface.

1. Connect assembly to top panel (1) as shown using bolts (A) and allen wrench (B) .

2. Turn unit over .

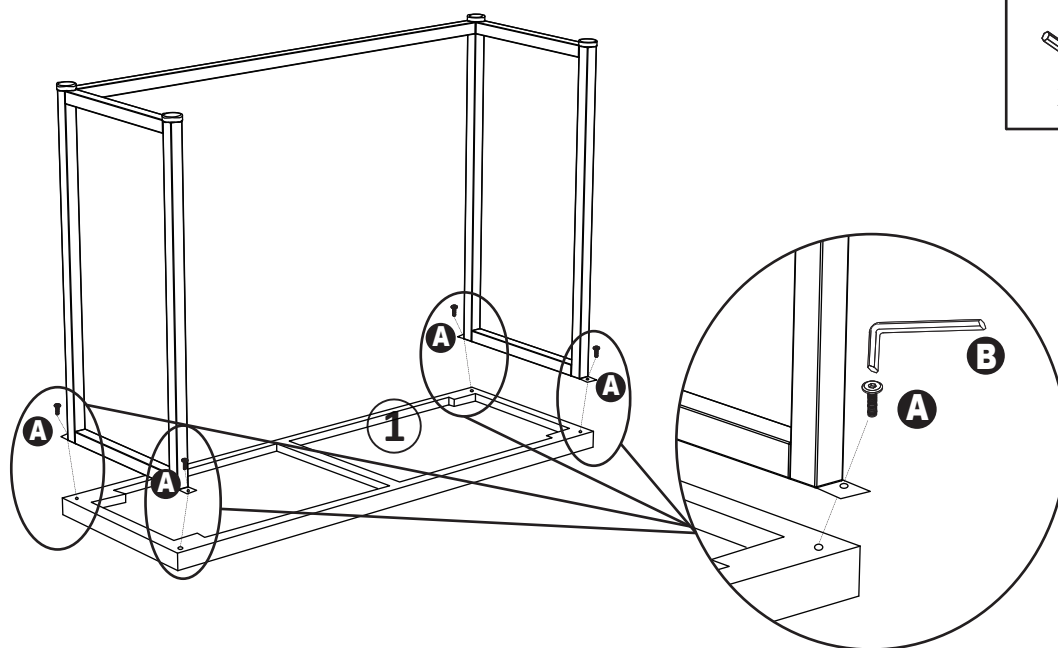

Step 3

1. Drill holes slightly smaller than anchors (E) into drywall and gently tap anchors into holes.
2. Insert eyelet screws (D) into anchors and fasten unit to wall using cable ties (C) .

