











ASSEMBLY INSTRUCTION

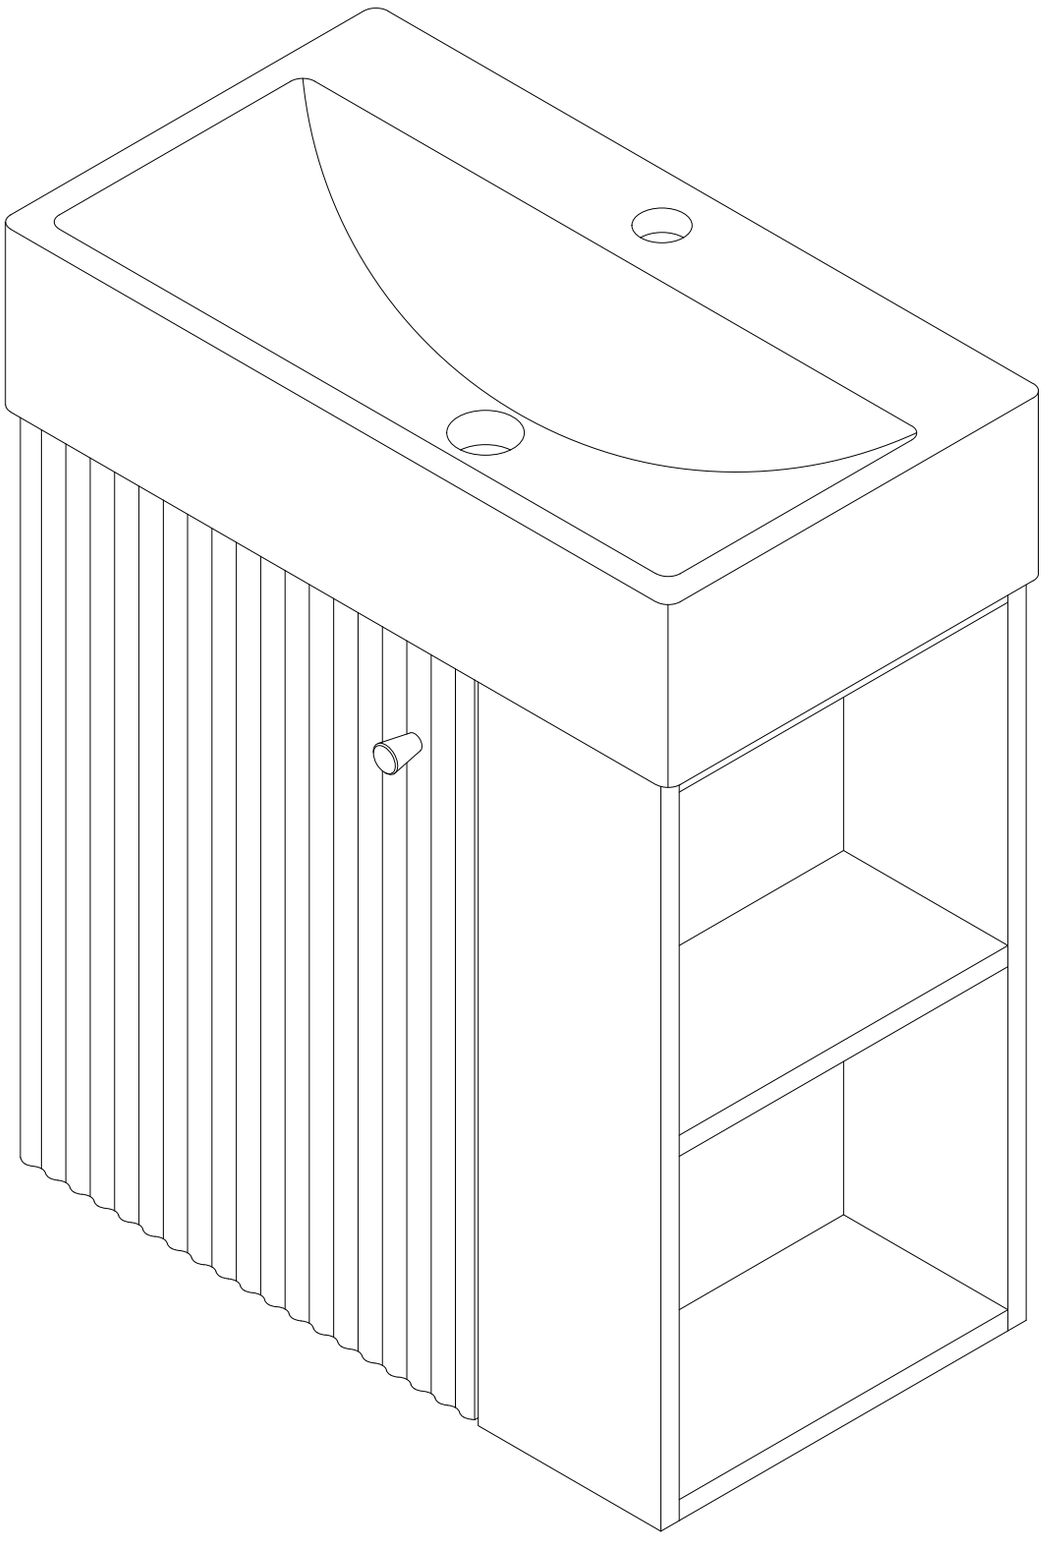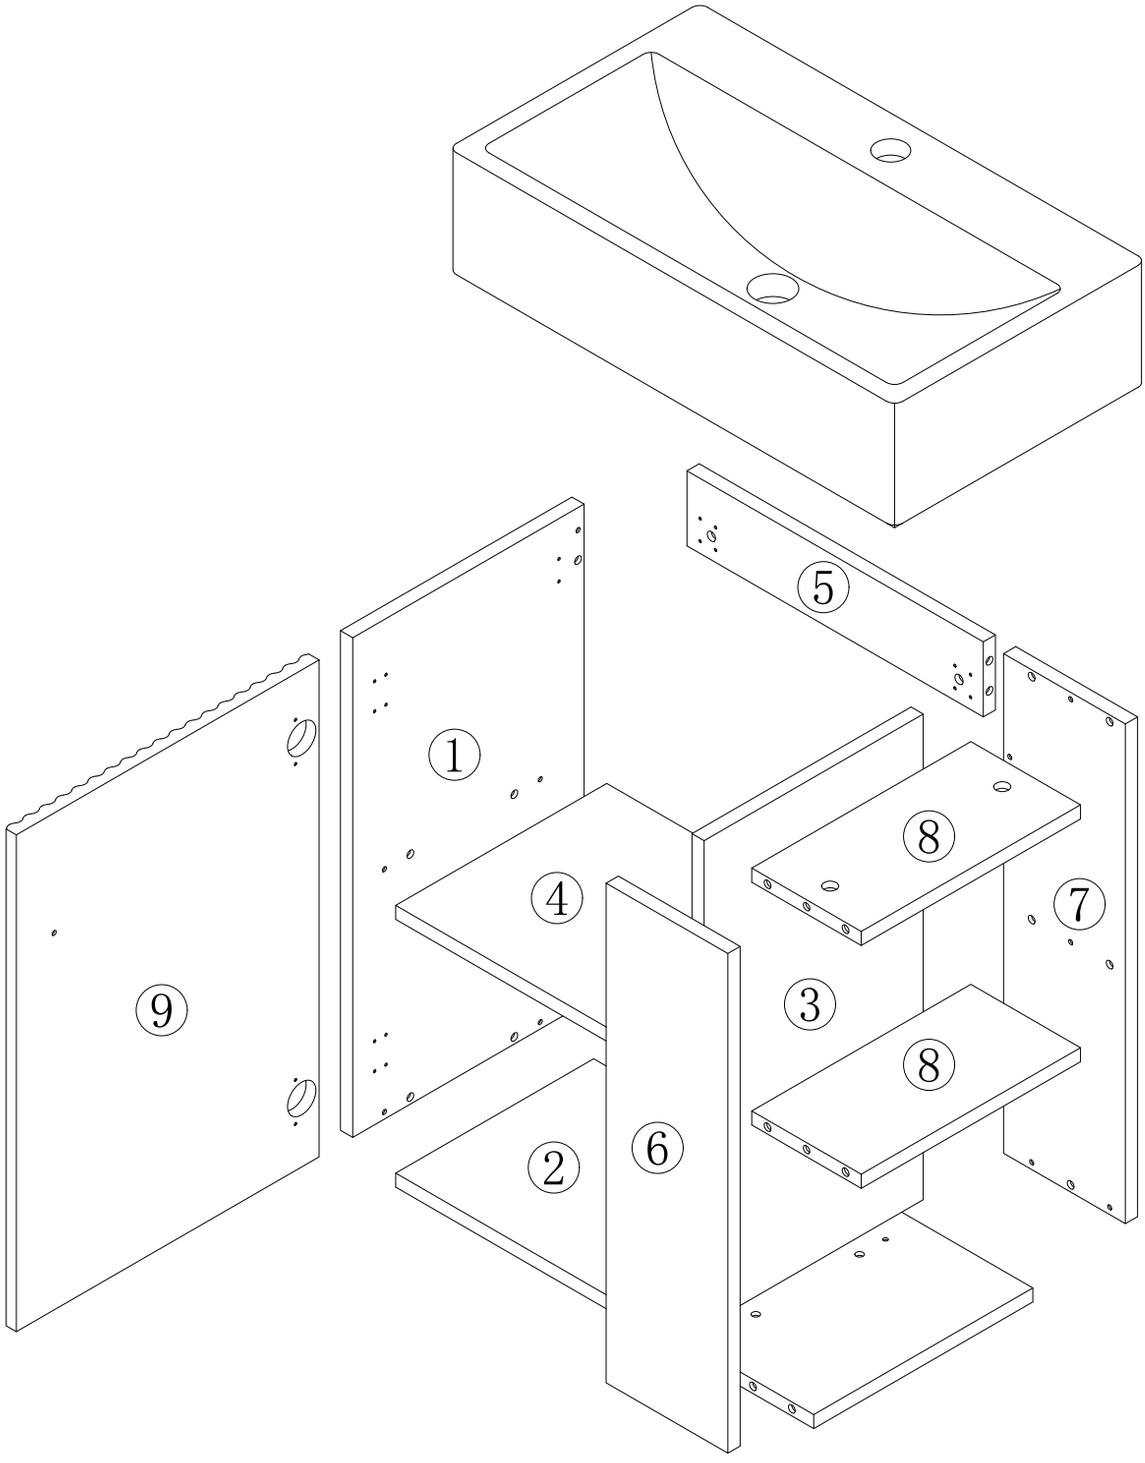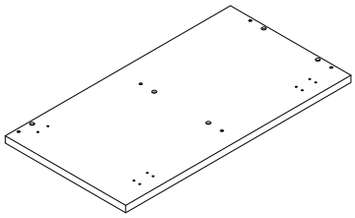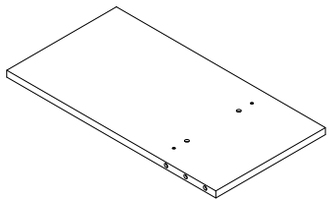
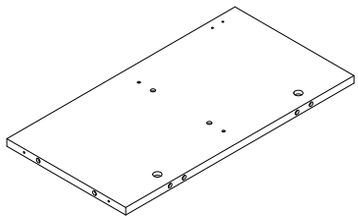
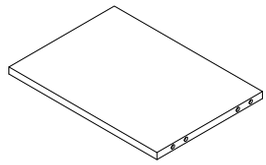
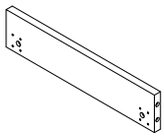
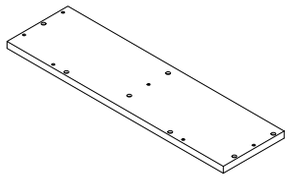
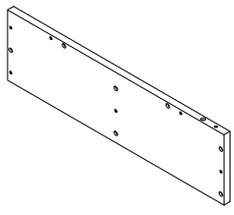

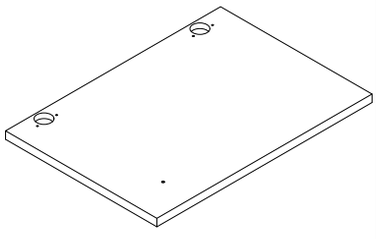



5
1
8
4
7
9
3
8
6
2



			
①x1	②x1	③x1	④x1
			
⑤x1	⑥x1	⑦x1	⑧x2
			
⑨x1			


TOOLS

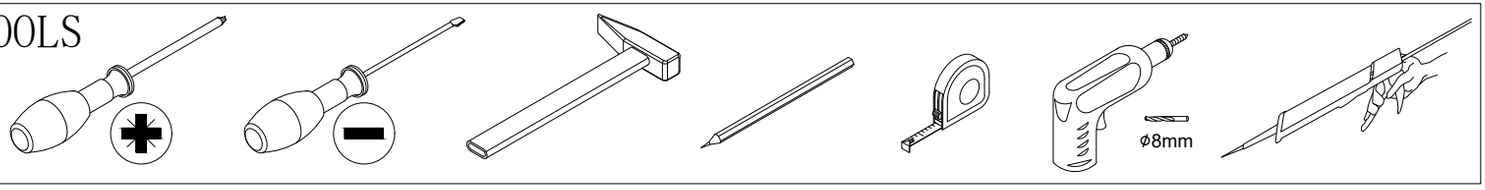


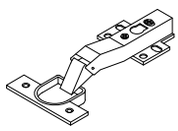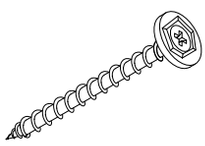
A * 16	B * 16	C * 24	D * 12	E * 12
				
M6 X 35mm	Ø15 x 12mm	Ø8 x 30mm	M4 x 14mm	M4 x 14mm
F * 6	G * 1	H * 1	I * 2	J * 2
				
M5 x 40mm	M4 x 20mm			Ø35
K * 2	L * 2	M * 2		
				
Ø8 x 40mm	Ø20	M6 x 60mm		


Step 1


A * 16	E * 4	J * 2
		
M6 X 35mm	M4 x 14mm	Ø35

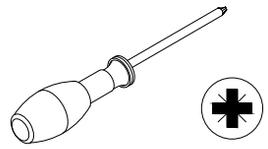


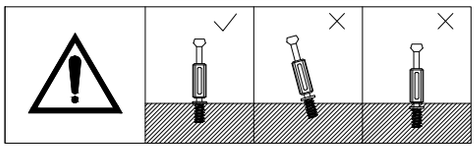


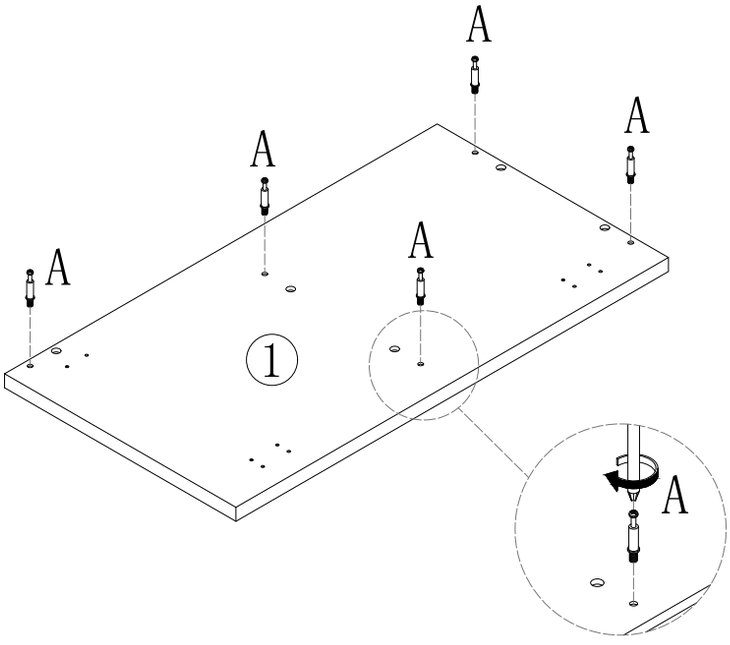

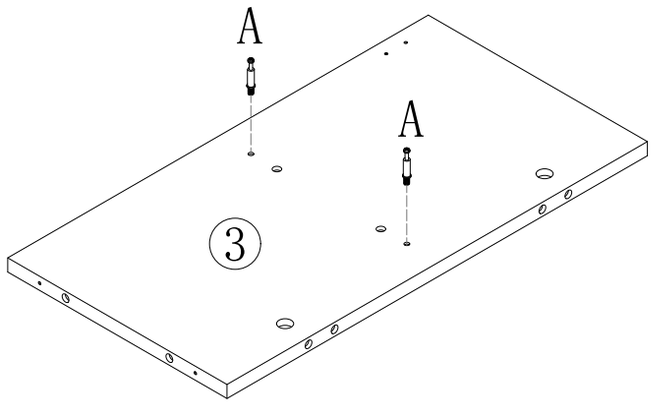

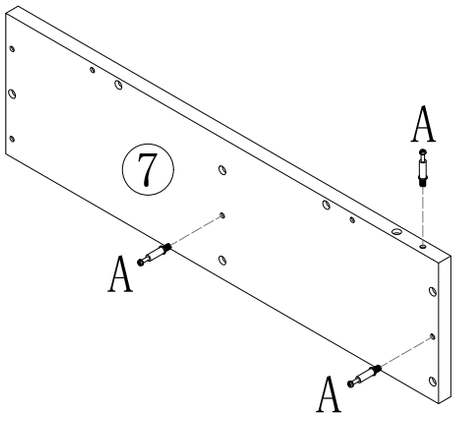


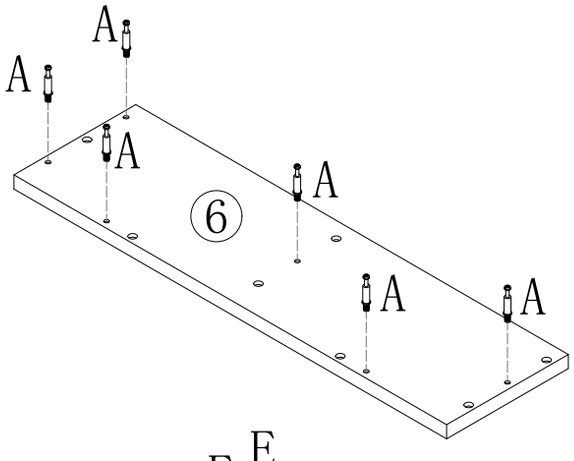


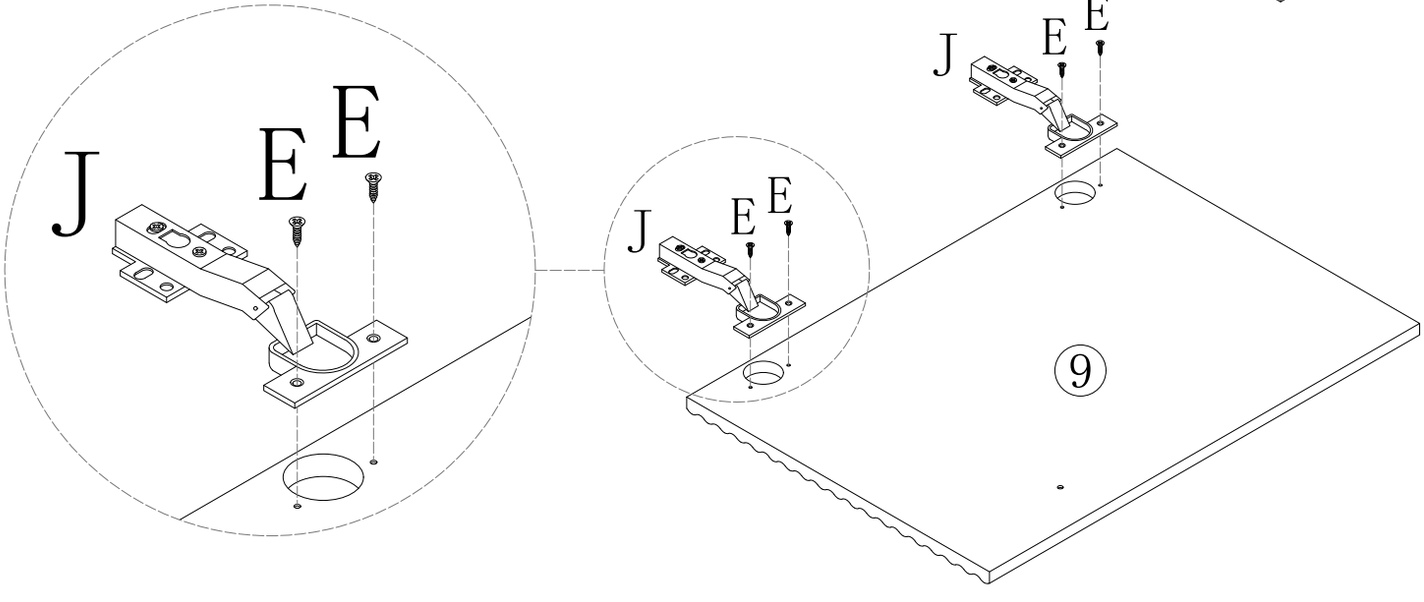



Step 2

C * 5	F * 6
	
Ø8 X 30mm	M5 X 40mm

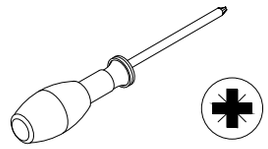

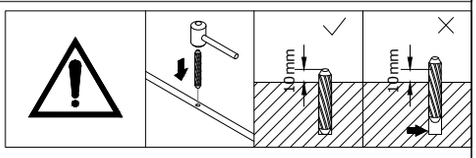


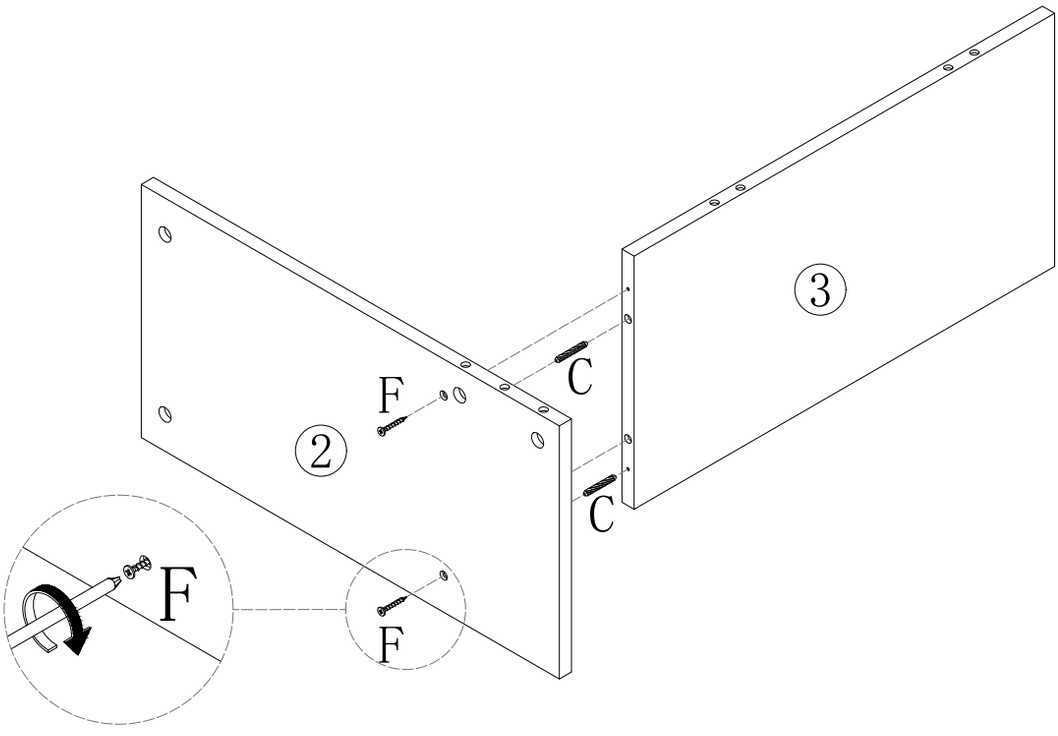


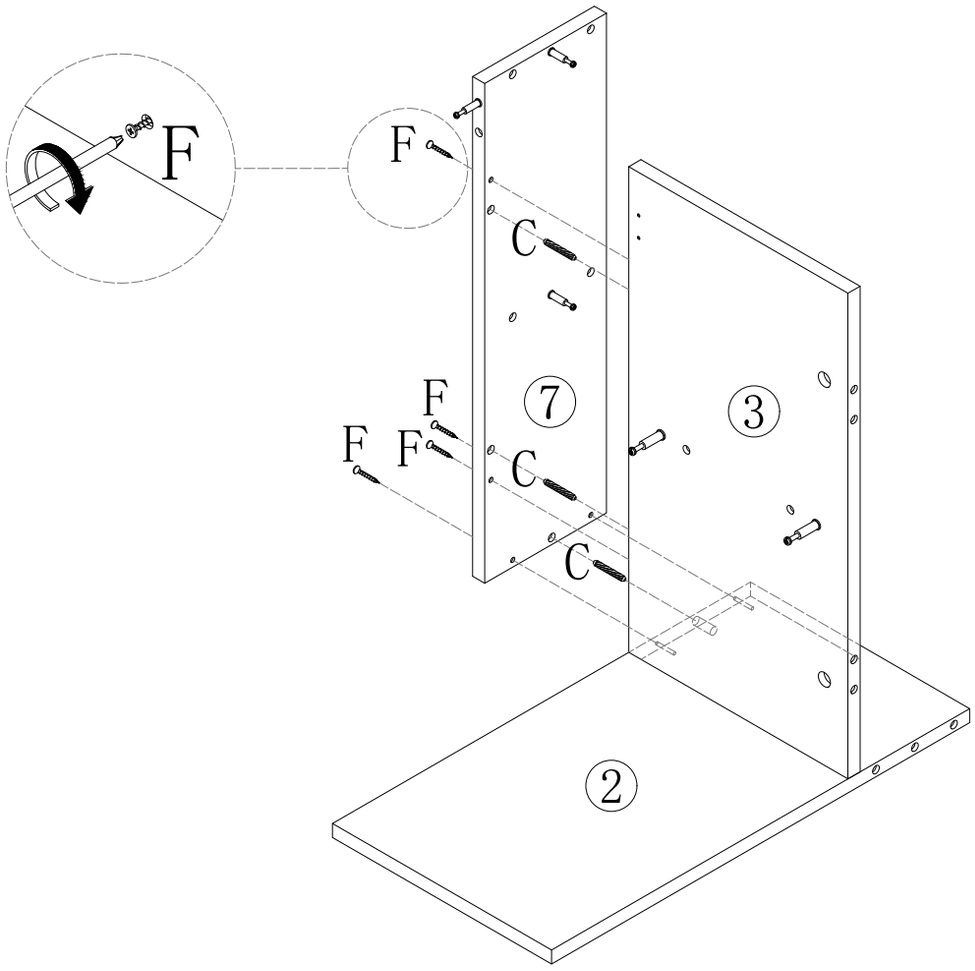



Step 3


B * 2	C * 4
	
Ø15 x 12mm	Ø8 x 30mm

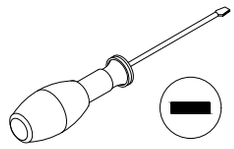

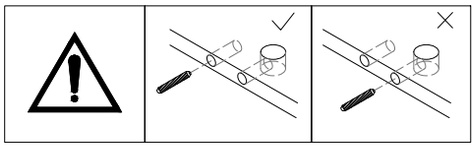

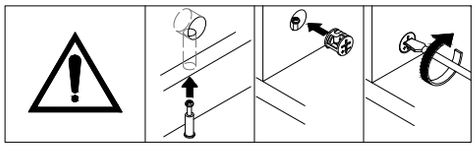


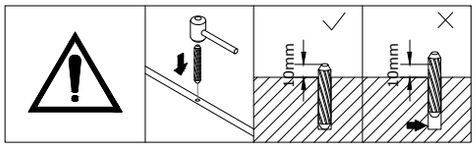


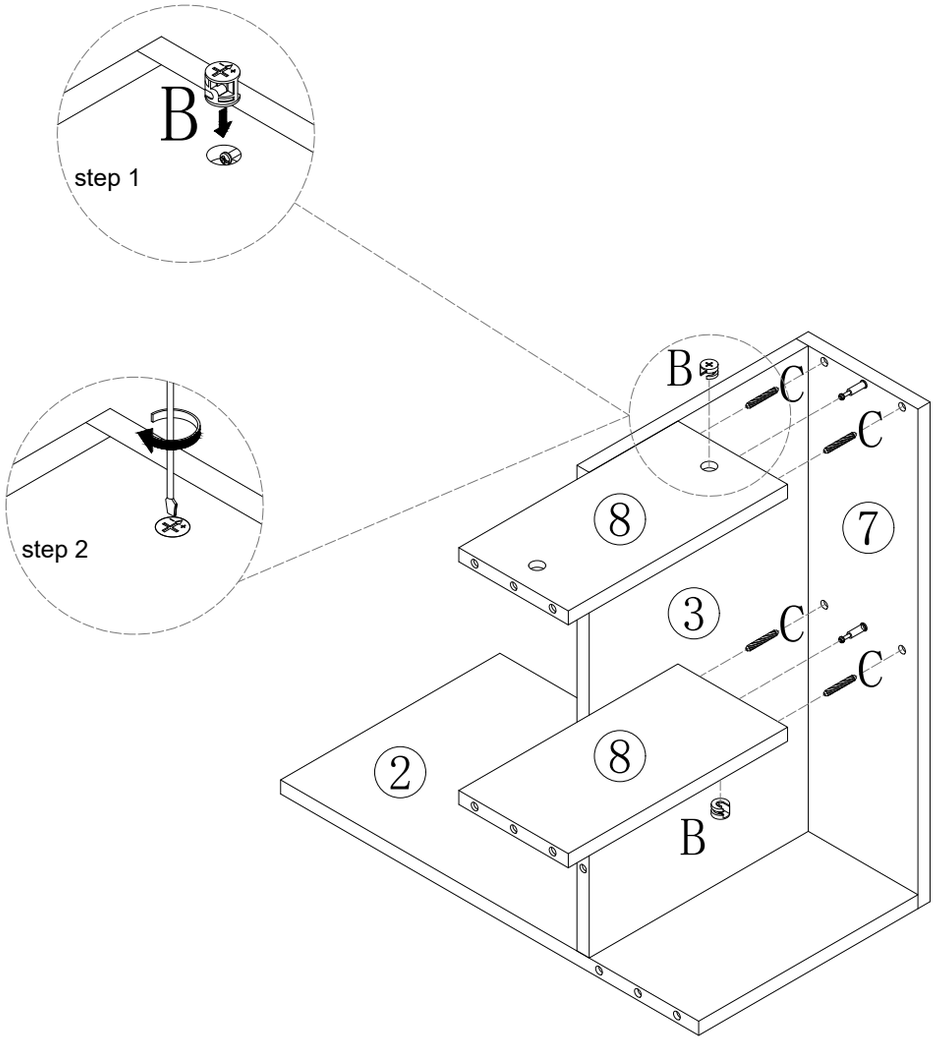



Step 4


B * 3	C * 3
	
Ø15 x 12mm	Ø8 x 30mm

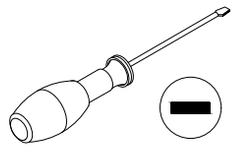

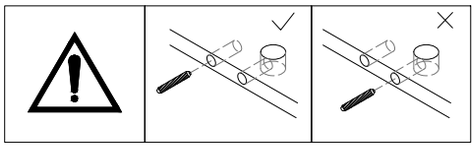

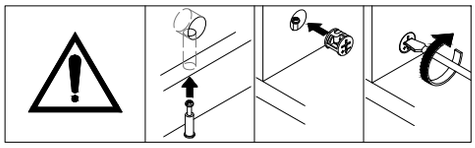


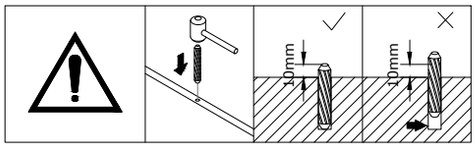


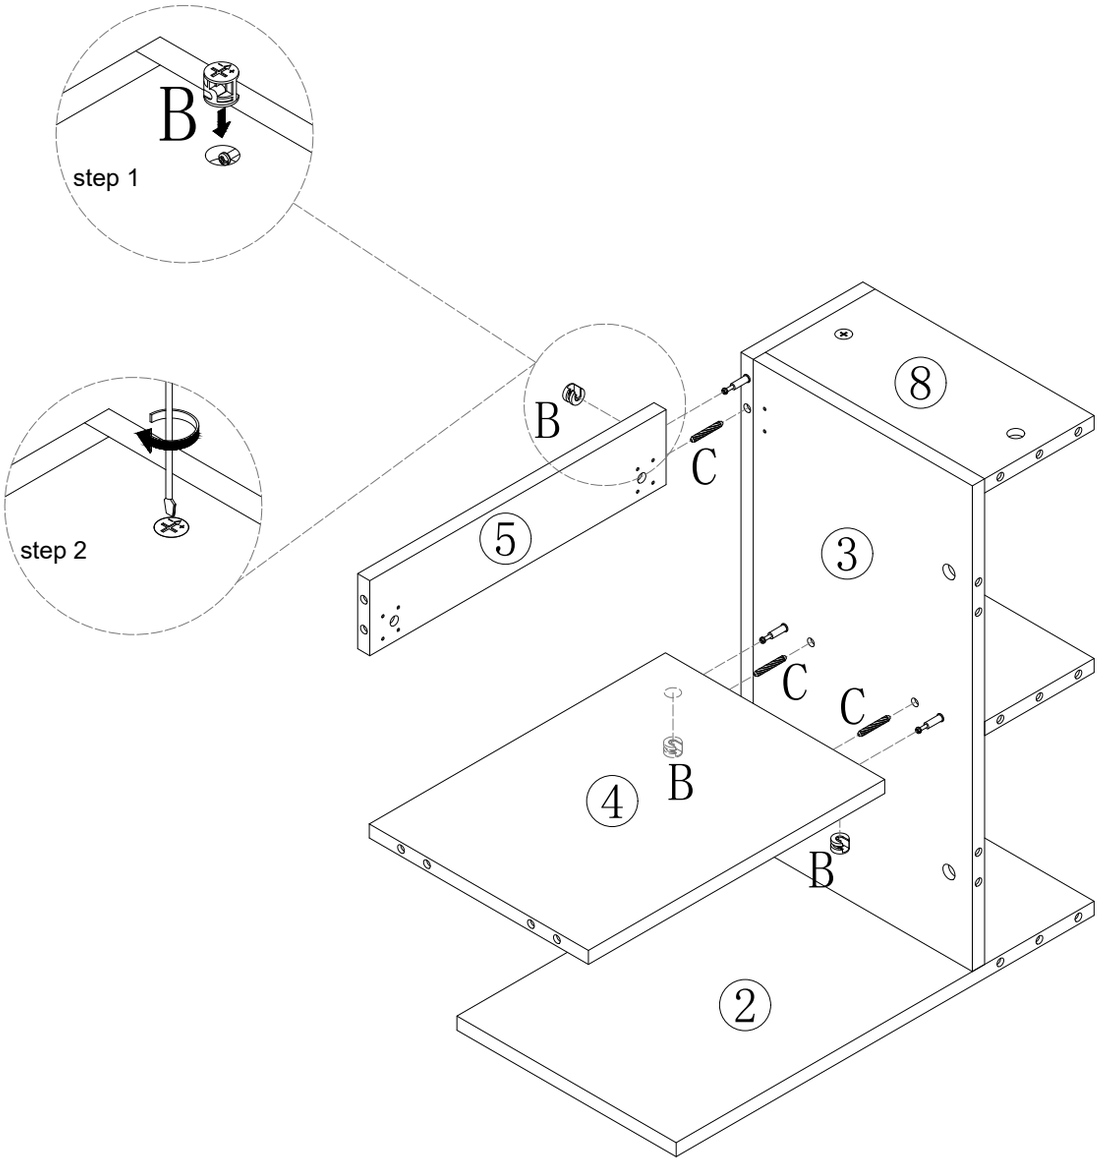



Step 5


B * 6	C * 7
	
Ø15 x 12mm	Ø8 x 30mm

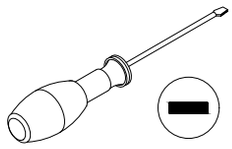

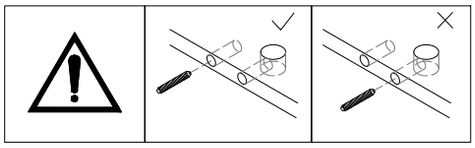

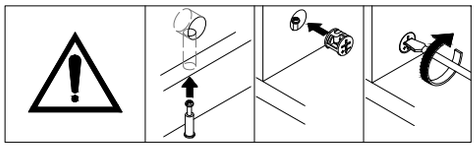


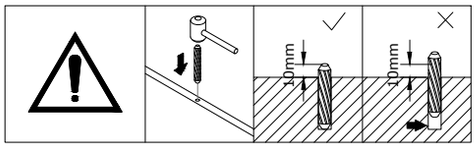


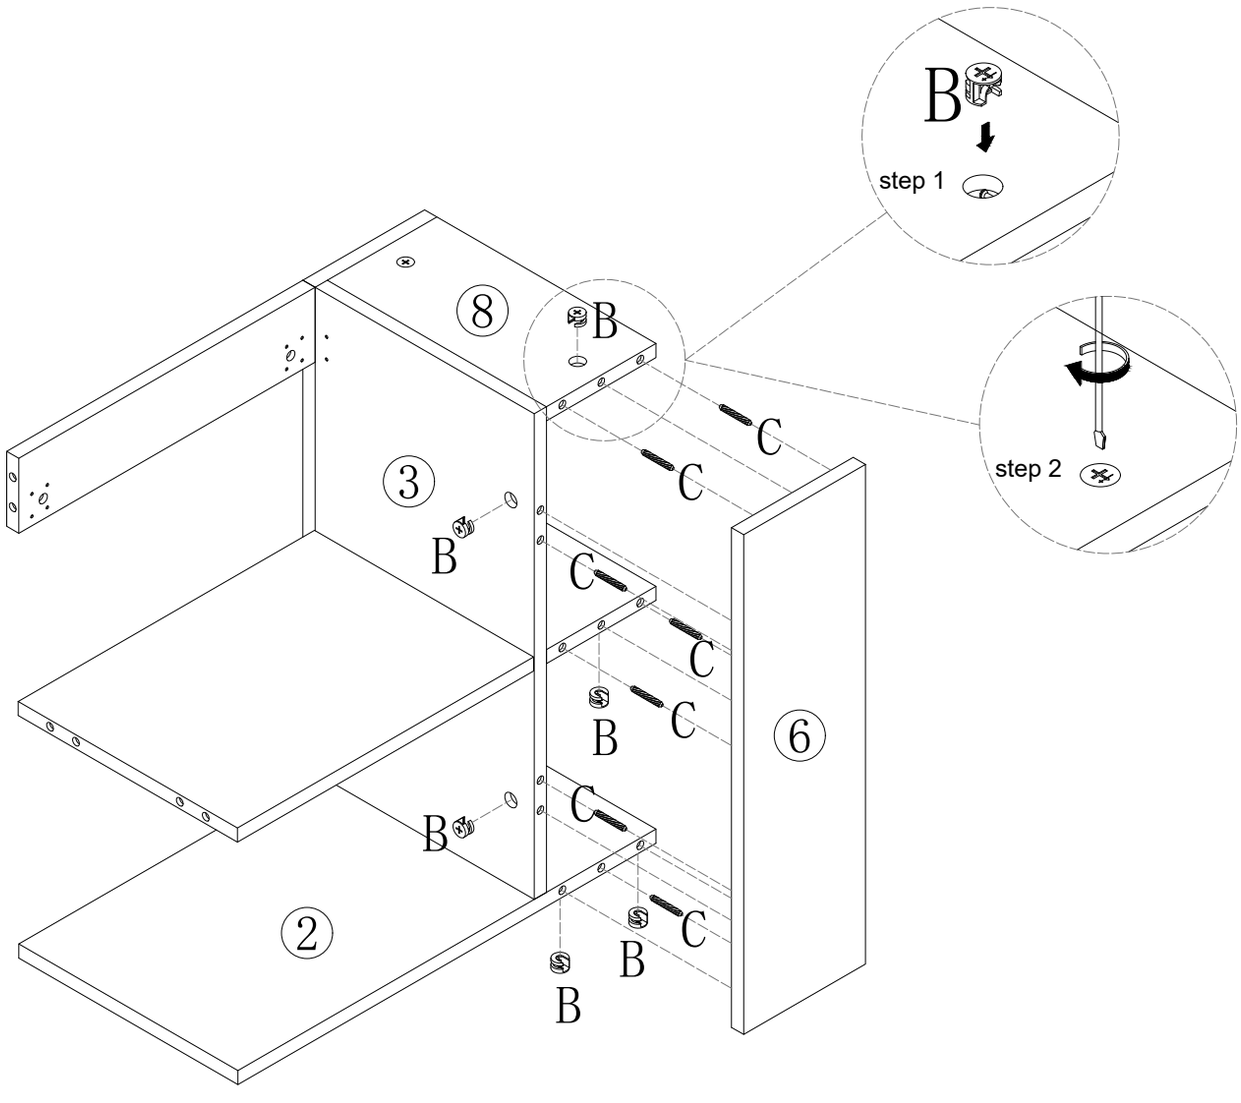



Step 6


B * 5	C * 5
	
Ø15 x 12mm	Ø8 x 30mm

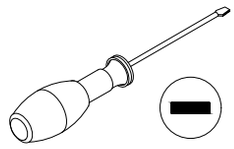


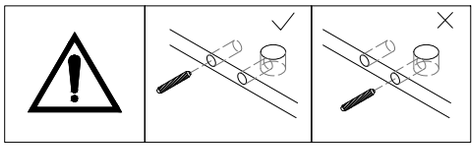

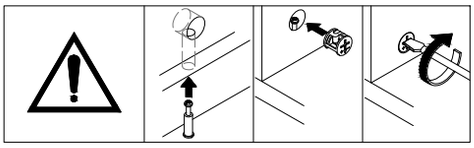

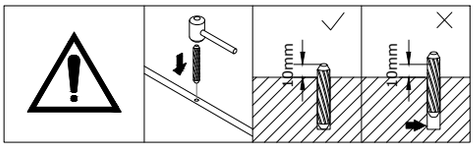


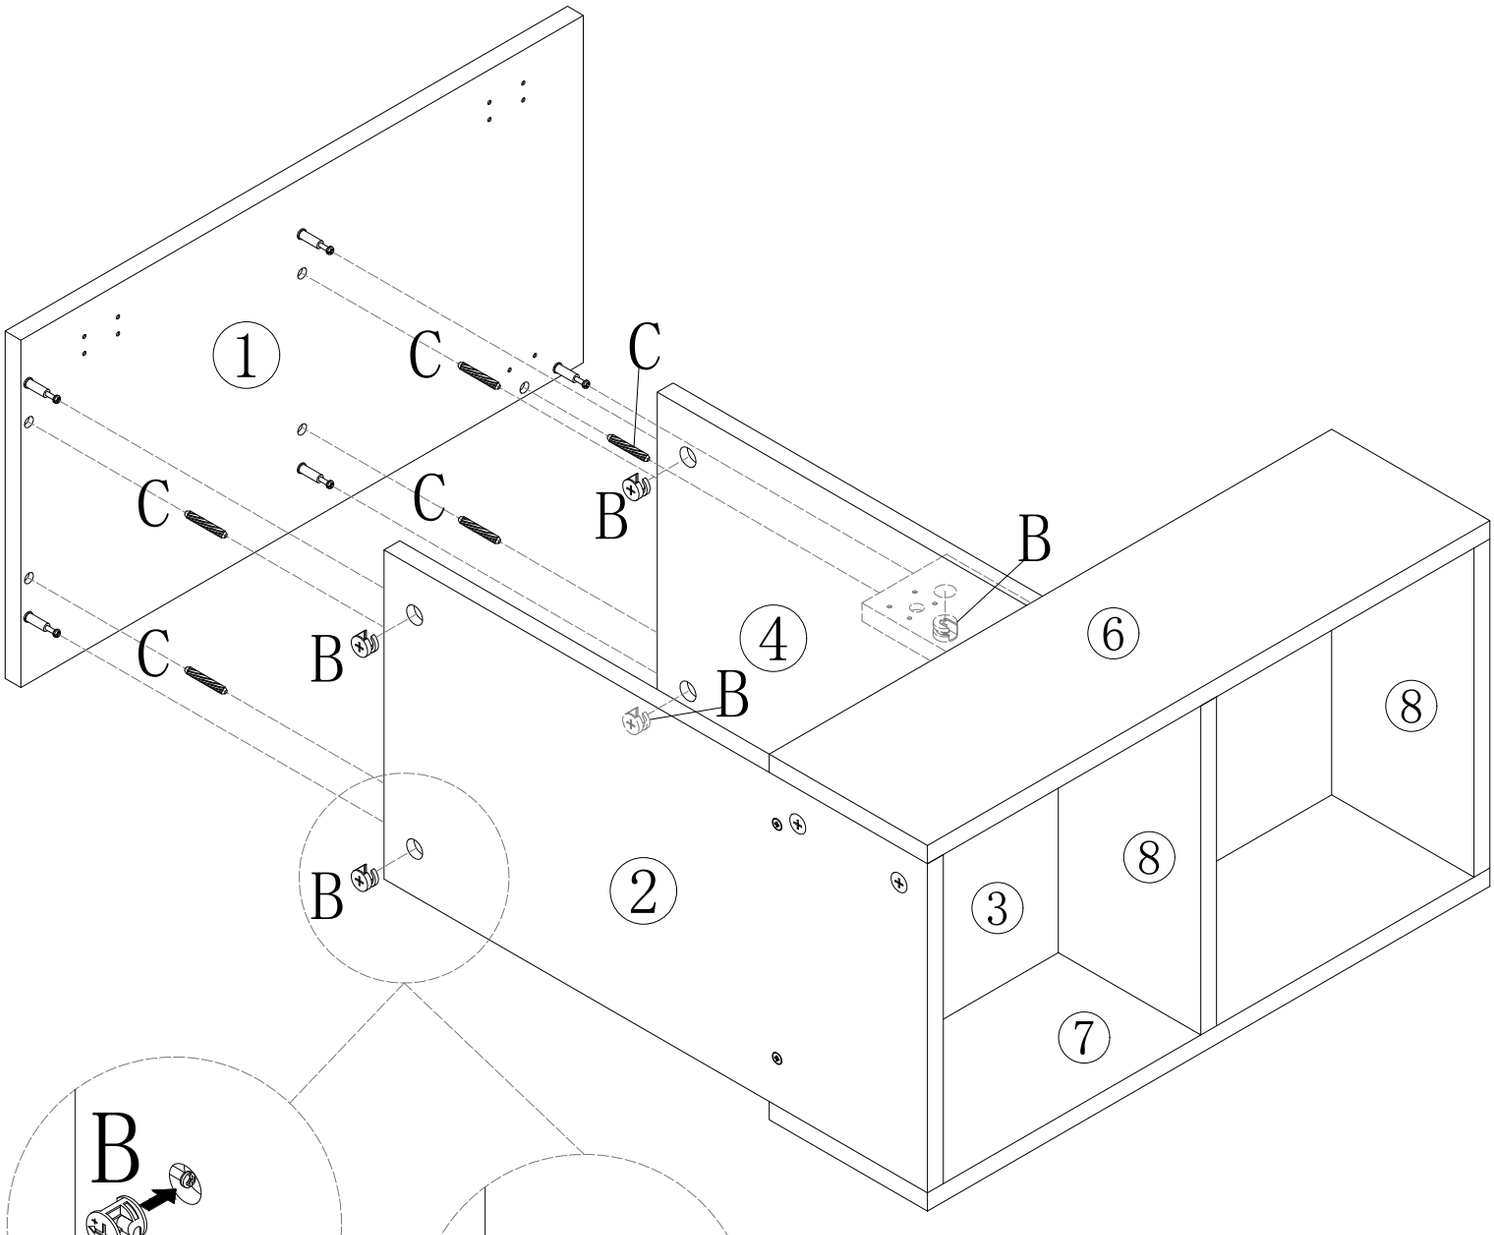


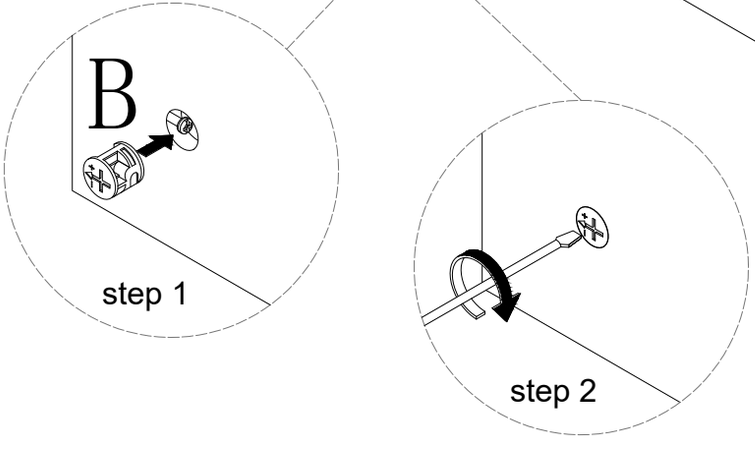



Step 7

D * 12	I * 2
 M4 x 14mm	

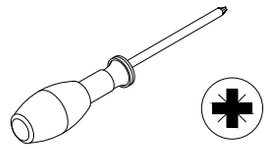


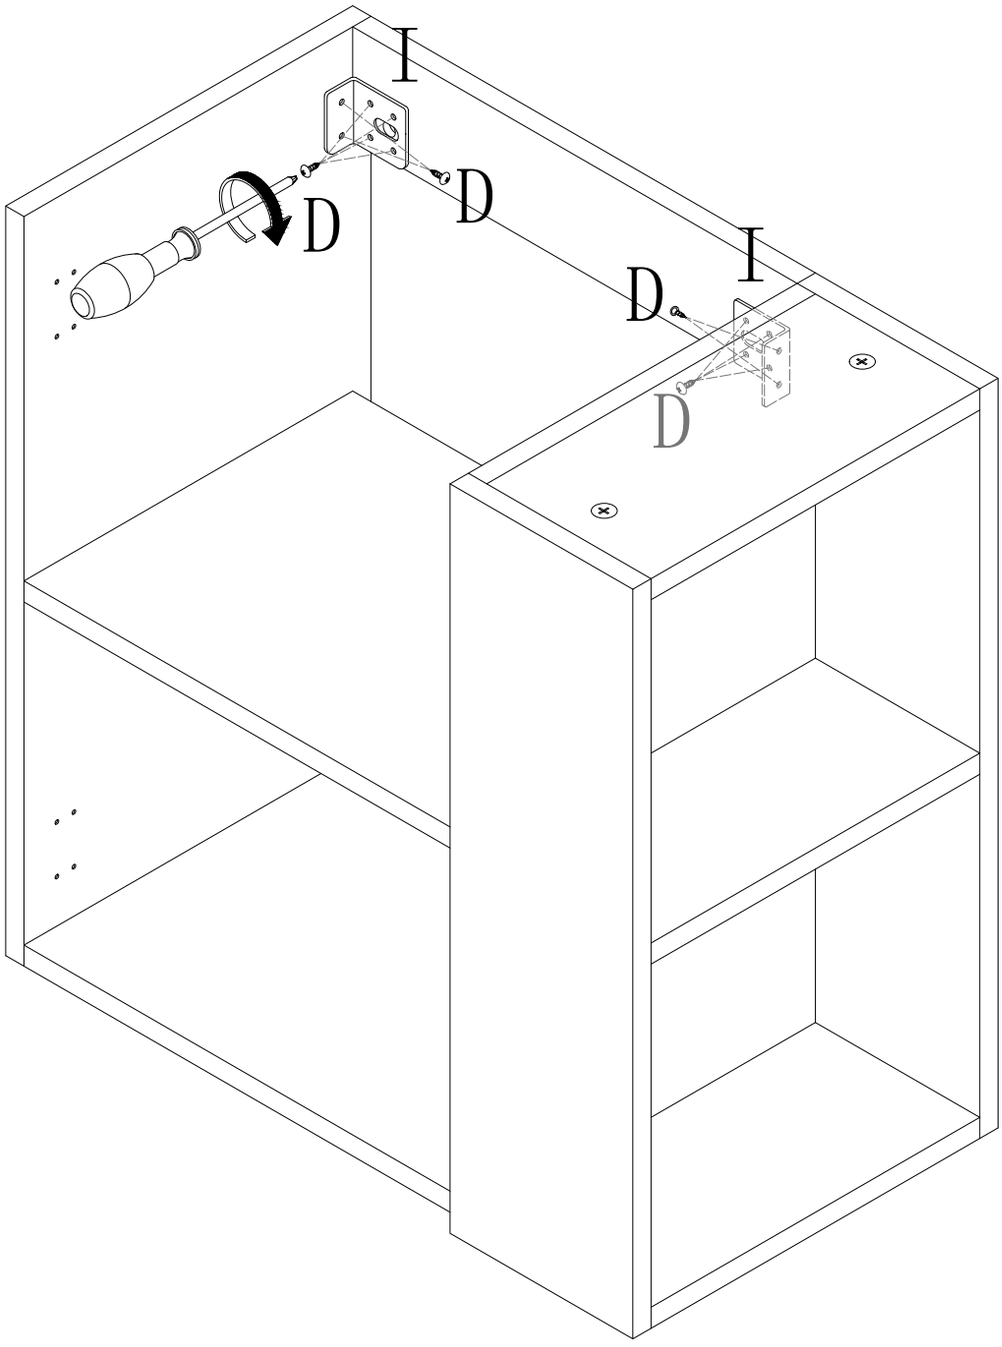

Step 8


Wall

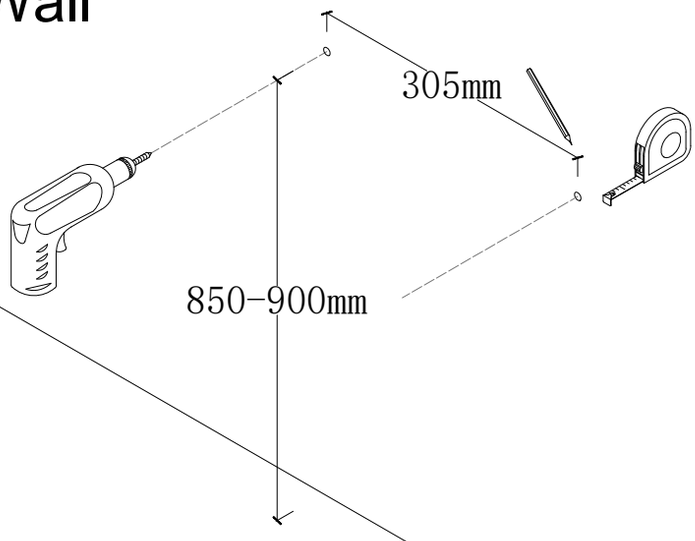


Please mark the location on
the wall with a pencil, then punch the hole
Recommended height，85-90cm


Setp 9

K * 2

Ø8 x 40mm

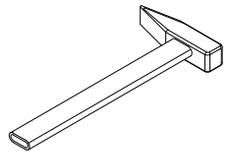



Wall

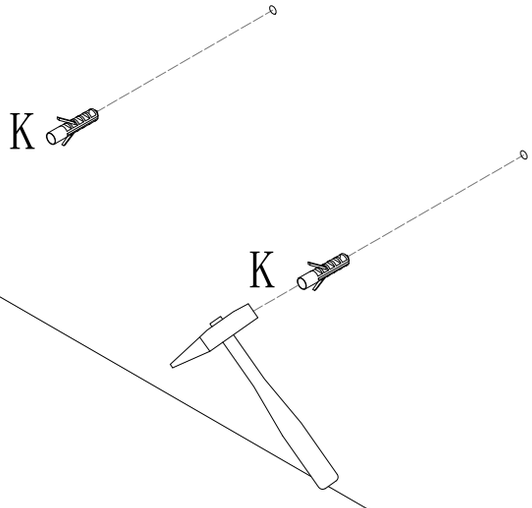


Step 10

L * 2	M * 2
	
Ø16	M6 x 60mm

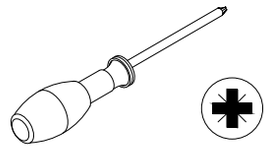

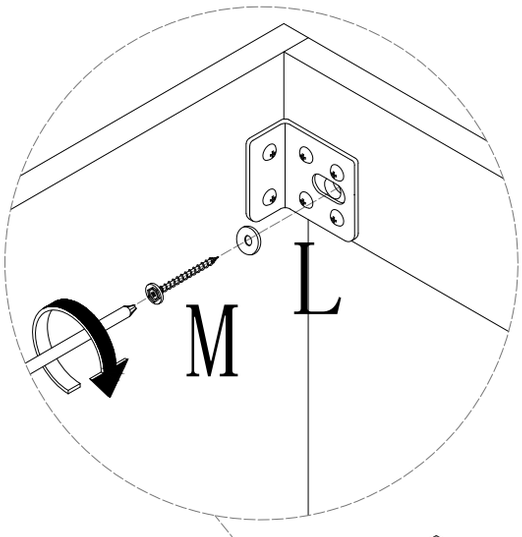


Wall

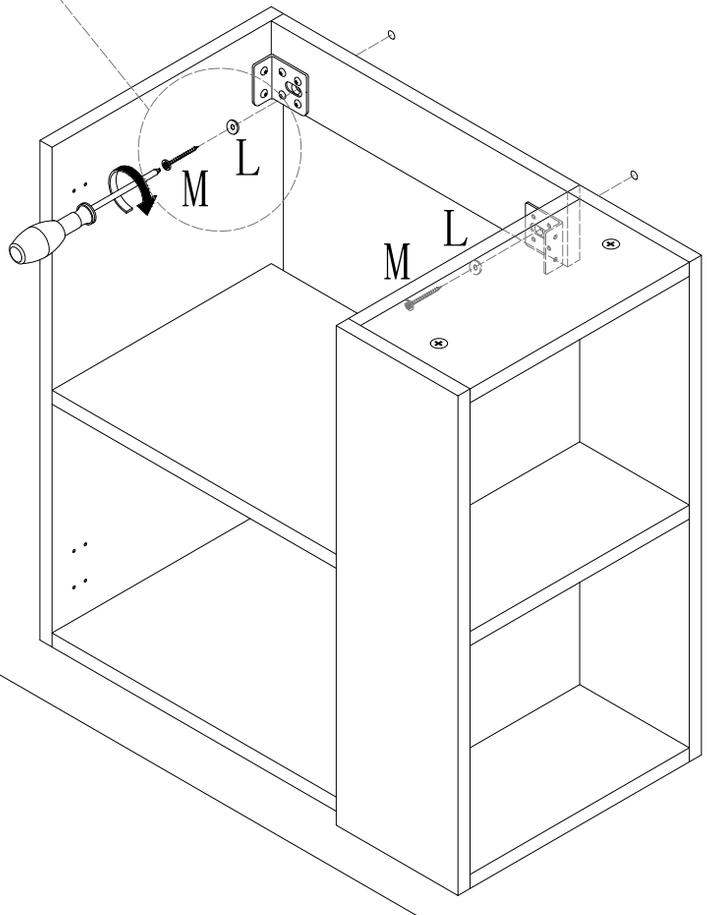


Step 11


E * 8	G * 1	H * 1
		
M4 x 14mm	M4 x 20mm	

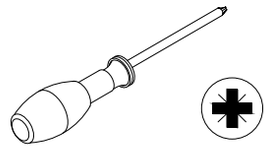


Wall

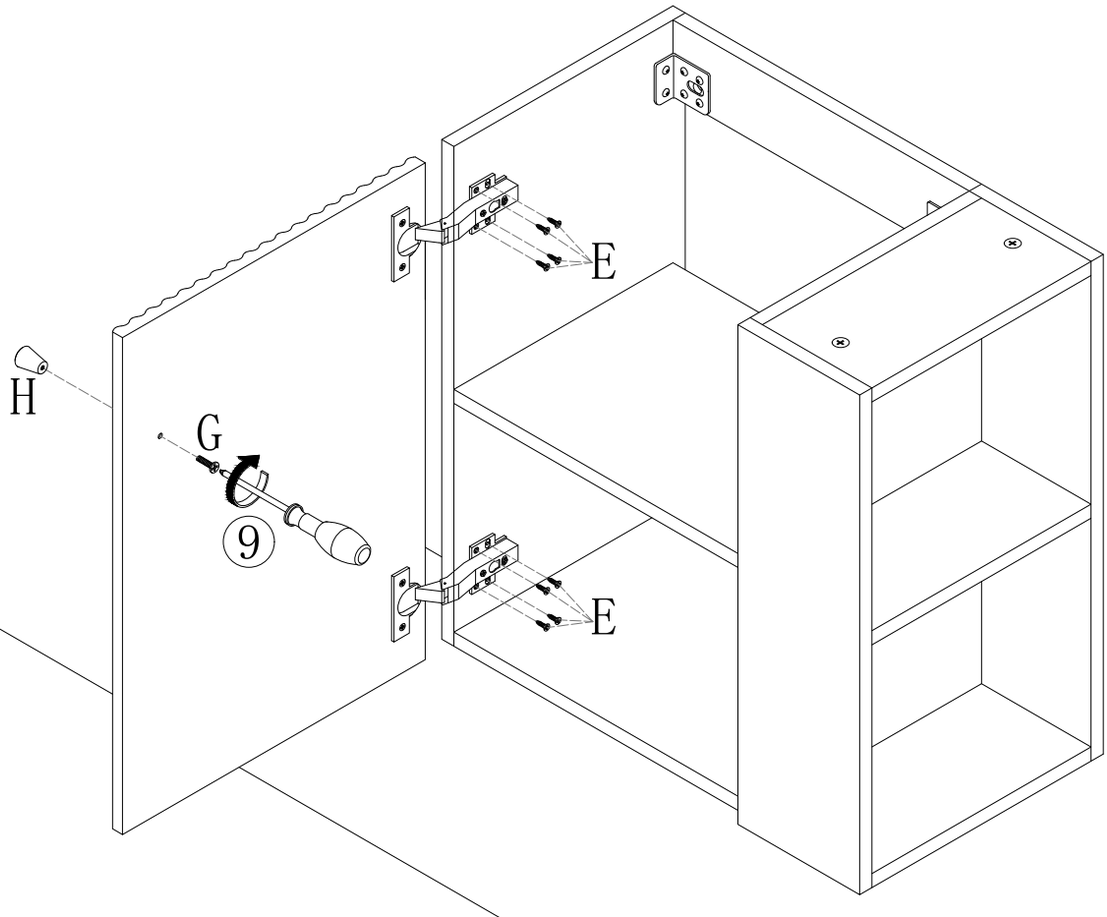


Step 12

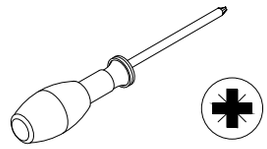

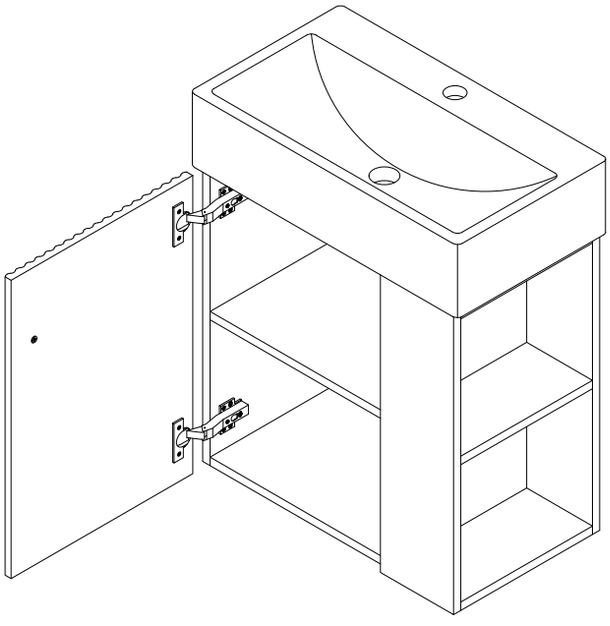


Adjust door following the direction.


Adjust the door up and down to match the cabinet.

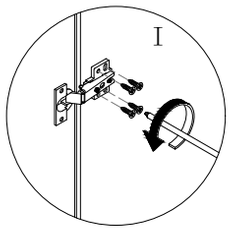

I:loosen the screw.

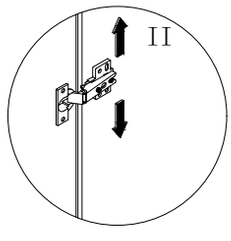


II:Adjust the upper and lower position.

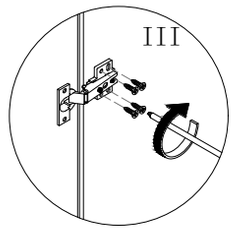


II:tighten the screw.

When the door position is not standard,please adjust the door according to the right picture.

Adjust the door left and right to match the cabinet for suitable crack of the door

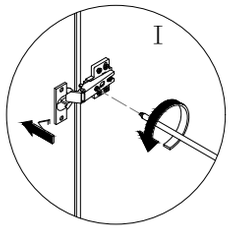


I:loosen the screw to keep hinge apply force toward the direction of arrow.

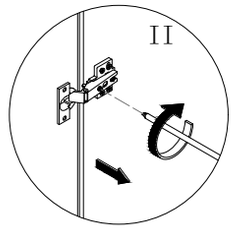


II:tighten the screw to keep hinge apply force toward the direction of arrow.

Please place the cabinet on the flat floor before adjustment.

Adjust the door backwards and forwards to match the cabinet.

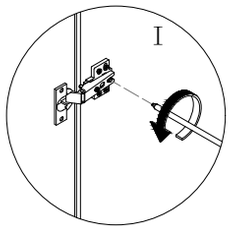


I:loosen the screw.

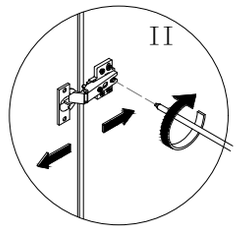


II:Adjust the distance between front and back.

Step 13


Wall

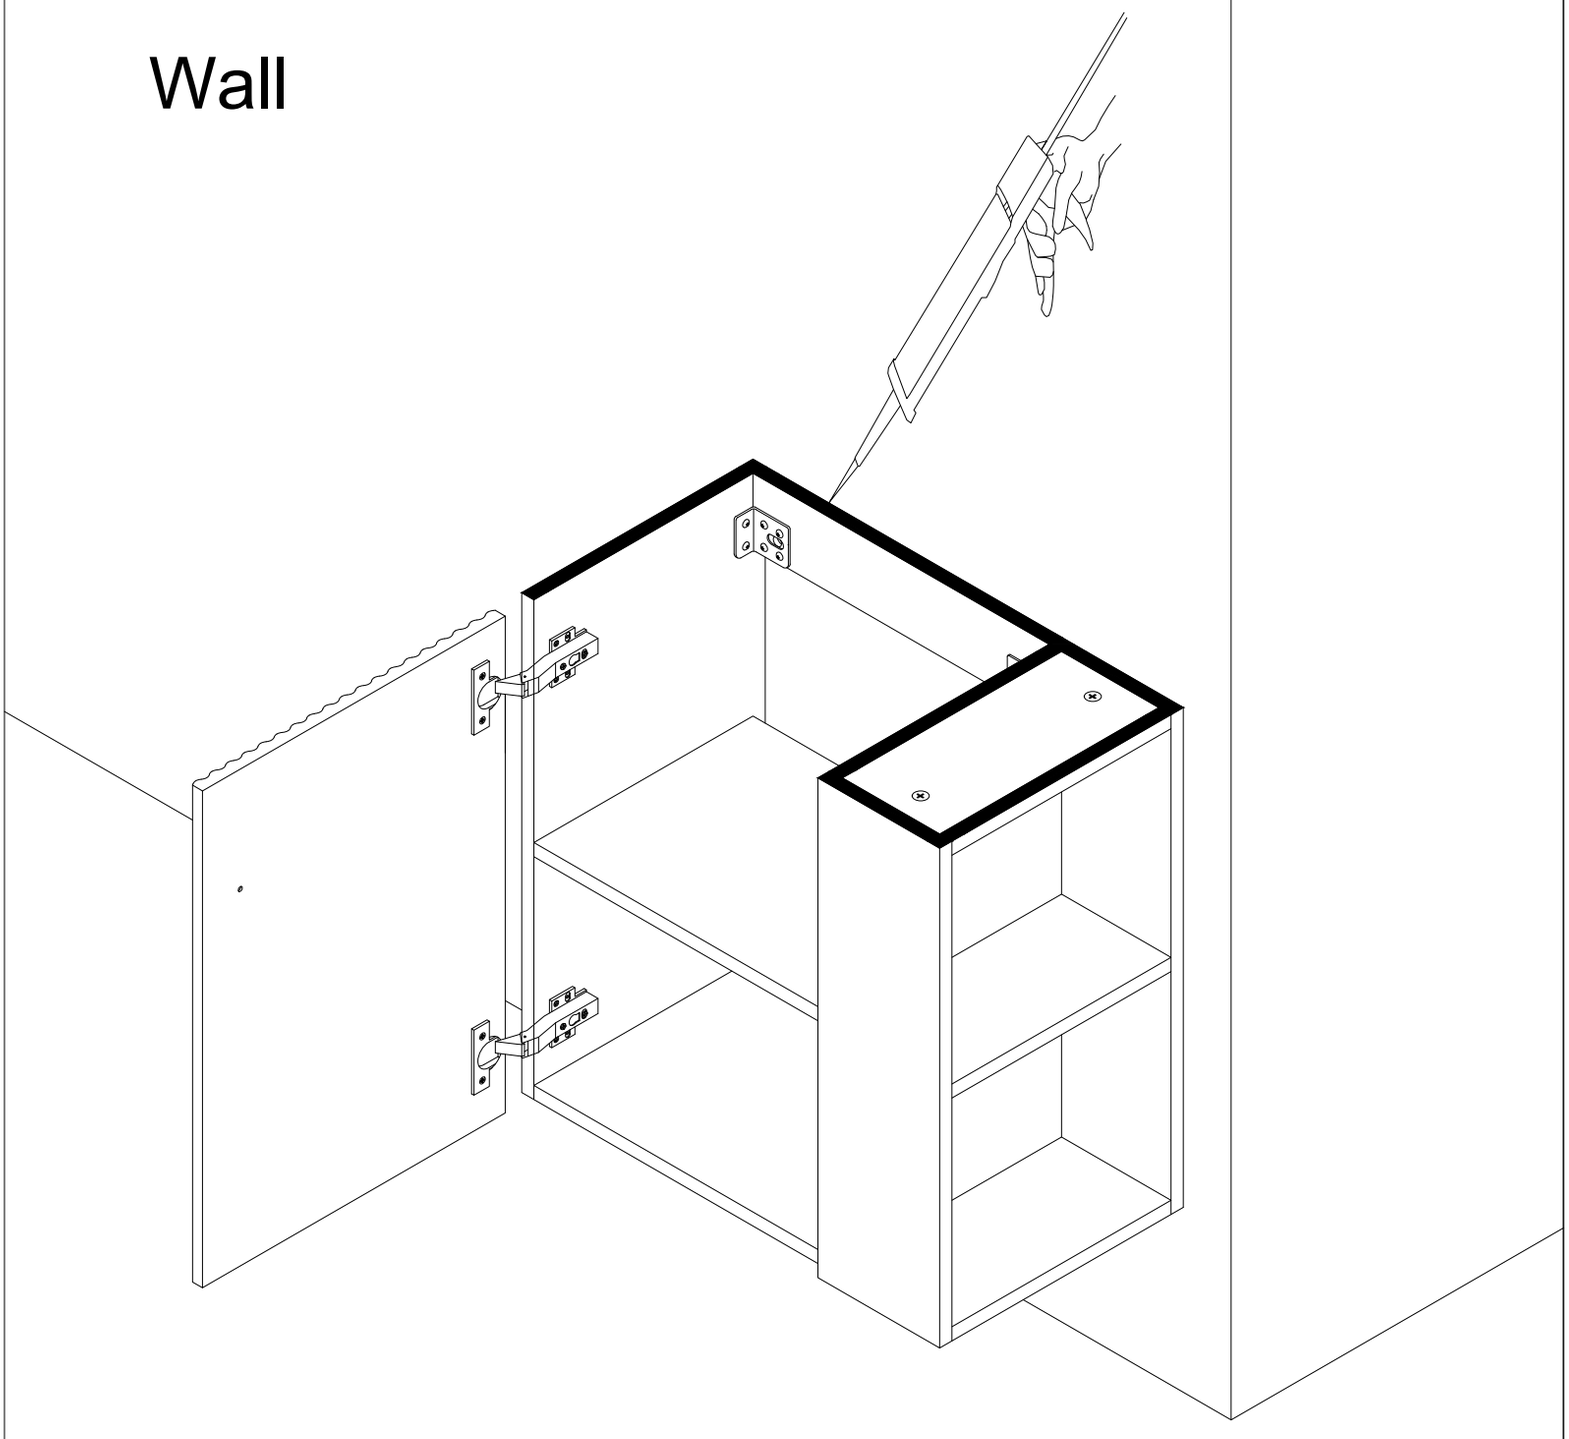

Step 14

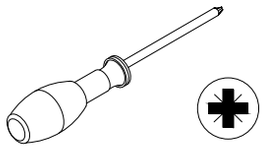

Wall

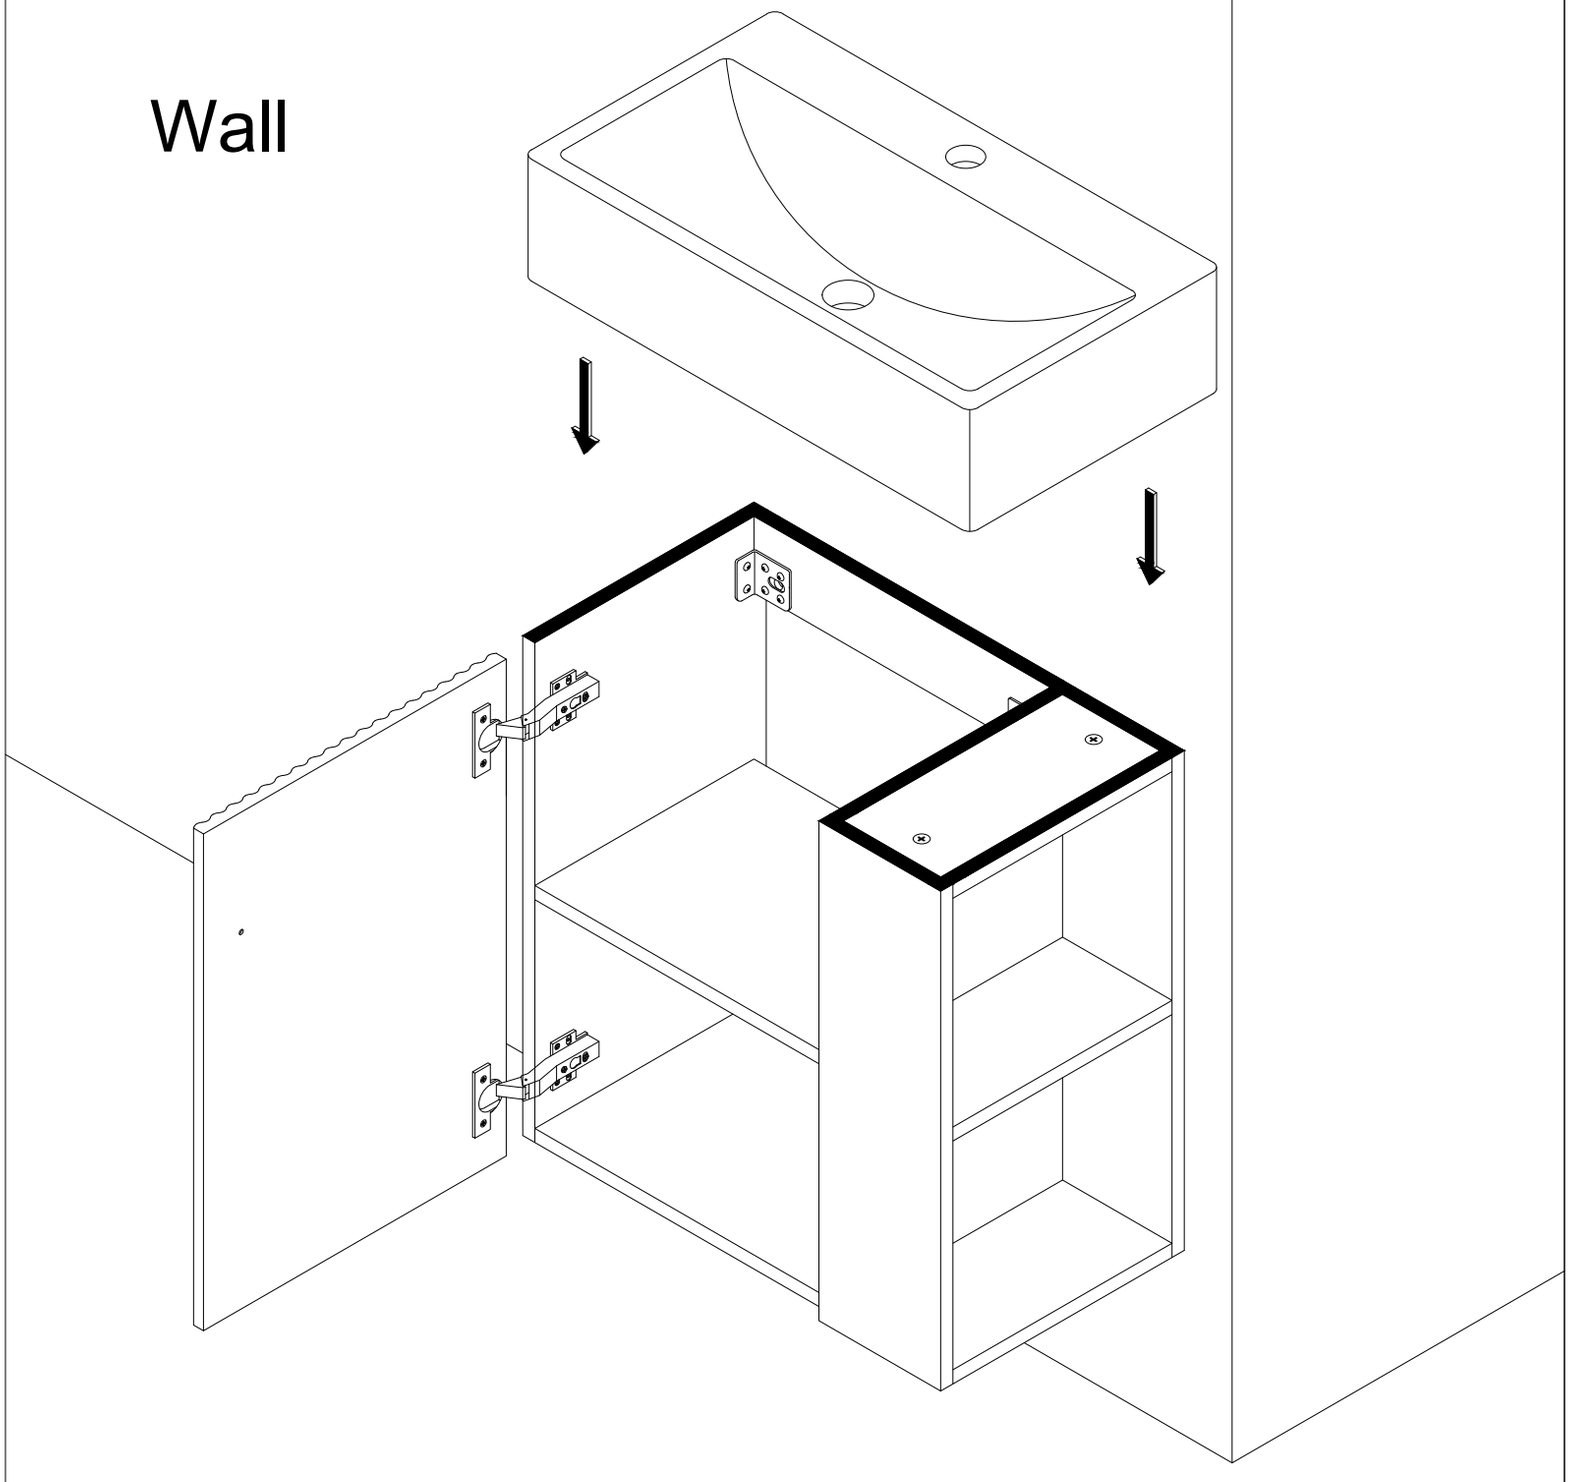

Step 15

