


Assembly Instructions


A	B	C	D	E	F	G	
1PCS	1PCS	1PCS	1PCS	1PCS	1PCS	1PCS	
H	I	J	K	L	N	M	
1PCS	1PCS	1PCS	1PCS	1PCS	2PCS	1PCS	
O	P	M685	M665	M645	M630	Z	
1PCS	1PCS	M6*85 6PCS	M6*65 8PCS	M6*45 13PCS	M6*30 8PCS	1PCS	1PCS

CAUTION: Pre-assemble all the bolts loosely but do not fully turn the bolts into their holes until all bolts are inserted in their holes.

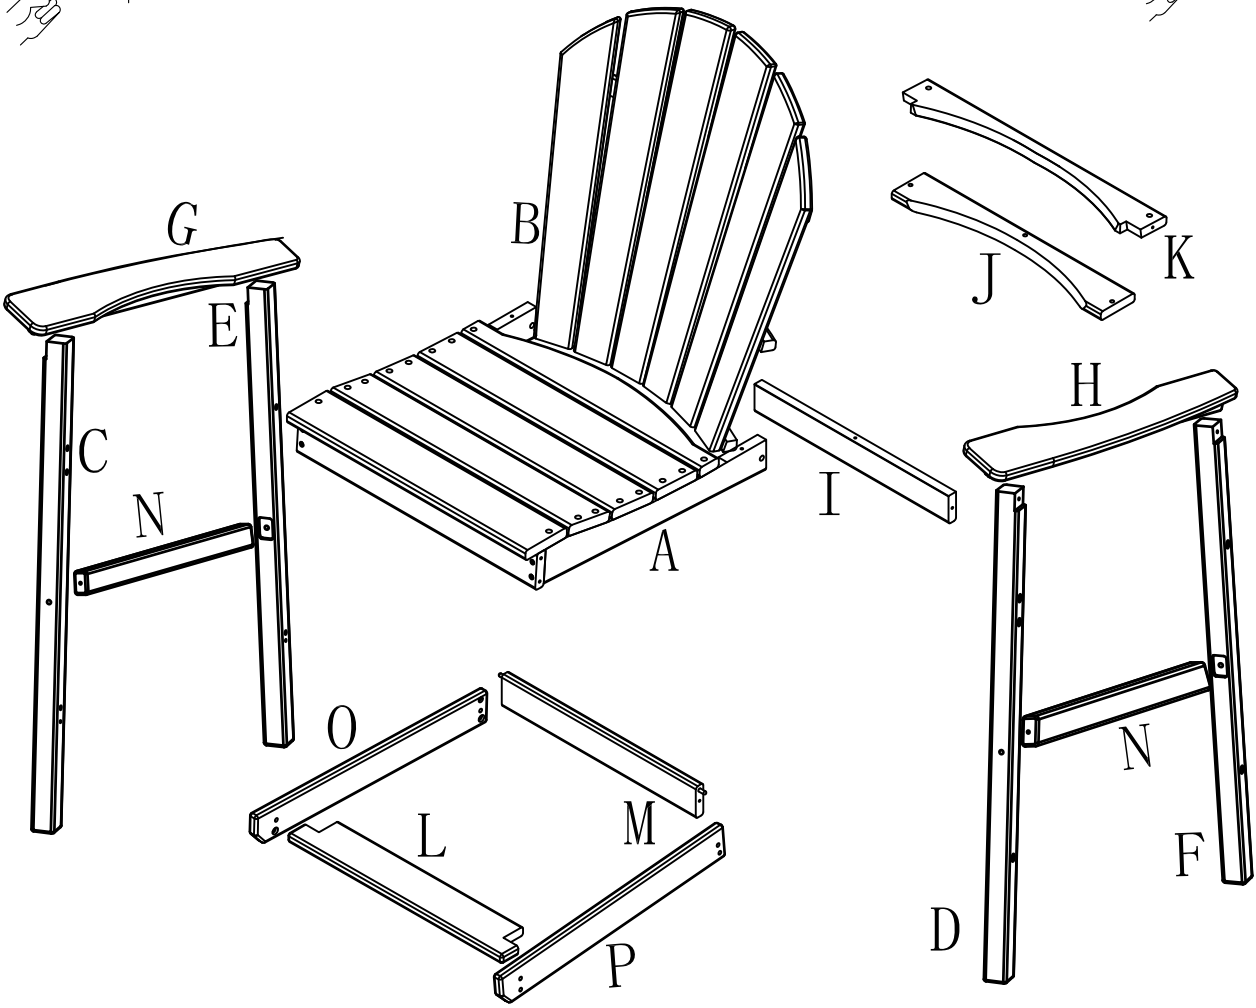


Assembly Instructions

STEP1

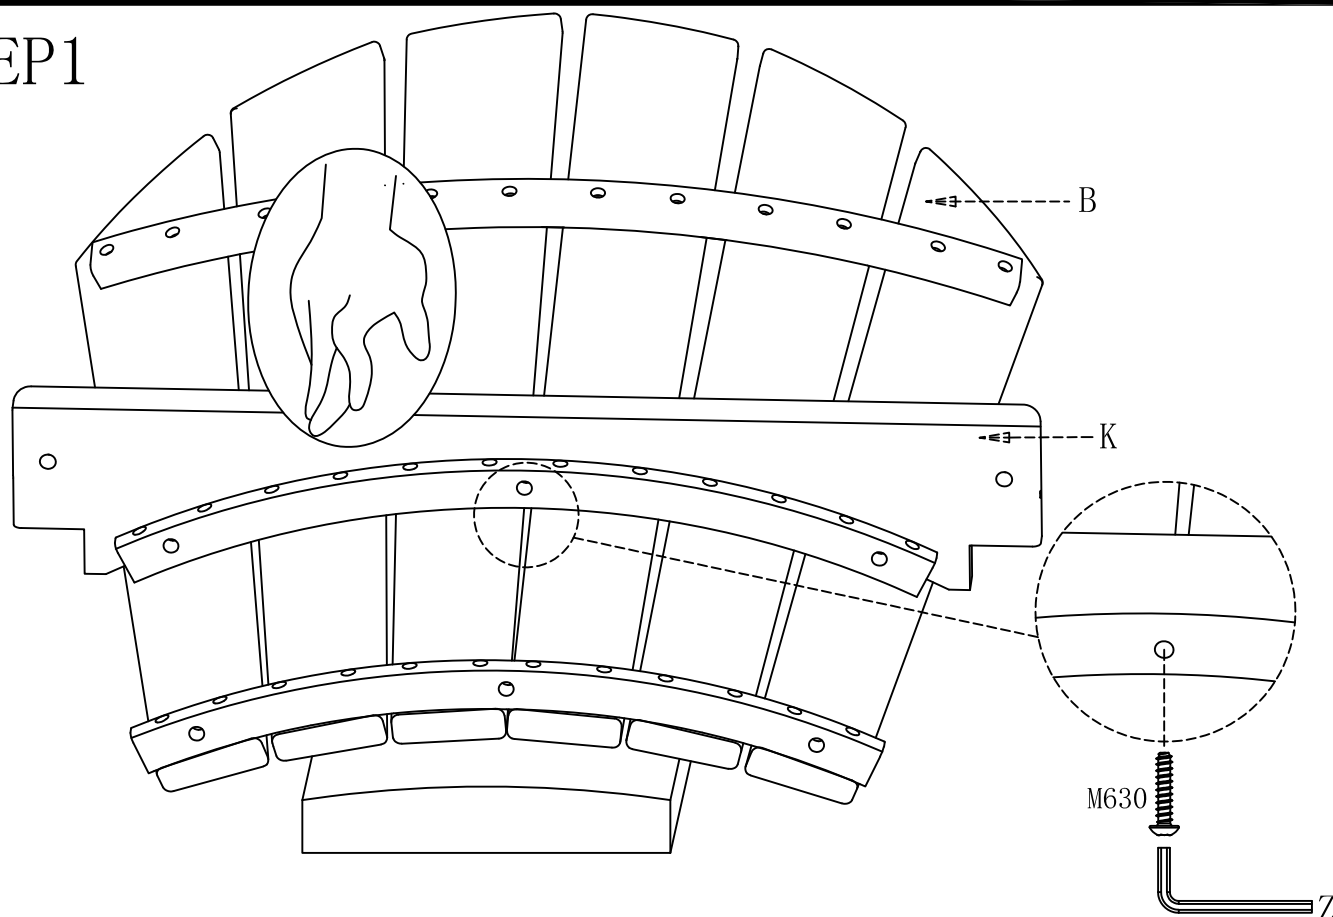


STEP2

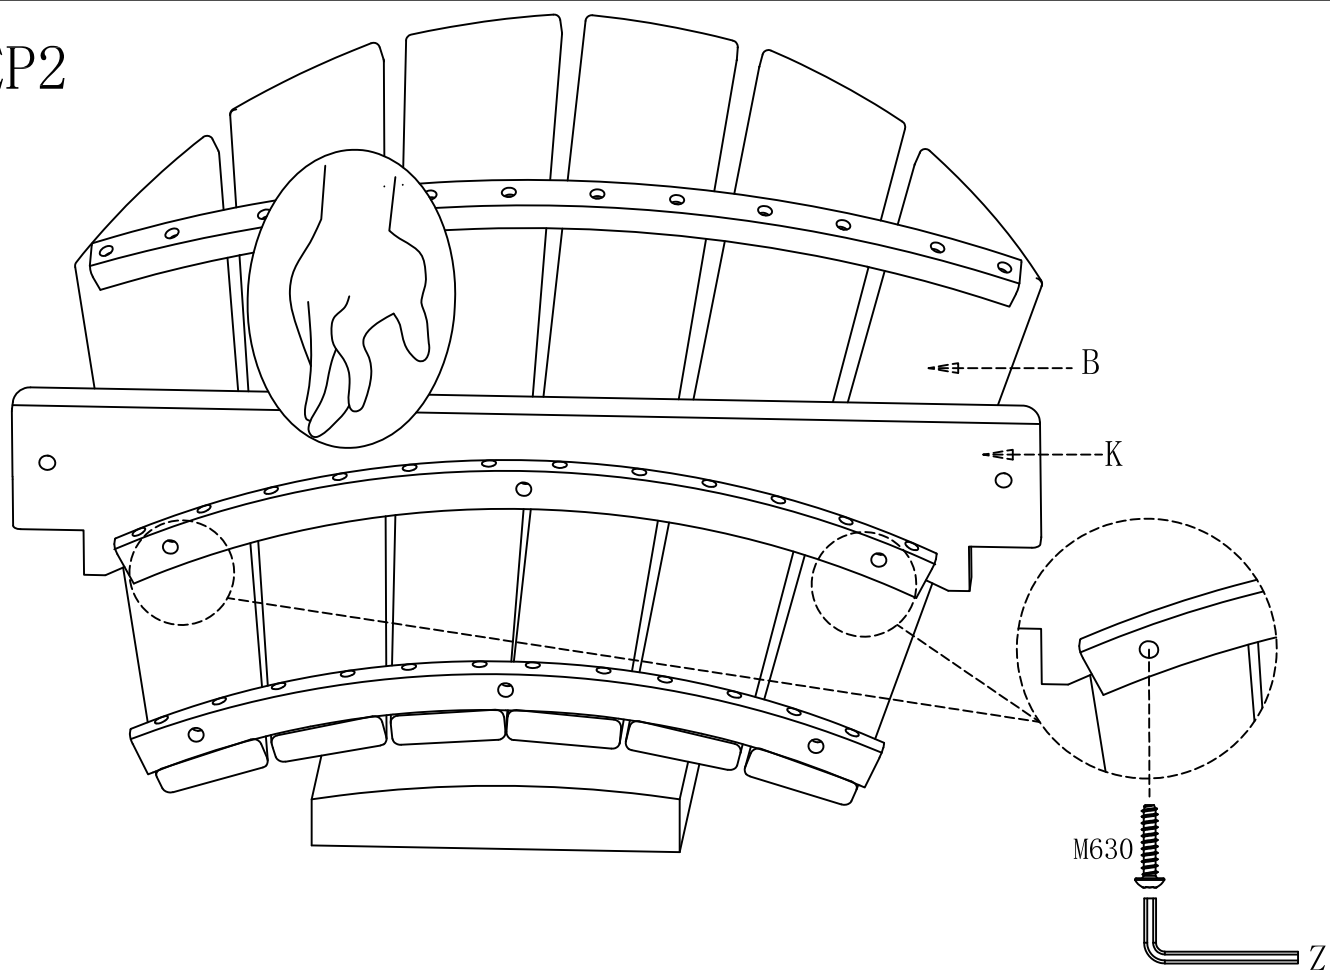


Assembly Instructions

STEP3

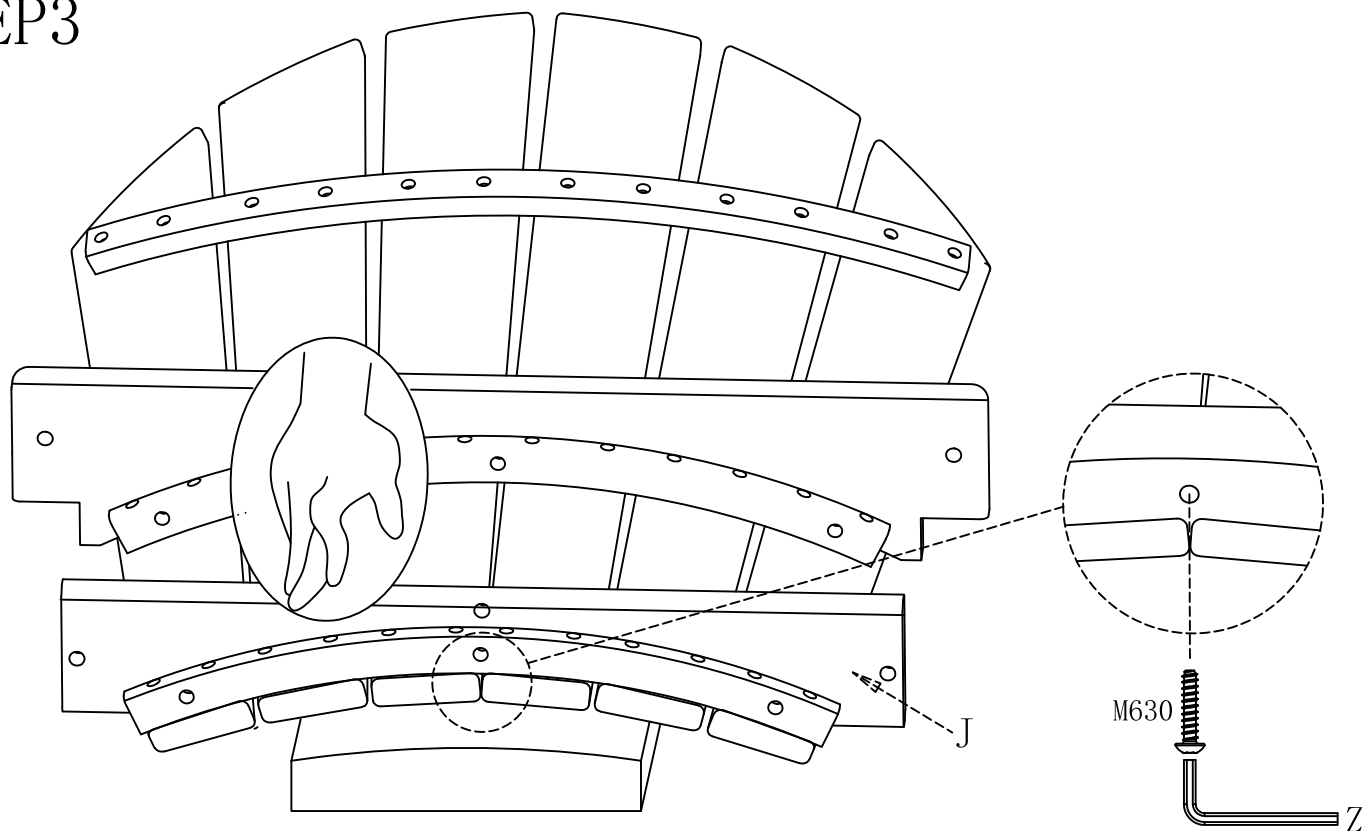


STEP4

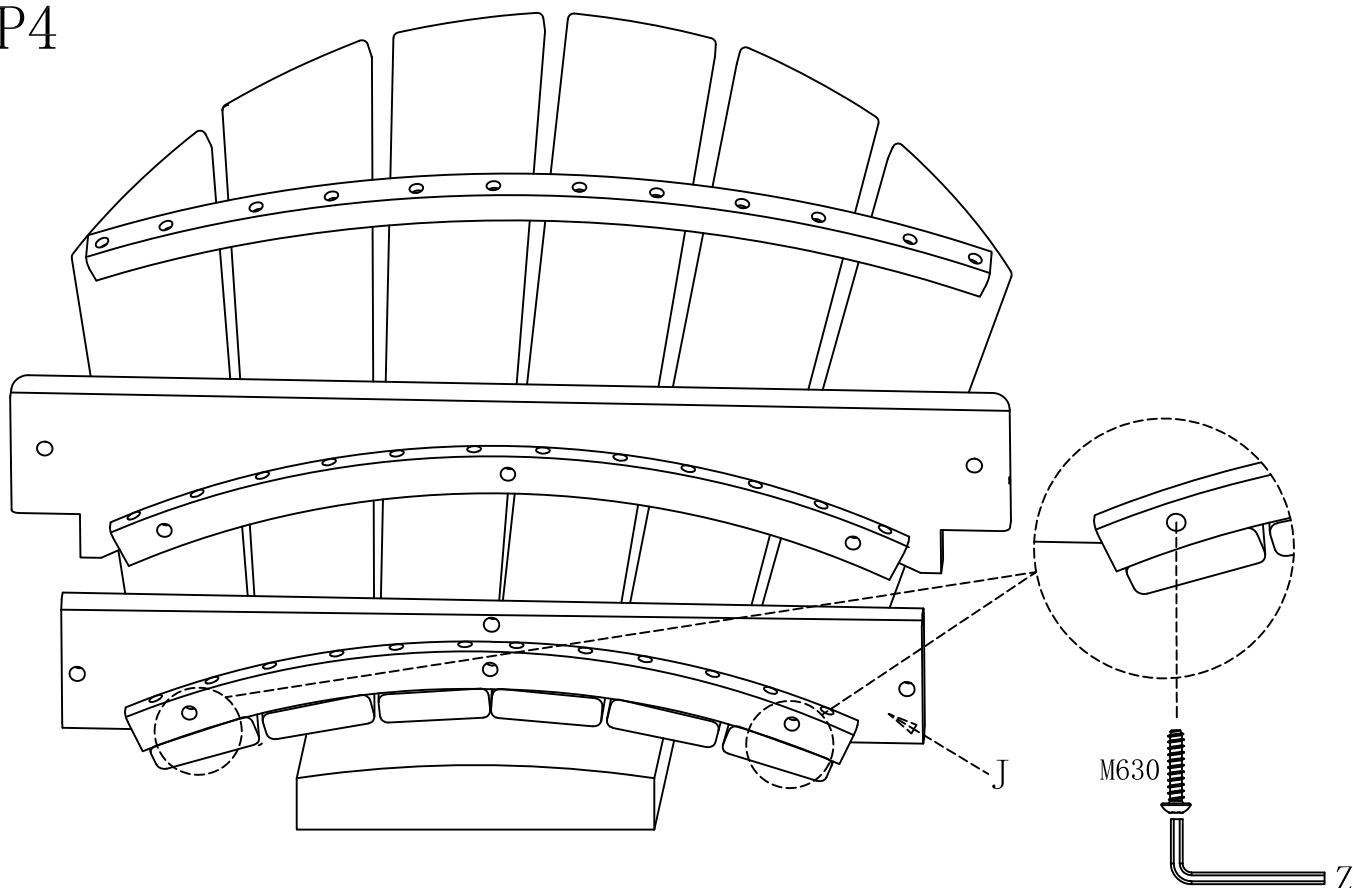


Assembly Instructions

STEP5

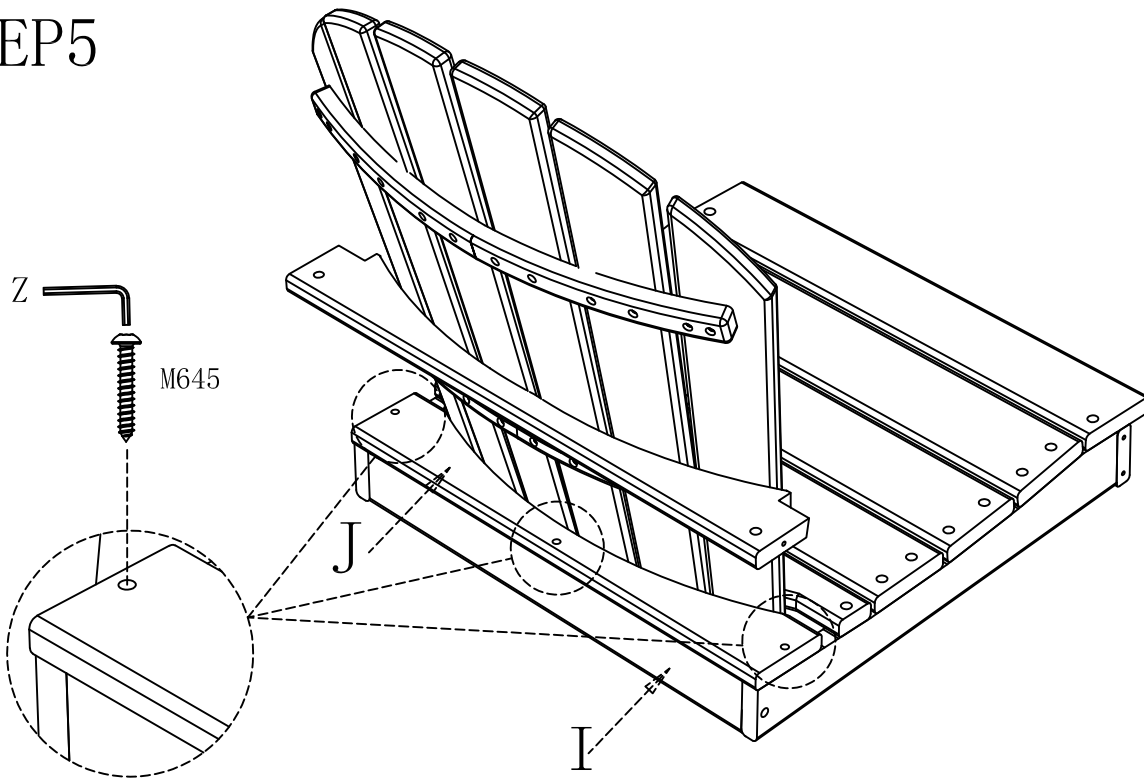


STEP6

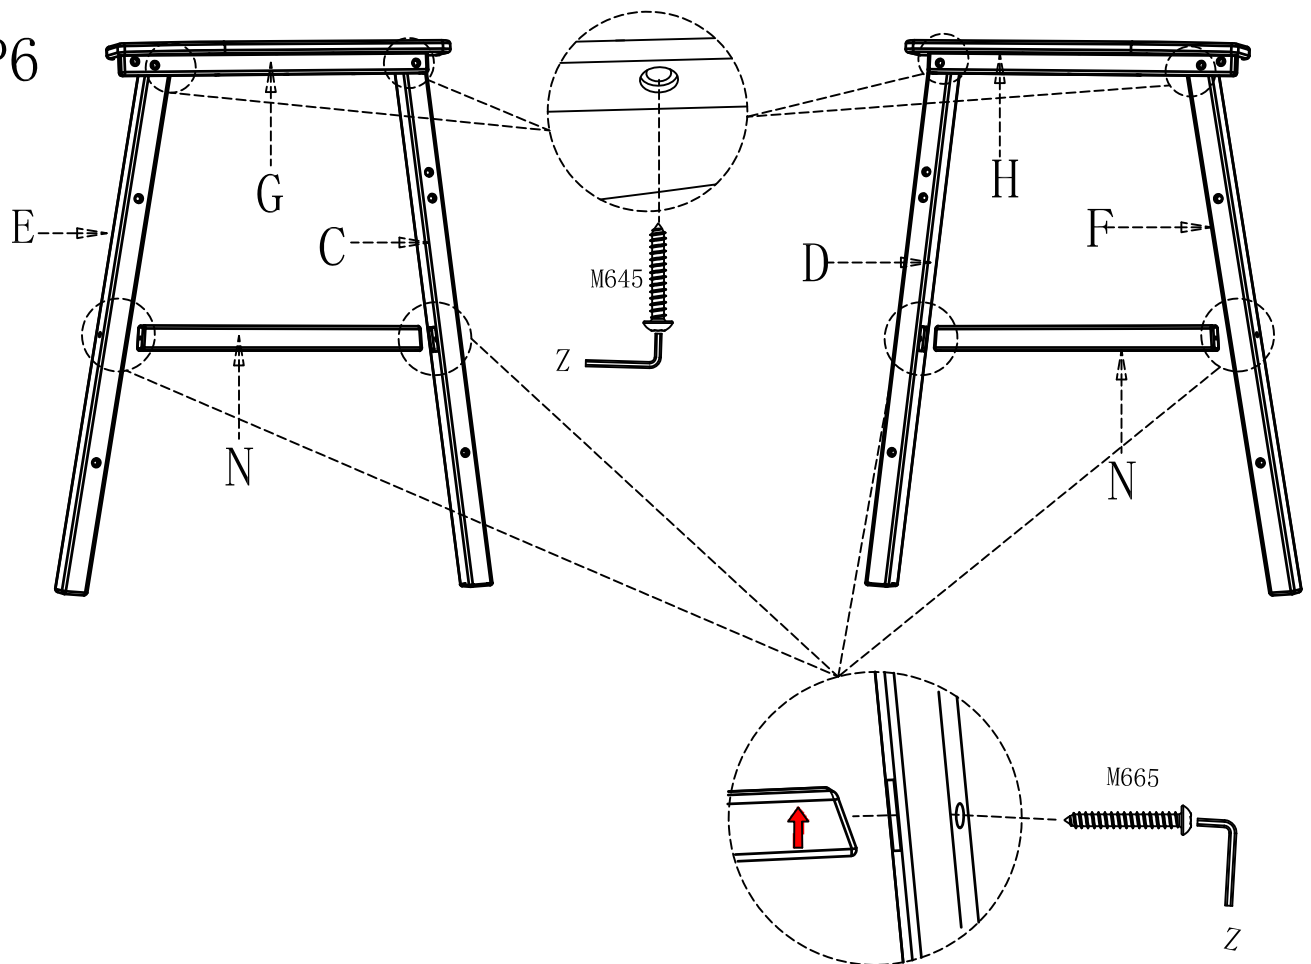


Assembly Instructions

STEP7

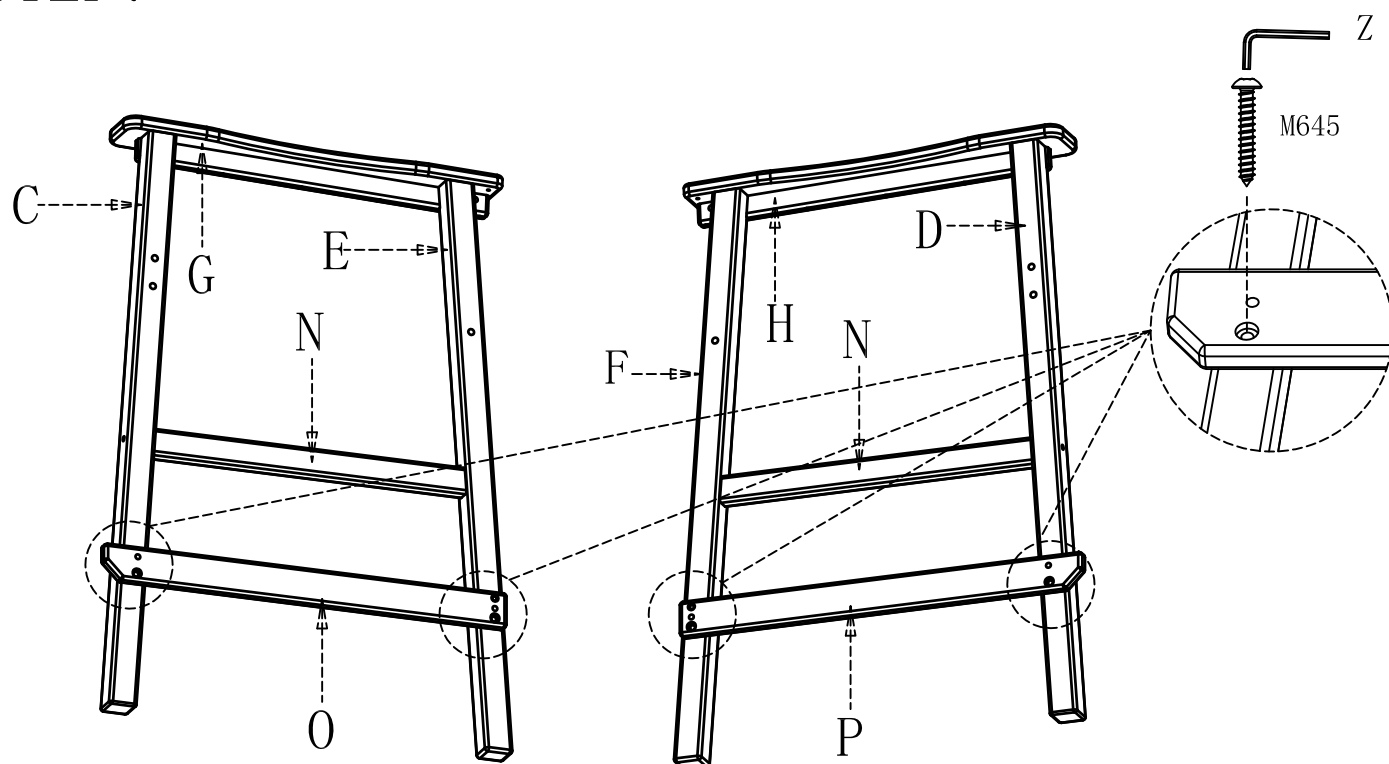


STEP8

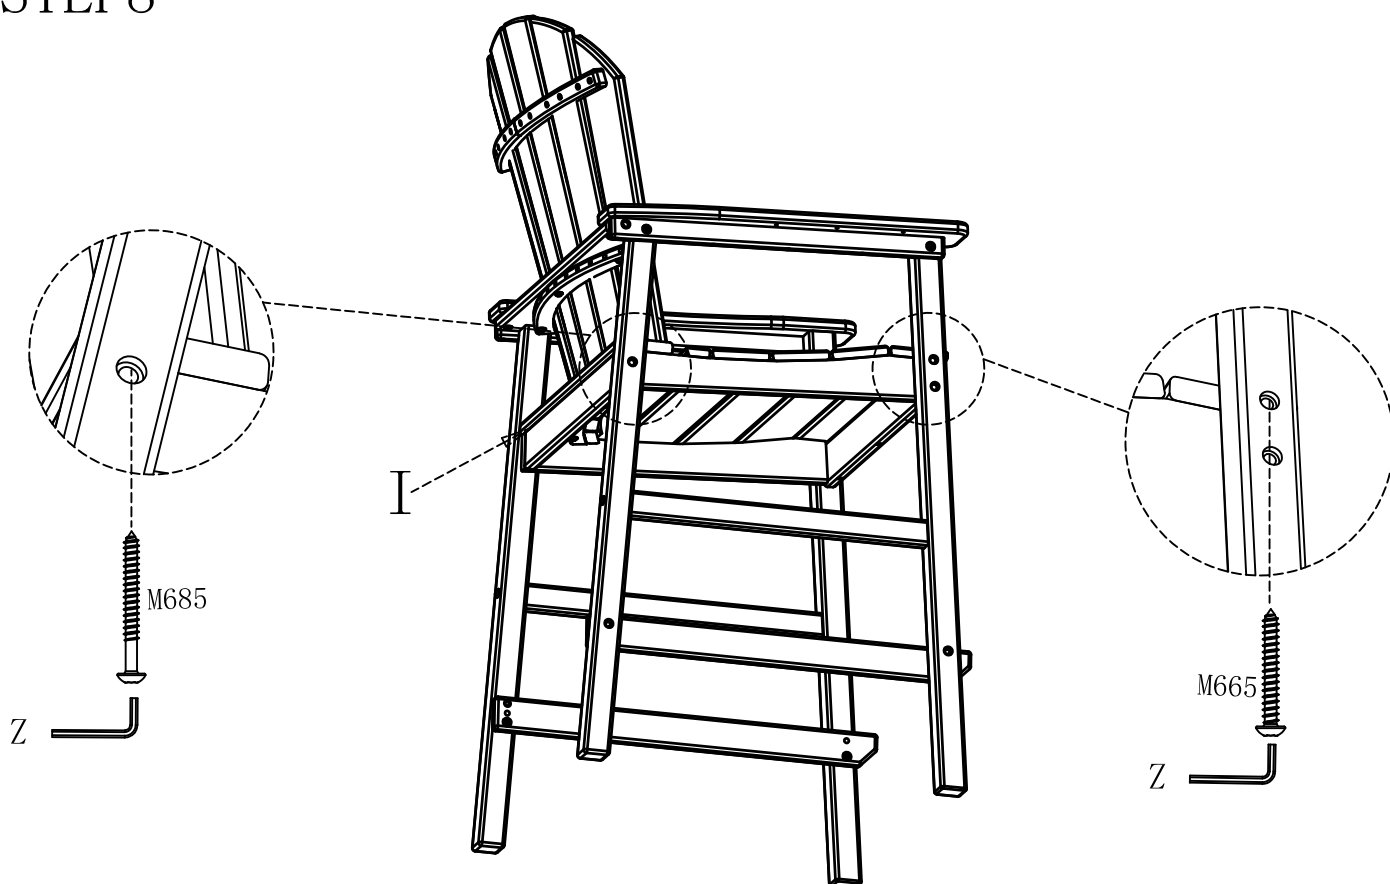


Assembly Instructions

STEP9

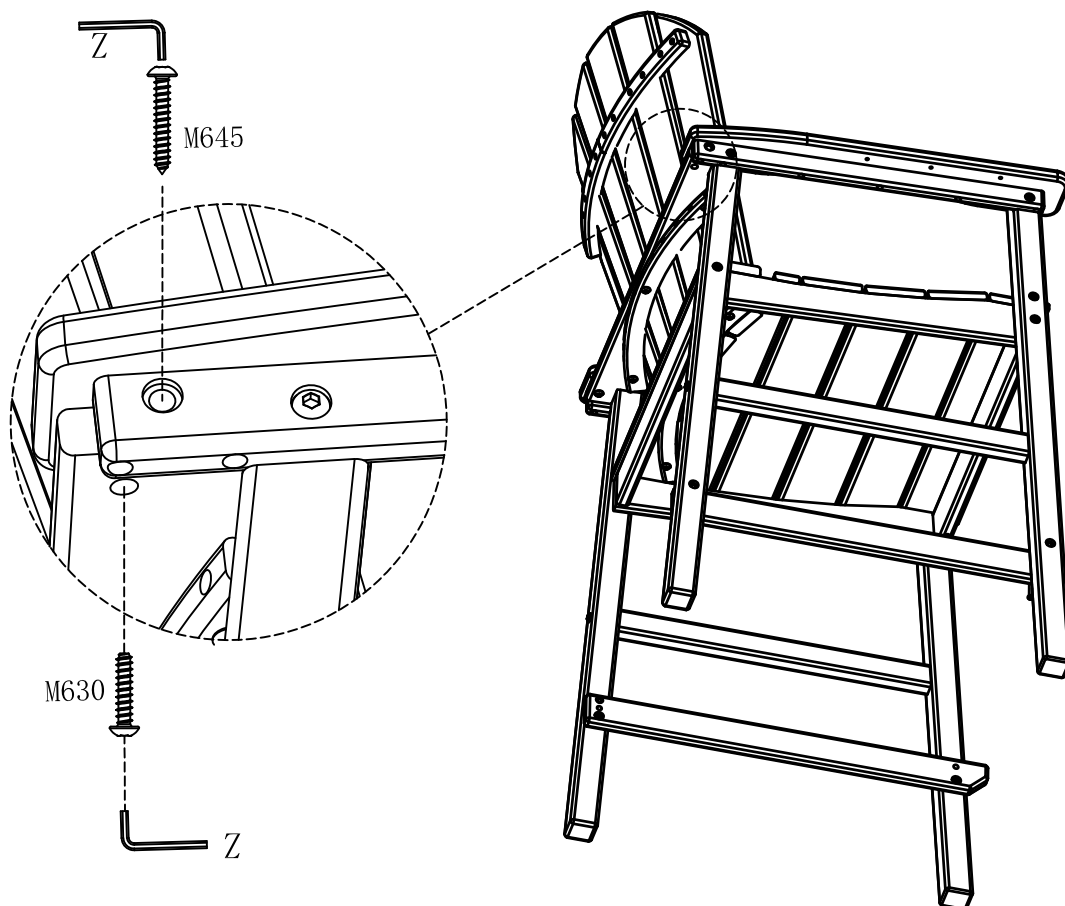


STEP10

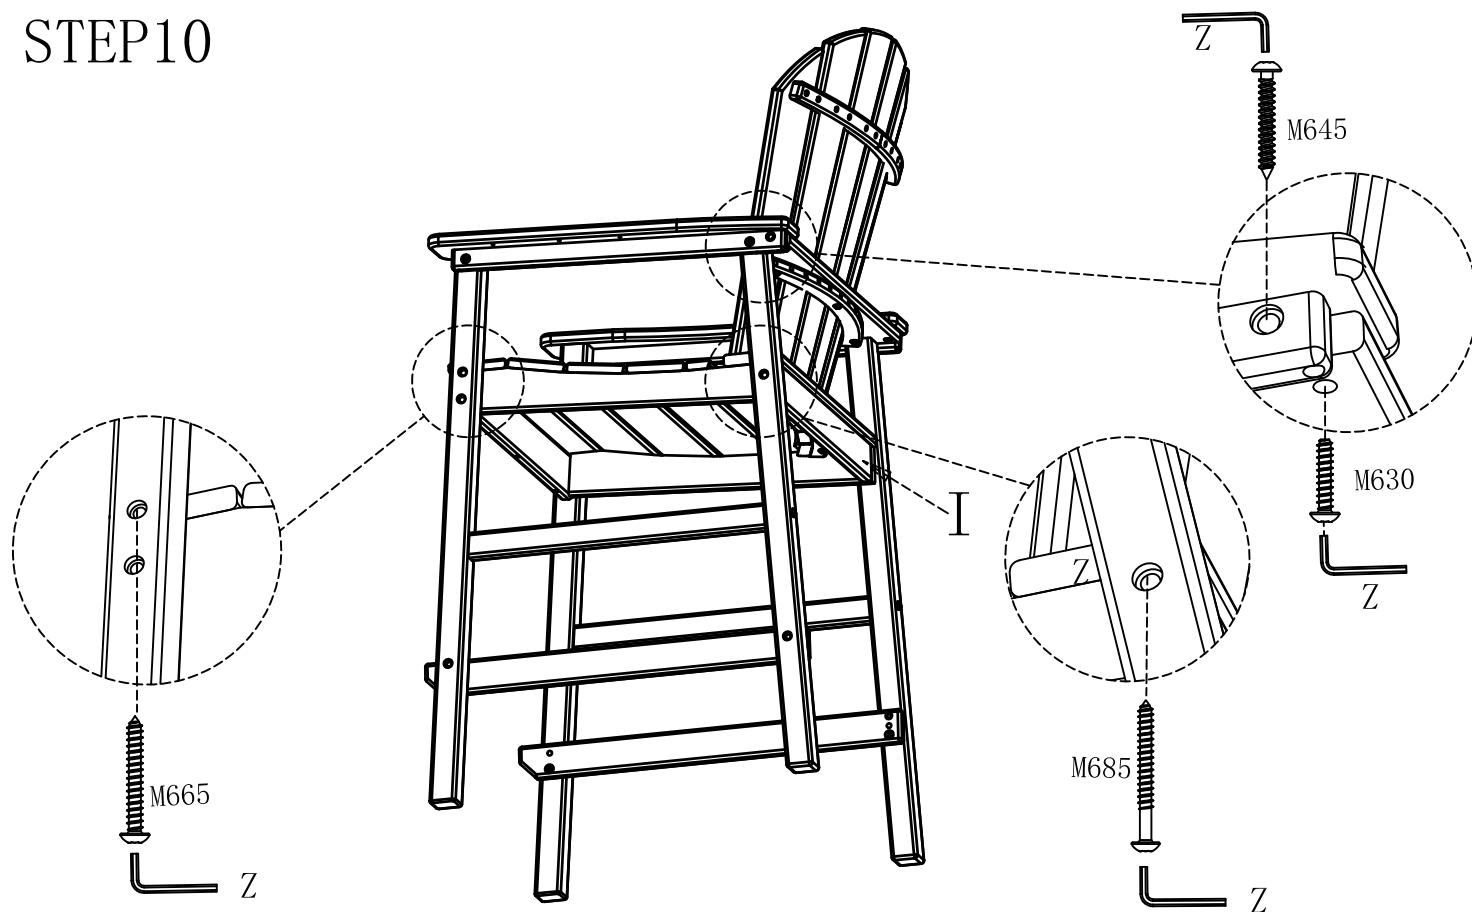


Assembly Instructions

STEP11


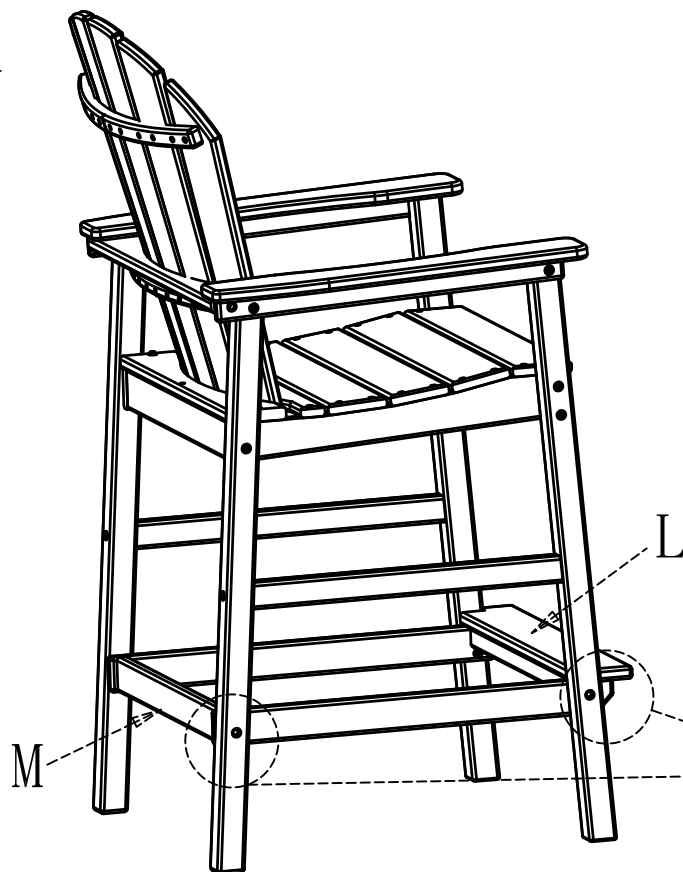


Helpful Tip

The "M" are designed to facilitate alignment during assembly. It will not affect the assembly or stability of the chair even if they are broken. Take your time to put it all together, and feel free to contact us support@a-ecoliving.com if you encounter any issues. Thank you for your support and patience!

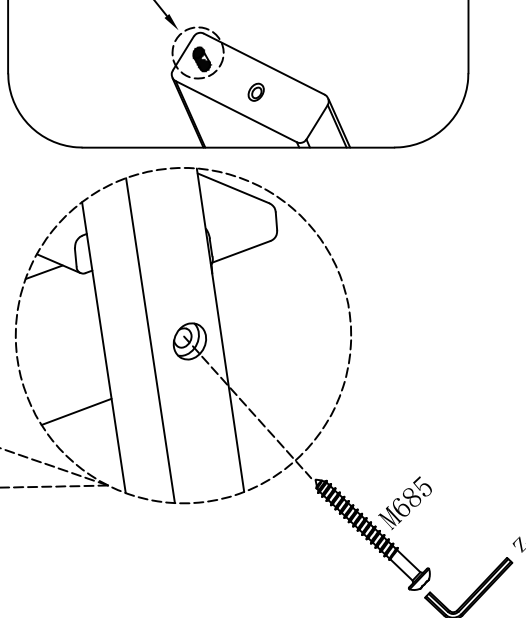

STEP12

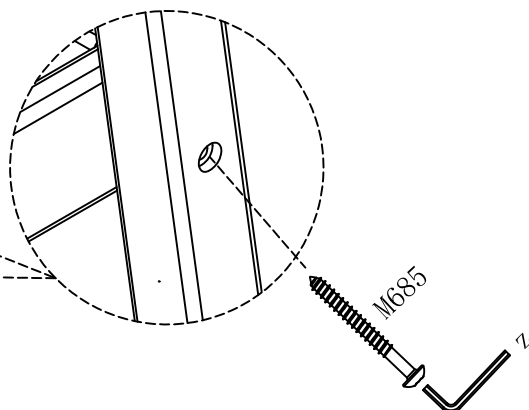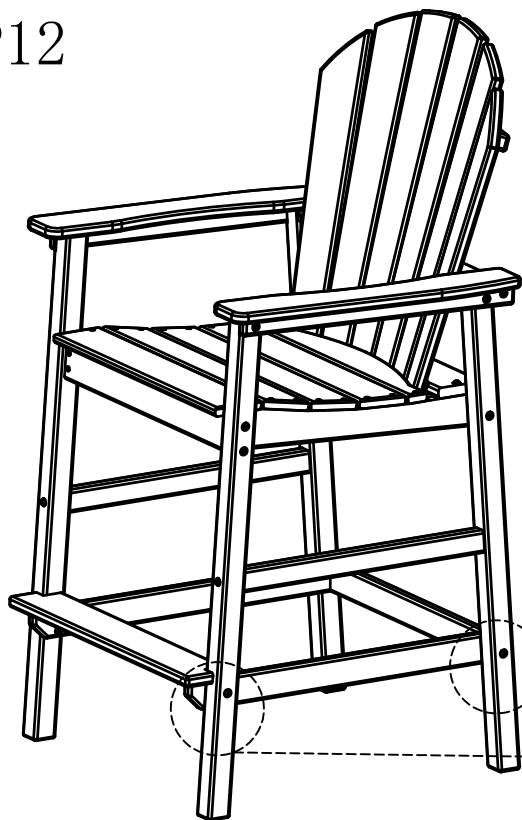

Assembly Instructions

