
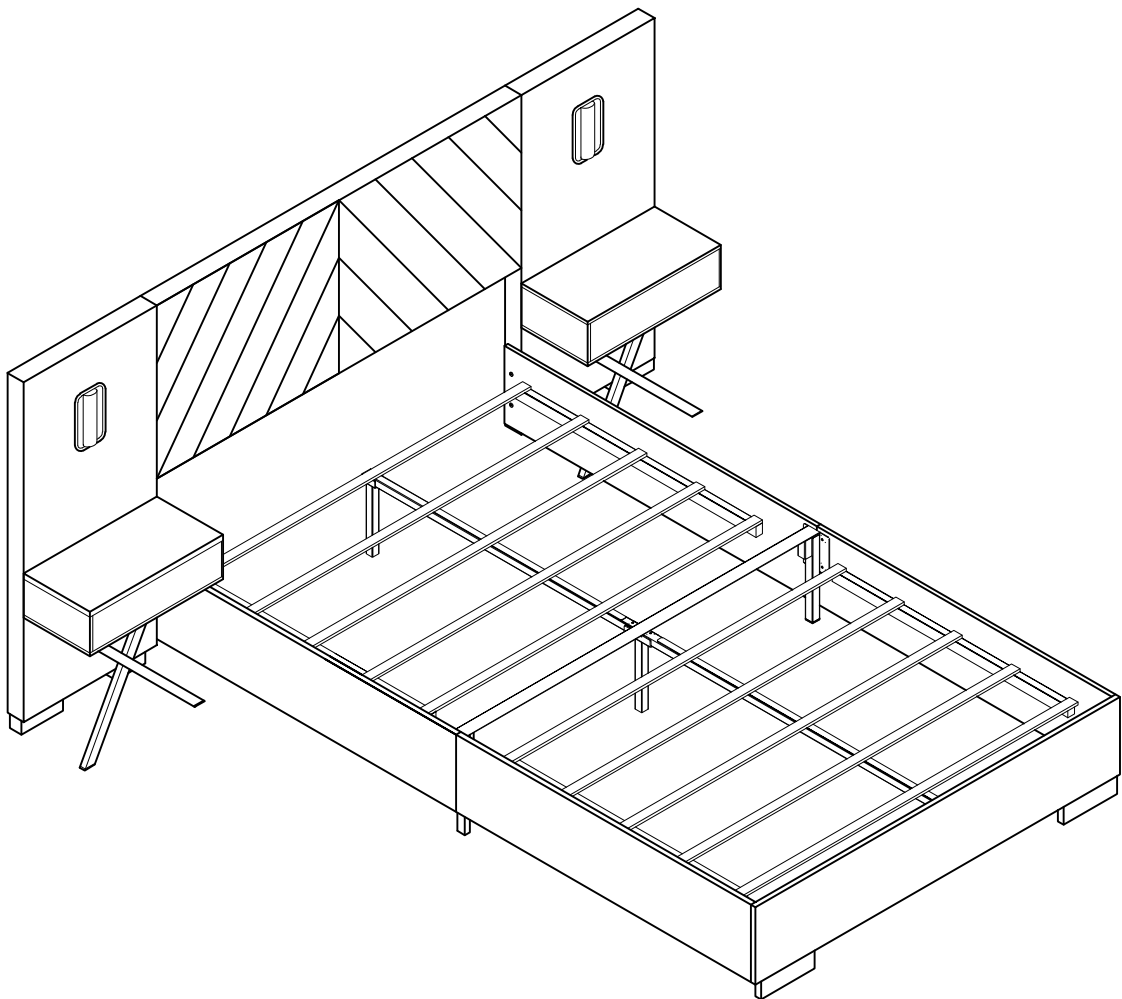



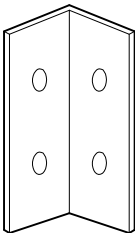


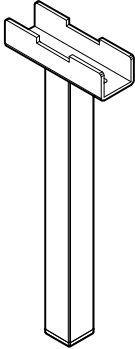
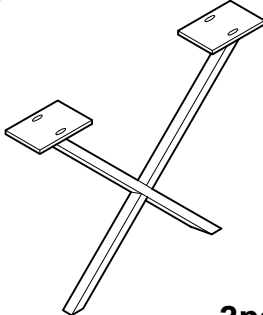
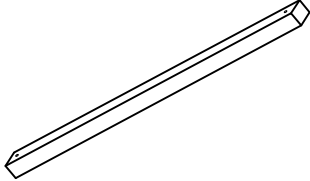
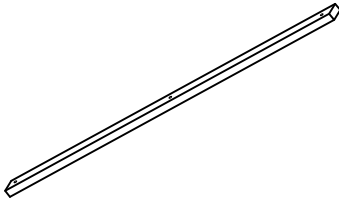
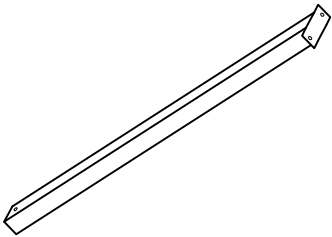
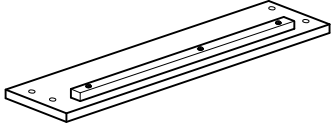
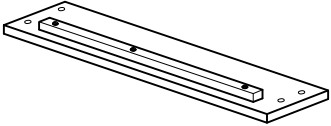
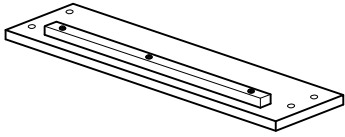
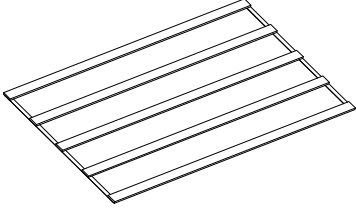







ASSEMBLY INSTRUCTIONS

Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand

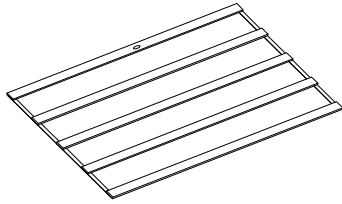

parts list

A1  M6*55 8pcs	A2  M6*18 26pcs	A3  M6*35 4pcs	A4  M8*50 6pcs	A5  M8*19 6pcs	A6  M6*19 38pcs
A7  M6 1pcs	A8  M8 1pcs	B1  2pcs	B2  2pcs		
B3  1pcs	B4  1pcs	B5  2pcs	C1  1pcs		
C2  1pcs	C3  1pcs	D  1pcs	D1  1pcs		
D2  2pcs	D3  1pcs	D4  1pcs	D5  1pcs		

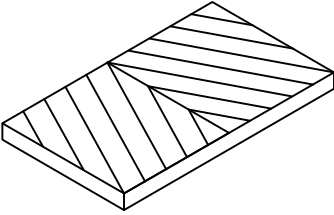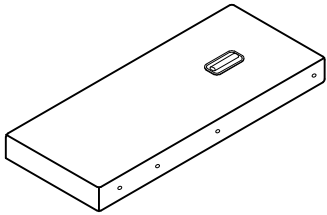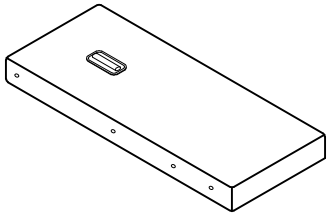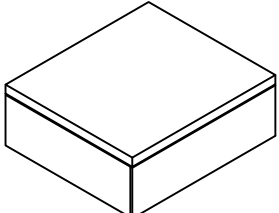E1  1pcs	E2  1pcs	E3  1pcs	E4  2pcs
--	---	--	---










packing list

Q bed: C1x1 C2x1 C3x1 Dx1 D1x1 D2x2 D3x1 D4x1D5x1 E1x1













Back ear: A1x9 A2x28 A3x5 A4x6 A5x6 A6x42 A7x1 A8x1 B1x2 B2x2 B3x1 B4x1 B5x2 E2x1 E3x1 E4x2 (Including spare hardware)

Note: The package is as follows.

Q bed

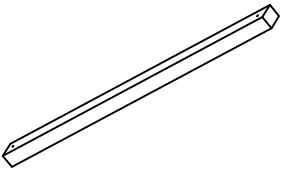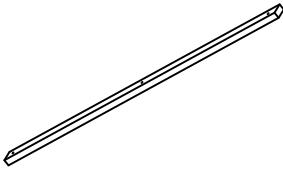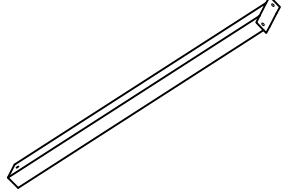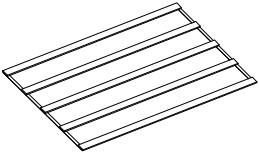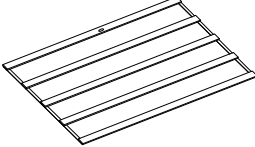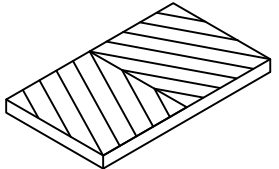
 C1	 C2	 C3	 D	 D1
 D2	 D3	 D4	 D5	 E1

Back ear

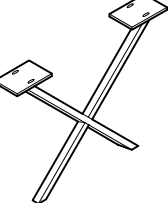
 A1 M6*55	 A2 M6*18	 A3 M6*35	 A4 M8*50	 A5 M8*19	 A6 M6*19	 A7 M6	 A8 M8
 B1	 B2	 B3	 B4	 B5	 E4	 E2	 E3

Installation method


Step 1

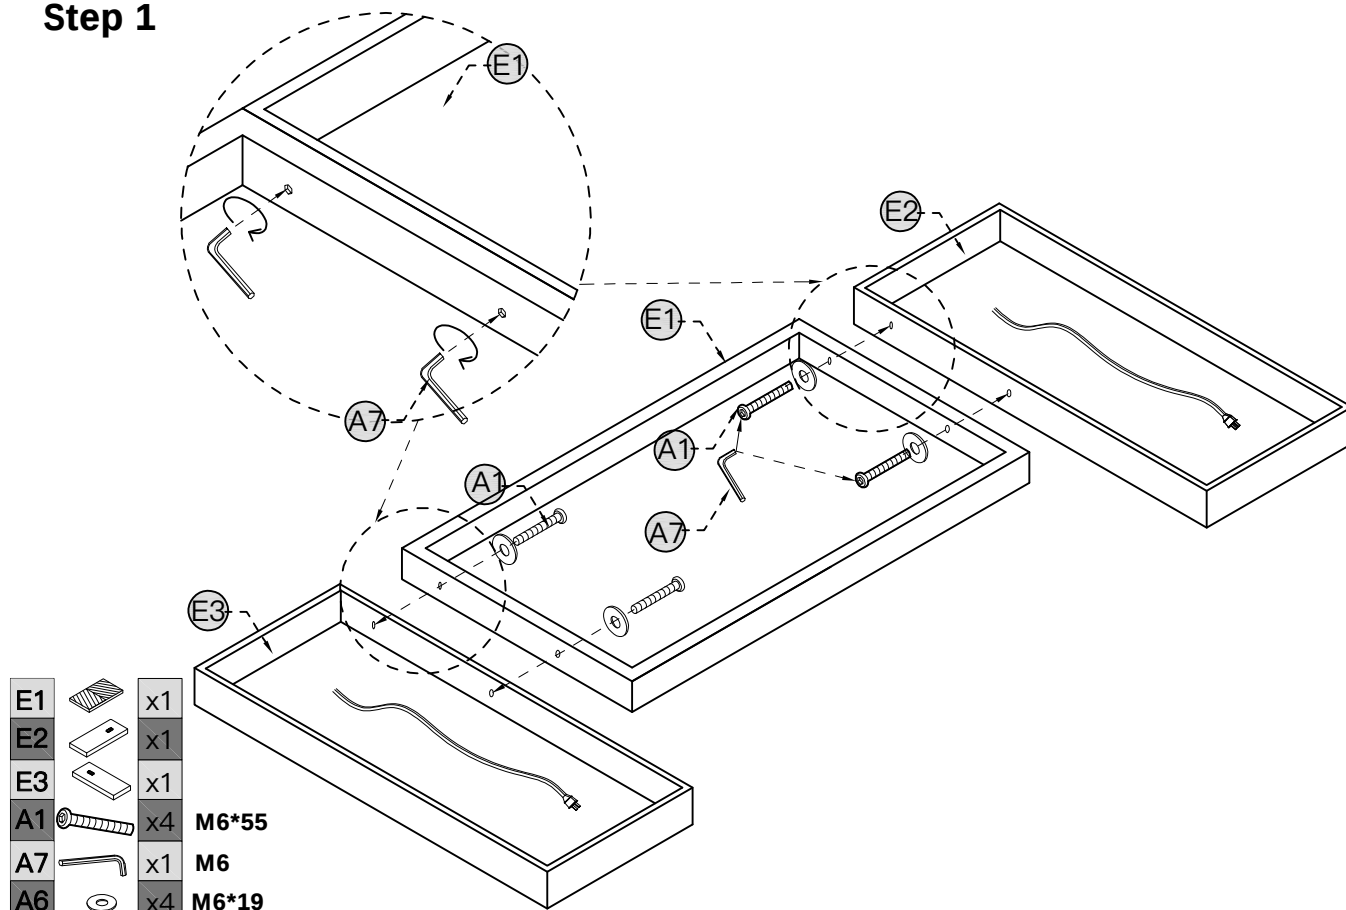


Step 2

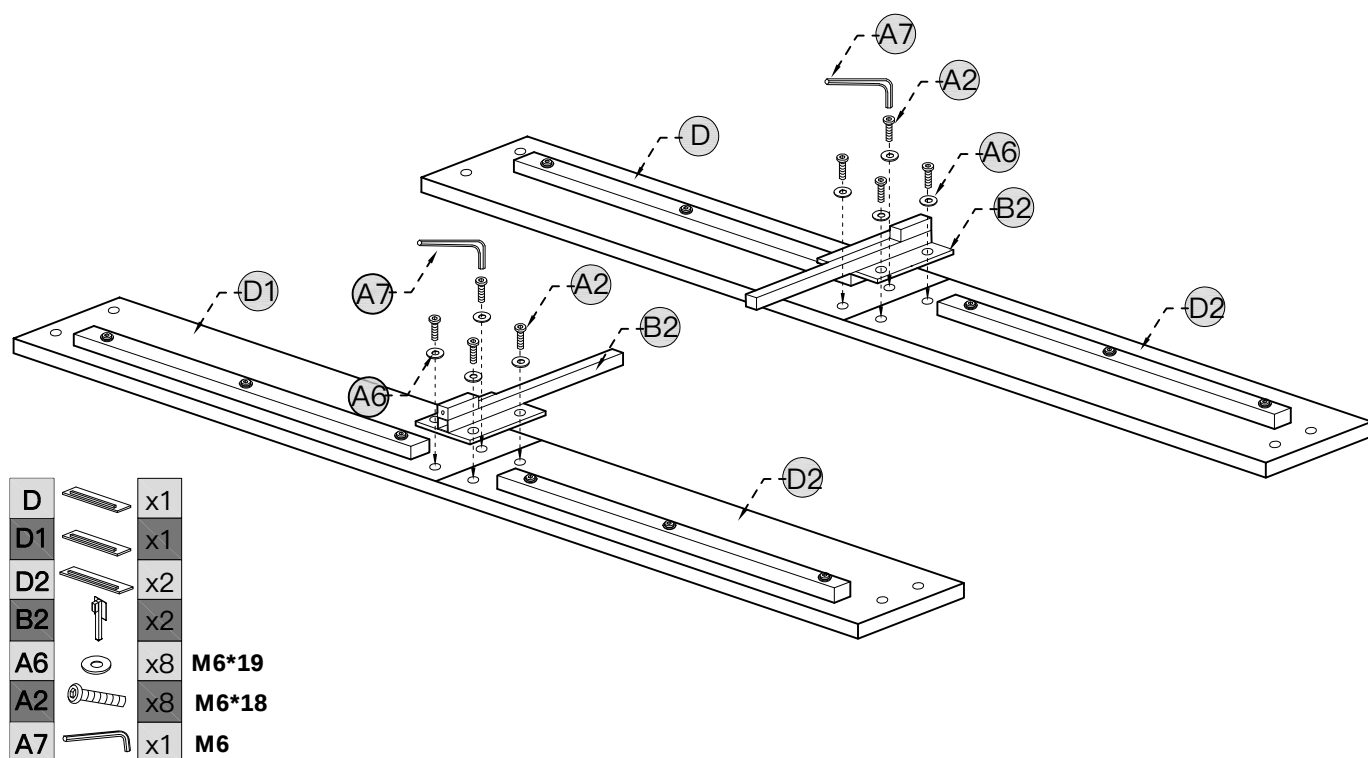


Step 3

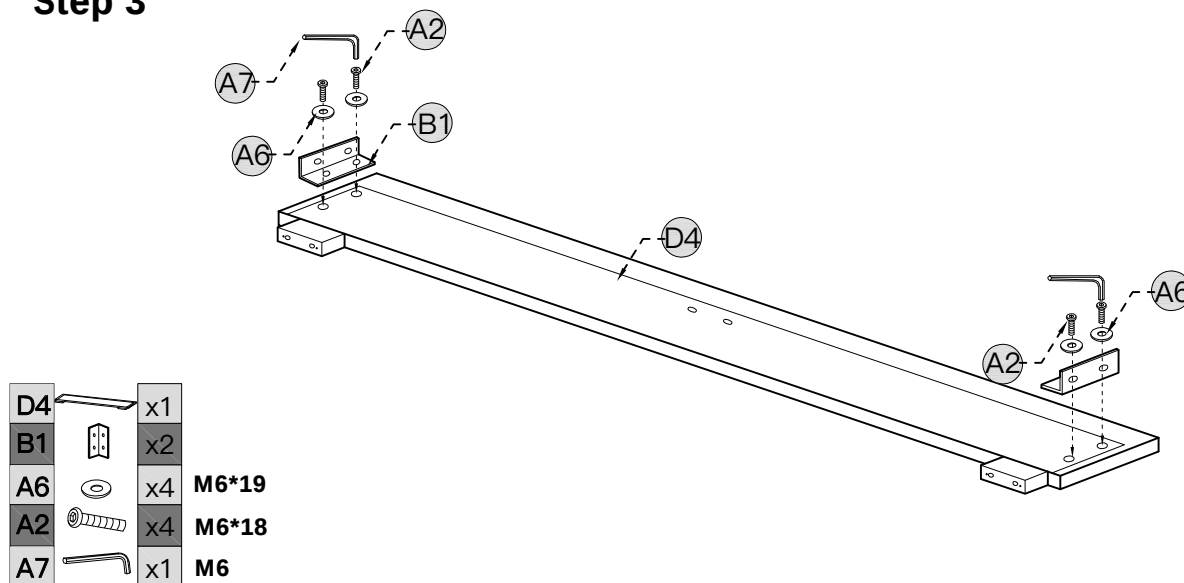


Step 4

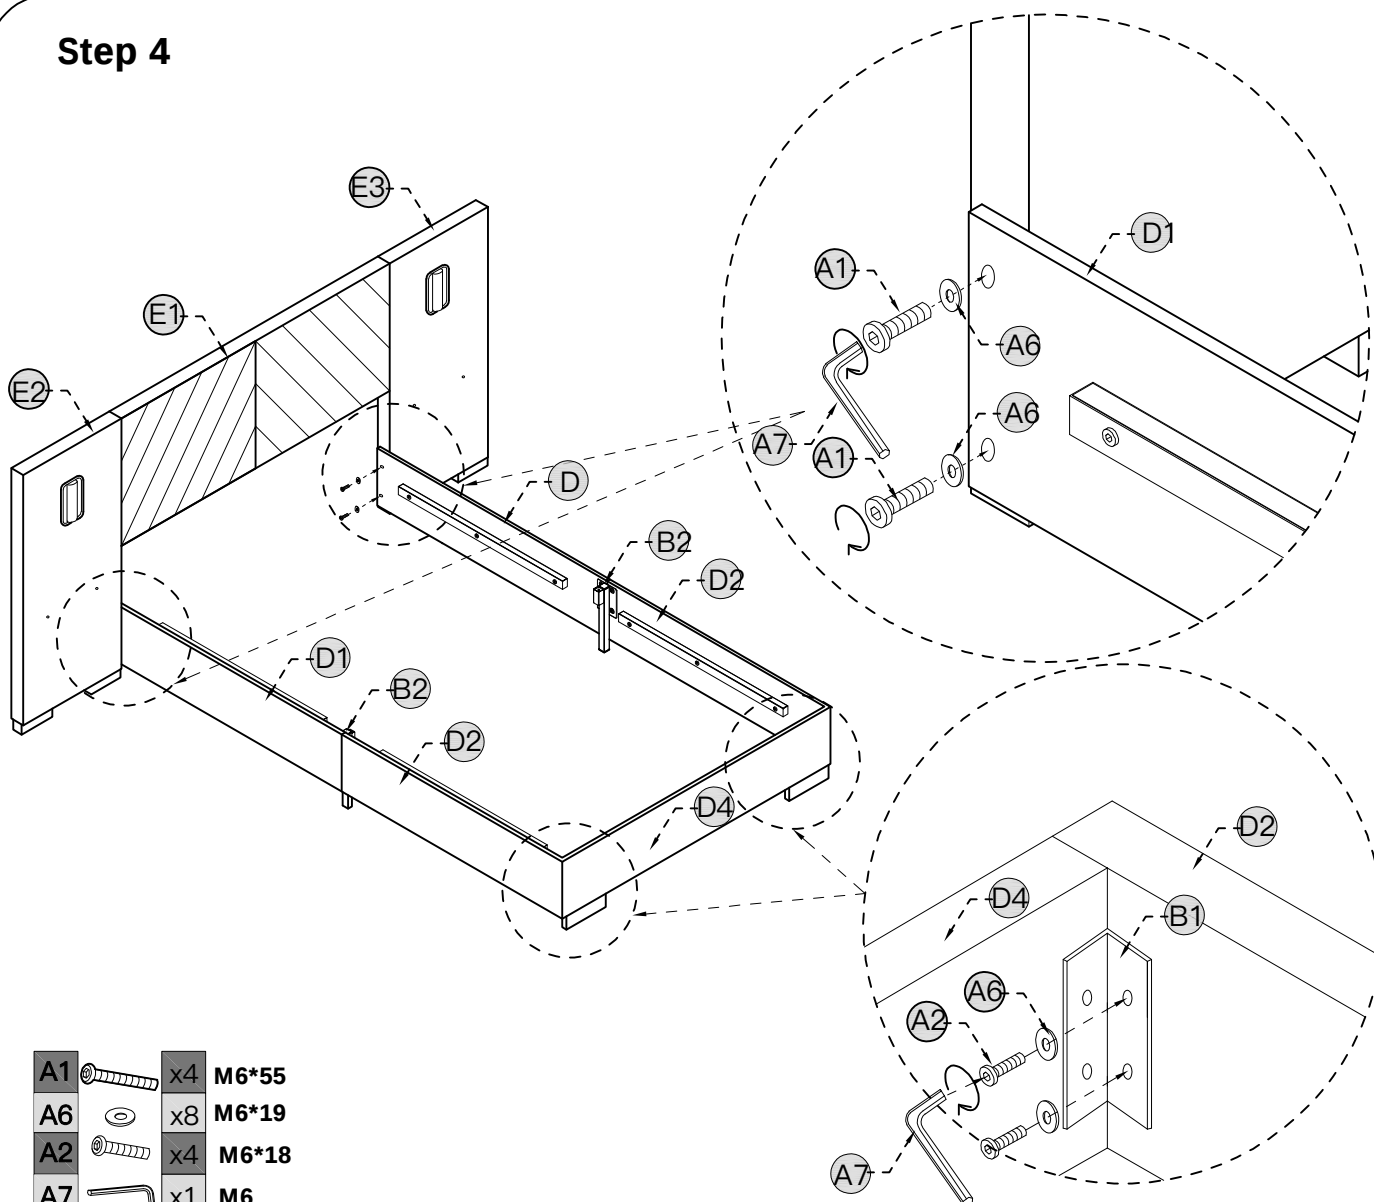

Step 5

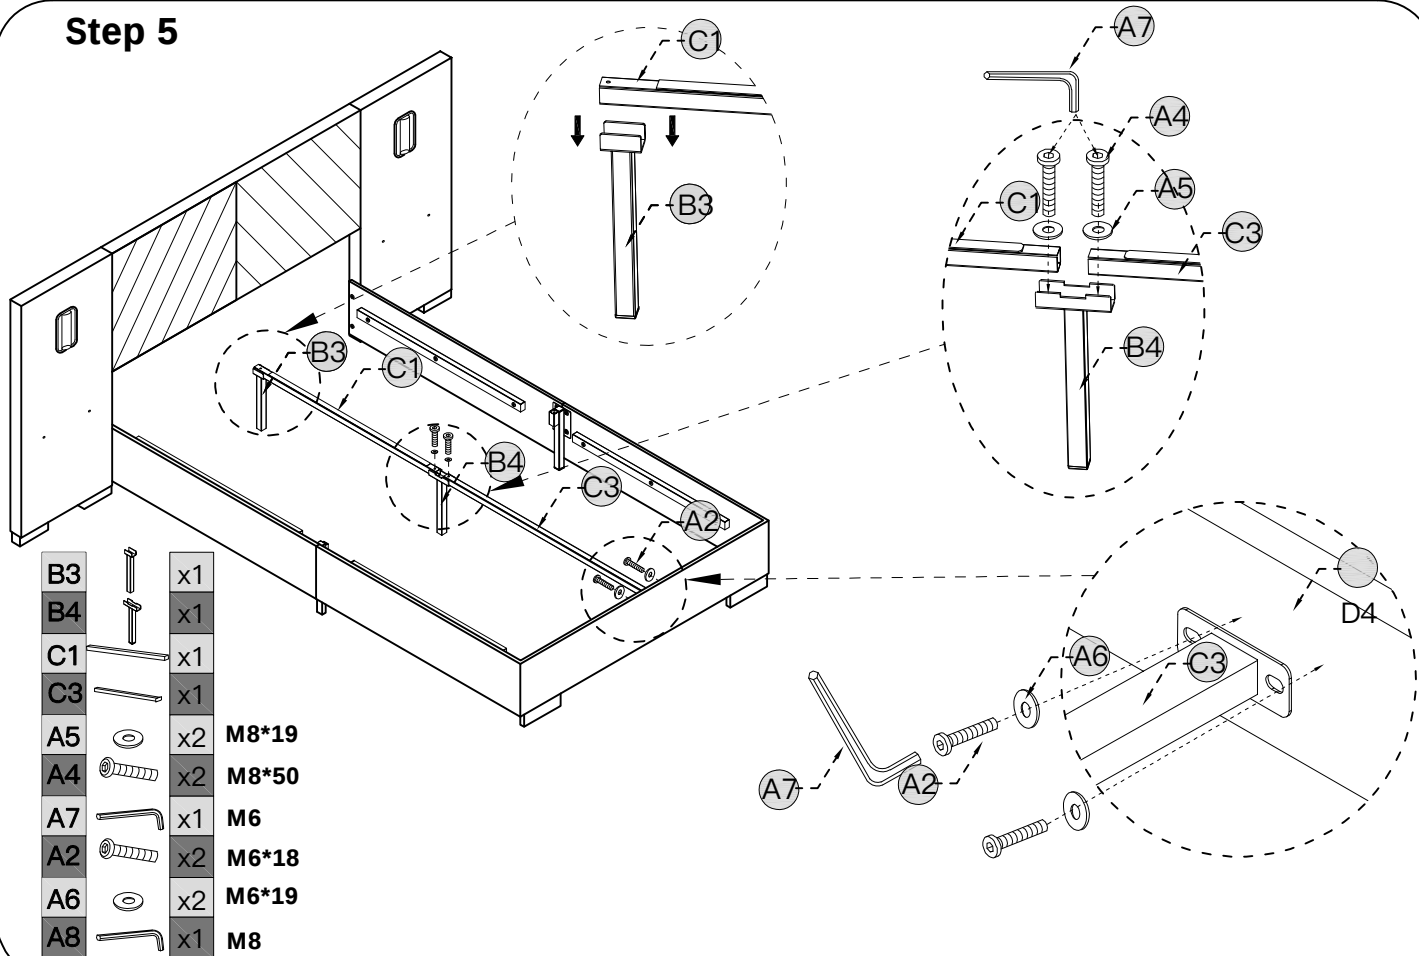


Step 6

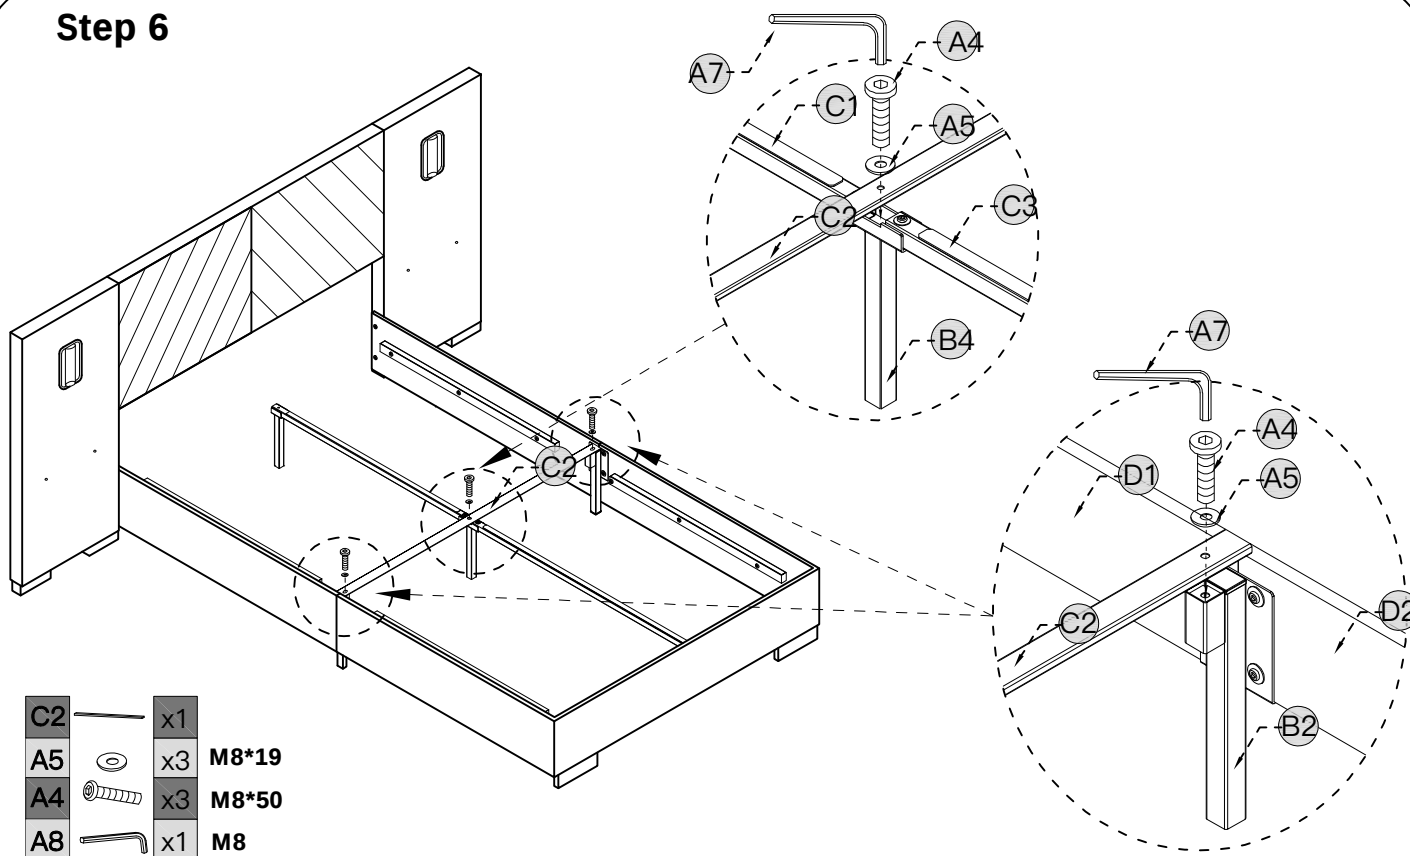


Installation method


Step 7

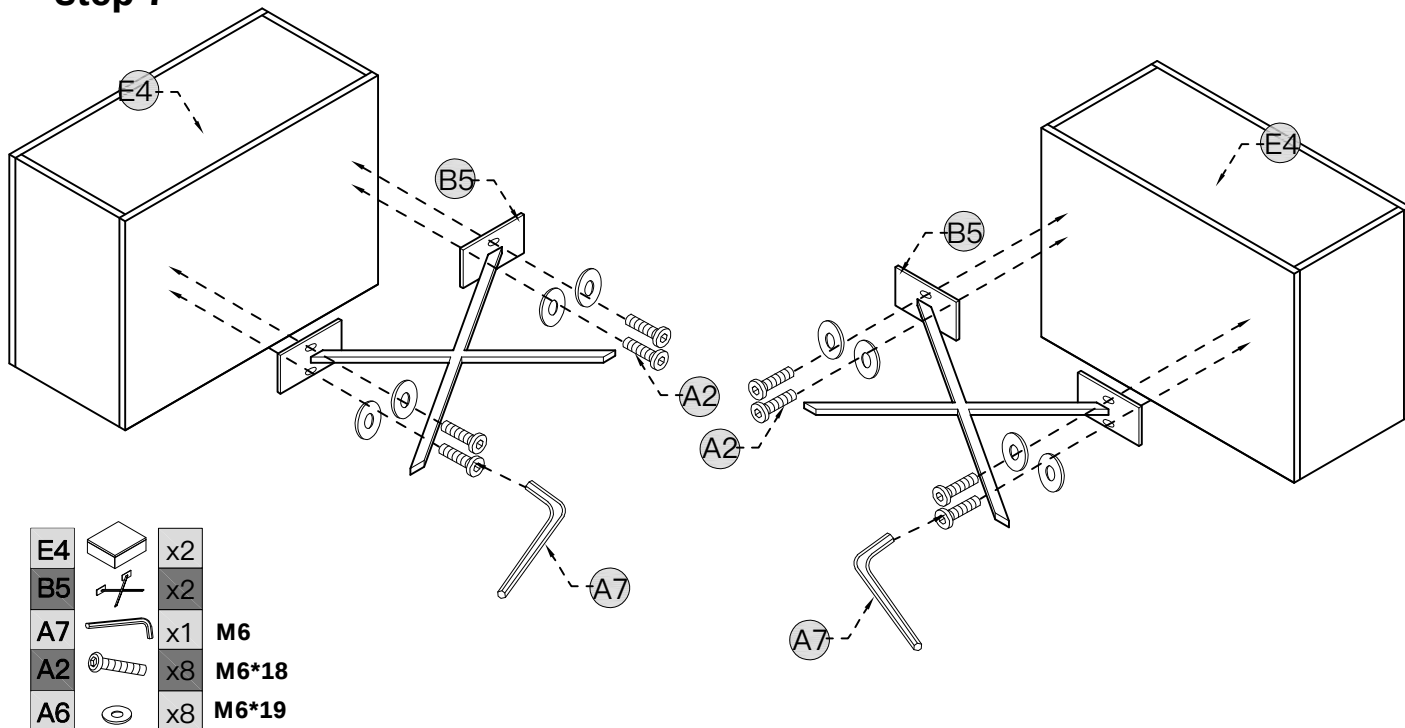

Step 8

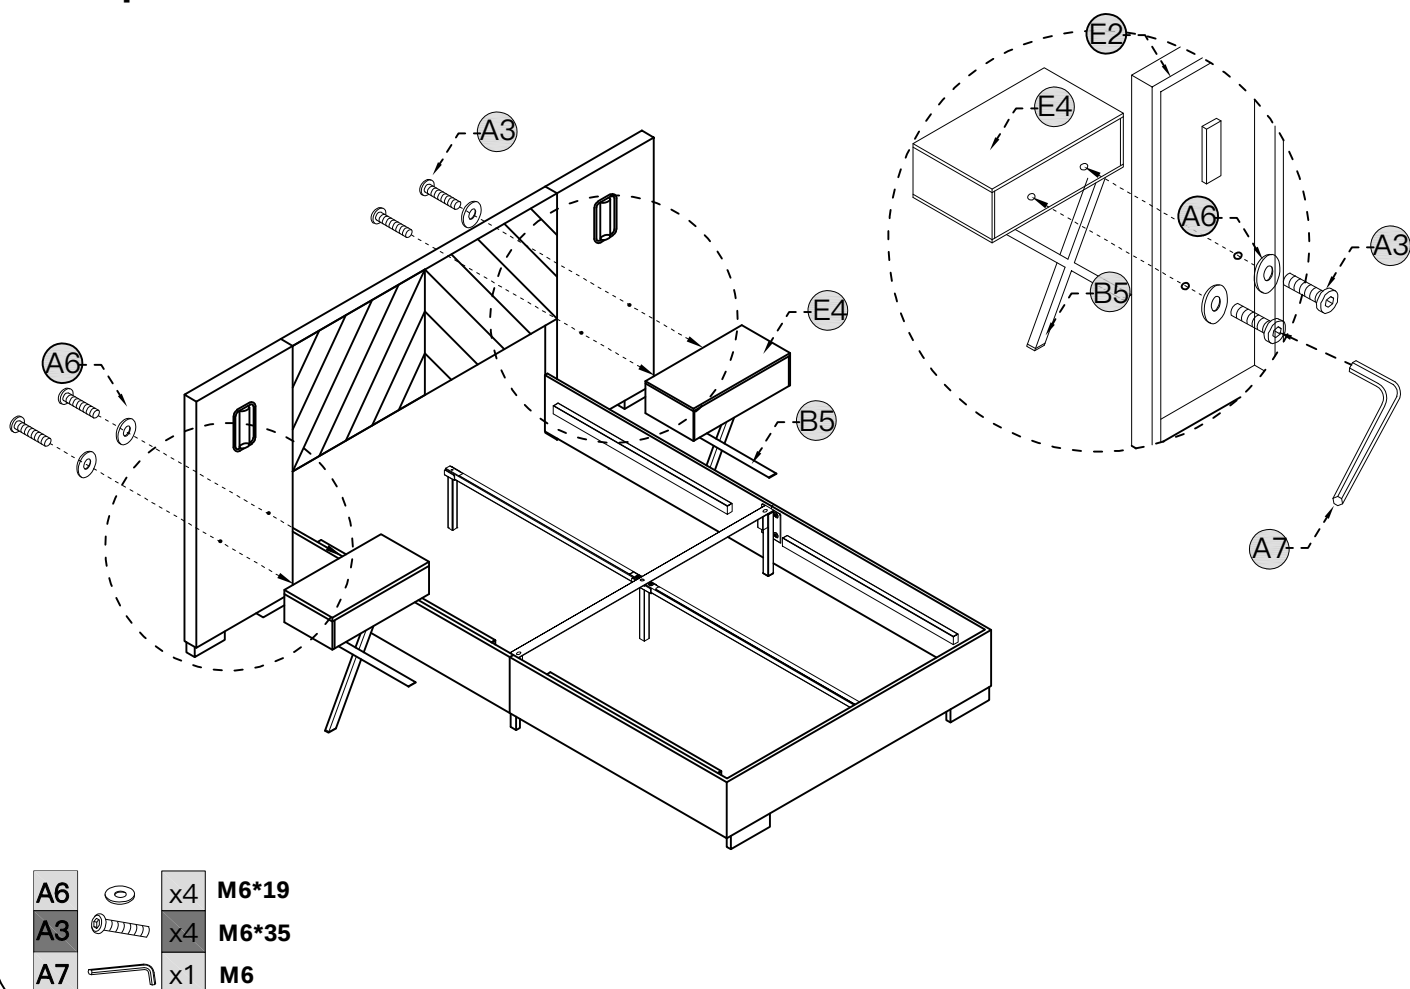

Step 9

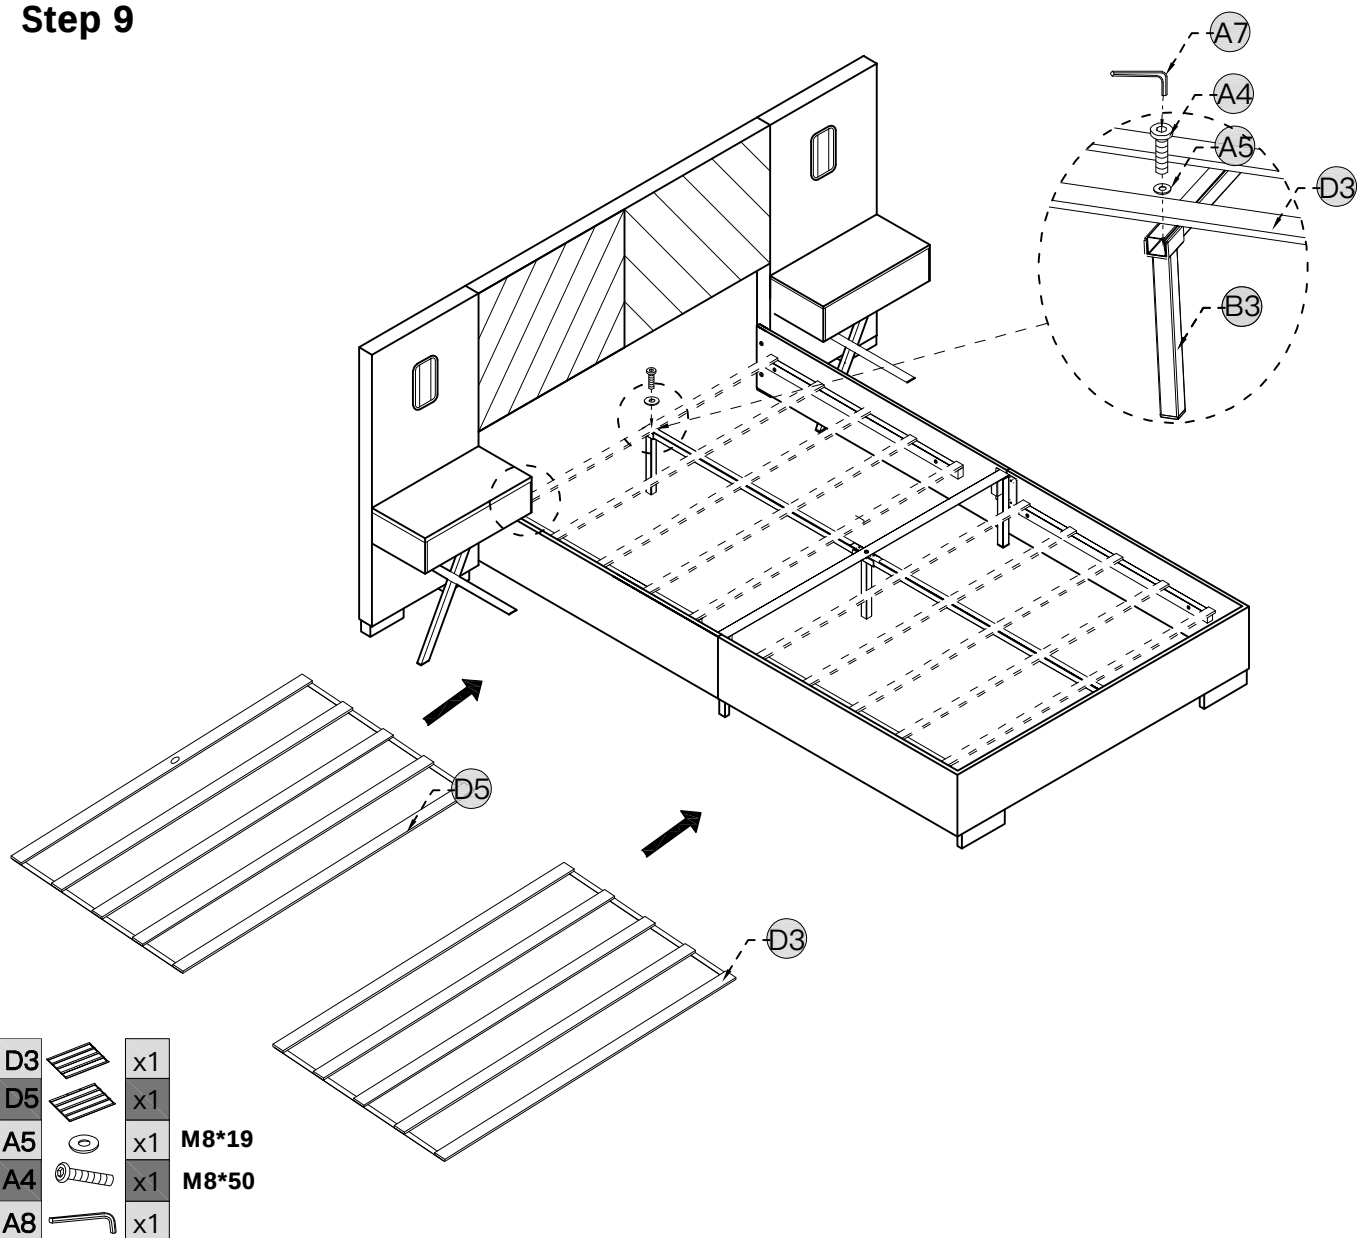

Assembly completed!

Please enjoy the bed