



Assembly Instructions

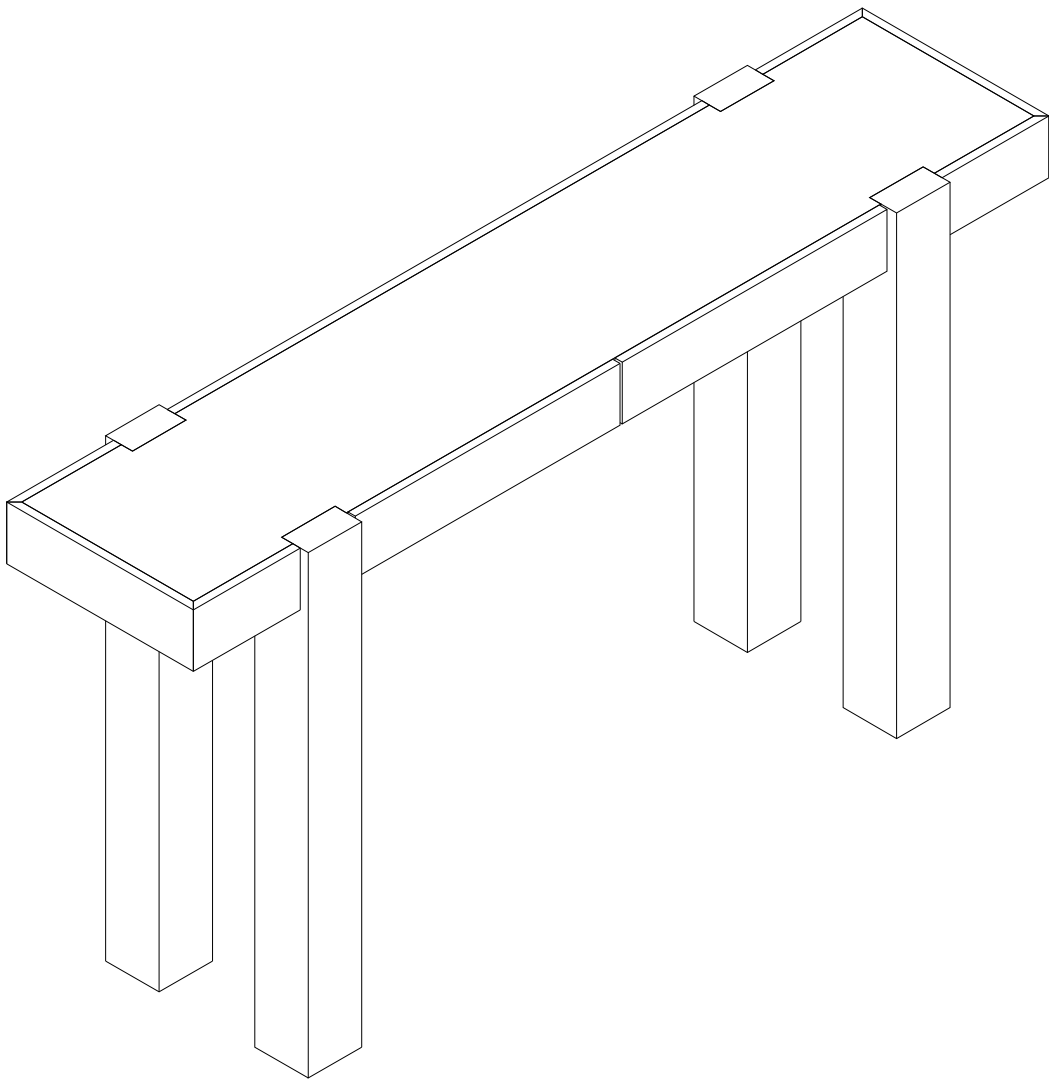


Date 2026-02-02 Rev.01-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

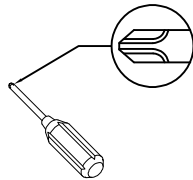

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

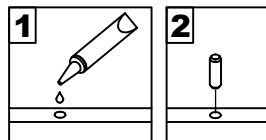


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

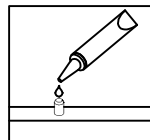


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS



- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

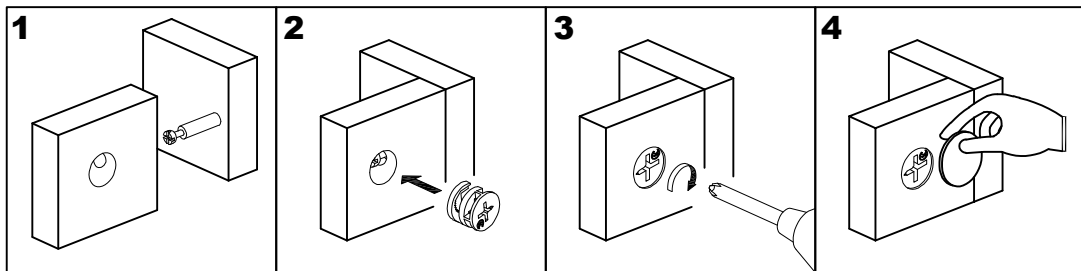







- VII. Power tools should not be used to assemble this product .

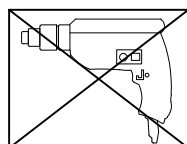


Parts List

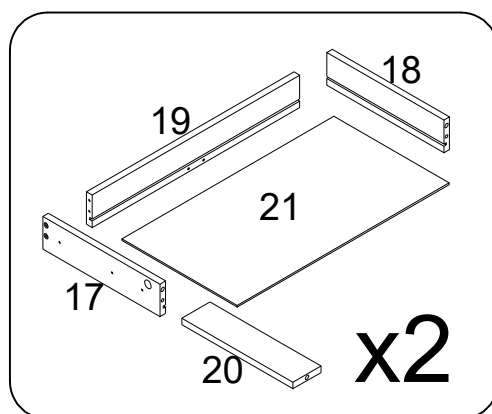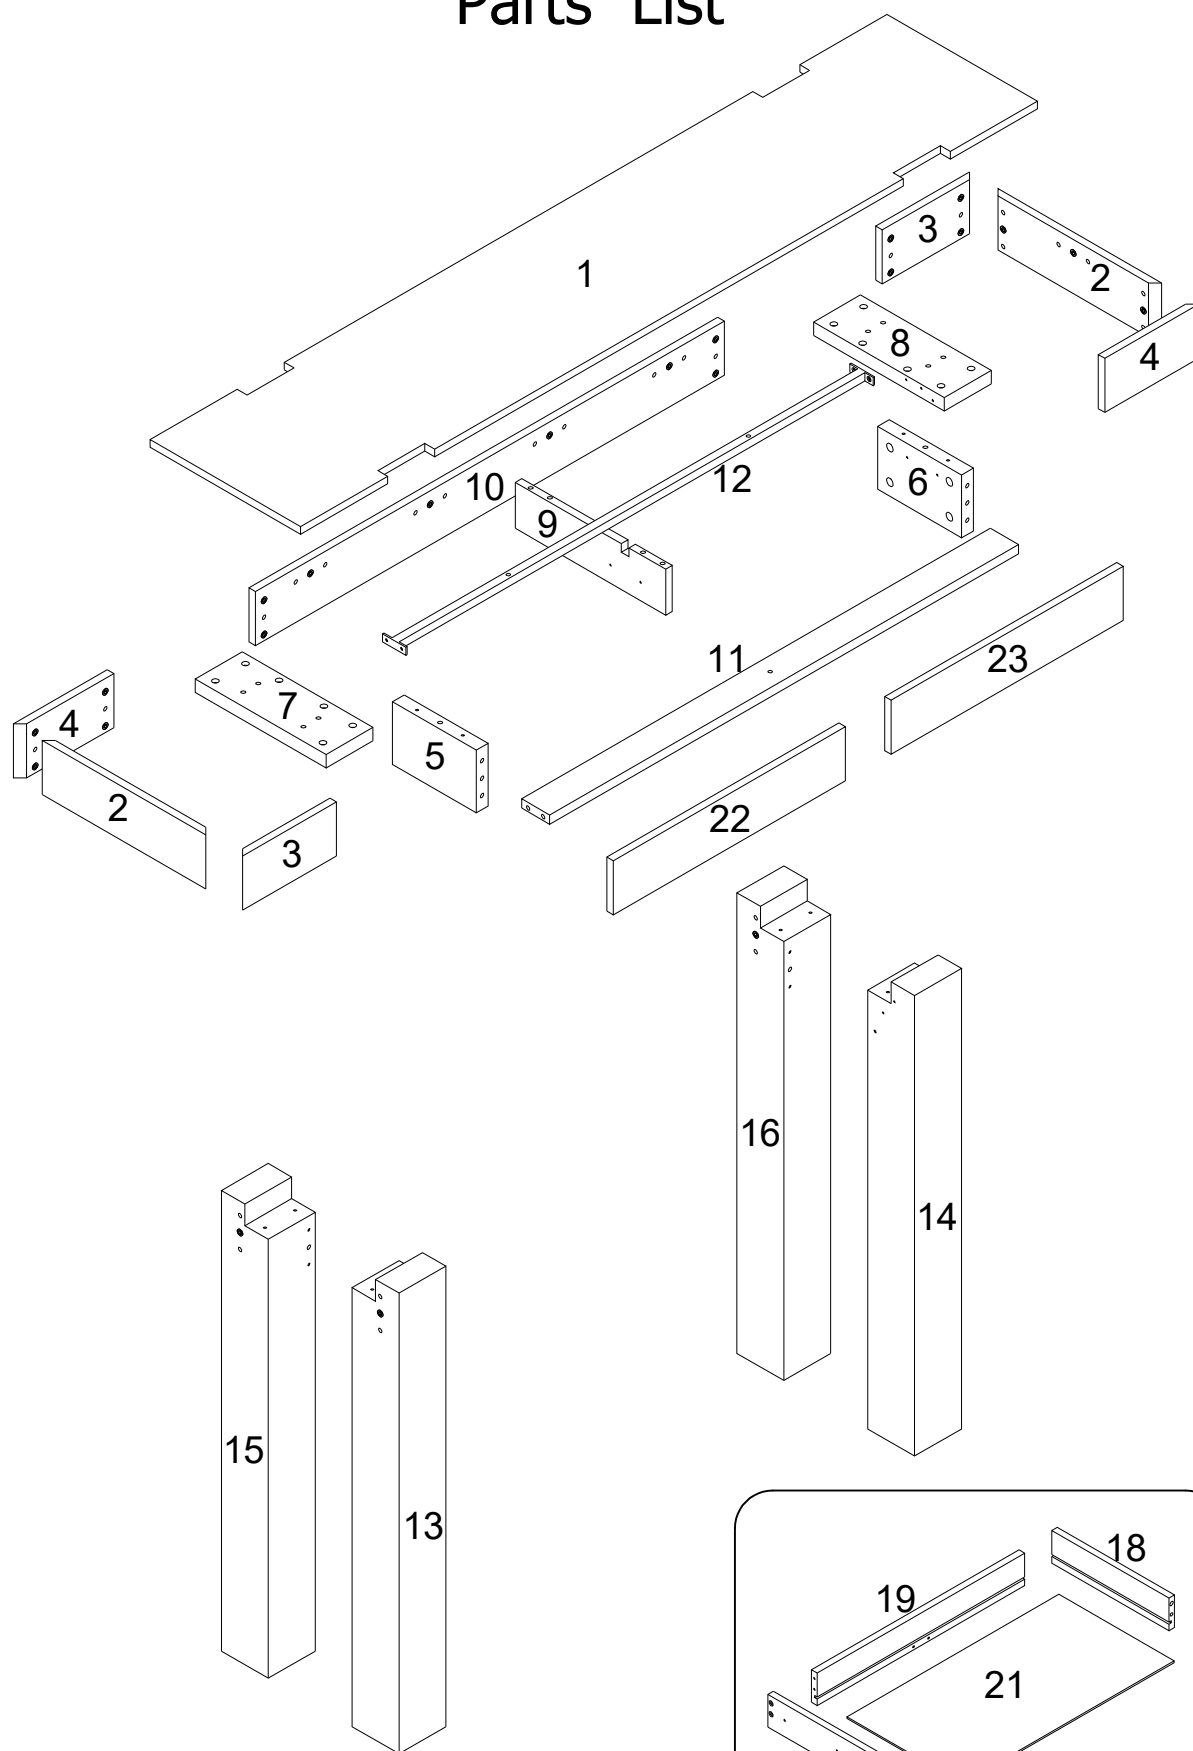


Hardware List


A		Ø6x34mm	Cam bolt	20 pcs
B		Ø15x9mm	Small Cam lock	6 pcs
C		Ø8x30mm	Large Dowel	8 pcs
D		Ø6x30mm	Small Dowel	4 pcs
E		Ø5x48mm	Screw	13 pcs
F			Connector	16 pcs
G		Ø1/4"x12mm	Bolt	48 pcs
H		Ø1/4"x38mm	Bolt	8 pcs
I		Ø1/4"x25mm	Bolt	2 pcs
J		Ø16x1mm	Flat washer	8 pcs
K		10" length	Drawer Slide	2 sets
L		Ø3.5x12mm	Screw	24 pcs
M		Ø15x12mm	Large Cam lock	14 pcs
N		Ø4x38mm	Screw	12 pcs
O		Ø30mm	Cam cover	20 pcs
P			Glue tube	1 pc
Q			Metal plate	2 pcs

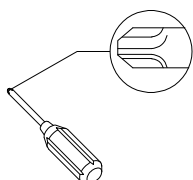

Philips head screwdriver required for assembly
(not included)


Hardware List

R		M4	Allen Wrench	2 pcs
S		Ø25x2mm	EVA pad	12 pcs
T		Ø4x12mm	Screw	12 pcs
U			Tipping Restraint Hardware	2 sets
V		11x1.5mm	Spring Washer	8 pcs

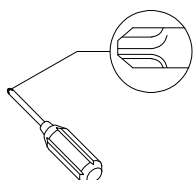


Philips head screwdriver required for assembly
(not included)


Step 1

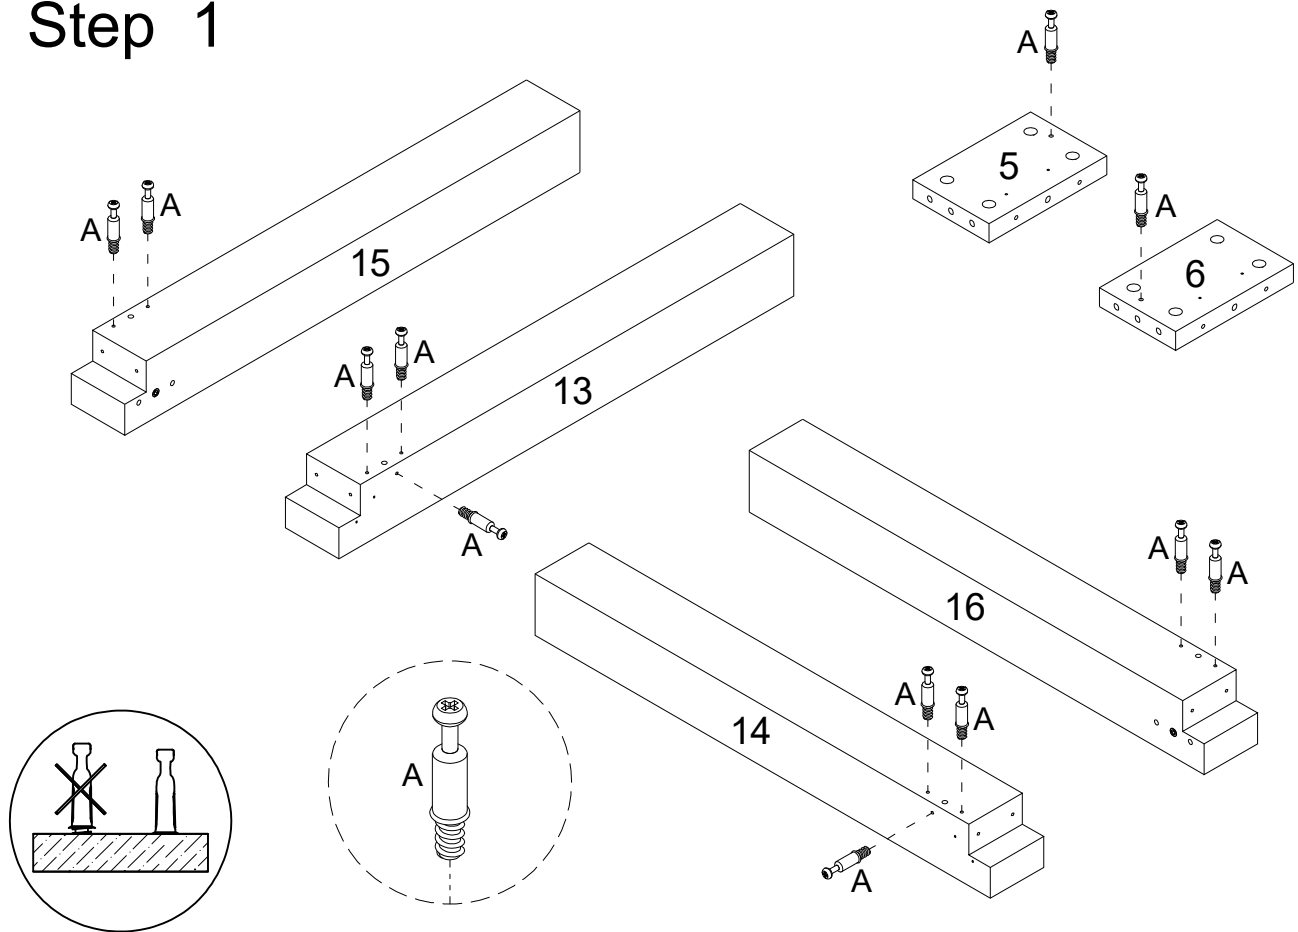


Step 2

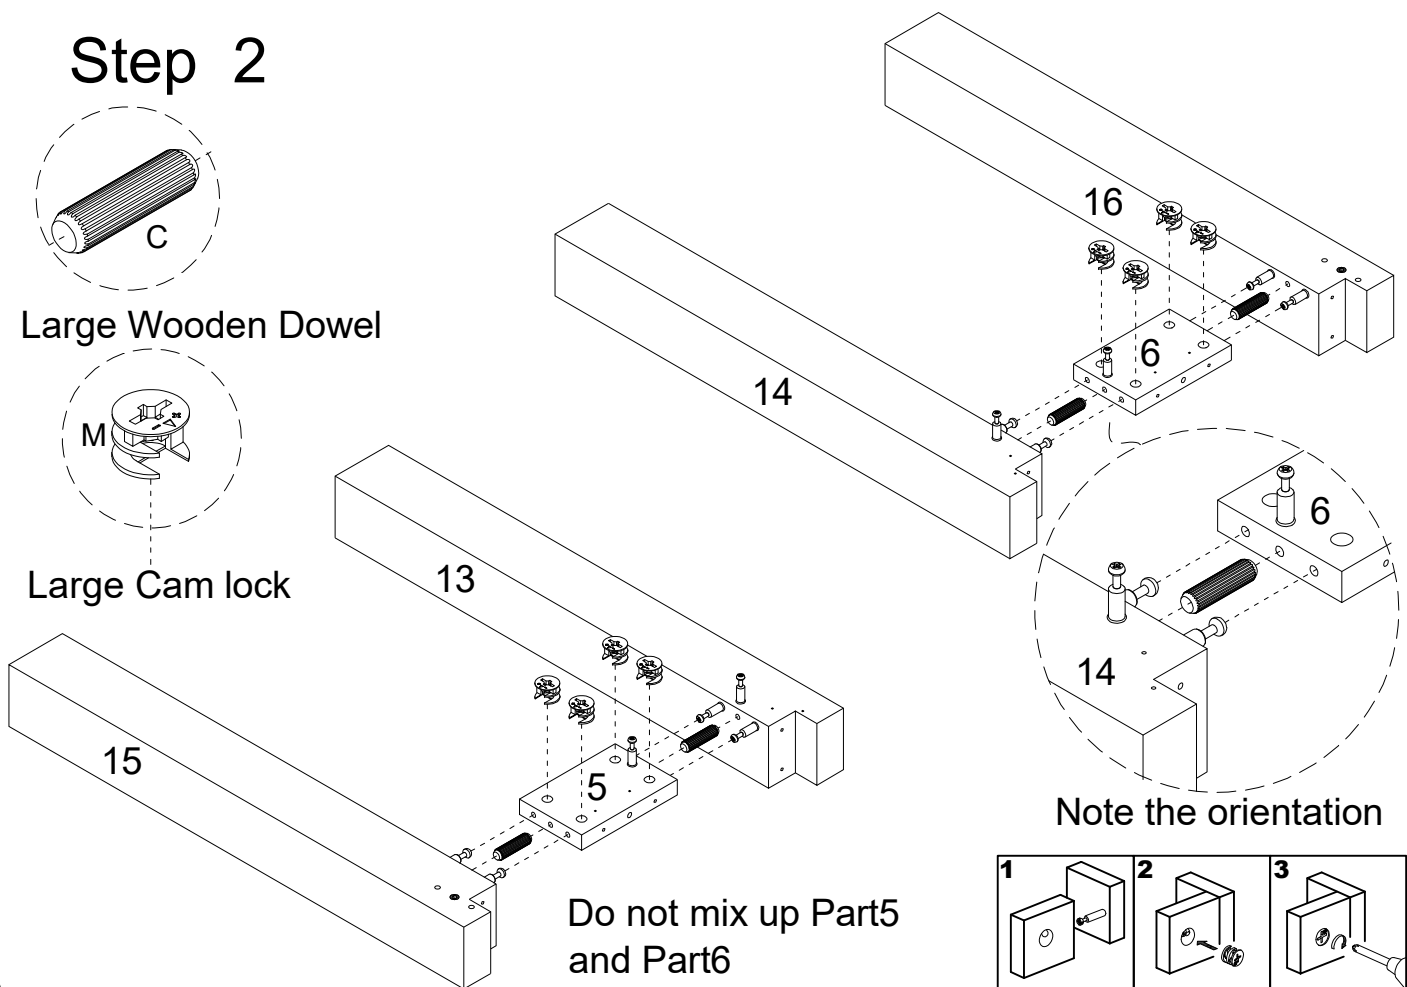

Step 3

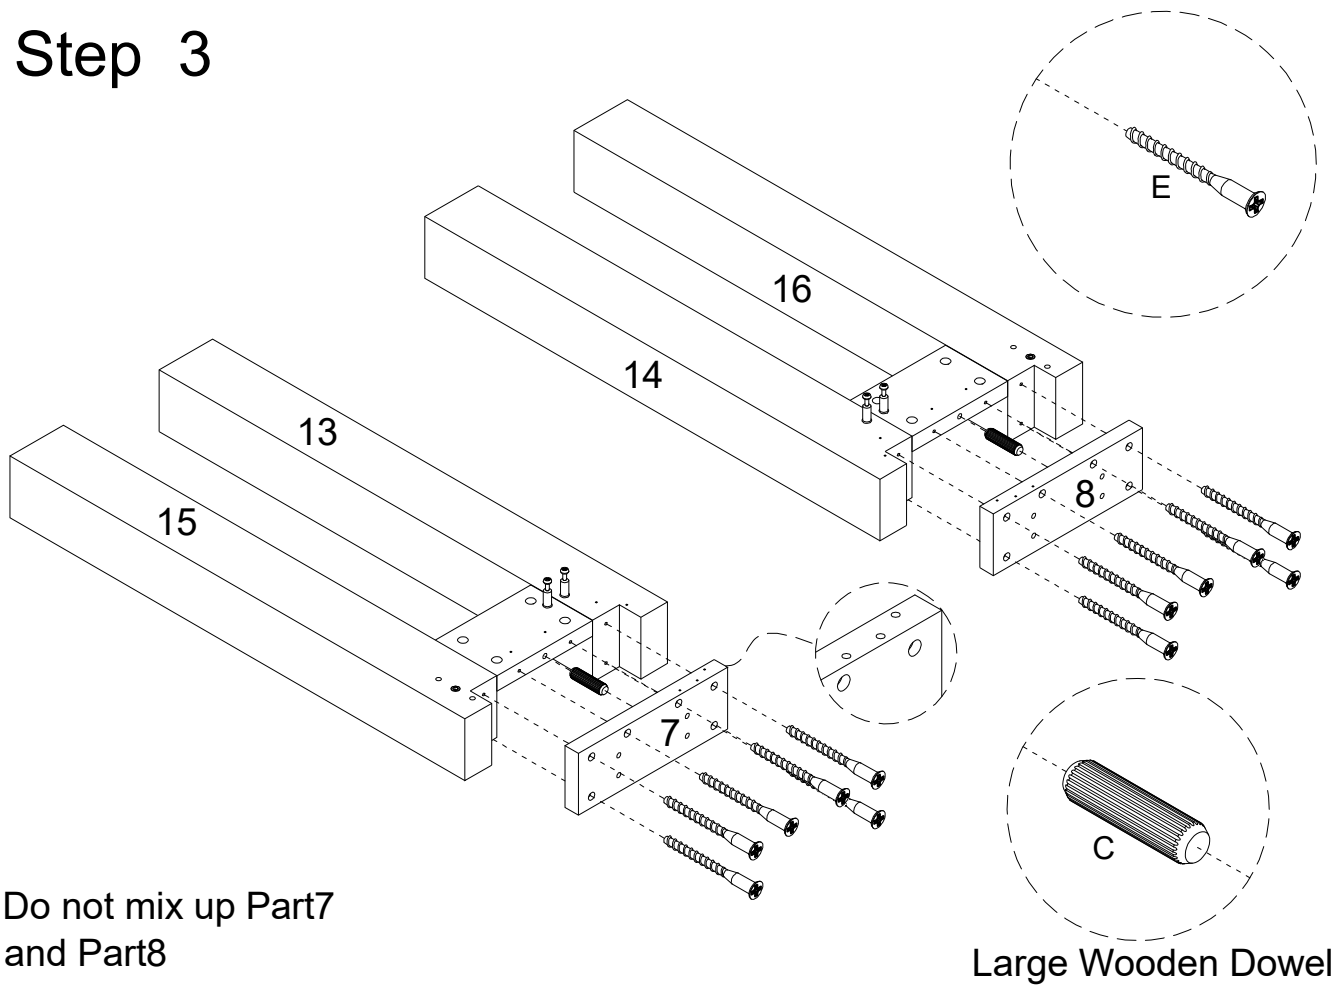

Step 4

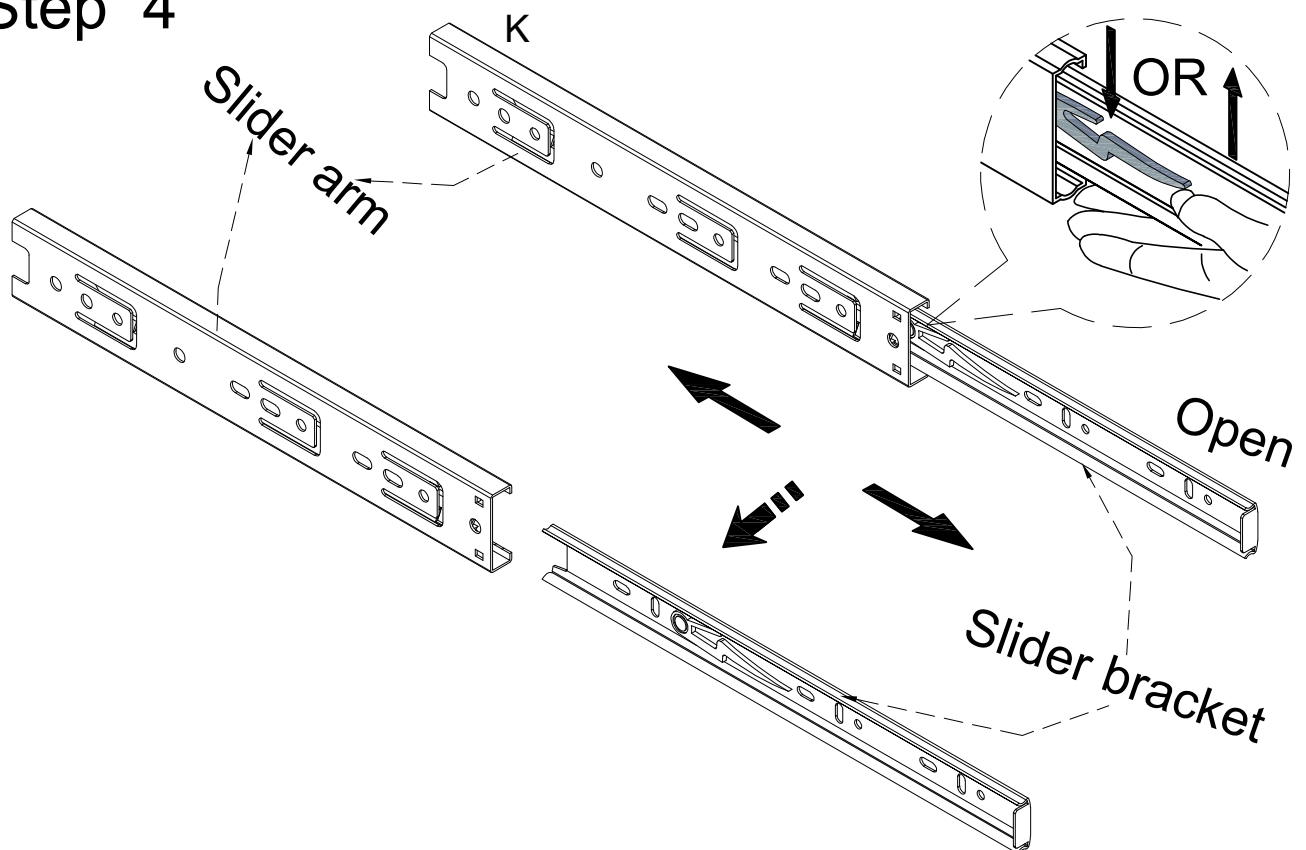

Step 5

Mounting holes

K

Open

Open

13

14

15

16

Note the orientation

L

Step 6

Large Cam lock

11

14

15

16


M

F

G


R

CAUTION: Heavy! You may need assistance with this step.

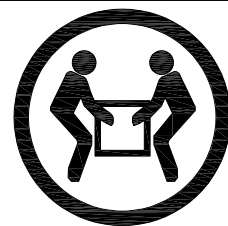


CAUTION: Heavy! You may need assistance with this step.


Step 7

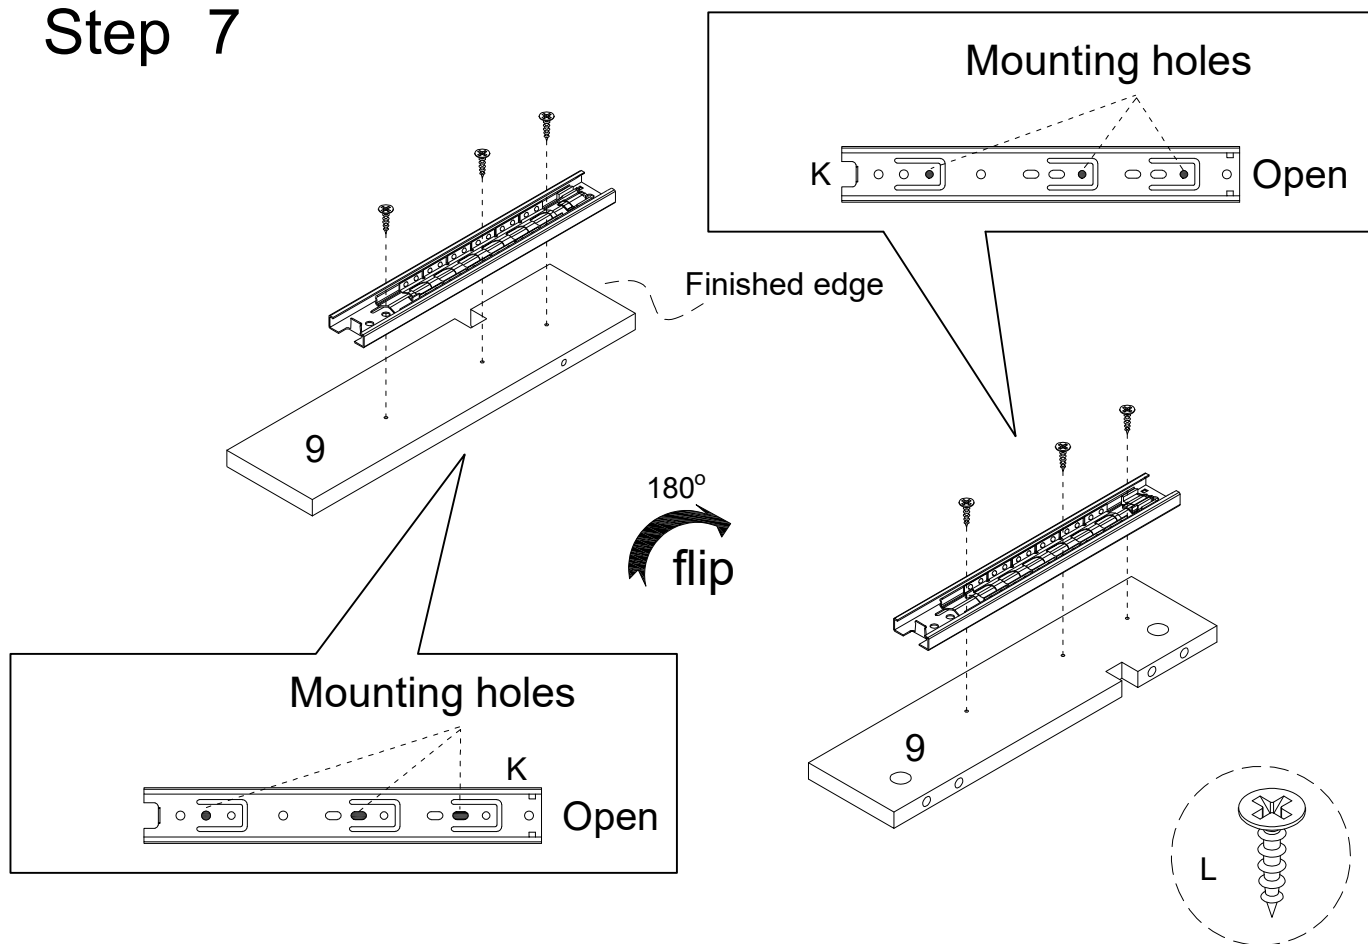


Step 8

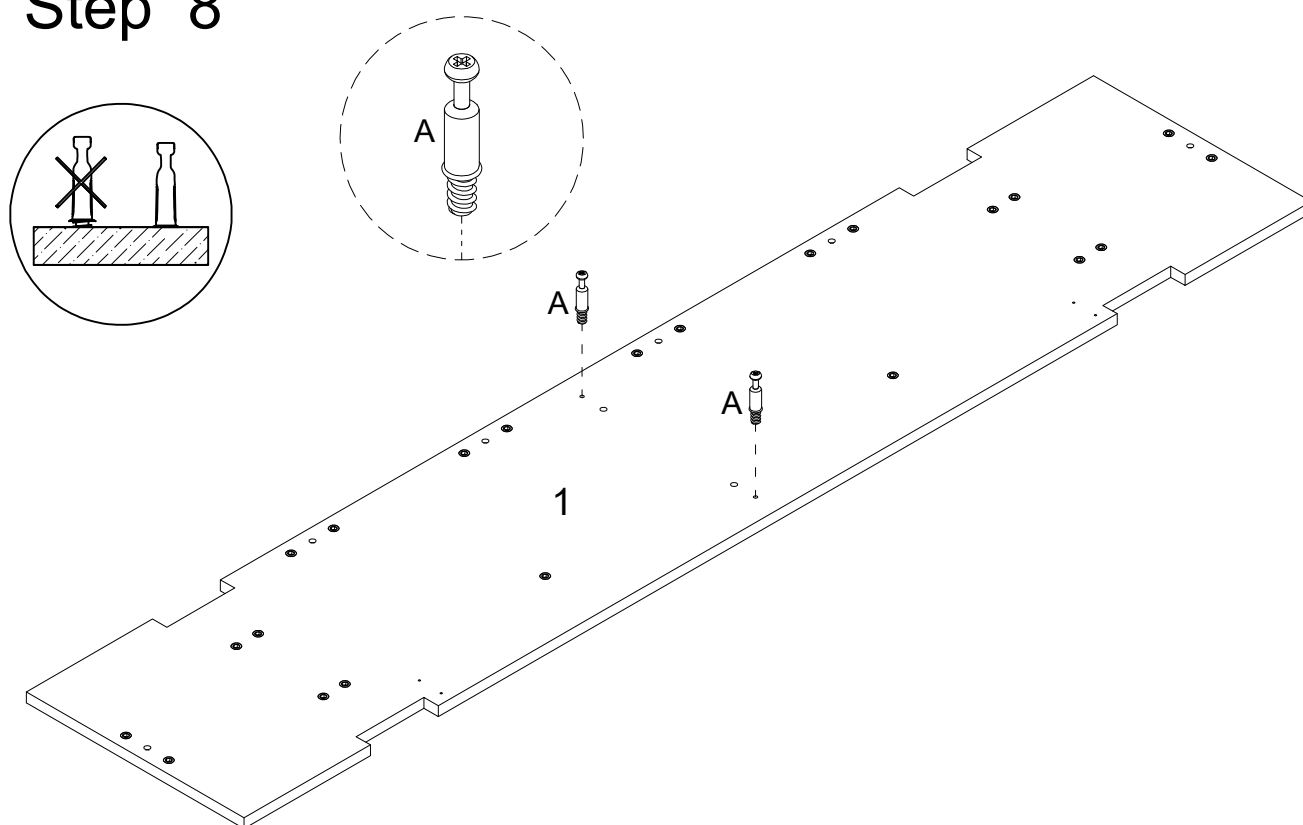


Step 9

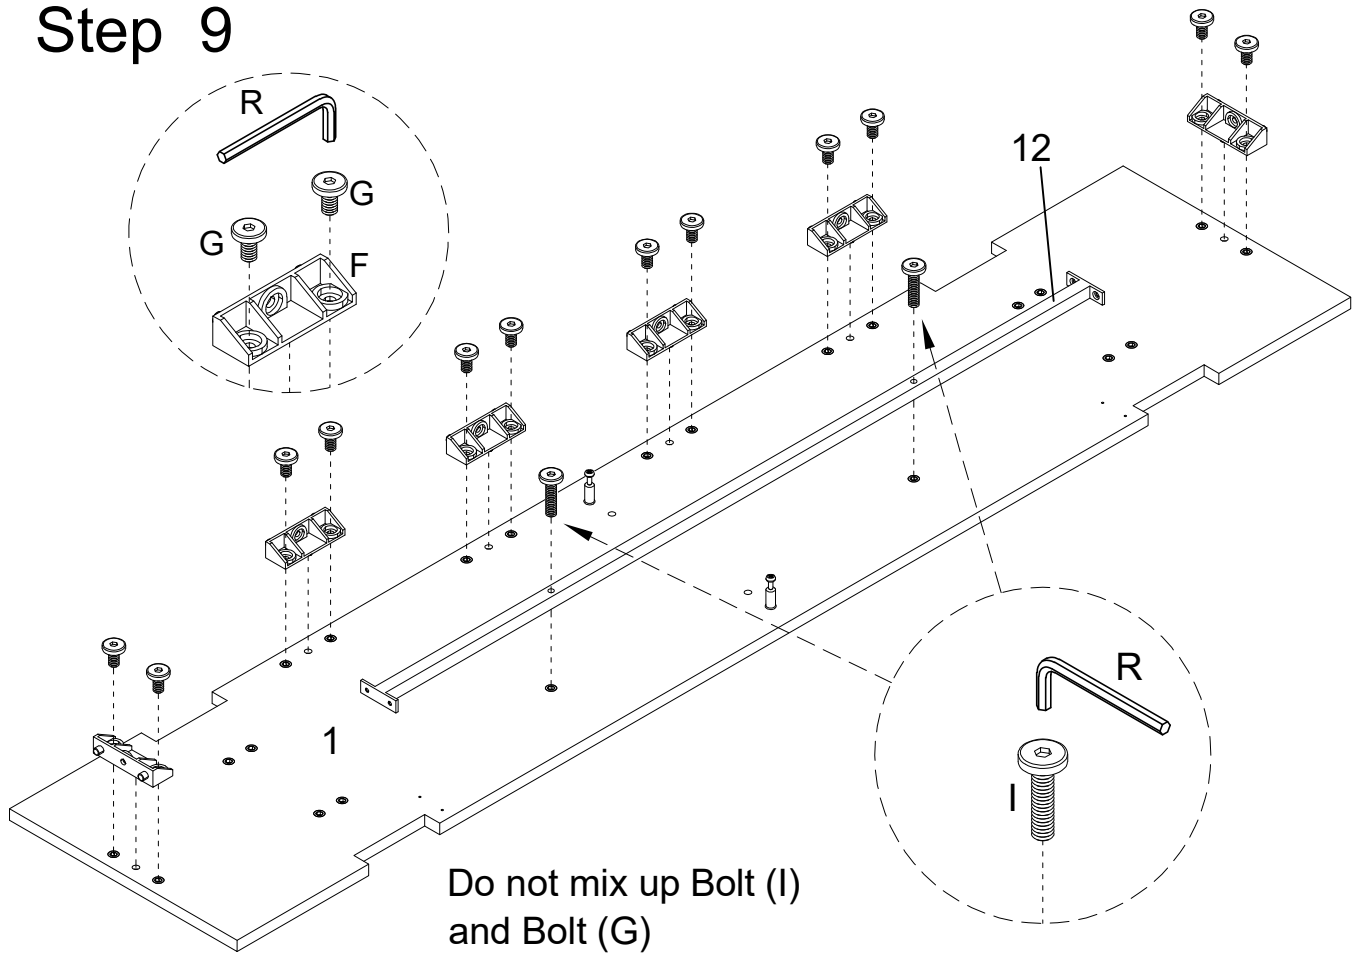


Step 10

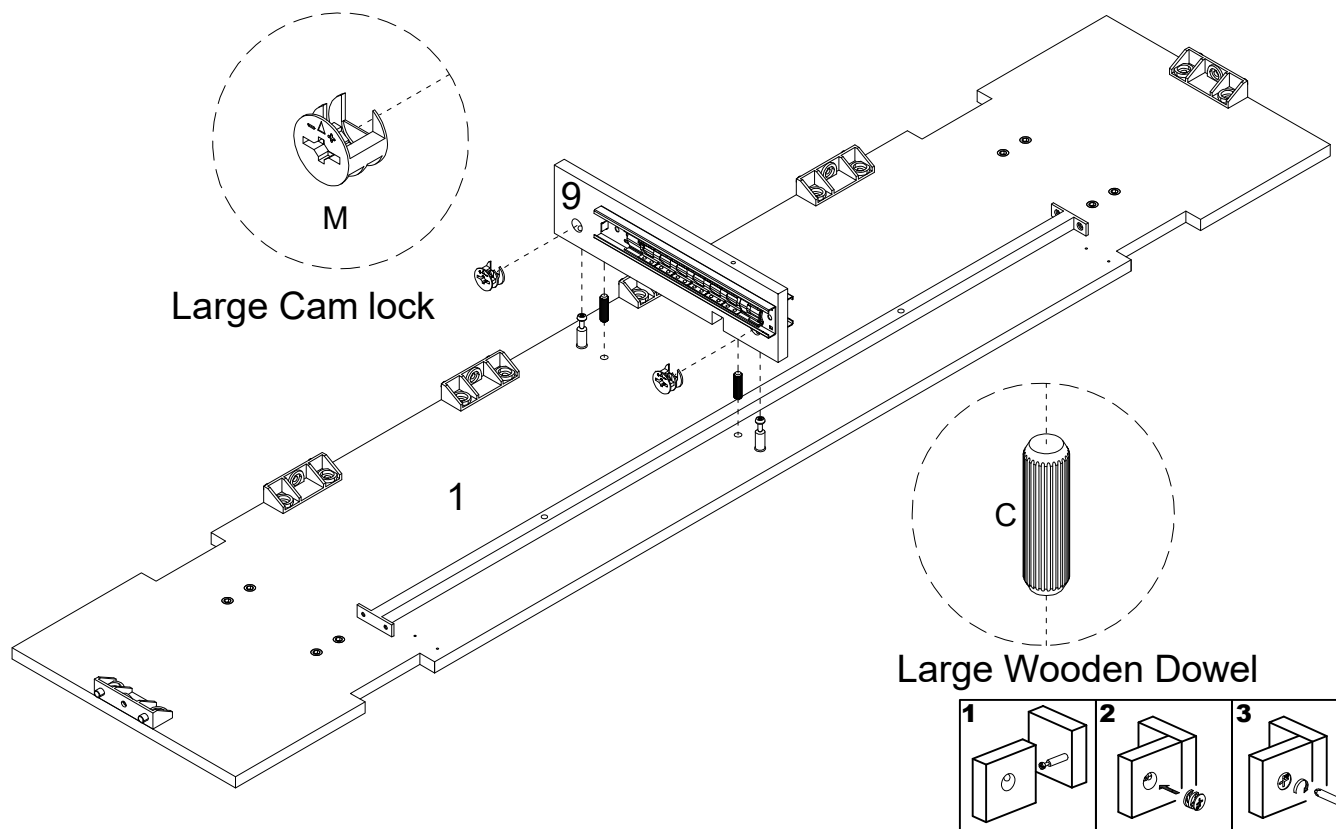

Step 11

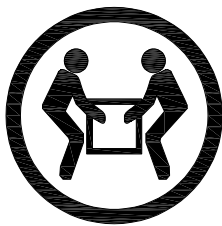


CAUTION: Heavy! You may need assistance with this step.

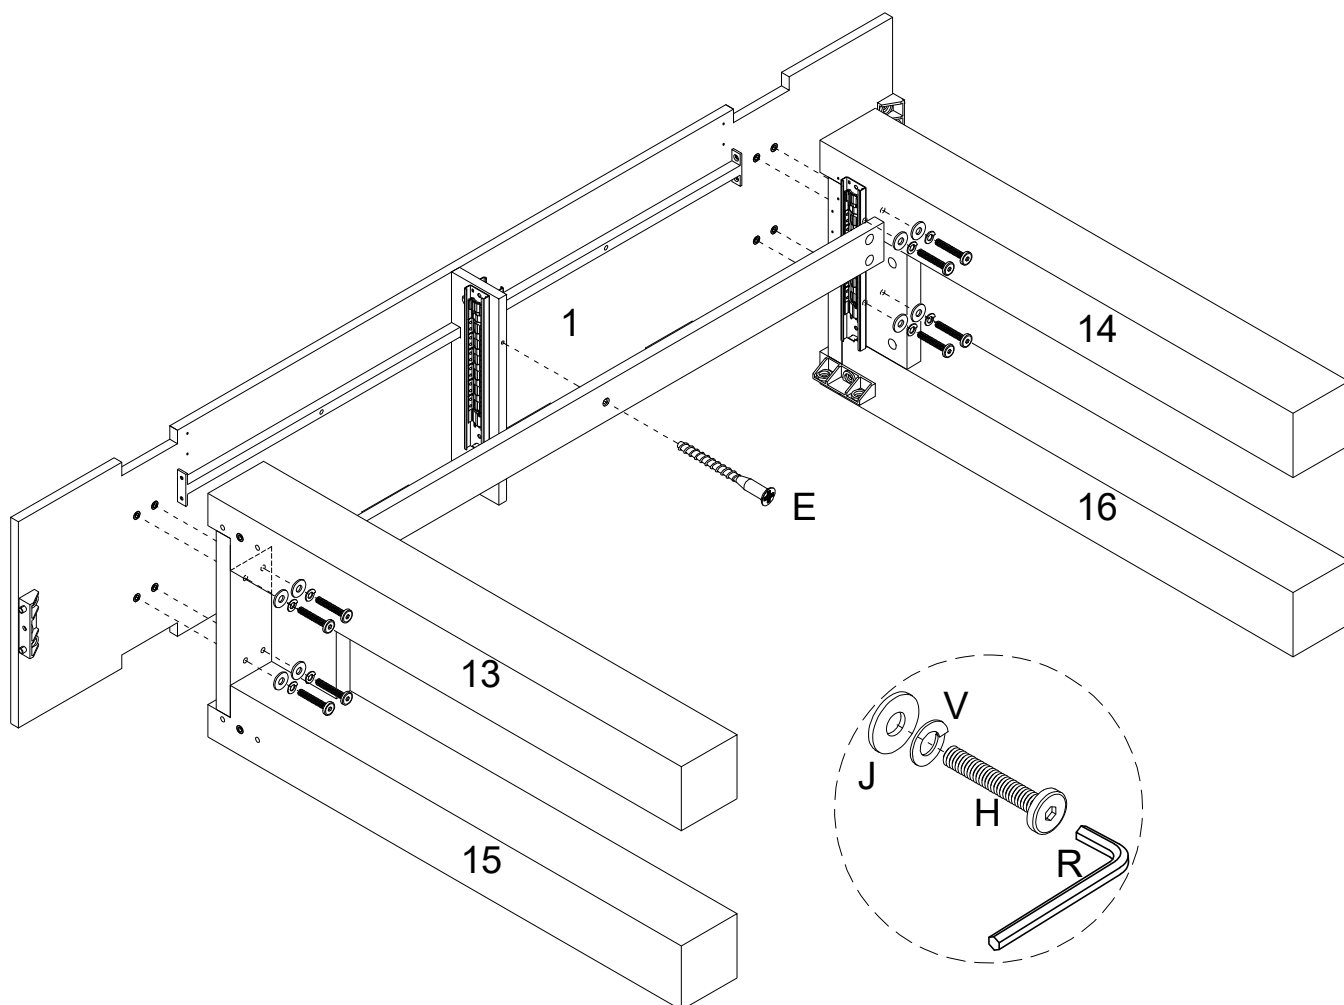


After aligning the bolts, tighten them


Step 12

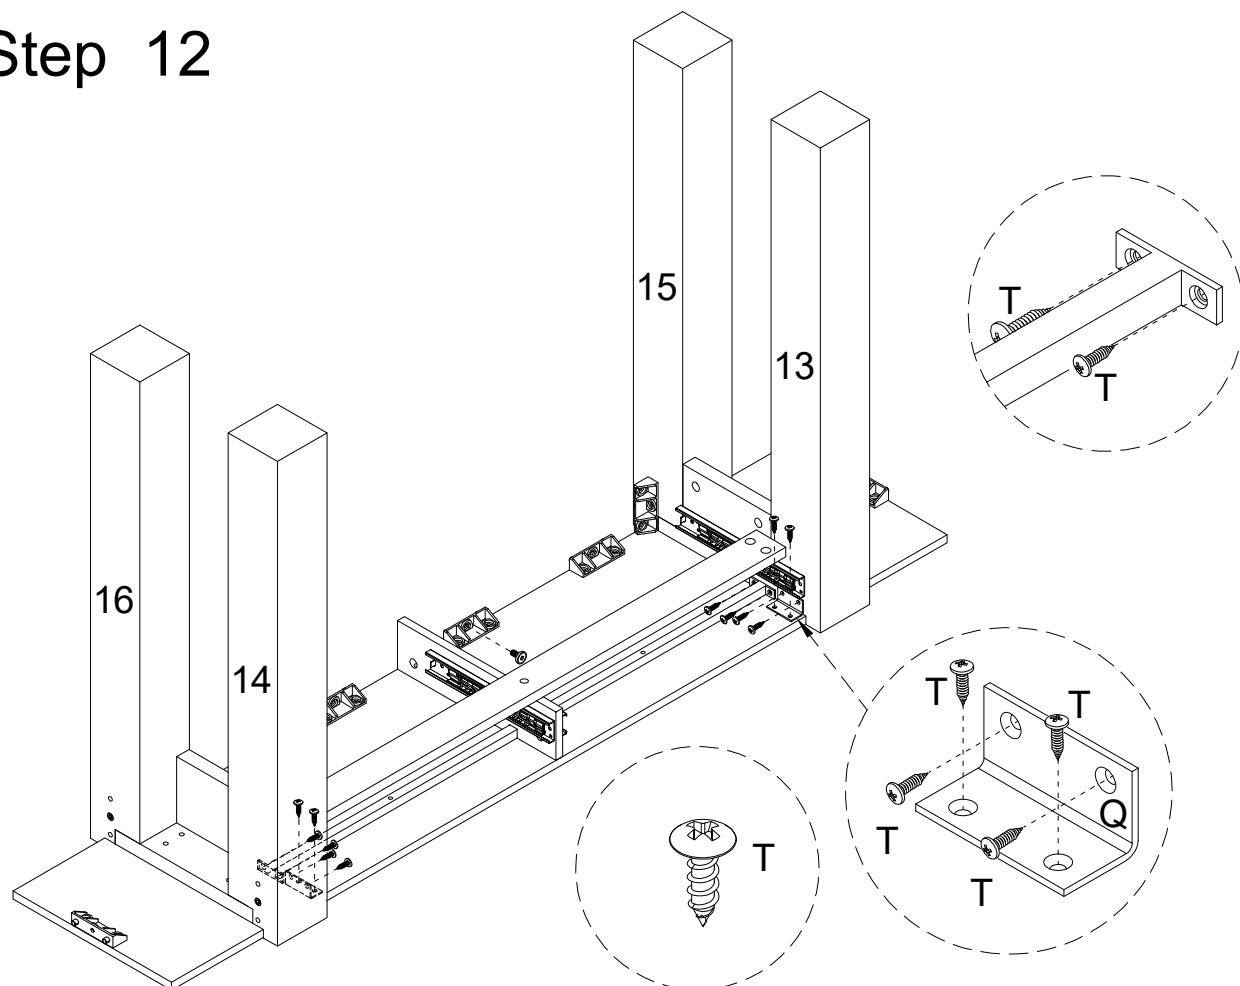

Step 13

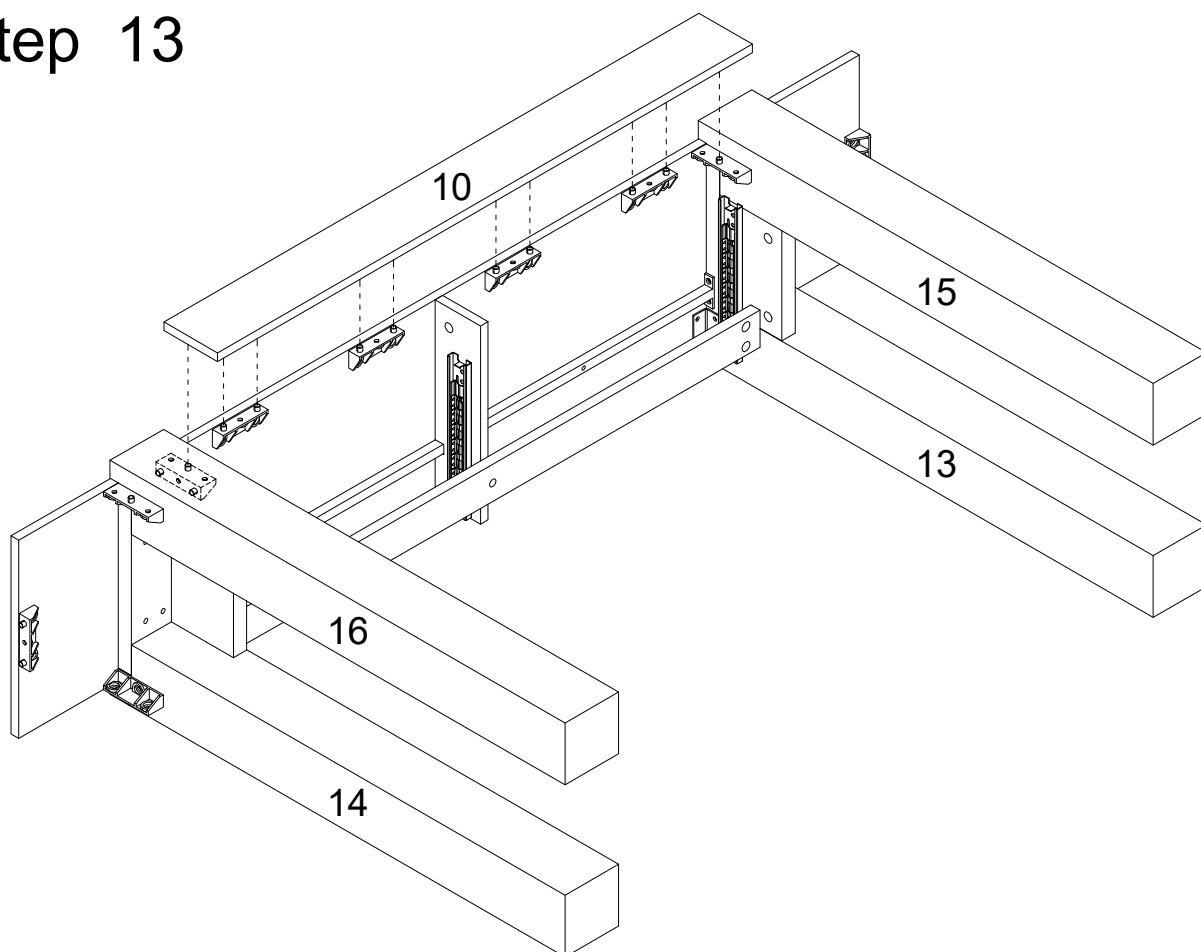


Step 14

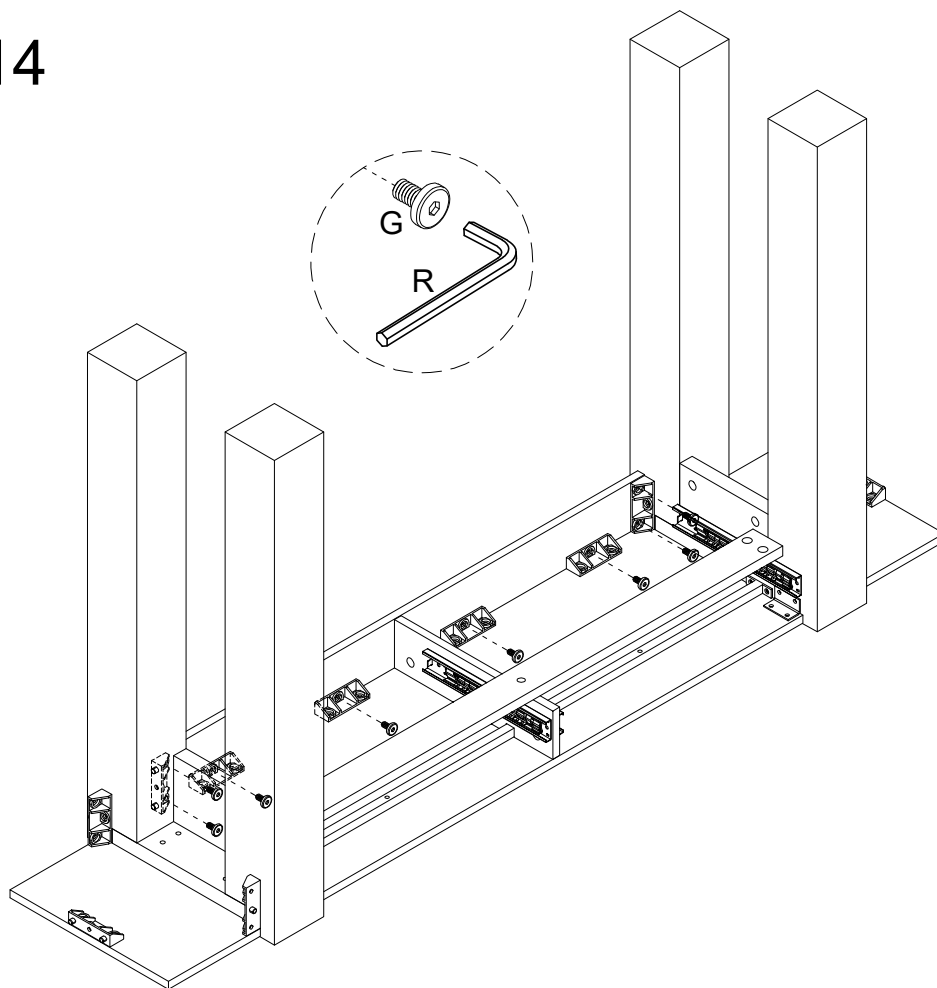

Step 15


x2

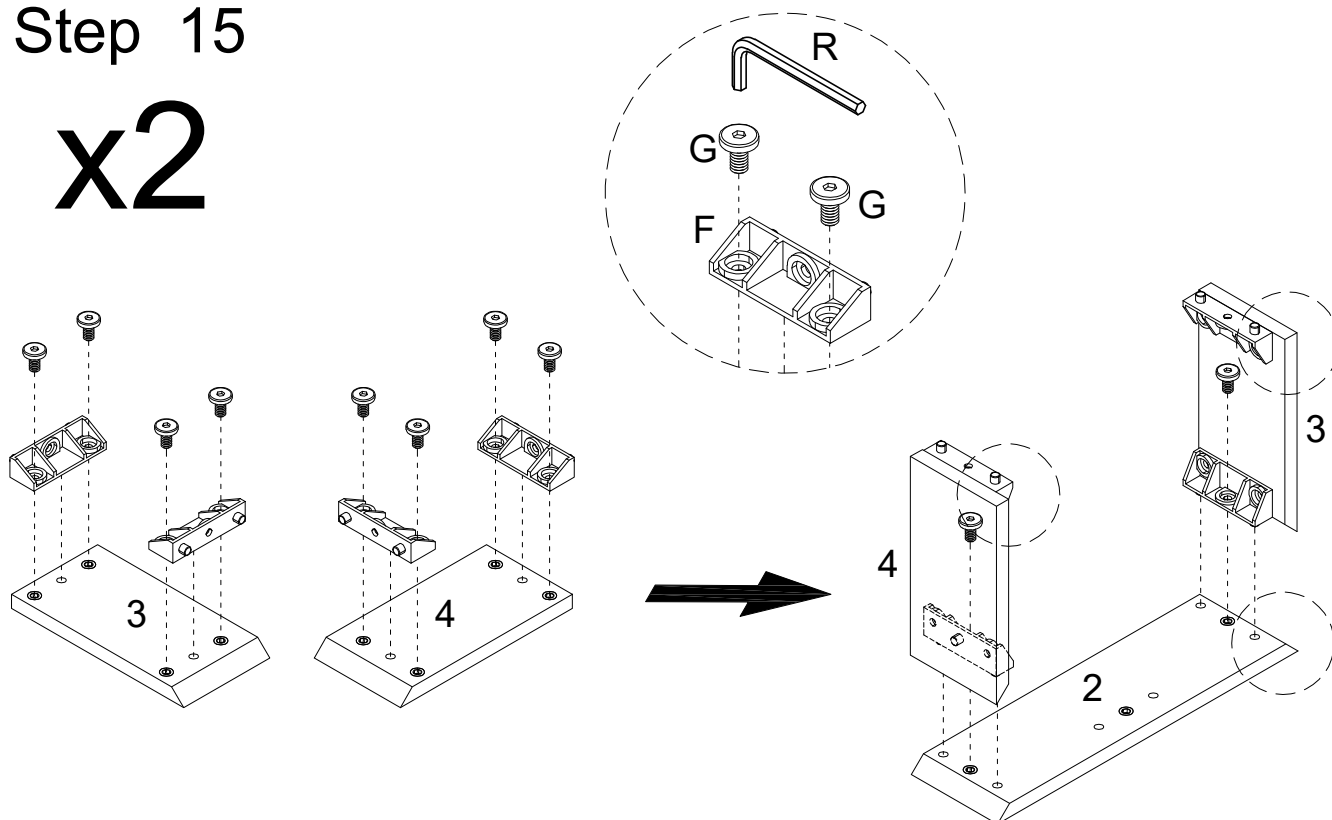


Note the orientation

Step 16



Note the orientation

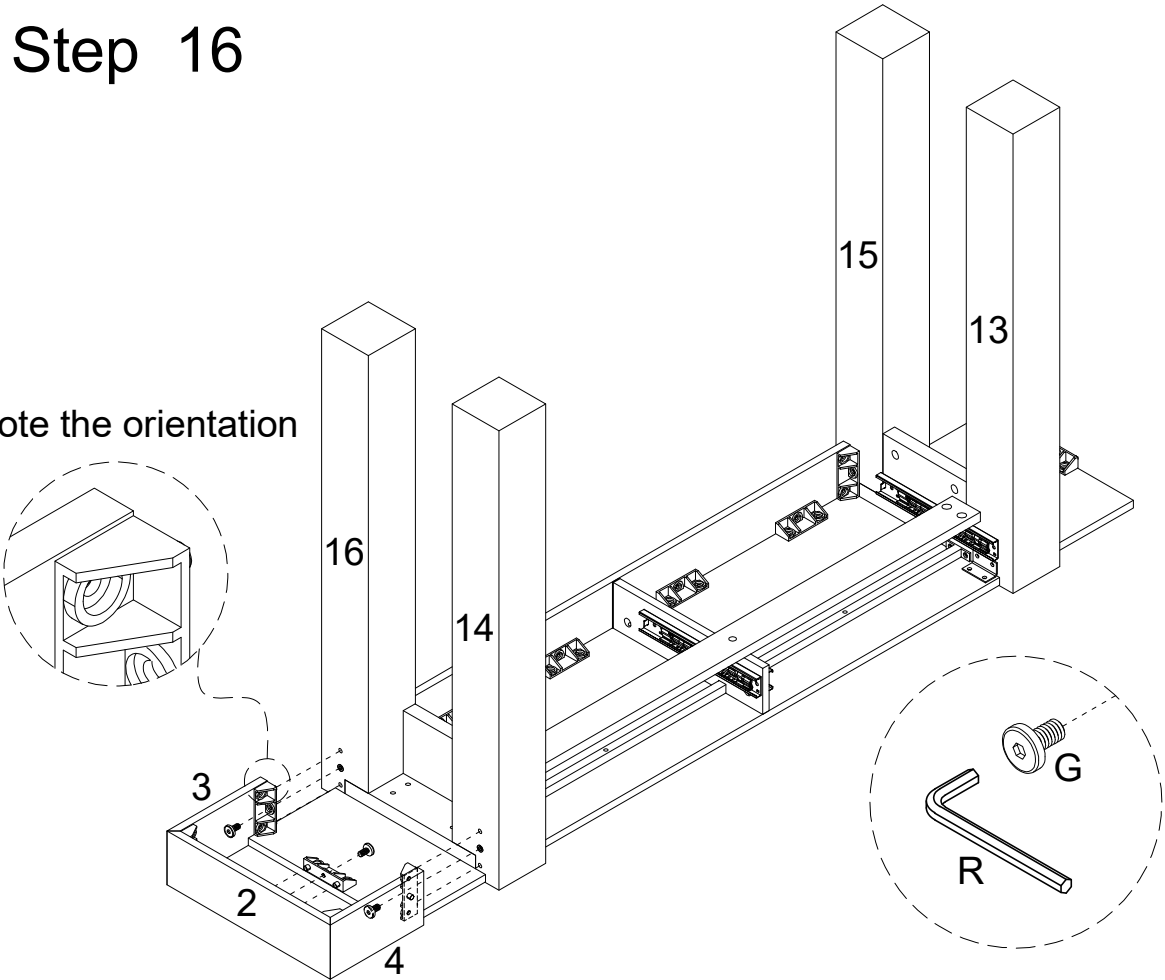

Step 17

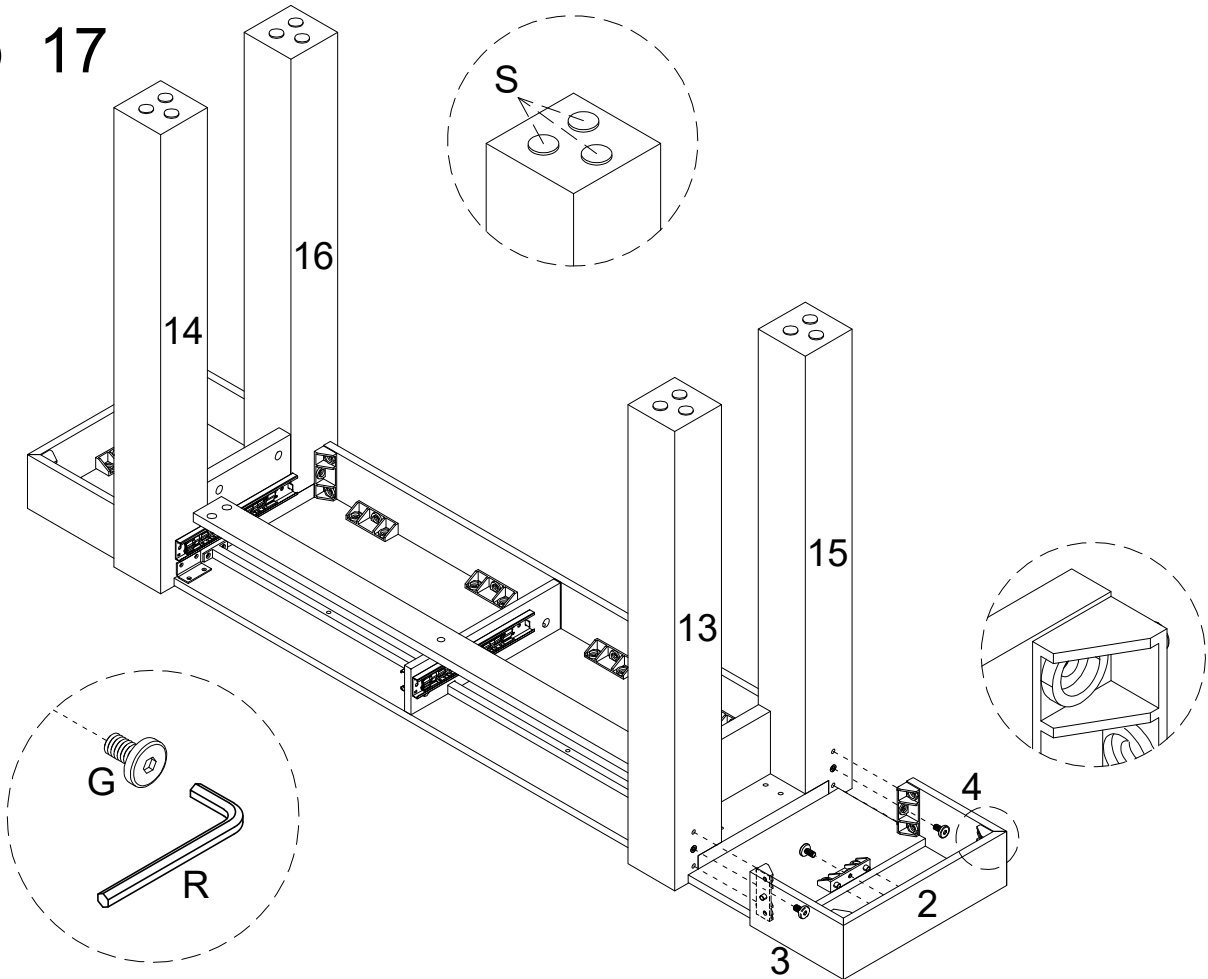


Step 18

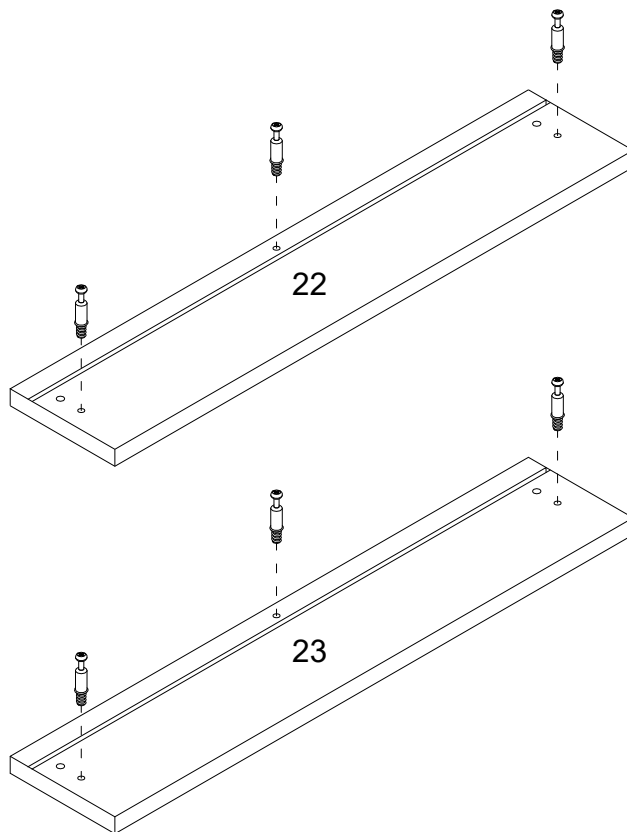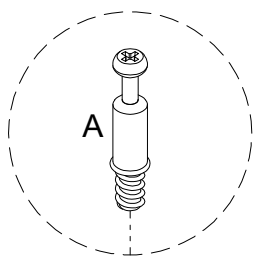


Step 19

x2



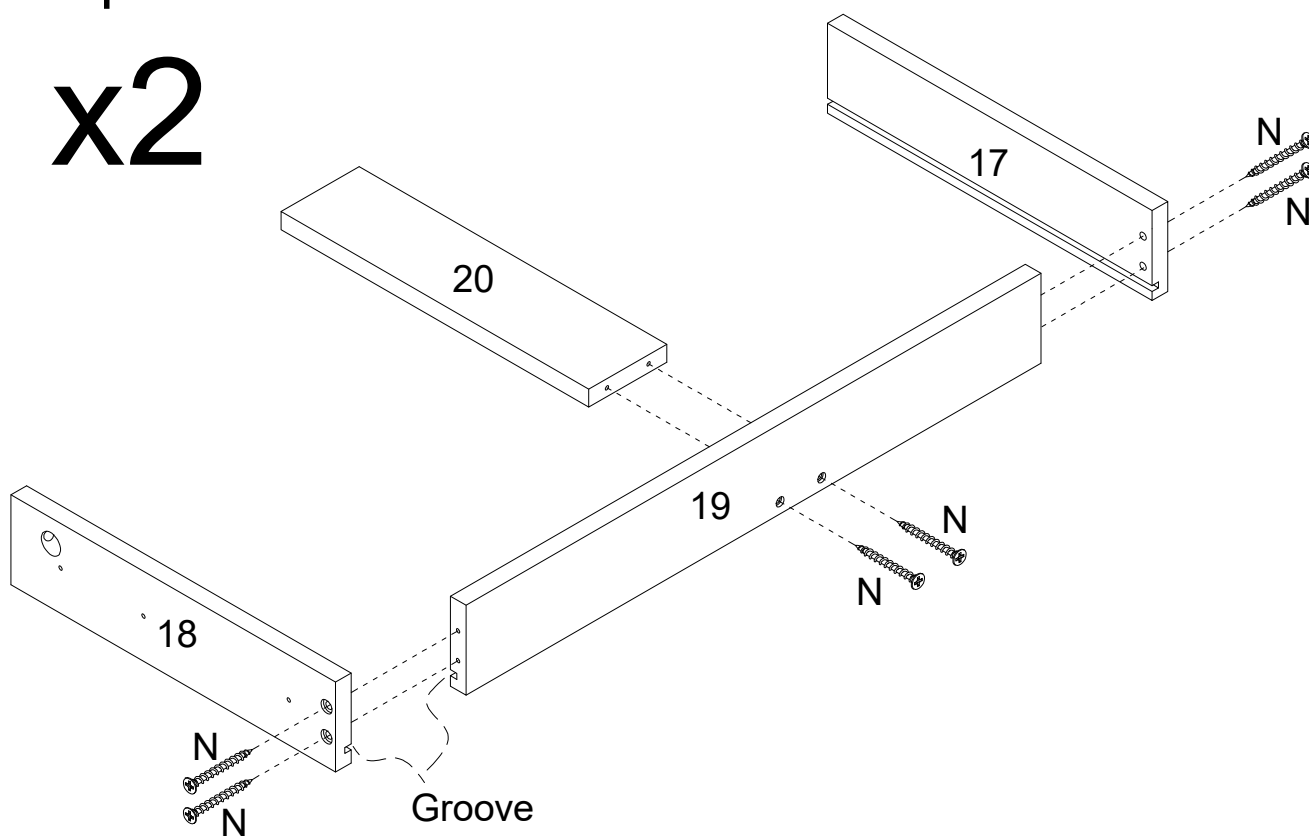


Step 20


x2

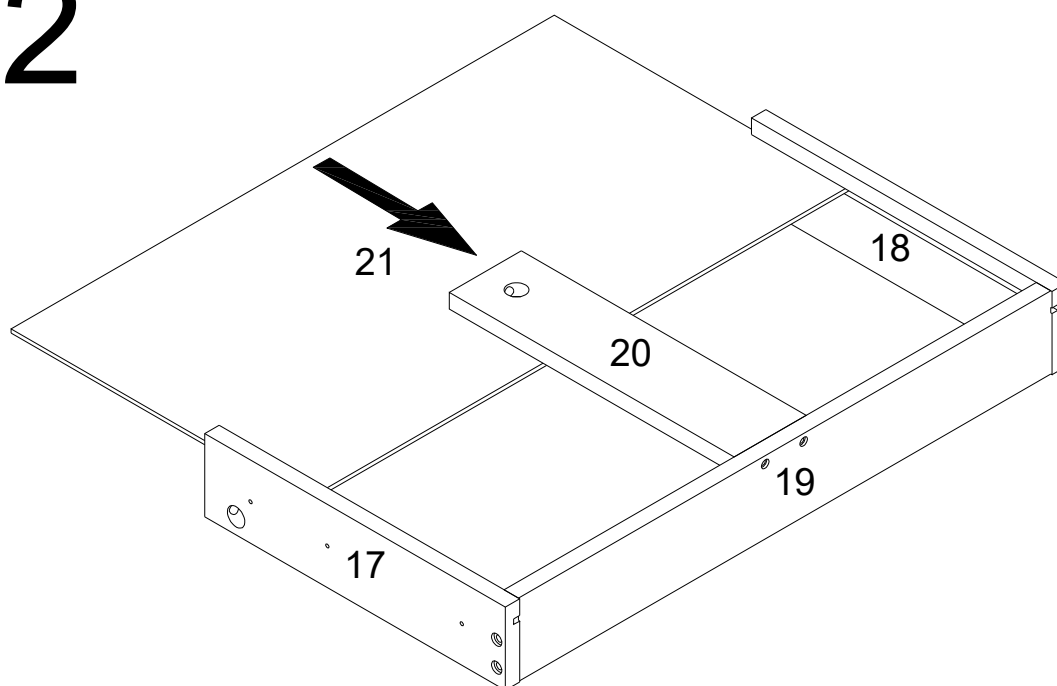

Step 21

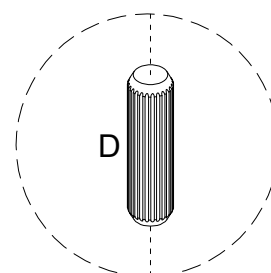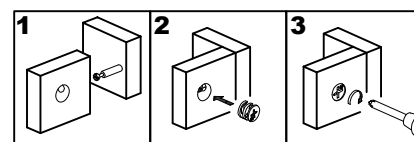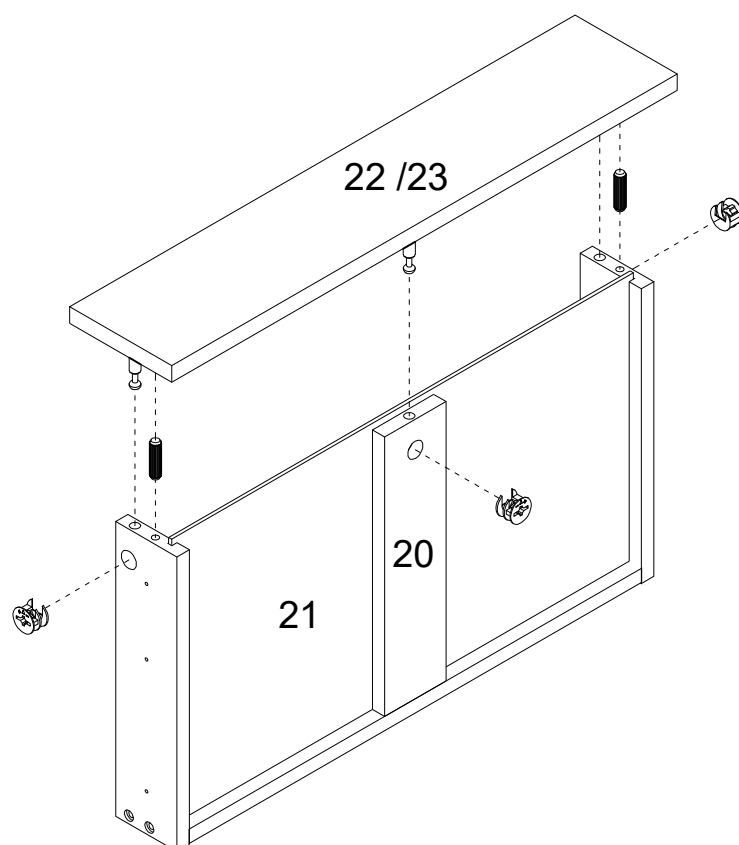


Small Wooden Dowel

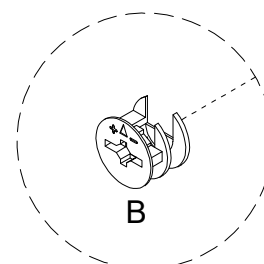


Small Cam lock


Step 22

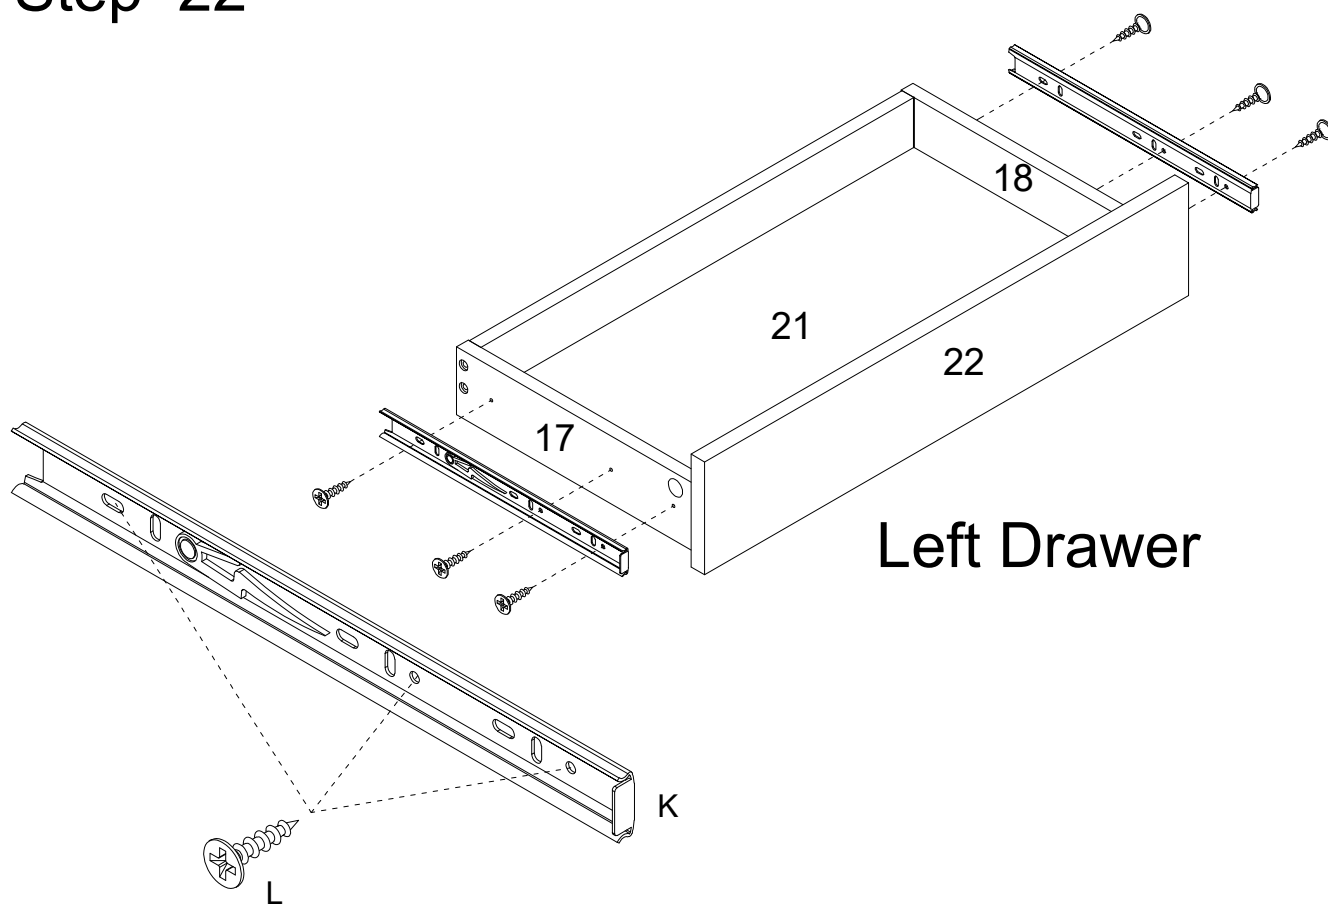


Step 23

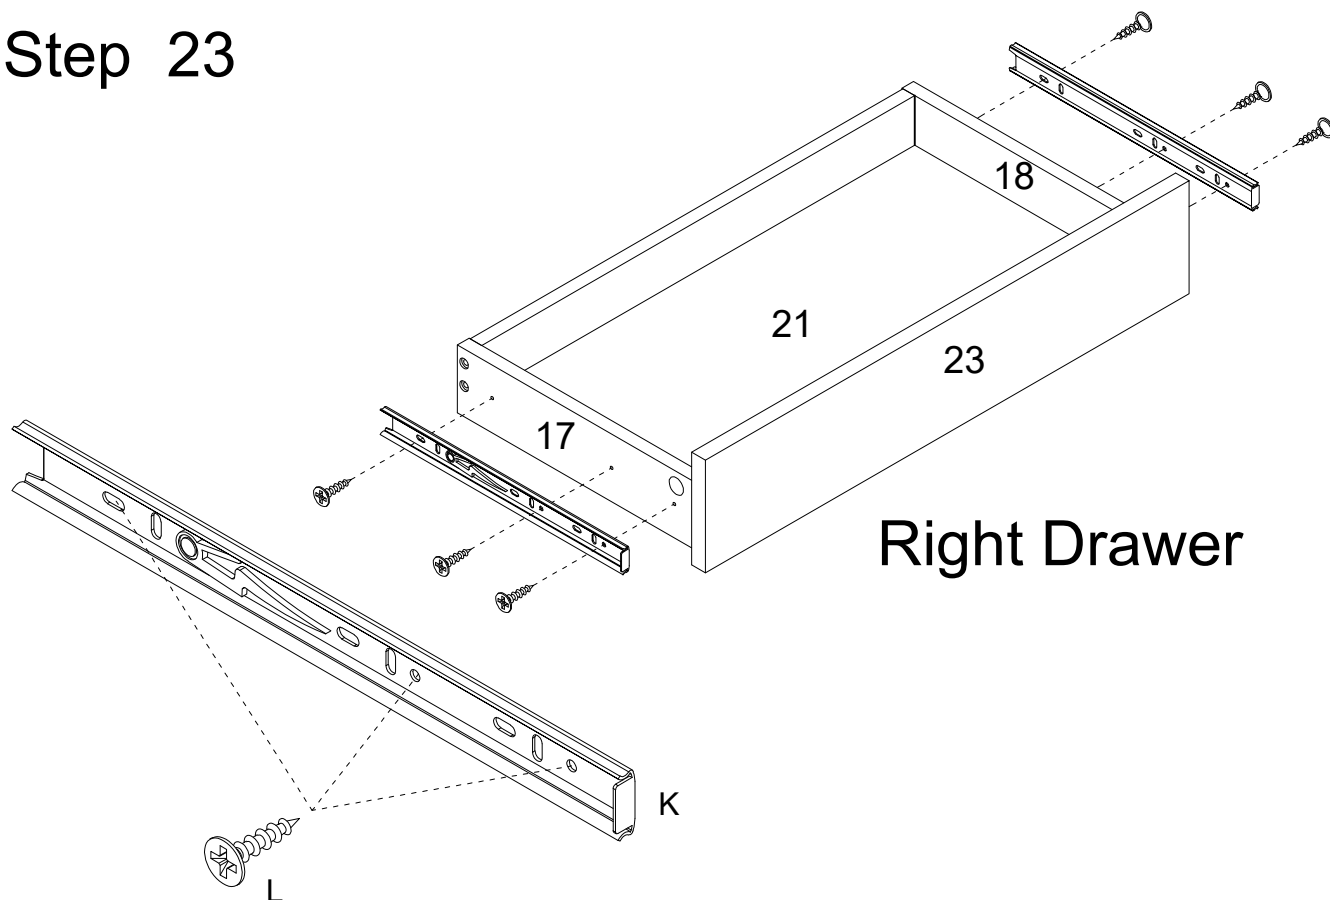

Step 24


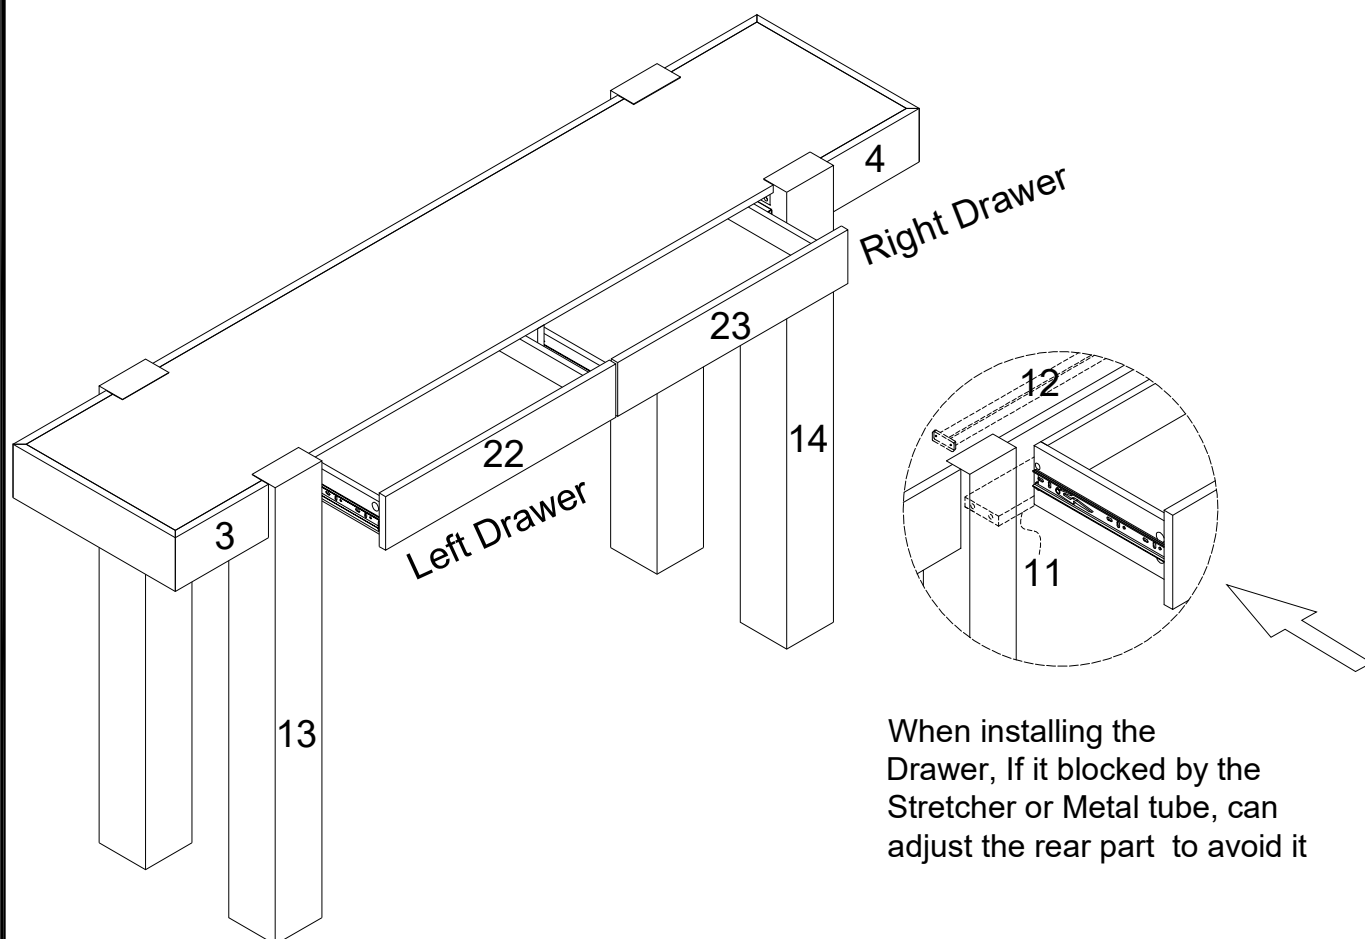


When installing the Drawer, If it blocked by the Stretcher or Metal tube, can adjust the rear part to avoid it

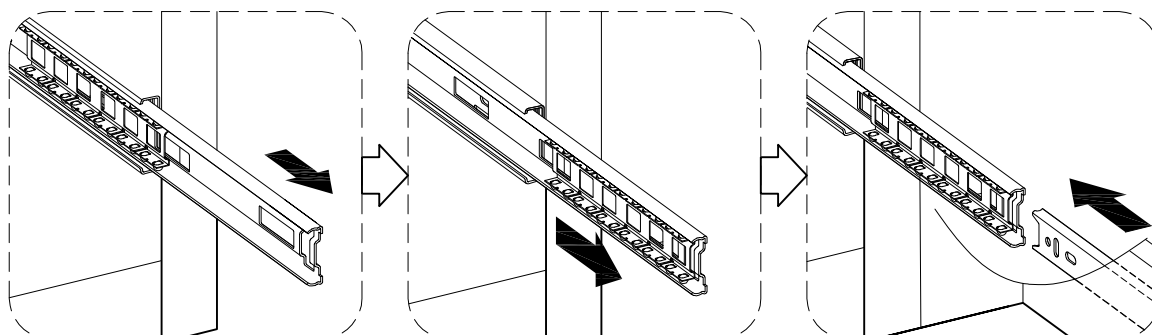


Step 25

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

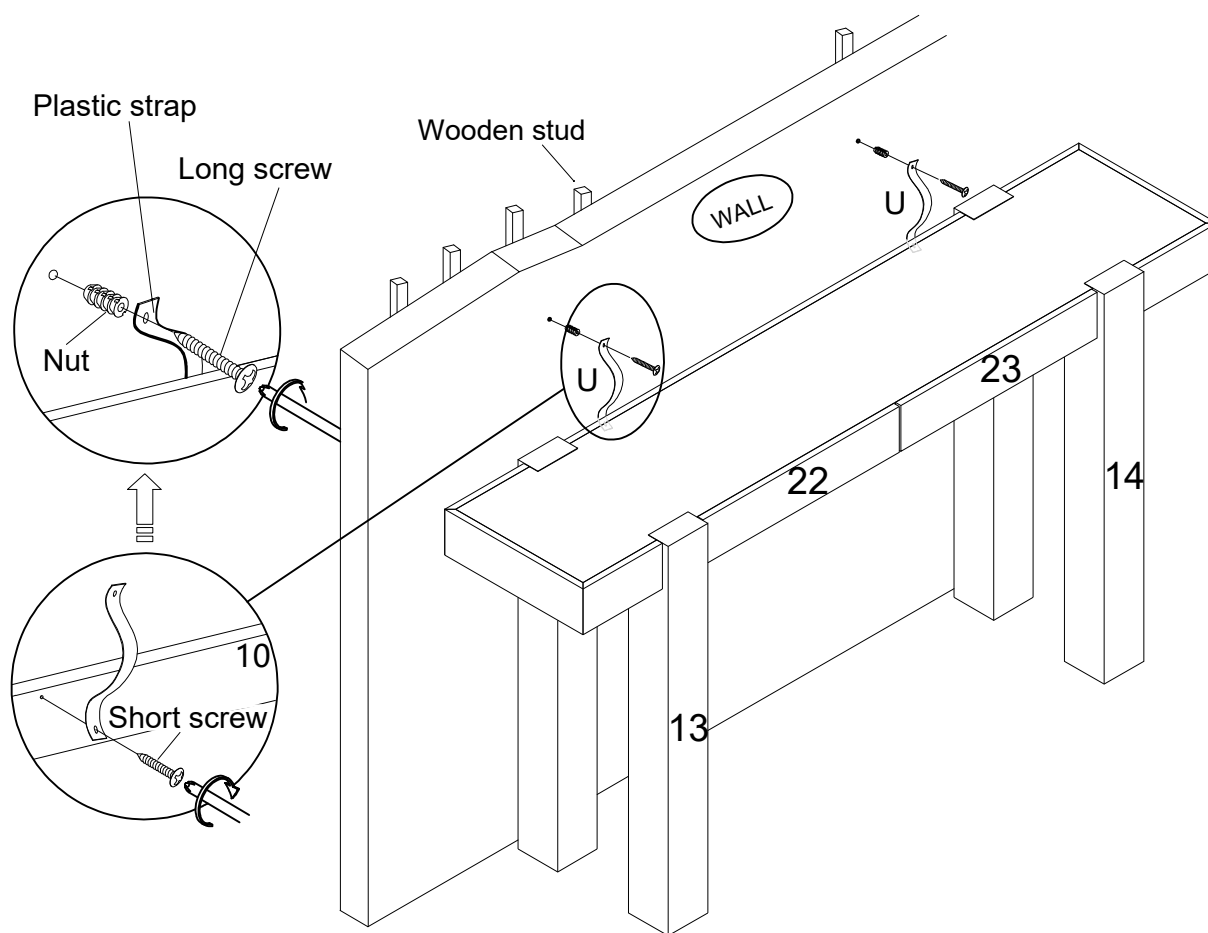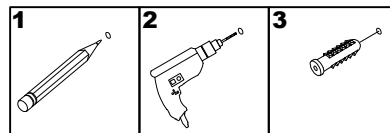

Step 26

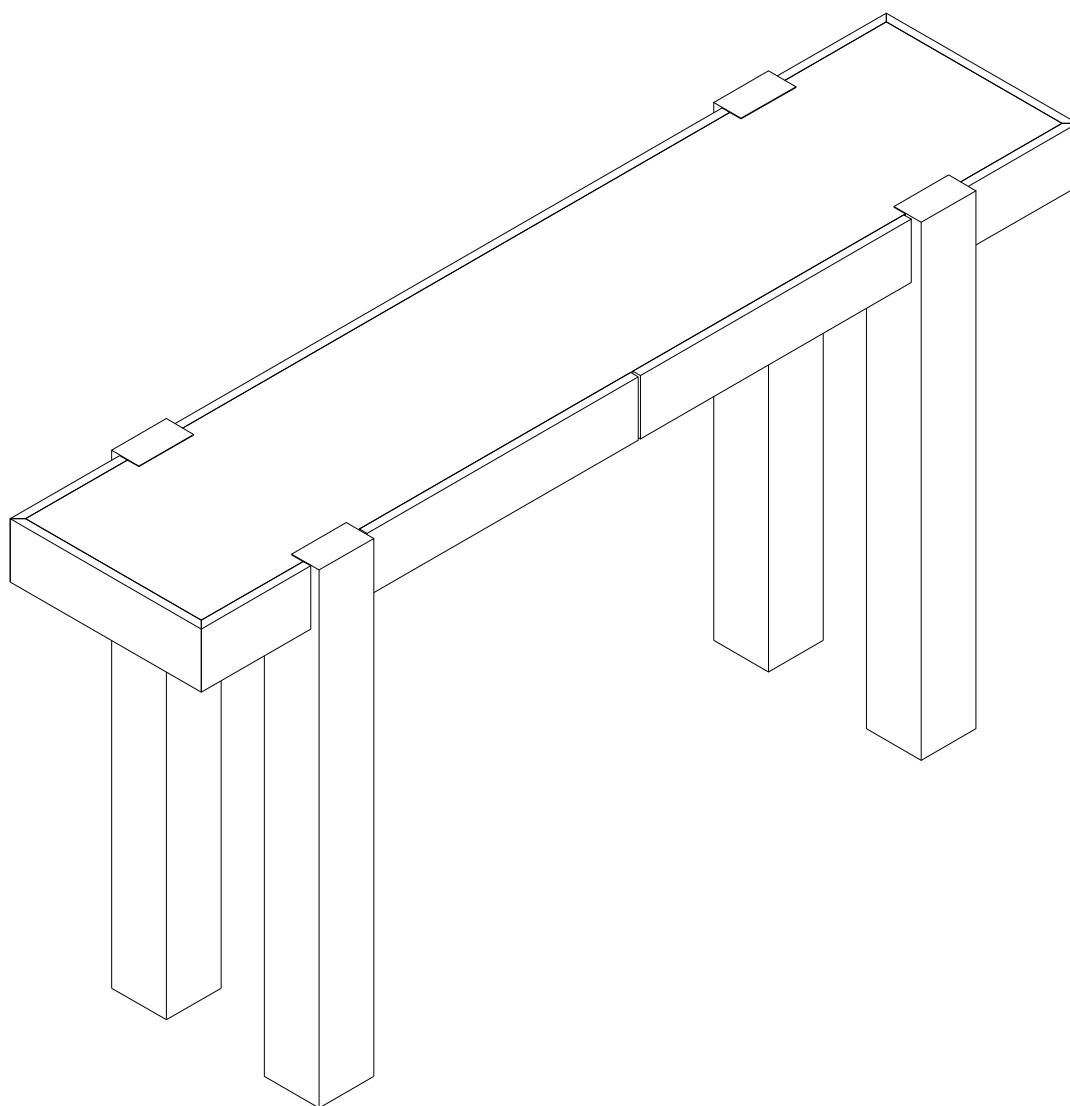

Final Assembly