


ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY-CABINET


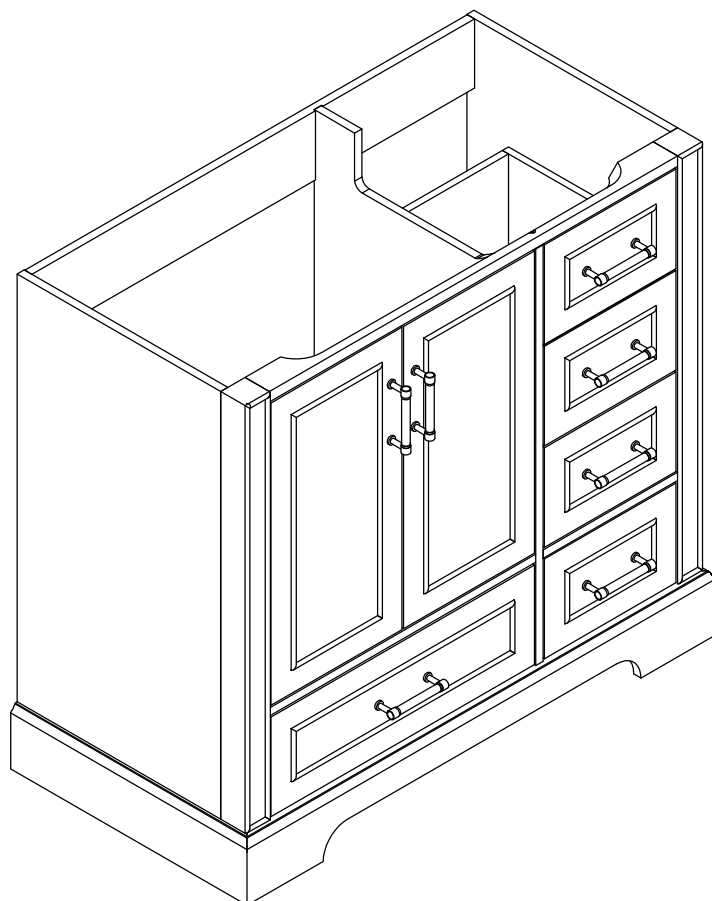


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

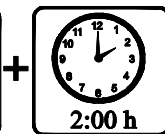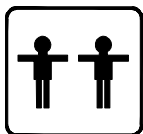

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation









Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions













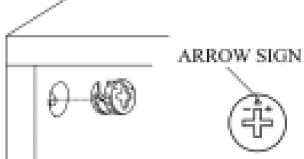
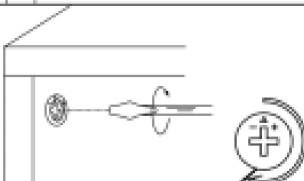
		Diagram A Insert Cam Bolt into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET







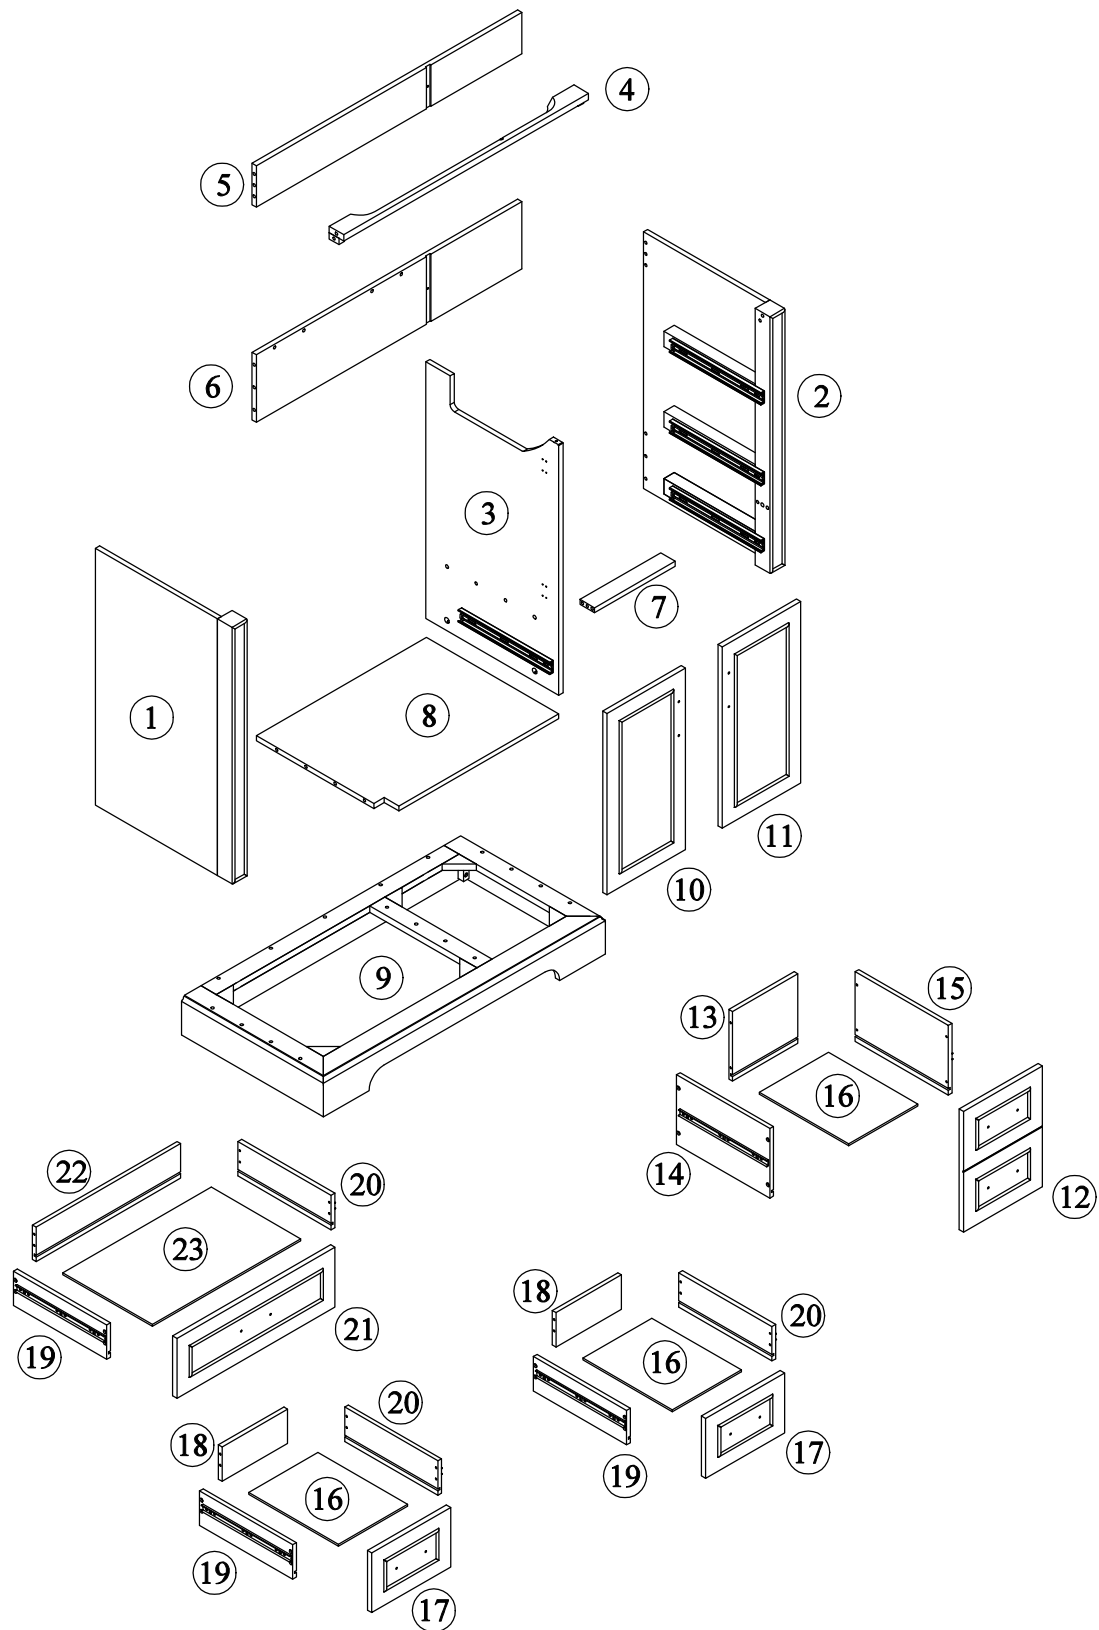


Identifying the Hardware-Identify the hardware using the illustrations below.







Part List

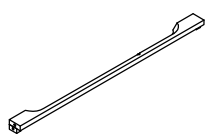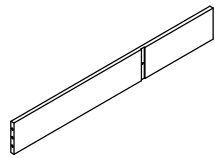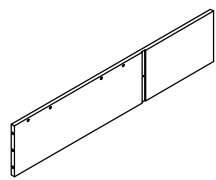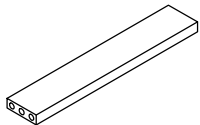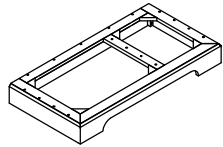1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (A) - 1pc		Top Bar Front- 1pc
5		6	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
7		8	
	Mid Bar Front- 1pc		Mid Panel (B) - 1pc
9		10	
	Bottom Frame - 1pc		Cabinet Door (L) - 1pc
11		12	
	Cabinet Door (R) - 1pc		Top Drawer Face - 1pc
13		14	
	Top Drawer Back Panel - 1pc		Top Drawer Side Panel (L) - 1pc

Part List

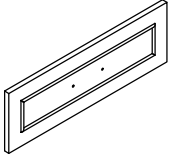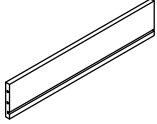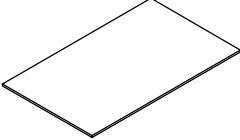
15		16	
	Top Drawer Side Panel (R) - 1pc		Bottom Drawer Panel (A) - 3pcs
17		18	
	Bottom Drawer Face - 2pcs		Bottom Drawer Back Panel - 2pcs
19		20	
	Bottom Drawer Side Panel (L) - 3pcs		Bottom Drawer Side Panel (R) - 3pcs
21		22	
	Drawer Face Long - 1pc		Long Drawer Back Panel - 1pc
23			
	Bottom Drawer Panel (B) - 1pc		

Hardware List


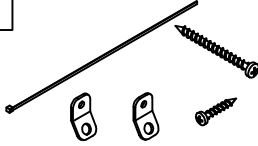
A  $\varnothing 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts(2pcs)	B  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer(2pcs)	C  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts(25pcs)
D  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock(25pcs)	E  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw(3pcs)	F  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw(32pcs)
G  Handle (7pcs)	H  $\varnothing 5/32" \times 15 \text{mm}$ Handle screw (6pcs)	I  $\varnothing 5/32" \times 28 \text{mm}$ Handle screw (8pcs)
J  Damping hinge (4pcs)	K  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw(24pcs)	L  $\varnothing 8 \times 30 \text{mm}$ Wood dowel(24pcs)
M  4mm Allen key(1pc)	N  Anti fall hardware(1set)	

STEP: 1



C



25PCS

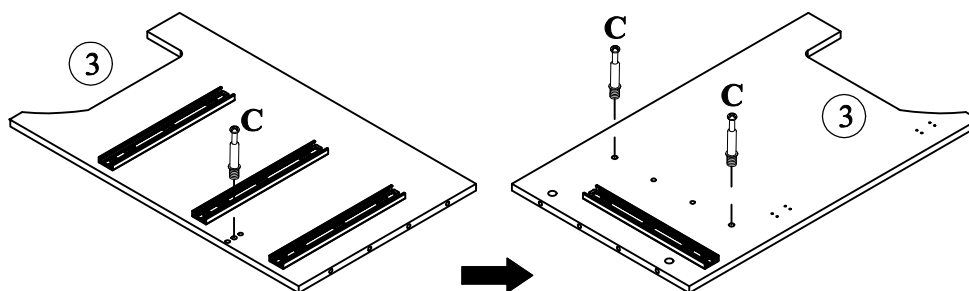
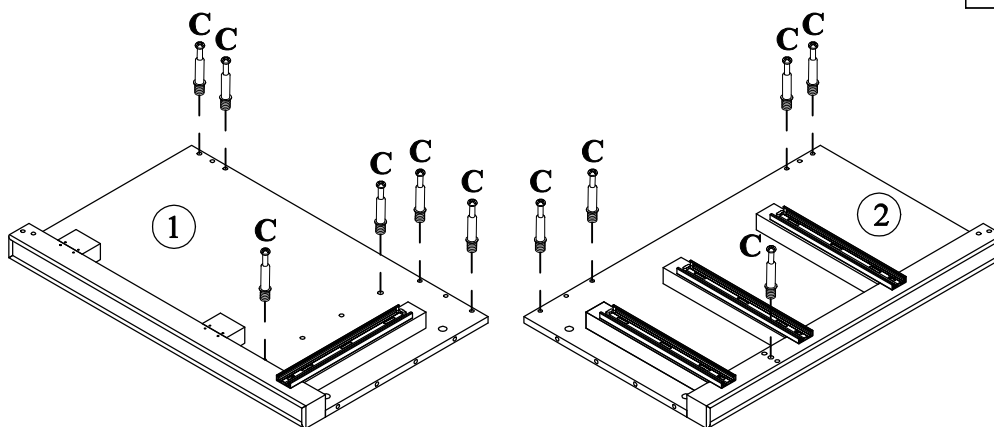


Turn over and install screw (C)

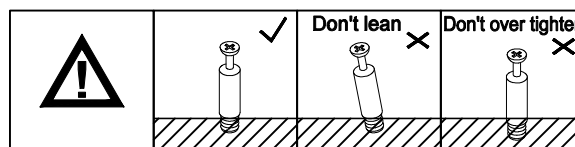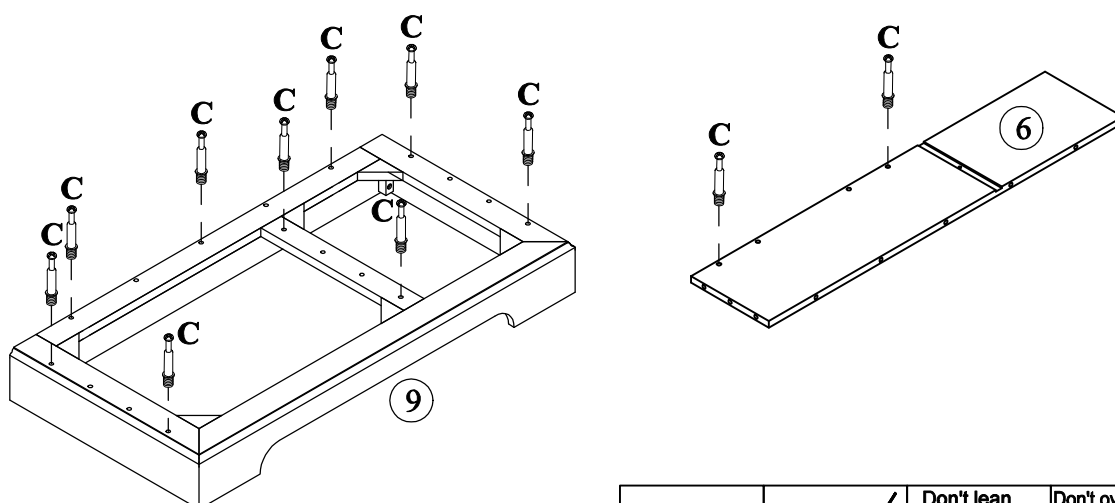


STEP: 2

D	L
	
2PCS	2PCS

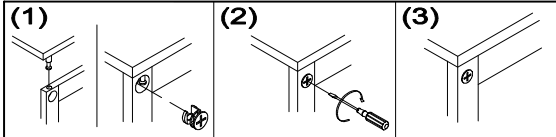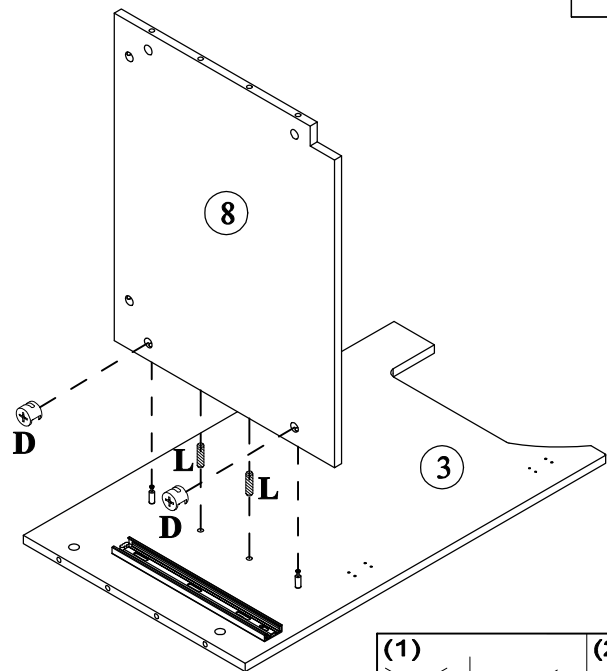



STEP: 3

D	L
	
2PCS	2PCS
E	
	
	2PCS

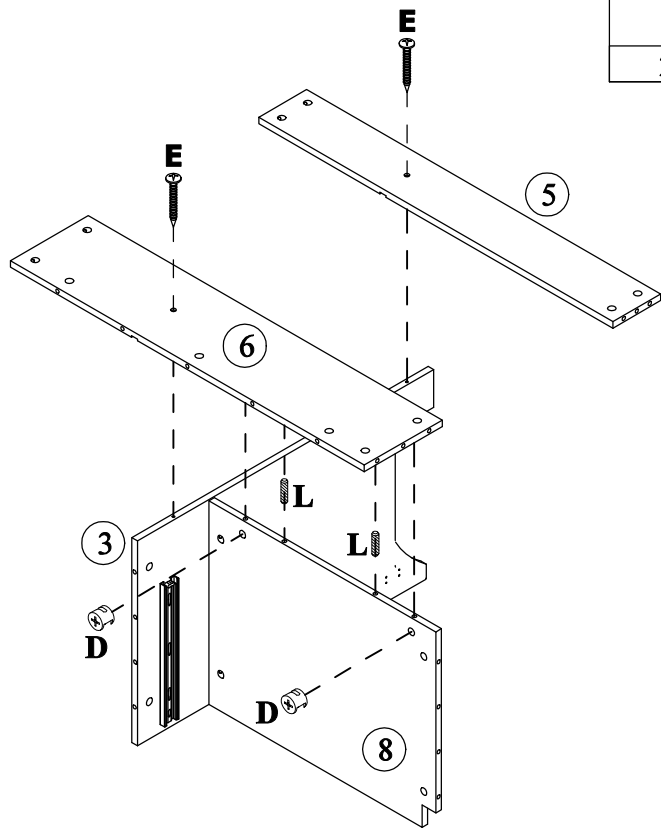


STEP: 4

A		B		D	
1PC		1PC		6PCS	
			L		
			7PCS		

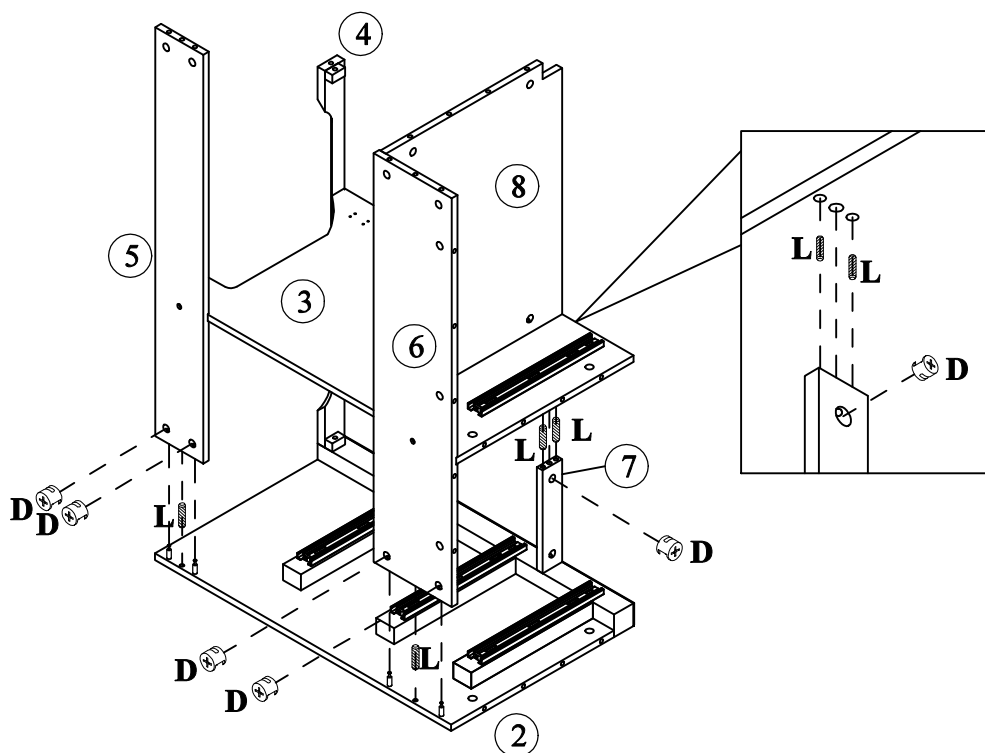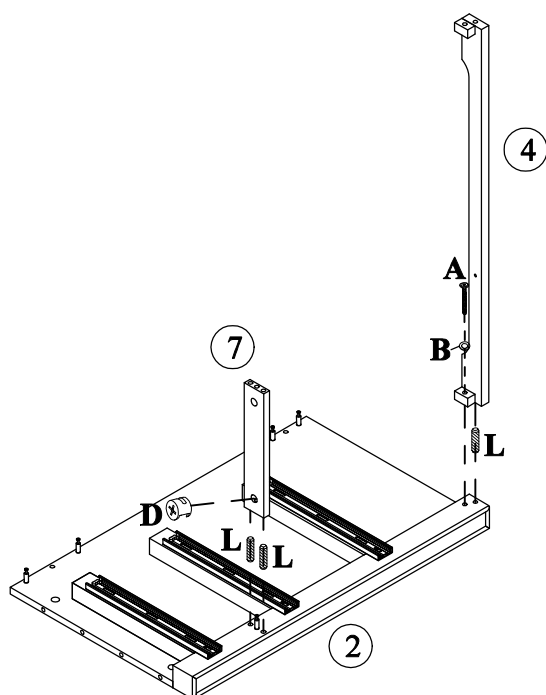


STEP: 5

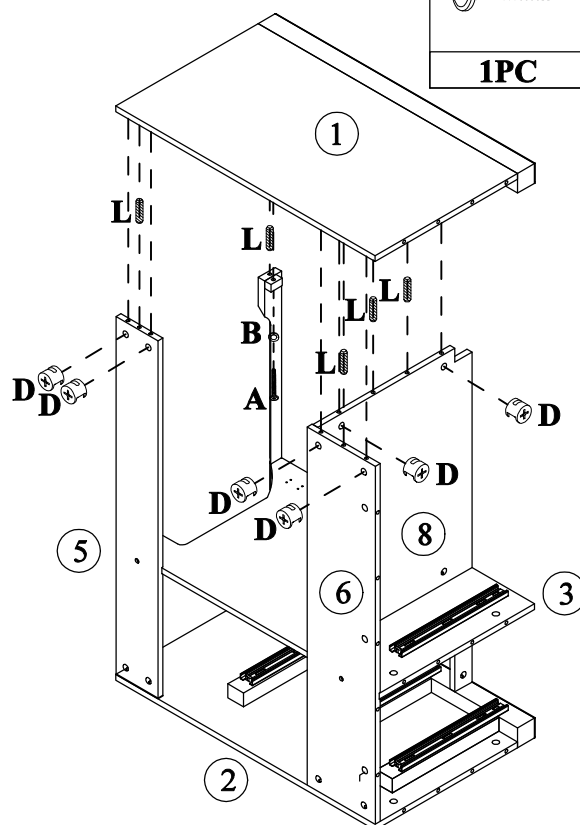

A	B	D
		
1PC	1PC	6PCS
L		
		
5PCS		

STEP: 6



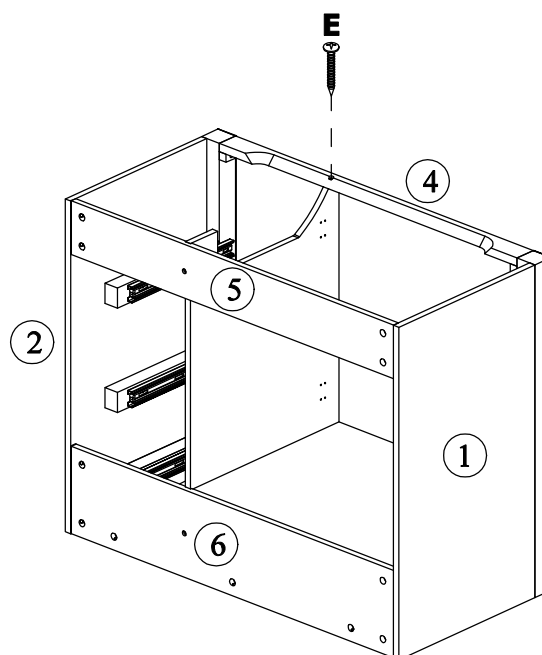


E

1PC



STEP: 7

D	L
	
9PCS	8PCS

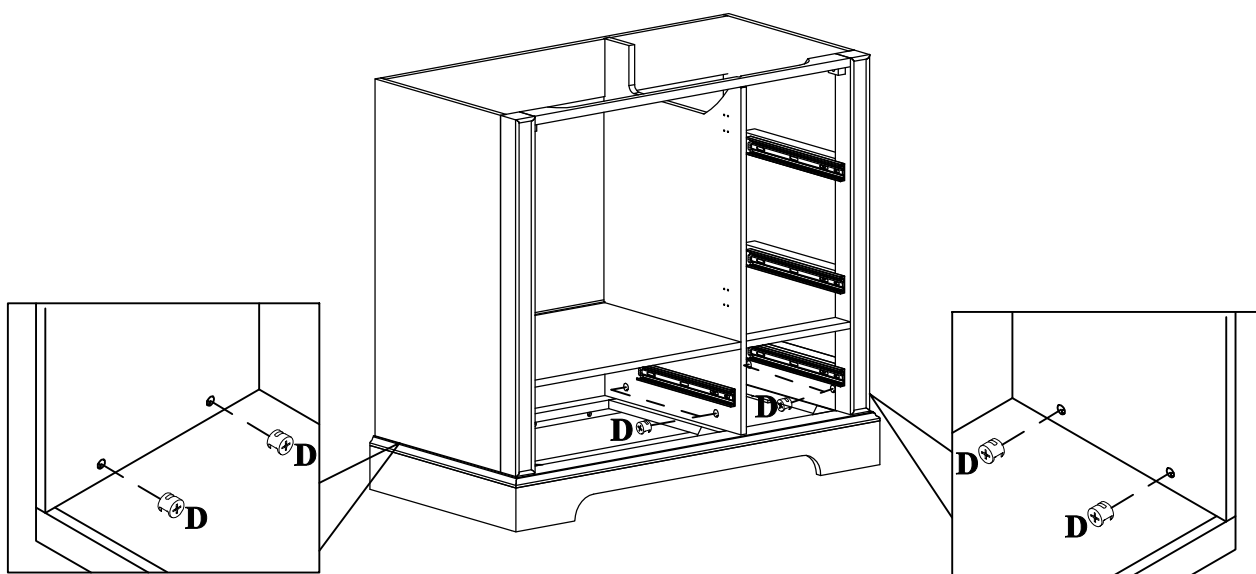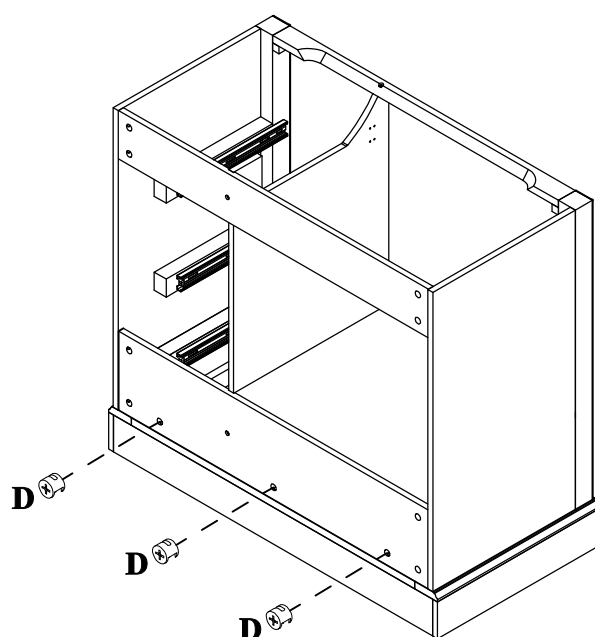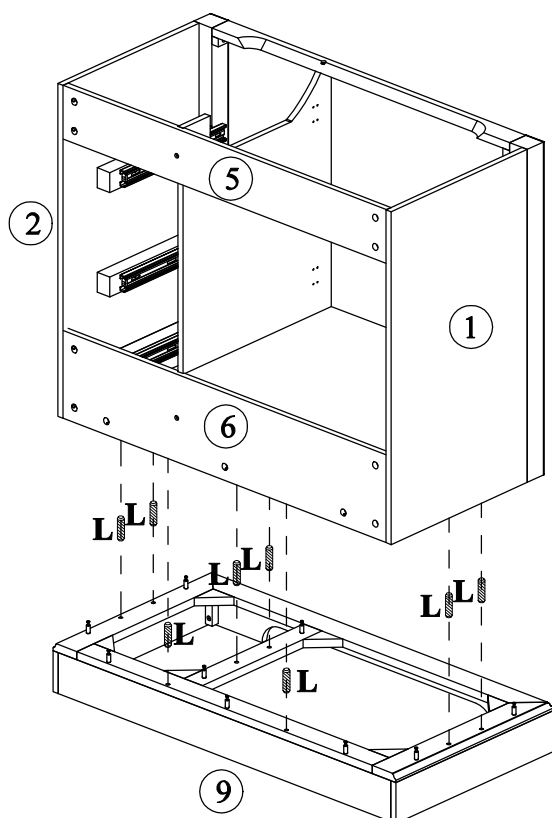



STEP: 8

J	K
	
4PCS	8PCS

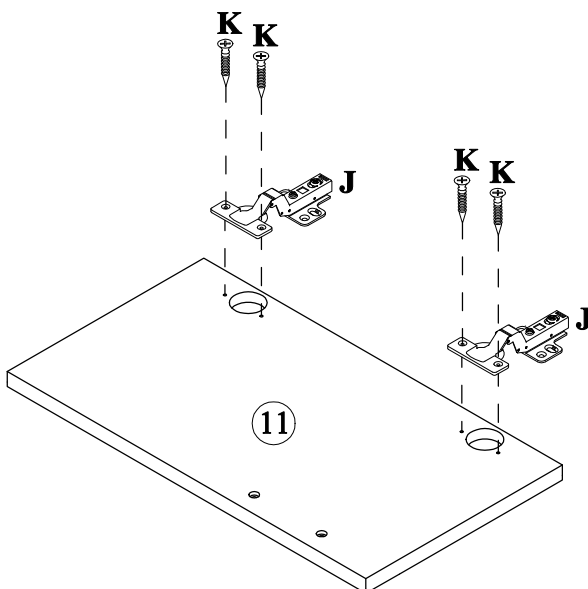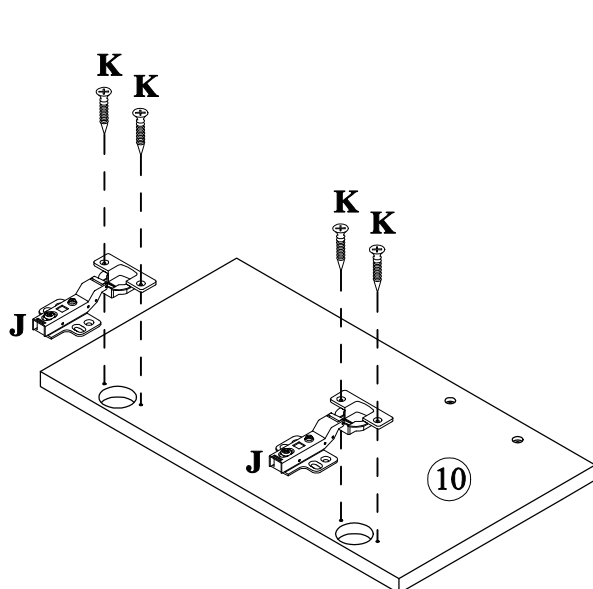


STEP: 9


G	H	K
		
2PCS	4PCS	16PCS

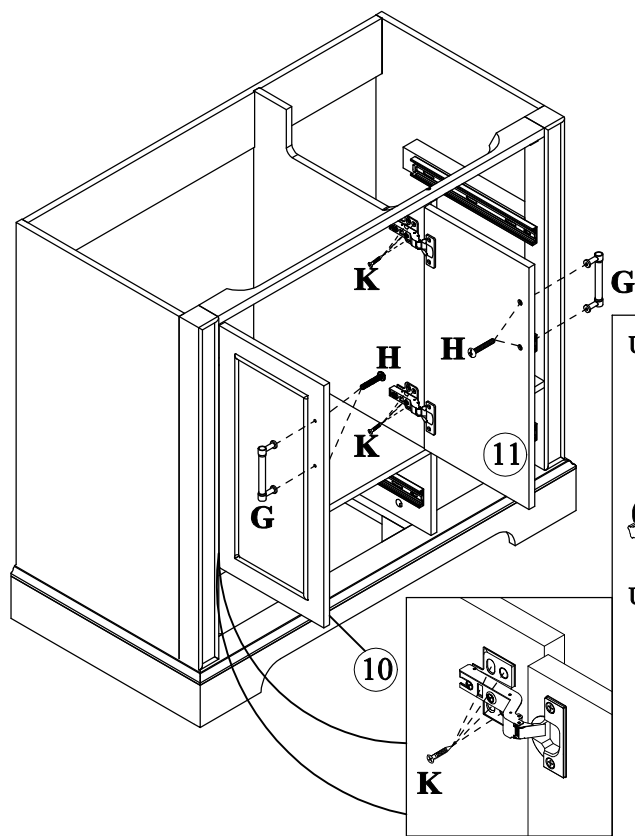


Use the screws to adjust up or down

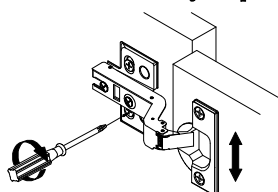


Use the screws to permanent

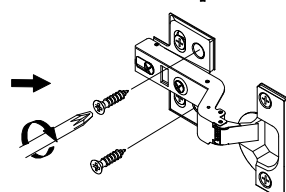


Use the screws to adjust left or right


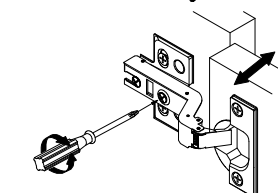



Use the screws to adjust in or out

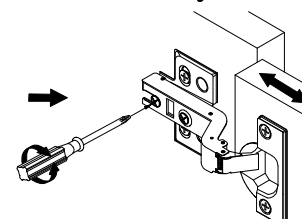


STEP: 10


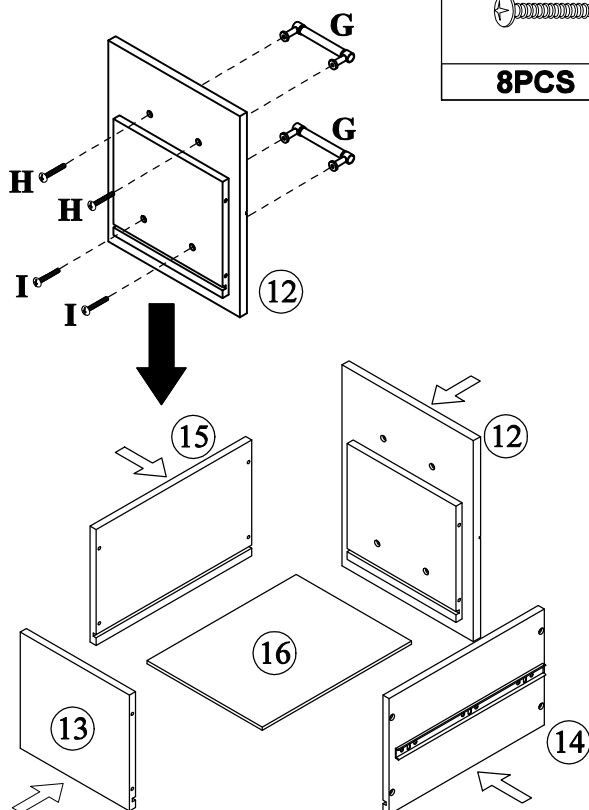



F	G	H	I
		 (ø5/32"x15mm)	 (ø5/32"x28mm)
8PCS	2PCS	2PCS	2PCS

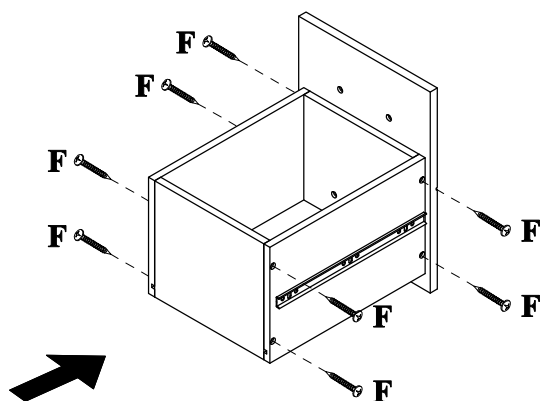

STEP: 11

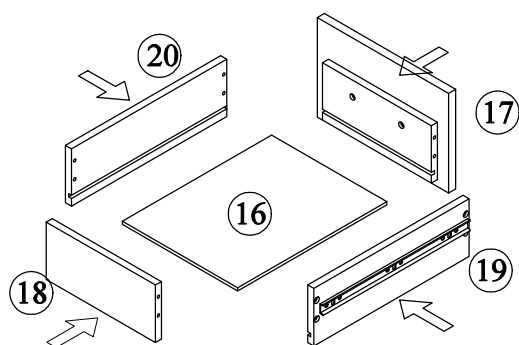



F	G	I
		
16PCS	2PCS	4PCS


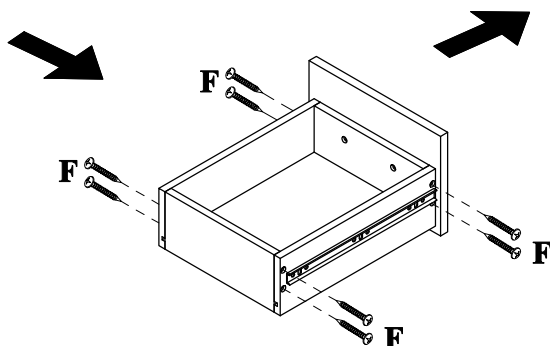


x2


STEP: 12

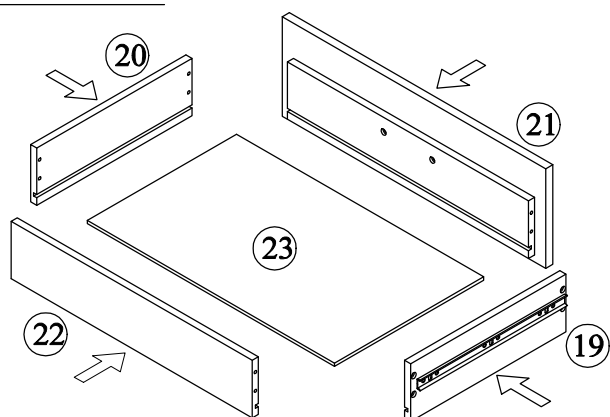



F	G	I
		
8PCS	1PC	2PCS

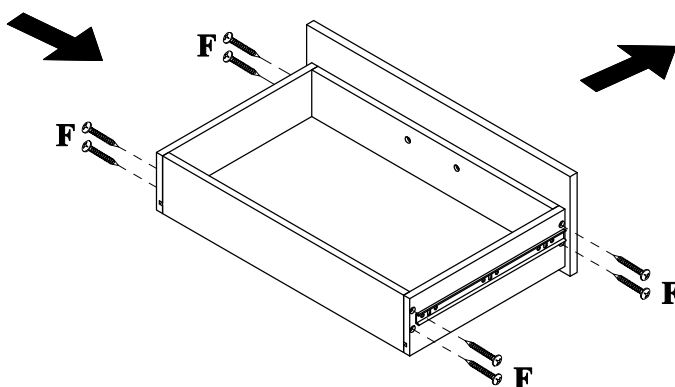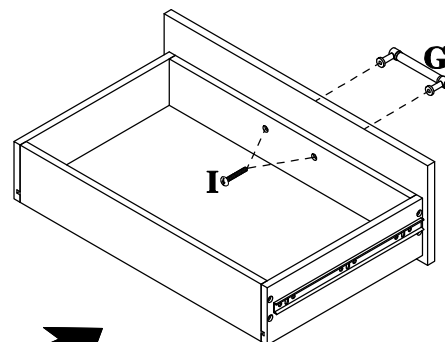

STEP: 13

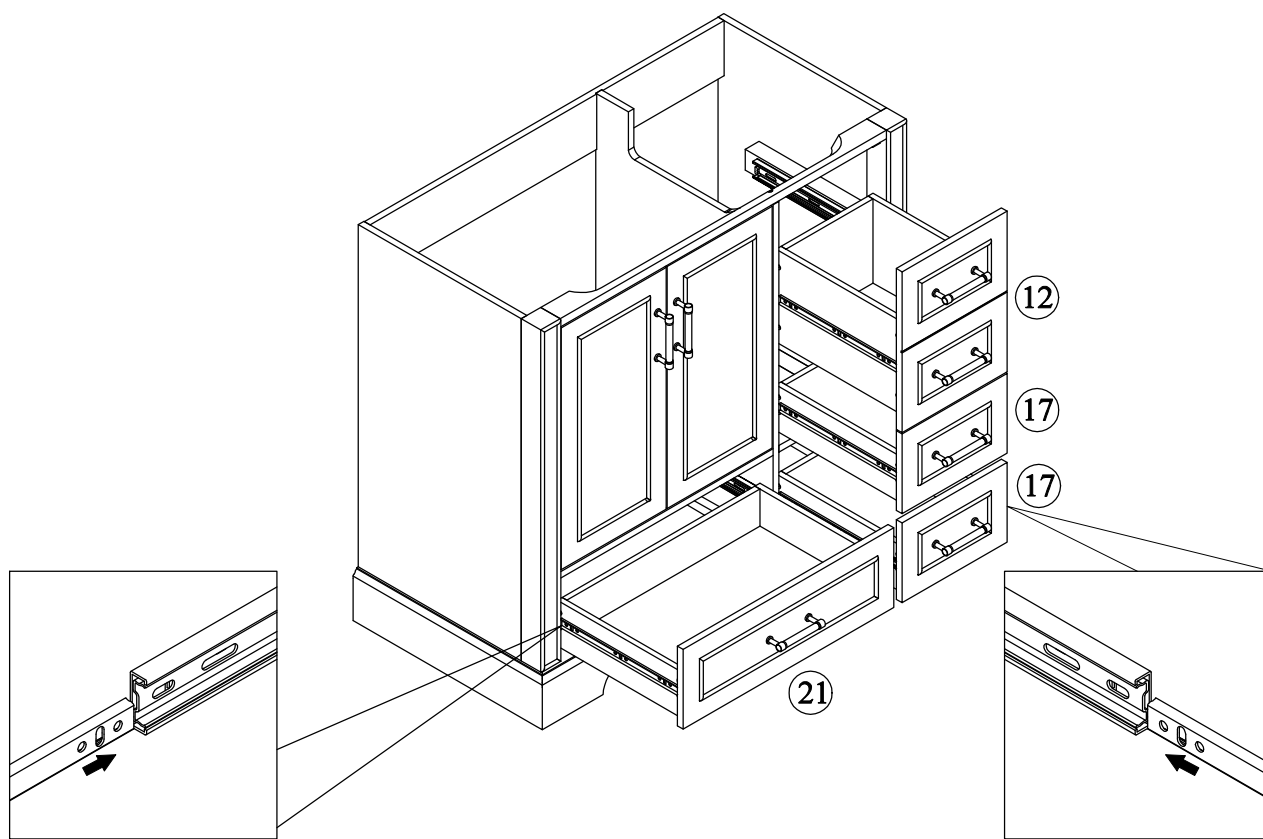


STEP: 14

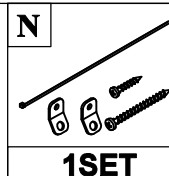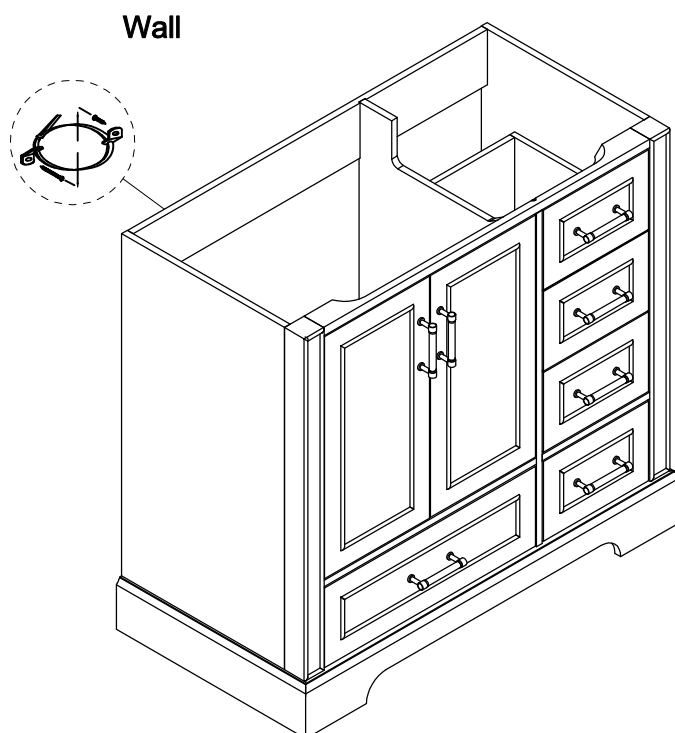


STEP: 15

Install the sink on the cabinet with glue.
Let stand for 24 hours

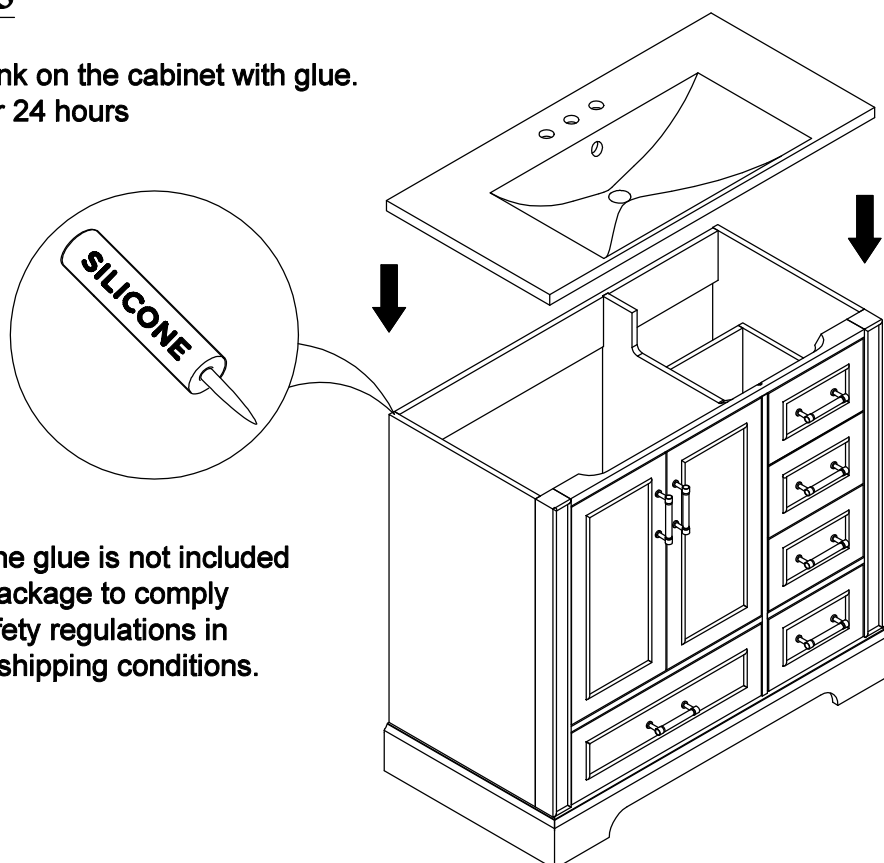


*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 16

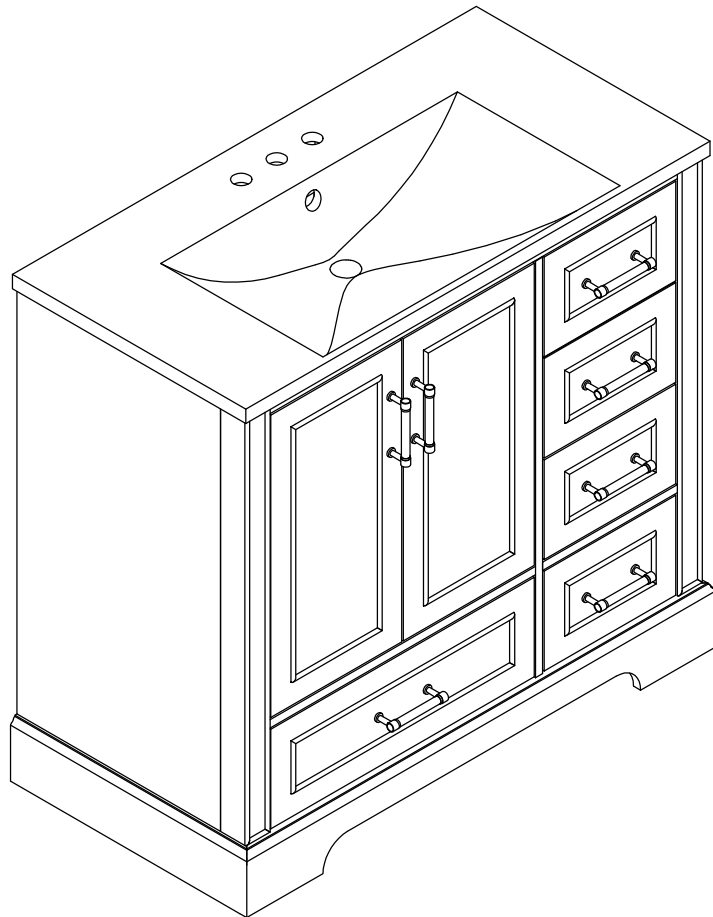

HINGE ADJUSTMENTS

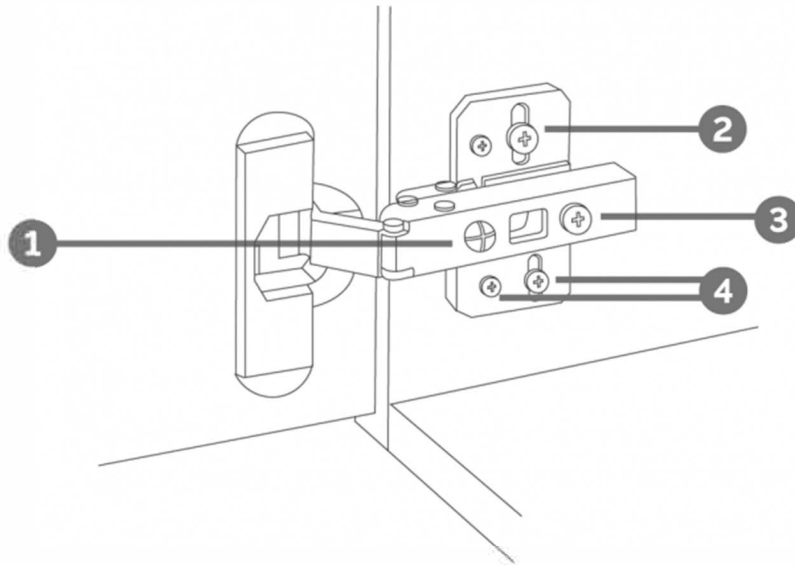


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

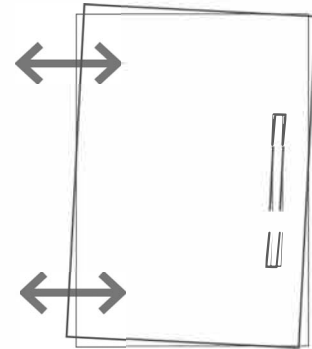


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

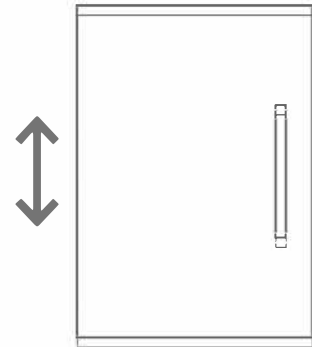

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

