

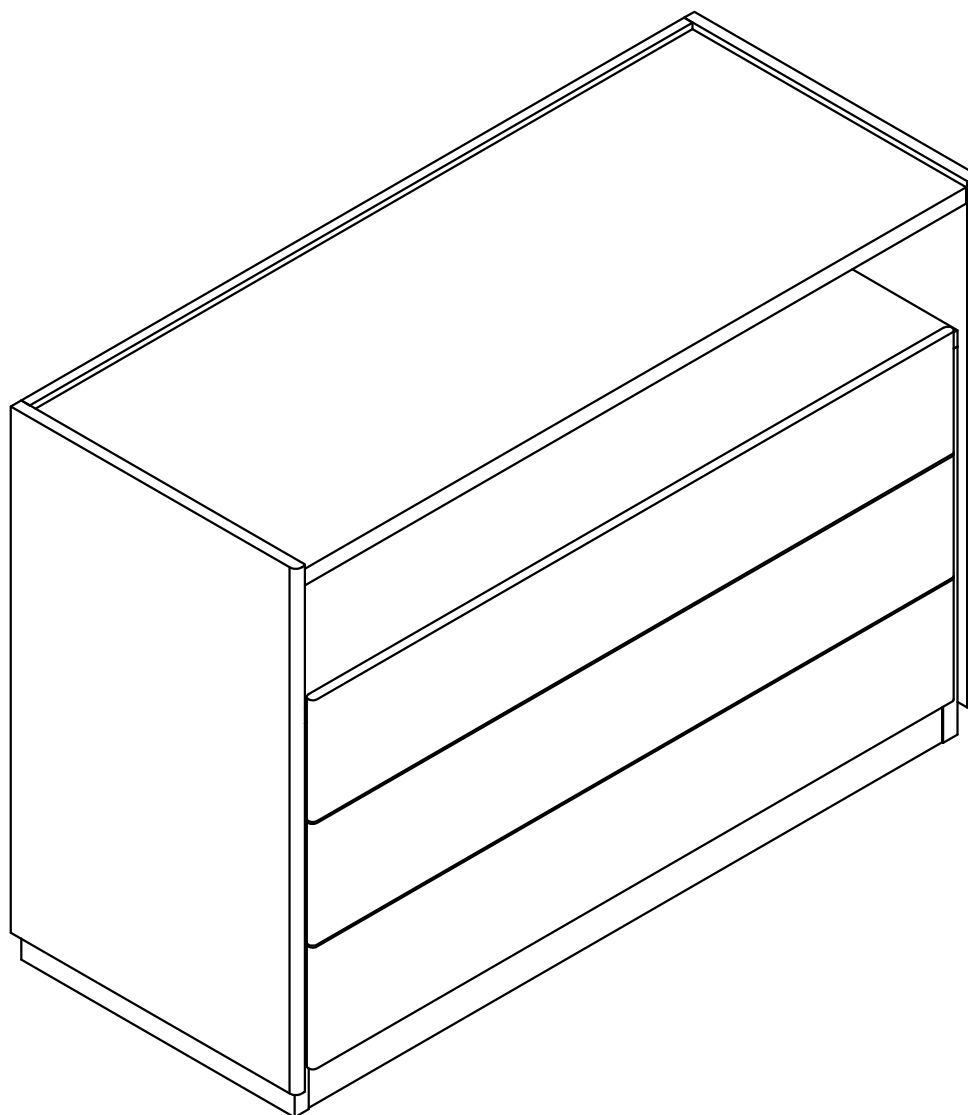
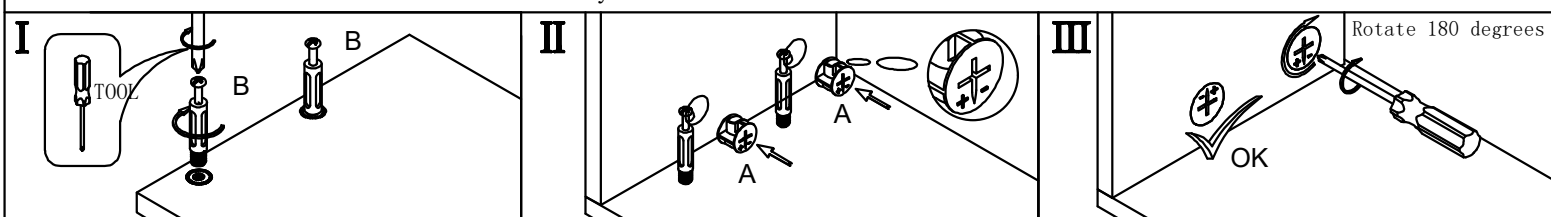






Installation Instructions




















Disassembly and installation of accessories



A 36PCS  Ø12*10mm	B 36PCS  Ø6*25mm	C 12PCS  Ø8*30mm	D 38PCS  Ø3.5*14mm	E 36PCS  Ø3.5*45mm	F 3PCS  12"	G 14PCS  12*10mm
H 36PCS  Ø9*9mm	I 12PCS  Ø6*25mm	J 10PCS  Ø10*5mm	K 8PCS  Ø7*38mm	L 12PCS  Ø6*35mm	M 1PCS 	N 1PCS 

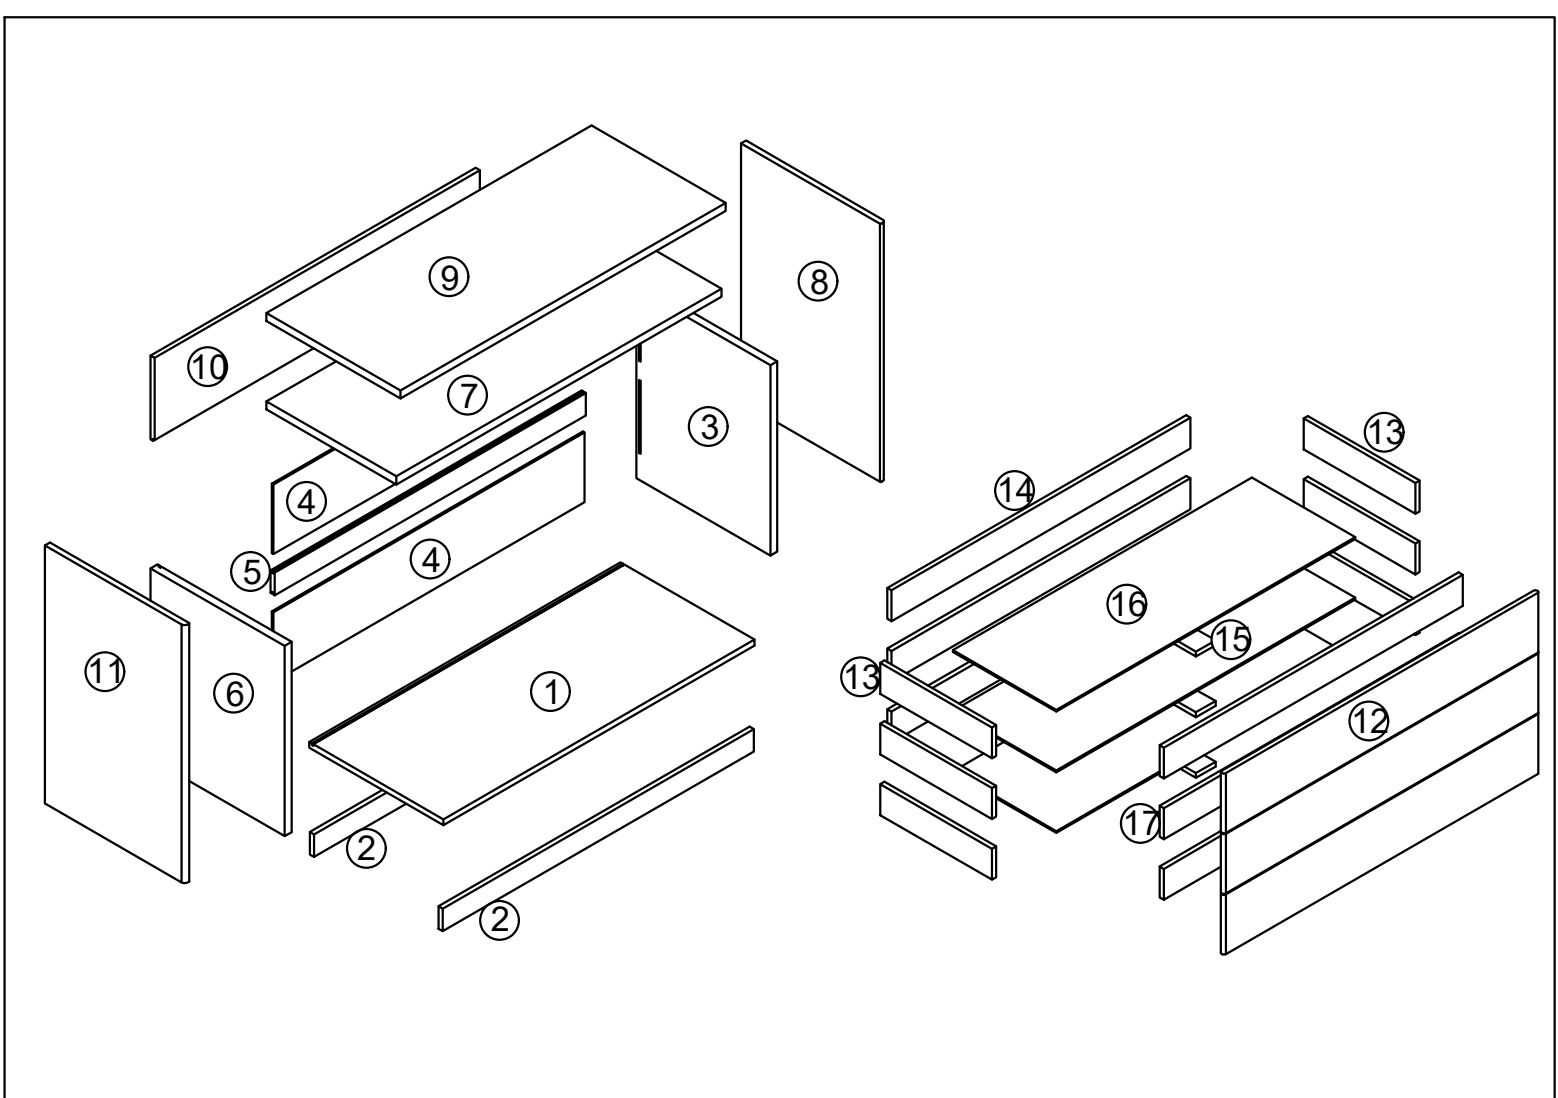


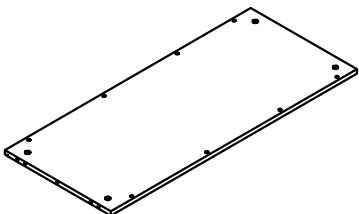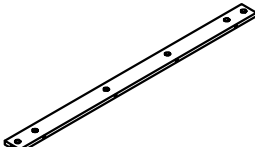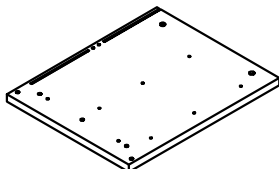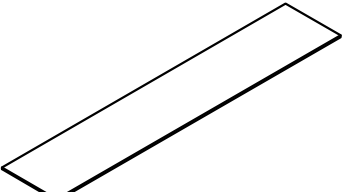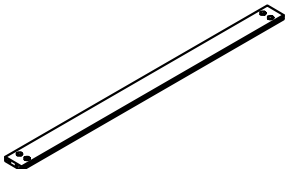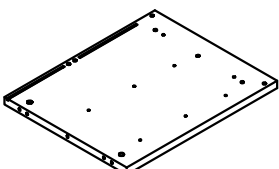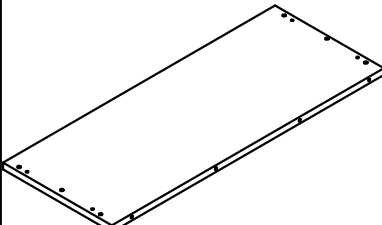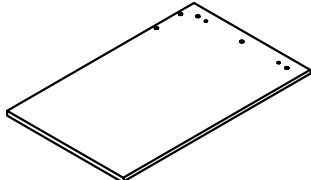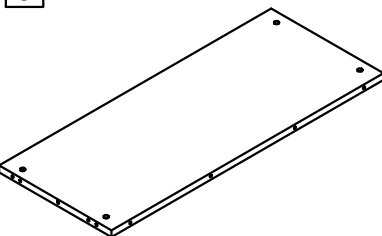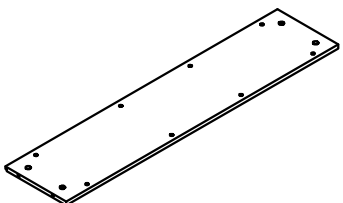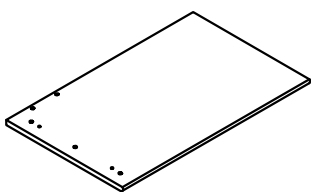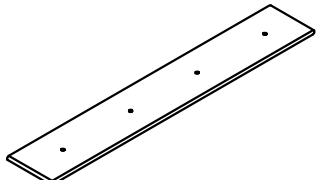
 1PC	 2PCS	 1PC	 2PCS
 2PCS	 1PC	 1PC	 1PC
 2PCS	 1PC	 1PC	 3PCS

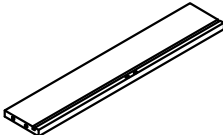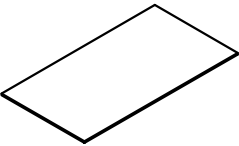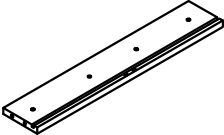
13  6PCS	14  3PCS	15  3PCS	16  3PCS	17  3PCS
---	---	---	---	---


STEP 1


First, install Screw B onto the plate securely.

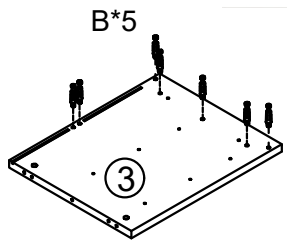


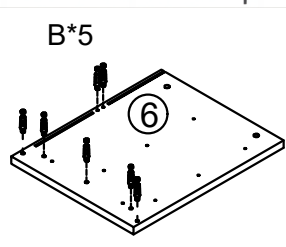

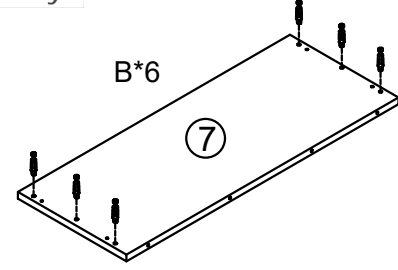

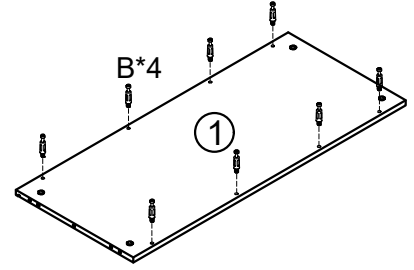

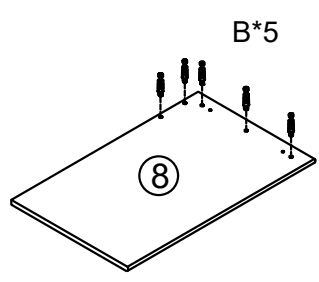

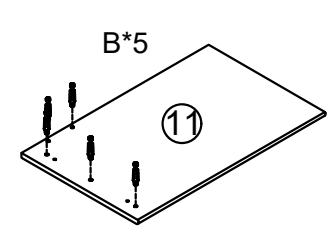


B 34PCS



Φ6*28mm

STEP 2

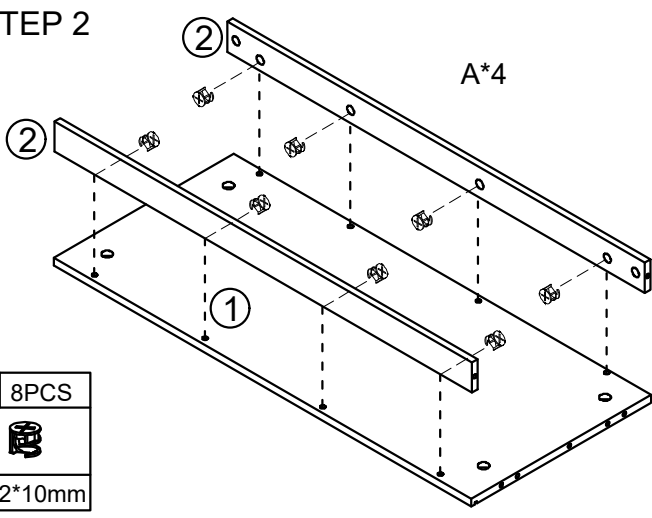


A 8PCS



Φ12*10mm

STEP 3

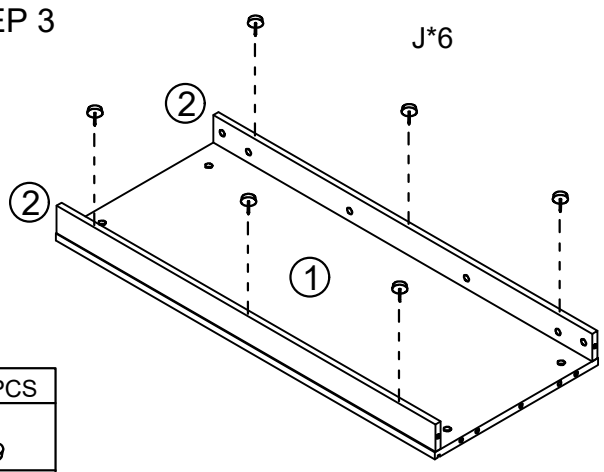

J 6PCS




Φ10*5mm

Install Foot Pad J.

STEP 4

Please install according to the method shown in the diagram.

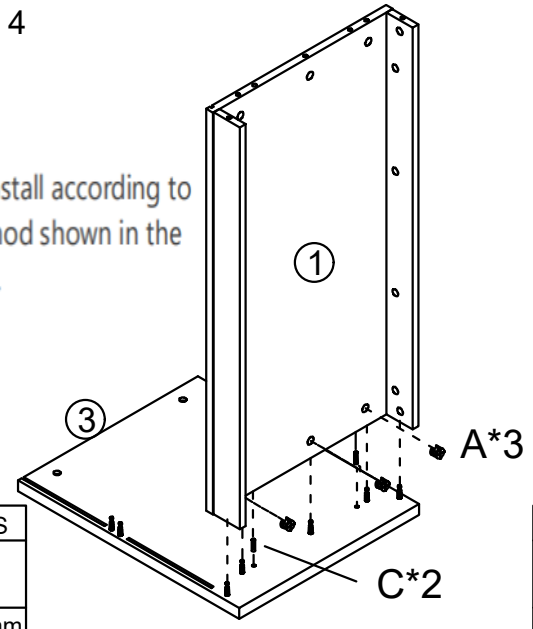

A 5PCS



Φ12*10mm


C 2PCS




Φ8*30mm

STEP 5

Insert the back panel 4.

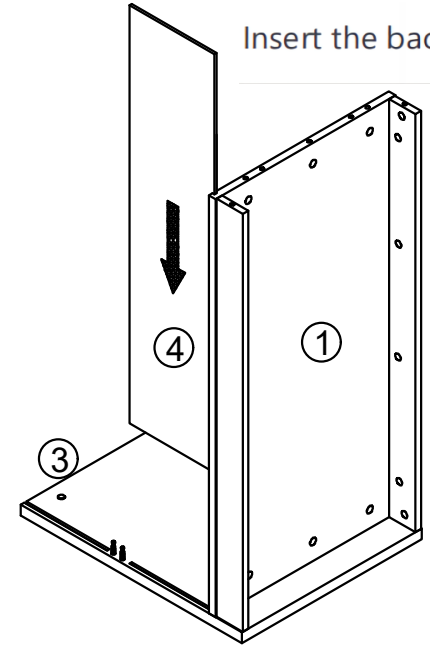


STEP 6

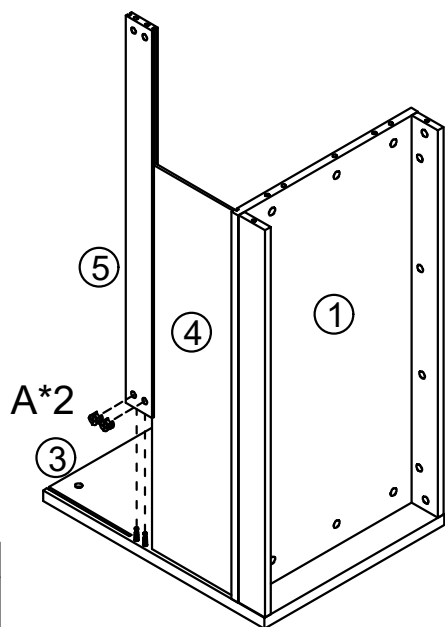

A	2PCS
Φ12*10mm	


STEP 7

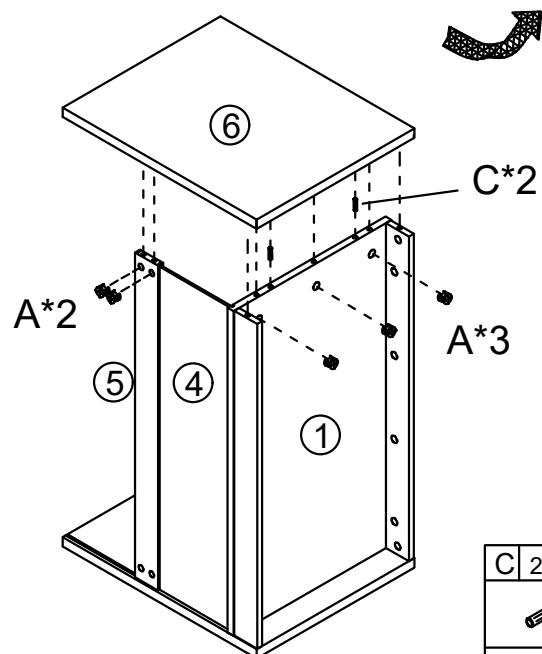

A	5PCS
Φ12*10mm	

C	2PCS
Φ8*30mm	


STEP 8

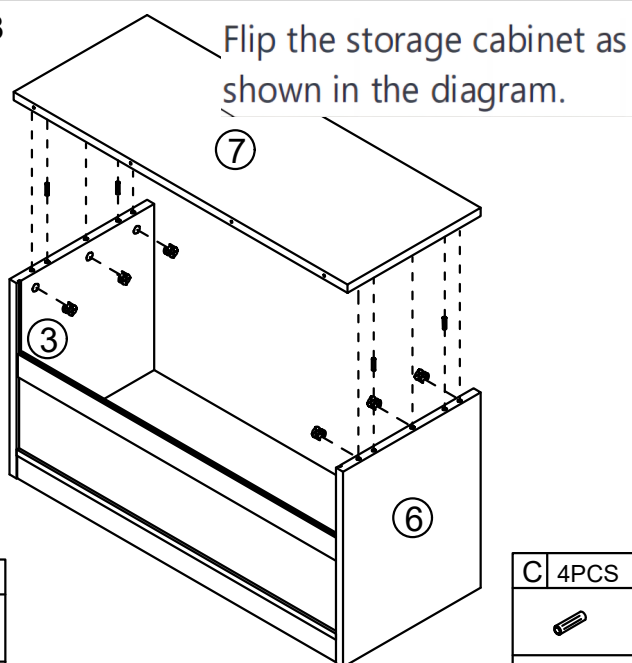

A	6PCS
Φ12*10mm	

STEP 9

Insert the back panel 4.

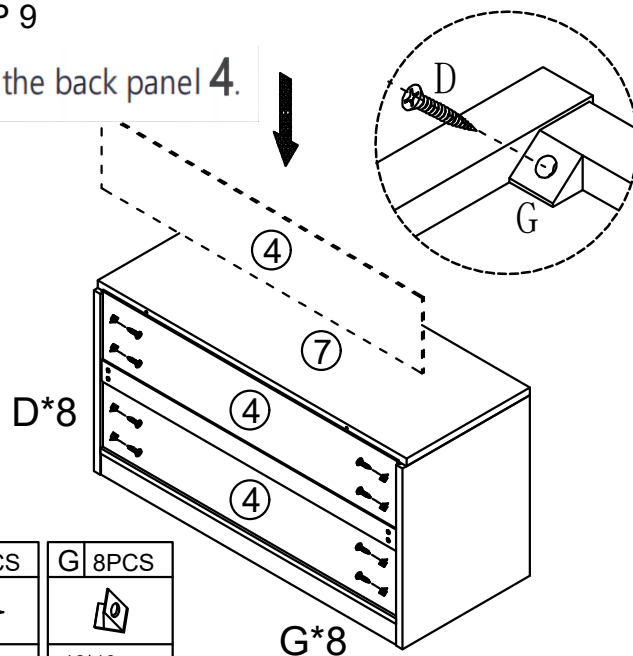


C	4PCS
Φ8*30mm	

D	8PCS
Φ3.5*14mm	

G	8PCS
12*10mm	


STEP 10

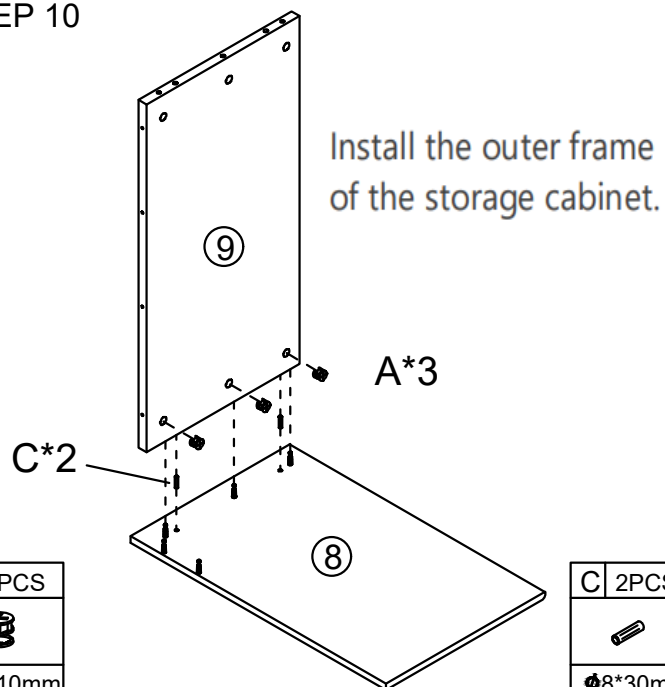

A	3PCS
Φ12*10mm	


C	2PCS
Φ8*30mm	

STEP 11

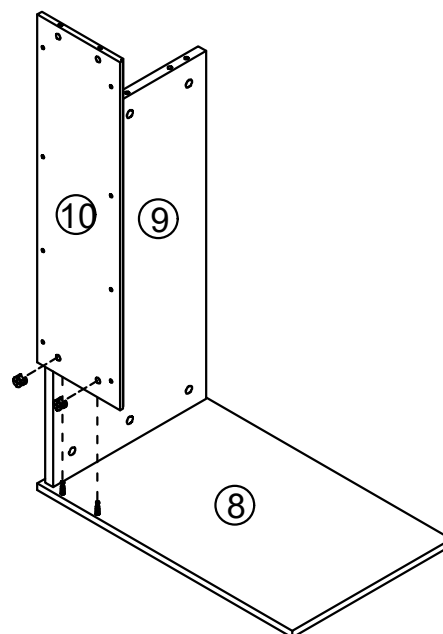

A	2PCS
Φ12*10mm	


STEP 12

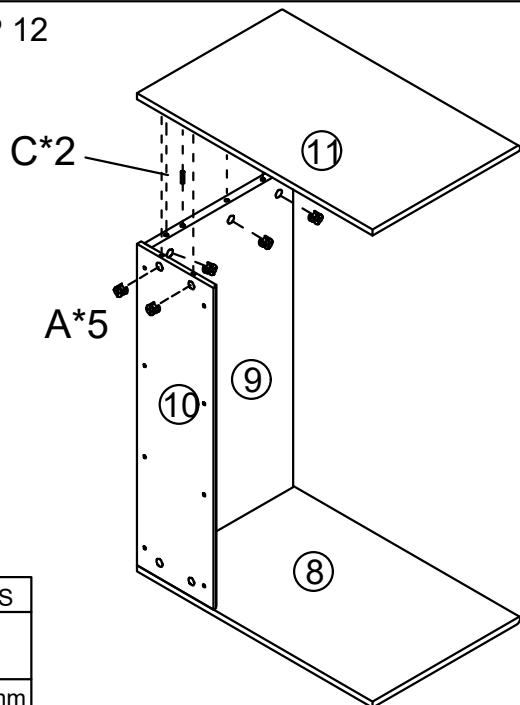

A	3PCS
	
Φ12*10mm	


C	2PCS
	
Φ8*30mm	

STEP 13

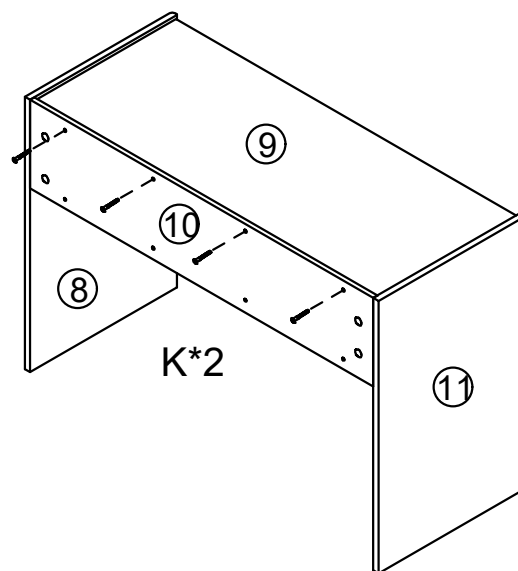

K	4PCS
	
Φ7*38mm	


STEP 14

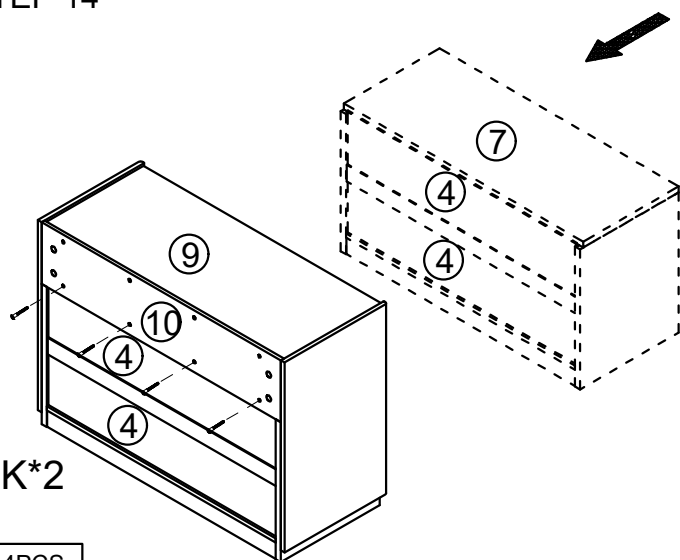

K	4PCS
	
Φ7*38mm	


Combine the storage cabinets together.

STEP 15

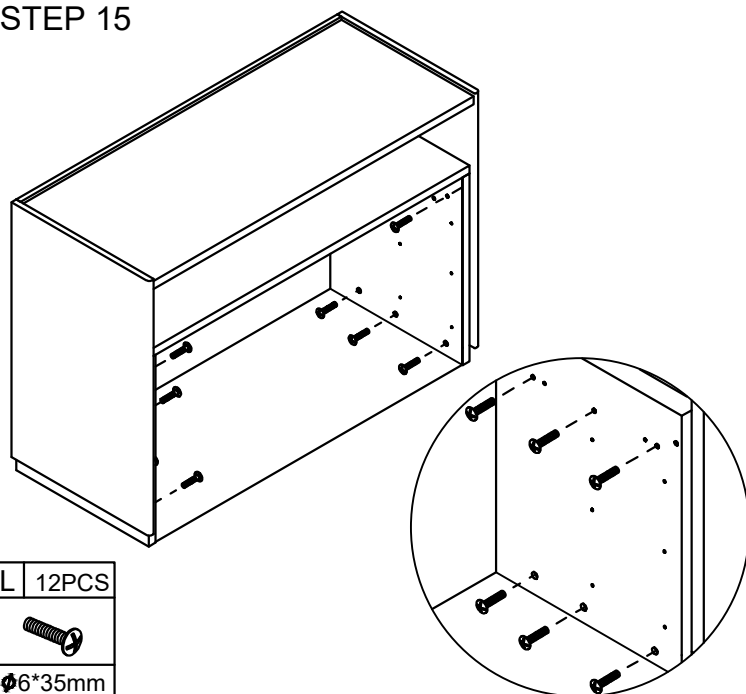



L	12PCS
	
Φ6*35mm	

STEP 16



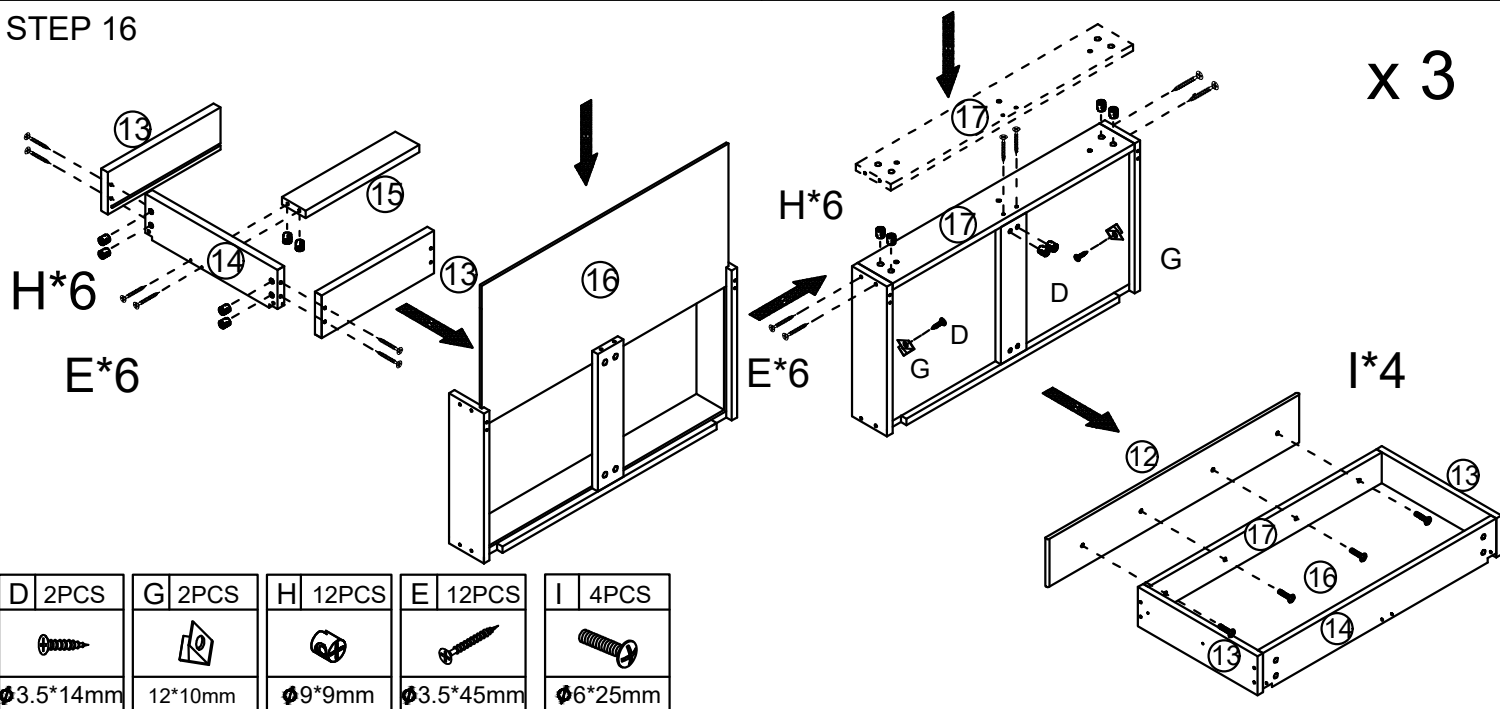


D	2PCS	G	2PCS	H	12PCS	E	12PCS	I	4PCS
									
Φ3.5*14mm		12*10mm		Φ9*9mm		Φ3.5*45mm		Φ6*25mm	







STEP 17

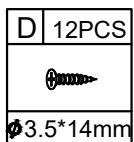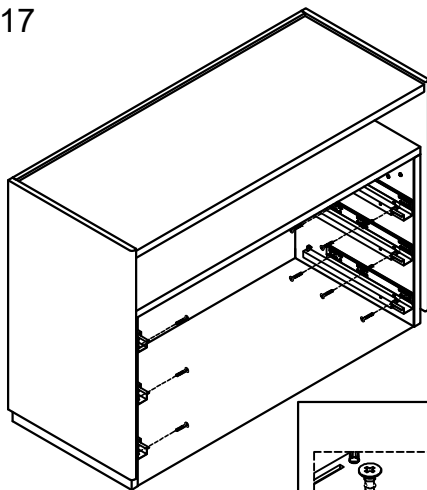

STEP 18

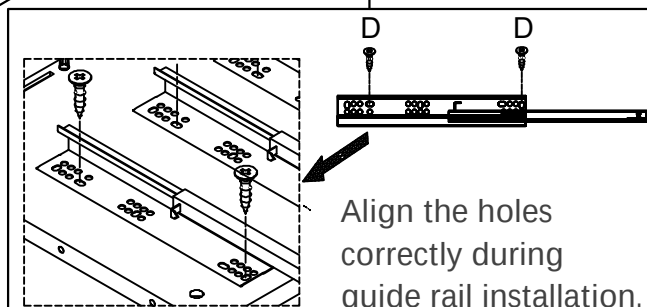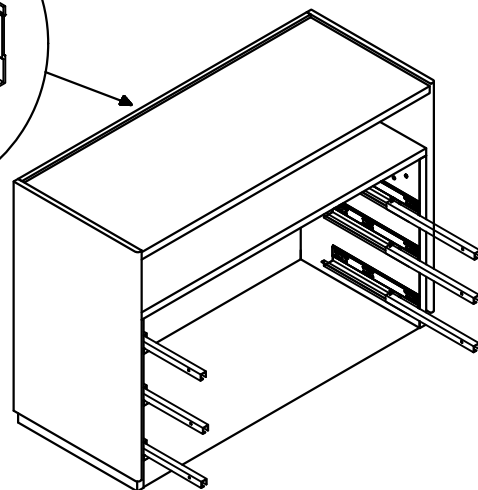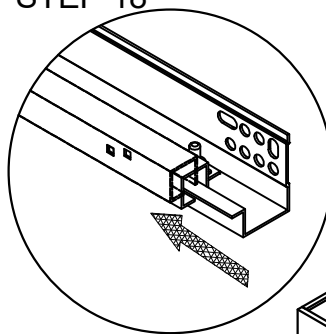


STEP 19

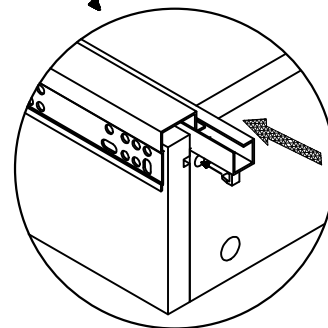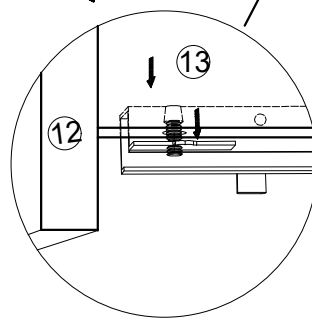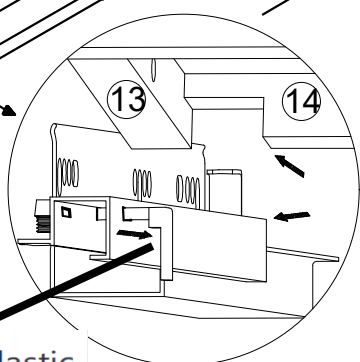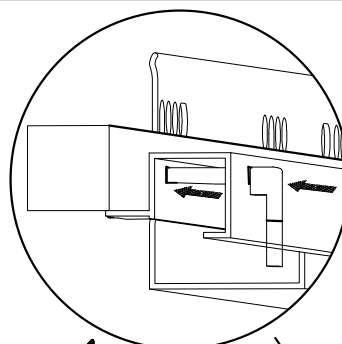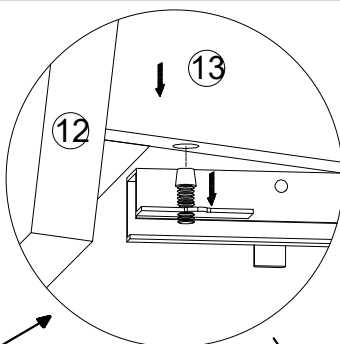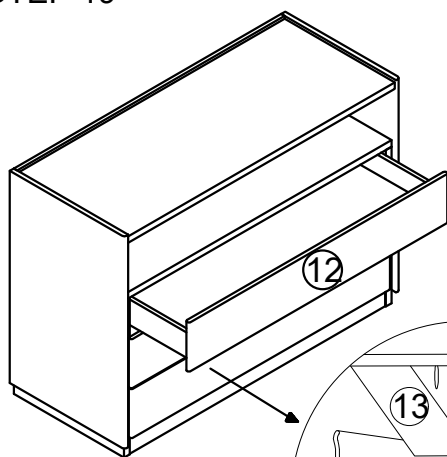


Pull out the white plastic piece and secure the drawer in place.

Guide rail installation effect drawing

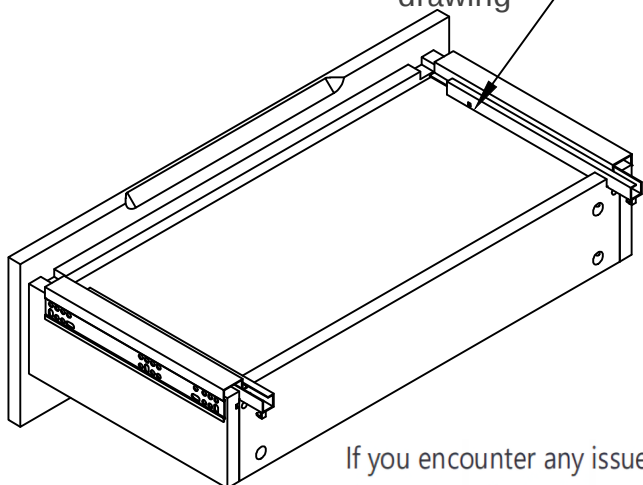

If you encounter any issues during the drawer installation, you can scan the QR code to request an installation video from customer service.

STEP 20

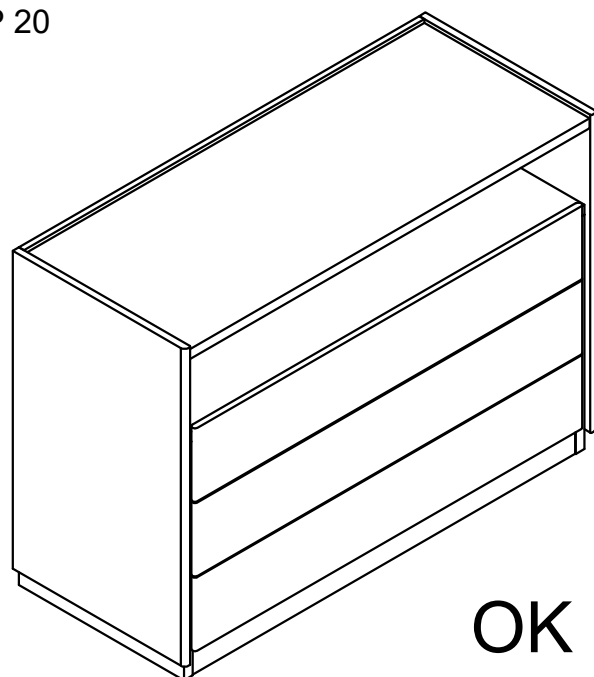

OK