



































INSTALLATION & ASSEMBLY

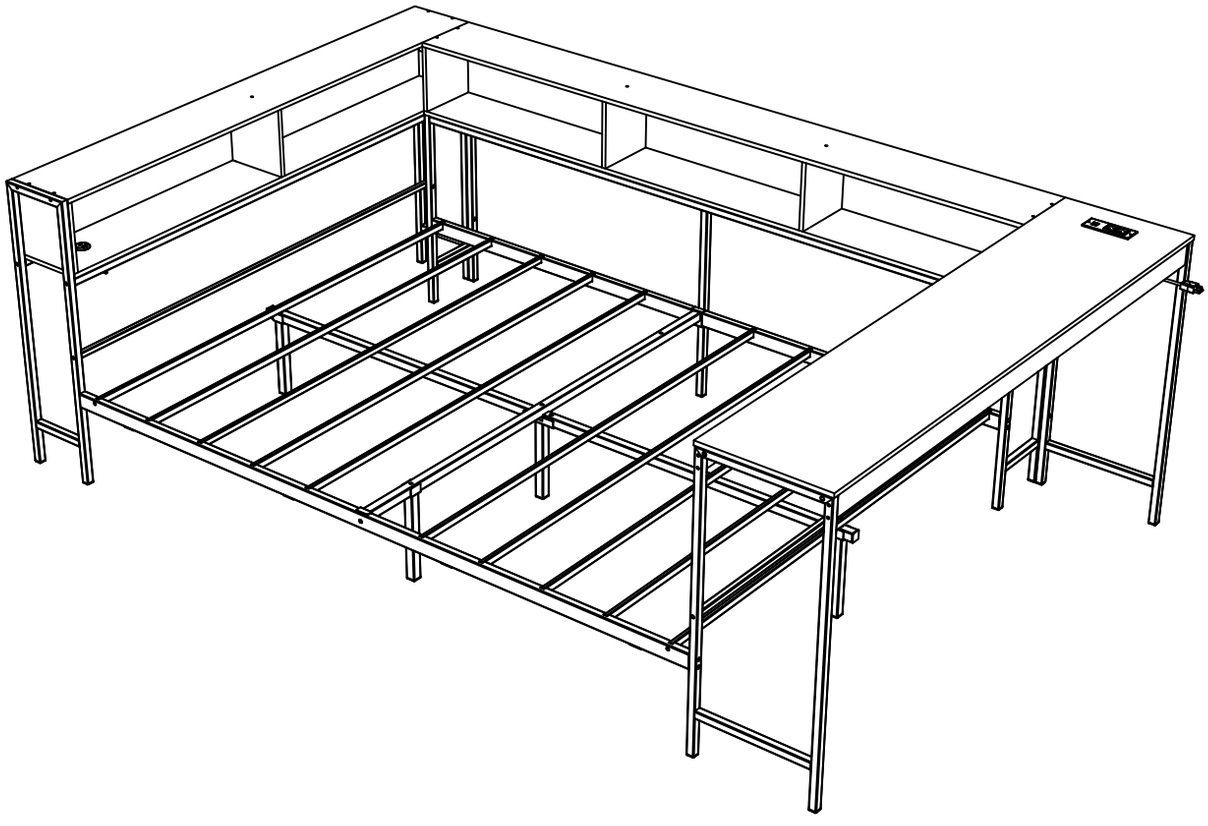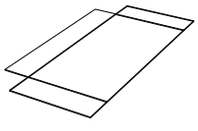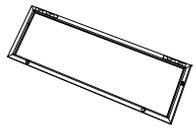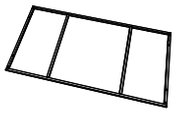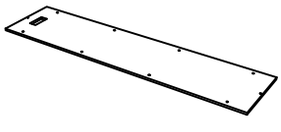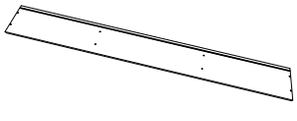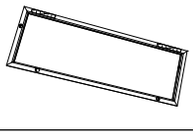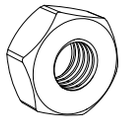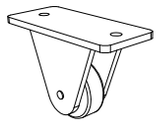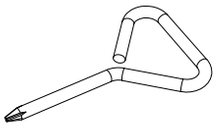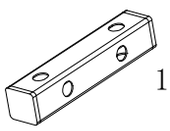



ASSEMBLY INSTRUCTION

①  1pcs	②  1pcs	③  2pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  1pcs	⑨  1pcs
⑩  1pcs	⑪  1pcs	⑫  1pcs
⑬  1pcs	⑭  1pcs	⑮  2pcs
⑯  2pcs	⑰  2pcs	⑱  2pcs
⑲  2pcs	⑳  1pcs	㉑  1pcs
㉒  1pcs	㉓  1pcs	㉔  1pcs
㉕  1pcs	㉖  2pcs	㉗  2pcs
㉘  1pcs	㉙  3pcs	㉚  1pcs
㉛  1pcs	㉜  1pcs	㉝  1pcs
㉞  2pcs	㉟  2pcs	㊱  8pcs
㊲  1pcs	㊳  1pcs	


ASSEMBLY INSTRUCTION

A  M5*40mm 35PCS	B  M6*28mm 37PCS	C  M6*35mm 24PCS	D  M6*35mm 4PCS
E  M4*10mm 5PCS	F  1PCS	G  M6*50mm 6PCS	H  M6 5PCS
I  M4*14mm 24PCS	J  4PCS	K  M6*25mm 4PCS	L  1PCS
M  1PCS	N  M4*18mm 24PCS	O  1.0 8PCS	P  1PCS
Q  1PCS	R  M4 1PCS	S  M6 1PCS	T  M6 1PCS
U  24.2cm 1PCS	V  11cm 1PCS	W  22.2cm 1PCS	X  22.2cm 2PCS
Y  M6*60mm 3PCS	Z  1PCS	a  M8 1PCS	

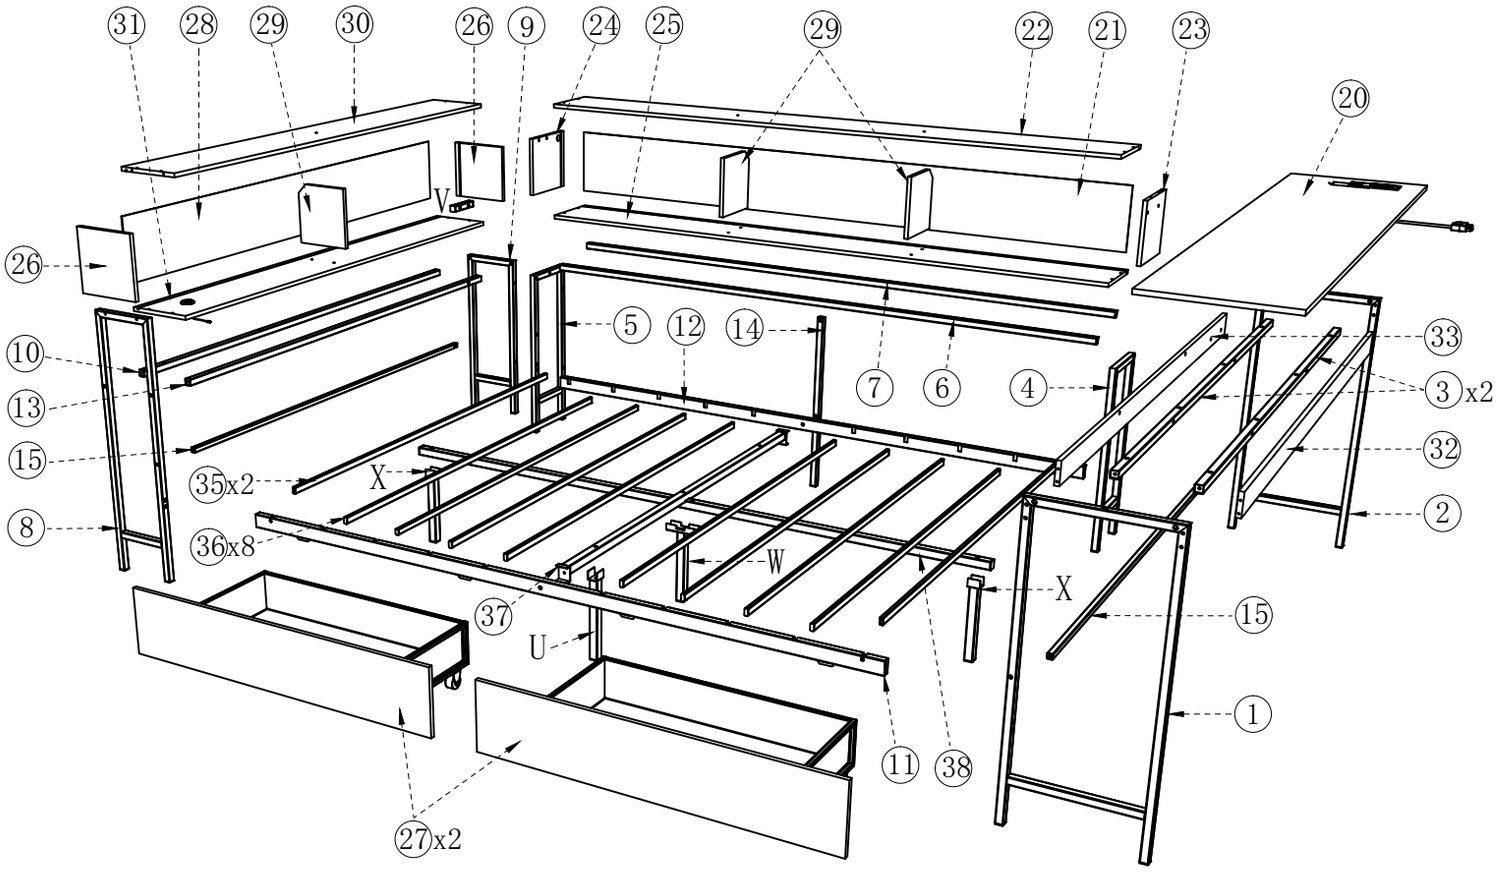
31
28
29
30
26
9
24
25
29
22
21
23
20
V
26
5
12
14
7
6
4
33
3 x2
10
13
15
35 x2
X
32
8
36 x8
2
W
X
37
U
15
1
11
38
27 x2

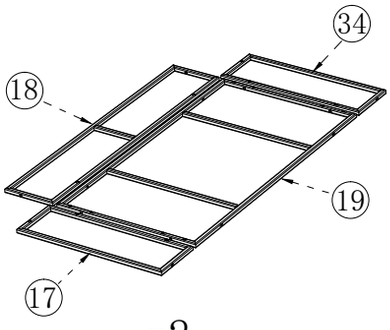
34
18
19
17


x2

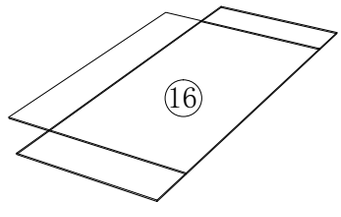
16

x2


STEP 1

A		M5*40mm 6pcs

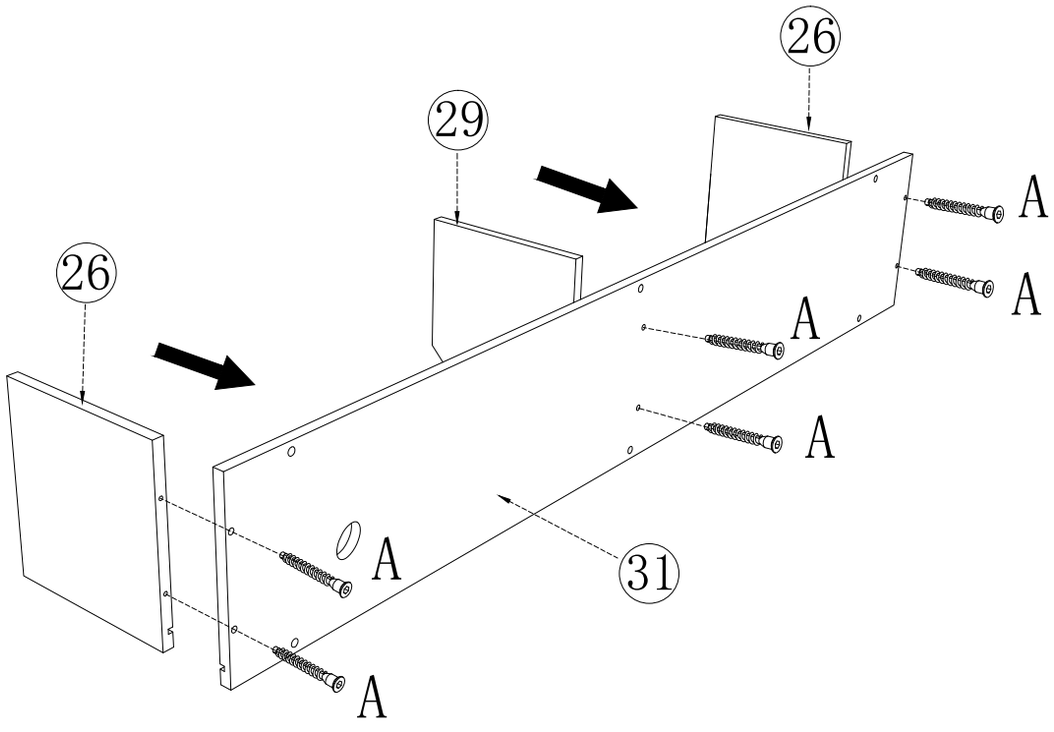


STEP 2

A		M5*40mm 5pcs

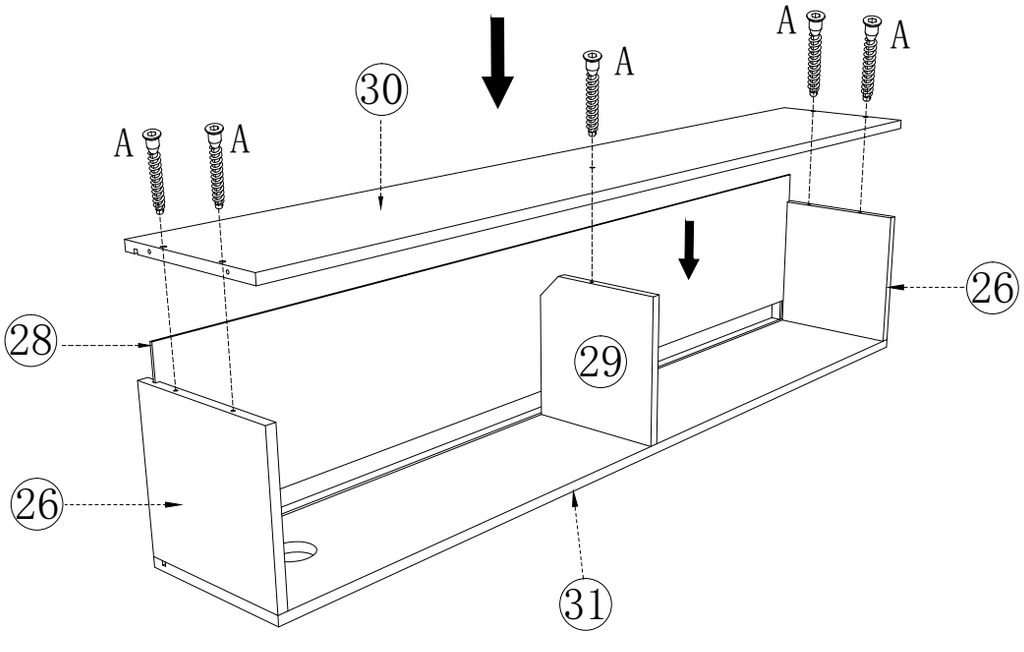


STEP 3

B	M6*28mm	2pcs

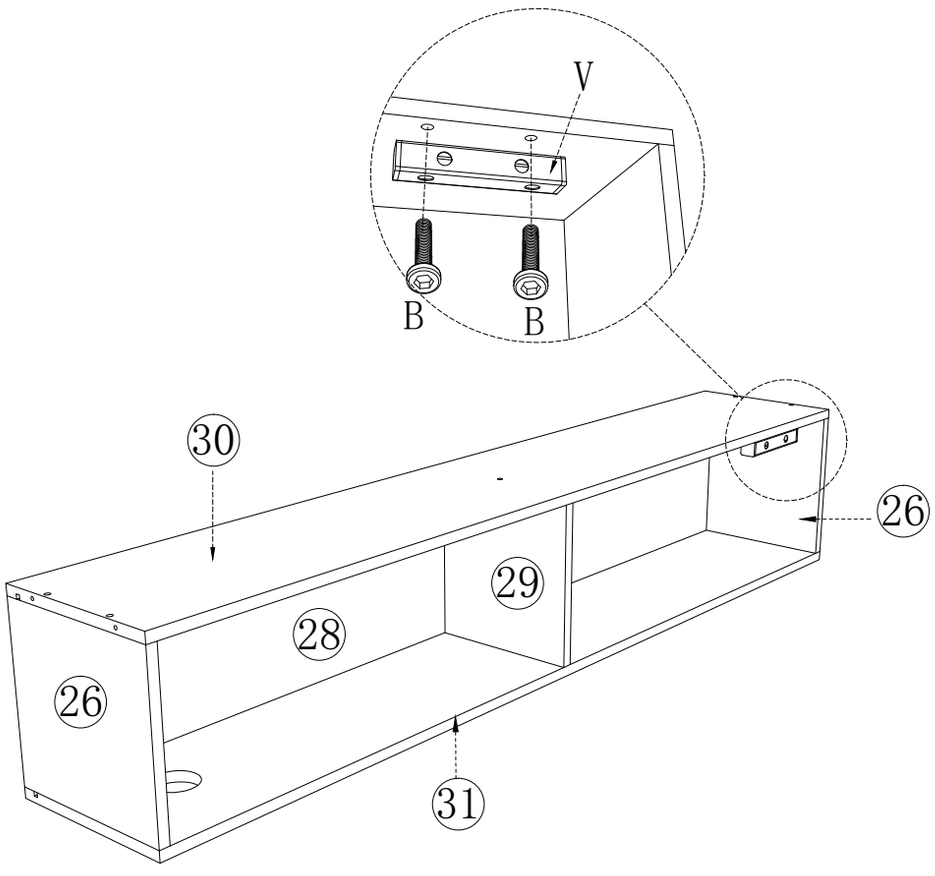


STEP 4

A	M5*40mm	8pcs

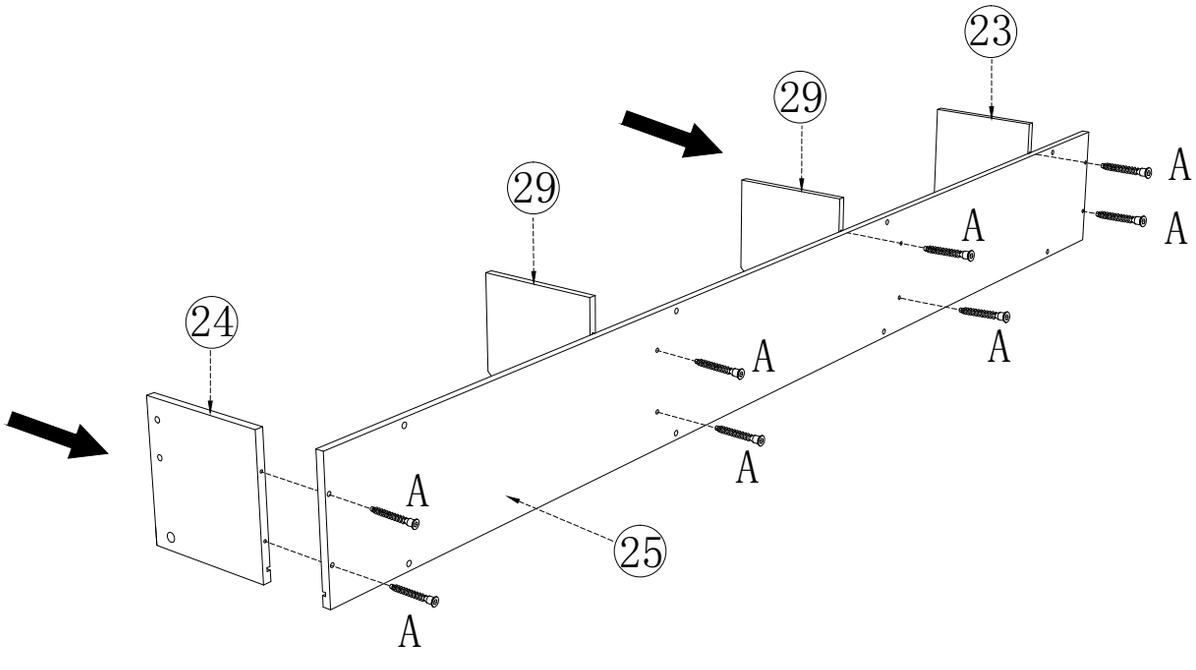


STEP 5


A		M5*40mm 6pcs

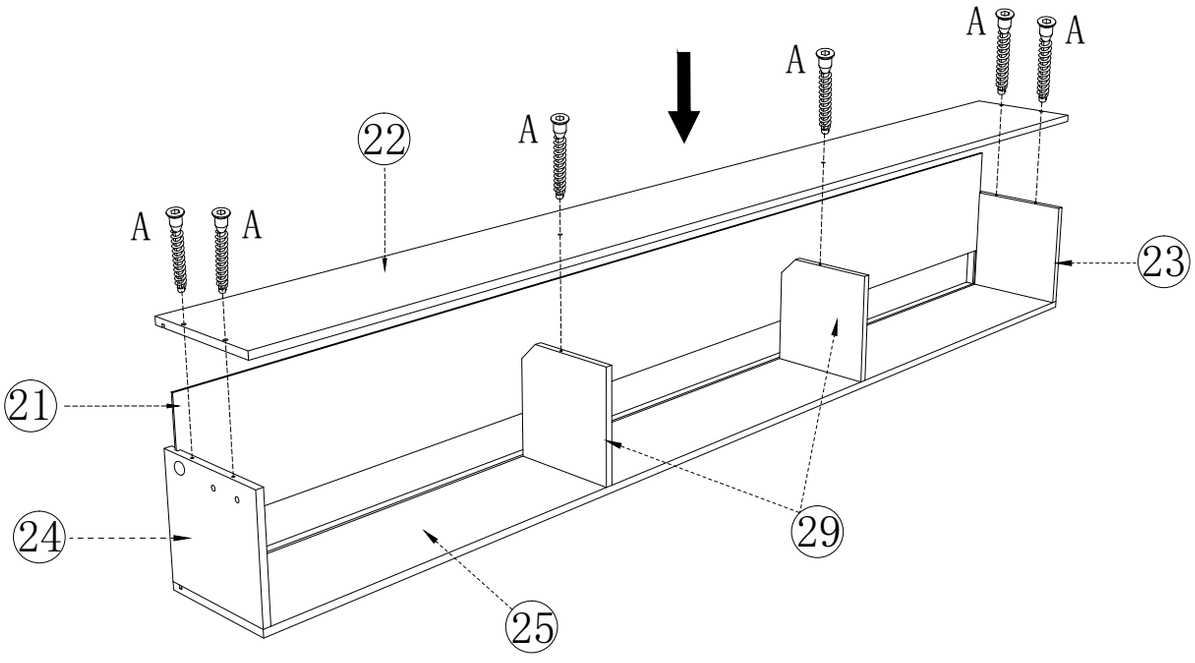

STEP 6

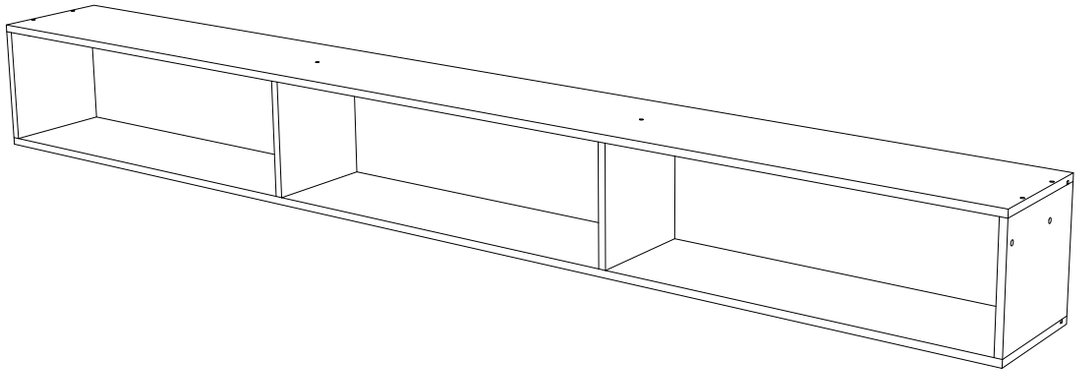


STEP 7

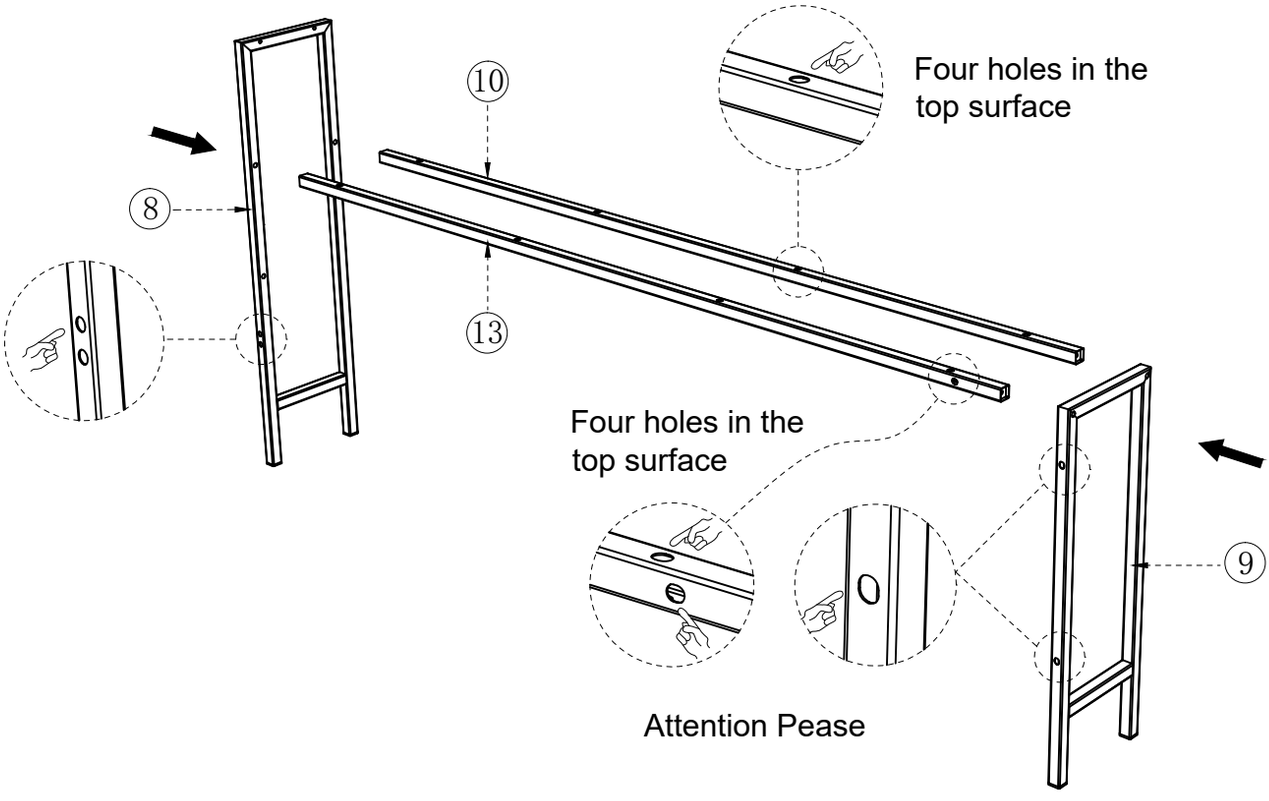


STEP 8

C		M6*35mm 4pcs

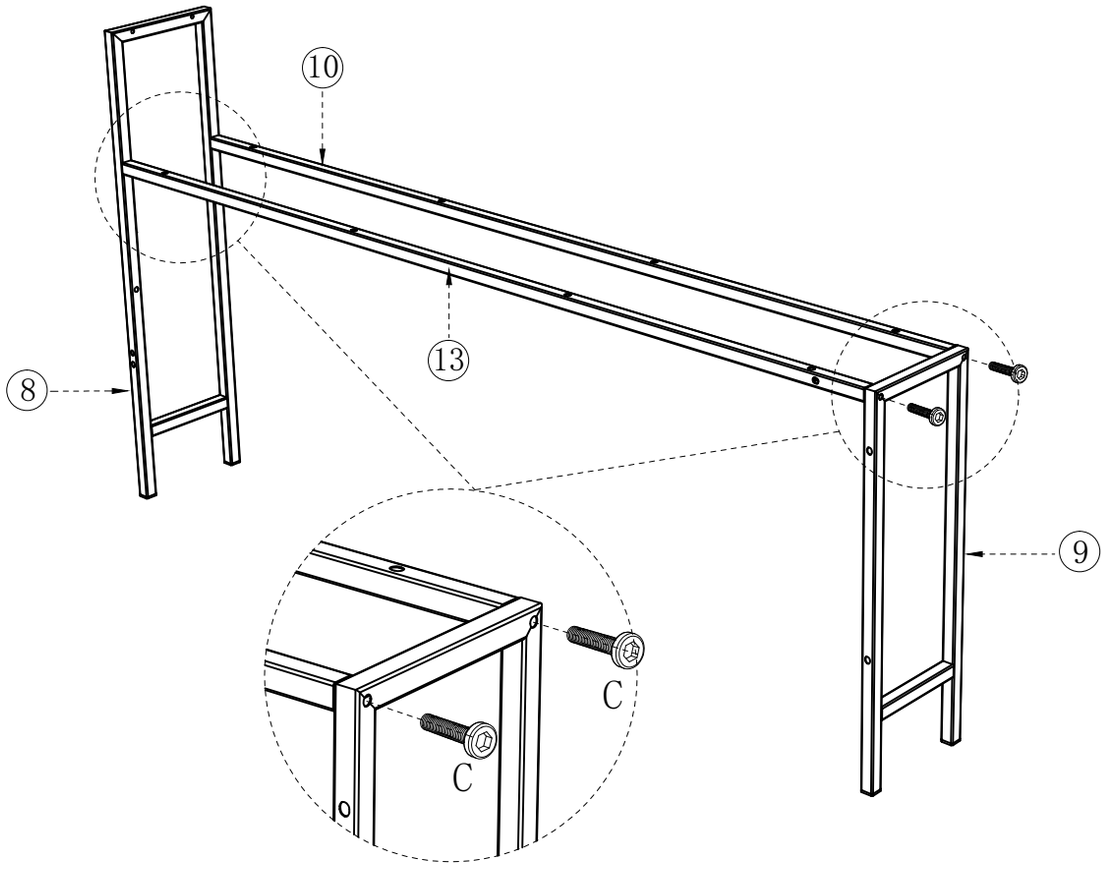


STEP 9

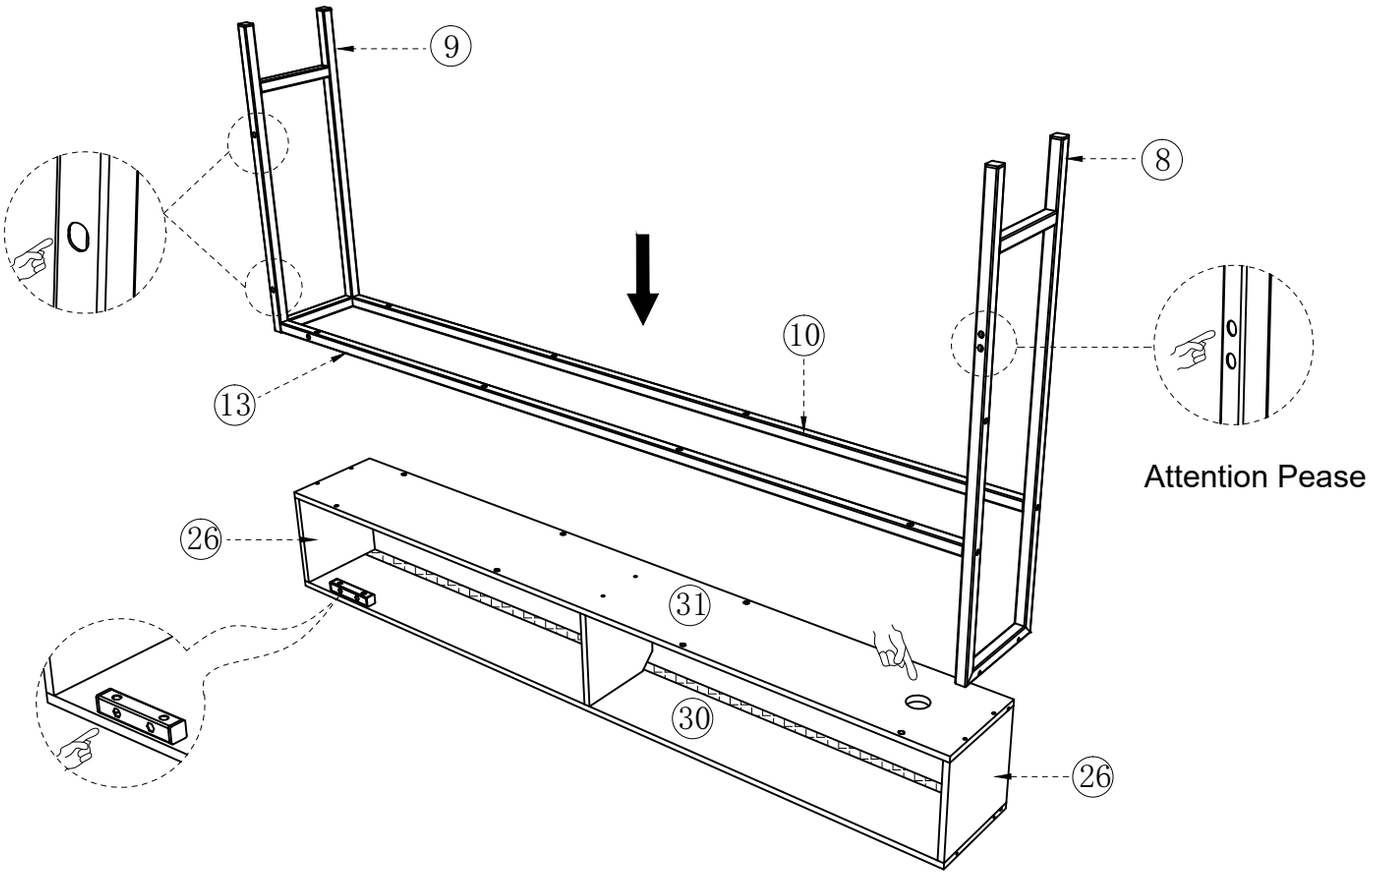


STEP 10

A		M5*40mm	2pcs
B		M6*28mm	8pcs

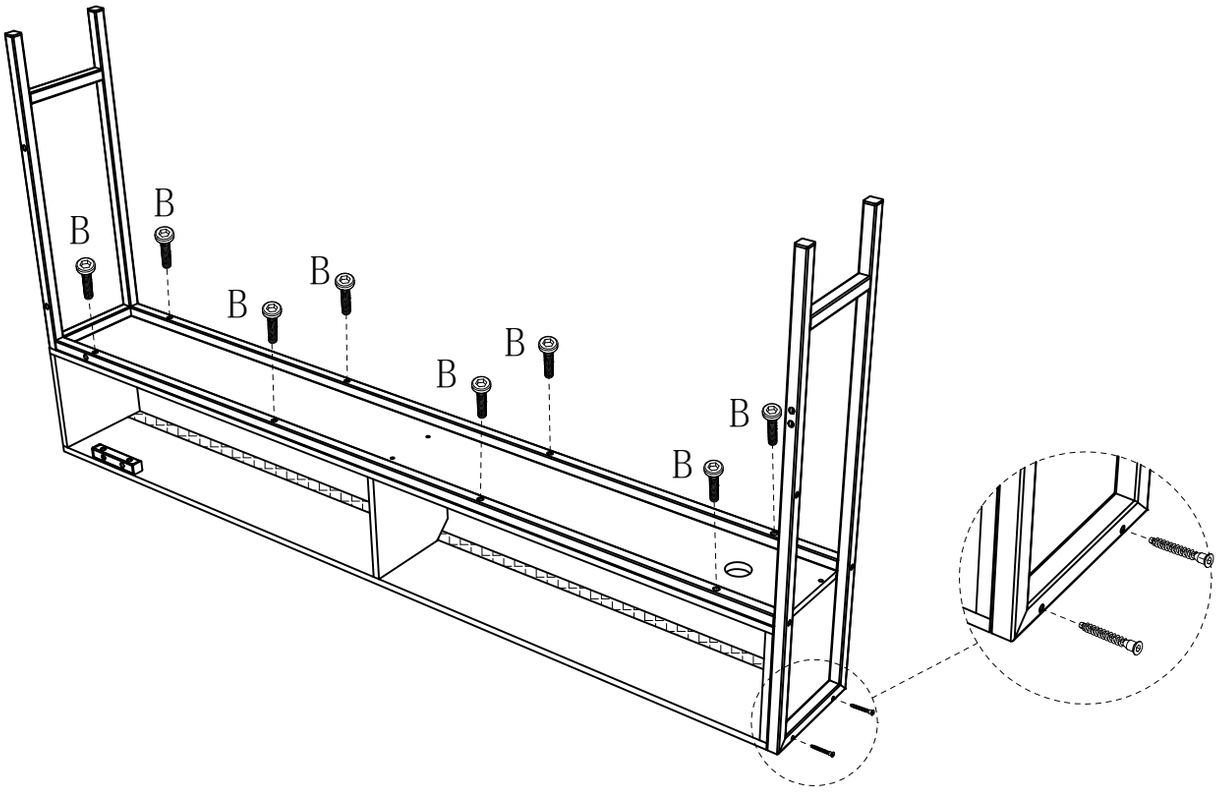


STEP 11

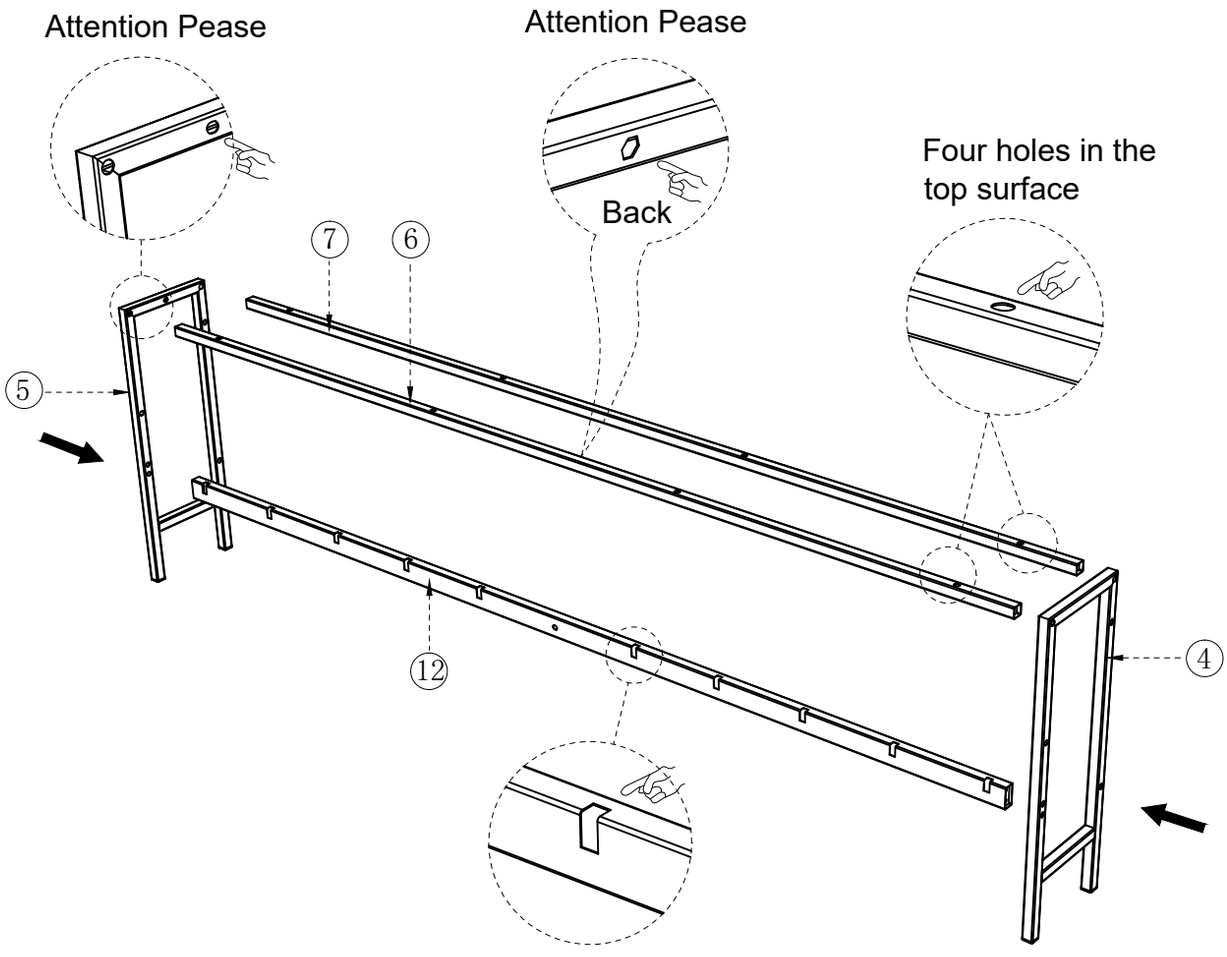


STEP 12

C	M6*35mm	4pcs
D	M6*35mm	4pcs

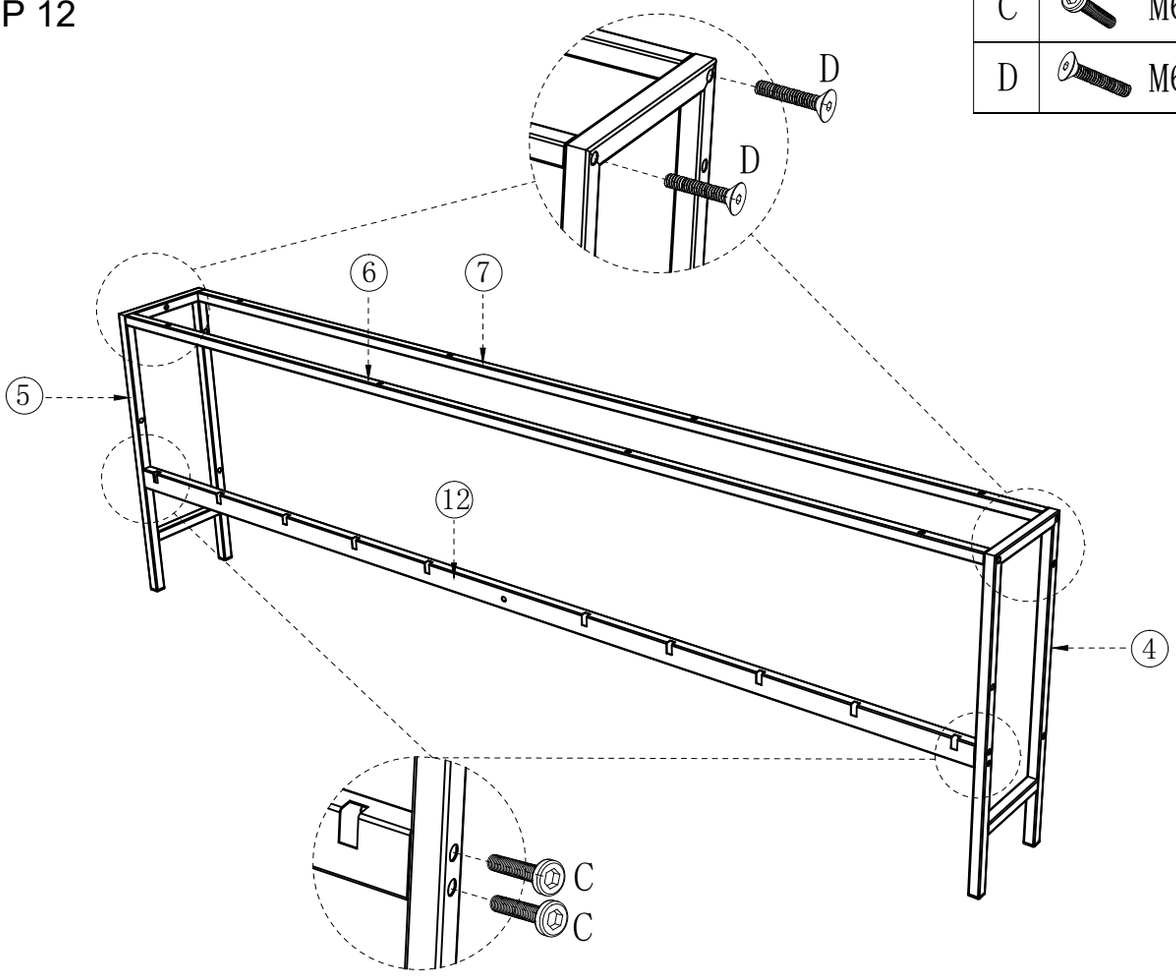


STEP 13

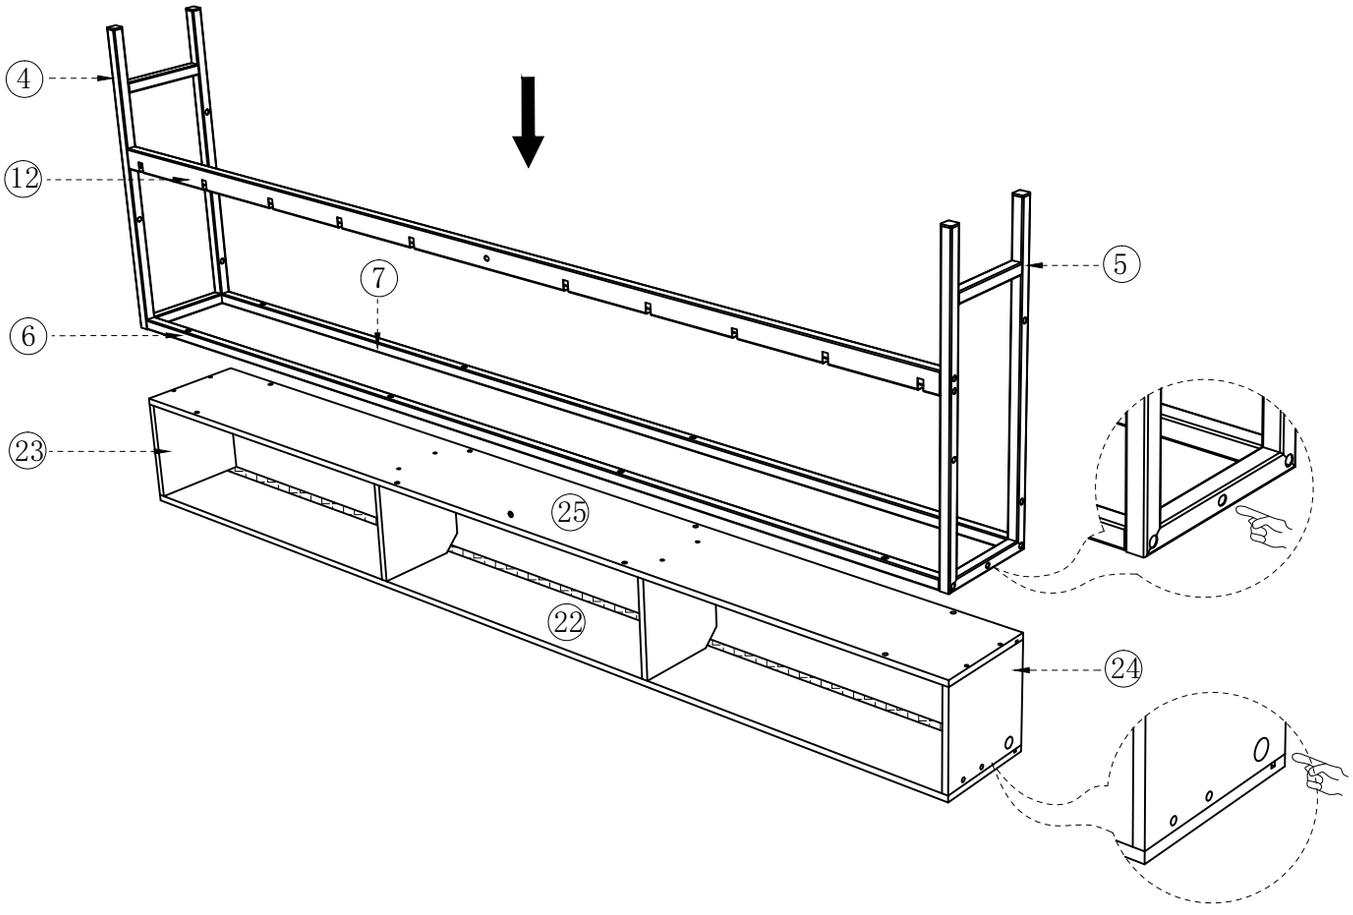


STEP 14

B		M6*28mm 8pcs

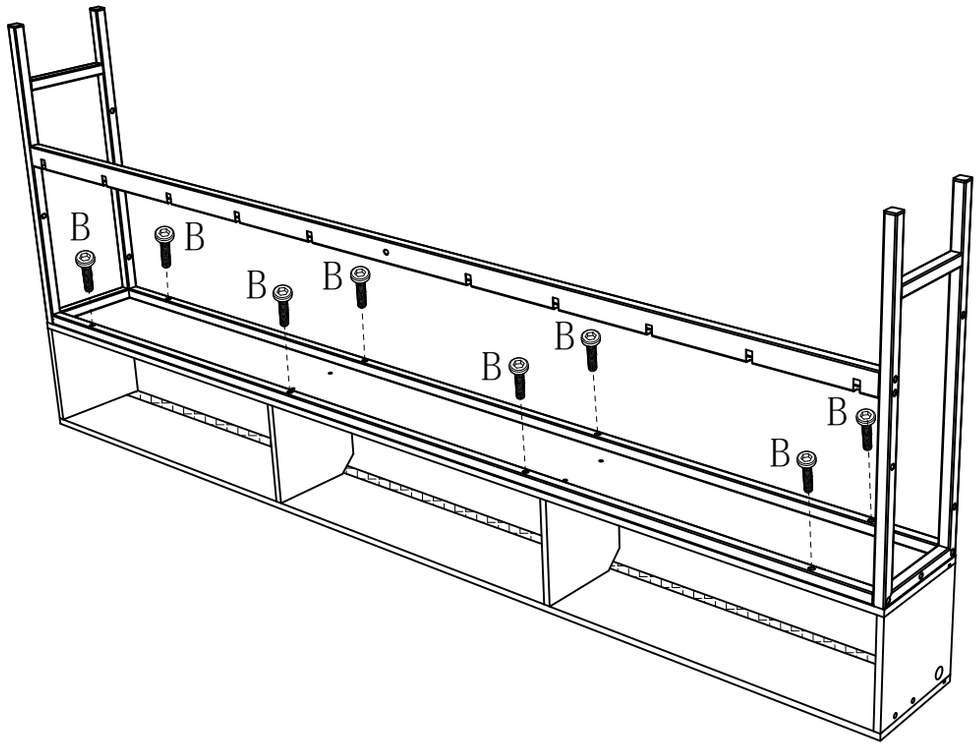

STEP 15

B		M6*28mm 4pcs

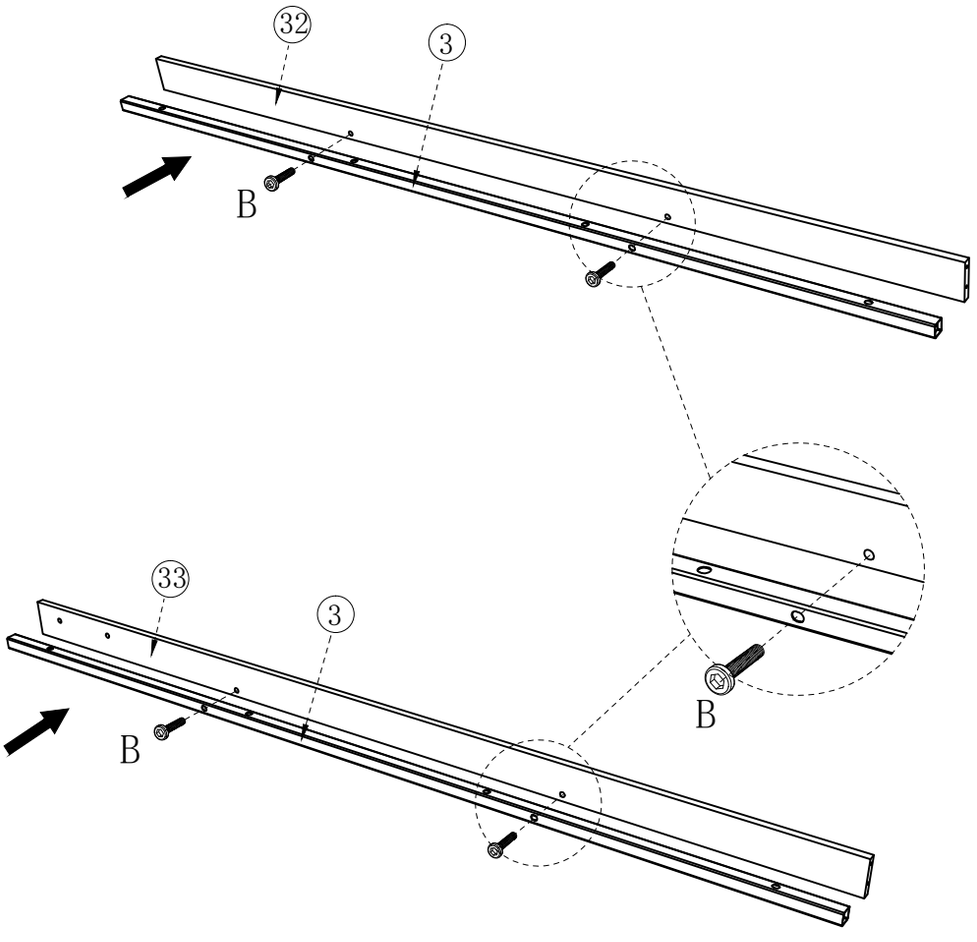

STEP 16


A		M5*40mm 8pcs
C		M6*35mm 4pcs

The first step is to install N0.A screw.

Second step is to install N0.C screw.


STEP 17

B		M6*28mm 10pcs

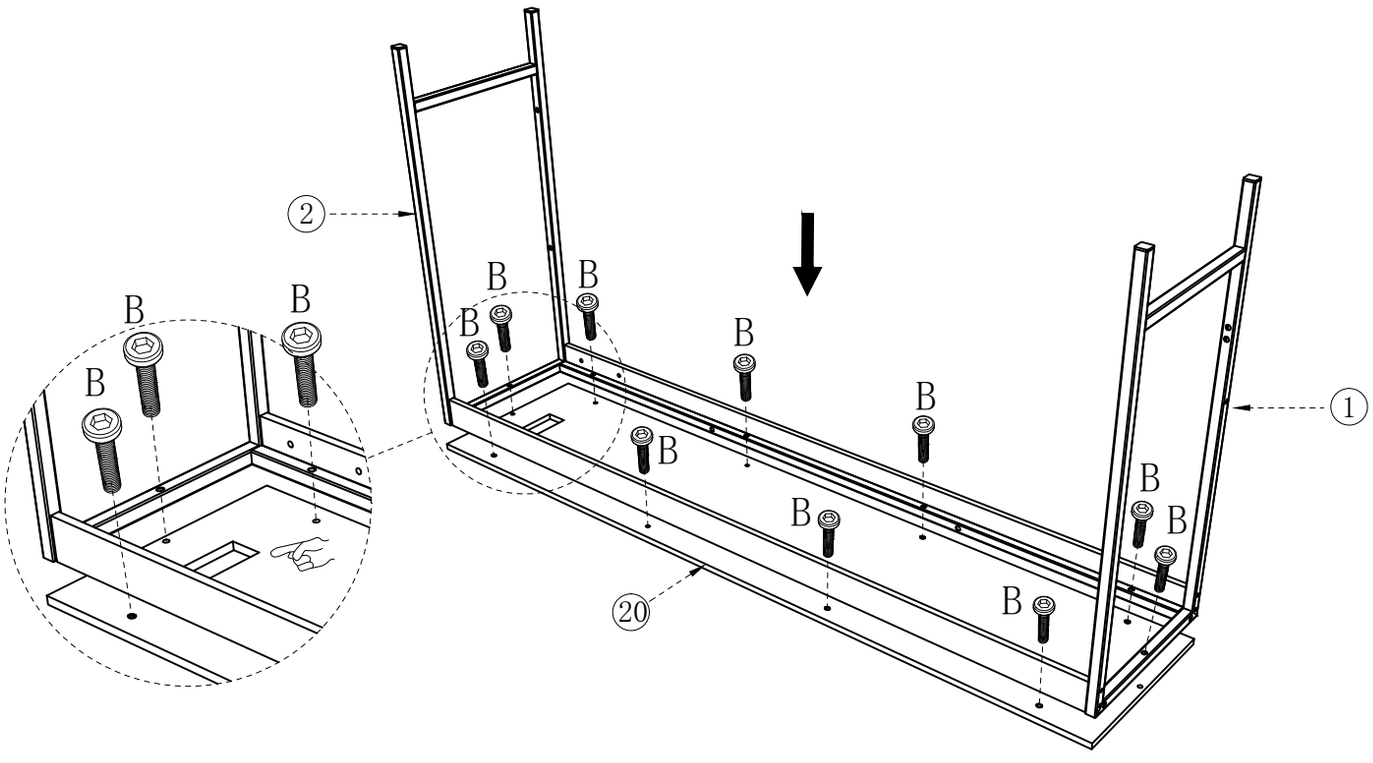


STEP 18

E		M4*10mm 2pcs
F		1pcs

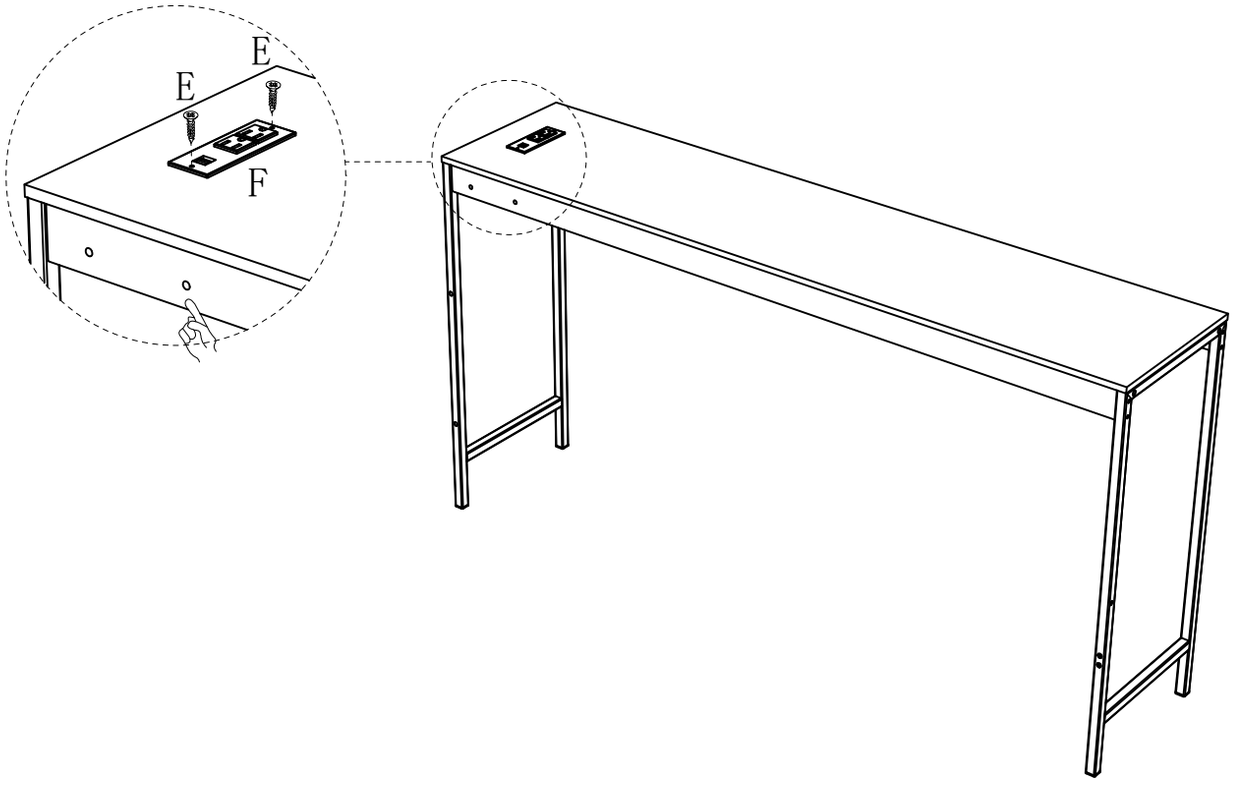


STEP 19

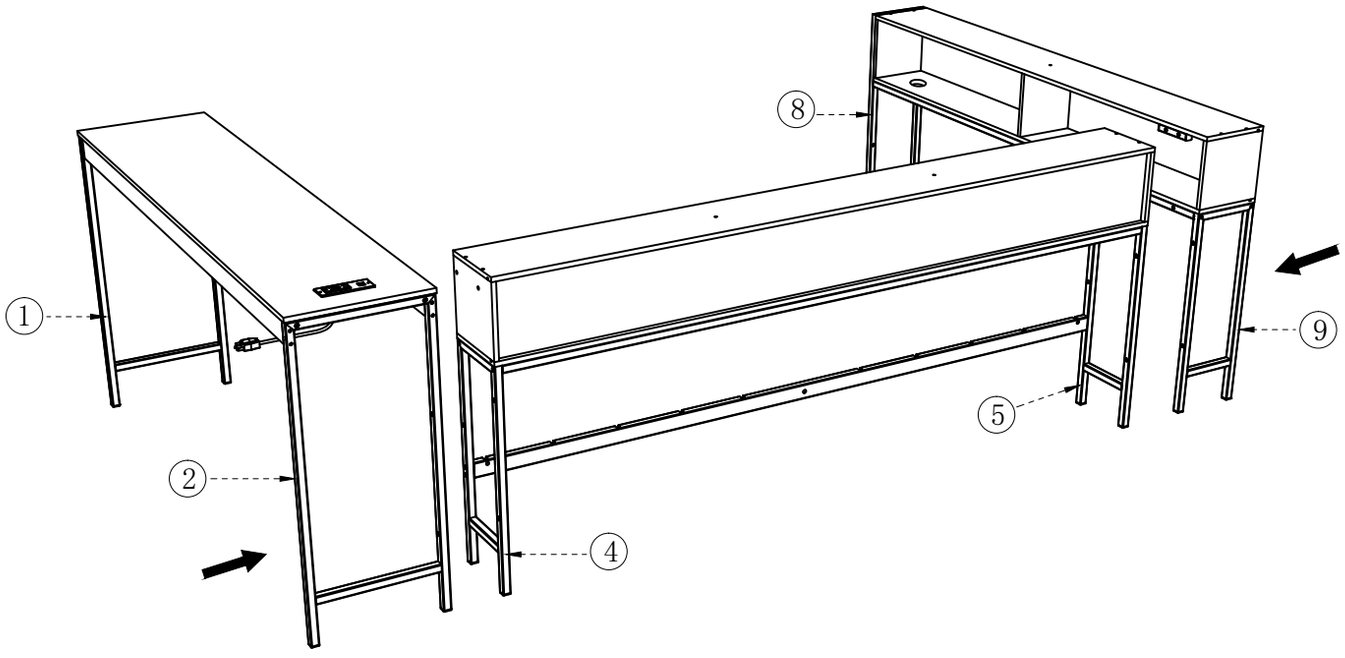


STEP 20

G		M6*50mm	5pcs
H		M6	5pcs

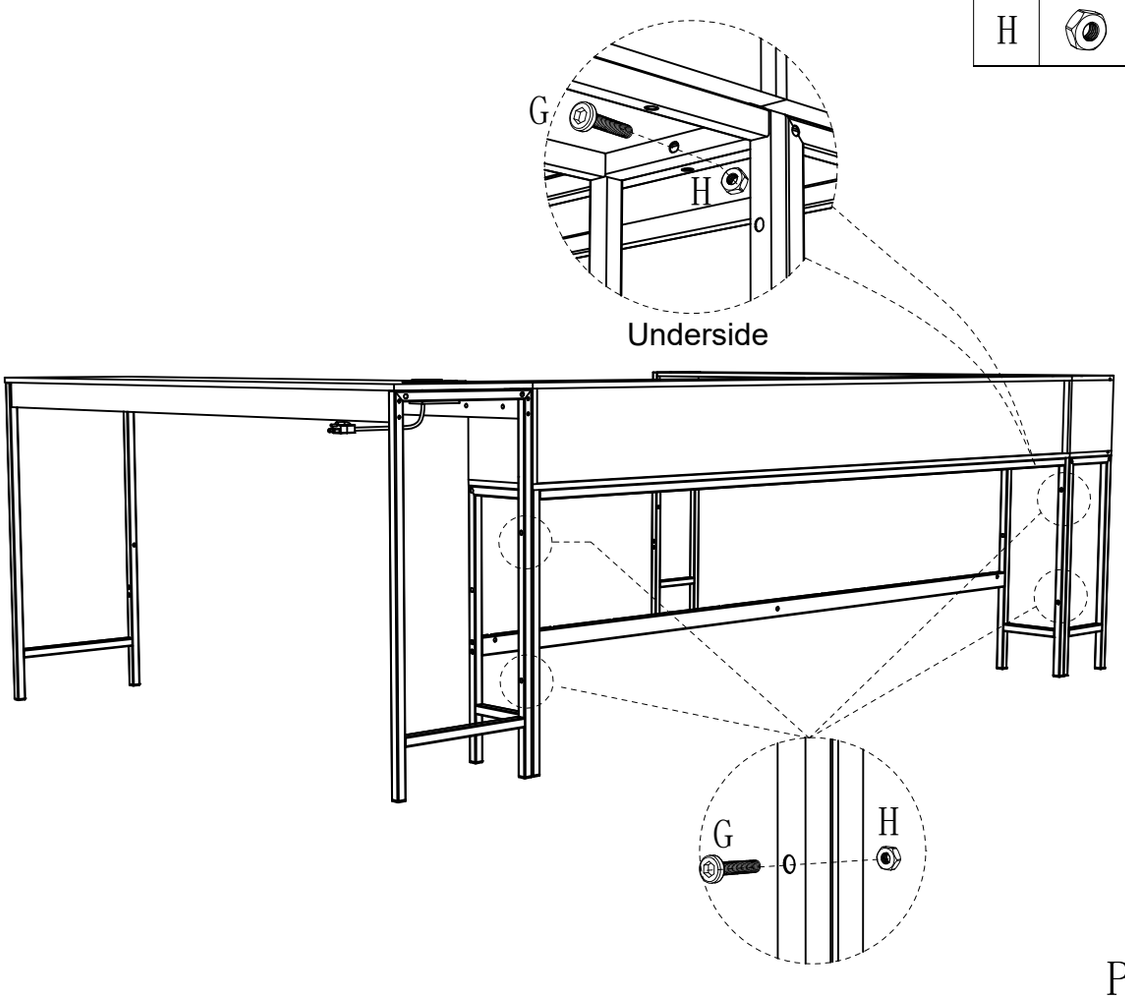


STEP 21

C	M6*35mm	3pcs
Y	M6*60mm	3pcs

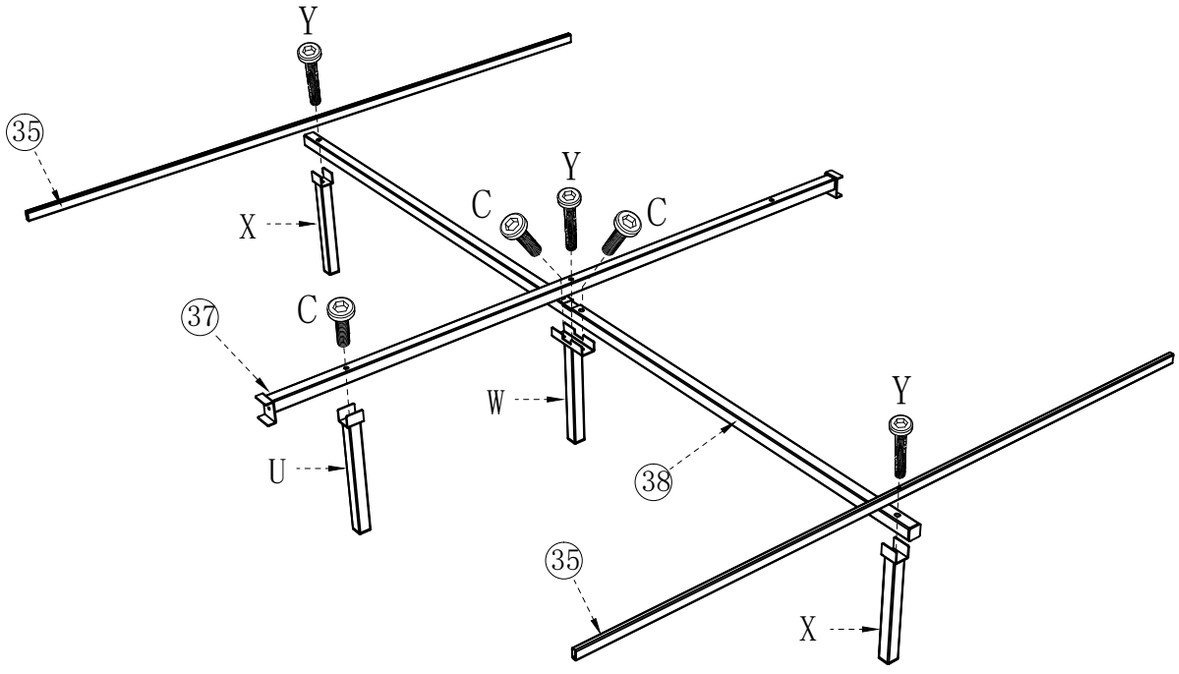


STEP 22

B	M6*28mm	3pcs
I	M4*14mm	8pcs
J		4pcs

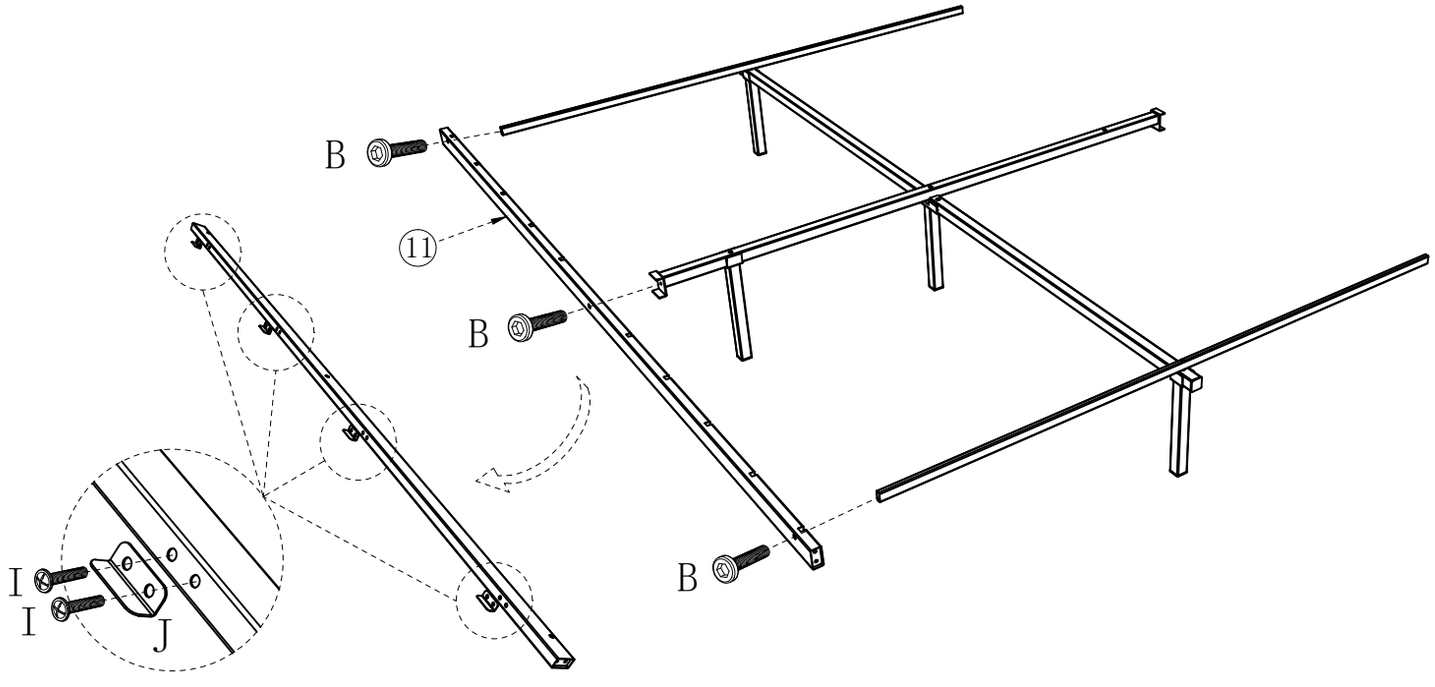


STEP 23

E	M4*10mm	3pcs
P		1pcs

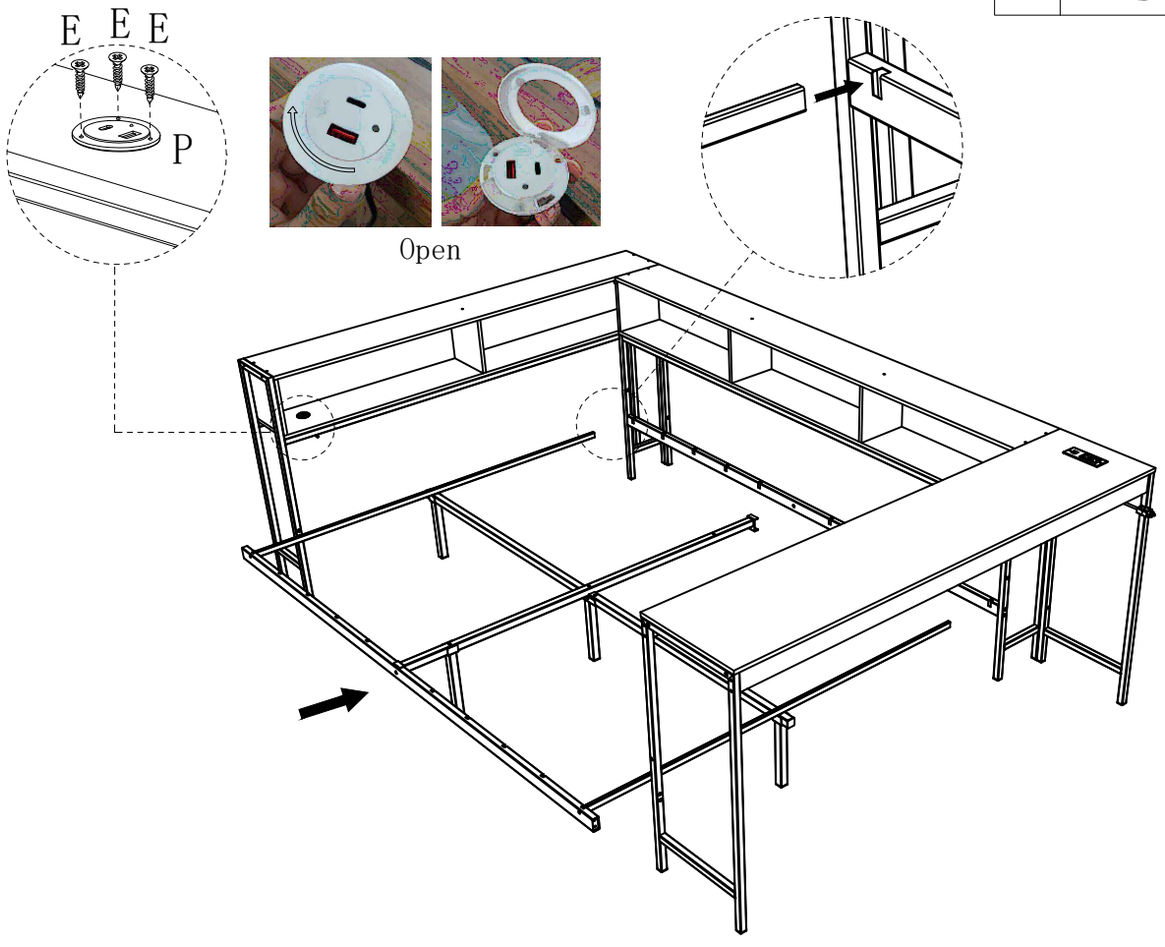


STEP 24

B	M6*28mm	2pcs
C	M6*35mm	4pcs

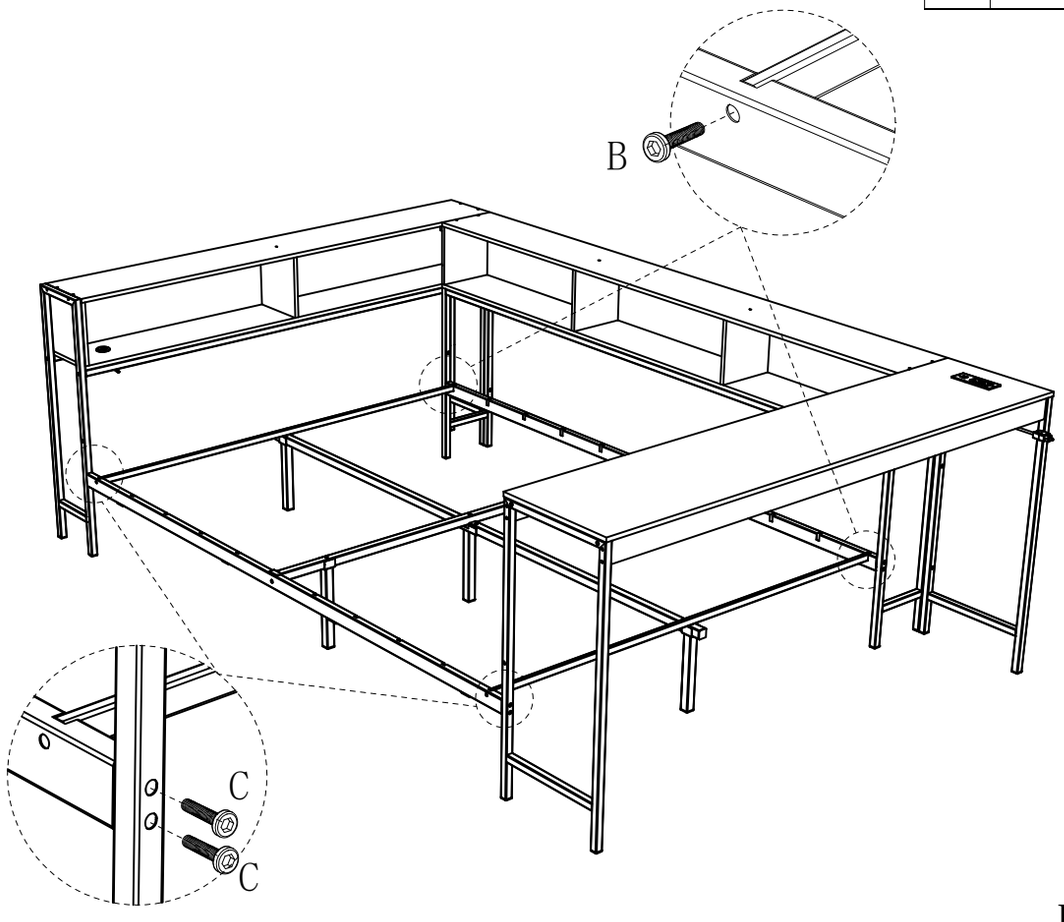


STEP 25

C	M6*35mm	1pcs
G	M6*50mm	1pcs

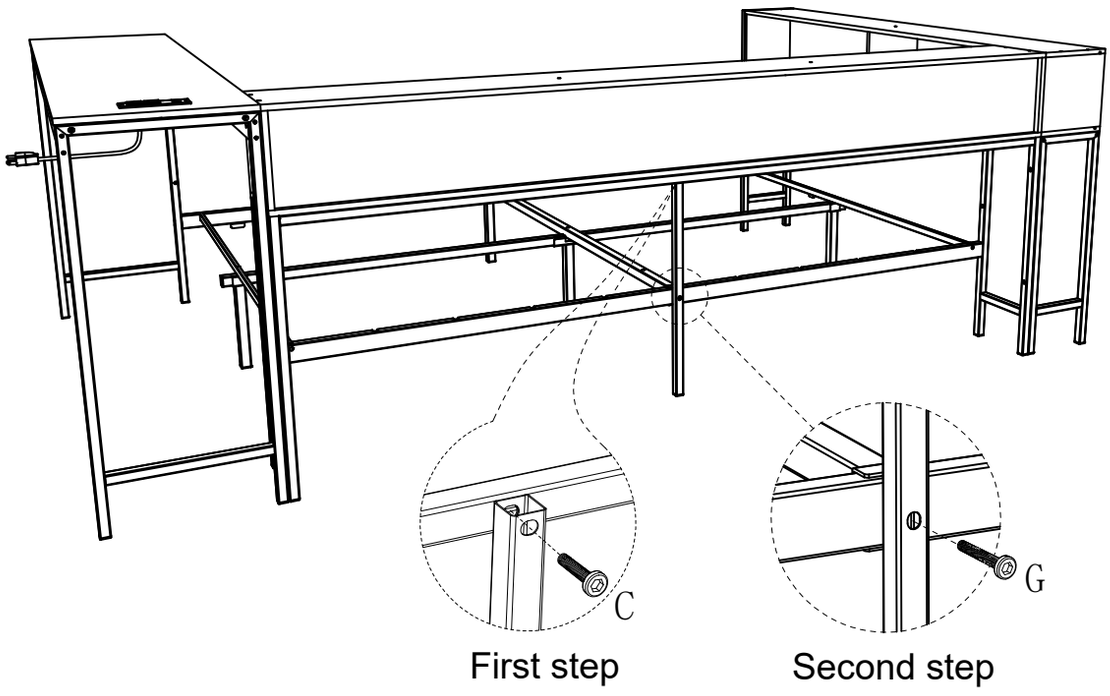

STEP 26


K	M6*25mm	4pcs

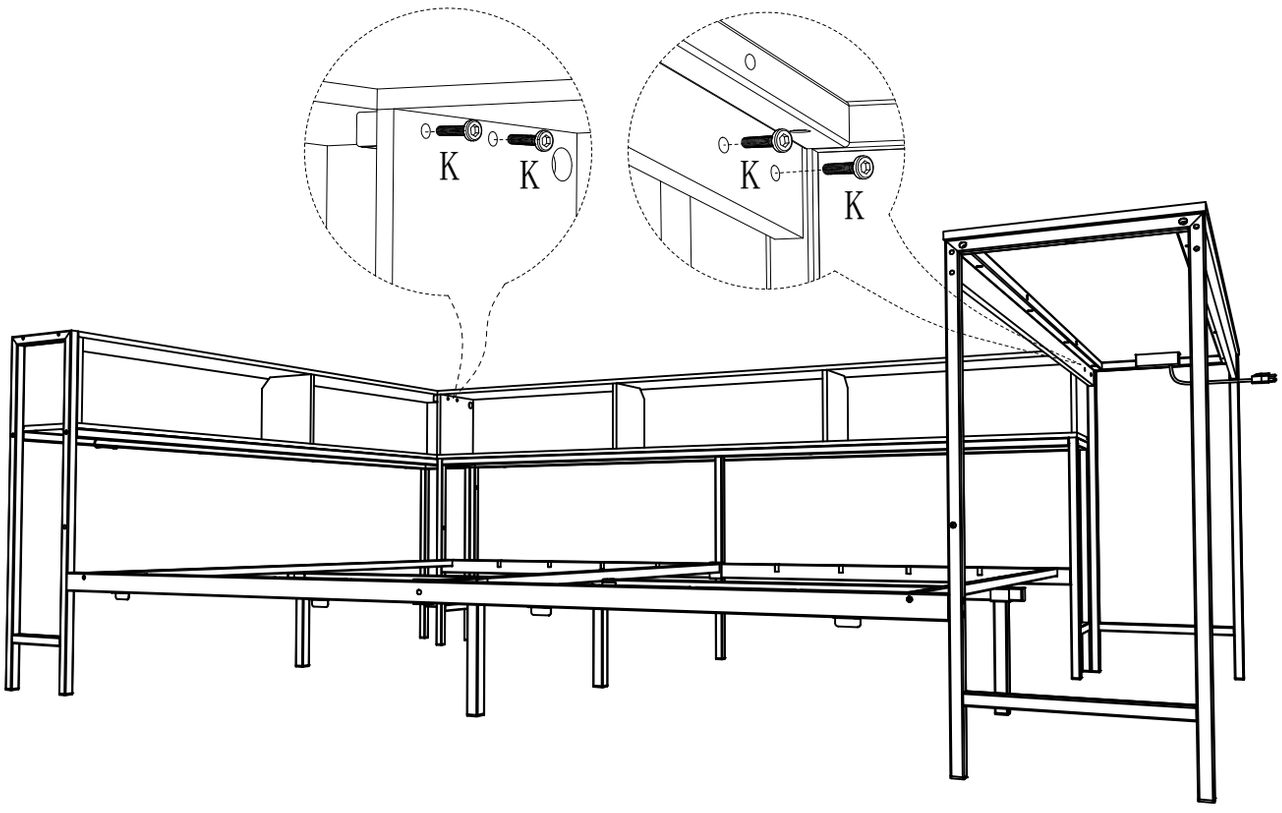


STEP 27

L		1pcs
M		1pcs


Step 1: The light belt first passes through the hole behind the board.

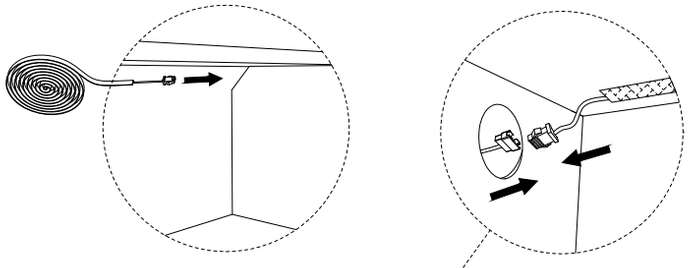

Step 2: Connect the plug
Step 3: Paste led light bar

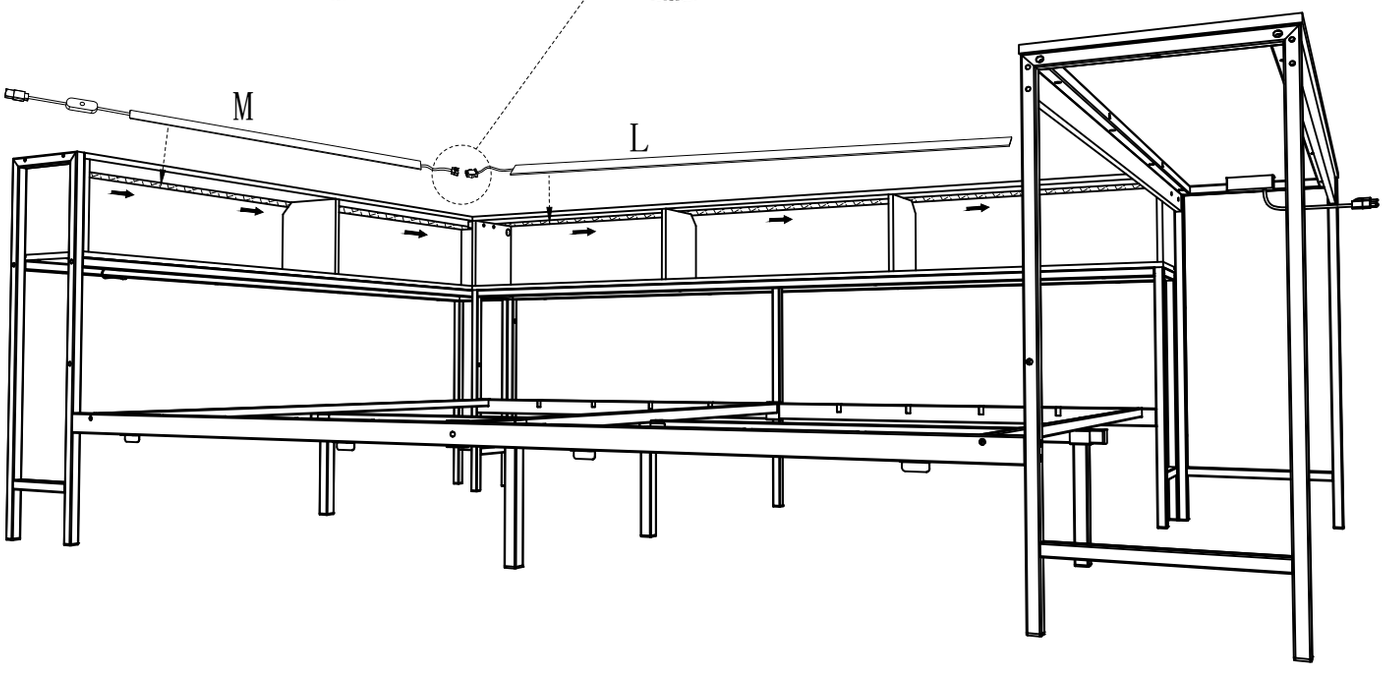


STEP 28

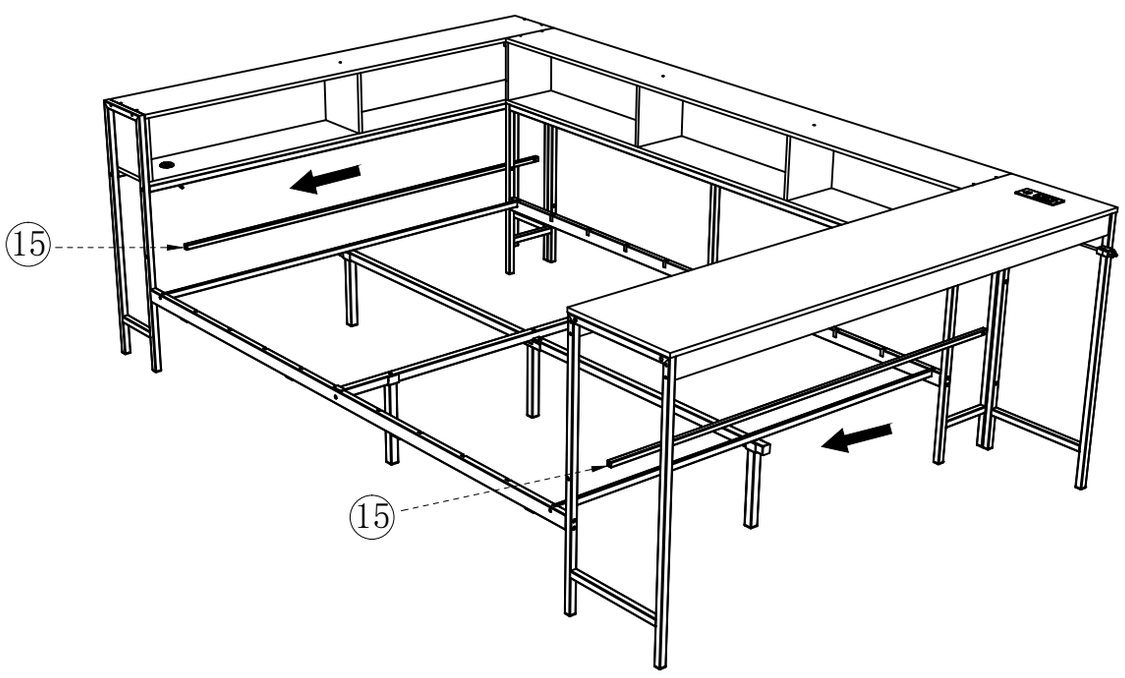


STEP 29

C	M6*35mm 4pcs

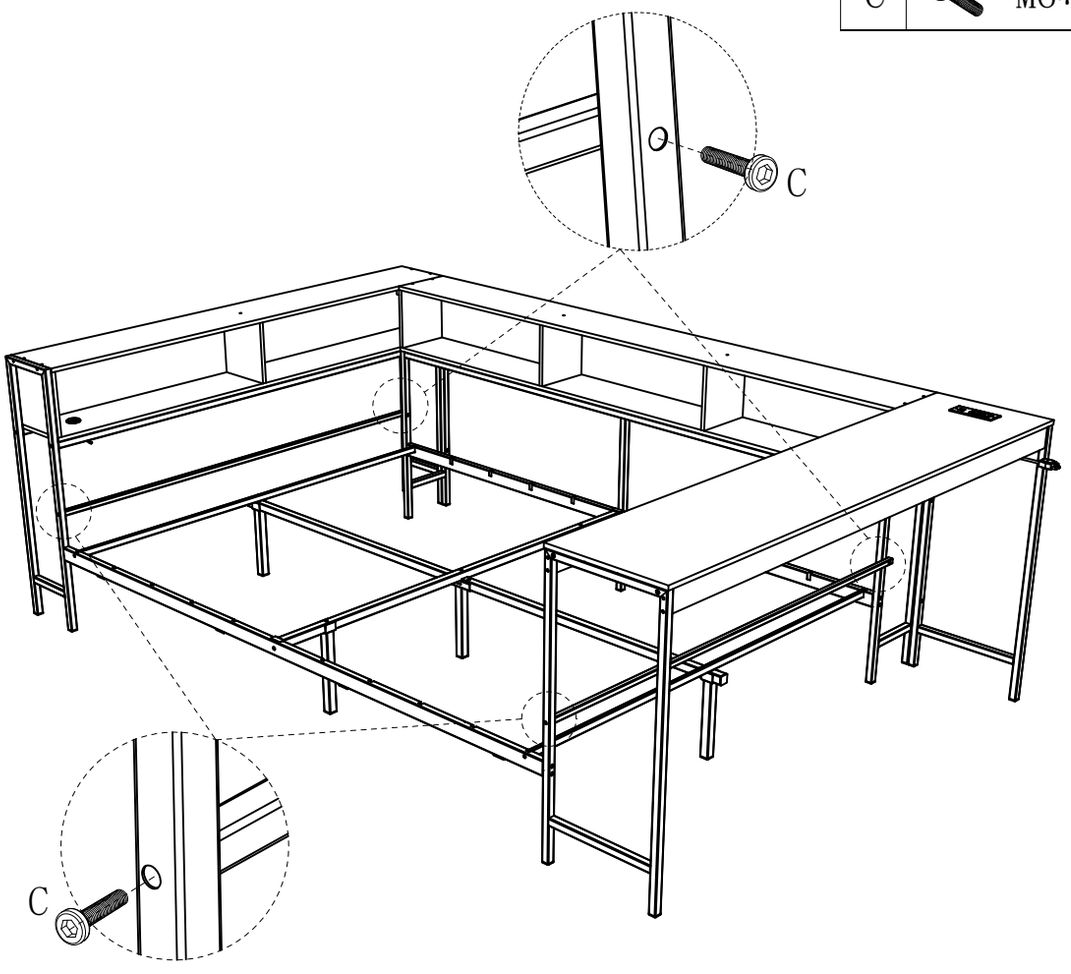


STEP 30

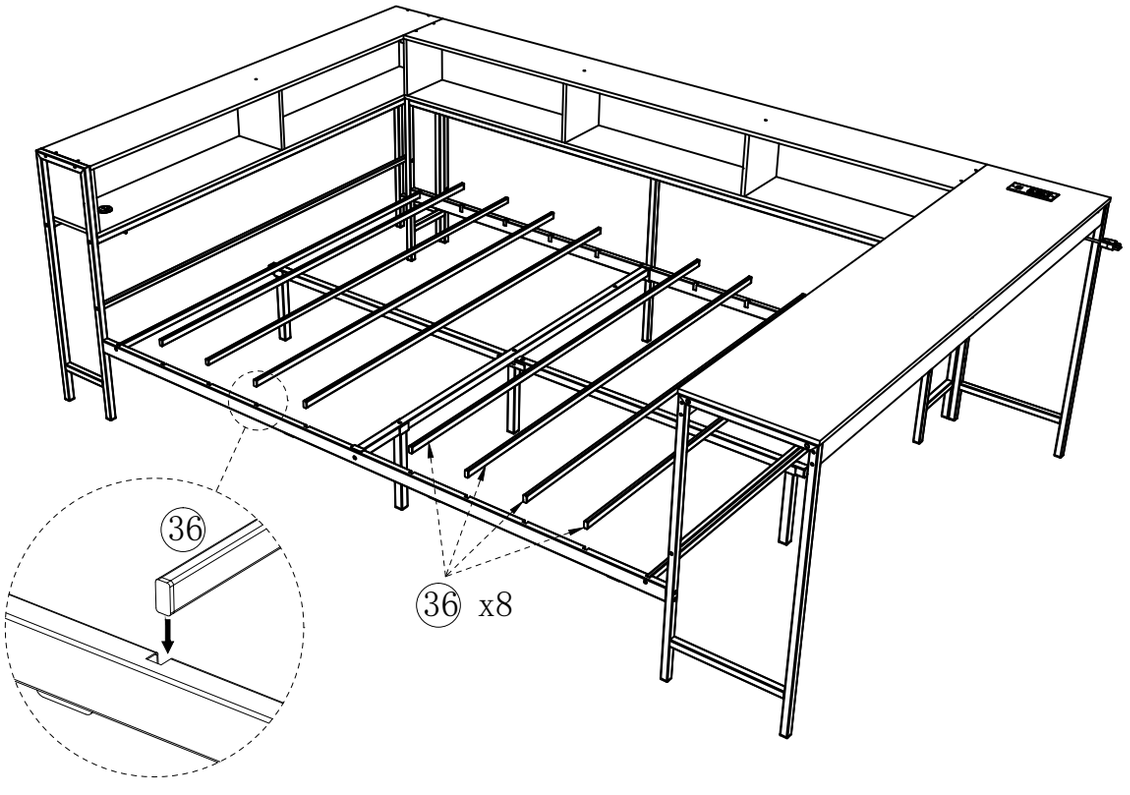


STEP 31

N	M4*18mm	12pcs

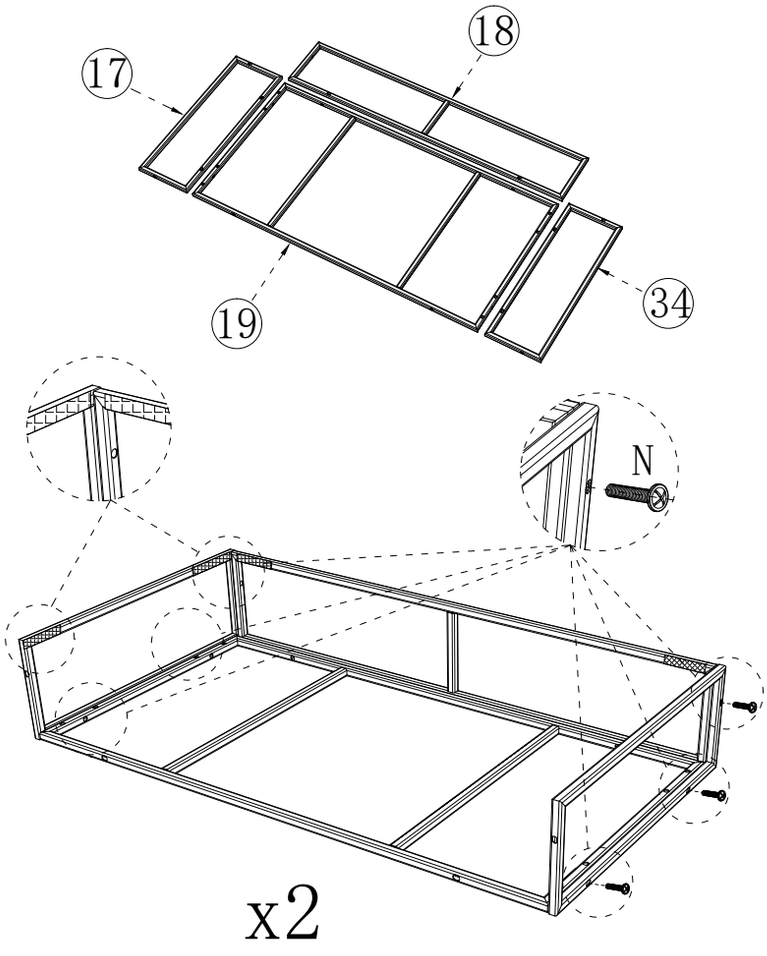


STEP 32

I	M4*14mm	16pcs
0	1.0	8pcs

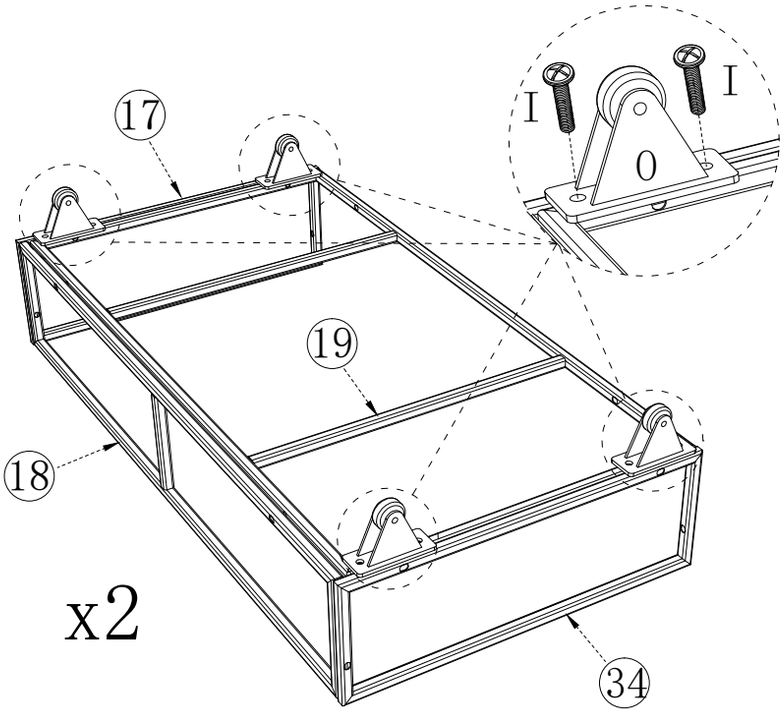


STEP 33

N	M4*18mm 12pcs

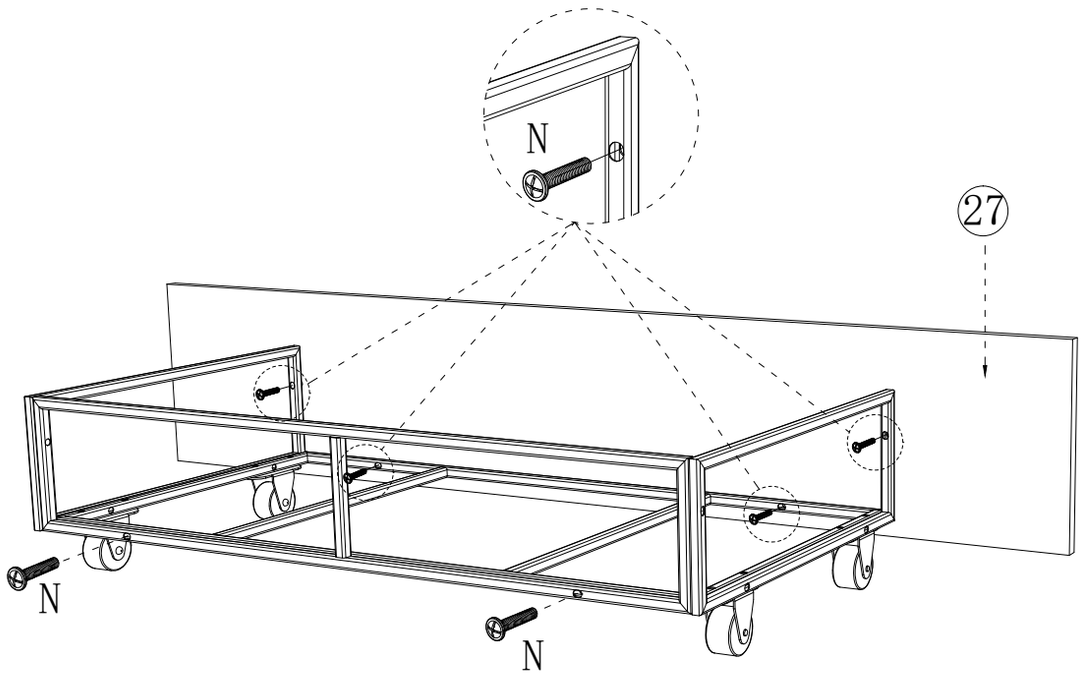


x2

STEP 34

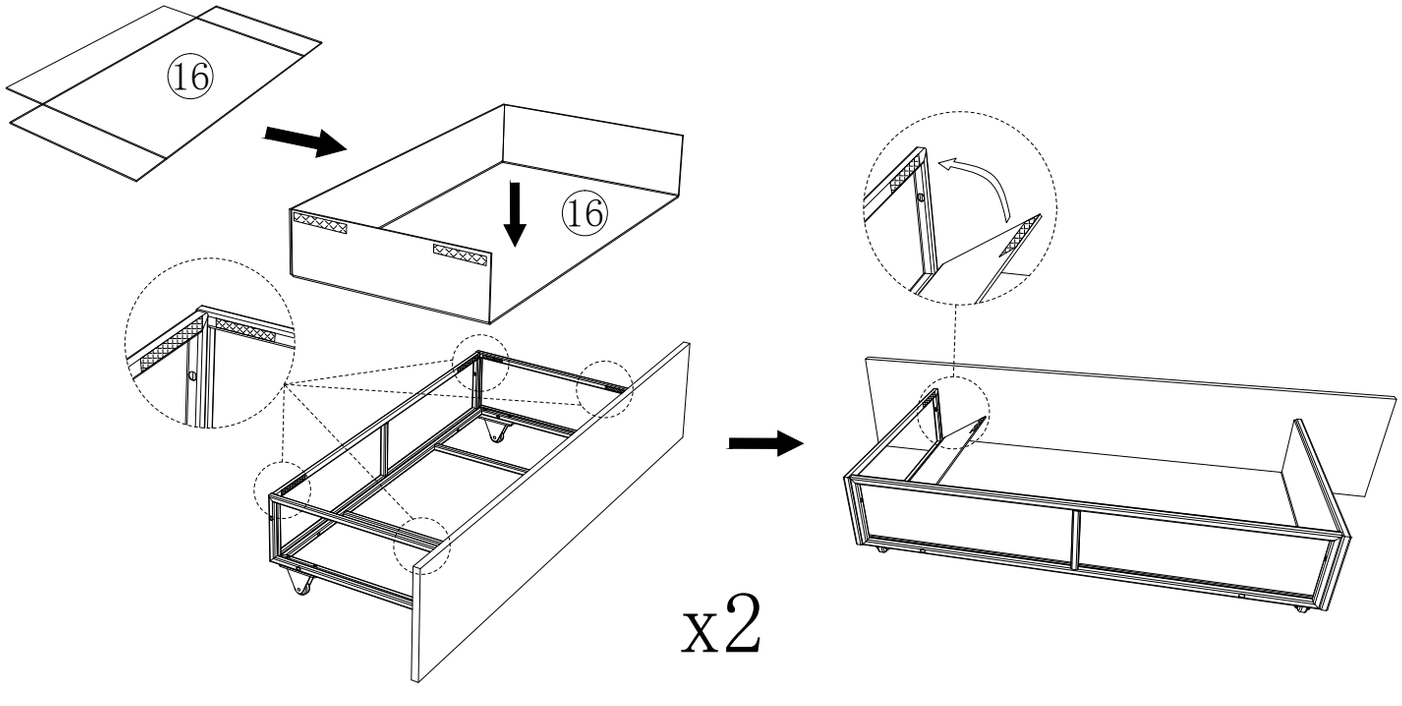

x2

STEP 35

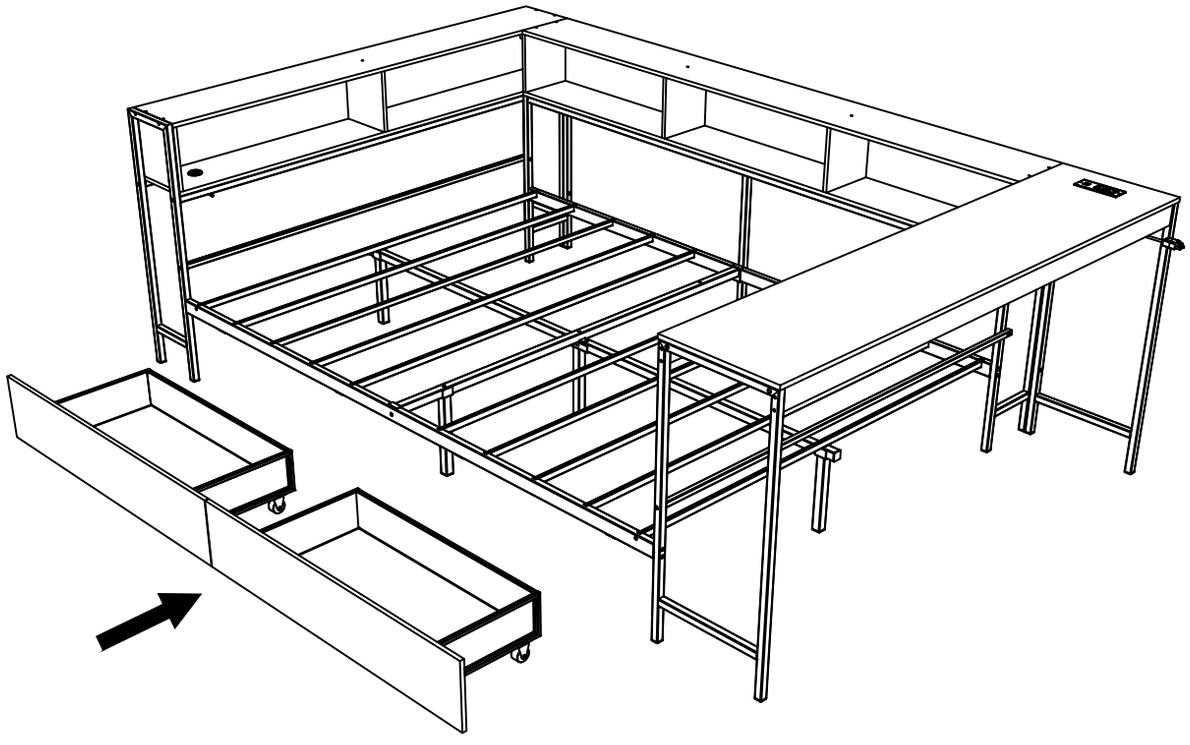

STEP 36

