


ASSEMBLY INSTRUCTIONS


TWIN SIZE CORNER DAYBED WITH STORAGE DRAWER & DESK & BOOKCASE

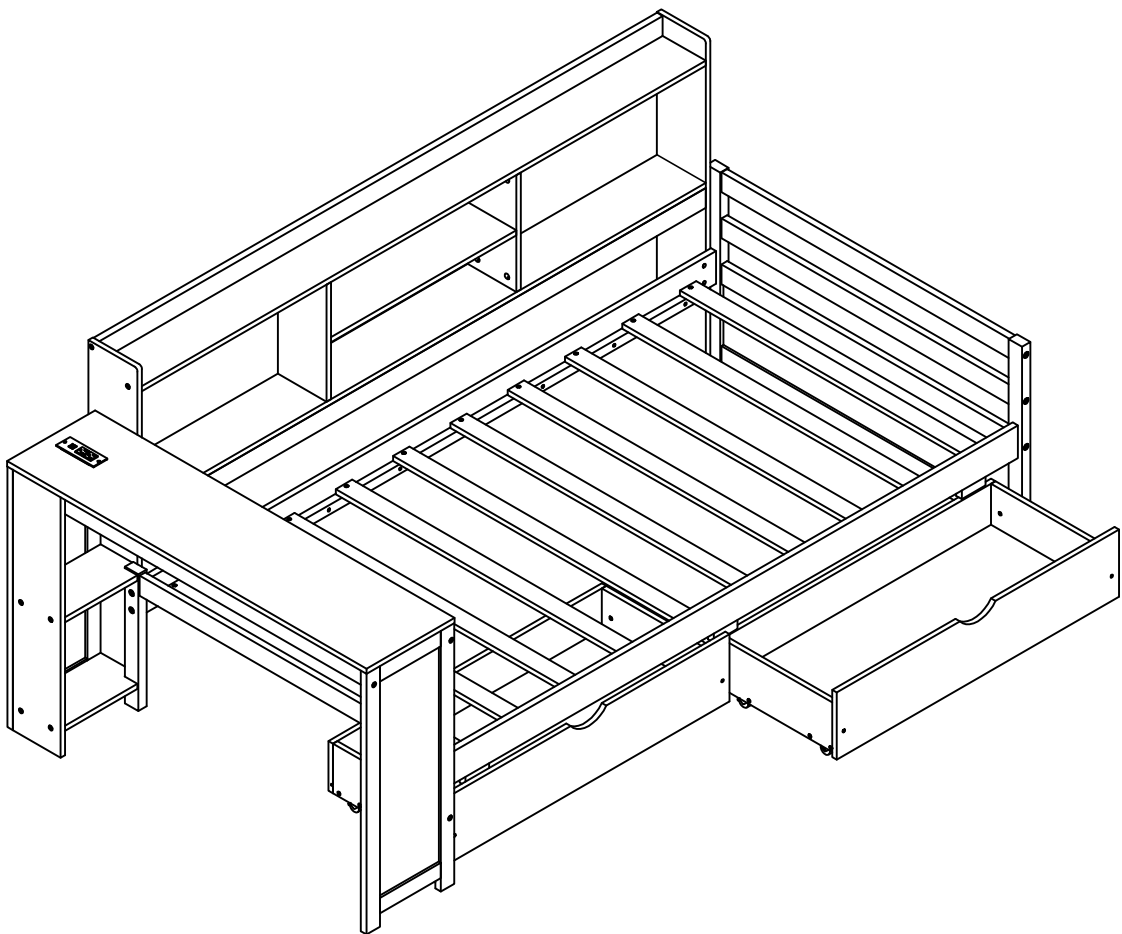








YX5550

**(W697P435876/W697P435877/
W697P435878/W697P435879)**










Detail View

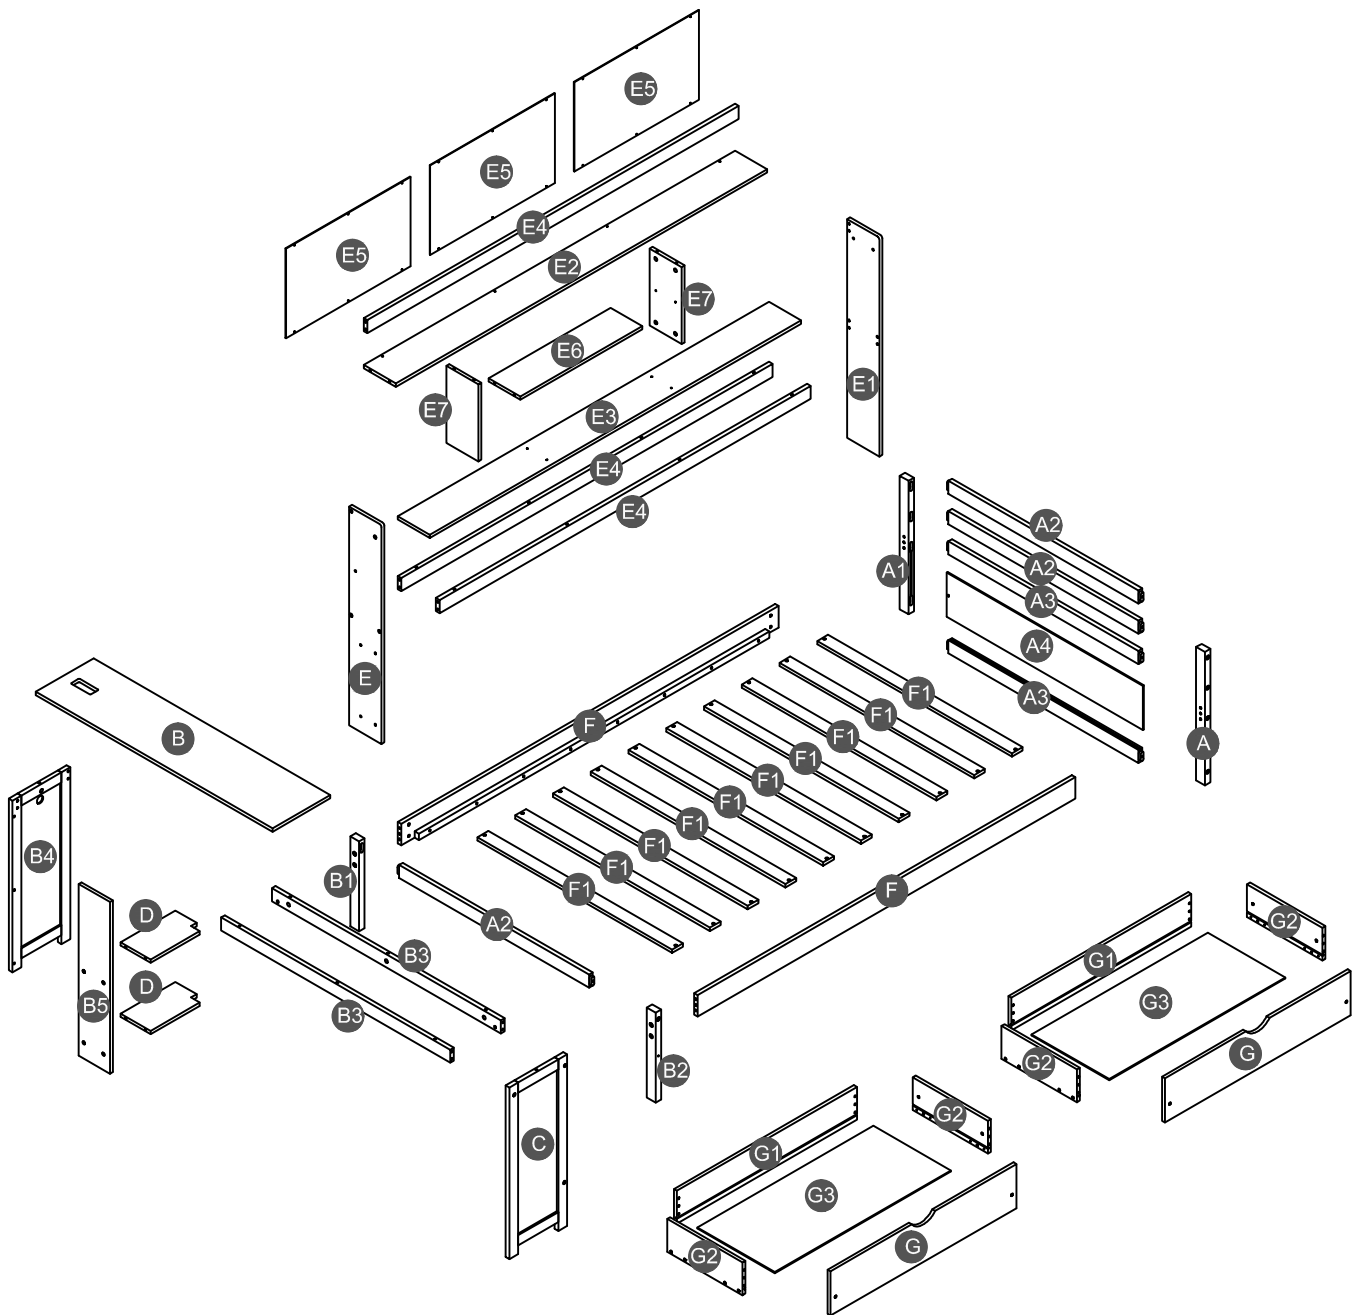








Part list & Hardware list (Box 1 - YX5550 (1-2))

A2  Upper horizontal bar HB/FB - 3pcs	A3  Lower horizontal bar HB - 2pcs	A4  Panel HB - 1pc
B  Top panel (Desk) - 1pc	B3  Apron (Desk) - 2pcs	B4  Desk frame (back) - 1pc
C  Desk frame (front) - 1pc	D  Shelf panel (Desk) - 2pcs	E2  Top panel (Bookcase) - 1pc
E3  Bottom panel (Bookcase) - 1pc	E4  Horizontal bar (Bookcase) - 3pcs	E7  Mid panel (Bookcase) - 2pcs
F  Side rail - 2pcs	F1  Slats - 10pcs	G2  Left / right drawer panel - 4pcs


Part list (Box 2 - YX5550 (2-2))

A  Leg HB (front) - 1pc	A1  Leg HB (back) - 1pc	B1  Leg HB (back) - 1pc
B2  Leg FB (front) - 1pc	B5  Side panel (left) - 1pc	E  Side panel - Left (Bookcase) - 1pc
E1  Side panel - Right (Bookcase)- 1pc	E5  Back panel - Right (Bookcase)- 3pcs	E6  Shelf panel (Bookcase) - 1pc
G  Front drawer panel - 2pcs	G1  Back drawer panel - 2pcs	G3  Drawer bottom - 2pcs

Hardware List (Box 1 - YX5550 (1-2))



1	 Ø10*20mm Wood dowel (8pcs)	2	 Ø8*30mm Wood dowel (32pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (18pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (31pcs)	5	 1/4"*15 (9.5mm) Horizontal-Hole bolts(49pcs)	6	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)
7	 Ø4*30mm Wood screws (42pcs)	8	 Ø3.5*15mm Wood screws (18pcs)	9	 Ø3.5*15mm Wood screws (18pcs)
10	 Ø7"*35mm Cam lock (32pcs)	11	 Ø14*9mm Cam lock (32pcs)	12	 40*17*17*1.6mm Metal bracket (4pcs)
13	 1500*125*47*43mm Power outlet	14	 100*52*20 mm Wheels (8pcs)	15	 80*45*19 mm Drawer stopper (3pcs)
16	 (1/4")4.5*58mm Allen key (1pc)				

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

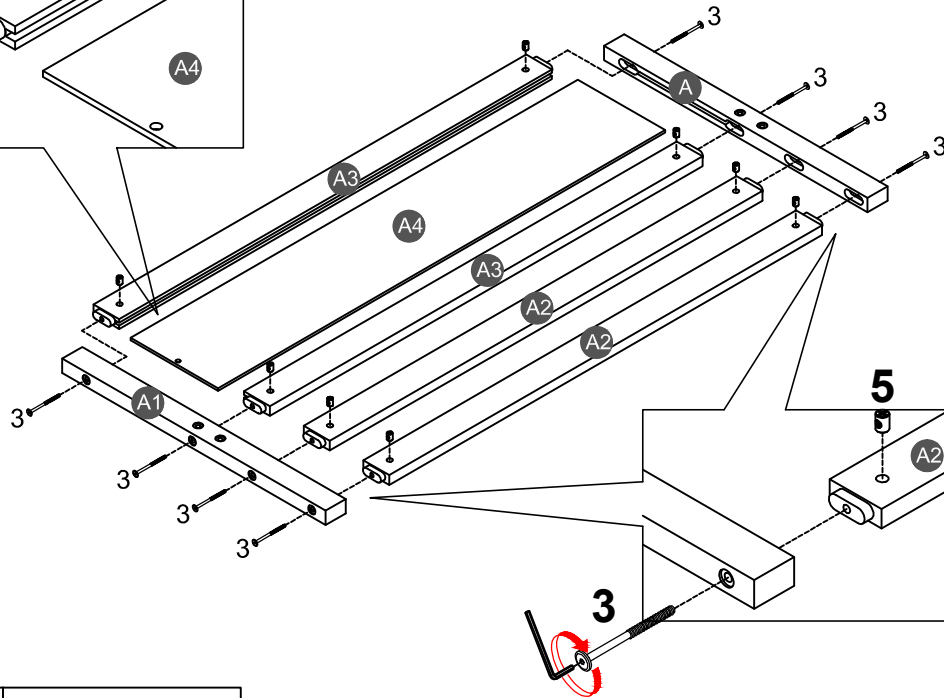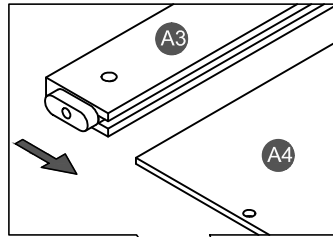


3		5	
8PCS		8PCS	

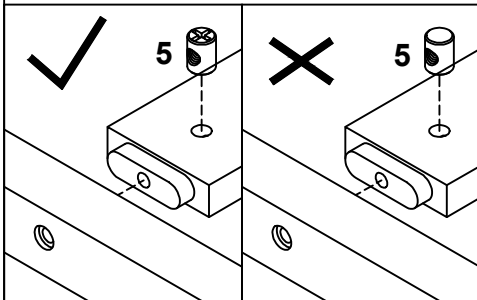

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 2:

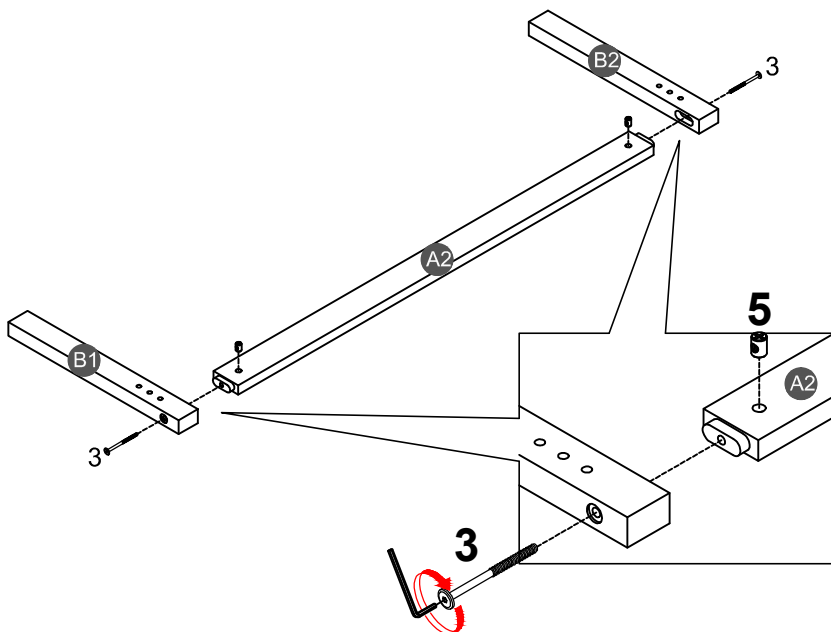

3		5	
2PCS		2PCS	


STEP 3:

7		15	
6PCS		3PCS	

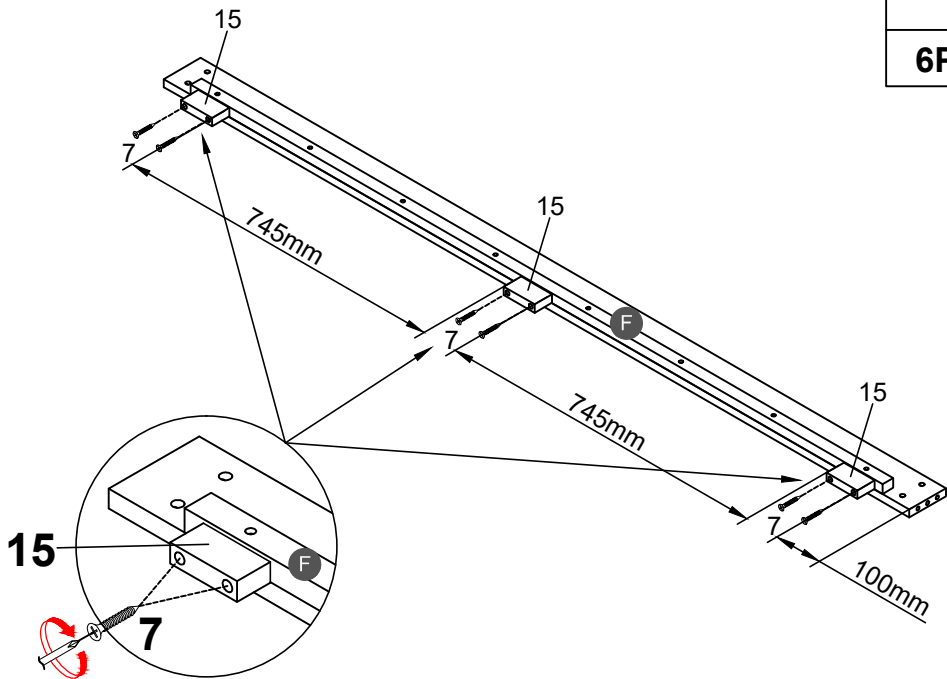

STEP 4:

2		3		5	
4PCS		8PCS		8PCS	


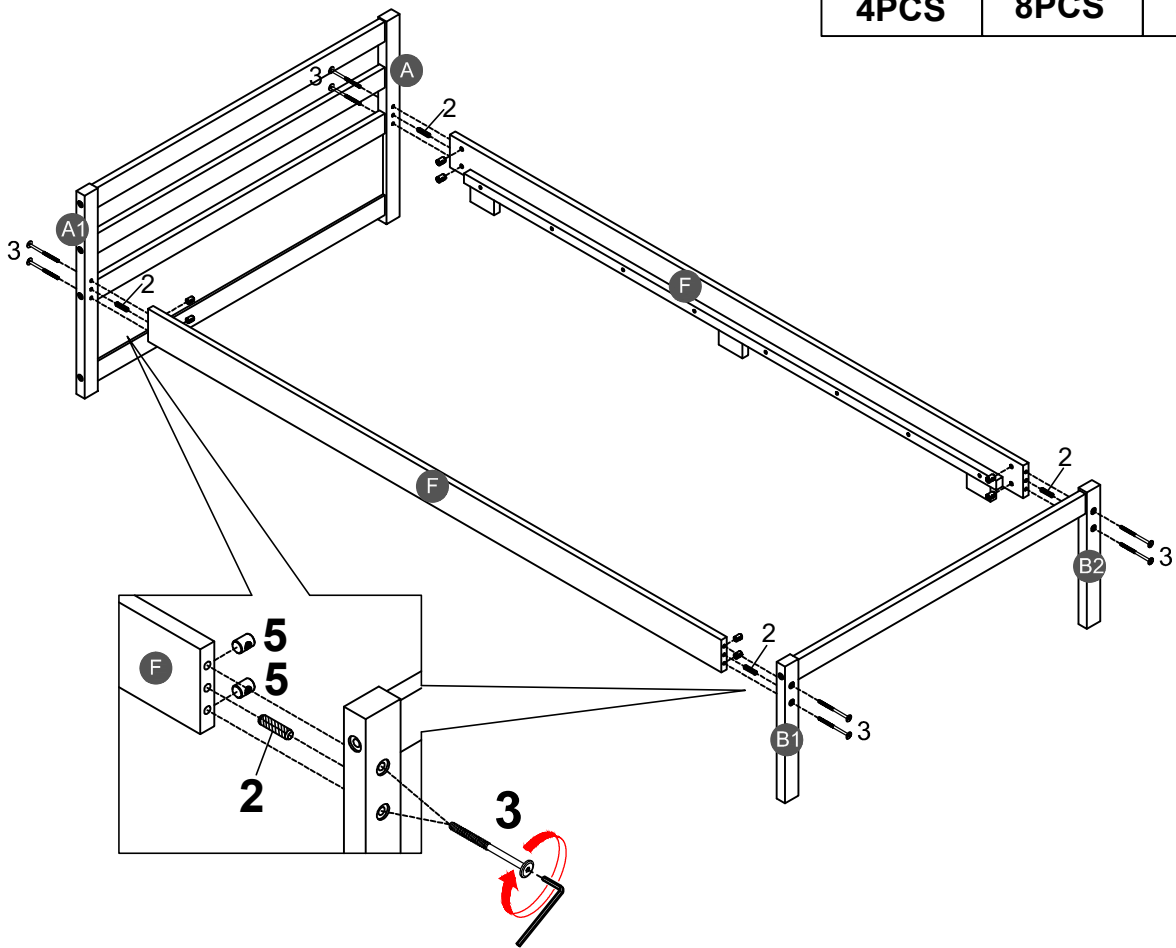


STEP 5:

10




12PCS

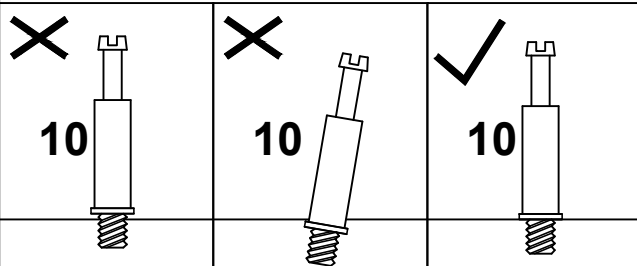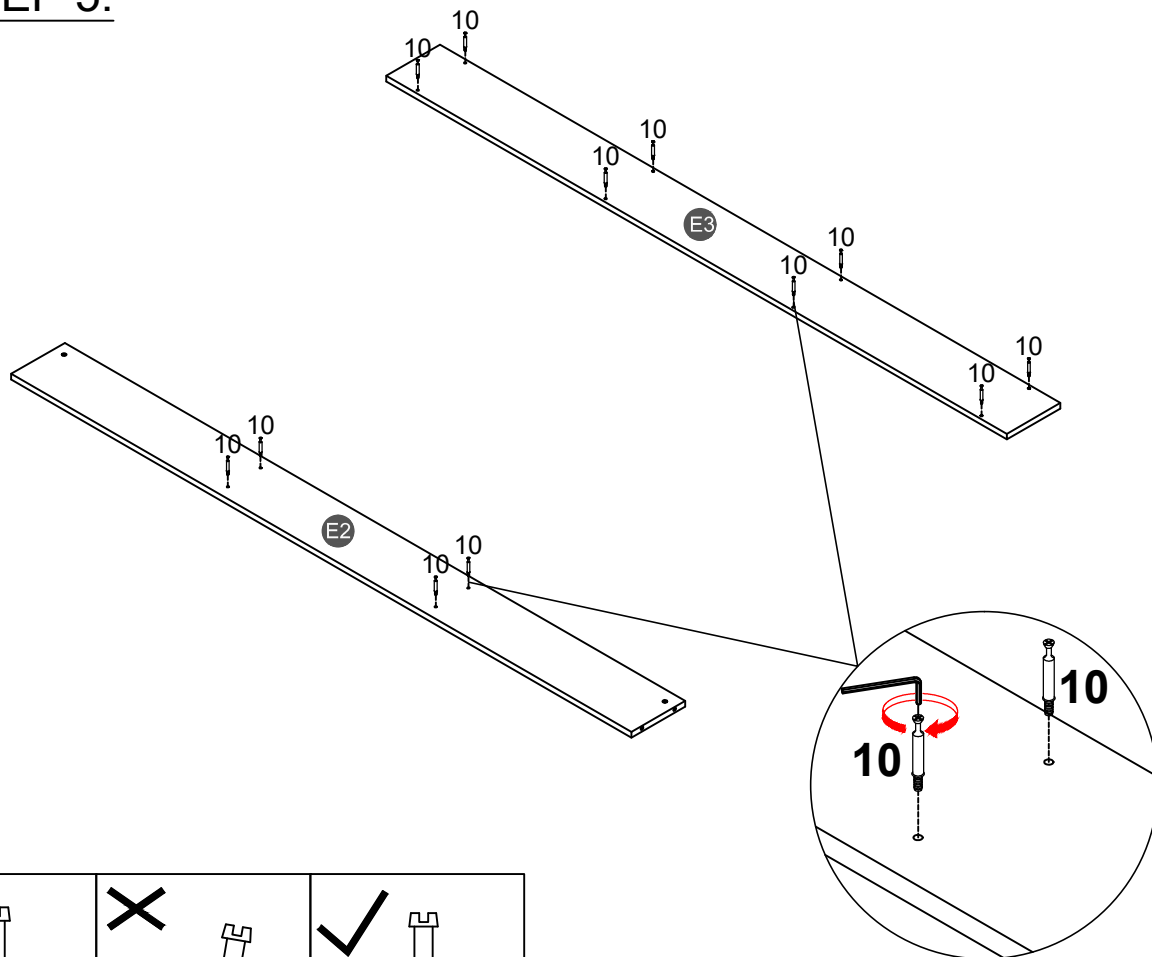


STEP 6:

10



4PCS

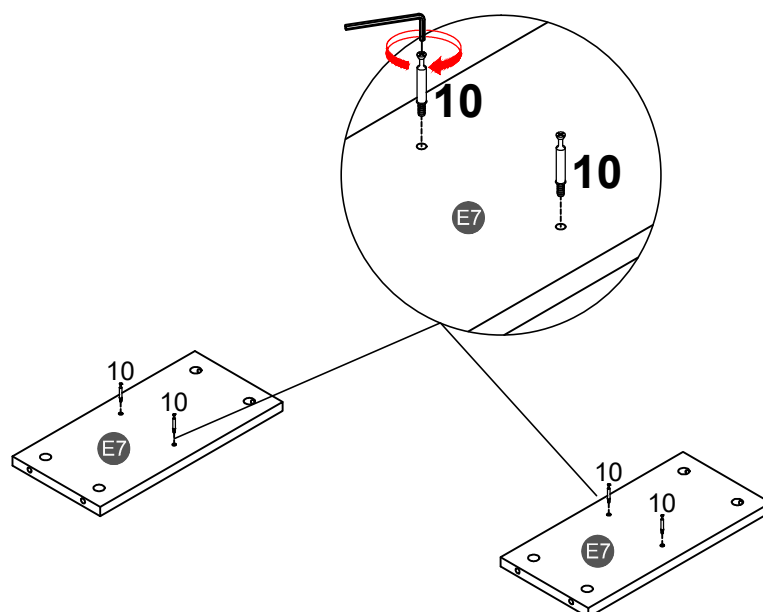


STEP 7:


11




8PCS

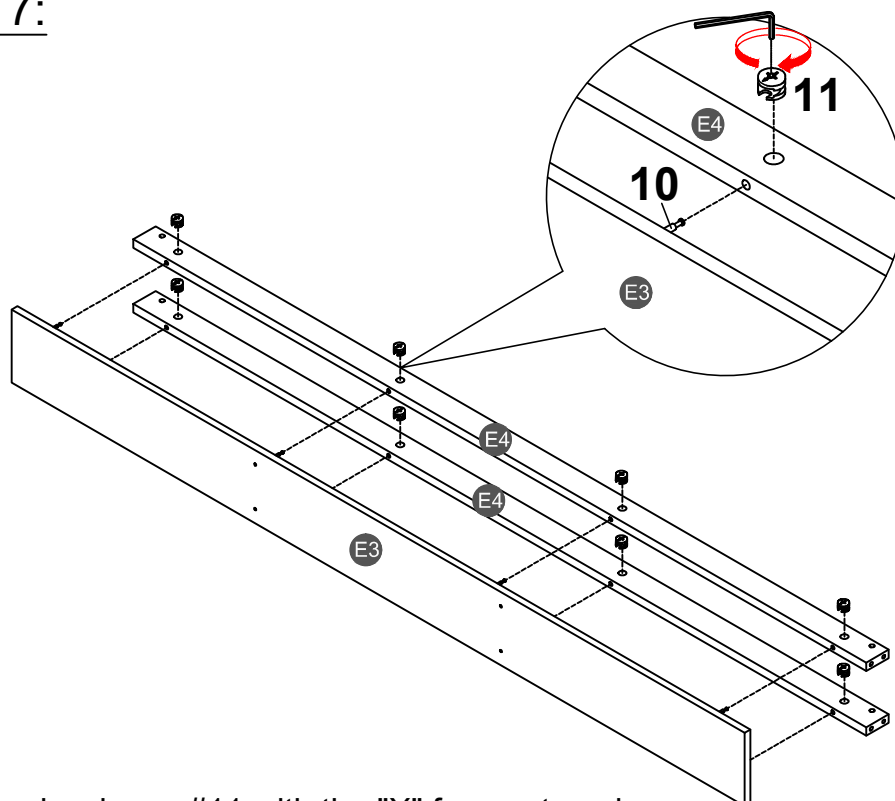


Note: Place hardware #11 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #11 into the hole of hardware #10 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

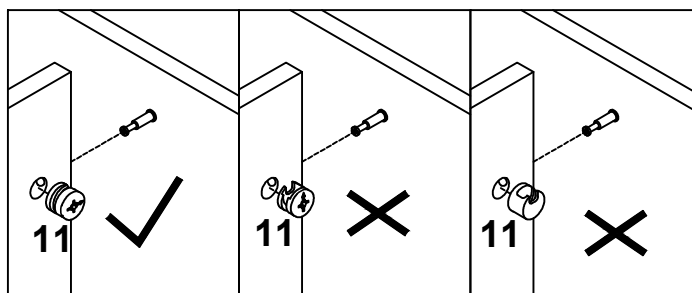

STEP 8:

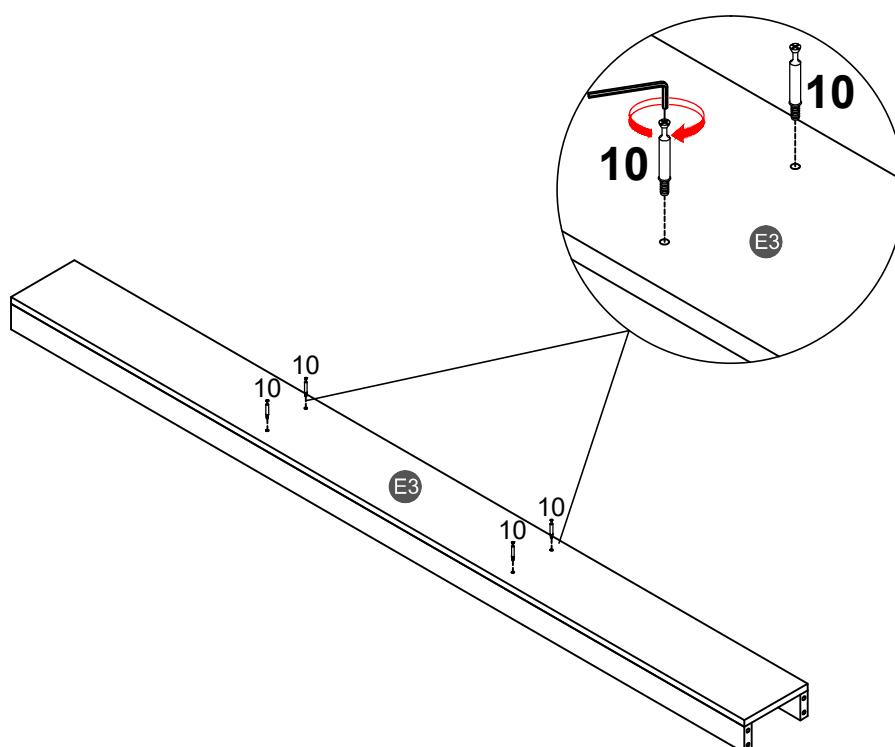

10




4PCS

STEP 9:

11



4PCS

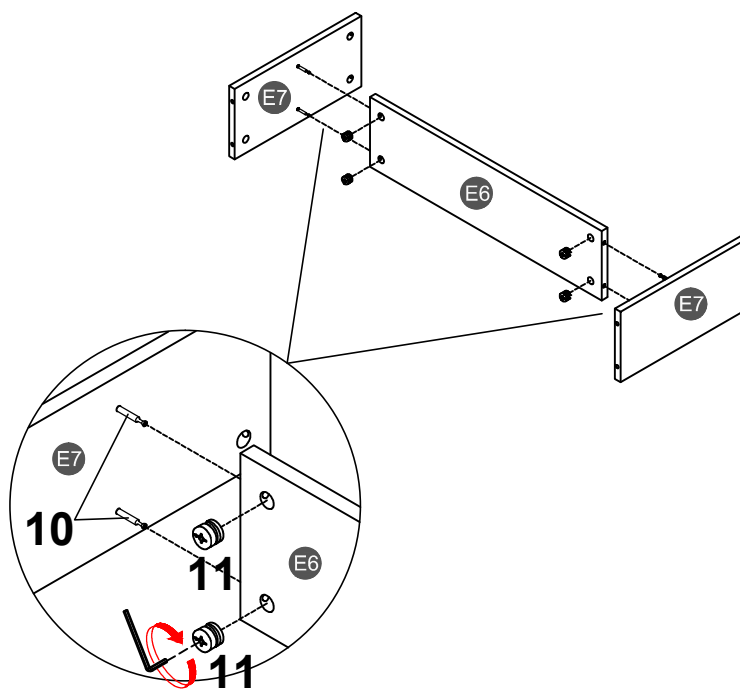


STEP 10:

11




8PCS

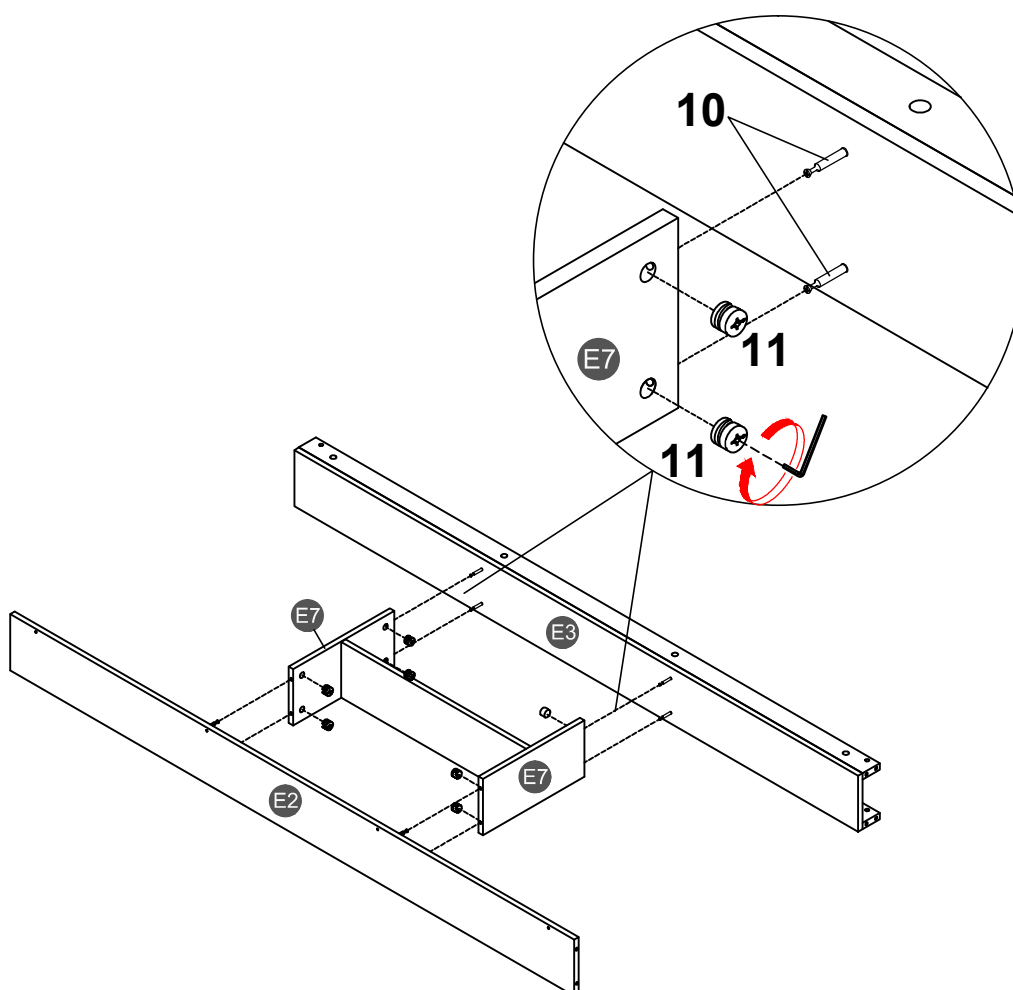


STEP 11:

10



4PCS

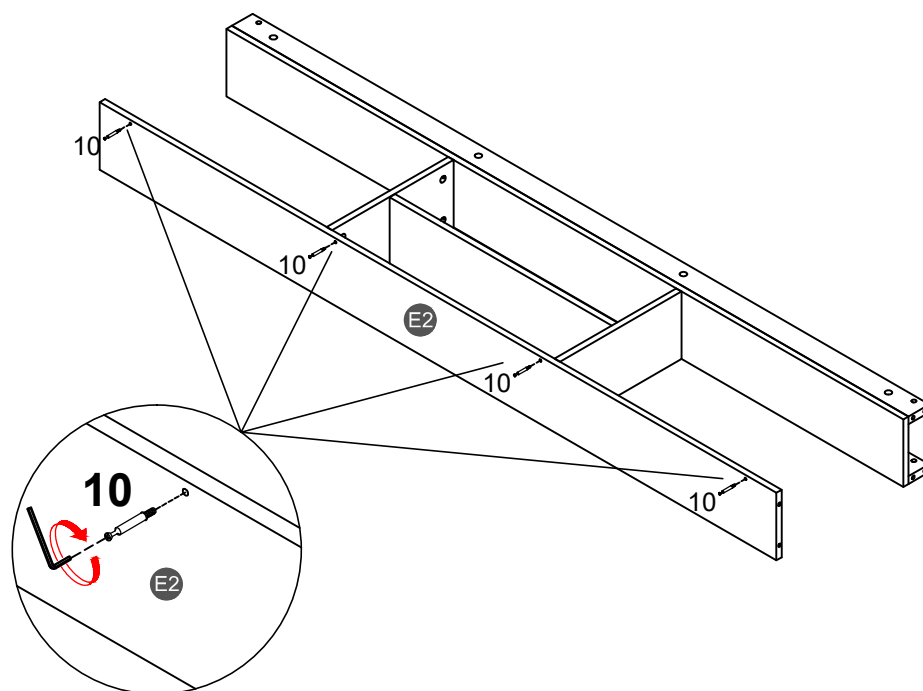


STEP 12:


11




4PCS

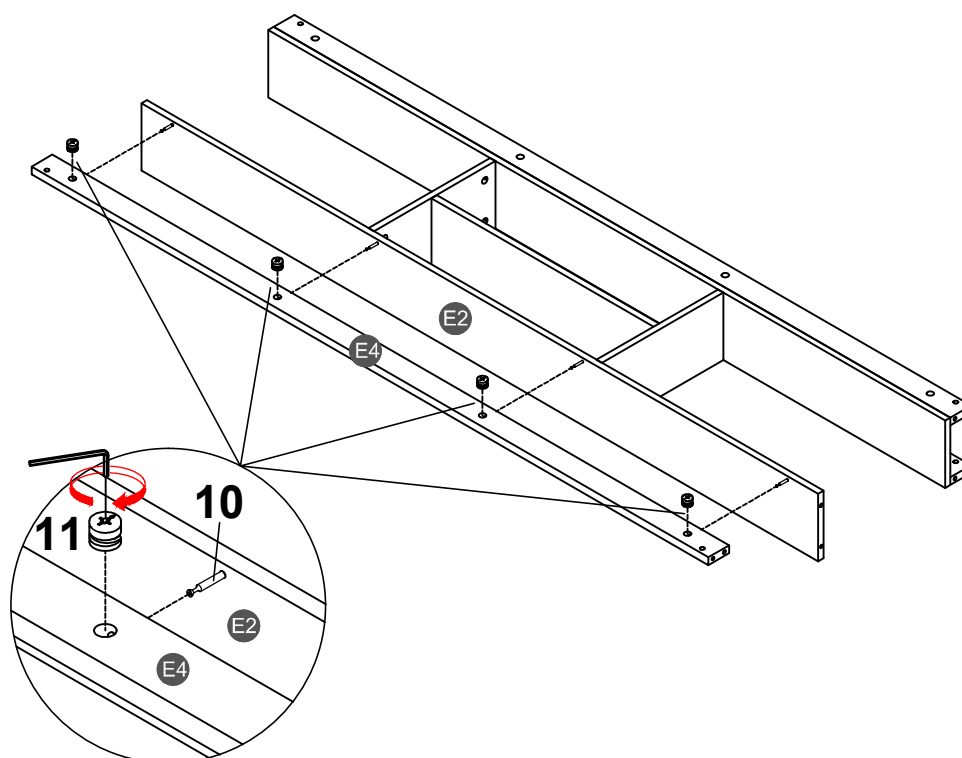


STEP 13:

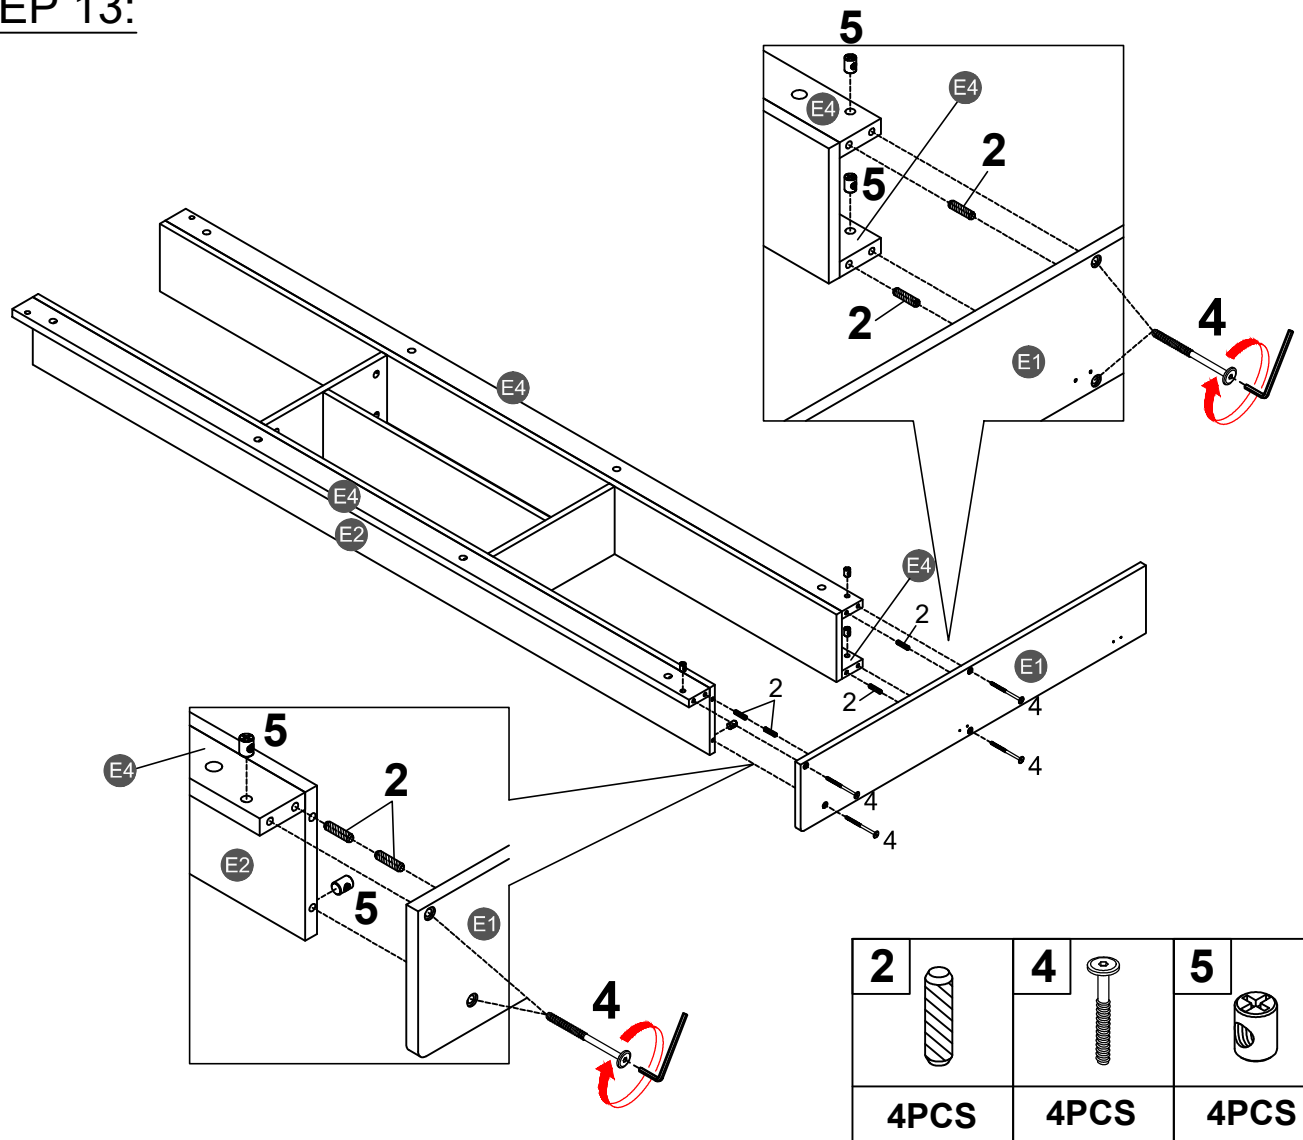


STEP 14:

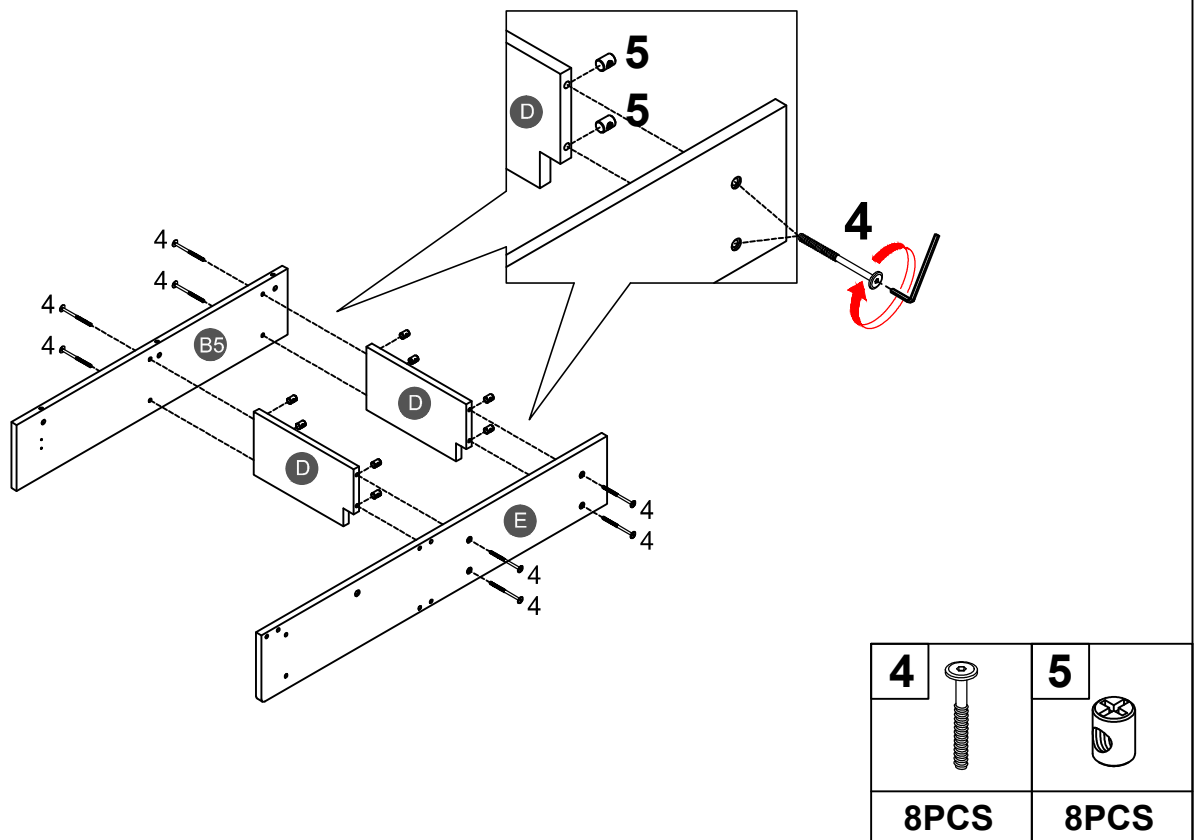



STEP 15:

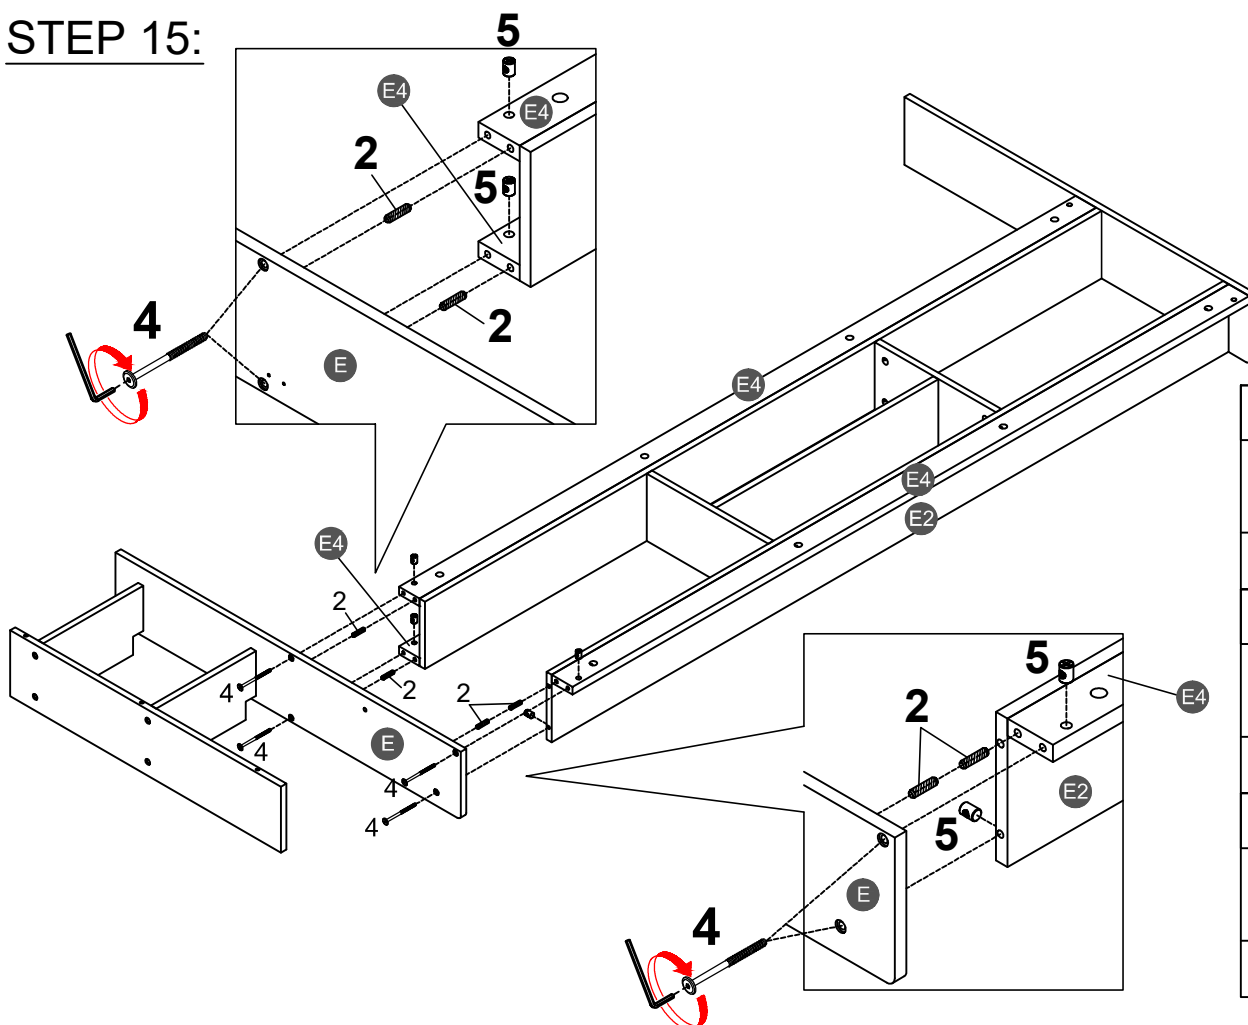


2	
4PCS	
4	
4PCS	
5	
4PCS	

STEP 16:

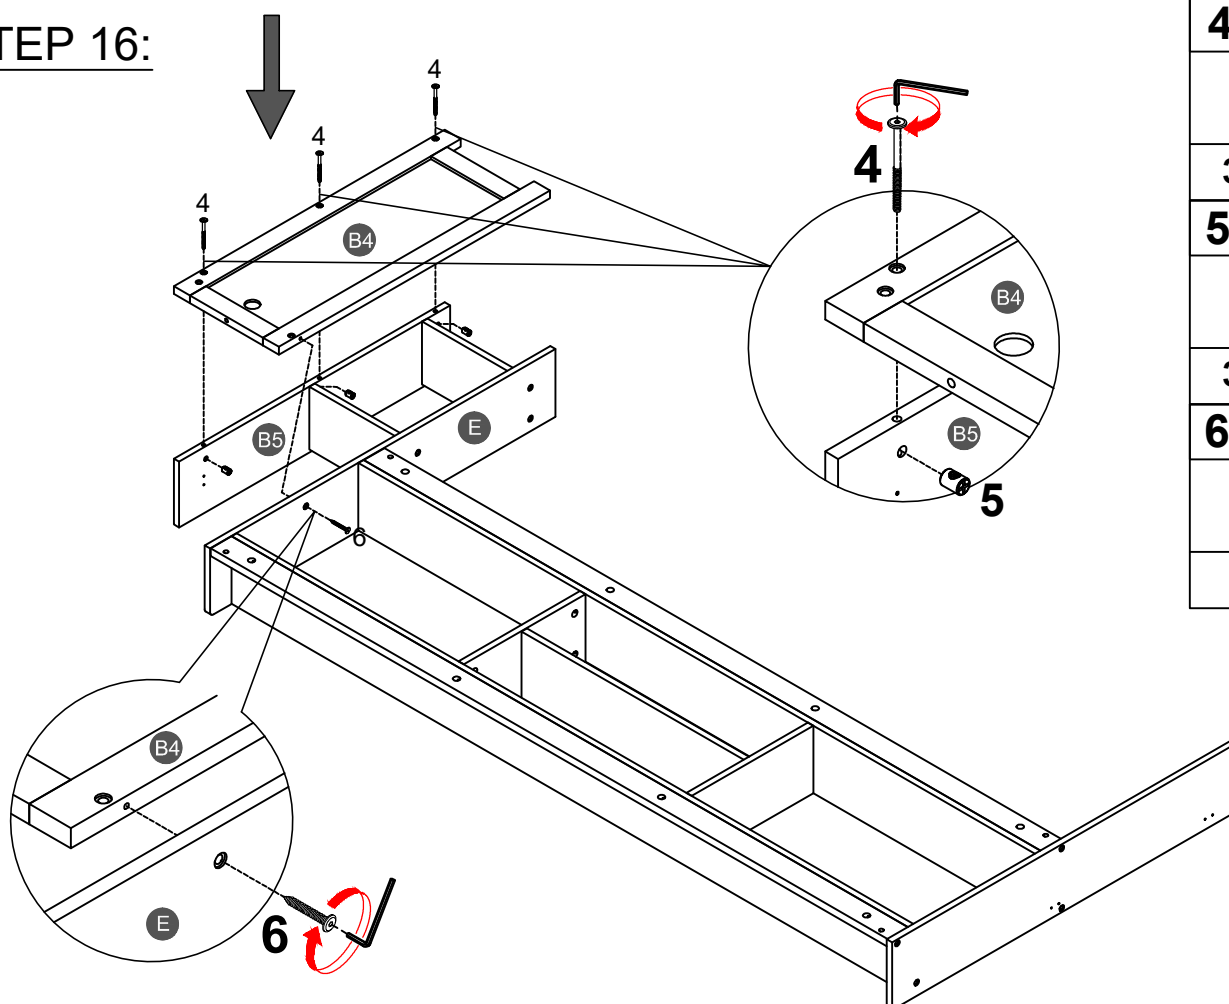

4	
3PCS	
5	
3PCS	
6	
1PC	

STEP 17:

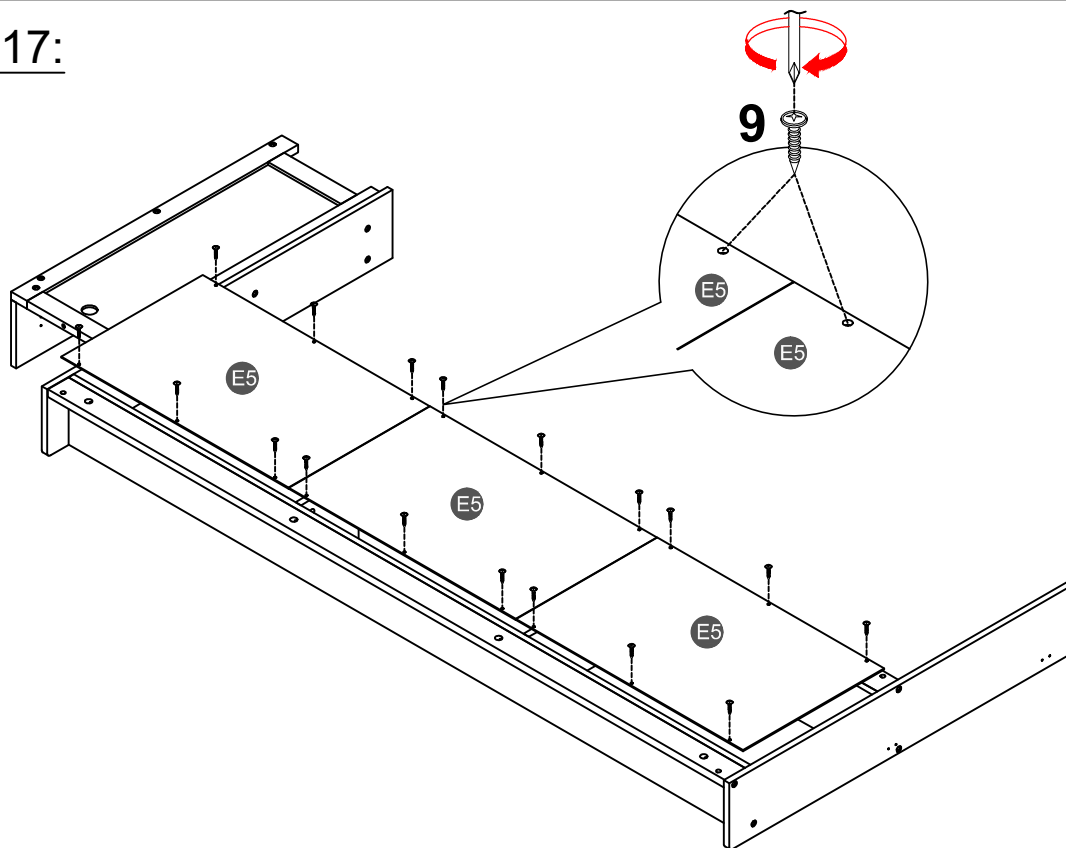


9



18PCS

STEP 18:

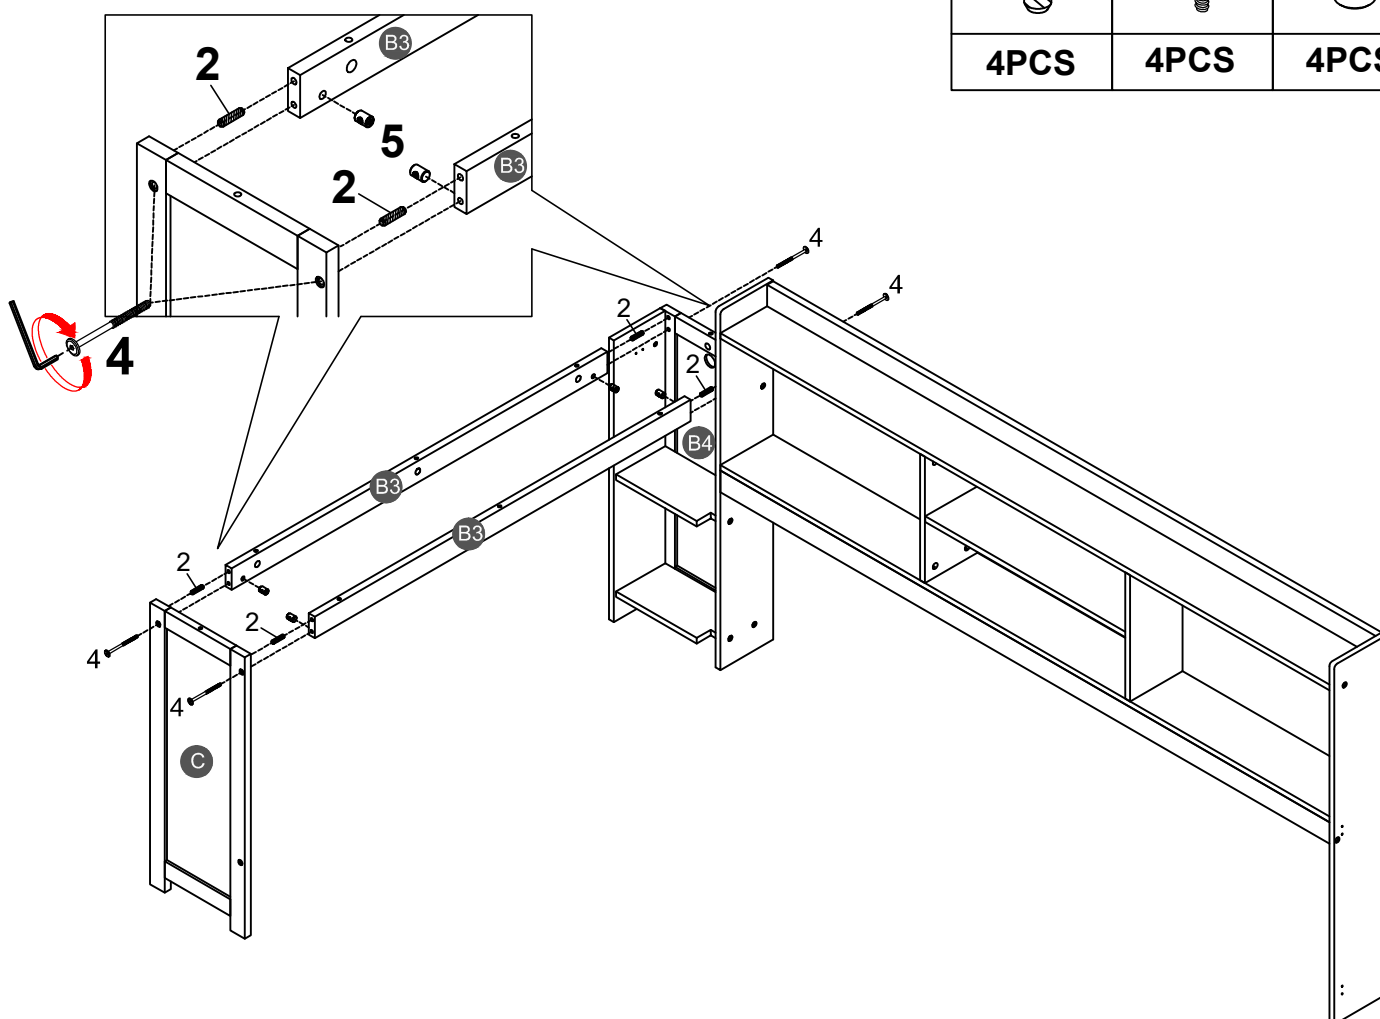


2



4PCS

4




4PCS

5



4PCS

STEP 19:

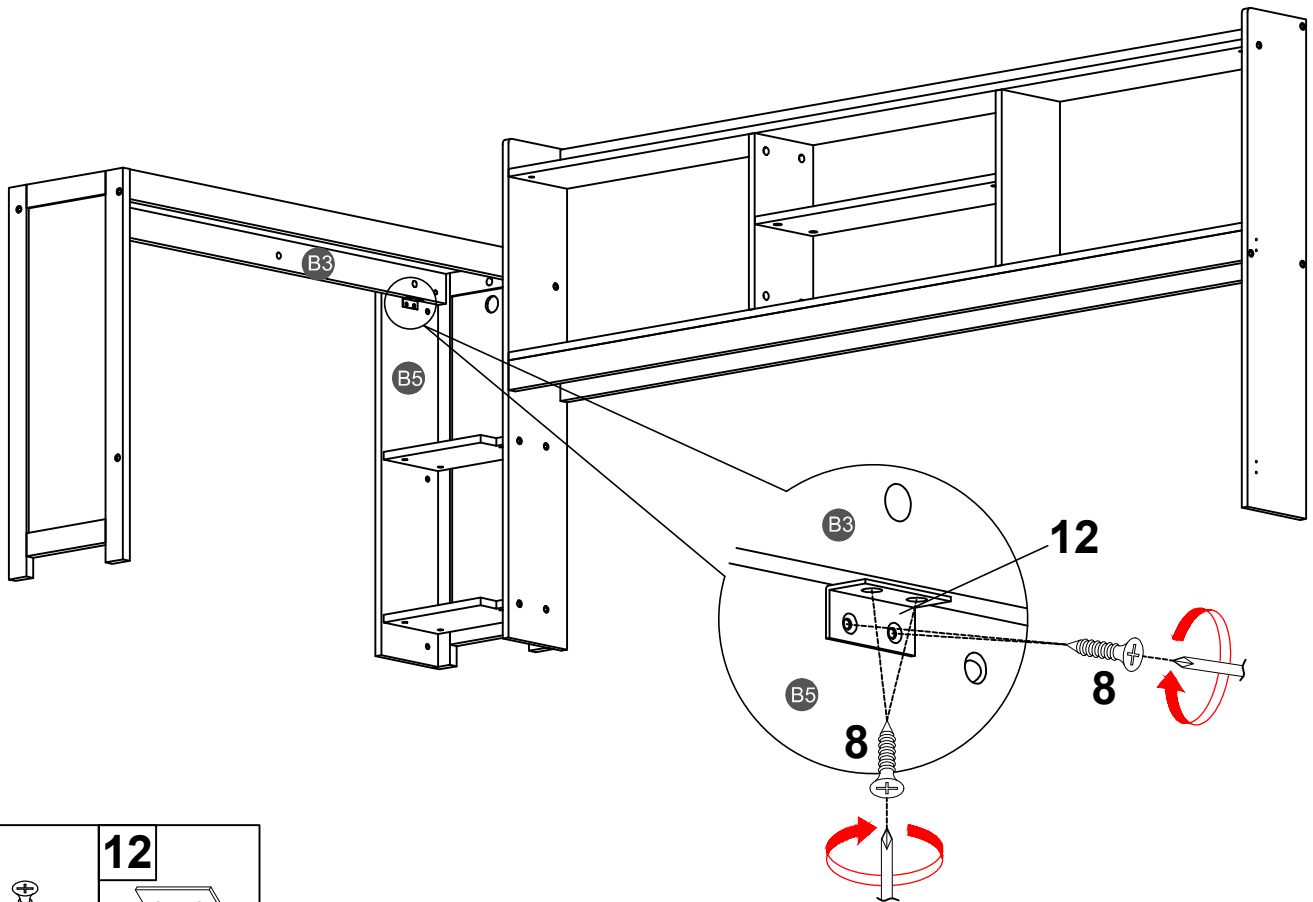


8	12
	
4PCS	1PC


STEP 20:

10

8PCS

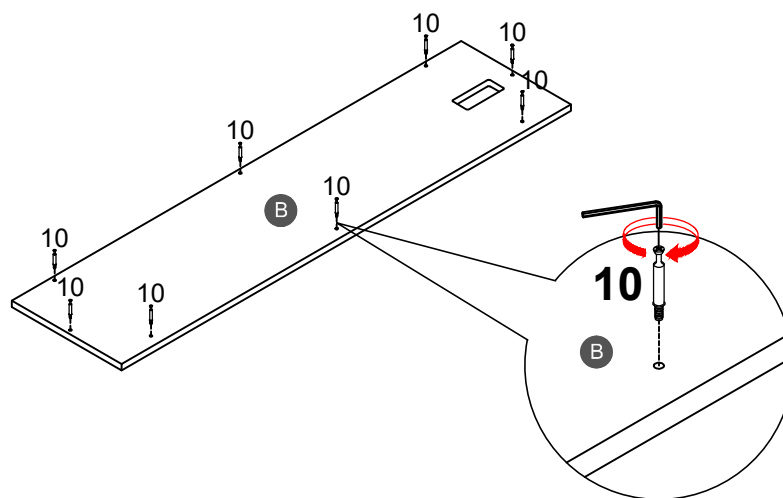

STEP 21:

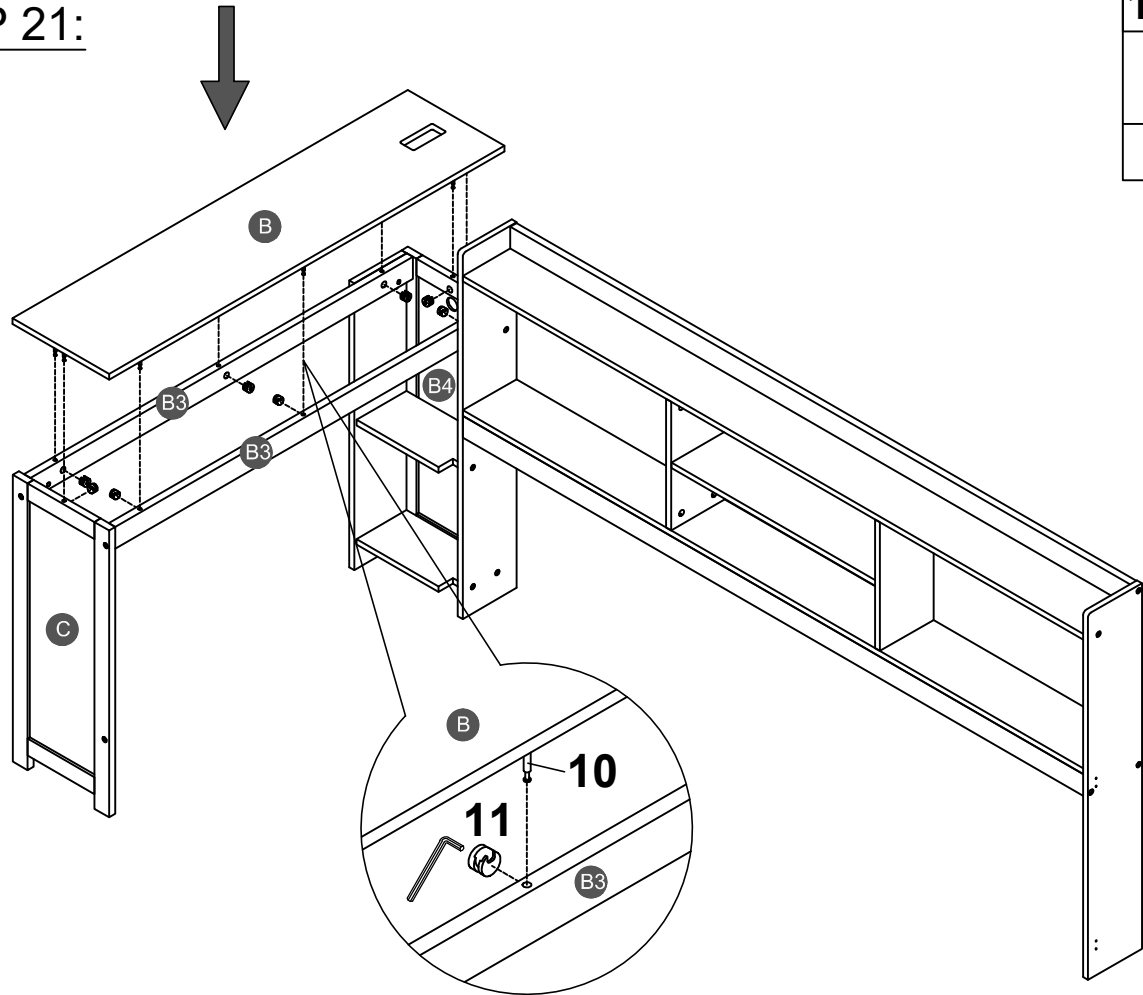


11



8PCS

STEP 22:

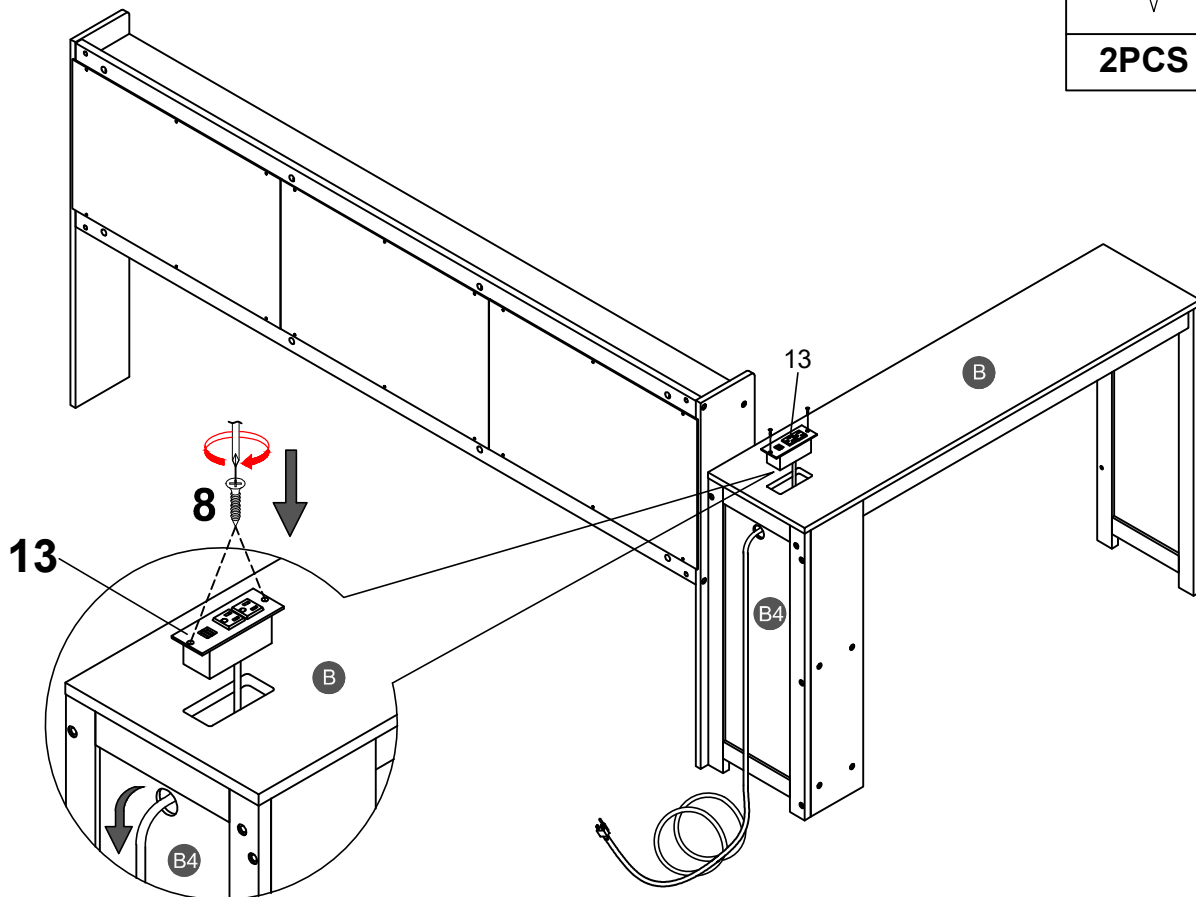


8




2PCS

13




1PC

STEP 23:

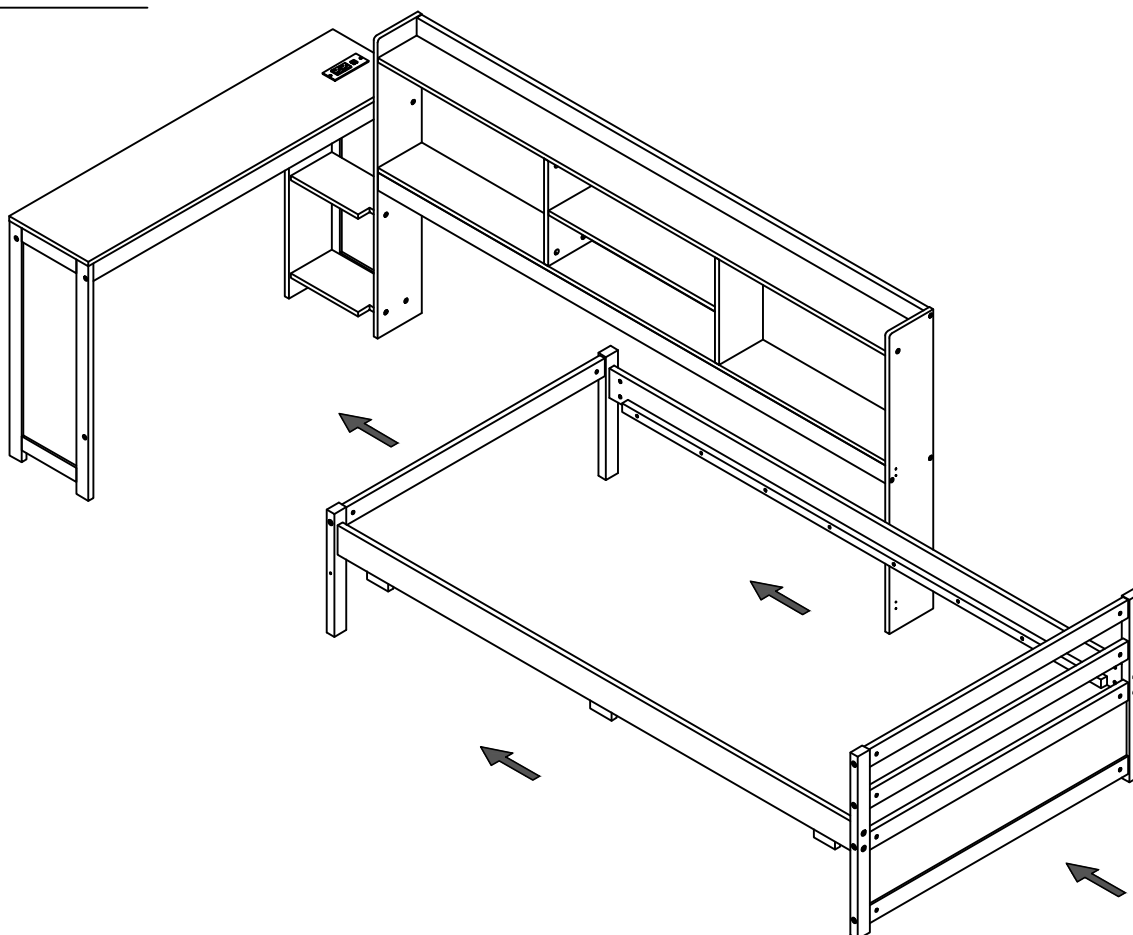

STEP 24:

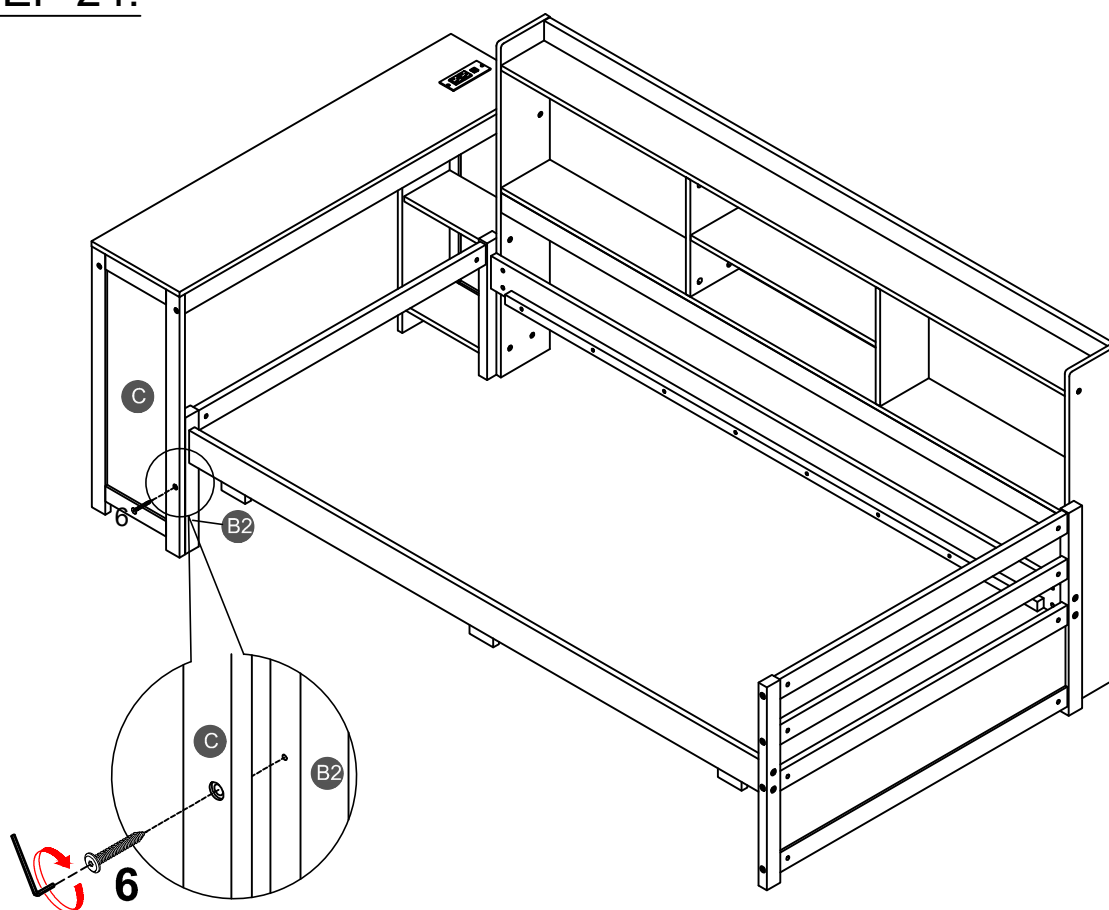



6



1PC

STEP 25:

8		12	
12PCS		3PCS	

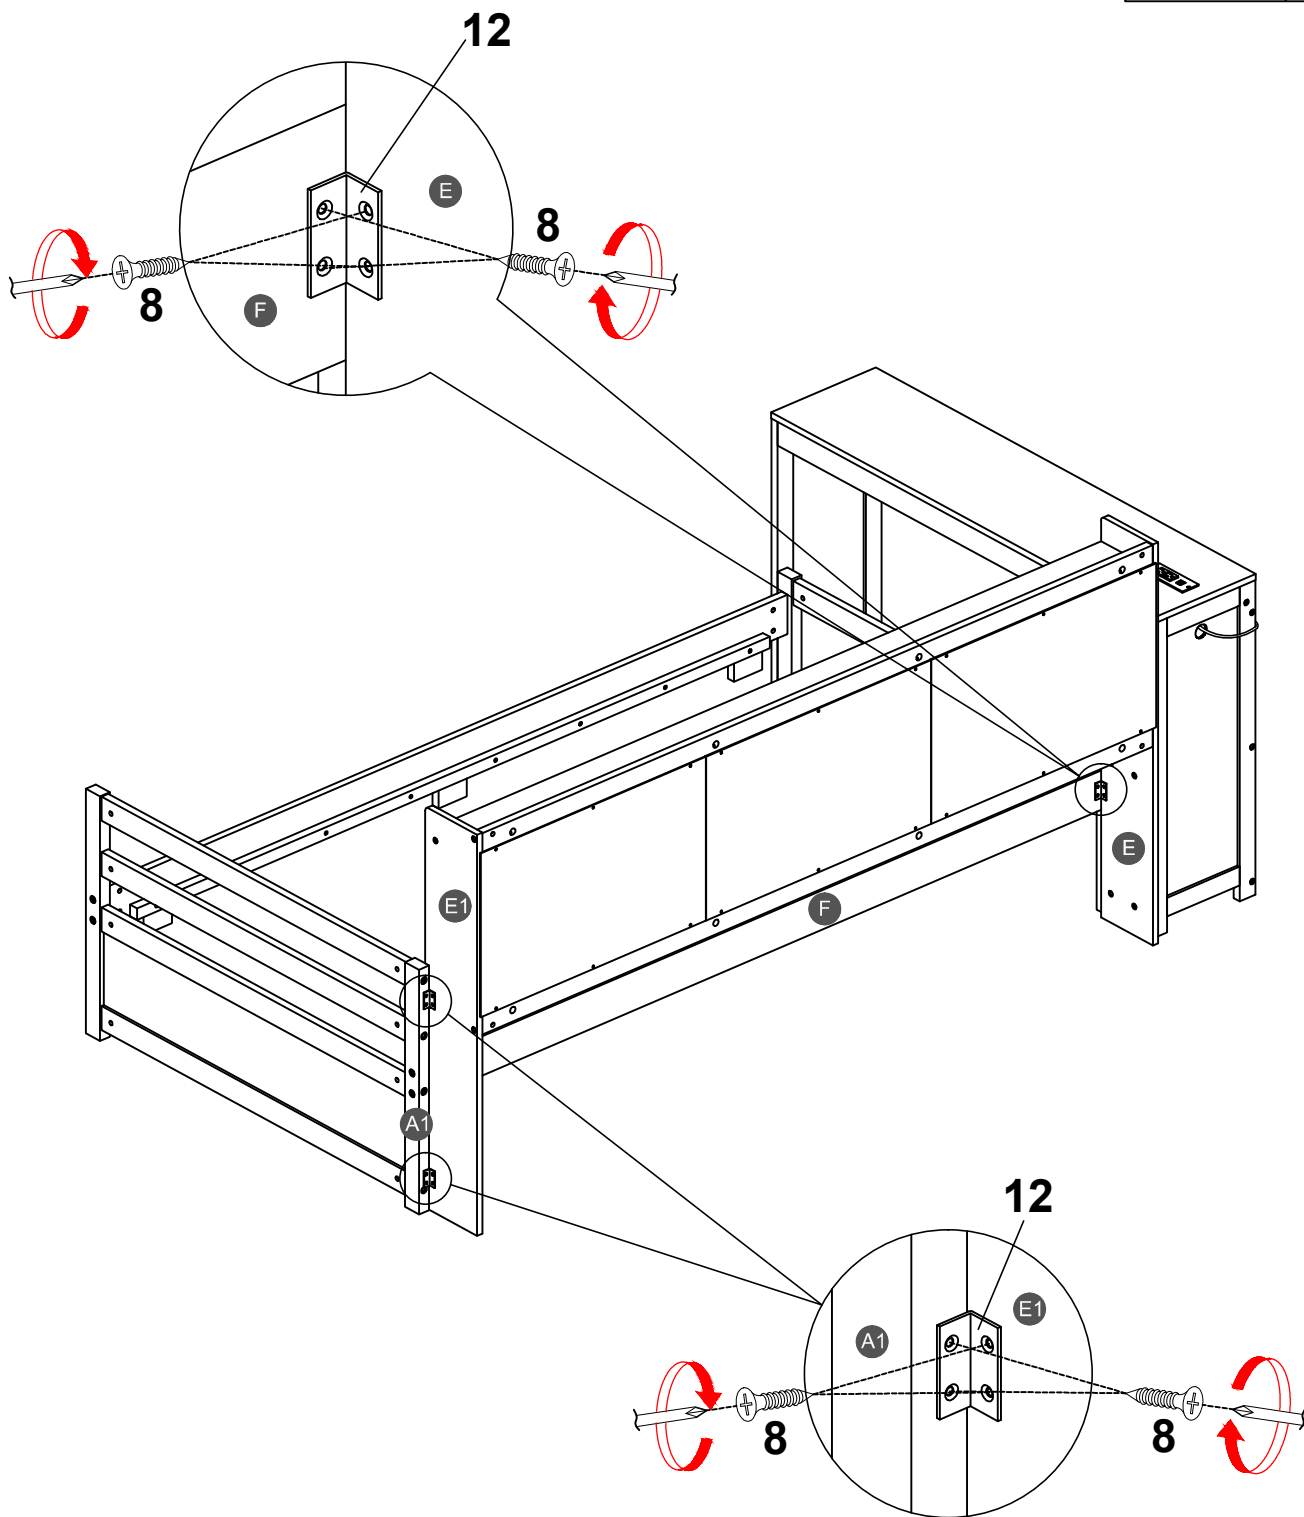


STEP 26:


7



20PCS

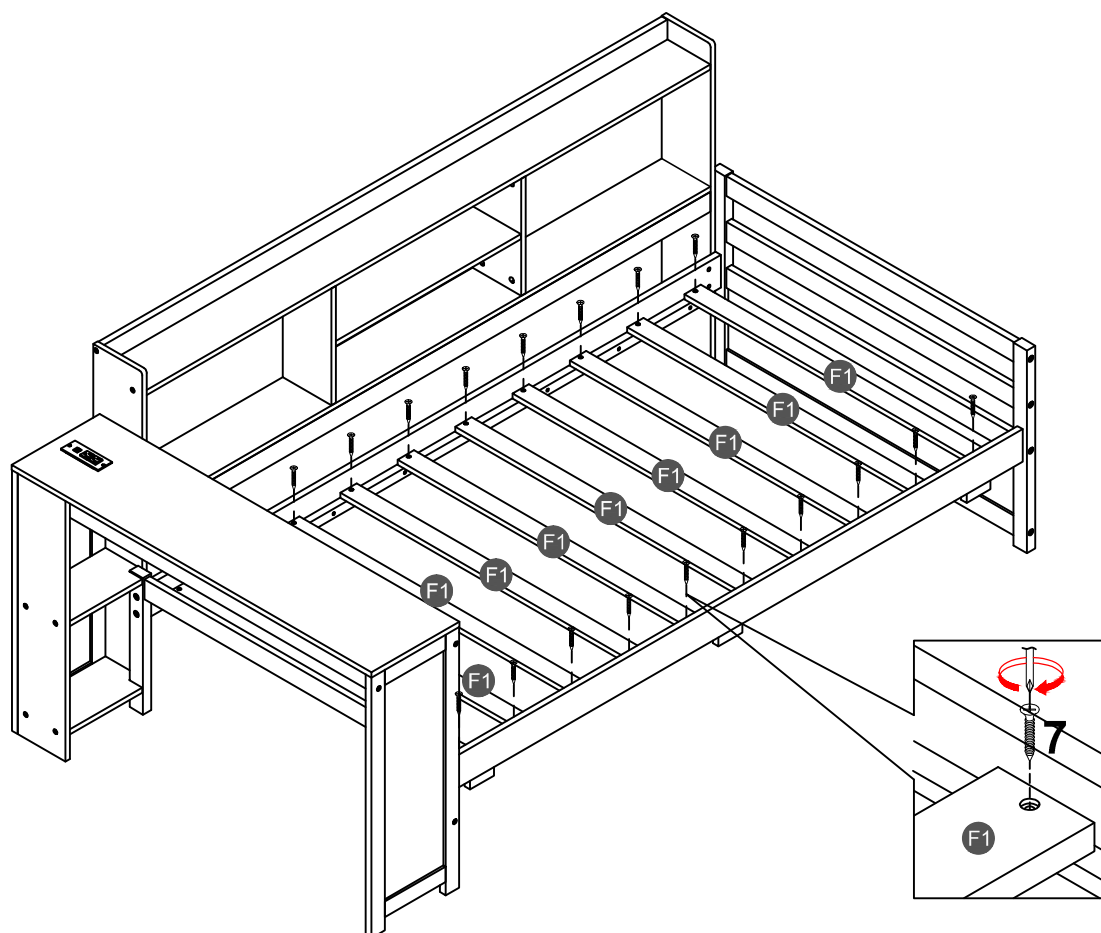


For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

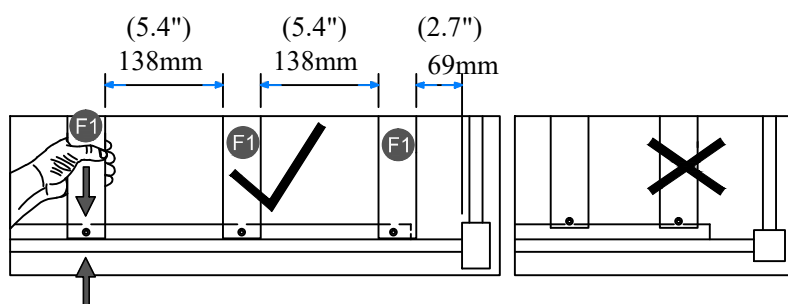

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.


STEP 27:

2		4		5	
8PCS		4PCS		4PCS	

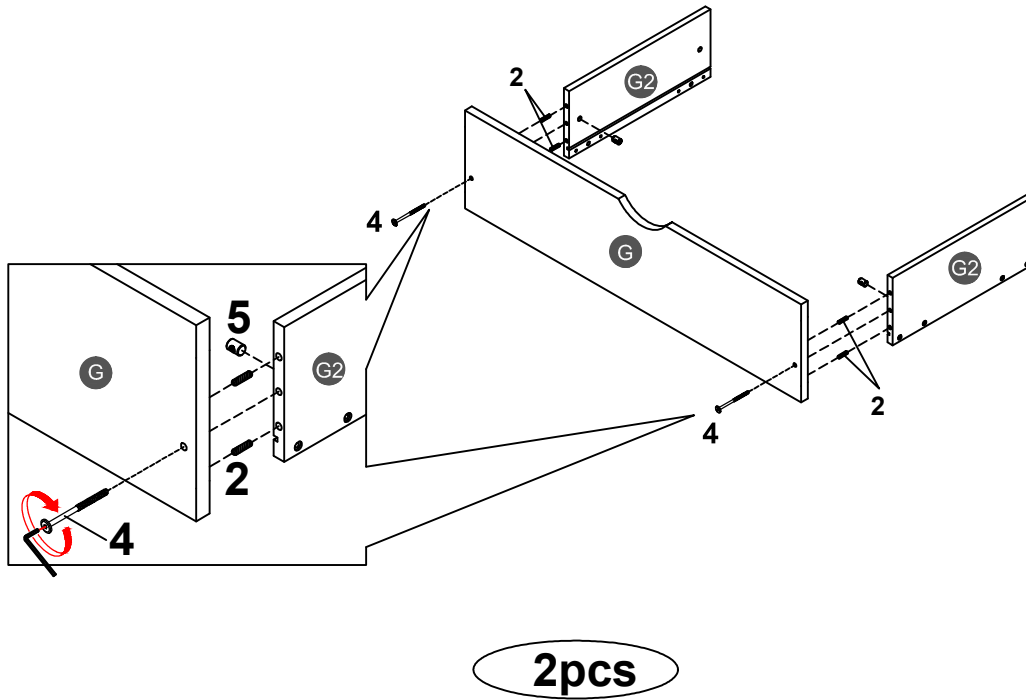


STEP 28:

2		4		5	
8PCS		4PCS		4PCS	

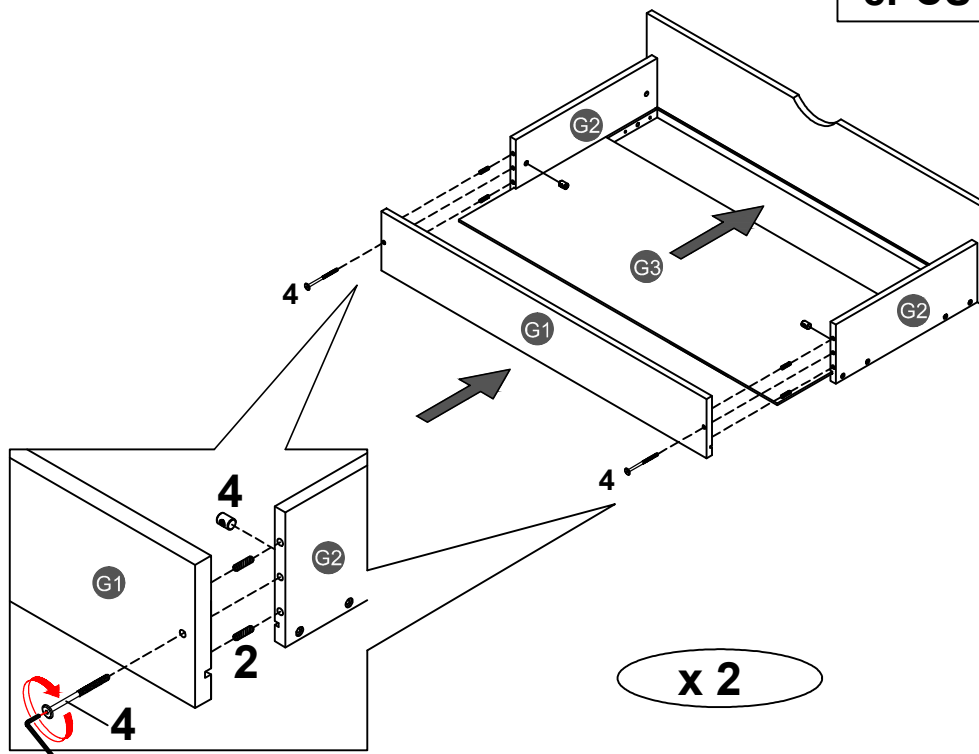

STEP 29:

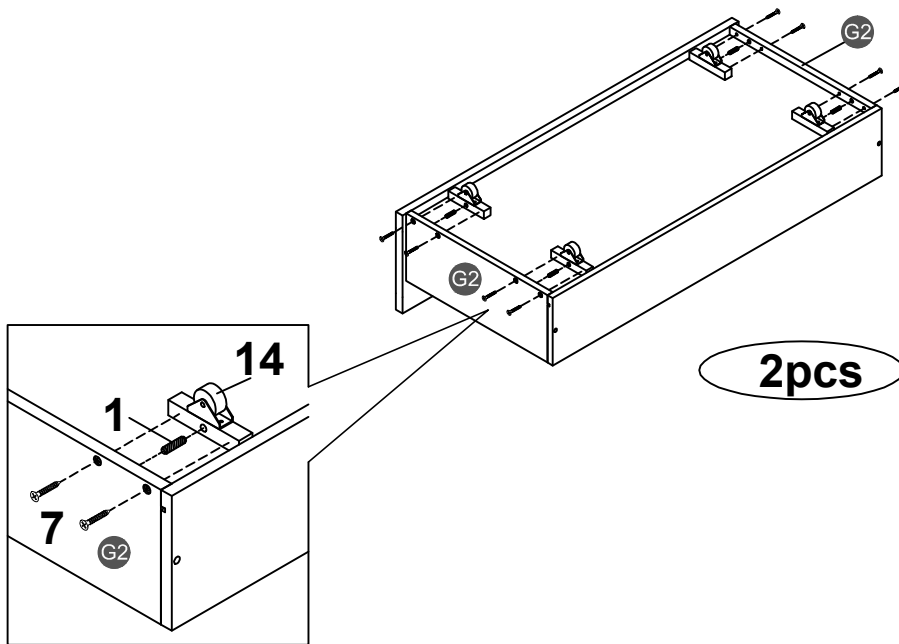

1



8PCS

7




16PCS

14




8PCS

STEP 30:

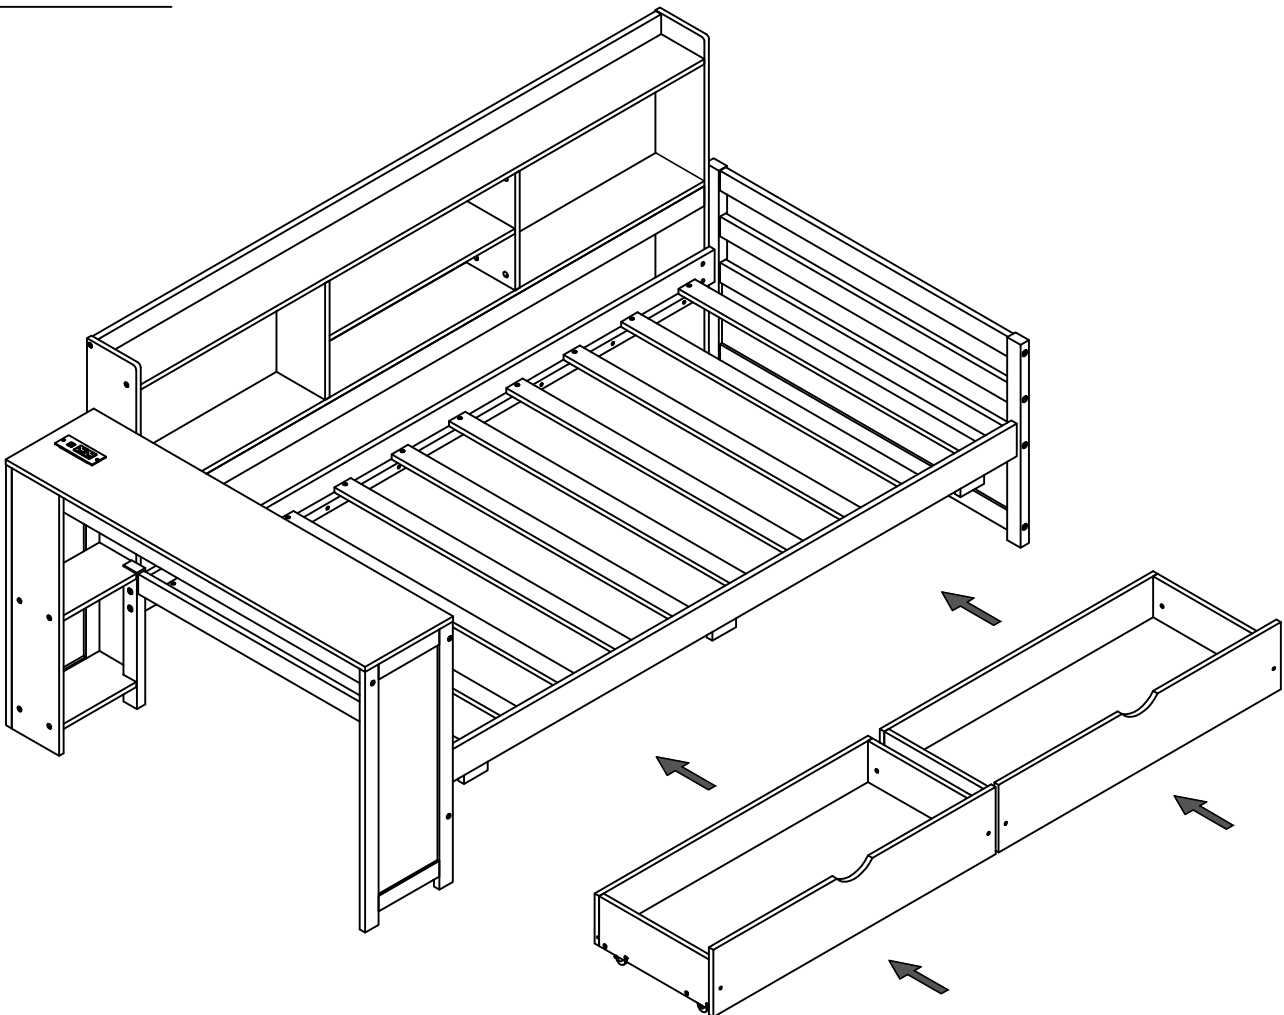

Push drawer under the bottom of Bed.

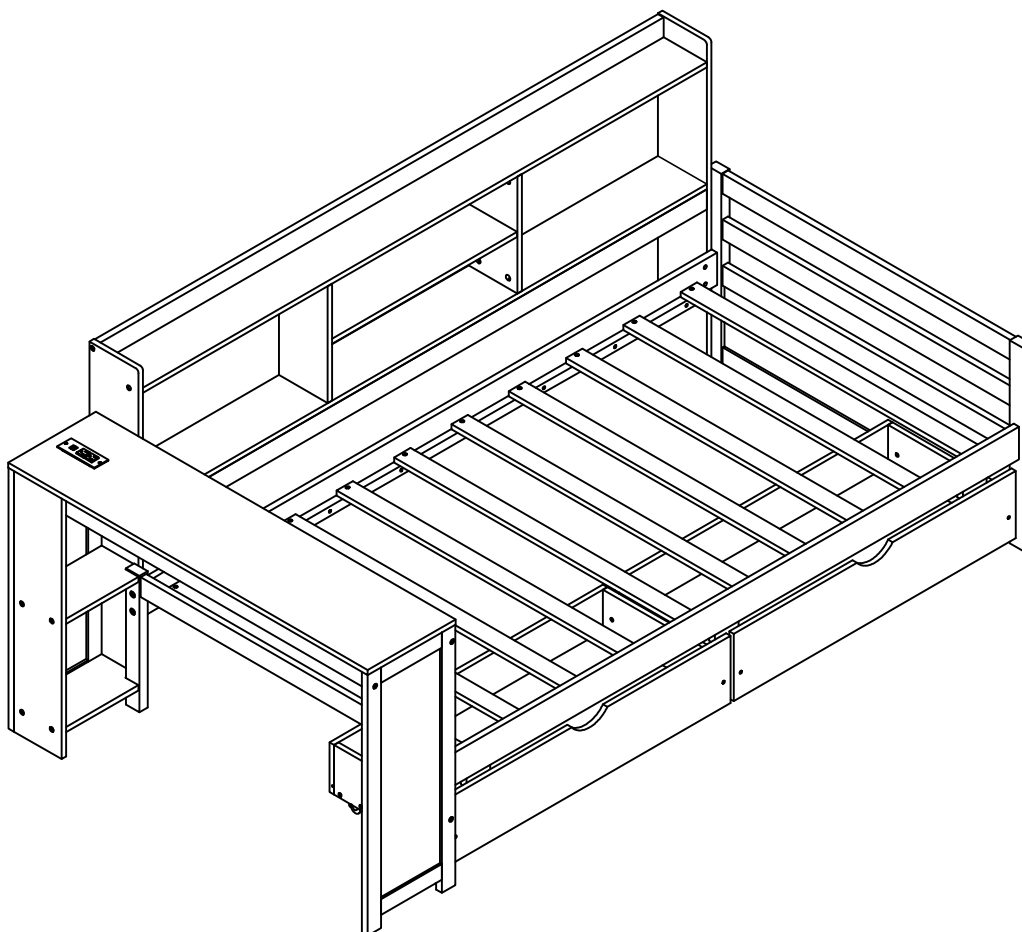

Make sure to tighten all the screws of the bed.